RENAULT

Электрические Схемы
Mégane
2000 модельный год
Техническая нота 8155A

Содержание

Глава 1	Предметный указатель
Глава 2	Общие положения
Глава 3	Комплект принципиальных электросхем автомобиля
Глава 4	Предохранители и реле
Глава 5	Схема расположения точек соединения с «массой»
Глава 6	Указатель электрических разъемов и соединений
Глава 7	Номенклатура разъемов
Глава 8	Схемы прокладки жгутов проводов
Справочные материалы	A. Список сокращений B. Перечень элементов электрооборудования C. Перечень разъемов жгутов проводов D. Перечень соединений на «массу»

77 11 293 900 **Русское издание**

«Методы ремонта, рекомендуемые изготовителем в настоящем документе, соответствуют техническим условиям, действительным на момент составления руководства. В случае внесения конструктивных изменений в изготовление деталей, узлов, агрегатов автомобиля данной модели, методы ремонта могут быть также соответственно изменены».

Все авторские права принадлежат Renault.

Воспроизведение или перевод, в том числе частичные, настоящего документа, равно как и использование системы нумерации запасных частей, запрещены без предварительного письменного разрешения Renault.

© **Renault S. A. 1999**

Предметный указатель

ФУНКЦИЯ ИЛИ ЭЛЕКТРОПРИБОР	№ ЛИСТОВ
АВТОМАТИЧЕСКАЯ КОРОБКА ПЕРЕДАЧ	15
АНТИБЛОКИРОВОЧНАЯ СИСТЕМА ТОРМОЗОВ	9-10
БЛИЖНИЙ СВЕТ И ДАЛЬНИЙ СВЕТ ФАР	124-125-126-127-128-129-130
БОРТОВОЙ КОМПЬЮТЕР С РЕОСТАТОМ РЕГУЛИРОВАНИЯ ОСВЕЩЕНИЯ ПРИБОРОВ ИЛИ БЕЗ НЕГО	1
ВЫКЛЮЧАТЕЛЬ БЛОКИРОВКИ СТЕКЛОПОДЪЕМНИКОВ ЗАДНИХ ДВЕРЕЙ	185-186-187-188-189
ВЫКЛЮЧАТЕЛЬ ОБОГРЕВА ЗАДНЕГО СТЕКЛА	75
ДИАГНОСТИЧЕСКИЙ РАЗЪЕМ БОРТОВОЙ СИСТЕМЫ ДИАГНОСТИКИ 2	214-215-216-217
ЗАДНИЕ ПРОТИВОТУМАННЫЕ ФОНАРИ	114-115-116-117-118-119-120-121
ЗВУКОВОЙ СИГНАЛ	11-12-13-14
ИНДИКАЦИЯ ТЕМПЕРАТУРЫ НАРУЖНОГО ВОЗДУХА	167-168
КОММУНИКАЦИОННЫЙ БЛОК В МОТОРНОМ ОТСЕКЕ	21-22-23-24-25-26-27
ЛЮК КРЫШИ С ЭЛЕКТРОПРИВОДОМ	254
НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ	232-233
ОБОГРЕВ ЗАДНЕГО СТЕКЛА	67-68-69-70-71-72-73-74
ОМЫВАТЕЛИ ФАР	183-184
ОСВЕЩЕНИЕ БАГАЖНОГО ОТДЕЛЕНИЯ	91-92
ОСВЕЩЕНИЕ ВЕЩЕВОГО ЯЩИКА	104-105
ОСВЕЩЕНИЕ ДНЕВНОГО ДВИЖЕНИЯ	131-132-133-134-135
ОСВЕЩЕНИЕ ДОПОЛНИТЕЛЬНОГО ОБОРУДОВАНИЯ И ГАБАРИТНЫЕ ОГНИ	83-84-85-86-87-88-89-90
ОСВЕЩЕНИЕ САЛОНА	93-94-95-96-97-98-99-100
ОХРАННАЯ СИГНАЛИЗАЦИЯ	4-5-6
ОЧИСТИТЕЛИ ВЕТРОВОГО И ЗАДНЕГО СТЕКОЛ С ИЗМЕНЯЮЩЕЙСЯ СКОРОСТЬЮ ПЕРЕМЕЩЕНИЯ ЩЕТОК И НАСОСОМ ДВУСТОРОННЕГО ДЕЙСТВИЯ	106-107-108
ОЧИСТИТЕЛИ ВЕТРОВОГО И ЗАДНЕГО СТЕКОЛ С ИЗМЕНЯЮЩЕЙСЯ СКОРОСТЬЮ ПЕРЕМЕЩЕНИЯ ЩЕТОК И НАСОСОМ ДВУСТОРОННЕГО ДЕЙСТВИЯ	109-110-111-112-113
ПОДГОТОВКА ДЛЯ УСТАНОВКИ АУДИОСИСТЕМЫ	208-209-210-211-212-213
ПОДОГРЕВАТЕЛЬ ФИЛЬТРА ДИЗТОПЛИВА	218-219
ПОДОГРЕВАТЕЛЬ ФИЛЬТРА ДИЗТОПЛИВА	220-221
ПОДУШКА БЕЗОПАСНОСТИ И ПРЕДНАТЯЖИТЕЛИ РЕМНЕЙ БЕЗОПАСНОСТИ	2-3
ПРЕДОХРАНИТЕЛИ И РЕЛЕ	198-199-200-201-202-203-204
ПРЕДПУСКОВОЙ ПОДОГРЕВ ДИЗЕЛЬНОГО ДВИГАТЕЛЯ И ПОДОГРЕВ ДИЗЕЛЬНОГО ТОПЛИВА	205-206-207
ПРИКУРИВАТЕЛЬ	7-8
ПРОТИВОТУМАННЫЕ ФАРЫ	122-123
РАСПРЕДЕЛЕНИЕ ЦЕПЕЙ ПИТАНИЯ МОТОРНОГО ОТСЕКА	76-77-78-79-80-81-82
РЕОСТАТ РЕГУЛИРОВКИ ОСВЕЩЕНИЯ СО СТОРОНЫ ВОДИТЕЛЯ	101-102-103
СВЕТ ЗАДНЕГО ХОДА НА АВТОМОБИЛЯХ С МКП ИЛИ АКП	136-137-138-139-140-141-142-143
СИГНАЛЬНАЯ ЛАМПА МИНИМАЛЬНОГО УРОВНЯ ЖИДКОСТИ В БАЧКЕ ОМЫВАТЕЛЯ	253
СИГНАЛЬНАЯ ЛАМПА НЕЗАСТЕГНУТОГО РЕМНЯ БЕЗОПАСНОСТИ	246-247-248
СИГНАЛЬНАЯ ЛАМПА СТОЯНОЧНОГО ТОРМОЗА	249-250-251-252
СИДЕНЬЯ С ОБОГРЕВОМ	234-235-236-237-238
СИСТЕМА БЛОКИРОВКИ ЗАМКОВ	63-64
СИСТЕМА ВЕНТИЛЯЦИИ И ОТОПЛЕНИЯ ИЛИ СИСТЕМА КОНДИЦИОНИРОВАНИЯ ВОЗДУХА	28-29-30-31-32-33-34-35-36-37-38
СИСТЕМА ОХЛАЖДЕНИЯ ДВИГАТЕЛЯ С ВЕНТИЛЯТОРОМ	222-223
СТОП-СИГНАЛ	144-145-146-147-148-149-150

ФУНКЦИЯ ИЛИ ЭЛЕКТРОПРИБОР	№ ЛИСТОВ
УКАЗАТЕЛИ ПОВОРОТА И АВАРИЙНАЯ СИГНАЛИЗАЦИЯ	151-152-153-154-155-156-157-158
УКАЗАТЕЛЬ ДАВЛЕНИЯ МАСЛА	162-163-164
УКАЗАТЕЛЬ ТЕМПЕРАТУРЫ ОХЛАЖДАЮЩЕЙ ЖИДКОСТИ	165-166
УКАЗАТЕЛЬ УРОВНЯ МАСЛА	161
УКАЗАТЕЛЬ УРОВНЯ ТОПЛИВА	159-160
ЦЕНТРАЛЬНЫЙ ЗАМОК	58-59-60-61-62
ЦЕПЬ ЗАПУСКА ДВИГАТЕЛЯ	50-51-52-53-54-55-56-57
ЦЕПЬ ЗАРЯДКИ	39-40-41-42-43-44-45-46-47-48-49
ЦЭКБС	16-17-18-19-20
ЧАСЫ С АНАЛОГОВОЙ ИЛИ ЦИФРОВОЙ ИНДИКАЦИЕЙ	197
ЩИТОК ПРИБОРОВ	239-240-241-242-243-244-245
ЭБУ СКЛАДНОЙ КРЫШИ	195-196
ЭЛЕКТРОВЕНТИЛЯТОР СИСТЕМЫ ОХЛАЖДЕНИЯ ДВИГАТЕЛЯ	224-225
ЭЛЕКТРОВЕНТИЛЯТОР СИСТЕМЫ ОХЛАЖДЕНИЯ ДВИГАТЕЛЯ	226-227-228-229-230-231
ЭЛЕКТРОКОРРЕКТОР ФАР	65-66
ЭЛЕКТРОННАЯ СИСТЕМА ВПРЫСКА	169-170-171-172-173-174-175-176-177-178-179-180-181-182
ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ПЕРЕДНИХ ДВЕРЕЙ	190-191
ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ПЕРЕДНИХ ДВЕРЕЙ	192-193-194

Технические Ноты «Электрические Схемы Автомобиля» (ТН ЭСА) дают возможность подобрать необходимую Принципиальную Электрическую Схему (с цифровым обозначением рядом с графическим символом), соответствующую неисправному электроприбору или нереализуемой функции. Перечень функций и электроприборов приведен в конце настоящего документа.
Каждая Техническая Нота «Электрические Схемы Автомобиля» идентифицирована аналогично идентификации соответствующего автомобиля, т. е:

- в соответствии с семейством автомобиля (например, J64),
- в соответствии с моделью двигателя, указанной на табличке двигателя, и его индексом (например, E7J 764),
- в соответствии с модельным годом или датой выпуска автомобиля.

1. СТРУКТУРА ТЕХНИЧЕСКОЙ НОТЫ

1.1 Предметный указатель (Глава 1 ТН «ЭСА»)

Благодаря указателю можно, зная функцию или электроприбор, быстро отыскать в комплекте схем (см. следующую главу) ту схему, которая необходима: схемы сгруппированы по каждой функции или электроприбору.
Указатель составлен в алфавитном порядке функций или электроприборов.

1.2 Комплект Принципиальных Электрических Схем Автомобиля. (Глава 3 ТН «ЭСА»)

В этой части Технической Ноты собраны все Принципиальные Электросхемы Автомобиля.

На Принципиальных Схемах представлено детальное внутреннее строение простых электрических устройств (разъемов, реле), что облегчает понимание работы системы и диагностики. На схеме изображены:

- электроприборы с присвоенным номером,
- разъемы, обозначенные буквой с последующими цифрами (R107),
- соединения с «массой», обозначаемые буквой, за которой следуют цифры или буква (например, M4 или MG).

Принципиальные схемы даны в следующем порядке: схемы электропитания, схемы соединения с «массой» и функциональные схемы.

Принципиальные схемы дополнены:

- указанием на назначение проводов в каждом разъеме (глава 5),
- схемами прокладки электропроводки, которые позволяют определить местоположение элементов на автомобиле,
- складной схемой,
- перечнями функций и электроприборов, приведенными в конце документа, с помощью которых можно быстро найти соответствующие принципиальные схемы.

1.3 Блоки реле и коробки предохранителей (Глава 4 ТН ЭСА)

В этой главе представлены коробки предохранителей и блоки реле, установленные на автомобиле; для каждого блока и для каждой коробки дано:

- графическое изображение передней или задней частей коробки или блока.

1.4 Схемы соединения с «массой» (Глава 5 ТН ЭСА)

Схемы показывают точки соединения с «массой» с указанием их местоположения на кузове автомобиля.

1.5 Указатель разъемов (Глава 6 ТН ЭСА)

Указатель предназначен для быстрого определения приборов (см. следующую главу), с которыми соединен разъем на основе его идентифицированной функции: для каждой функции разъема указывается страница с соответствующим перечнем. Указатель составлен в порядке возрастания номеров разъемов.

1.6 Номенклатура разъемов (Глава 7 ТН ЭСА)

В Главе приведены и даны описания всех разъемов, использованных в электропроводке автомобиля.
По каждому пункту номенклатуры:

- дано графическое изображение разъема, также как назначение его выводов;
- дан перечень электрических проводов, подключаемых к данному разъему, с указанием номера вывода, к которому каждый провод должен быть подключен;

Номенклатура определяется по разъему. Перечень разъемов приведен в конце настоящего документа.

1.6.1 Цвет электрических проводов

- В основных электрических цепях используются провода следующих цветов:

Красный	«+» 12 В до замка зажигания
Желтый	«+» 12 В после замка зажигания
Голубой	цепь охранной сигнализации или устройств идентификации
Черный	непосредственное соединение на «массу»

- Для других цепей и разъемов могут использоваться провода других цветов: белые, голубые, бежевые (бесцветные), серые, желтые, коричневые, черные, оранжевые, красные, розовые, зеленые, фиолетовые.
- Цепи «+» стартера, перемежающиеся соединения с «массой», цепи с изменением полярности не относятся к основным электрическим цепям.
- Наличие или отсутствие устройств защиты цепей (плавкие и биметаллические предохранители) не влияет на применяемость электрических проводов.
- Расцветка электрических проводов на электрооборудовании, поставляемом в качестве запасных частей, отвечает изложенным выше правилам не во всех случаях.

1.7 Схемы прокладки жгутов проводов (Глава 8 ТН ЭСА)

- На данных схемах показано размещение электроприборов, разъемов и трасс прокладки электропроводки на автомобиле.
- Буква «N» на схемах прокладки электропроводов обозначает идентификационную этикетку жгута проводов.

1.8 Перекидной переплет

Речь идет о своеобразном «справочном пособии», примененном в данной Технической Ноте, которое дает возможность пользователю сразу обратиться к схемам разъемов и к разводке проводов, не обращаясь к перечням. (На каждой схеме указаны номера электроприборов и разъемов, номера листов схем разъемов и схем прокладки проводов).

Каждая схема действительна только для той ноты, из которой она взята.
Схема обновляется при каждом переиздании.

1.9 Прочие документы

- **В Технической Ноте 8074** подробно рассматриваются методы работ, в том числе и на электрических соединениях, выполненных по новой технологии. Здесь же приводится список специального оборудования и приспособлений, необходимых для качественного выполнения ремонтных работ. Обращайтесь к данной Ноте при любых операциях с разъемами.
- **Техническая Нота 8075** описывает операции, связанные с использованием термоусадочных муфт для ремонта электропроводки автомобиля.
- В документе **PR 830** и в **«Справочнике специалиста по электрооборудованию автомобилей»** приводятся складские номера и описания всех поставляемых приборов, оборудования и материалов, имеющих отношение к электрооборудованию автомобиля.

2 ПОРЯДОК РАБОТЫ С ТЕХНИЧЕСКОЙ НОТОЙ

2.1 Как читать Принципиальную Схему:

(пример схемы приведен ниже)

1	Семейство автомобиля
2	Критерий выбора схемы
3	Наименование функции или электроприбора
4	Текущий модельный год
5	Цвет разъема
6	Схема электрического разъема
7	Схема электрического соединения
8	Цвет разъема
9	Номер привода, с которым соединяется данный номер
10	Номер прибора
11	Сила тока плавкого предохранителя
12	Расположение плавкого предохранителя в коробке
13	Цвет розеточной части соединителя
14	Номер соединения
15	Номер места сращивания проводов
16	Номер точки соединения с «массой»
17	Дополнительное электрооборудование
18	Номер главы
19	Номер листа
20	Изображение точки соединения проводов

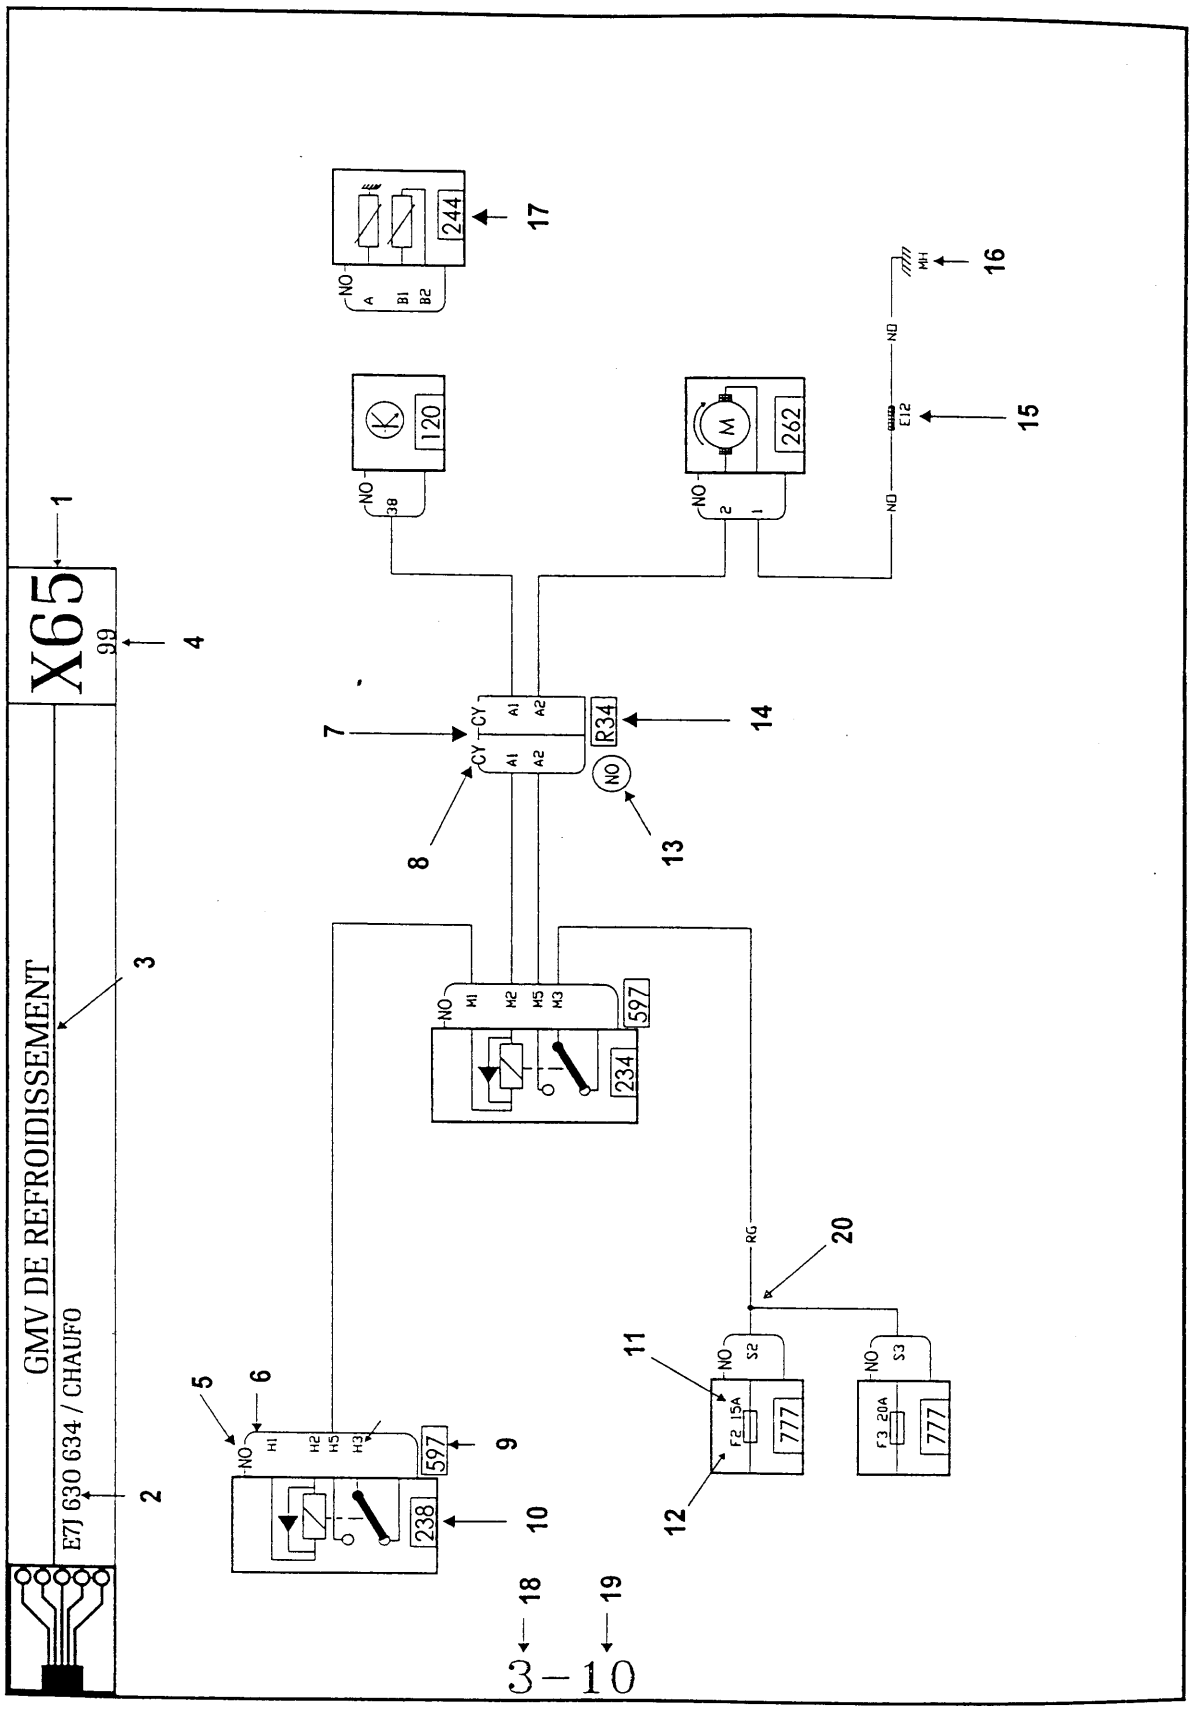

Примечание: Вспомогательный электроприбор: На данной схеме ЭБУ управляет реле на основании информации, поступающей от этого прибора. Более детально соединения между прибором и ЭБУ представлены на соответствующей схеме.

2.2 Как читать номенклатуру

(Пример номенклатуры приведен ниже)

1	Символ листа номенклатуры
2	Назначение разъема
3	Назначение электропроводки
4	Применяемость
5	Семейство автомобиля
6	Текущий модельный год
7	Сокращенное обозначение применяемости разъема
8	№ жгута проводов, в котором подлежит определению местоположение разъема
9	Обозначение разъема (только для изготовителя)
10	Номер электроприбора
11	Цвет разъема
12	Графическое изображение разъема
13	№ используемого вывода
14	Сечение провода, подключаемого к выводу
15	Код электрической цепи (используется, если соблюдается маркировка проводов)
16	Название цепи, в которой используется провод
17	Крест означает, что к выводу подключается один провод, два креста означают, что к выводу подключаются два провода. В новых номенклатурах показаны только цвета проводов основной проводки (красный, желтый, черный, синий) **Наличие провода иного цвета указывается крестом в гнезде соединителя**
18	№ Главы и № листа

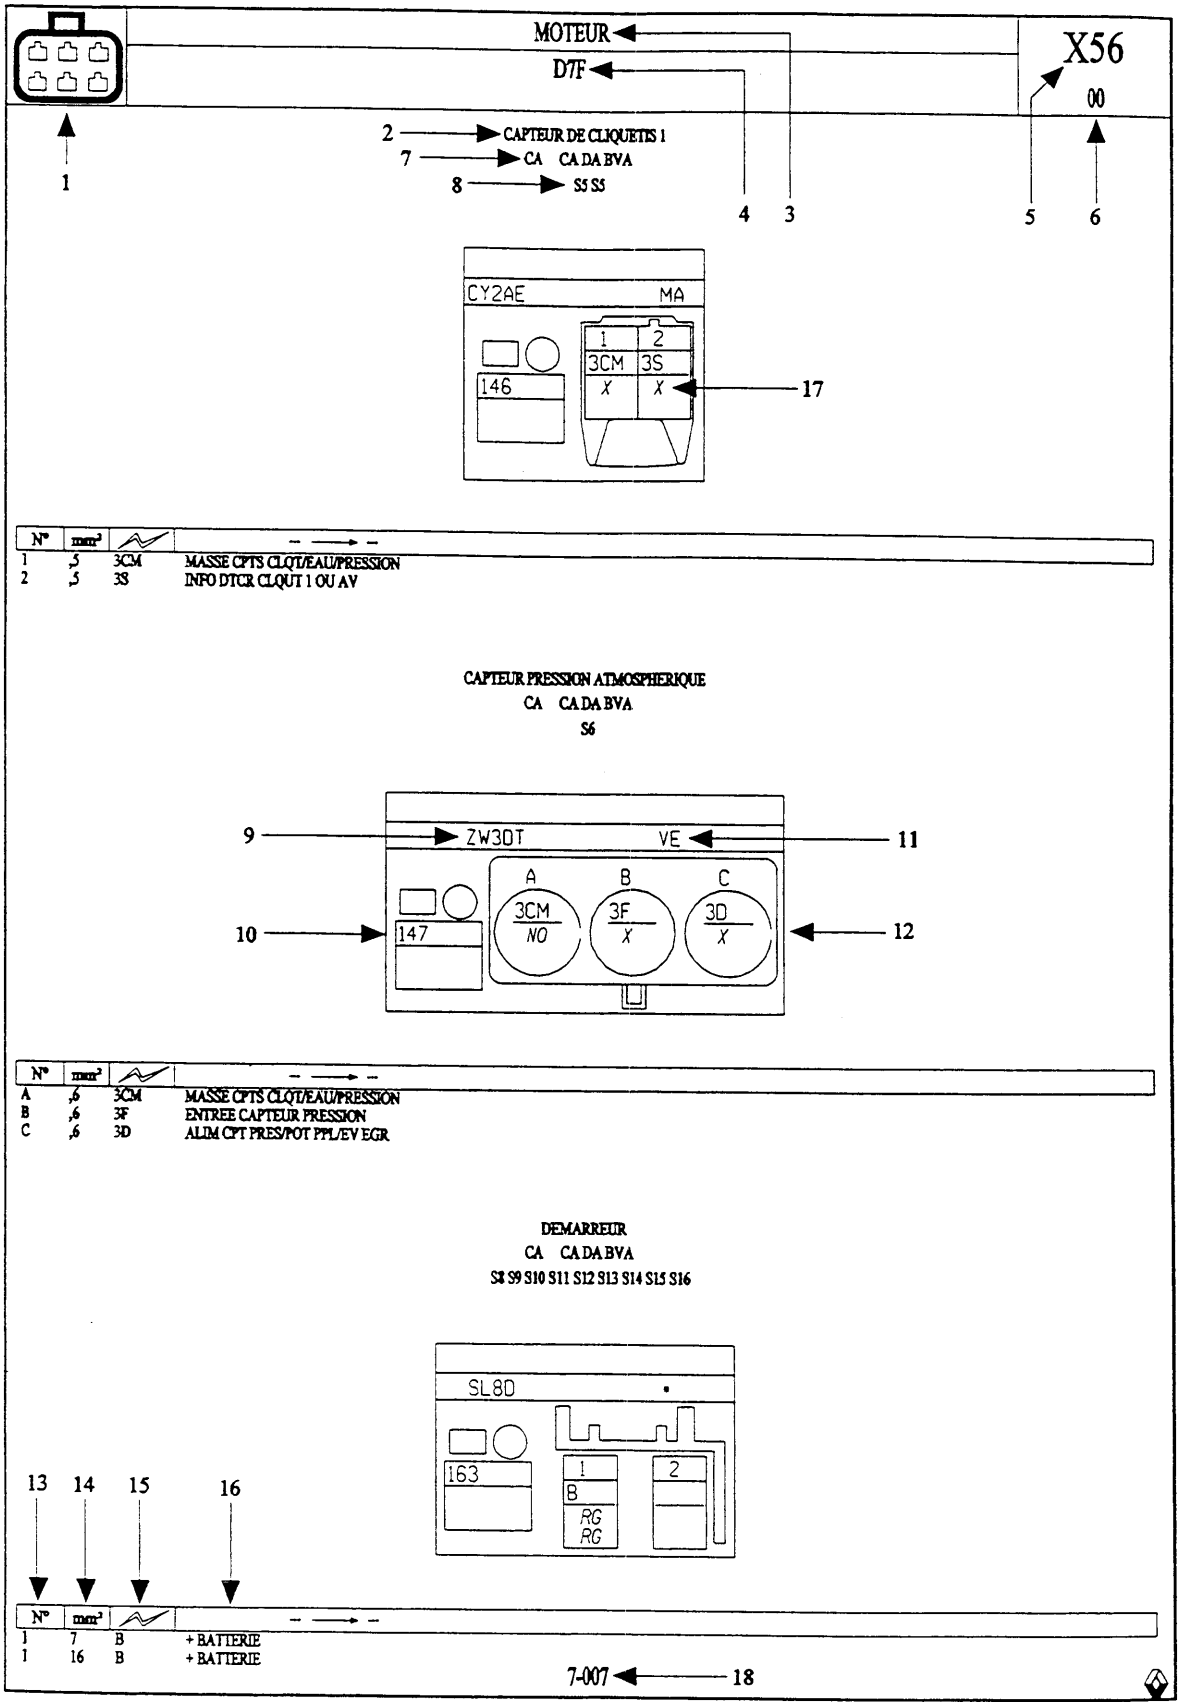
MOTEUR
DTF
X56
00
1
2 CAPTEUR DE CLIQUETIS 1
7 CA CA DA BVA
8 S5 S5
4
3
5
6
CY2AE
MA
1
2
3CM
3S
X
X
146
17
N° mm² B
1 ,5 3CM MASSE CPTS CLQT/EAU/PRESSION
2 ,5 3S INFO DTCR CLQUT 1 OU AV
CAPTEUR PRESSION ATMOSPHERIQUE
CA CA DA BVA
S6
9
ZW3DT
VE
11
A
B
C
3CM
NO
3F
X
3D
X
10
147
12
N° mm² B
A ,6 3CM MASSE CPTS CLQT/EAU/PRESSION
B ,6 3F ENTREE CAPTEUR PRESSION
C ,6 3D ALIM CPT PRES/POT PPL/EV EGR
DEMARREUR
CA CA DA BVA
S8 S9 S10 S11 S12 S13 S14 S15 S16
SL8D
163
1
B
RG
RG
2
13
14
15
16
N° mm² B
1 7 B + BATTERIE
1 16 B + BATTERIE
7-007
18

2.3 Методика поиска неисправности

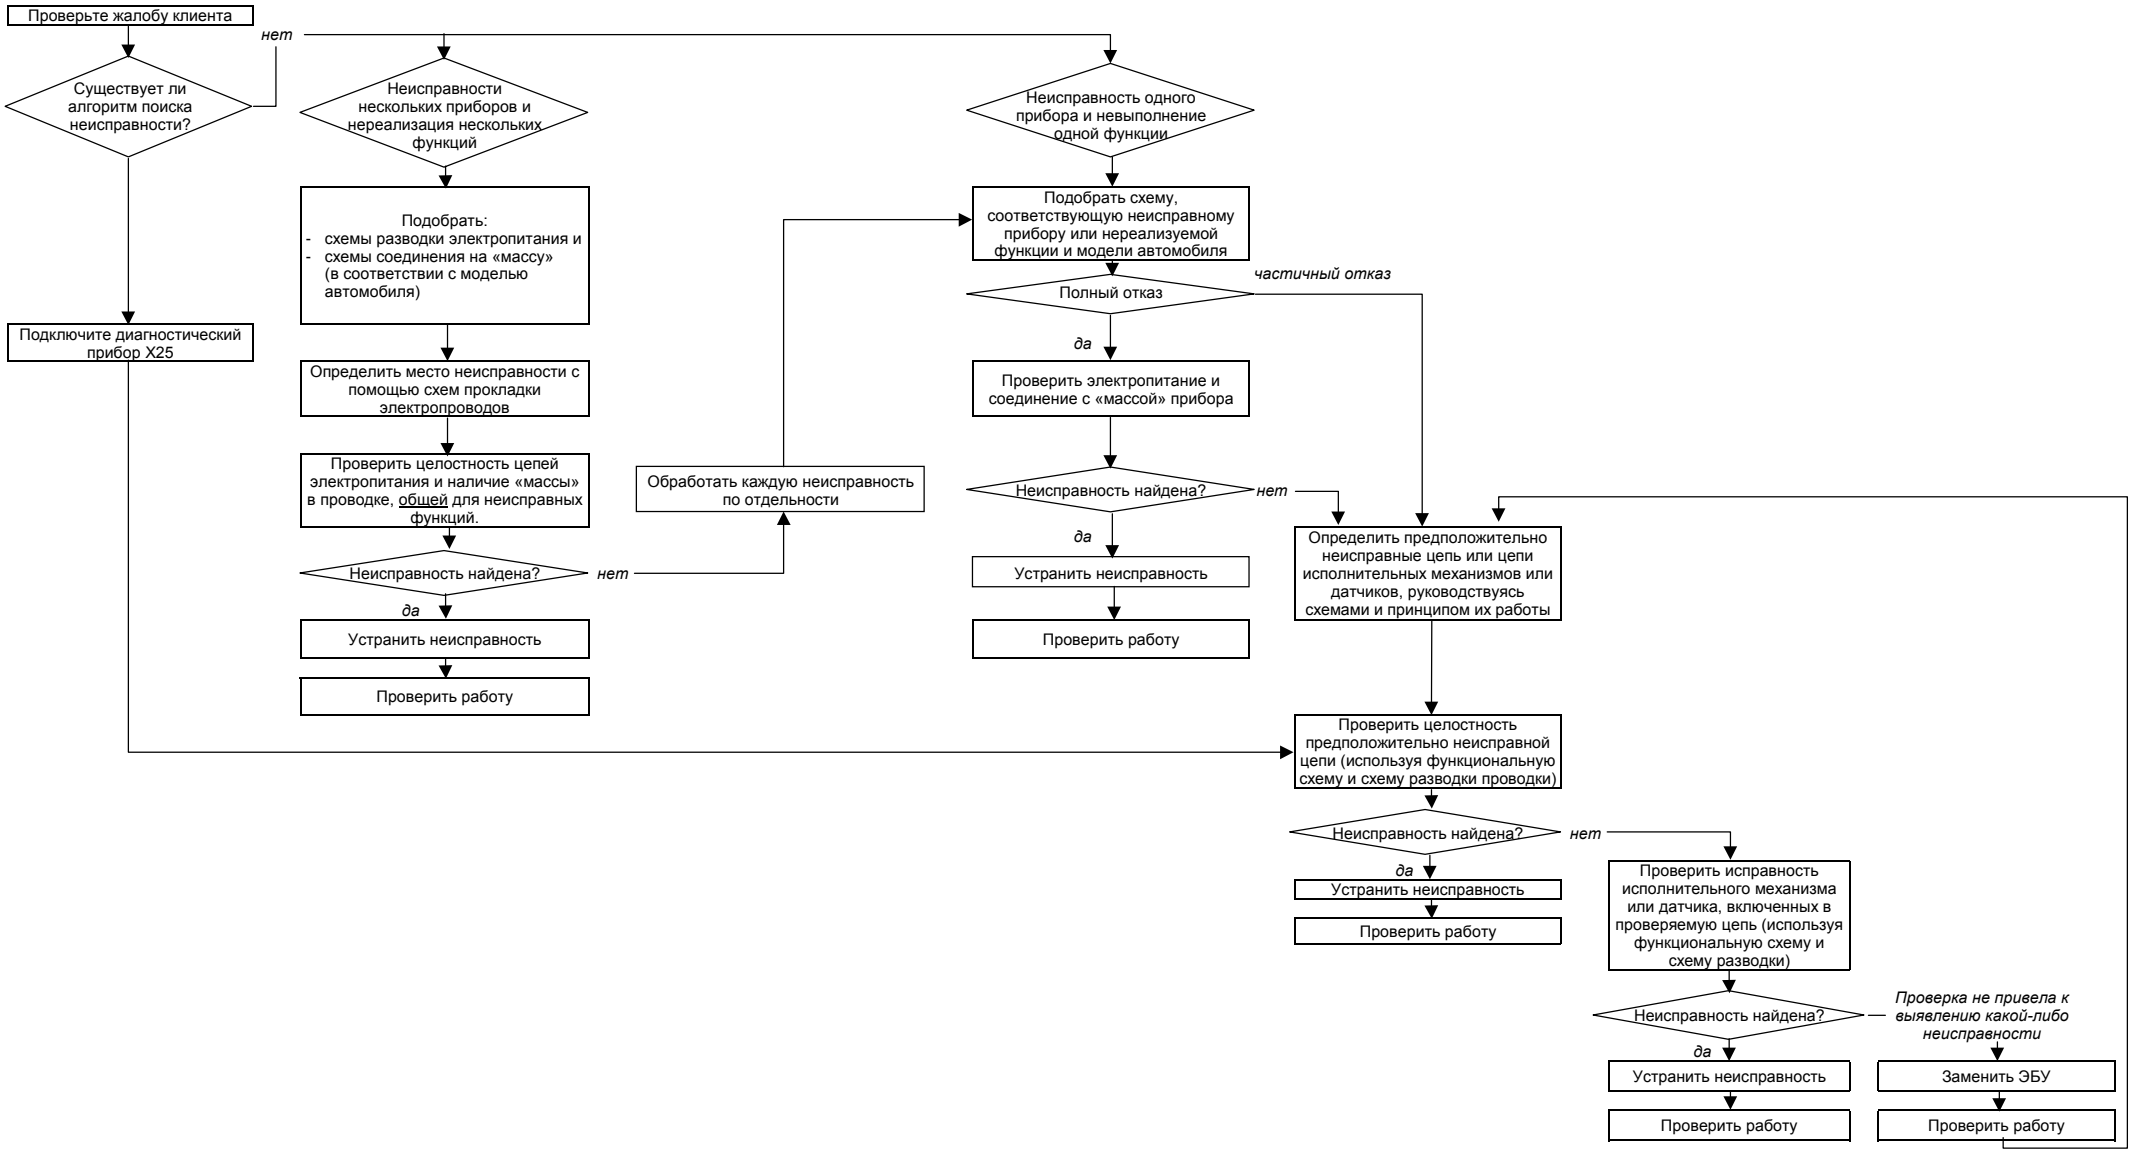

ADAC DRIVING ASSISTANCE INSTRUMENT PANEL LIGHTING RHEOSTAT OR NC

ADAC

X64

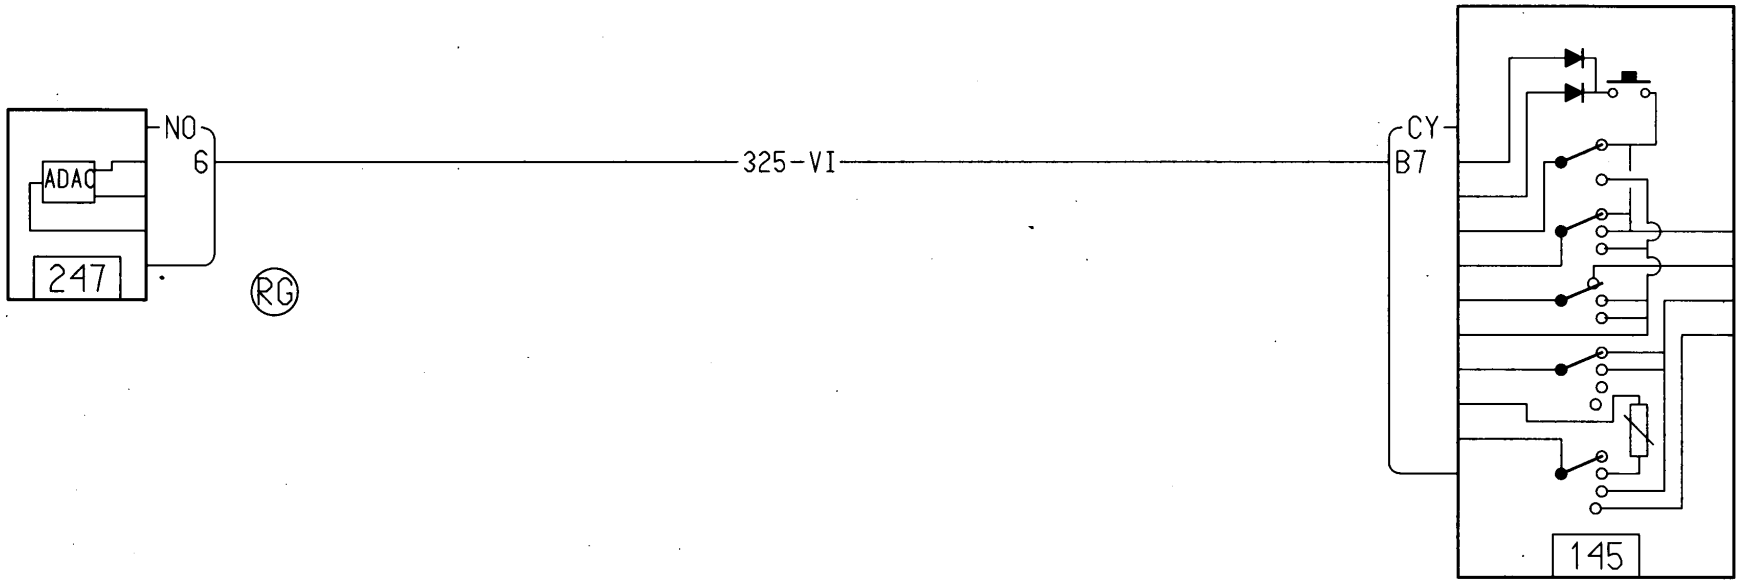

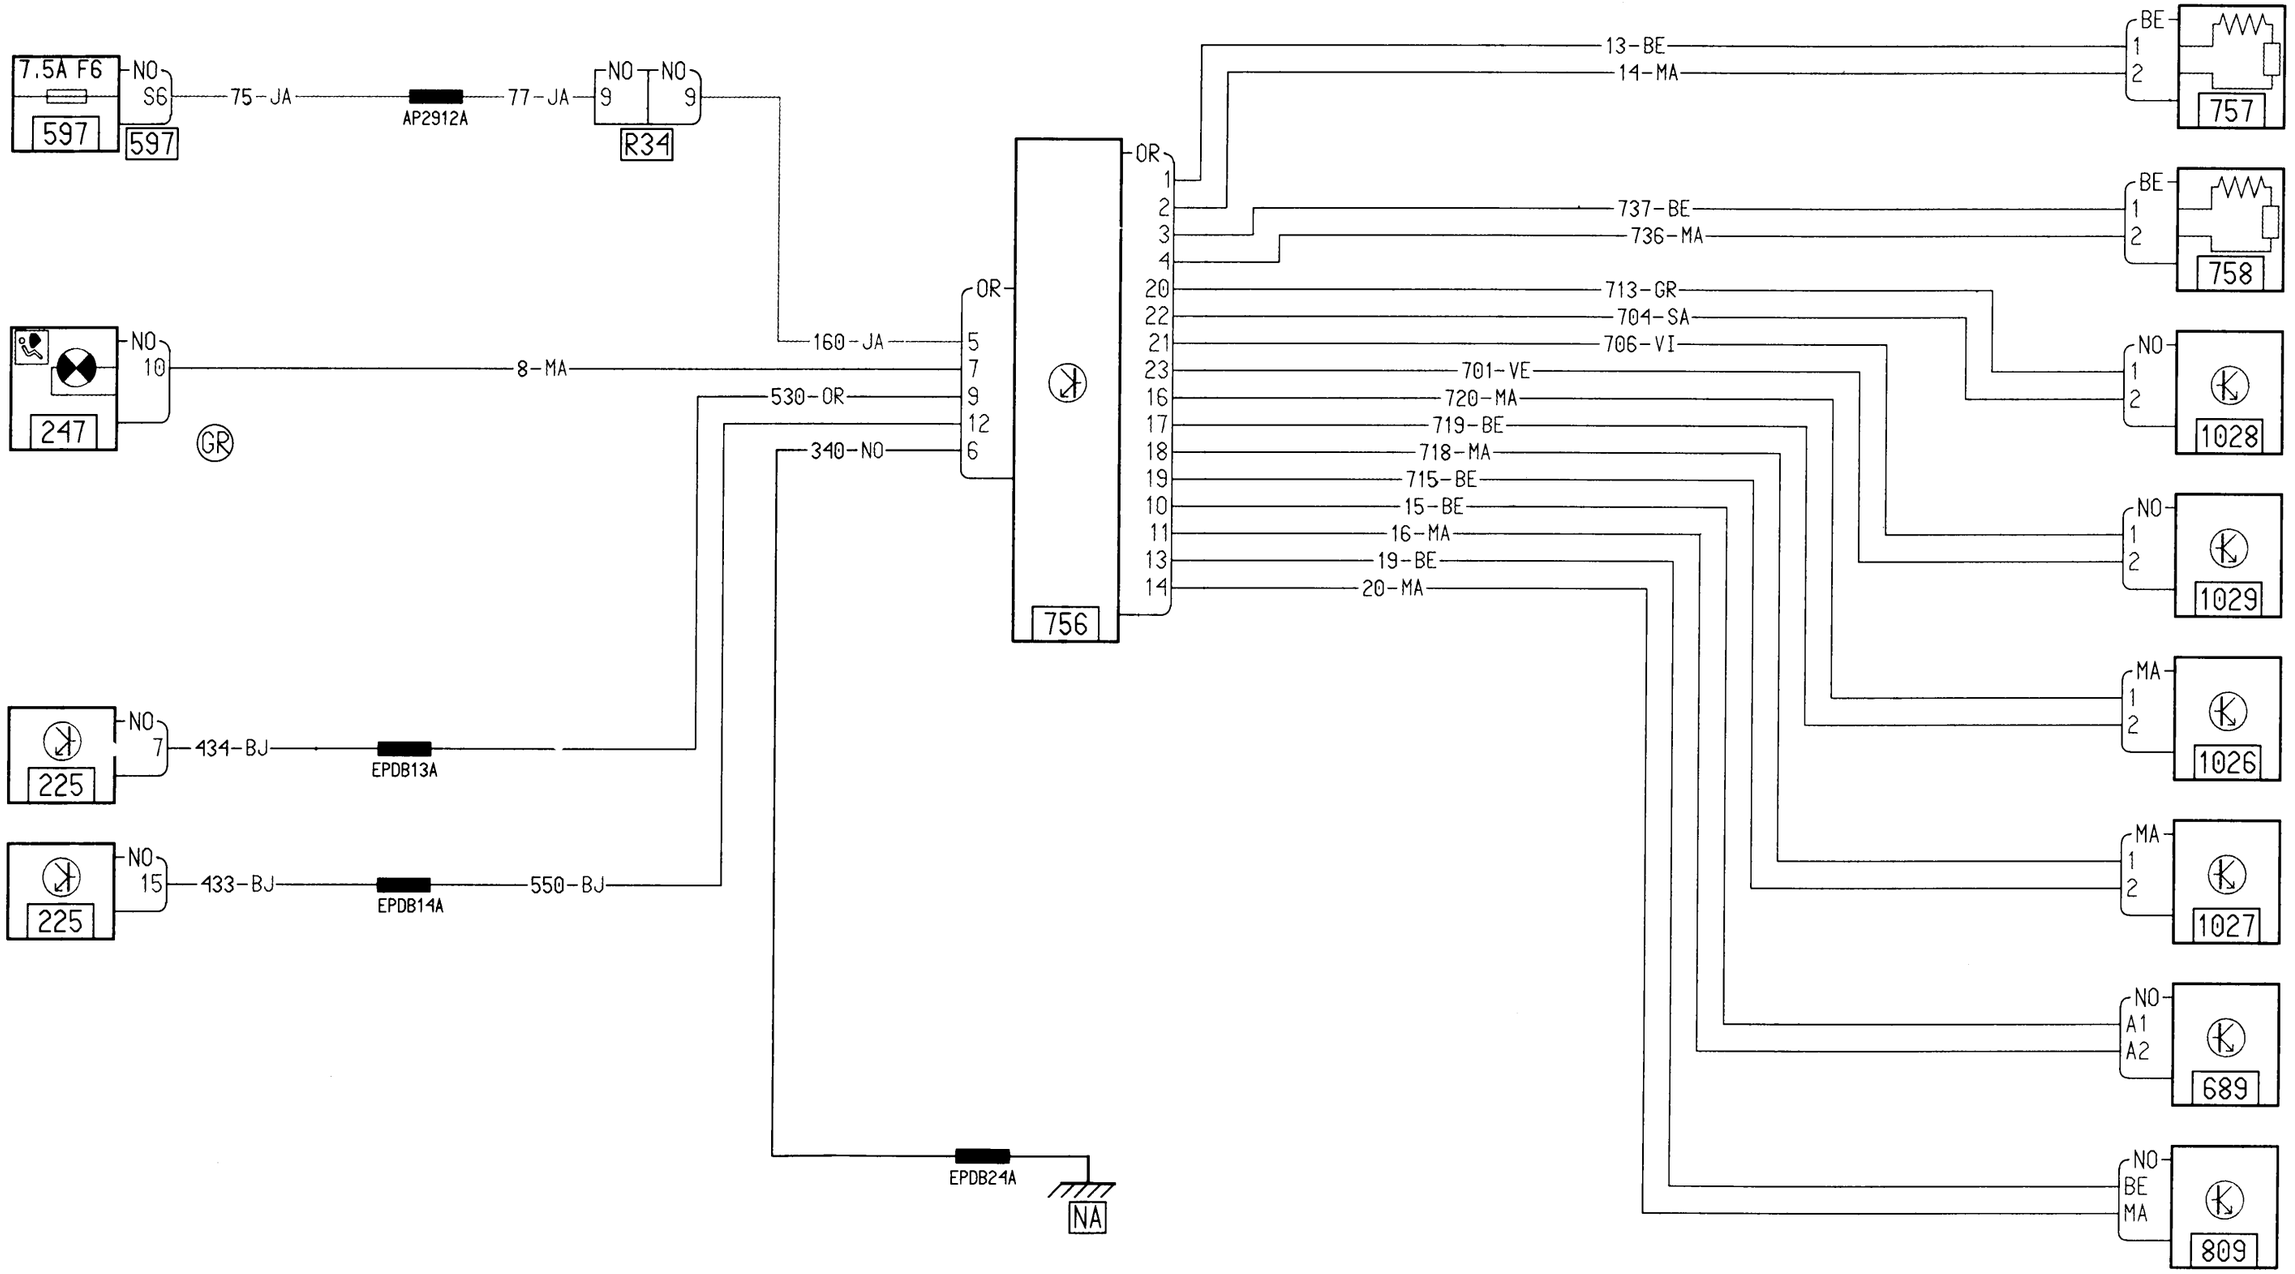
7.5A F6
NO
S6
597
597
75-JA
AP2912A
77-JA
NO
9
NO
9
R34
247
NO
10
8-MA
GR
225
NO
7
434-BJ
EPDB13A
225
NO
15
433-BJ
EPDB14A
550-BJ
160-JA
530-OR
340-NO
OR
5
7
9
12
6
756
OR
1
2
3
4
20
22
21
23
16
17
18
19
10
11
13
14
13-BE
14-MA
737-BE
736-MA
713-GR
704-SA
706-VI
701-VE
720-MA
719-BE
718-MA
715-BE
15-BE
16-MA
19-BE
20-MA
EPDB24A
NA
BE
1
2
757
BE
1
2
758
NO
1
2
1028
NO
1
2
1029
MA
1
2
1026
MA
1
2
1027
NO
A1
A2
689
NO
BE
MA
809

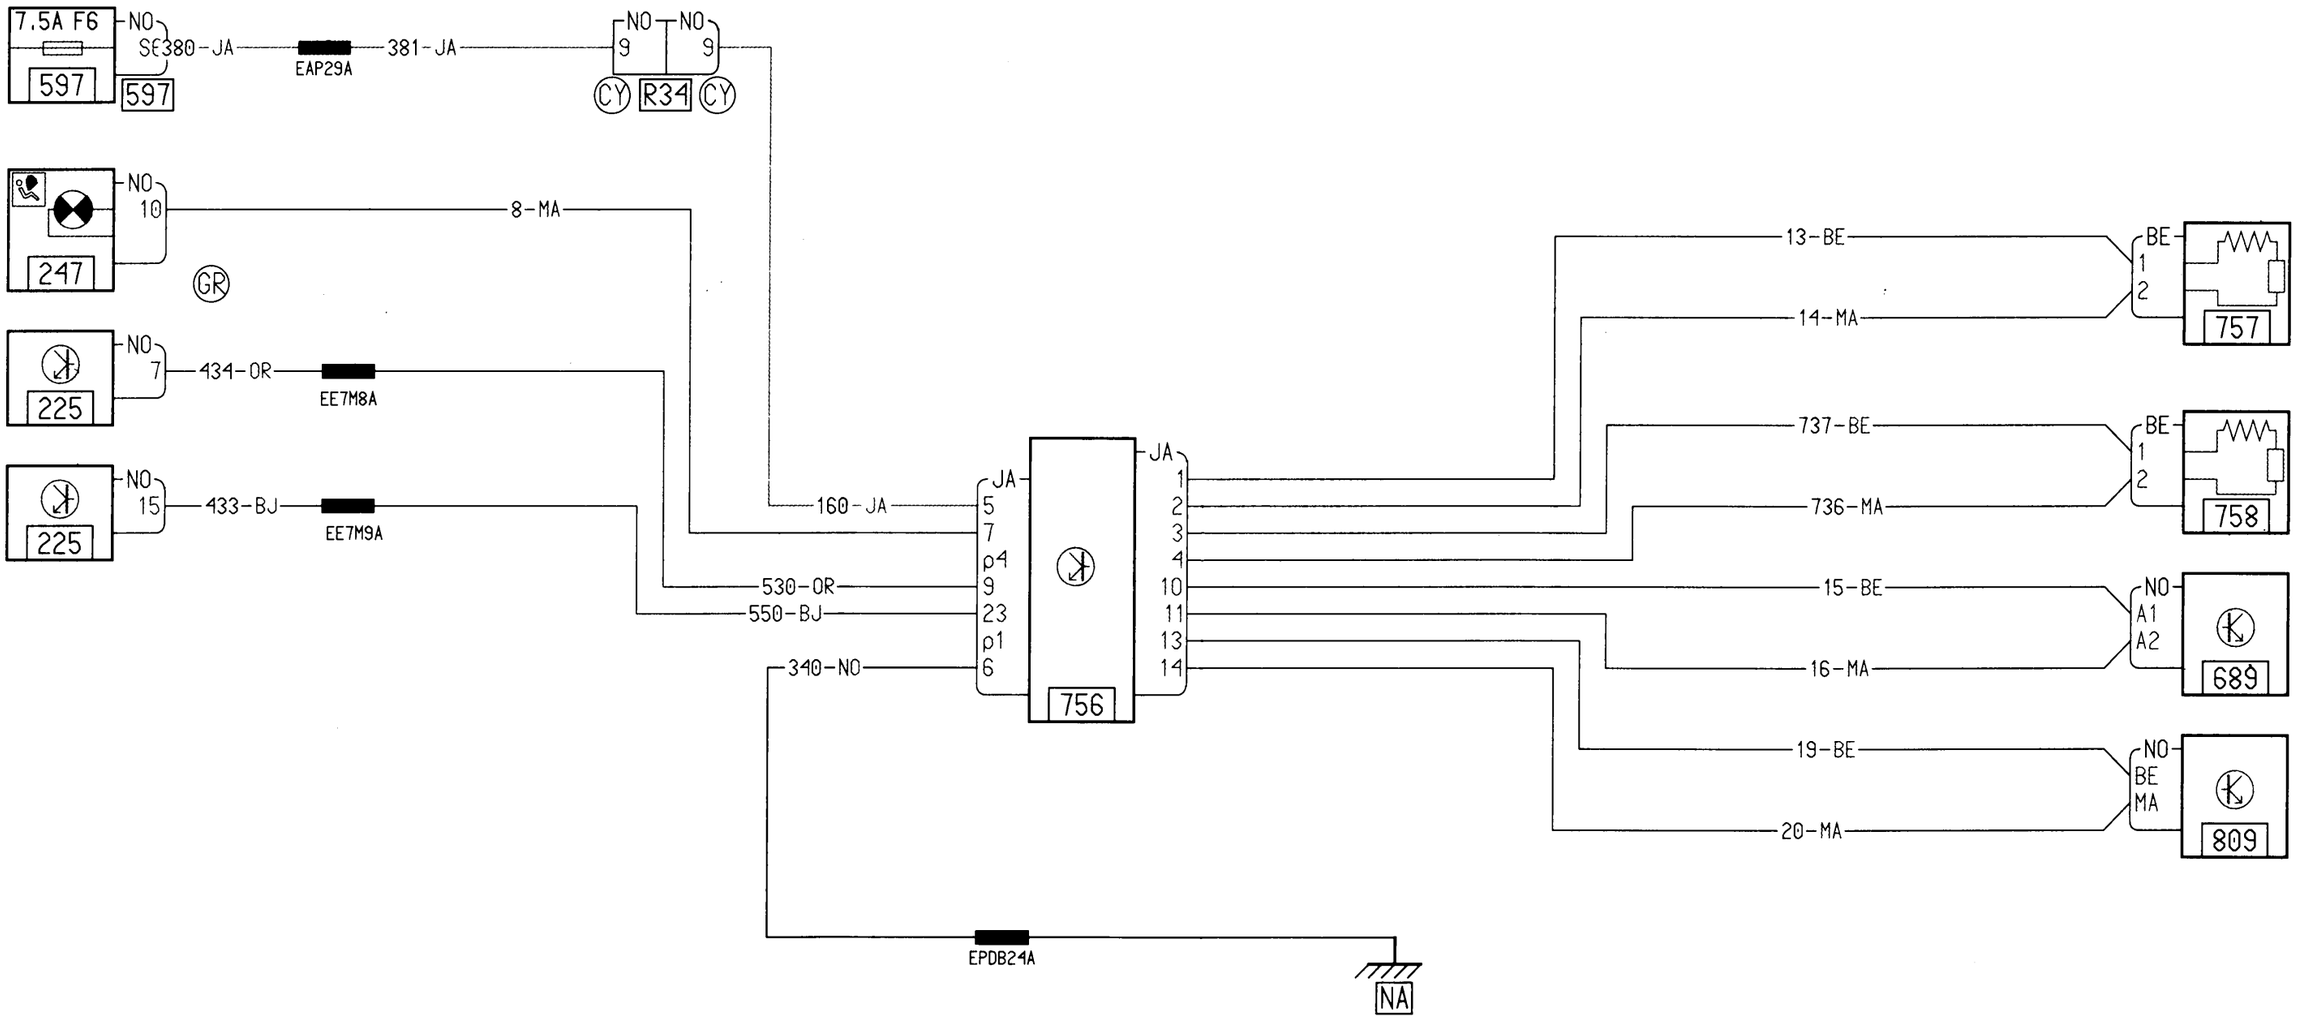
7.5A F6
597
NO
SE380-JA
597
EAP29A
381-JA
NO
9
CY
R34
NO
9
CY
247
NO
10
8-MA
GR
225
NO
7
434-OR
EE7M8A
225
NO
15
433-BJ
EE7M9A
160-JA
530-OR
550-BJ
340-NO
JA
5
7
p4
9
23
p1
6
756
JA
1
2
3
4
10
11
13
14
13-BE
14-MA
737-BE
736-MA
15-BE
16-MA
19-BE
20-MA
BE
1
2
757
BE
1
2
758
NO
A1
A2
689
NO
BE
MA
809
EPDB24A
NA

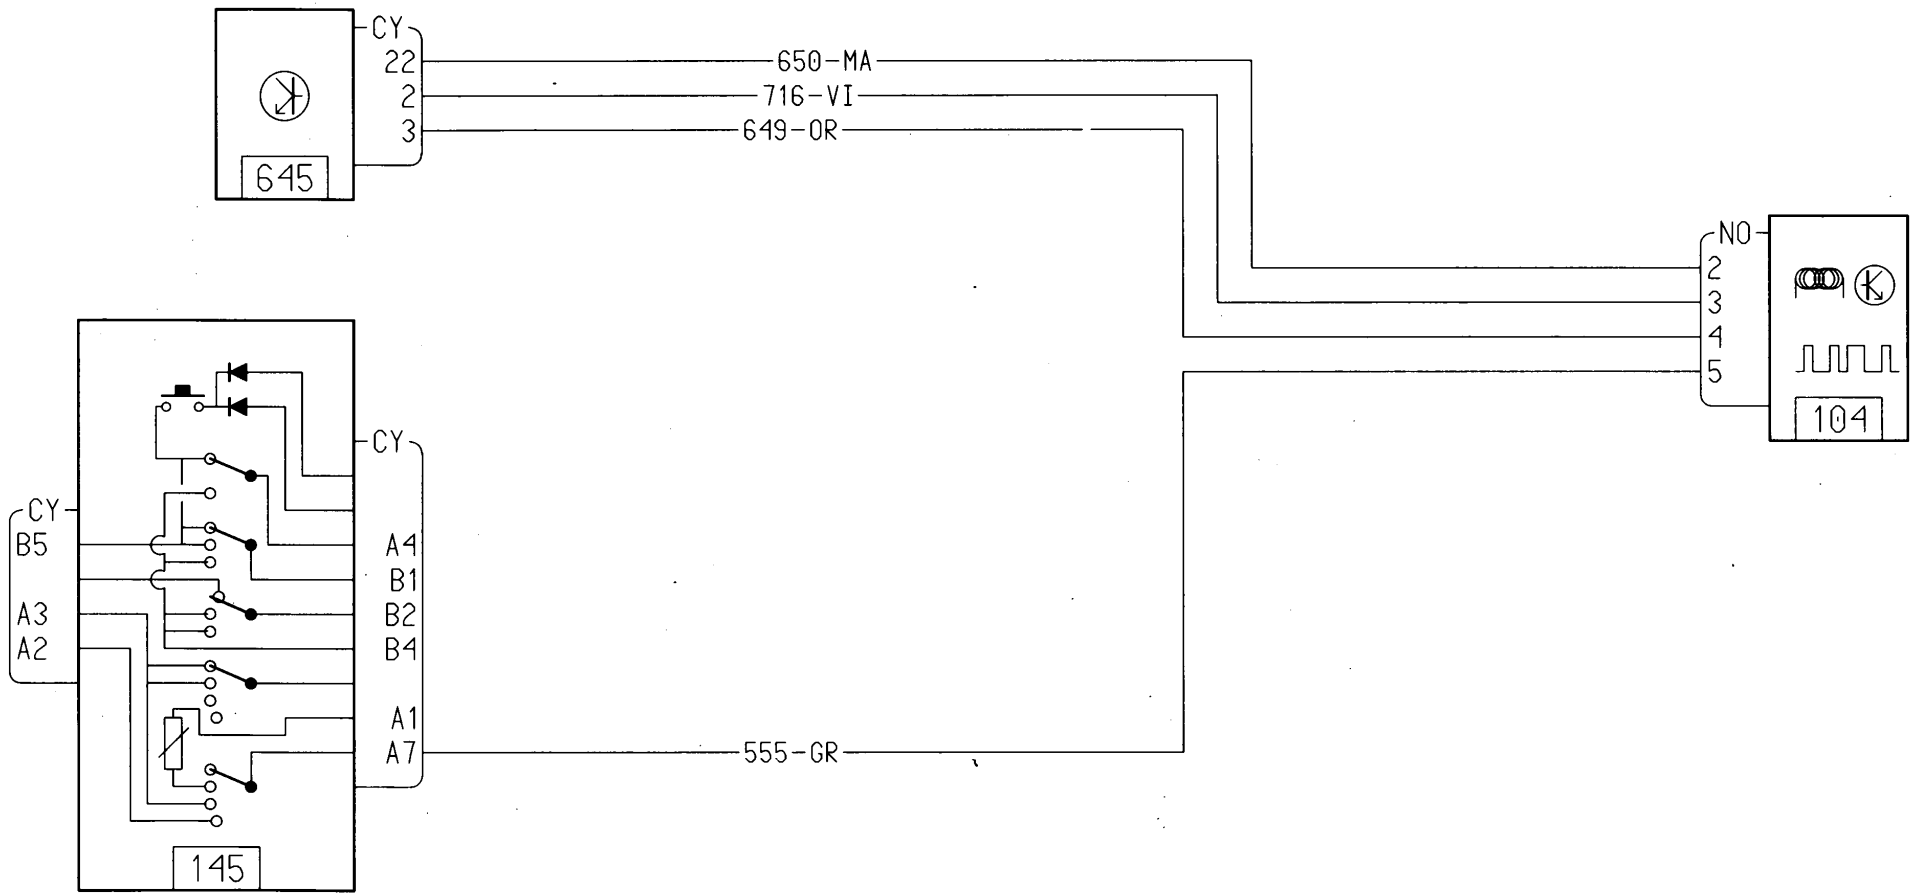
CY
22
2
3
645
650-MA
716-VI
649-OR
NO
2
3
4
5
104
CY
B5
A3
A2
CY
A4
B1
B2
B4
A1
A7
555-GR
145

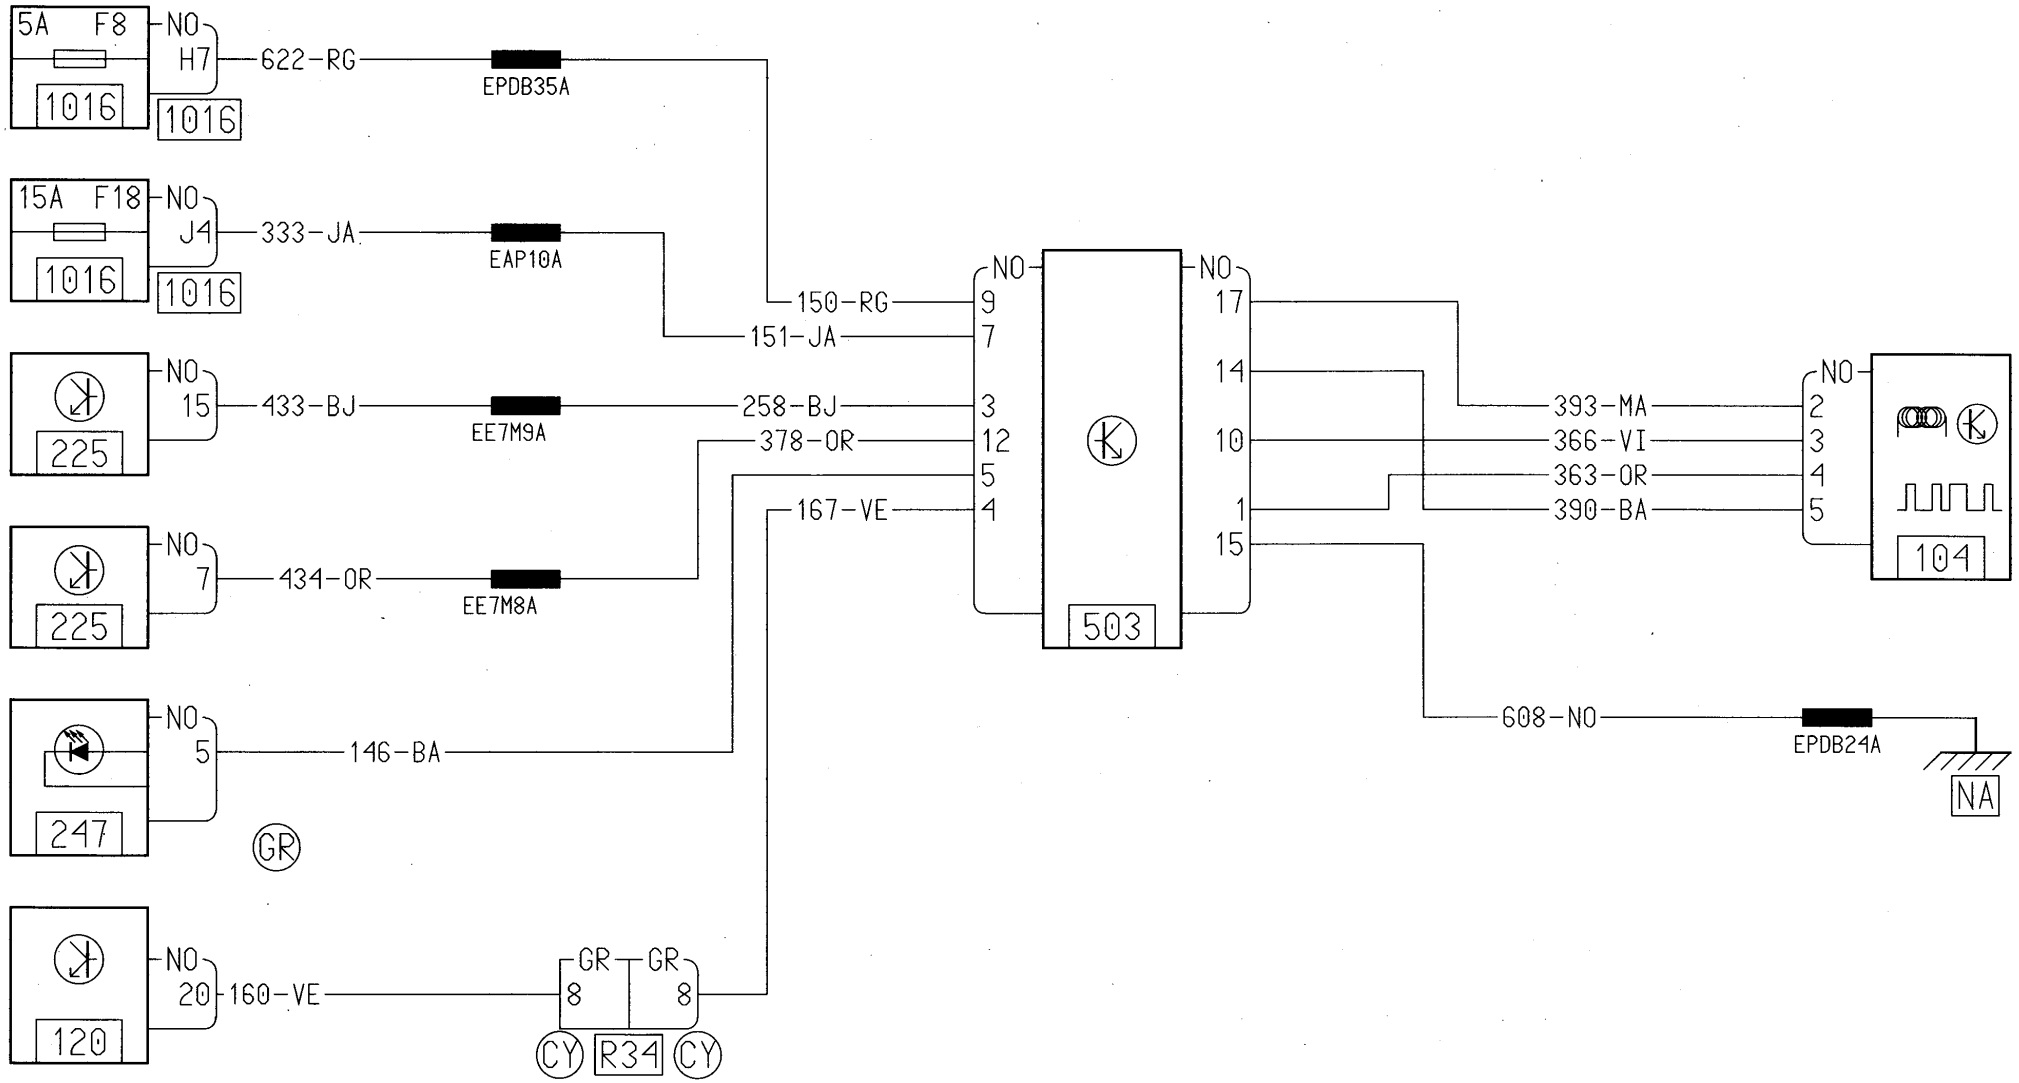
5A F8
1016
NO
H7
1016
622-RG
EPDB35A
15A F18
1016
NO
J4
1016
333-JA
EAP10A
225
NO
15
433-BJ
EE7M9A
225
NO
7
434-OR
EE7M8A
247
NO
5
146-BA
GR
120
NO
20
160-VE
GR
8
GR
8
CY
R34
CY
150-RG
151-JA
258-BJ
378-OR
167-VE
NO
9
7
3
12
5
4
503
NO
17
14
10
1
15
393-MA
366-VI
363-OR
390-BA
608-NO
NO
2
3
4
5
104
EPDB24A
NA

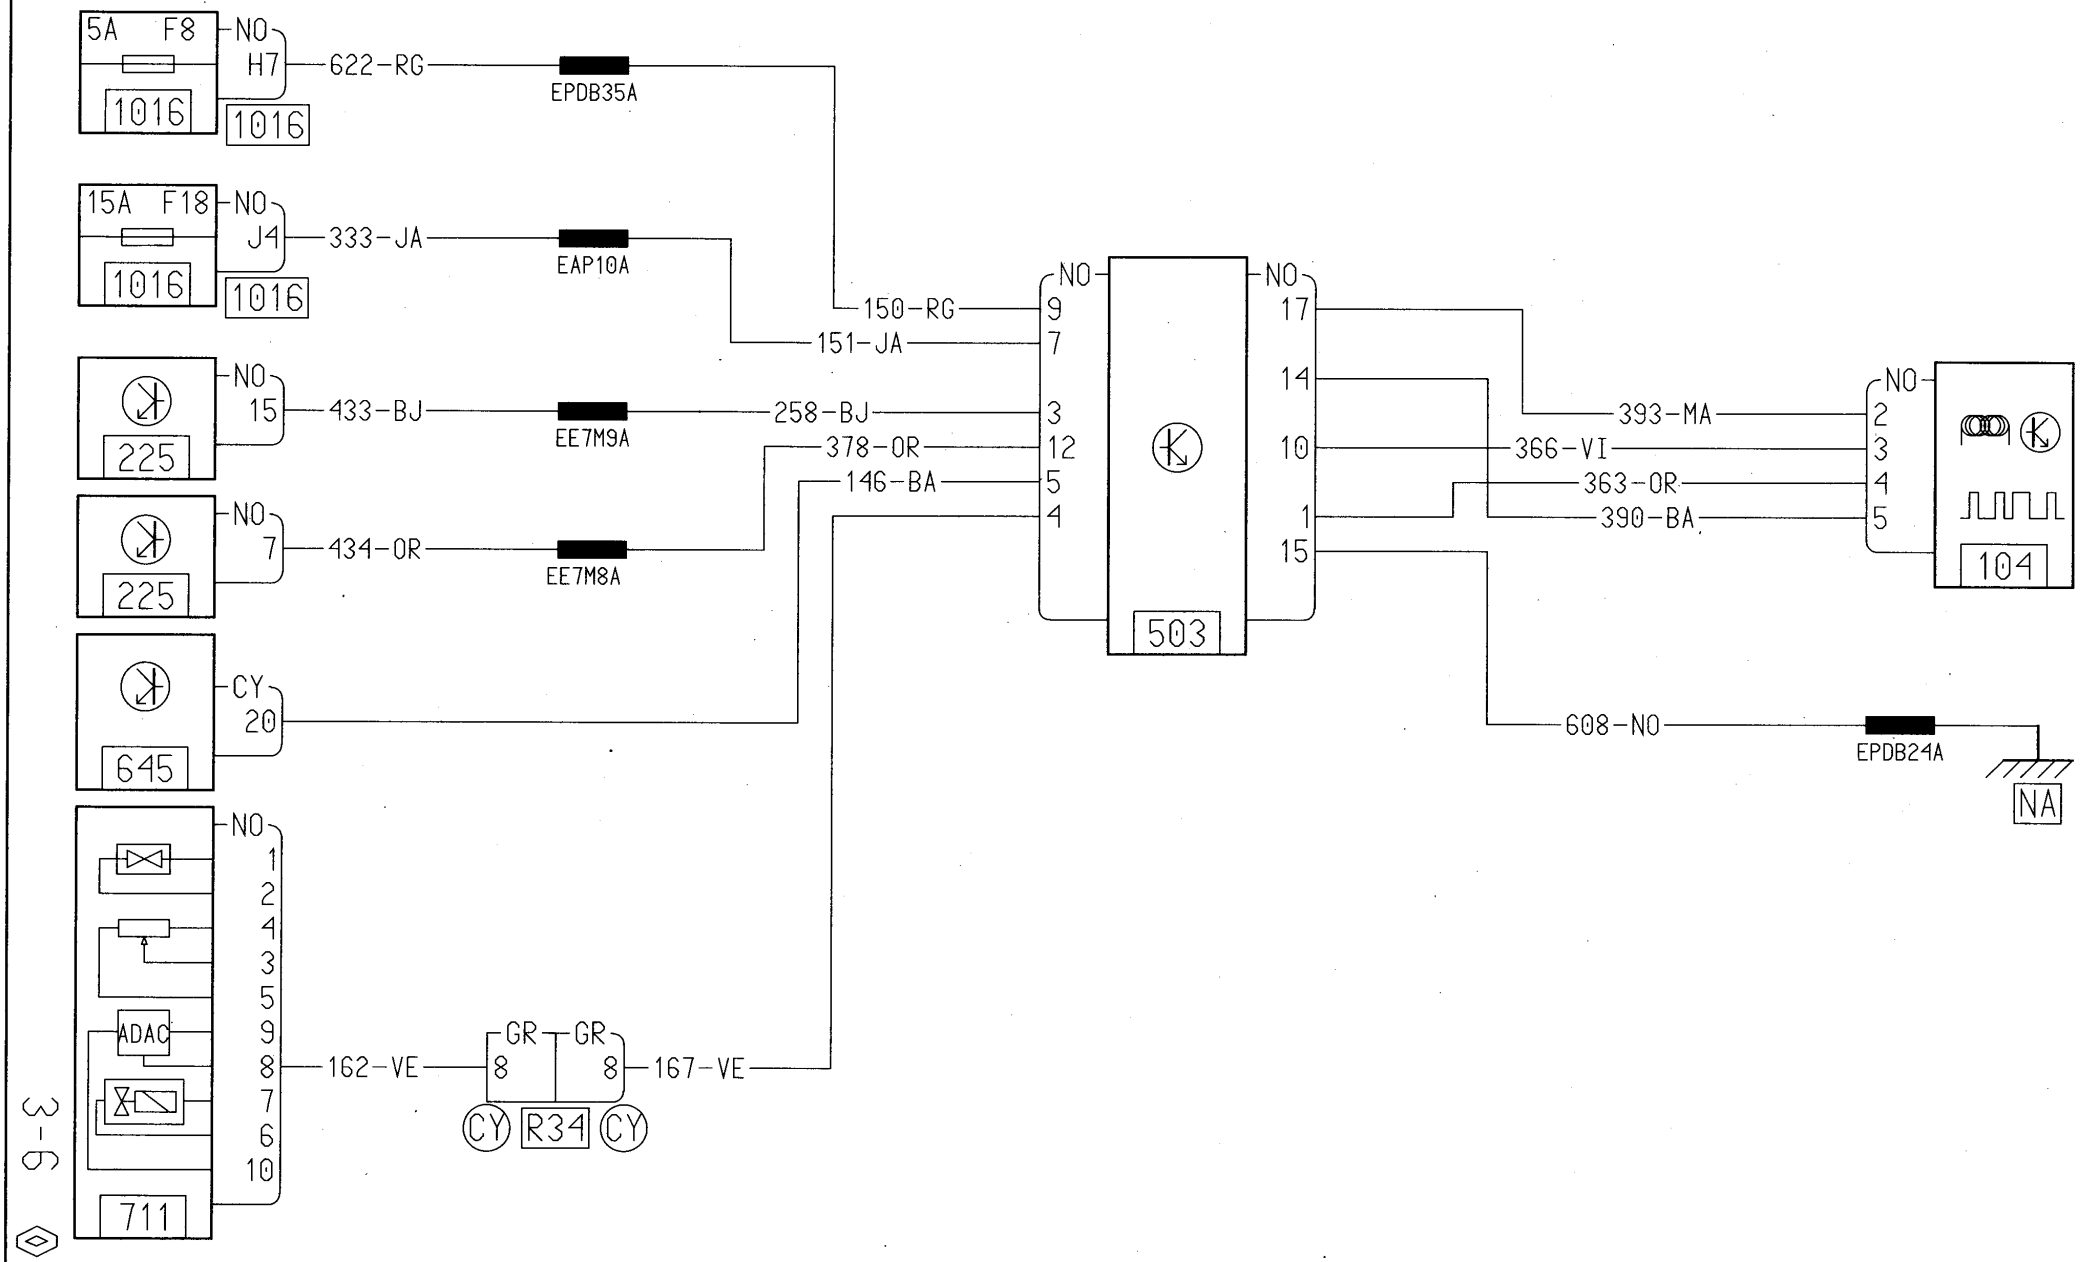
5A F8
1016
NO
H7
622-RG
EPDB35A
1016
15A F18
1016
NO
J4
333-JA
EAP10A
1016
225
NO
15
433-BJ
EE7M9A
225
NO
7
434-OR
EE7M8A
645
CY
20
711
NO
1
2
4
3
5
9
8
7
6
10
ADAC
162-VE
GR
8
GR
8
167-VE
CY
R34
CY
150-RG
151-JA
258-BJ
378-OR
146-BA
NO
9
7
3
12
5
4
503
NO
17
14
10
1
15
393-MA
366-VI
363-OR
390-BA
608-NO
NO
2
3
4
5
104
EPDB24A
NA

CIGAR LIGHTER

E1,E2/DG

X64

00

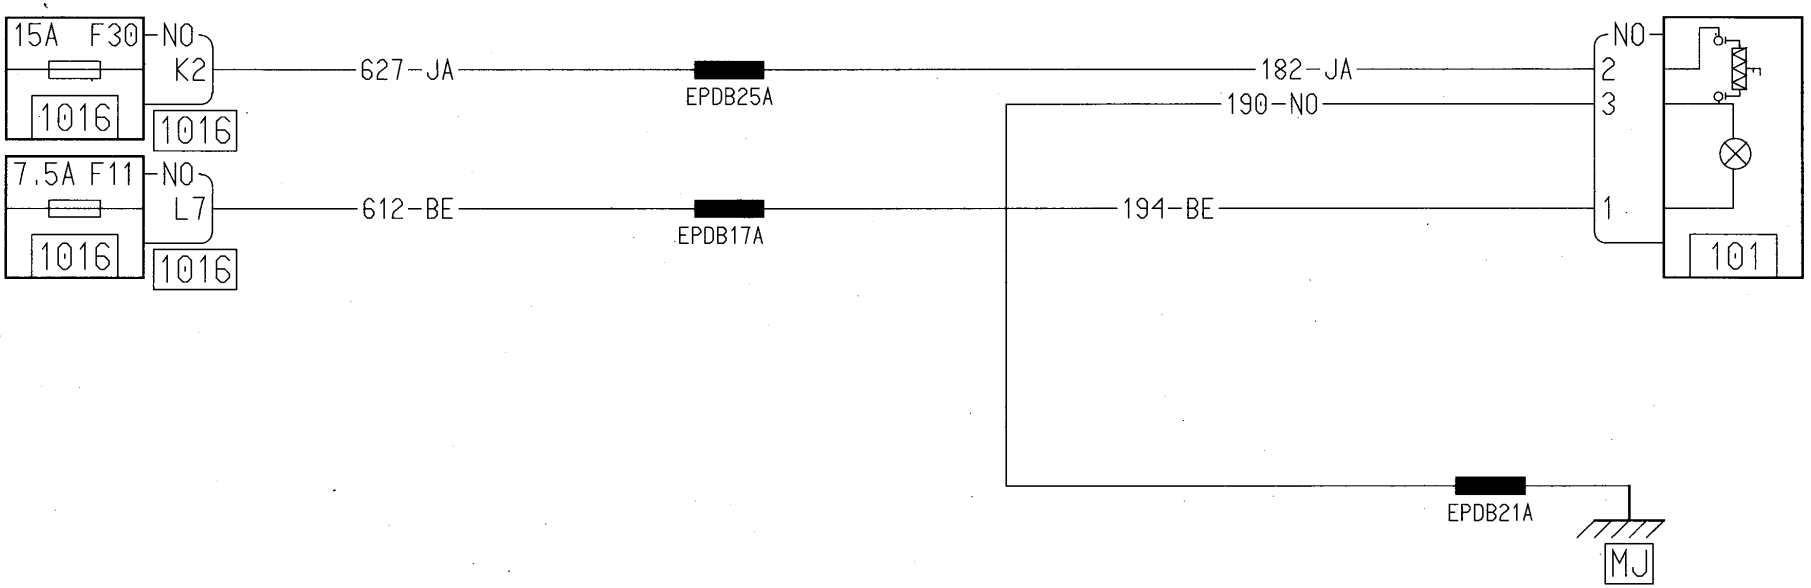

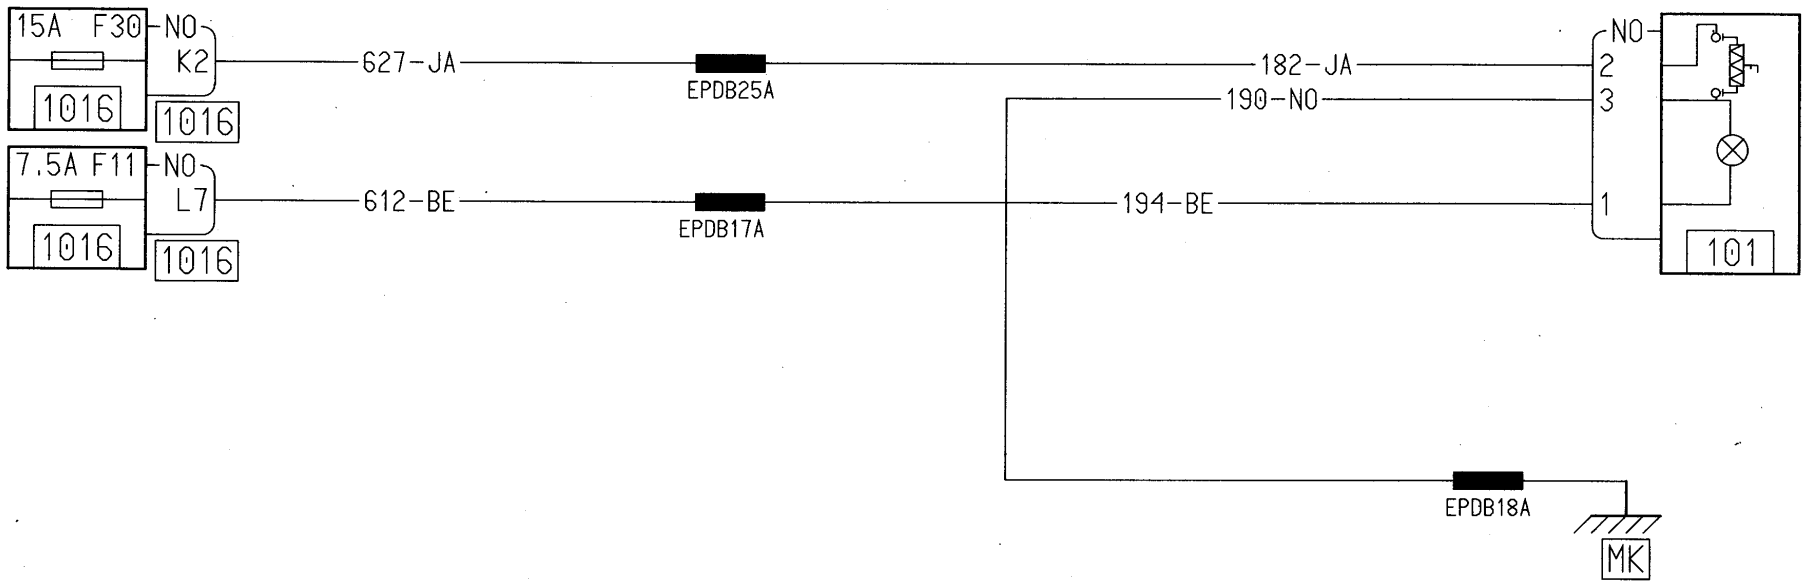
15A F30
NO
K2
1016
1016
627-JA
EPDB25A
182-JA
NO
2
3
190-NO
7.5A F11
NO
L7
1016
1016
612-BE
EPDB17A
194-BE
1
101
EPDB18A
MK

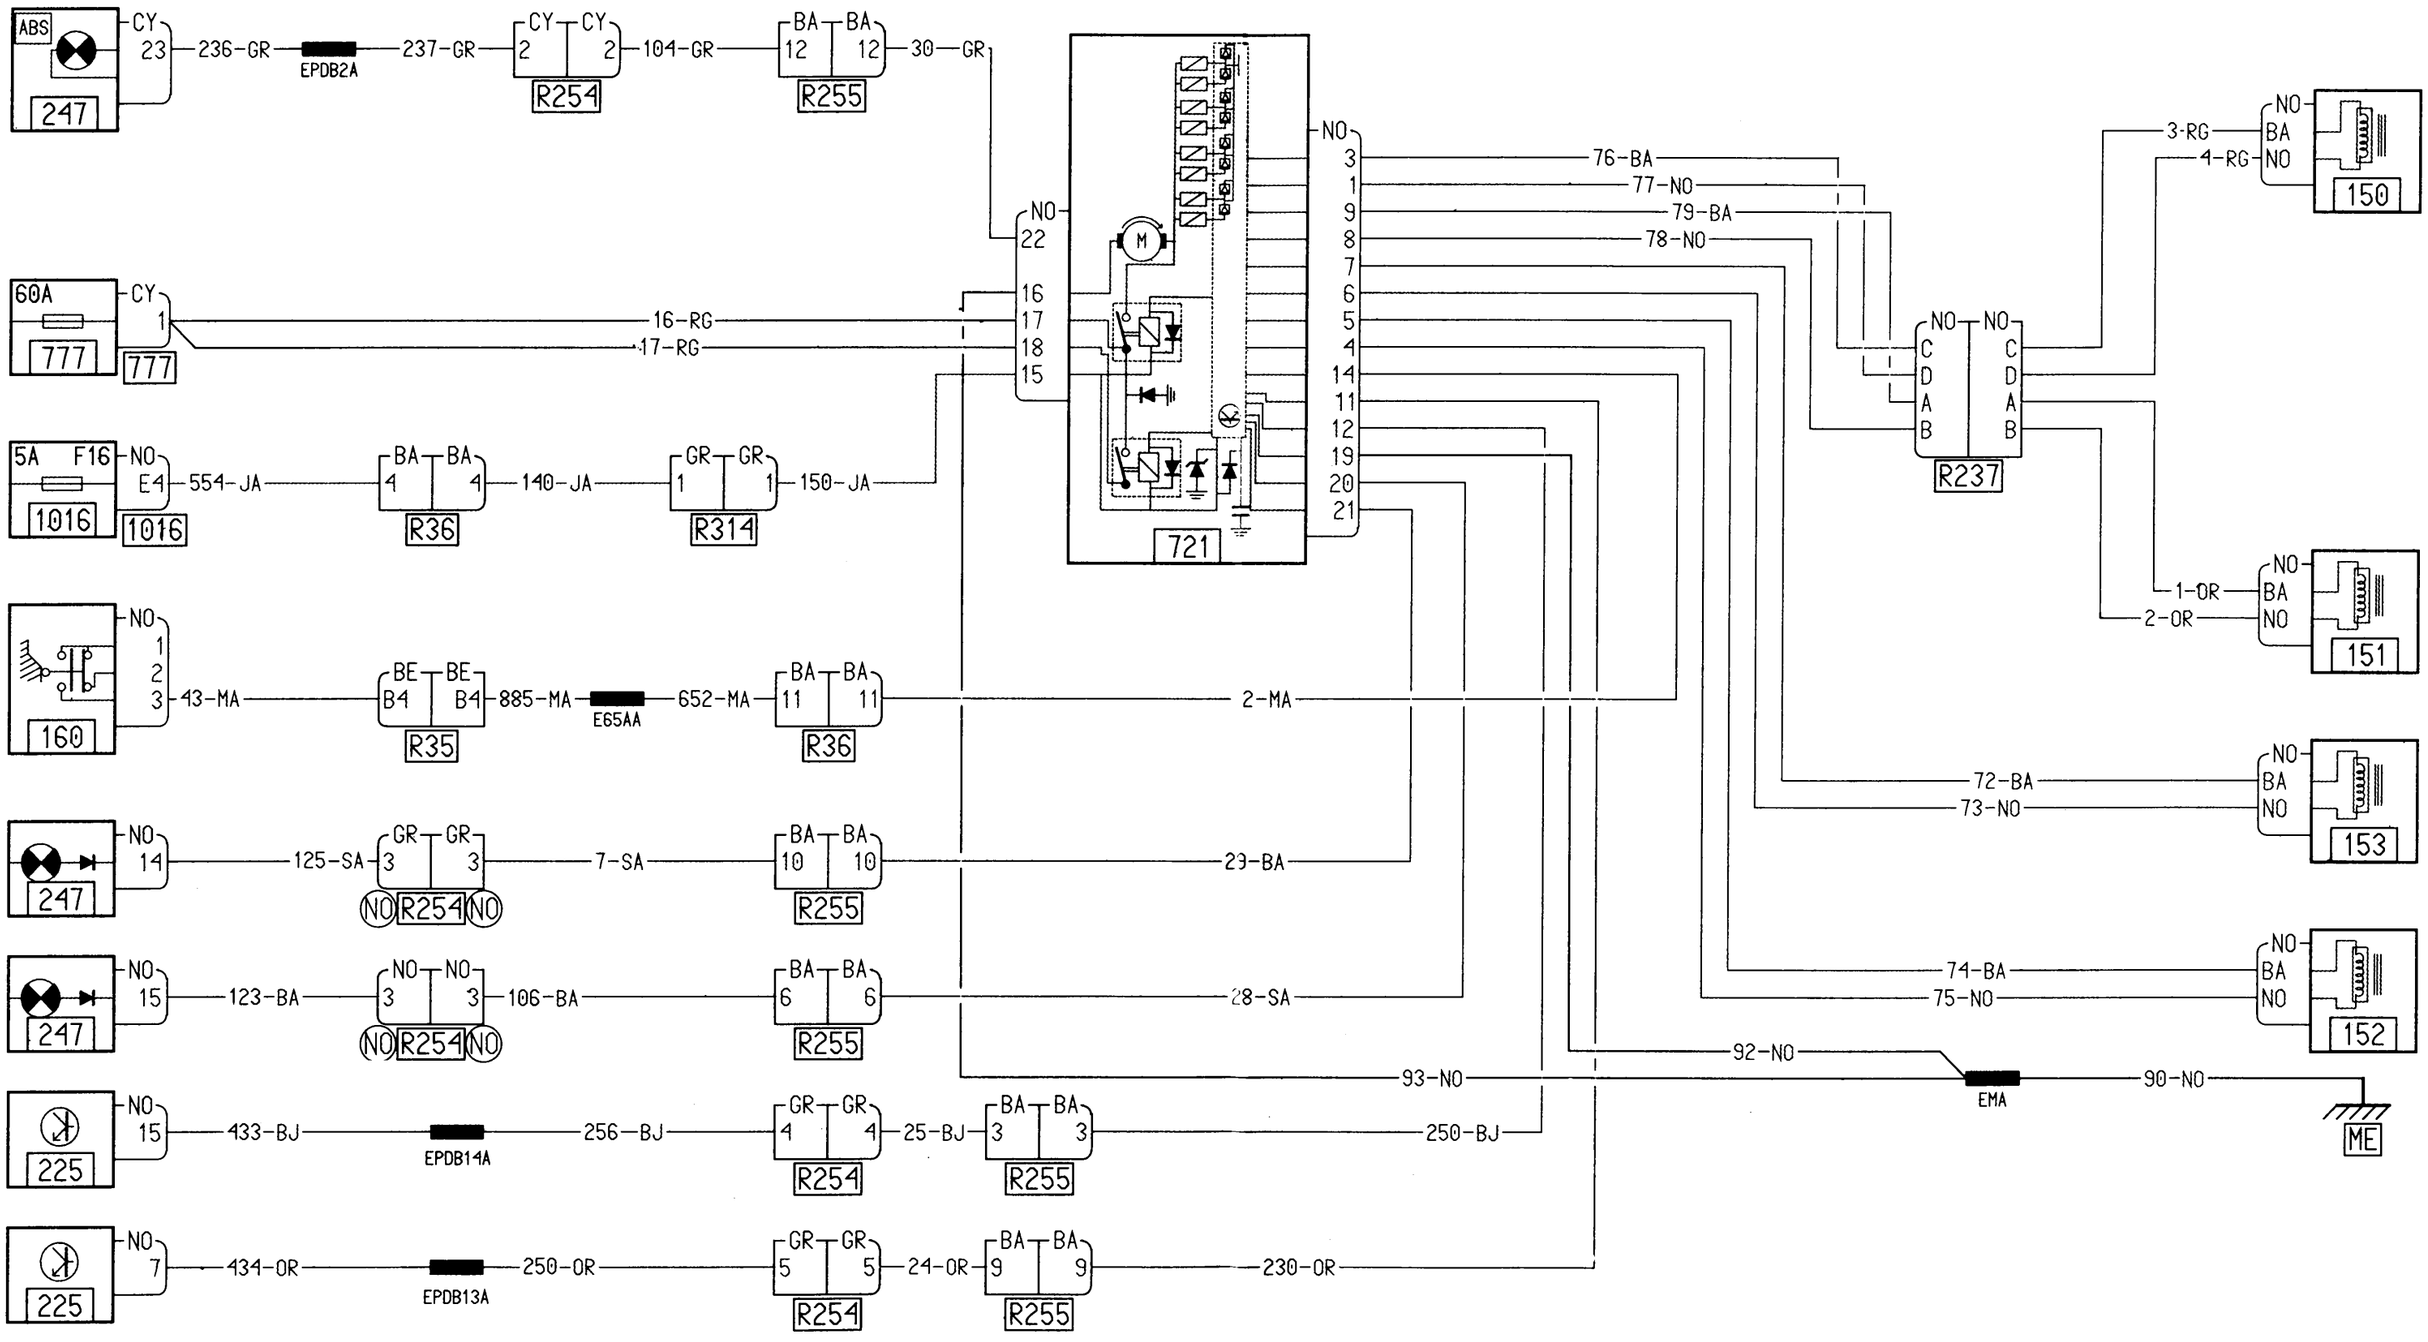
ABS
247
CY
23
236-GR
EPDB2A
237-GR
CY CY
2 2
R254
104-GR
BA BA
12 12
R255
30-GR
60A
777
CY
1
16-RG
17-RG
5A F16
1016
NO
E4
554-JA
BA BA
4 4
R36
140-JA
GR GR
1 1
R314
150-JA
NO
1
2
3
160
43-MA
BE BE
B4 B4
R35
885-MA
E65AA
652-MA
BA BA
11 11
R36
2-MA
NO
14
125-SA
GR GR
3 3
NO R254 NO
7-SA
BA BA
10 10
R255
23-BA
NO
15
123-BA
NO NO
3 3
NO R254 NO
106-BA
BA BA
6 6
R255
28-SA
NO
15
433-BJ
EPDB14A
256-BJ
GR GR
4 4
R254
25-BJ
BA BA
3 3
R255
250-BJ
NO
7
434-OR
EPDB13A
250-OR
GR GR
5 5
R254
24-OR
BA BA
9 9
R255
230-OR
NO
22
16
17
18
15
M
721
NO
3
1
9
8
7
6
5
4
14
11
12
19
20
21
76-BA
77-NO
79-BA
78-NO
93-NO
92-NO
EMA
90-NO
ME
NO NO
C C
D D
A A
B B
R237
3-RG
4-RG
NO
BA
NO
150
1-OR
2-OR
151
72-BA
73-NO
153
74-BA
75-NO
152

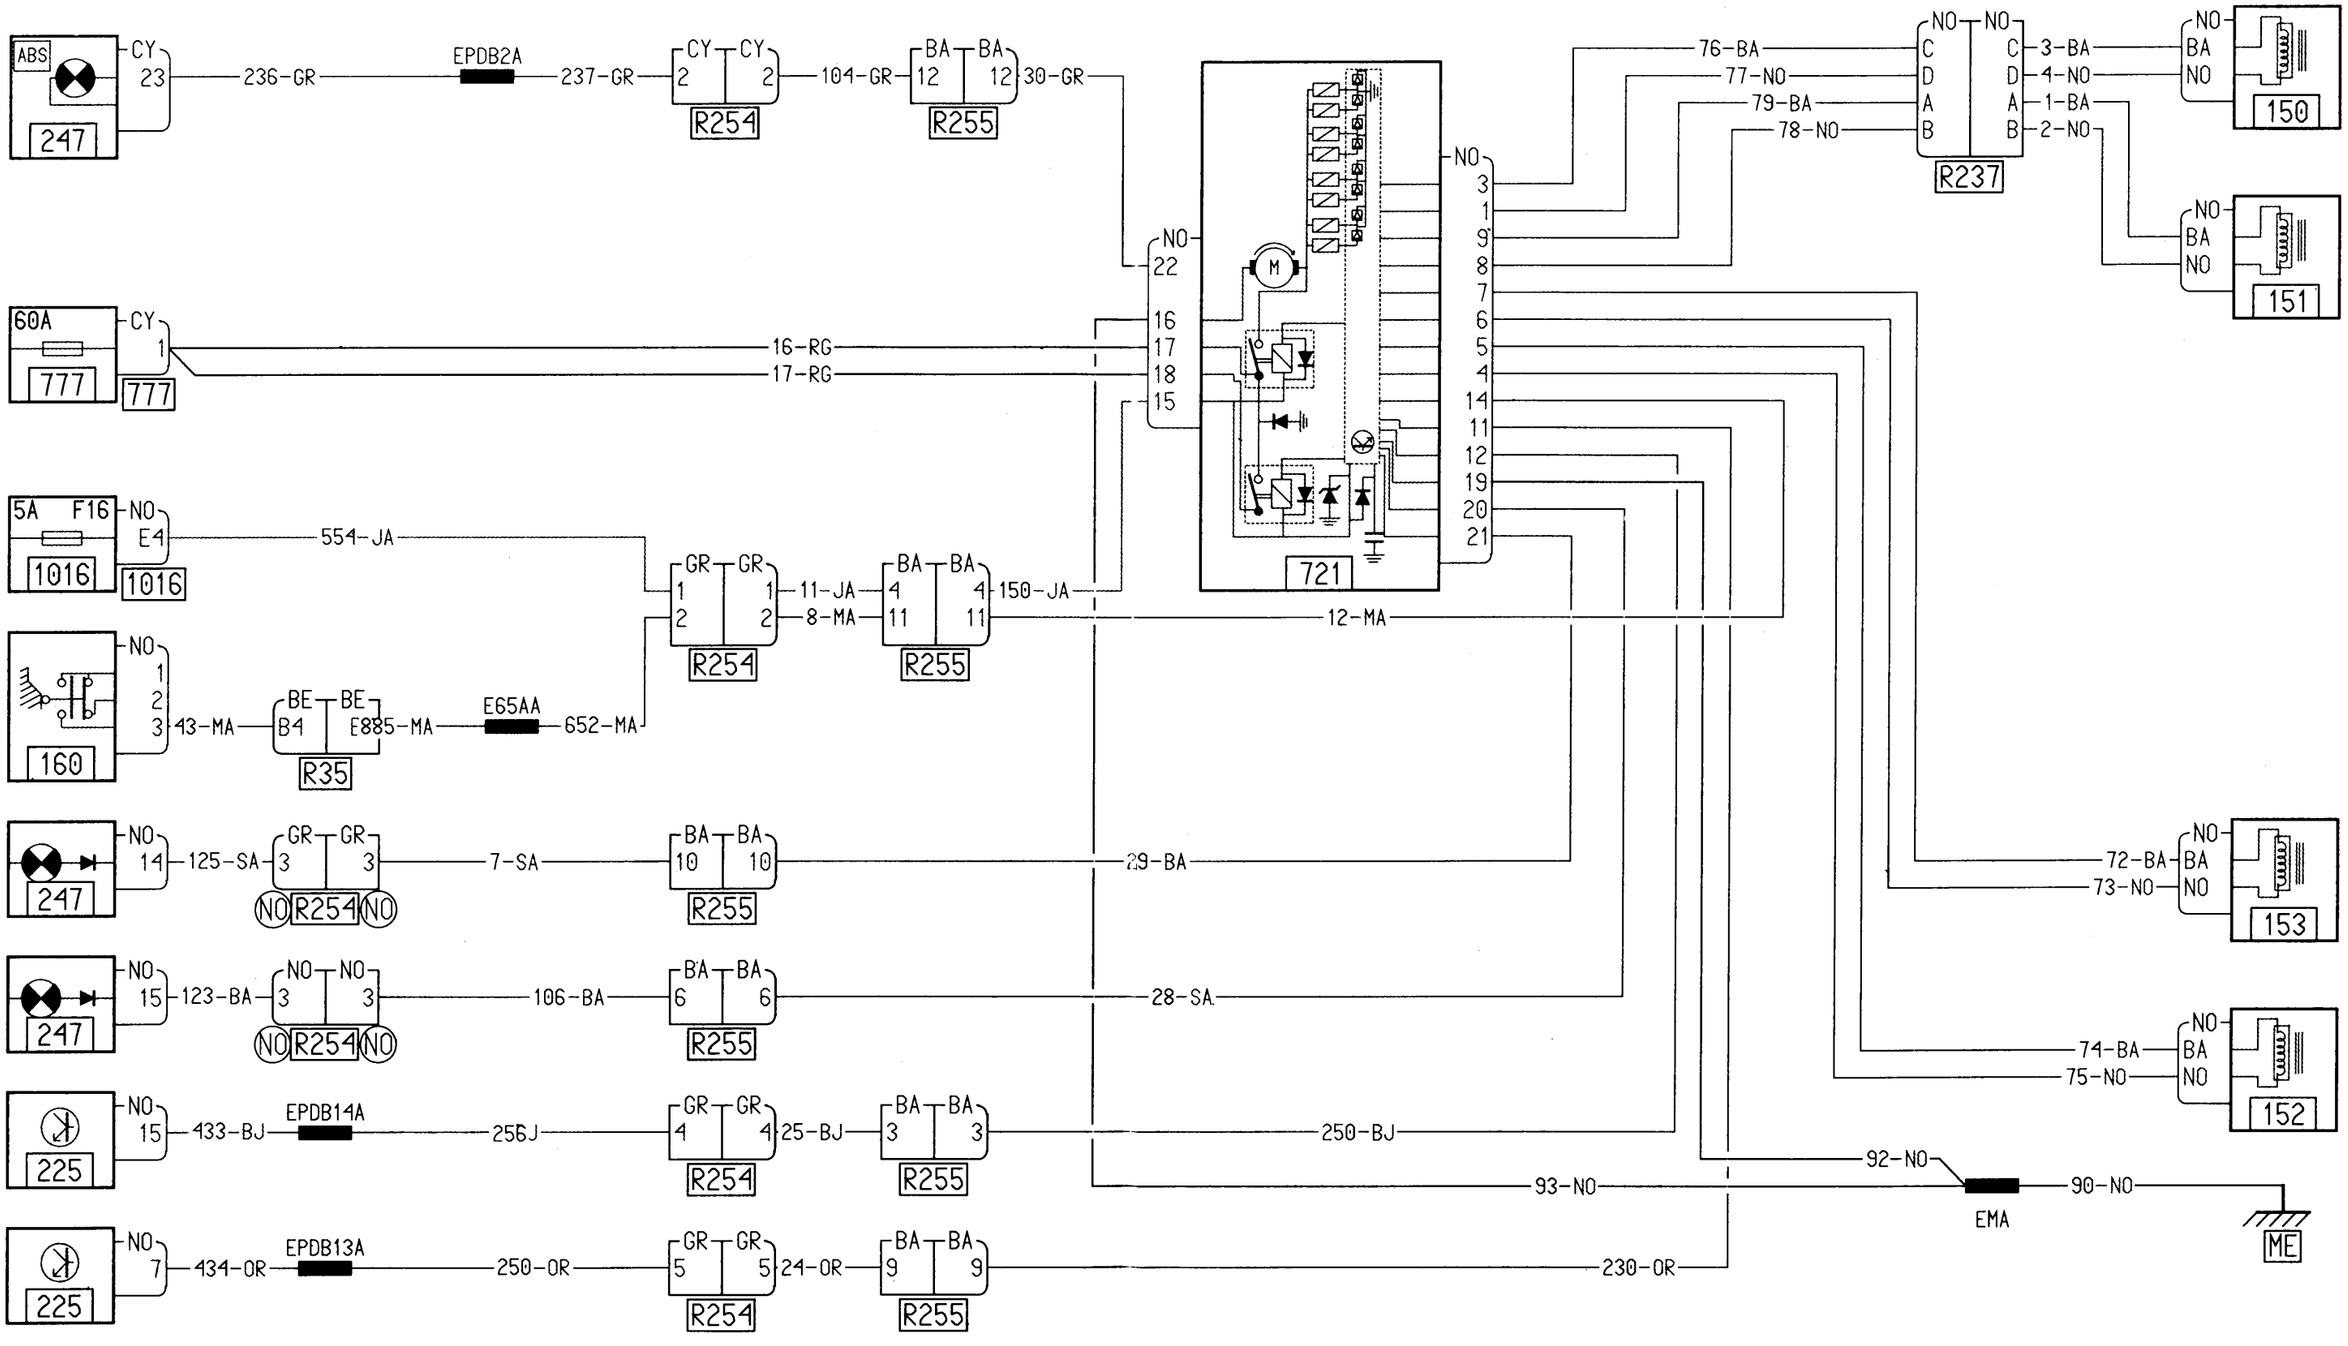
ABS
CY 23
247
236-GR
EPDB2A
237-GR
CY CY 2 2
R254
104-GR
BA BA 12 12
R255
30-GR
NO 22
16
17
18
15
721
NO 3 1 9 8 7 6 5 4 14 11 12 19 20 21
76-BA
77-NO
79-BA
78-NO
NO NO
C D A B
R237
C D A B 3-BA 4-NO 1-BA 2-NO
NO BA NO
150
151
60A
777
CY 1
16-RG
17-RG
5A F16
1016
NO E4
554-JA
GR GR 1 2 1 2
11-JA
8-MA
BA BA 4 11 4 11
150-JA
12-MA
160
NO 1 2 3
43-MA
BE BE B4 E885-MA
R35
E65AA
652-MA
NO 14
125-SA
GR GR 3 3
NO R254 NO
7-SA
BA BA 10 10
29-BA
NO 15
123-BA
NO NO 3 3
106-BA
BA BA 6 6
28-SA
72-BA
73-NO
153
74-BA
75-NO
152
NO 15
433-BJ
EPDB14A
256J
GR GR 4 4
25-BJ
BA BA 3 3
250-BJ
92-NO
93-NO
EMA
90-NO
ME
NO 7
434-OR
EPDB13A
250-OR
GR GR 5 5
24-OR
BA BA 9 9
230-OR

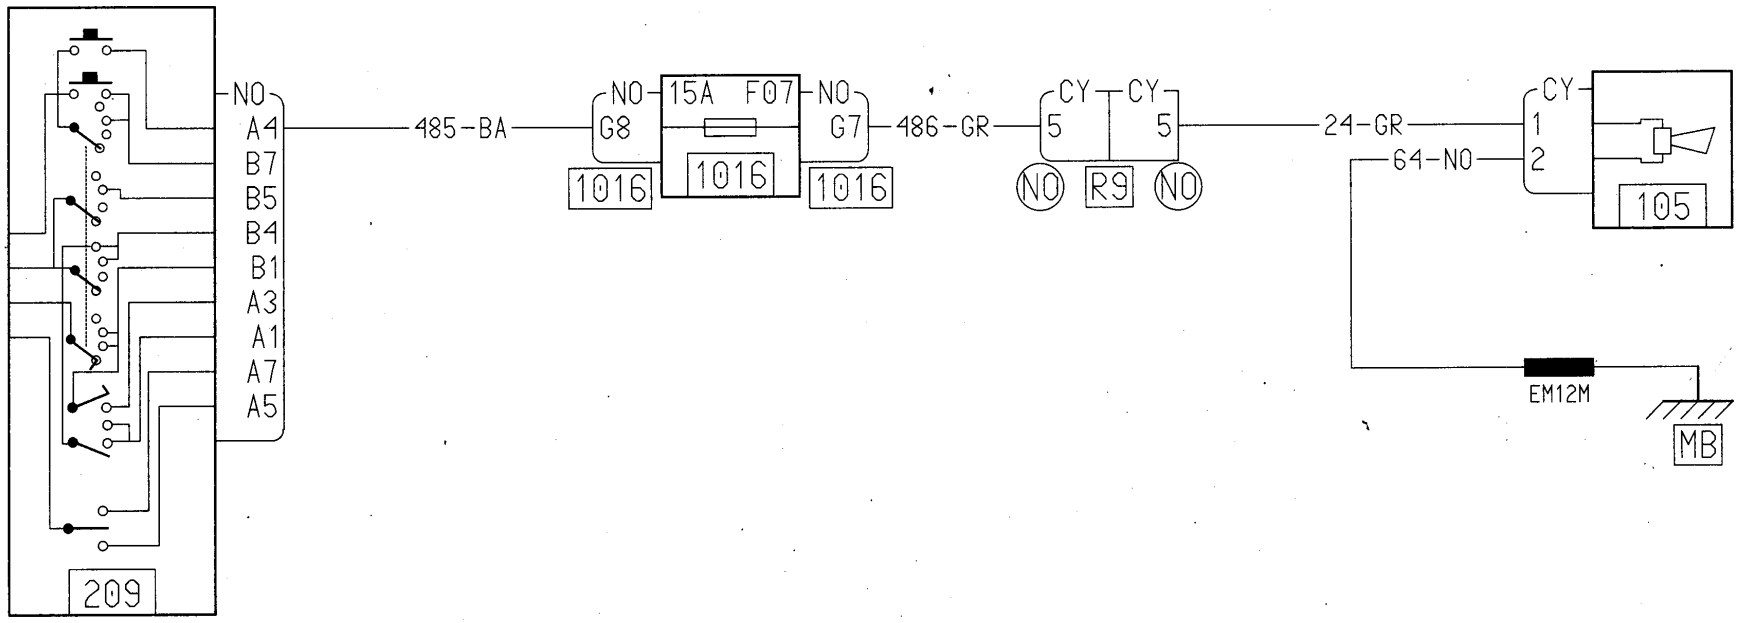
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
209
485-BA
NO
G8
1016
15A F07
1016
NO
G7
1016
486-GR
CY
5
NO
CY
5
R9
NO
24-GR
64-NO
CY
1
2
105
EM12M
MB

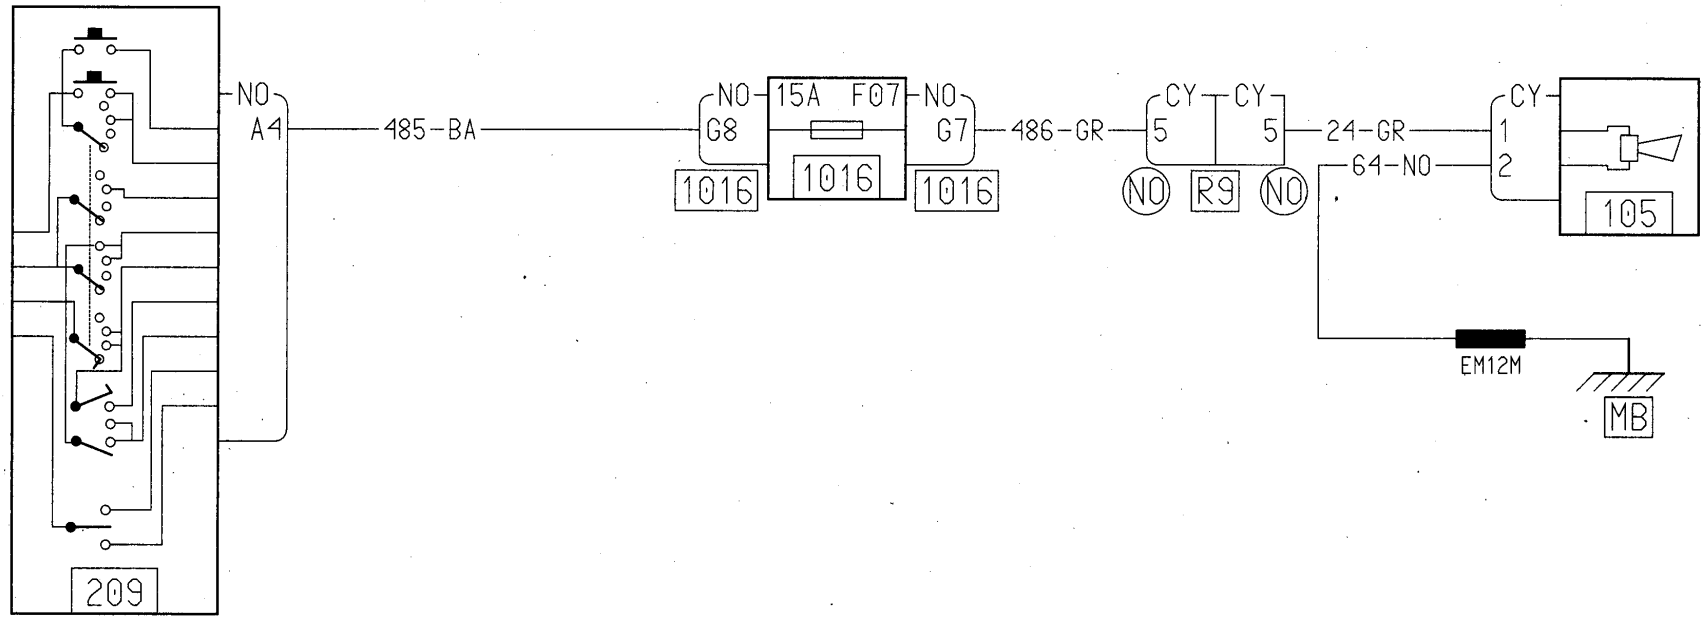
NO
A4
209
485-BA
NO
G8
15A F07
NO
G7
1016
1016
1016
486-GR
CY
5
NO
CY
5
R9
NO
24-GR
64-NO
CY
1
2
105
EM12M
MB

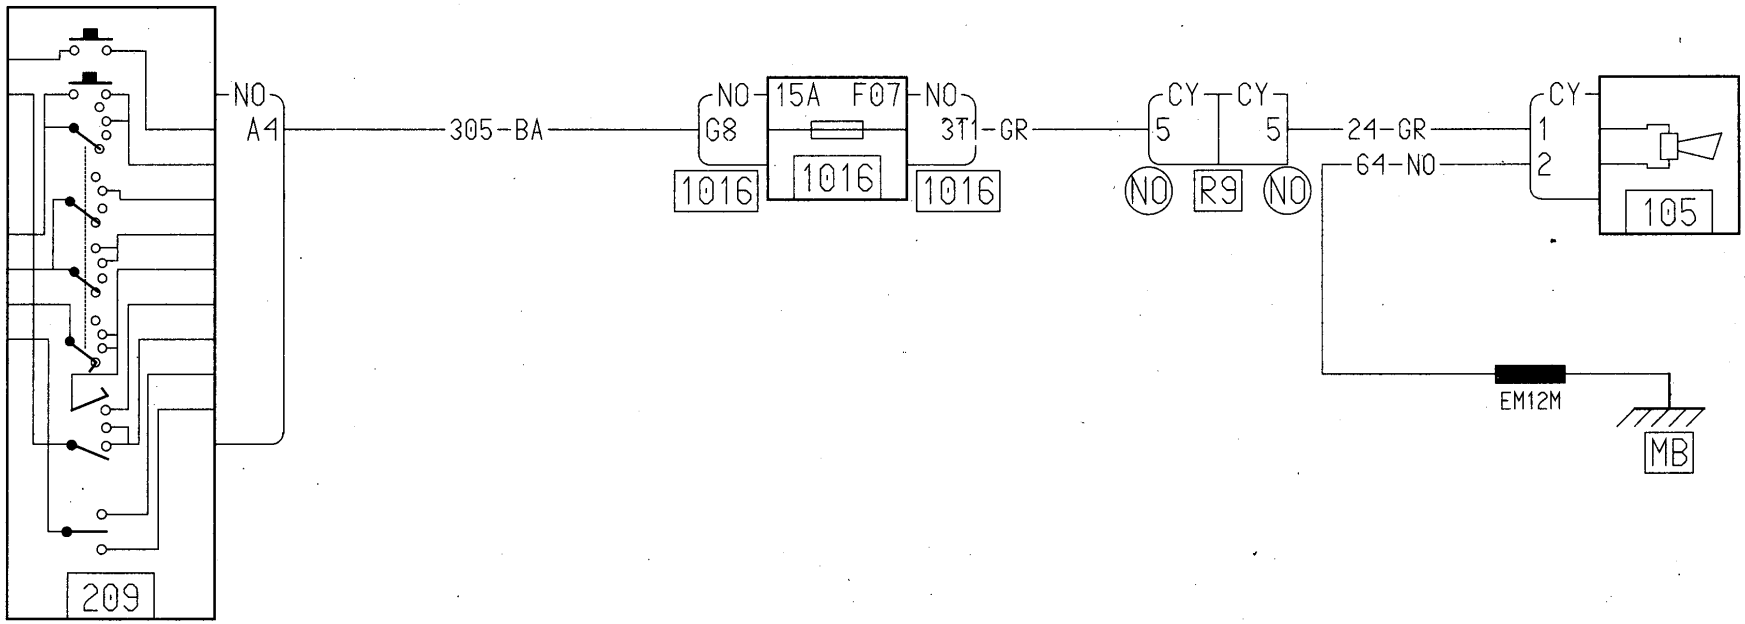
NO
A4
209
305-BA
NO
G8
1016
15A F07
1016
NO
3T1-GR
1016
CY
5
NO
CY
5
R9
NO
24-GR
64-NO
CY
1
2
105
EM12M
MB

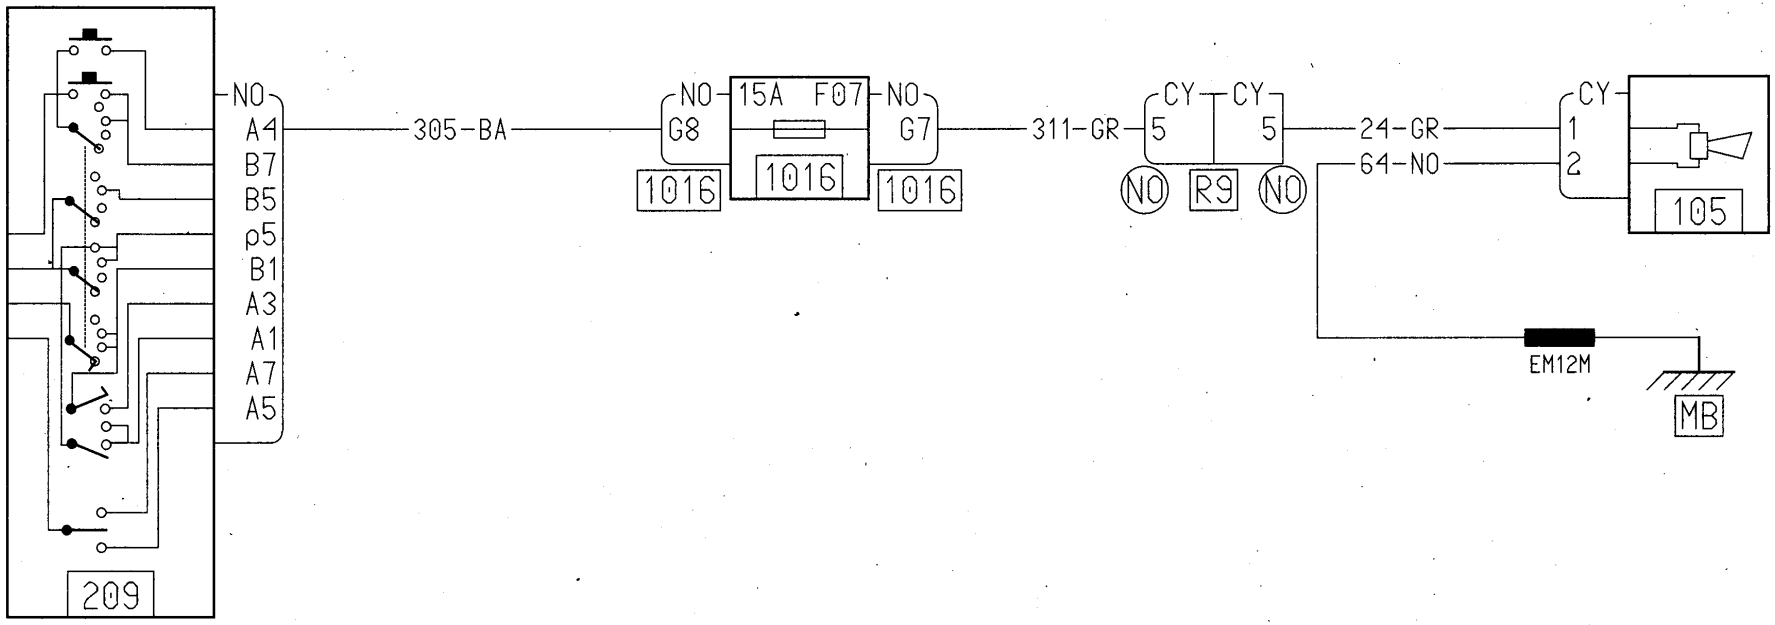
NO
A4
B7
B5
ρ5
B1
A3
A1
A7
A5
209
305-BA
NO
G8
15A F07
1016
1016
NO
G7
1016
311-GR
CY
5
CY
5
NO
R9
NO
24-GR
64-NO
CY
1
2
105
EM12M
MB

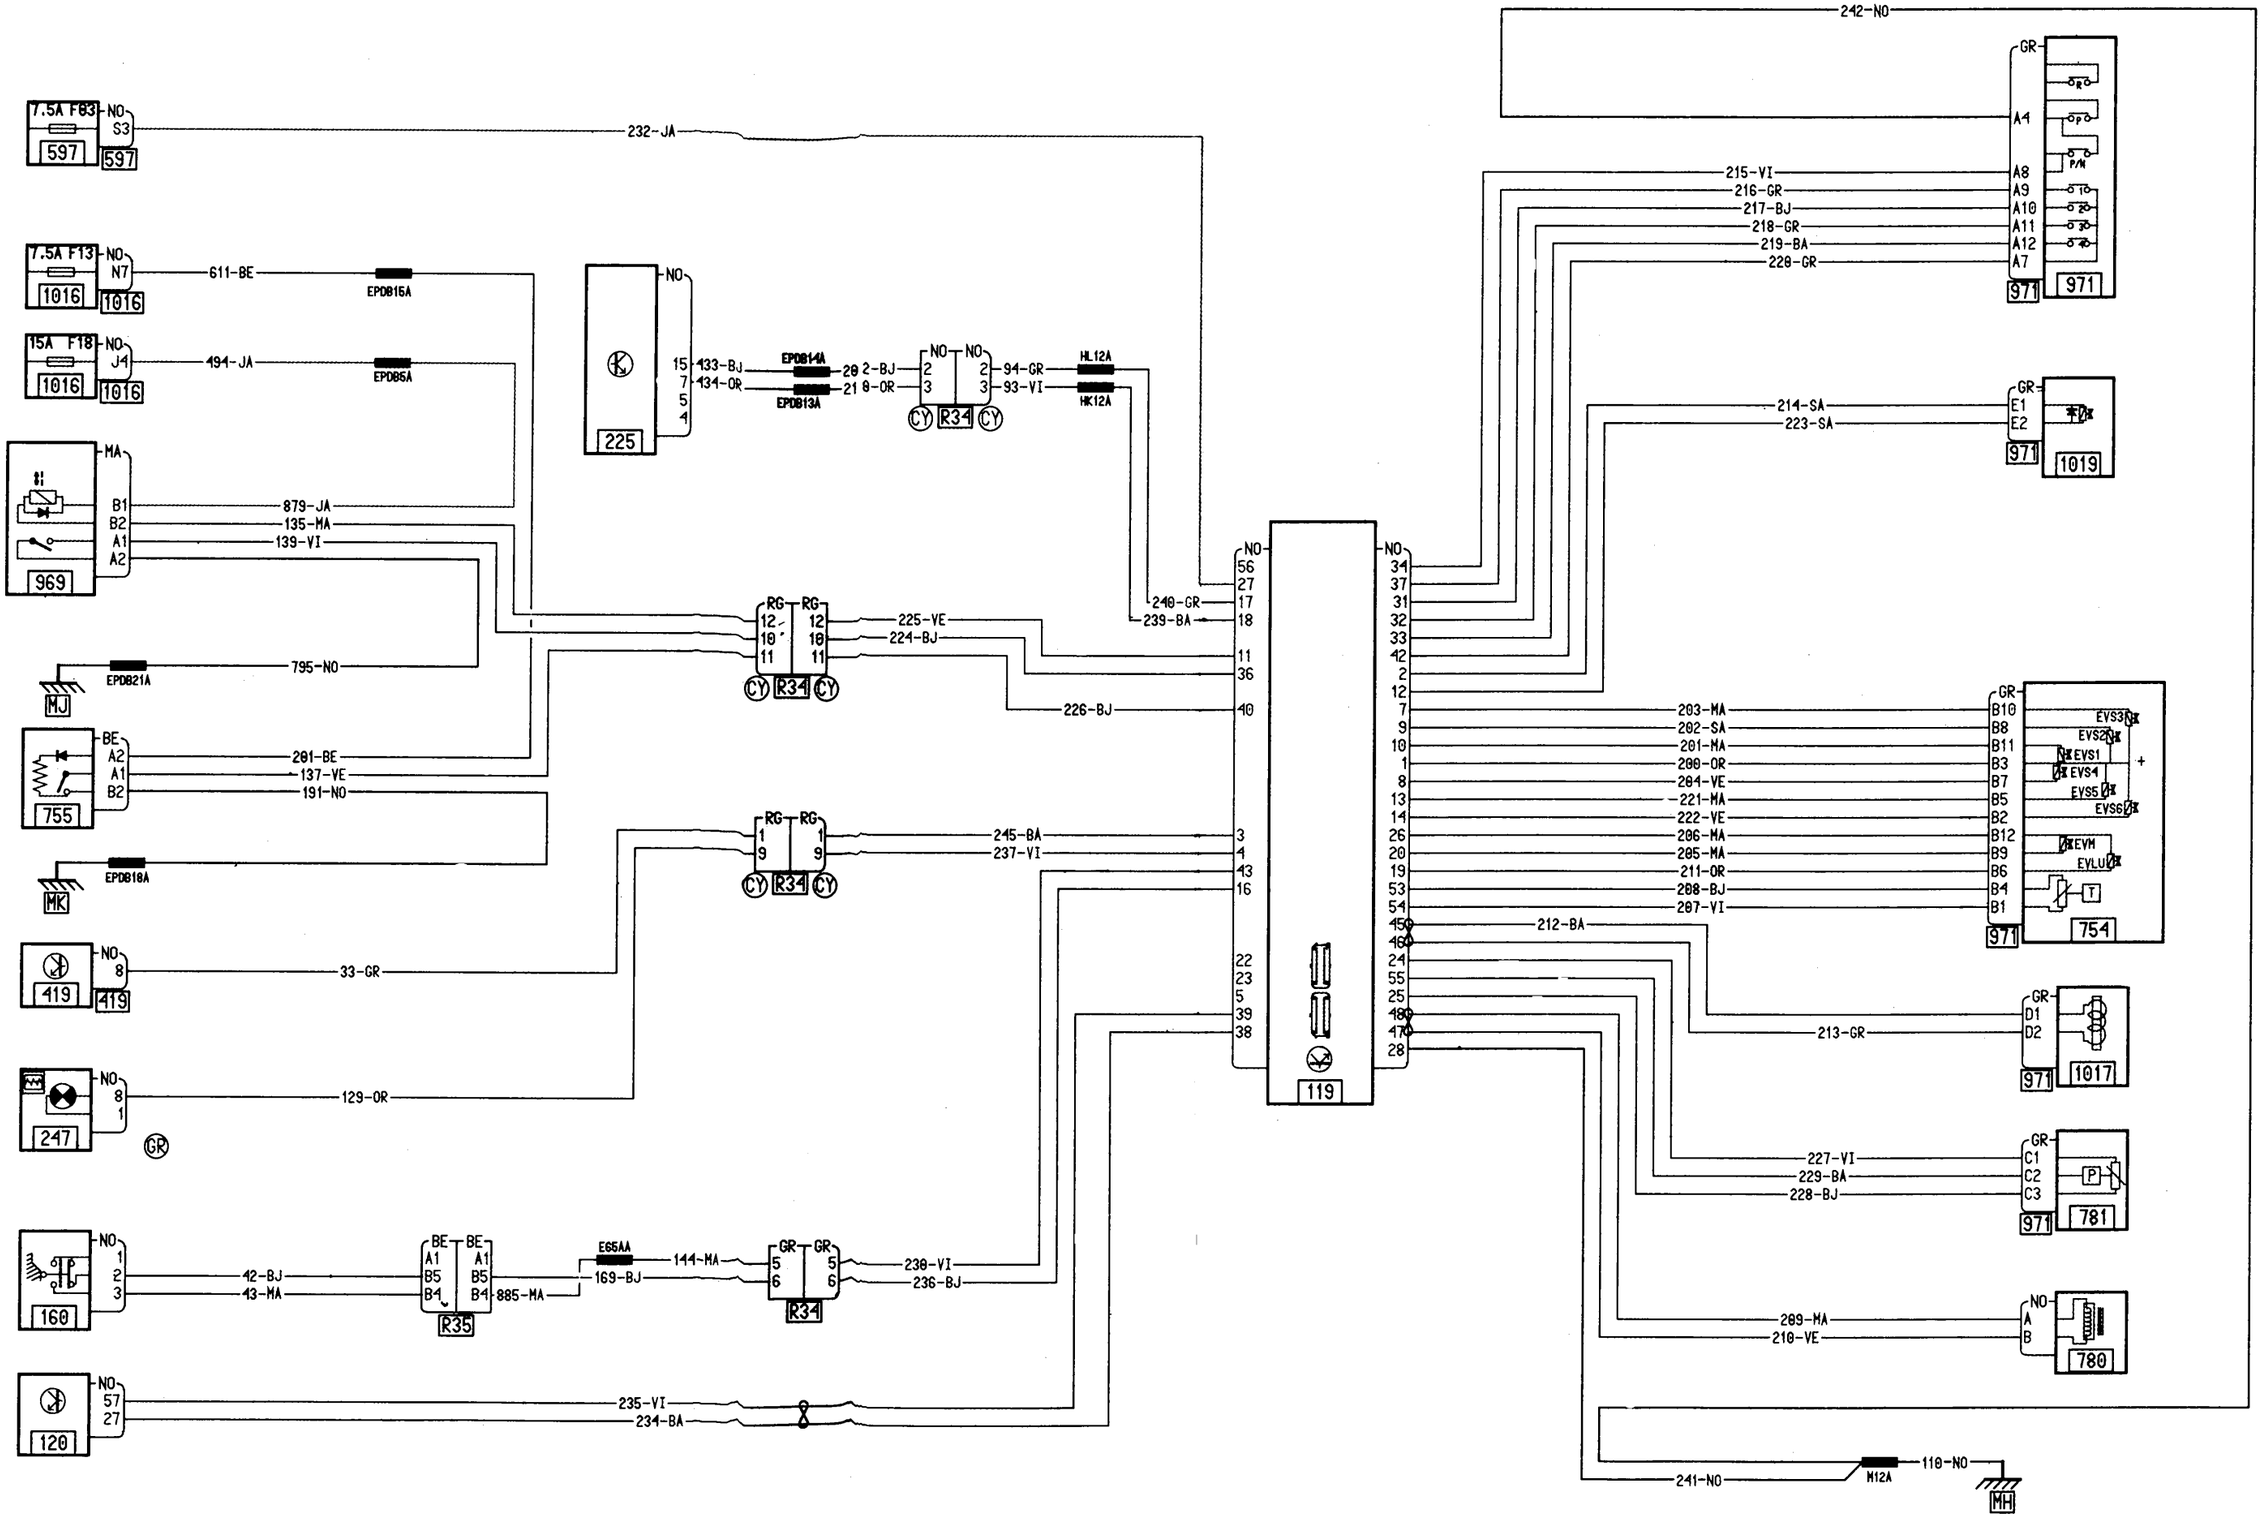
7.5A F63
597
232-JA
7.5A F13
1016
611-BE
EPDB15A
15A F18
1016
494-JA
EPDB5A
969
879-JA
135-MA
139-VI
795-NO
EPDB21A
MJ
755
201-BE
137-VE
191-NO
EPDB18A
MK
419
33-GR
247
129-OR
160
42-BJ
43-MA
R35
885-MA
E65AA
144-MA
169-BJ
R34
230-VI
236-BJ
120
235-VI
234-BA
225
133-BJ
134-OR
EPDB14A
EPDB13A
2 8-BJ
1 8-OR
94-GR
93-VI
HL12A
HK12A
240-GR
239-BA
225-VE
224-BJ
226-BJ
245-BA
237-VI
119
242-NO
215-VI
216-GR
217-BJ
218-GR
219-BA
220-GR
971
214-SA
223-SA
1019
203-MA
202-SA
201-MA
200-OR
204-VE
221-MA
222-VE
206-MA
205-MA
211-OR
208-BJ
207-VI
754
212-BA
213-GR
1017
227-VI
229-BA
228-BJ
781
209-MA
210-VE
780
241-NO
M12A
110-NO
MH

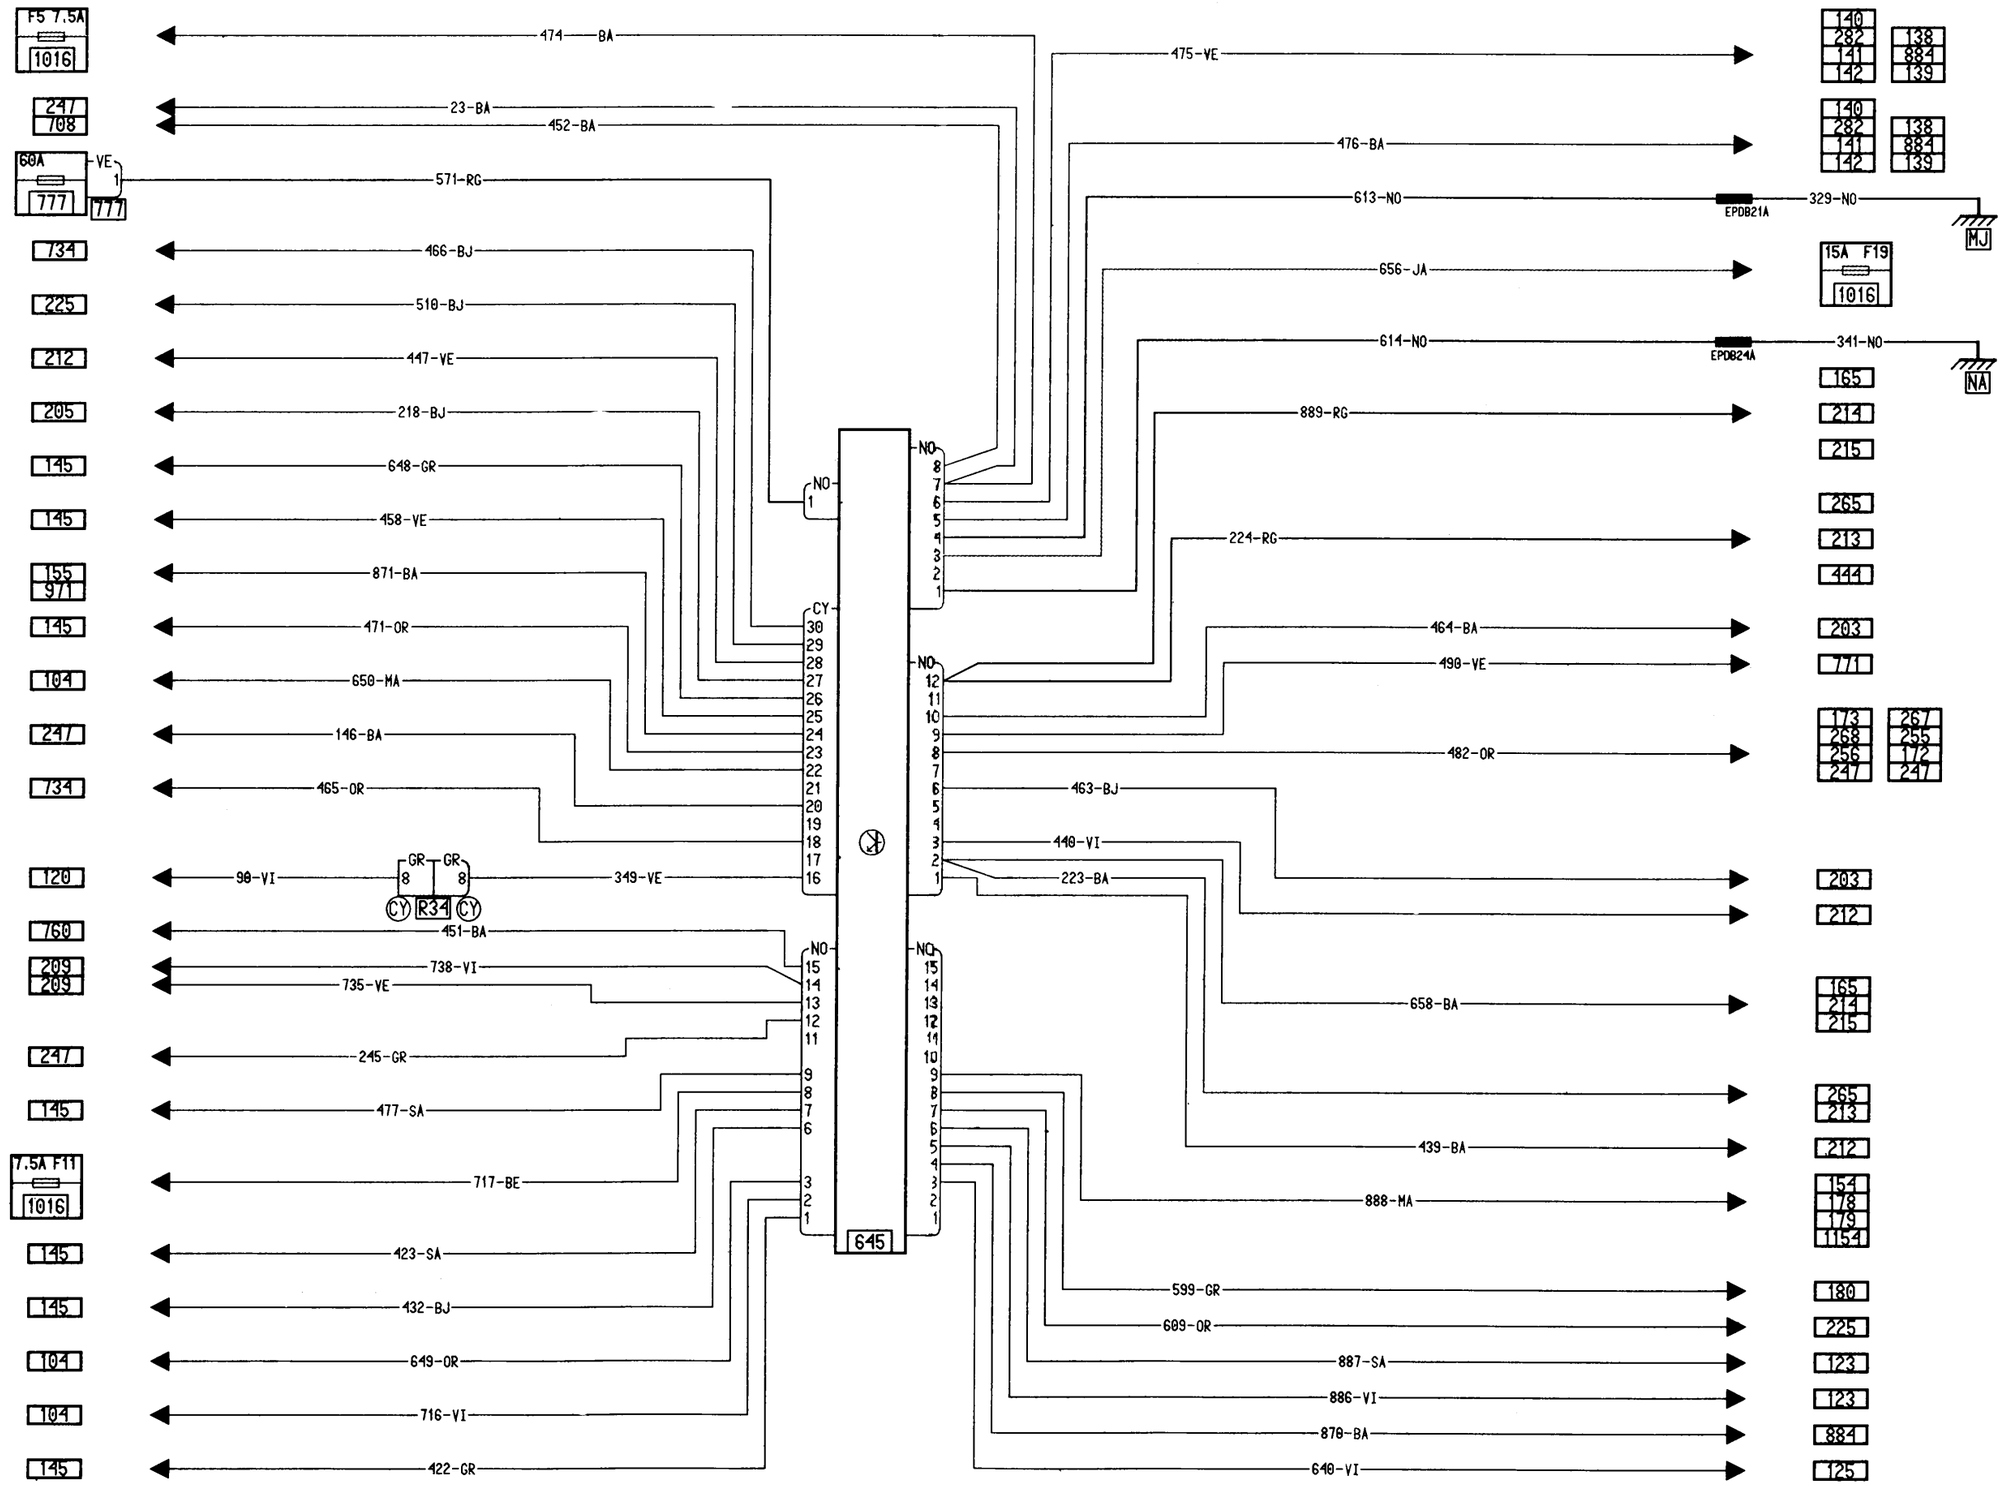
F5 7.5A
1016
247
708
60A
777
VE
1
777
734
225
212
205
145
145
155
971
145
104
247
734
120
760
209
209
247
145
7.5A F11
1016
145
145
104
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
510-BJ
447-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
650-MA
146-BA
465-OR
90-VI
GR
8
CY
R34
GR
8
CY
349-VE
451-BA
738-VI
735-VE
245-GR
477-SA
717-BE
423-SA
432-BJ
649-OR
716-VI
422-GR
NO
1
CY
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
NO
15
14
13
12
11
9
8
7
6
3
2
1
645
NO
8
7
6
5
4
3
2
1
NO
12
11
10
9
8
7
6
5
4
3
2
1
NO
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
475-VE
476-BA
613-NO
EPDB21A
329-NO
MJ
656-JA
15A F19
1016
614-NO
EPDB24A
341-NO
NA
889-RG
224-RG
464-BA
490-VE
482-OR
463-BJ
440-VI
223-BA
658-BA
439-BA
888-MA
599-GR
609-OR
887-SA
886-VI
870-BA
640-VI
140
282
141
142
138
884
139
140
282
141
142
138
884
139
165
214
215
265
213
444
203
771
173
268
258
247
267
255
172
247
203
212
165
214
215
265
213
212
154
178
179
1154
180
225
123
123
884
125

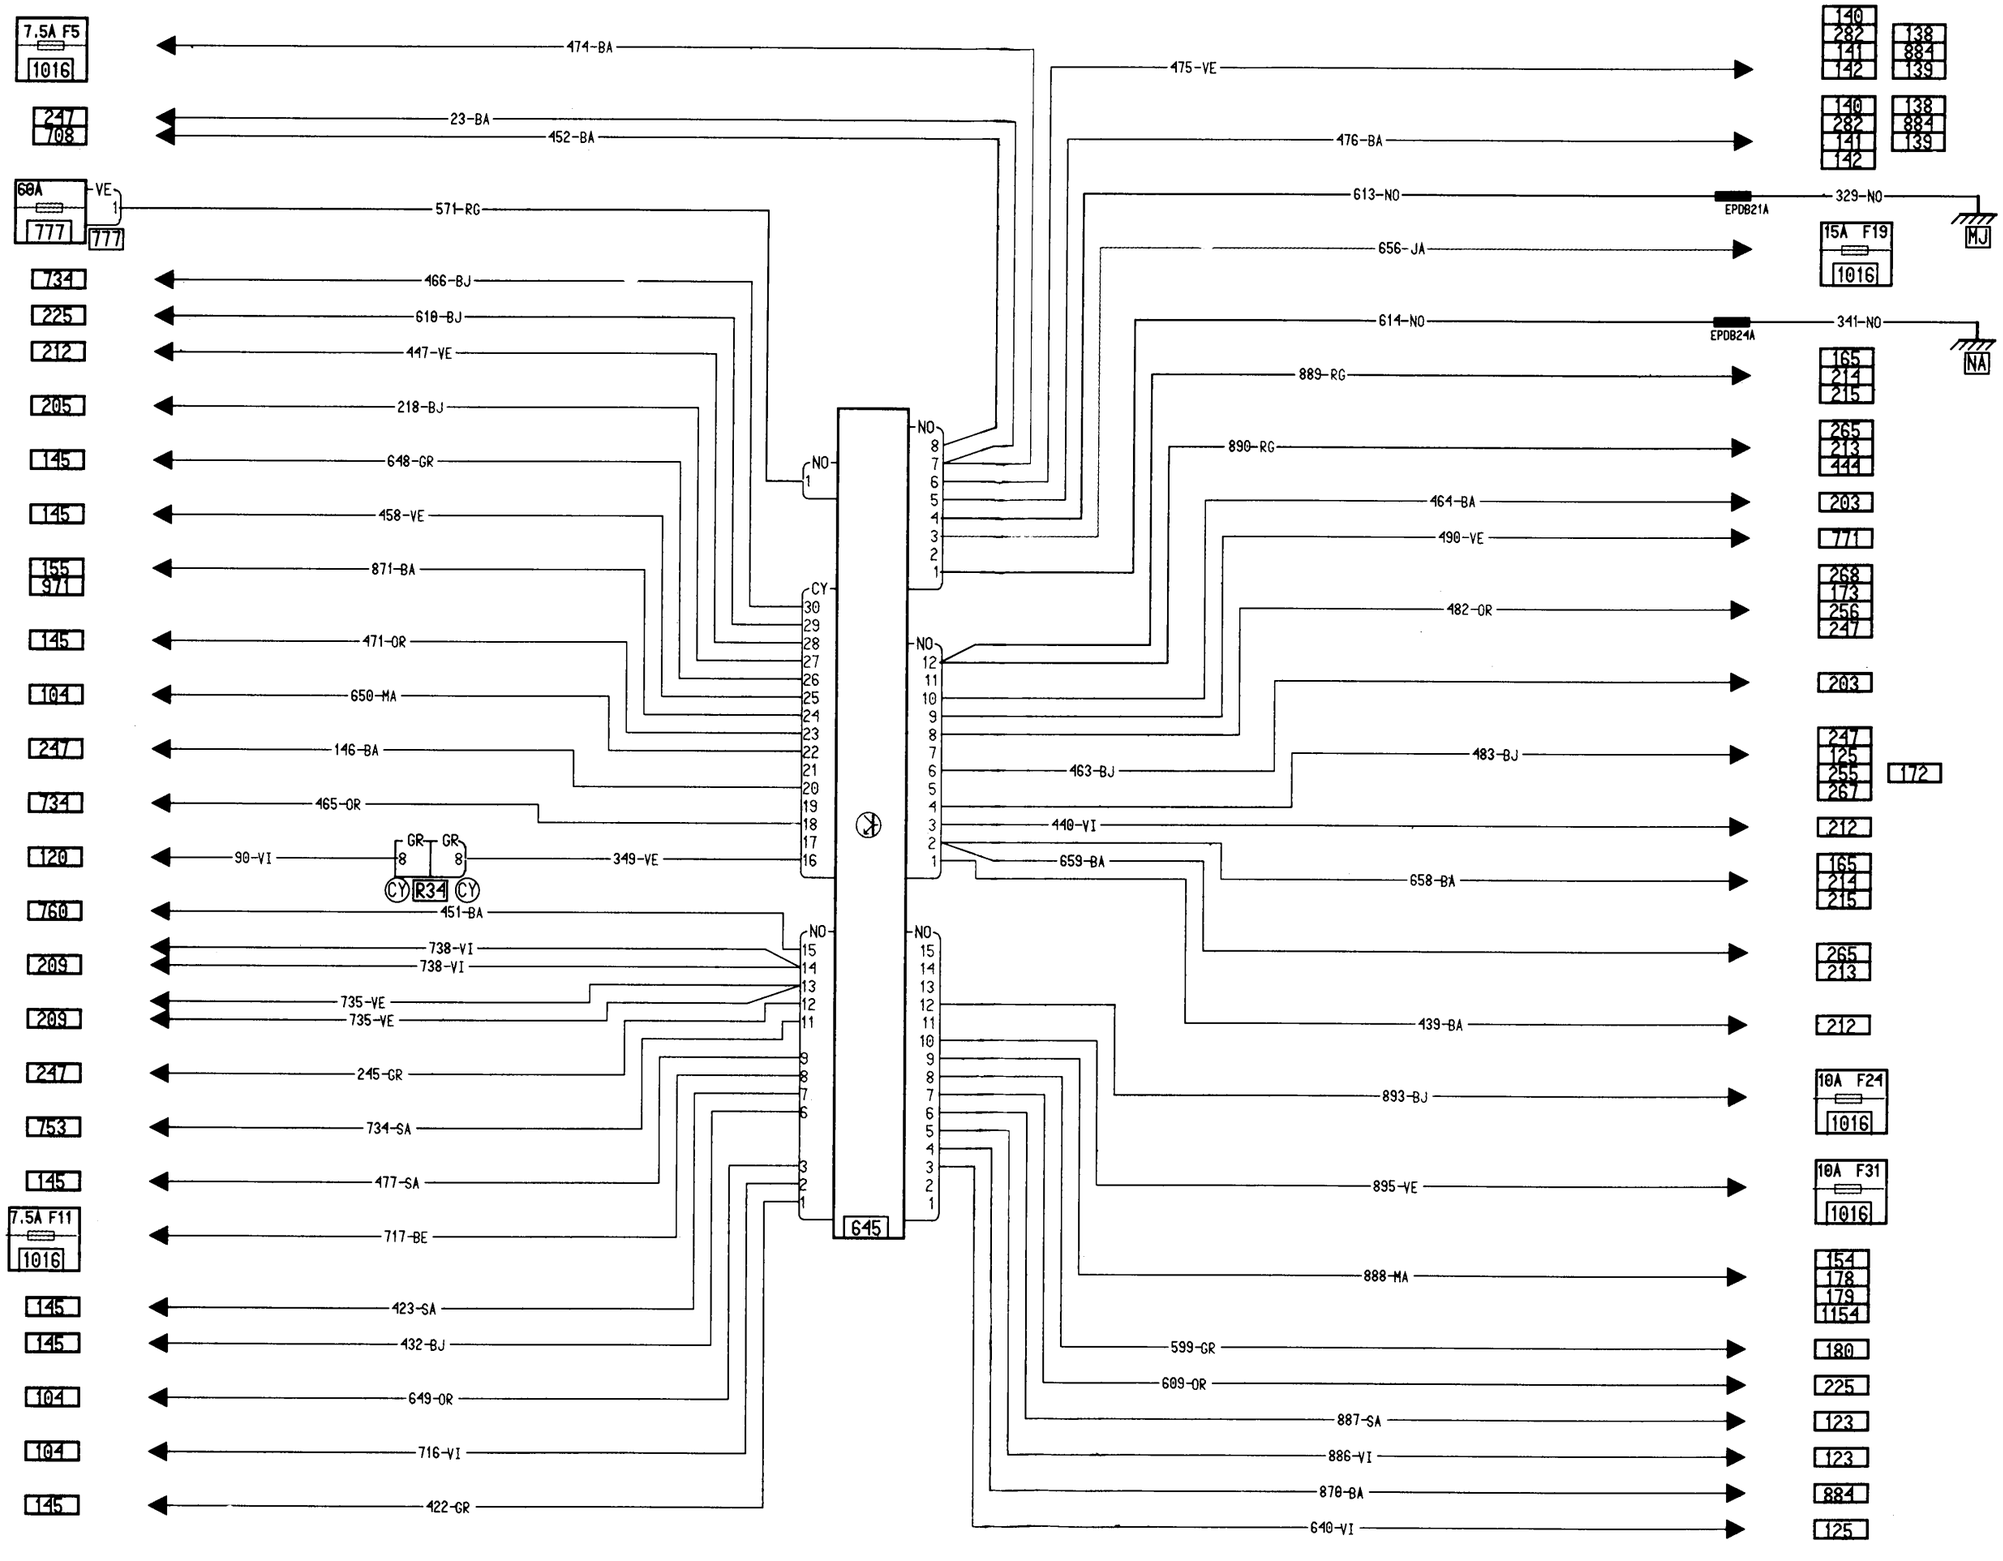
7.5A F5
1016
247
708
60A
777
VE
1
777
734
225
212
205
145
145
155
971
145
104
247
734
120
760
209
209
247
753
145
7.5A F11
1016
145
145
104
104
145
474-BA
23-BA
152-BA
571-RG
466-BJ
618-BJ
447-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
650-MA
146-BA
465-OR
90-VI
GR
8
GR
8
349-VE
CY
R34
CY
451-BA
738-VI
738-VI
735-VE
735-VE
245-GR
734-SA
477-SA
717-BE
423-SA
432-BJ
649-OR
716-VI
422-GR
NO
1
CY
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
NO
15
14
13
12
11
9
8
7
6
3
2
1
645
NO
8
7
6
5
4
3
2
1
NO
12
11
10
9
8
7
6
5
4
3
2
1
NO
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
475-VE
476-BA
613-NO
656-JA
614-NO
889-RG
890-RG
464-BA
490-VE
482-OR
463-BJ
440-VI
659-BA
439-BA
893-BJ
895-VE
888-MA
599-GR
609-OR
887-SA
886-VI
870-BA
640-VI
483-BJ
658-BA
EPDB21A
329-NO
MJ
15A F19
1016
EPDB24A
341-NO
NA
140
282
141
142
138
884
139
140
282
141
142
138
884
139
165
214
215
265
213
444
203
771
268
173
256
247
203
247
125
255
267
172
212
165
214
215
265
213
212
10A F24
1016
10A F31
1016
154
178
179
1154
180
225
123
123
884
125

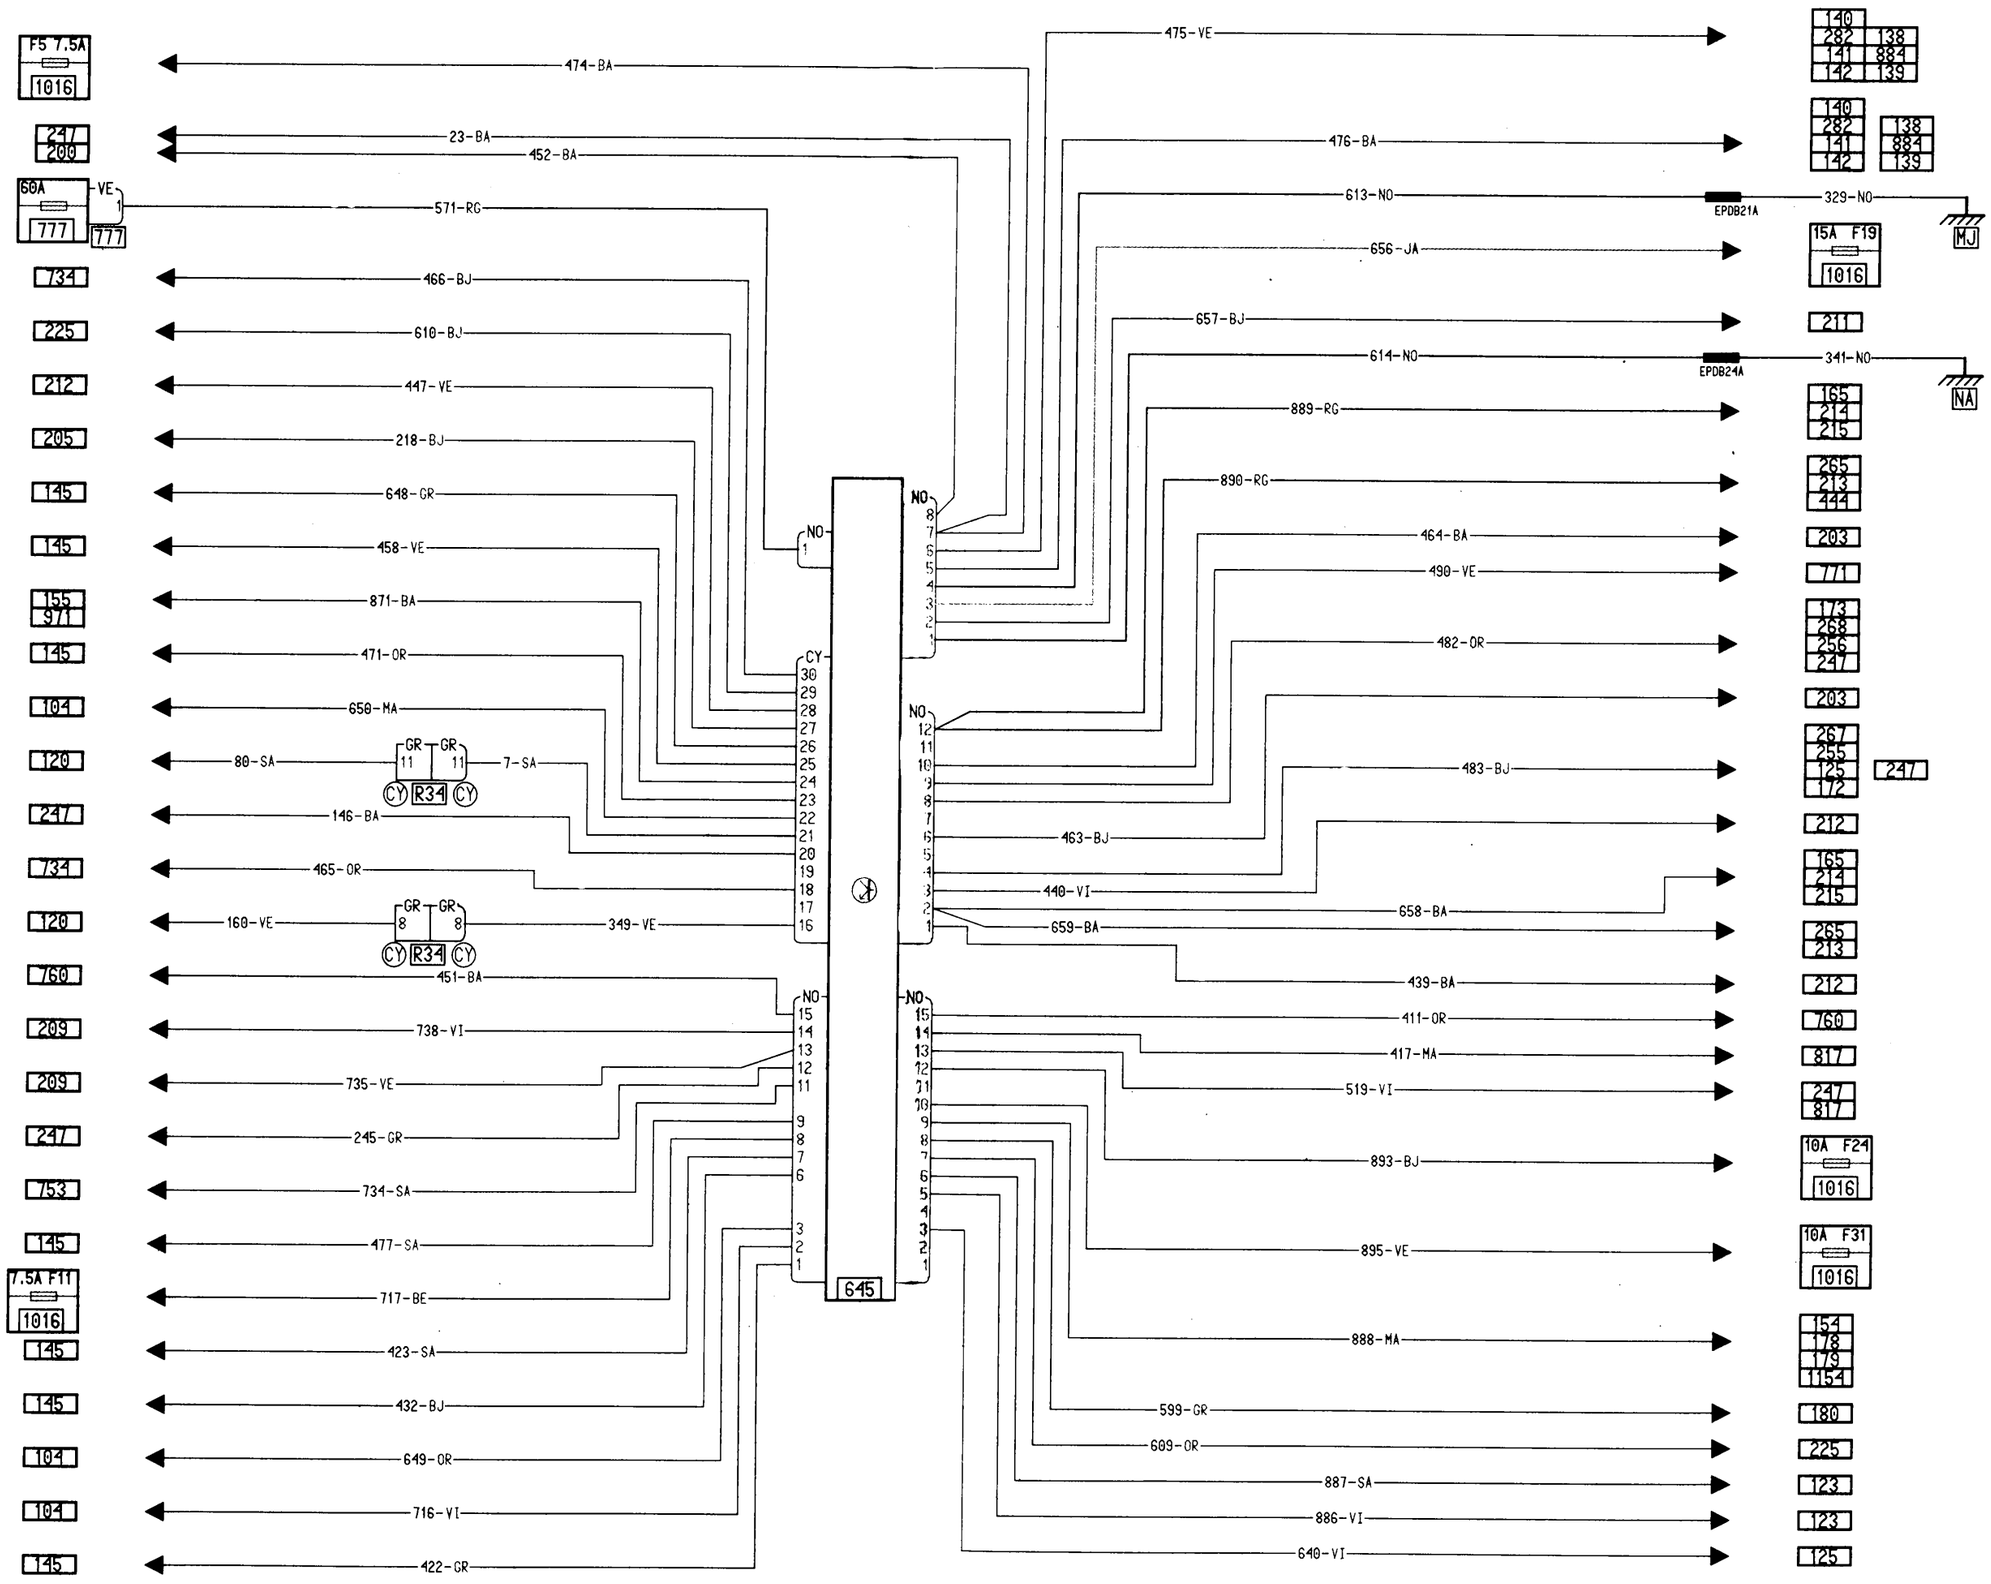
F5 7.5A
1016
247
200
60A
777
VE
1
777
734
225
212
205
145
145
155
971
145
104
120
247
734
120
760
209
209
247
753
145
7.5A F11
1016
145
145
104
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
610-BJ
447-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
650-MA
80-SA
GR 11
GR 11
7-SA
CY R34 CY
146-BA
465-OR
160-VE
GR 8
GR 8
349-VE
CY R34 CY
451-BA
738-VI
735-VE
245-GR
734-SA
477-SA
717-BE
423-SA
432-BJ
649-OR
716-VI
422-GR
NO 1
CY 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16
NO 15 14 13 12 11 9 8 7 6 3 2 1
645
NO 8 7 6 5 4 3 2 1
NO 12 11 10 9 8 7 6 5 4 3 2 1
NO 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
475-VE
476-BA
613-NO
EPDB21A
329-NO
MJ
656-JA
657-BJ
614-NO
EPDB24A
341-NO
NA
889-RG
890-RG
464-BA
490-VE
482-OR
483-BJ
463-BJ
440-VI
658-BA
659-BA
439-BA
411-OR
417-MA
519-VI
893-BJ
895-VE
888-MA
599-GR
609-OR
887-SA
886-VI
640-VI
140 282 141 142 138 884 139
140 282 141 142 138 884 139
15A F19
1016
211
165 214 215
265 213 444
203
771
173 268 256 247
203
267 255 125 172 247
212
165 214 215
265 213
212
760
817
247 817
10A F24
1016
10A F31
1016
154 178 179 1154
180
225
123
123
125

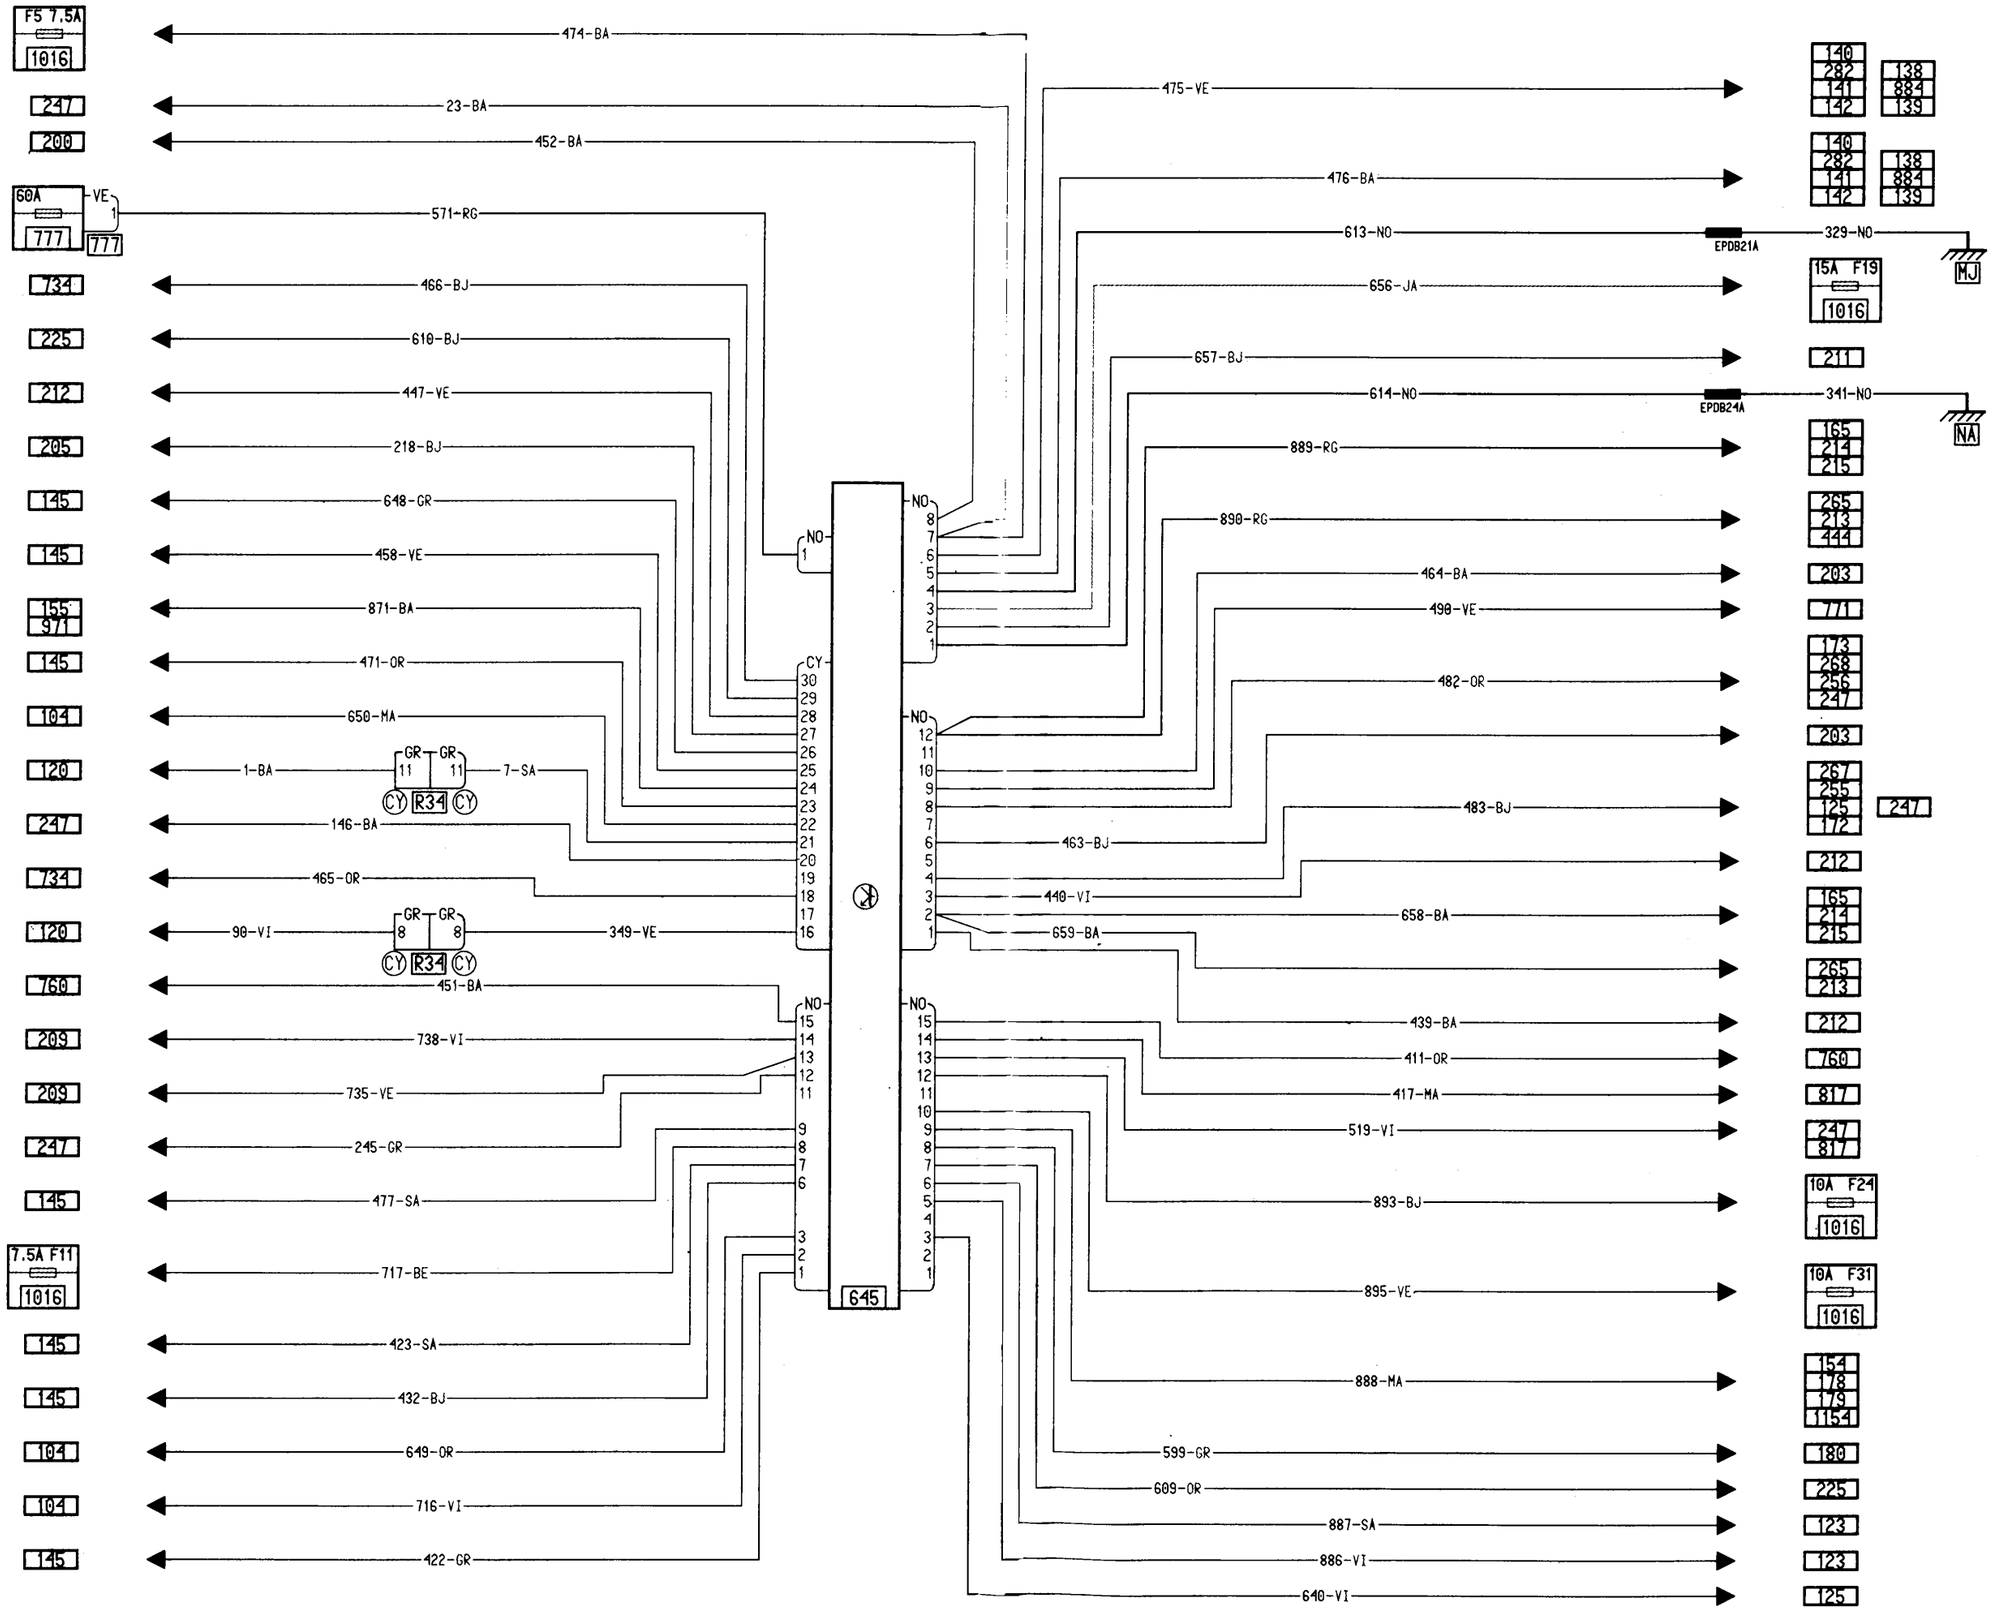
F5 7.5A
1016
247
200
60A
777
VE
1
777
734
225
212
205
145
145
155
971
145
104
120
247
734
120
760
209
209
247
145
7.5A F11
1016
145
145
104
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
610-BJ
447-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
650-MA
1-BA
GR 11
GR 11
7-SA
CY R34 CY
146-BA
465-OR
90-VI
GR 8
GR 8
349-VE
451-BA
738-VI
735-VE
245-GR
477-SA
717-BE
423-SA
432-BJ
649-OR
716-VI
422-GR
NO 1
CY 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16
NO 15 14 13 12 11 9 8 7 6 3 2 1
645
NO 8 7 6 5 4 3 2 1
NO 12 11 10 9 8 7 6 5 4 3 2 1
475-VE
476-BA
613-NO
656-JA
657-BJ
614-NO
889-RG
890-RG
464-BA
490-VE
482-OR
483-BJ
463-BJ
440-VI
659-BA
439-BA
411-OR
417-MA
519-VI
893-BJ
895-VE
888-MA
599-GR
609-OR
887-SA
886-VI
640-VI
658-BA
EPDB21A
329-NO
MJ
EPDB24A
341-NO
NA
15A F19
1016
211
165 214 215
265 213 444
203
771
173 268 256 247
203
267 255 125 172
247
212
165 214 215
265 213
212
760
817
247 817
10A F24
1016
10A F31
1016
154 178 179 1154
180
225
123
123
125
140 282 141 142
138 884 139
140 282 141 142
138 884 139

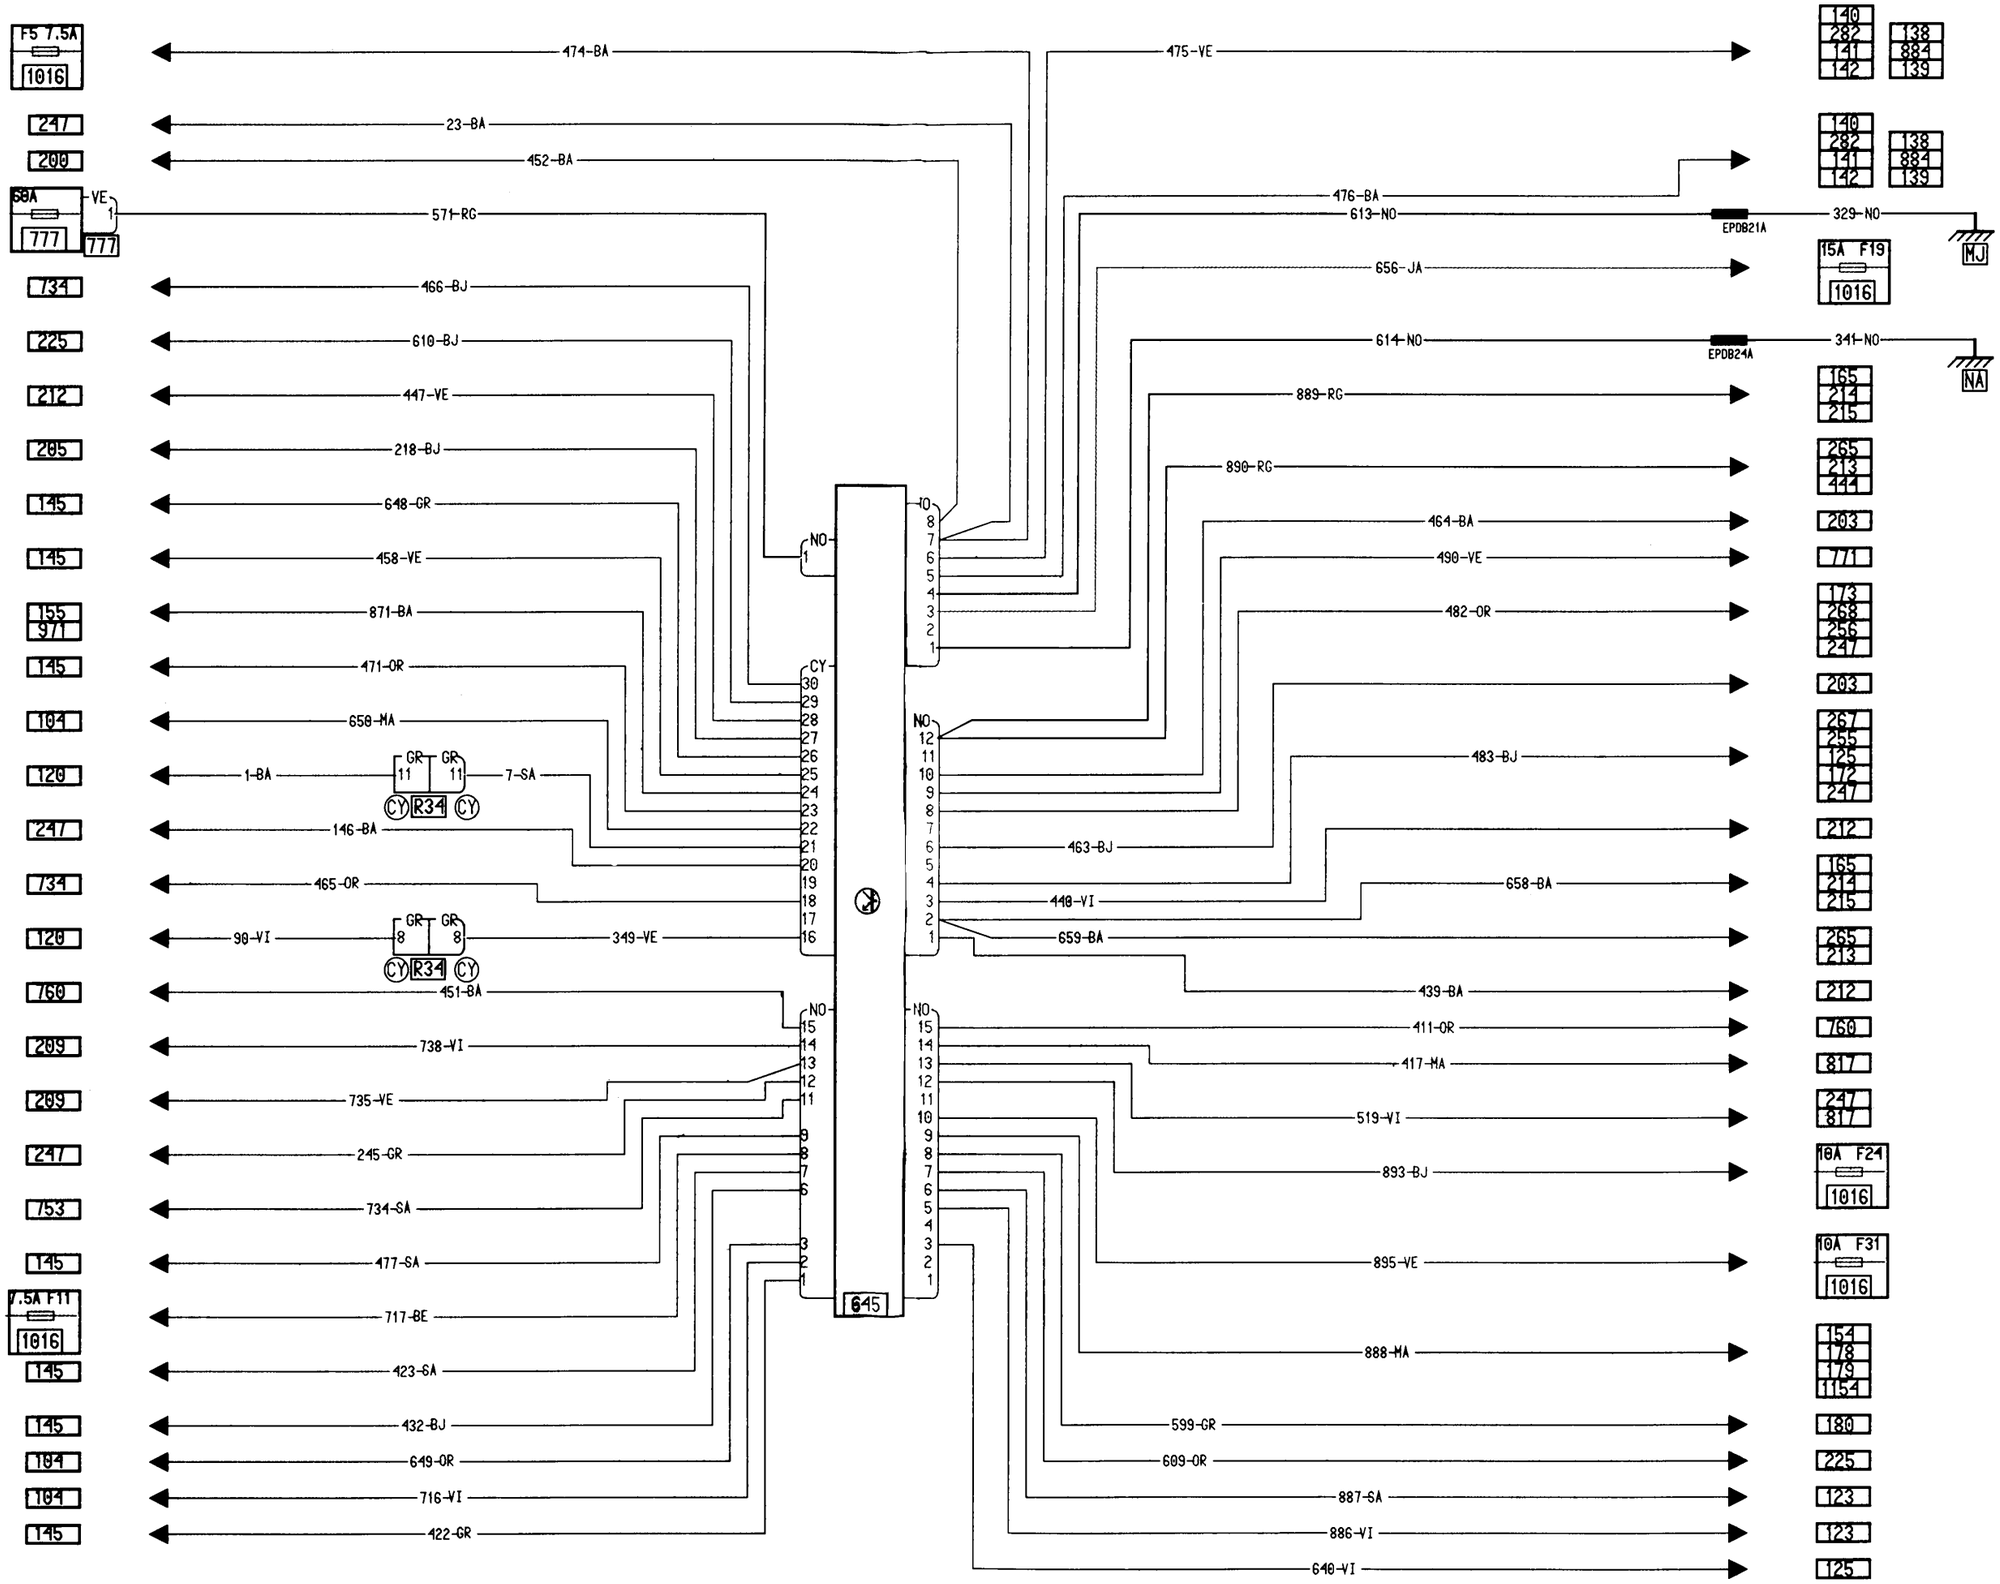
F5 7.5A
1016
247
200
58A
777
VE
1
777
734
225
212
205
145
145
155
971
145
104
120
247
734
120
760
209
209
247
753
145
7.5A F11
1016
145
145
104
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
610-BJ
447-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
658-MA
1-BA
146-BA
465-OR
90-VI
451-BA
738-VI
735-VE
245-GR
734-SA
477-SA
717-BE
423-SA
432-BJ
649-OR
716-VI
422-GR
GR
11
11
7-SA
CY
R34
CY
GR
8
8
349-VE
CY
R34
CY
NO
1
CY
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
NO
15
14
13
12
11
9
8
7
6
5
4
3
2
1
645
10
8
7
6
5
4
3
2
1
NO
12
11
10
9
8
7
6
5
4
3
2
1
NO
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
475-VE
476-BA
613-NO
656-JA
614-NO
889-RG
890-RG
464-BA
490-VE
482-OR
483-BJ
463-BJ
448-VI
659-BA
439-BA
411-OR
417-MA
519-VI
893-BJ
895-VE
888-MA
599-GR
609-OR
887-SA
886-VI
640-VI
EPDB21A
329-NO
EPDB24A
341-NO
15A F19
1016
MJ
NA
140
282
141
142
138
884
139
140
282
141
142
138
884
139
165
214
215
265
213
444
203
771
173
268
256
247
203
267
255
125
172
247
212
165
214
215
265
213
212
760
817
247
817
10A F24
1016
10A F31
1016
154
178
179
1154
180
225
123
123
125
658-BA

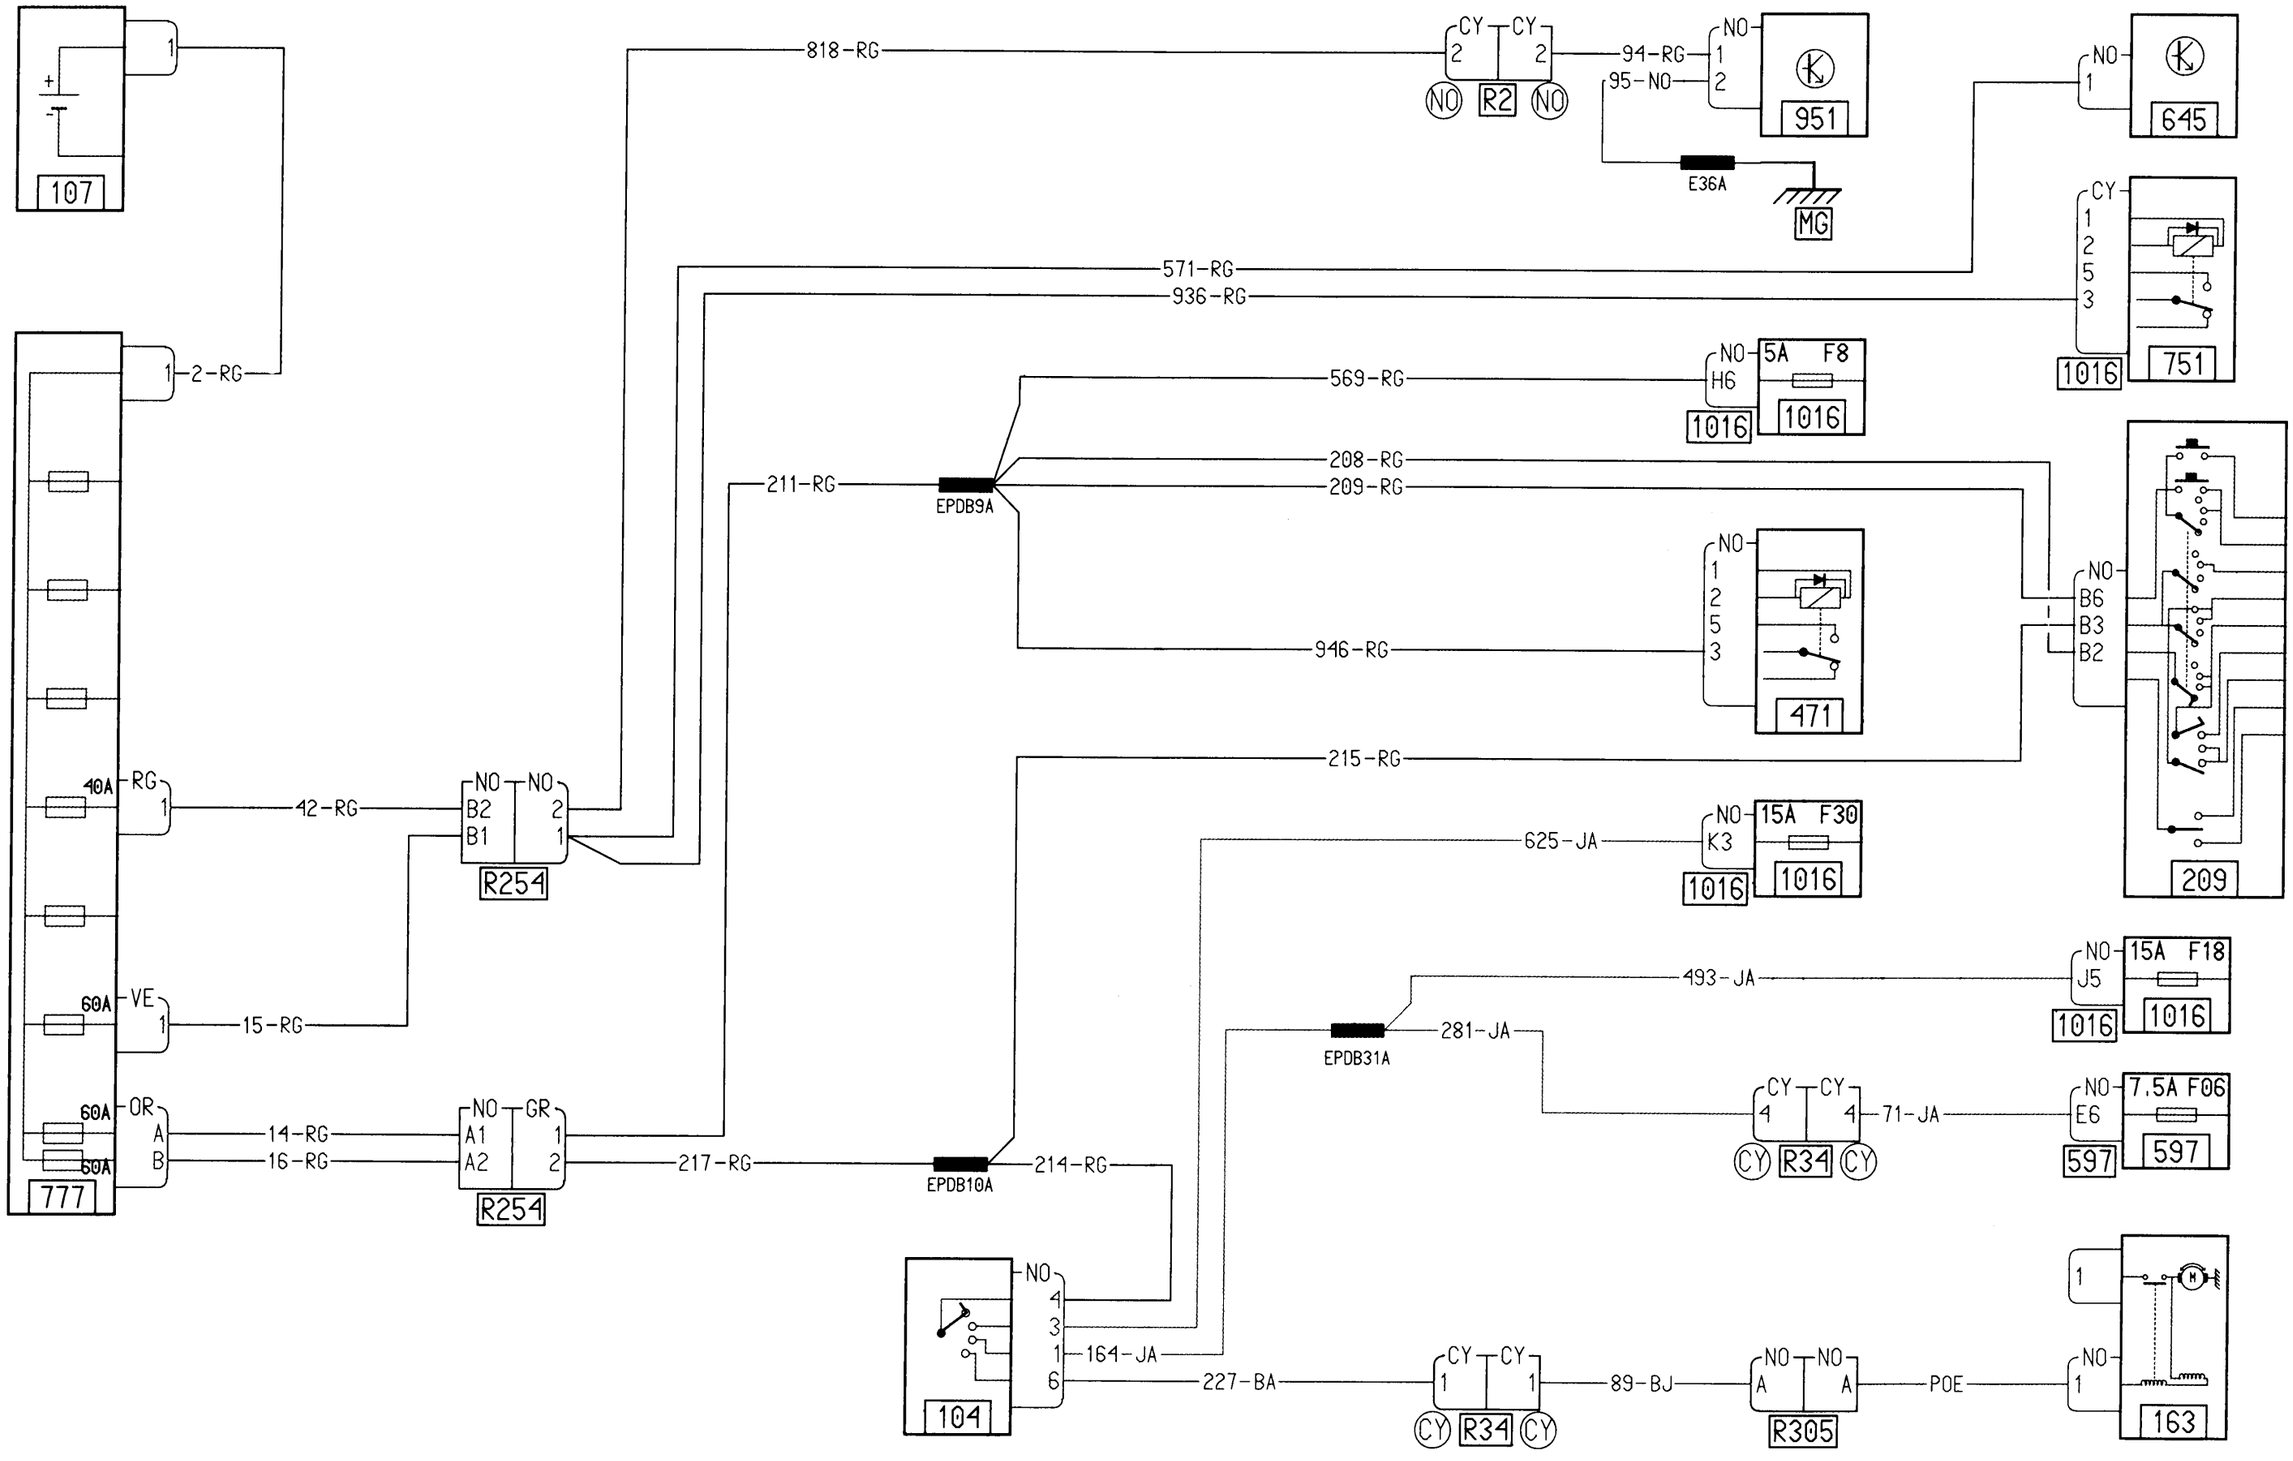
107
1
+
-
1
2-RG
40A
RG
1
42-RG
NO
B2
B1
NO
2
1
R254
60A
VE
1
15-RG
60A
OR
A
B
14-RG
16-RG
NO
A1
A2
GR
1
2
R254
60A
777
217-RG
EPDB10A
214-RG
NO
4
3
1
6
104
818-RG
CY
2
NO
R2
CY
2
NO
94-RG
95-NO
NO
1
2
951
E36A
MG
NO
1
645
571-RG
936-RG
CY
1
2
5
3
1016
751
569-RG
NO
H6
1016
5A
F8
1016
208-RG
209-RG
211-RG
EPDB9A
NO
1
2
5
3
471
946-RG
NO
B6
B3
B2
209
215-RG
625-JA
NO
K3
1016
15A
F30
1016
493-JA
NO
J5
1016
15A
F18
1016
281-JA
EPDB31A
CY
4
CY
4
CY
R34
CY
71-JA
NO
E6
597
7.5A
F06
597
164-JA
227-BA
CY
1
CY
1
CY
R34
CY
89-BJ
NO
A
NO
A
R305
POE
1
NO
1
163

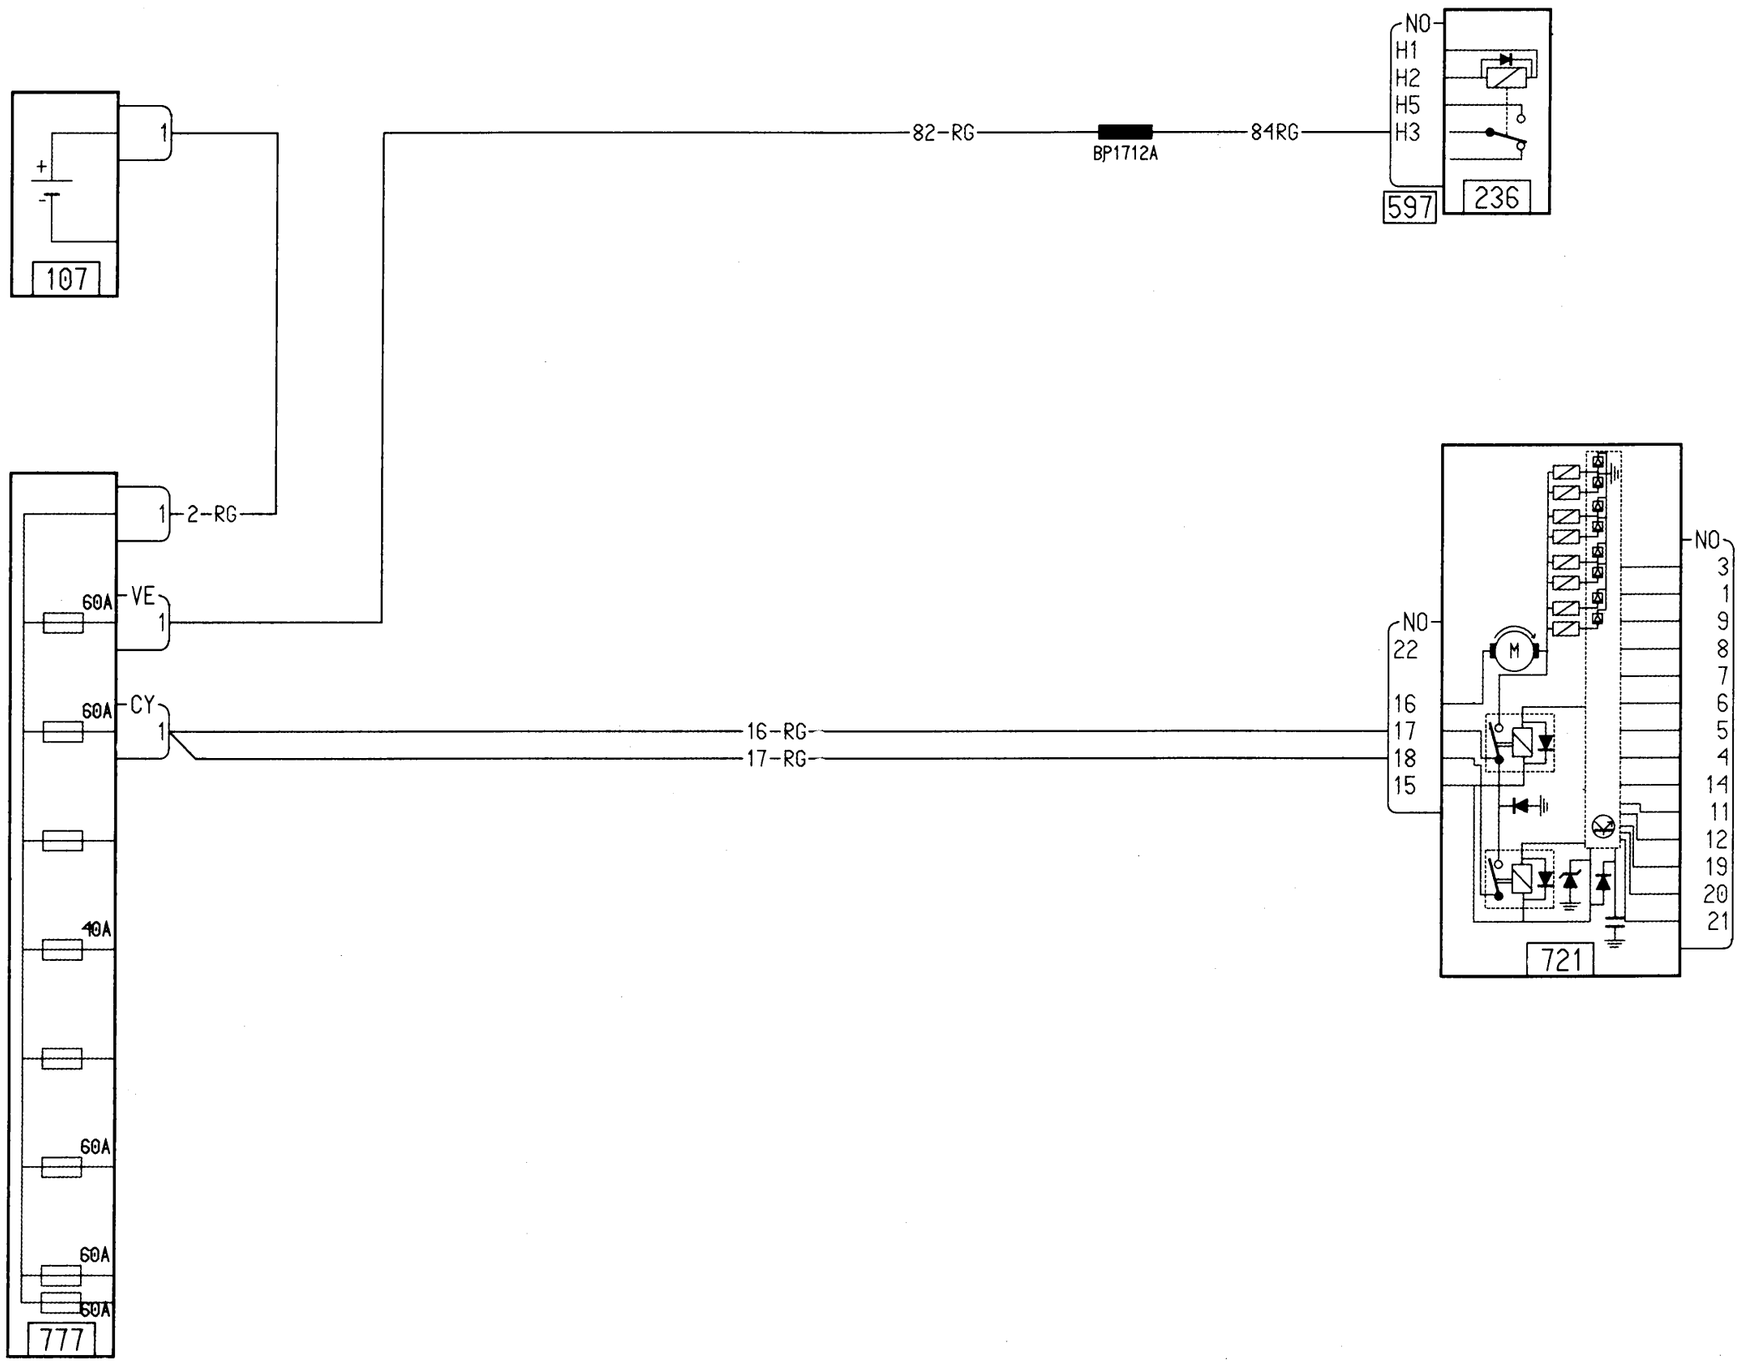
107
1
+
-
82-RG
BP1712A
84RG
NO
H1
H2
H5
H3
597
236
1
2-RG
60A
VE
1
60A
CY
1
16-RG
17-RG
40A
60A
60A
60A
777
NO
22
16
17
18
15
M
NO
3
1
9
8
7
6
5
4
14
11
12
19
20
21
721

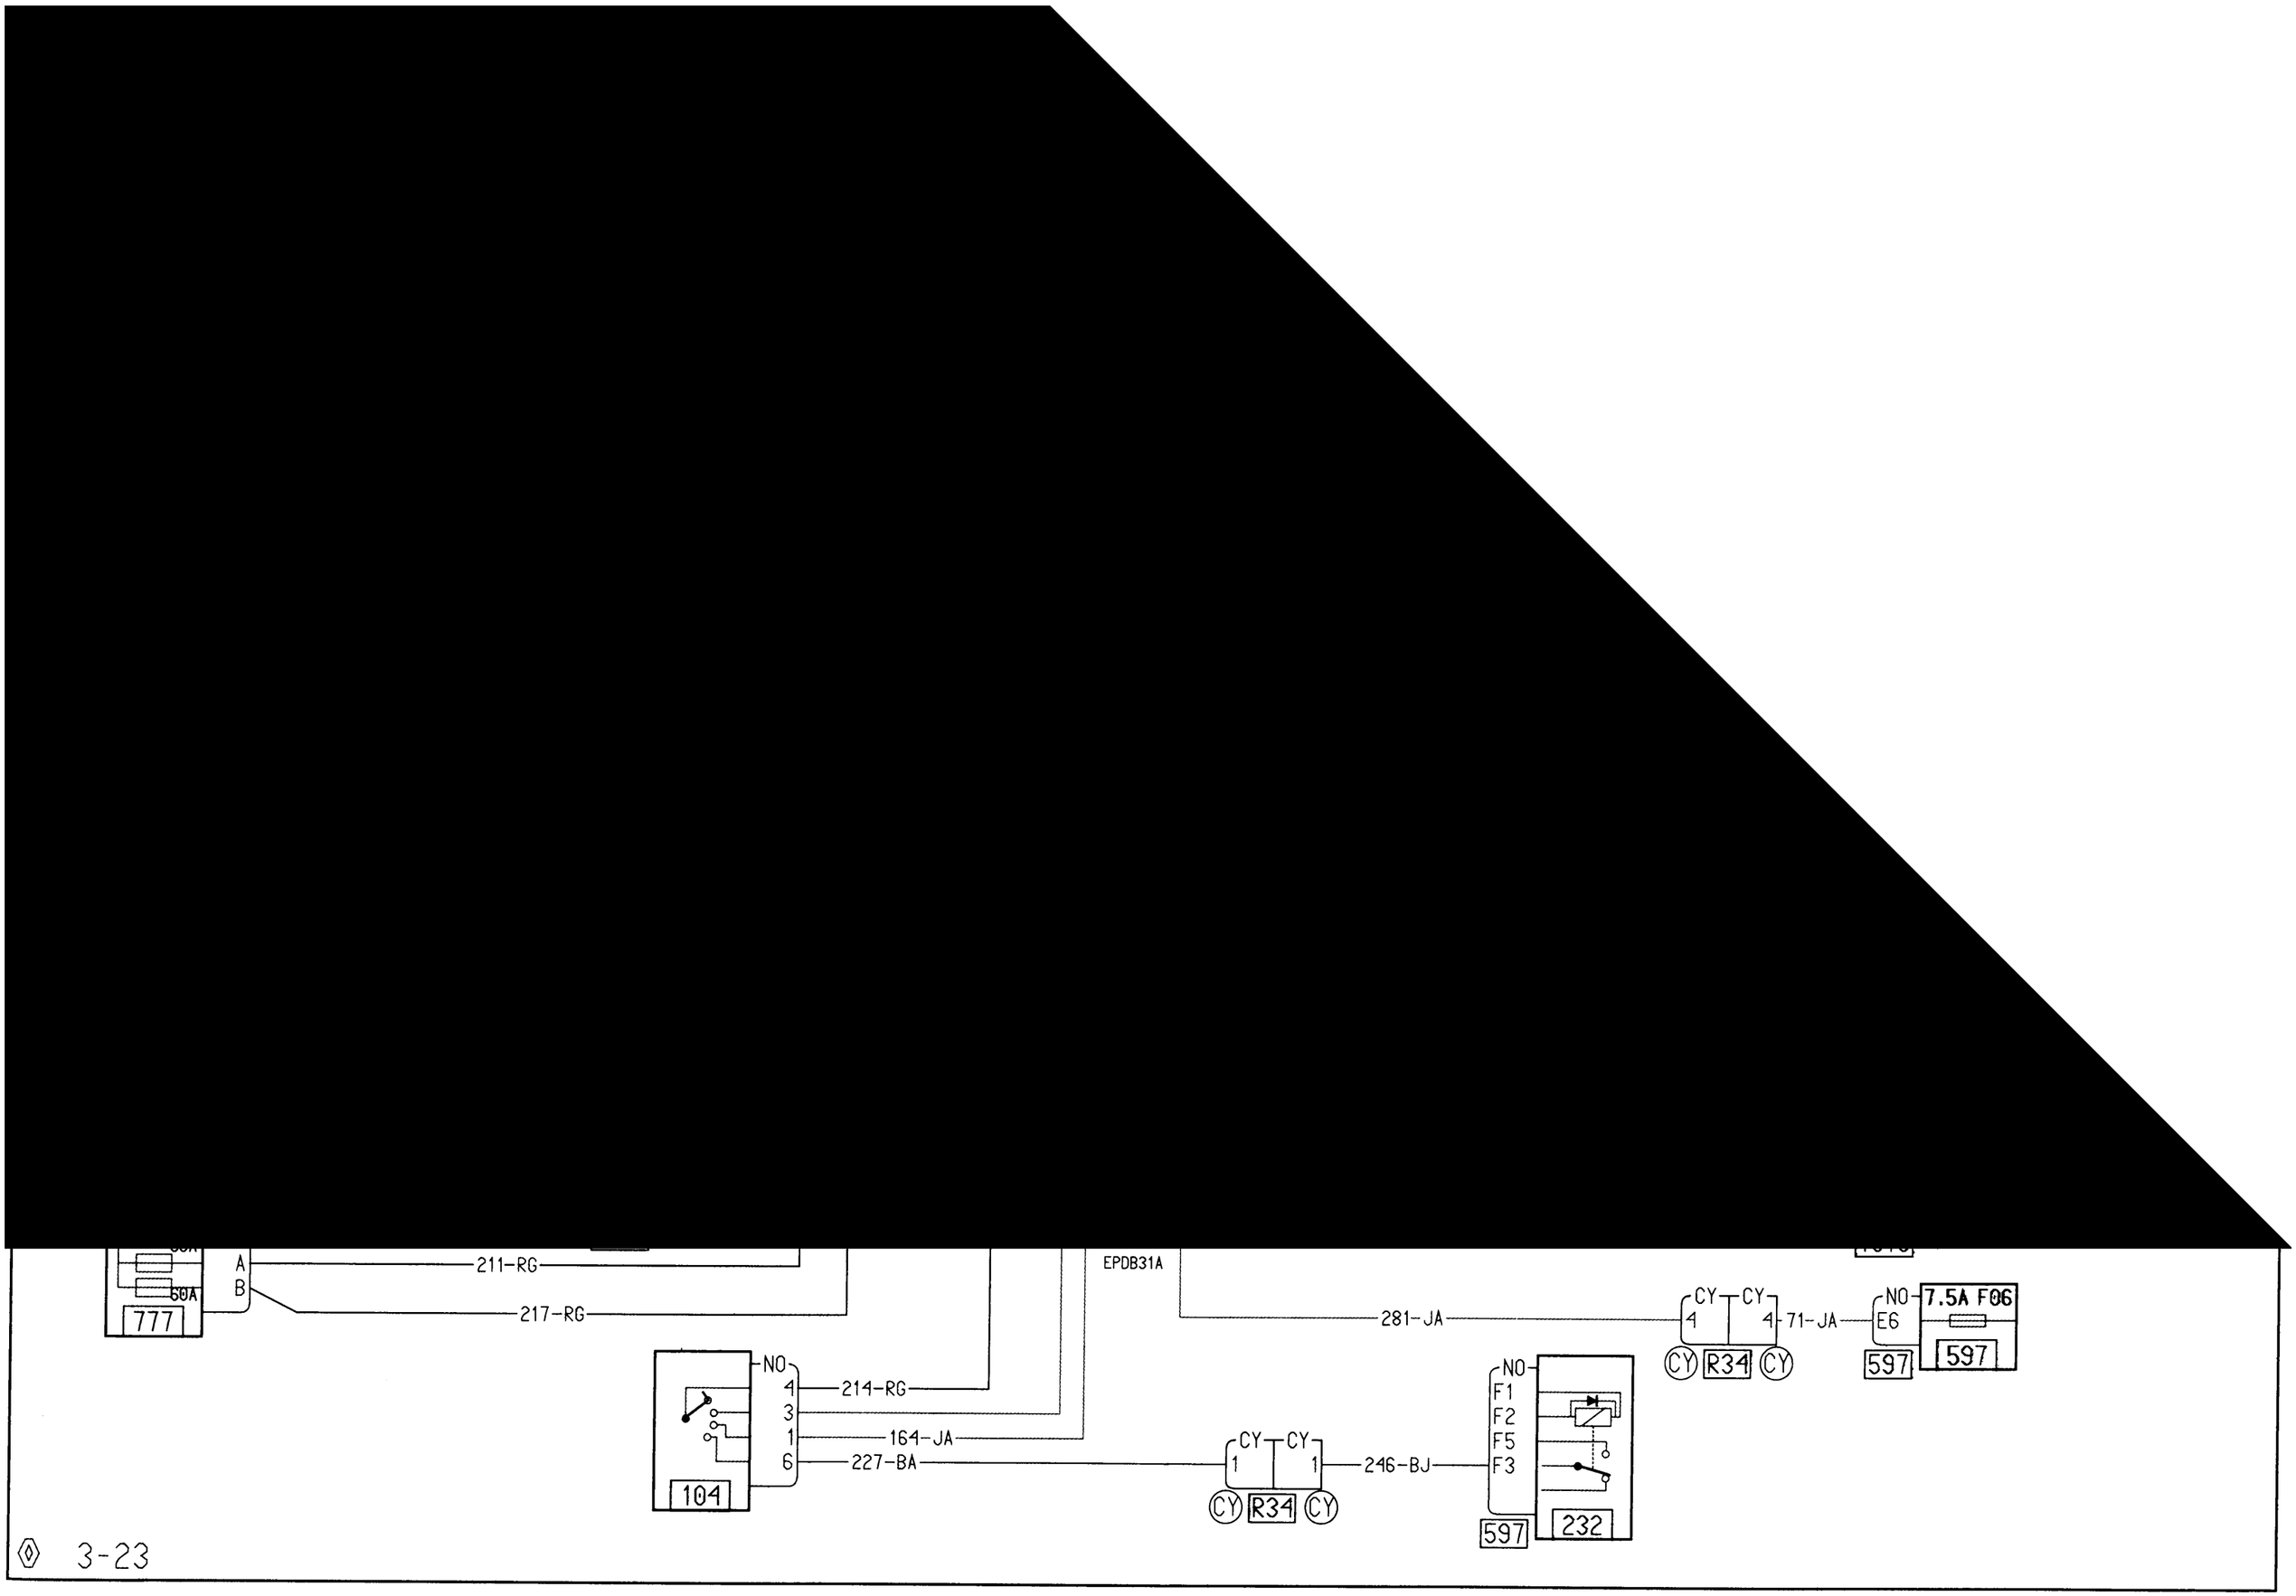
A
B
211-RG
217-RG
60A
777
EPDB31A
281-JA
CY
4
CY
4
71-JA
NO
E6
7.5A F06
597
597
CY
R34
CY
NO
4
3
1
6
214-RG
164-JA
227-BA
104
CY
1
CY
1
246-BJ
NO
F1
F2
F5
F3
597
232

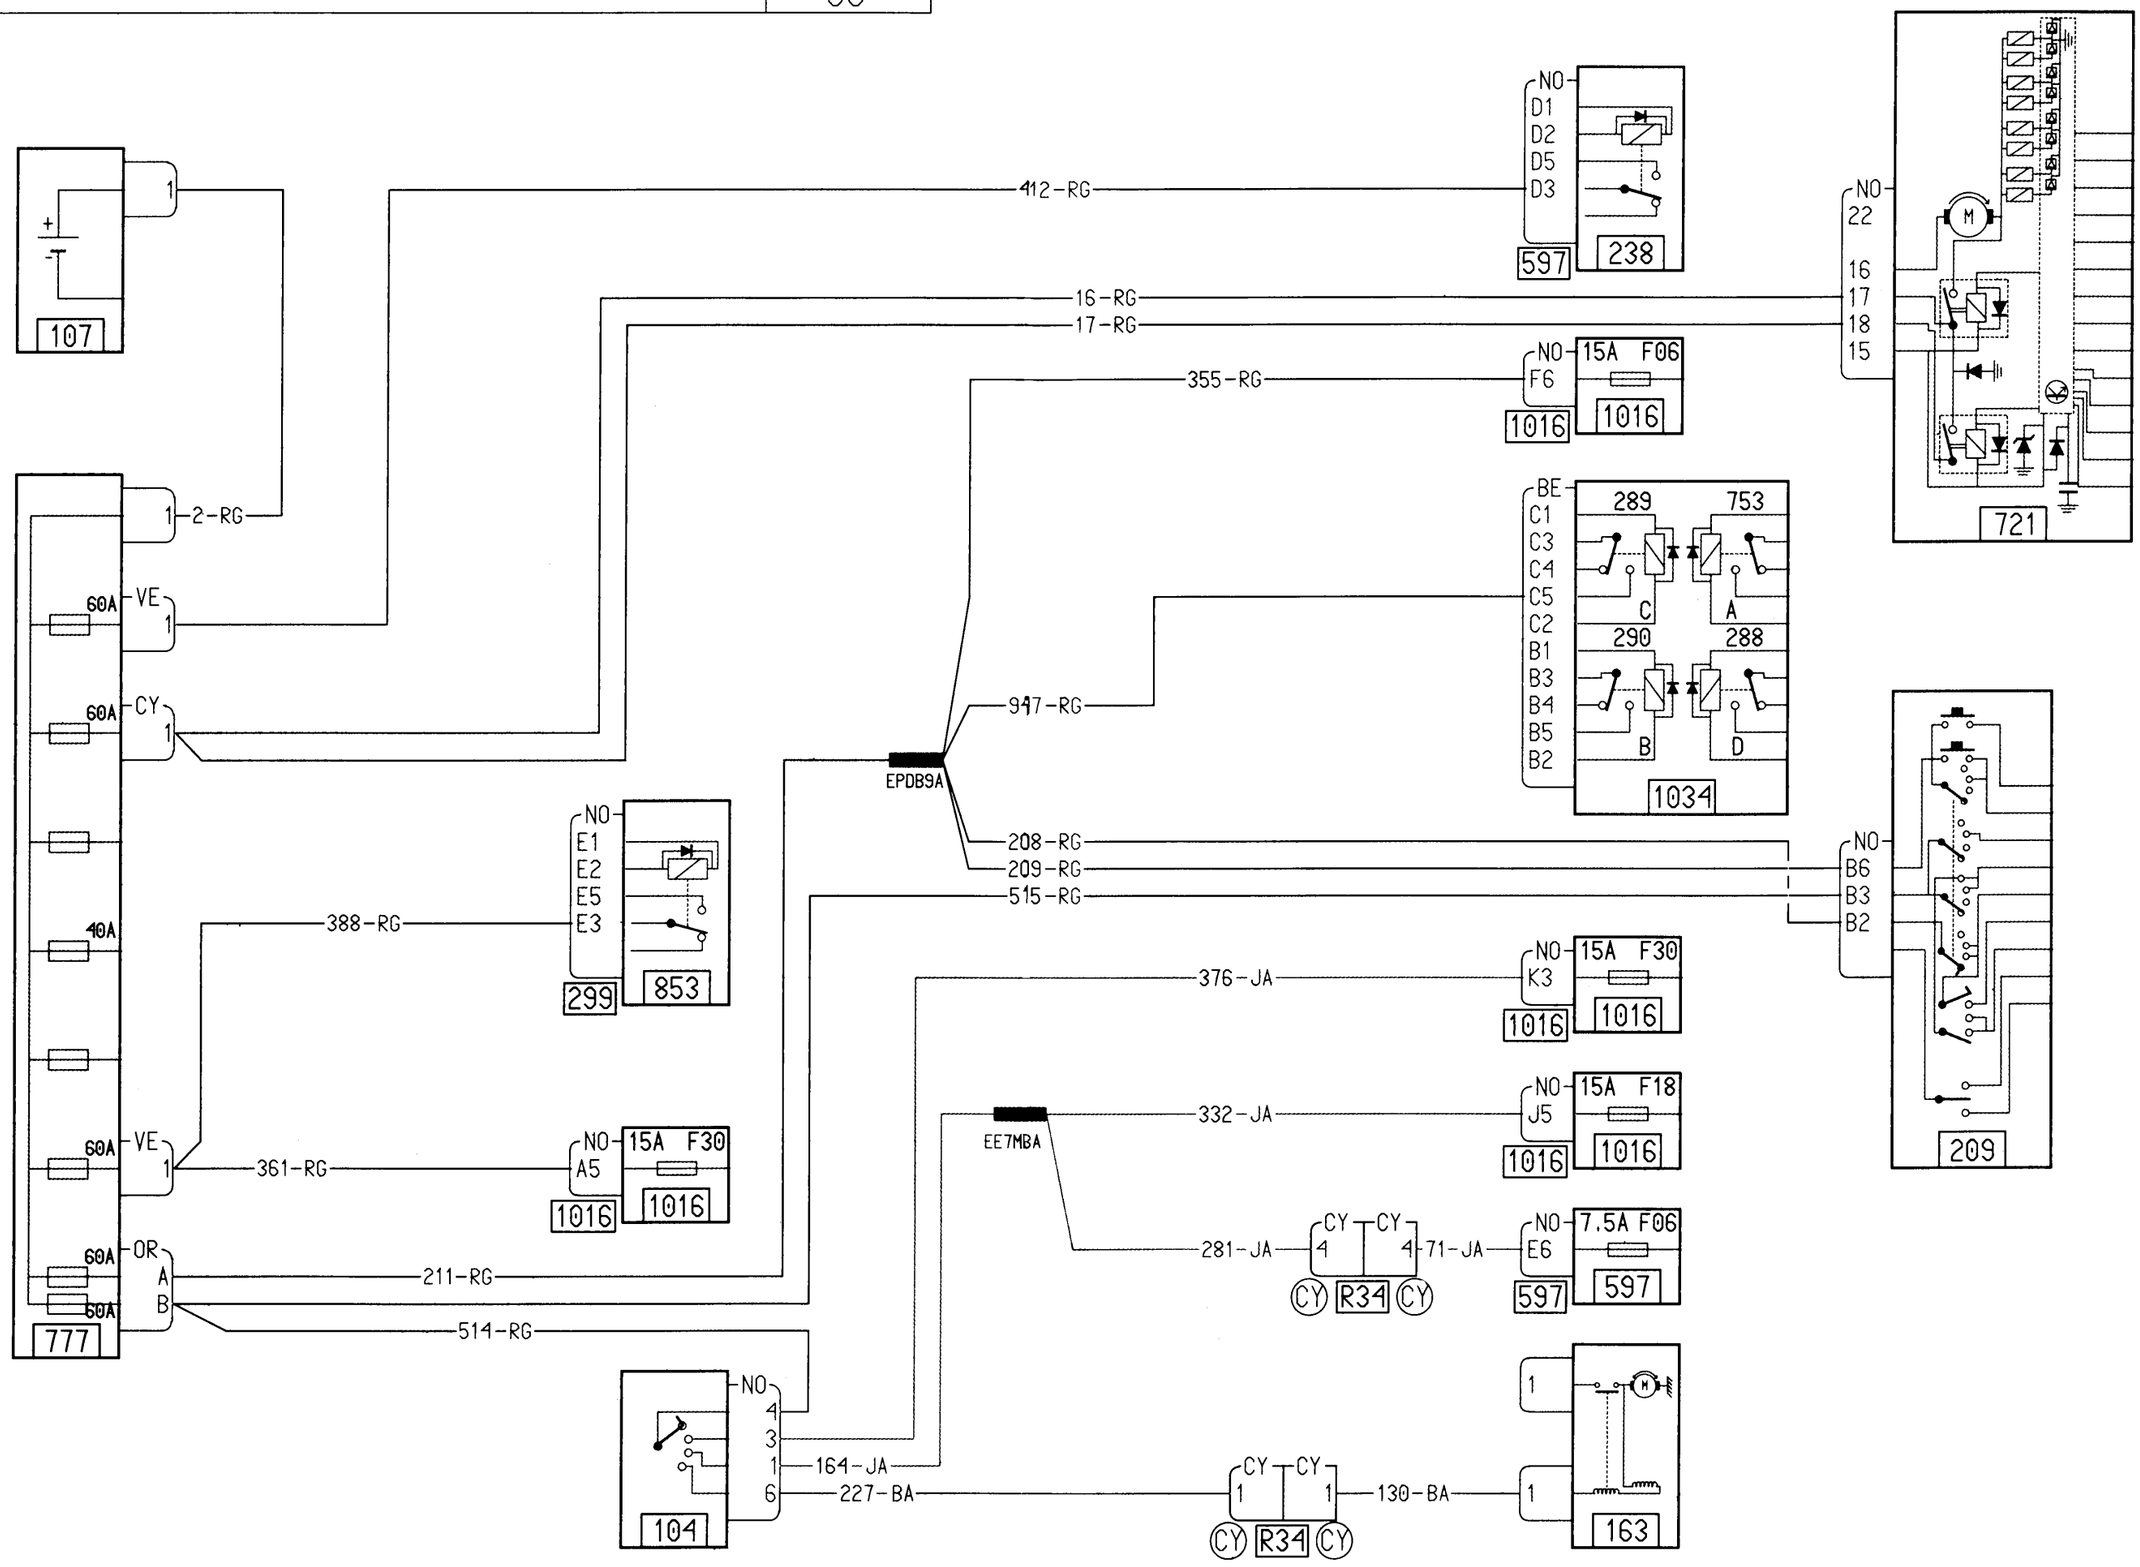
107
412-RG
597
238
NO
D1
D2
D5
D3
16-RG
17-RG
NO
22
16
17
18
15
721
355-RG
NO
F6
15A F06
1016
1016
1-2-RG
60A VE
60A CY
40A
60A VE
60A OR
60A
777
947-RG
EPDB9A
BE
C1
C3
C4
C5
C2
B1
B3
B4
B5
B2
289
753
C
A
290
288
B
D
1034
208-RG
209-RG
515-RG
NO
B6
B3
B2
NO
E1
E2
E5
E3
388-RG
299
853
376-JA
NO
K3
15A F30
1016
1016
361-RG
NO
A5
15A F30
1016
1016
EE7MBA
332-JA
NO
J5
15A F18
1016
1016
281-JA
CY
4
CY
4
71-JA
CY
R34
CY
NO
E6
7.5A F06
597
597
211-RG
514-RG
NO
4
3
1
6
164-JA
227-BA
104
CY
1
CY
1
130-BA
CY
R34
CY
1
1
163
209

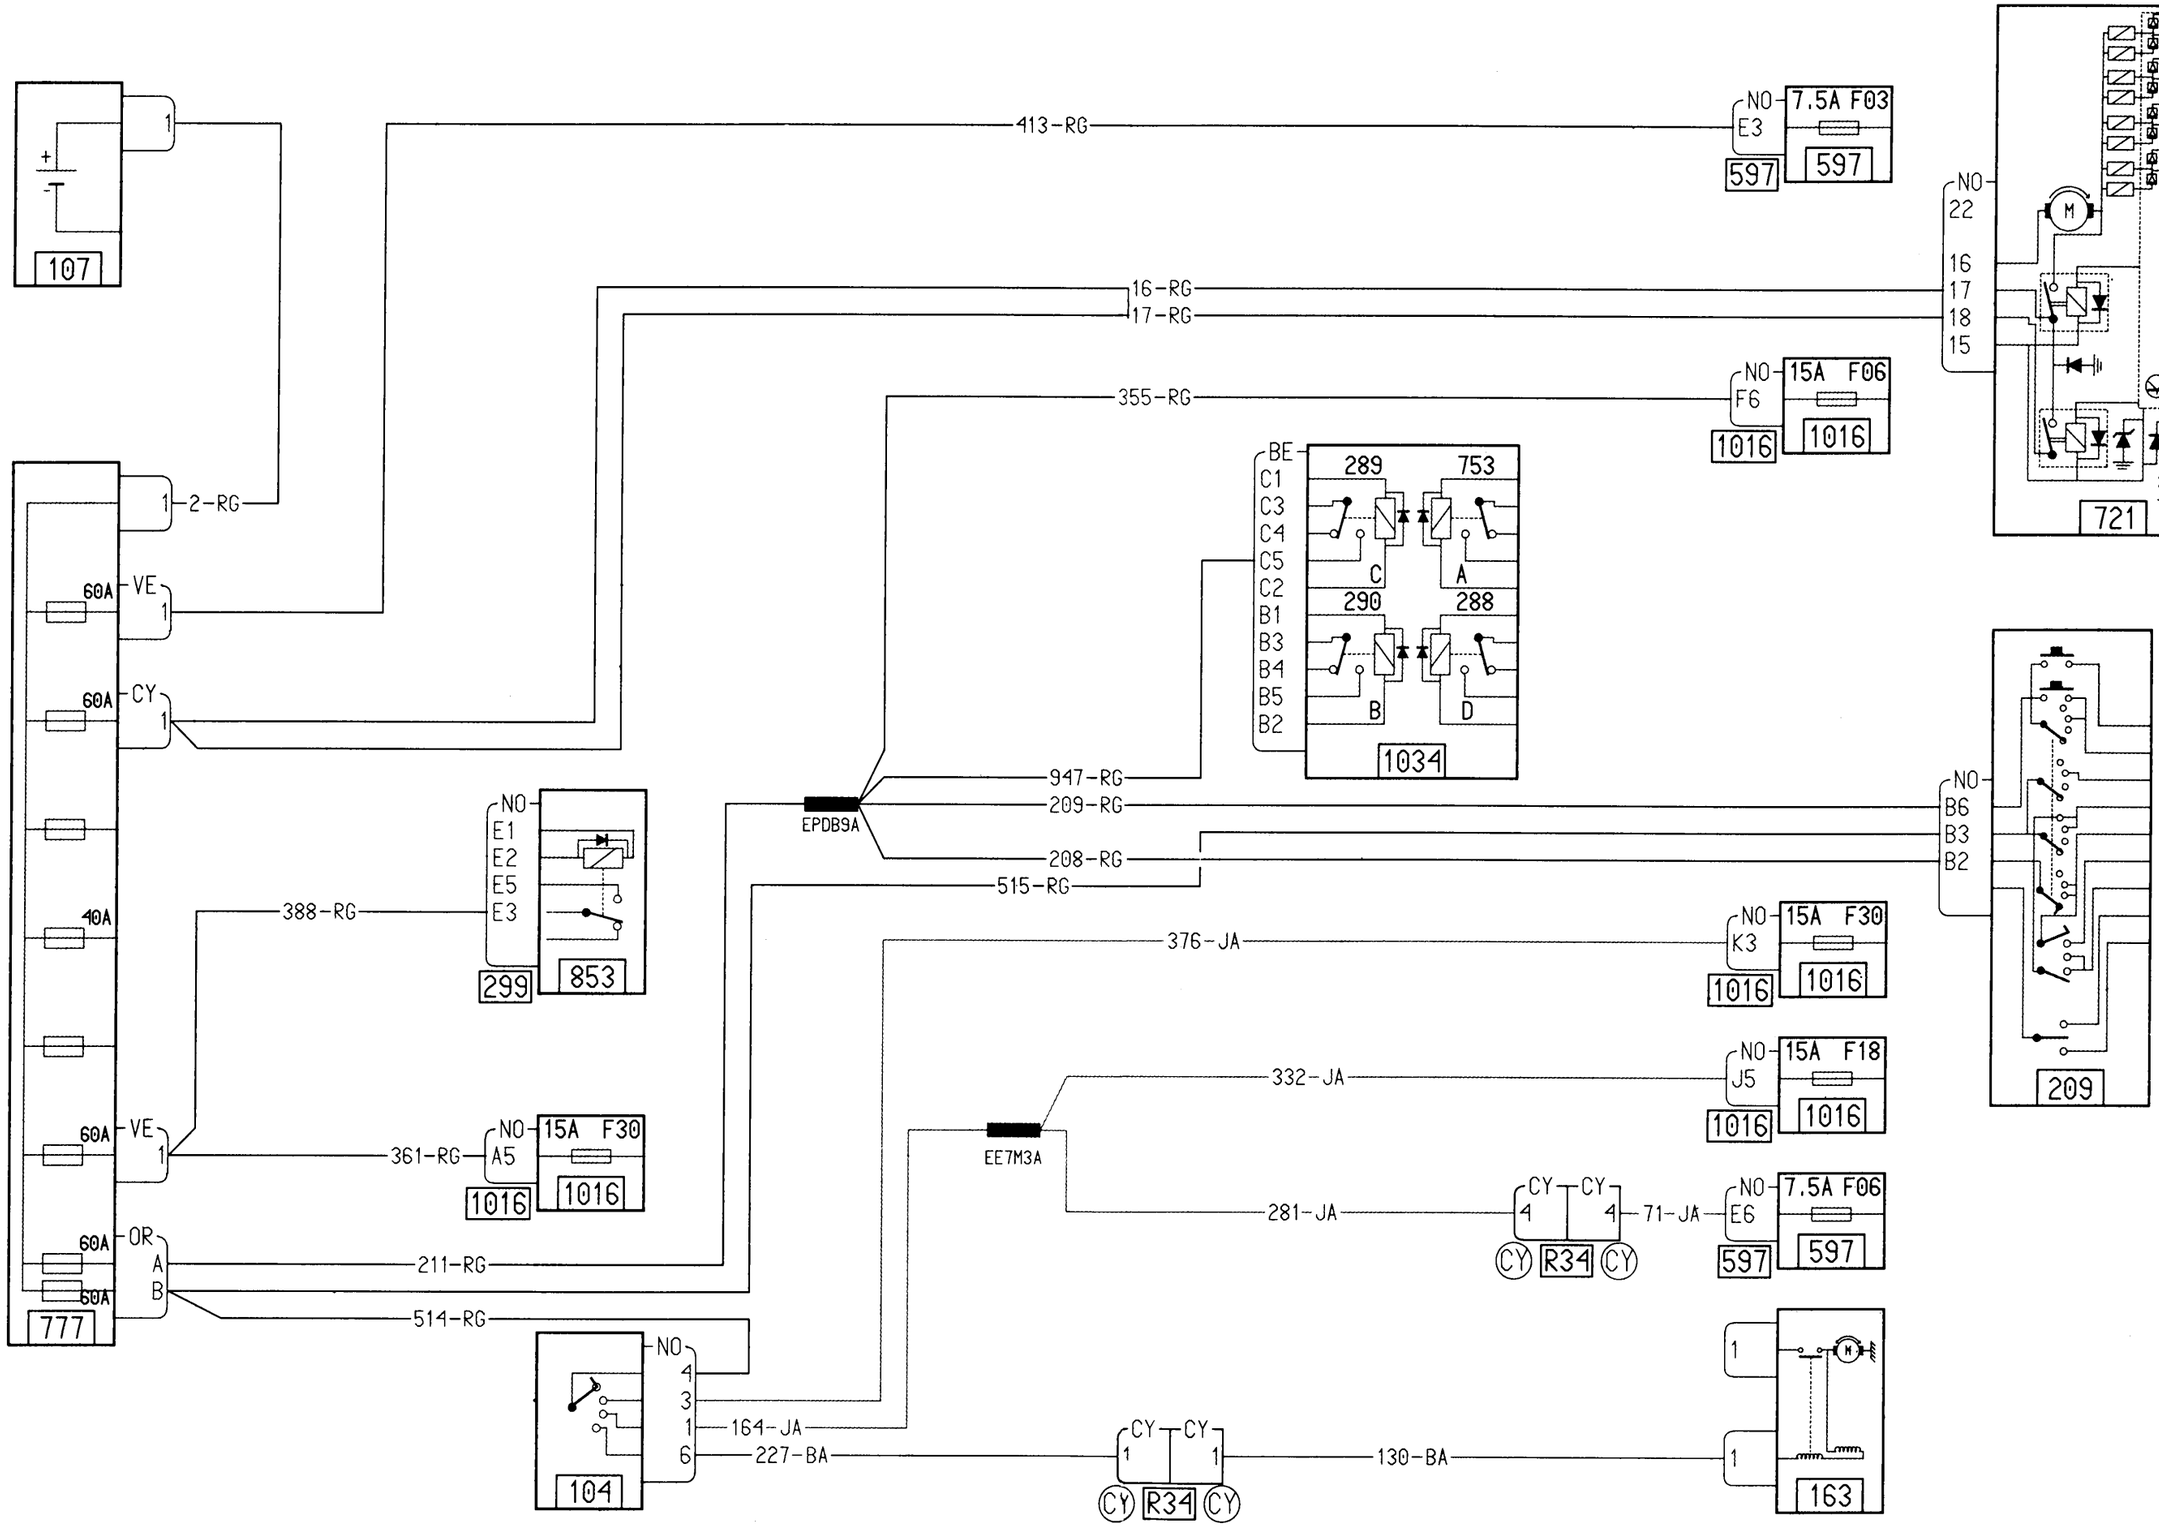
107
413-RG
NO E3 7.5A F03
597
597
NO 22 16 17 18 15
721
16-RG
17-RG
355-RG
NO F6 15A F06
1016
1016
BE C1 C3 C4 C5 C2 B1 B3 B4 B5 B2
289 753 290 288
C A B D
1034
947-RG
209-RG
208-RG
515-RG
EPDB9A
NO B6 B3 B2
209
2-RG
60A VE
60A CY
40A
60A VE
60A OR A B
60A
777
388-RG
NO E1 E2 E5 E3
299
853
361-RG
NO A5 15A F30
1016
1016
211-RG
514-RG
376-JA
NO K3 15A F30
1016
1016
332-JA
NO J5 15A F18
1016
1016
EE7M3A
281-JA
CY 4 CY 4
CY R34 CY
71-JA
NO E6 7.5A F06
597
597
NO 4 3 1 6
104
164-JA
227-BA
CY 1 CY 1
CY R34 CY
130-BA
1
1
163

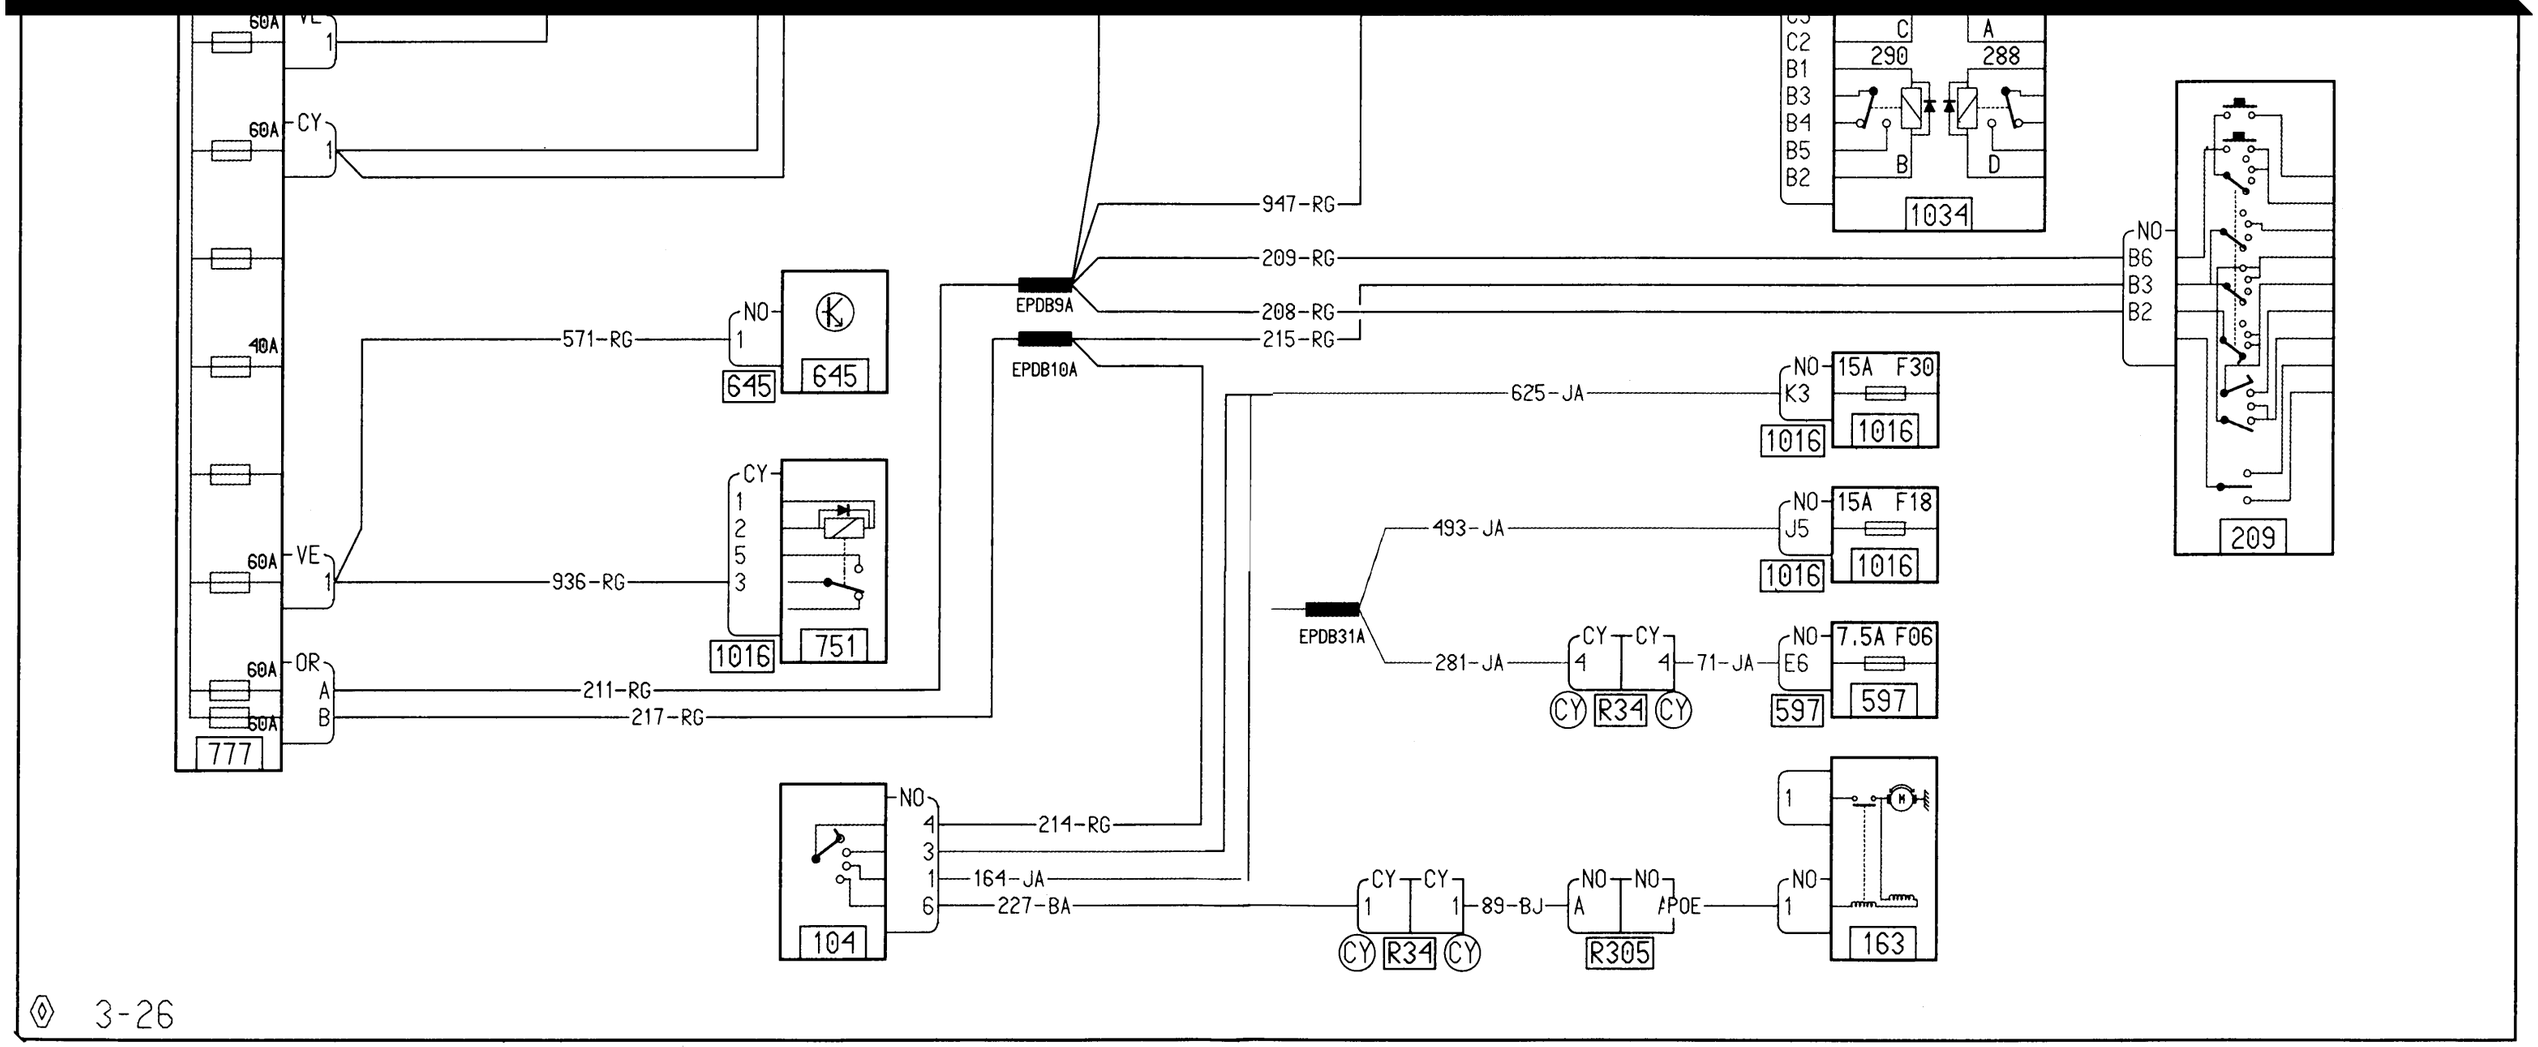
60A
VE
1
60A
CY
1
40A
60A
VE
1
60A
OR
A
B
60A
777
571-RG
NO
1
645
645
CY
1
2
5
3
936-RG
1016
751
211-RG
217-RG
947-RG
209-RG
208-RG
215-RG
EPDB9A
EPDB10A
625-JA
NO
K3
15A F30
1016
1016
493-JA
NO
J5
15A F18
1016
1016
EPDB31A
281-JA
CY
4
CY
4
71-JA
NO
E6
7.5A F06
597
597
CY
R34
CY
C2
B1
B3
B4
B5
B2
C
290
A
288
B
D
1034
NO
B6
B3
B2
209
214-RG
164-JA
227-BA
104
CY
1
CY
1
89-BJ
NO
A
NO
APOE
R305
CY
R34
CY
1
NO
1
163

ENGINE INTER-CONNECTION UNIT

(K25),(L64/K4M700)

X64
00

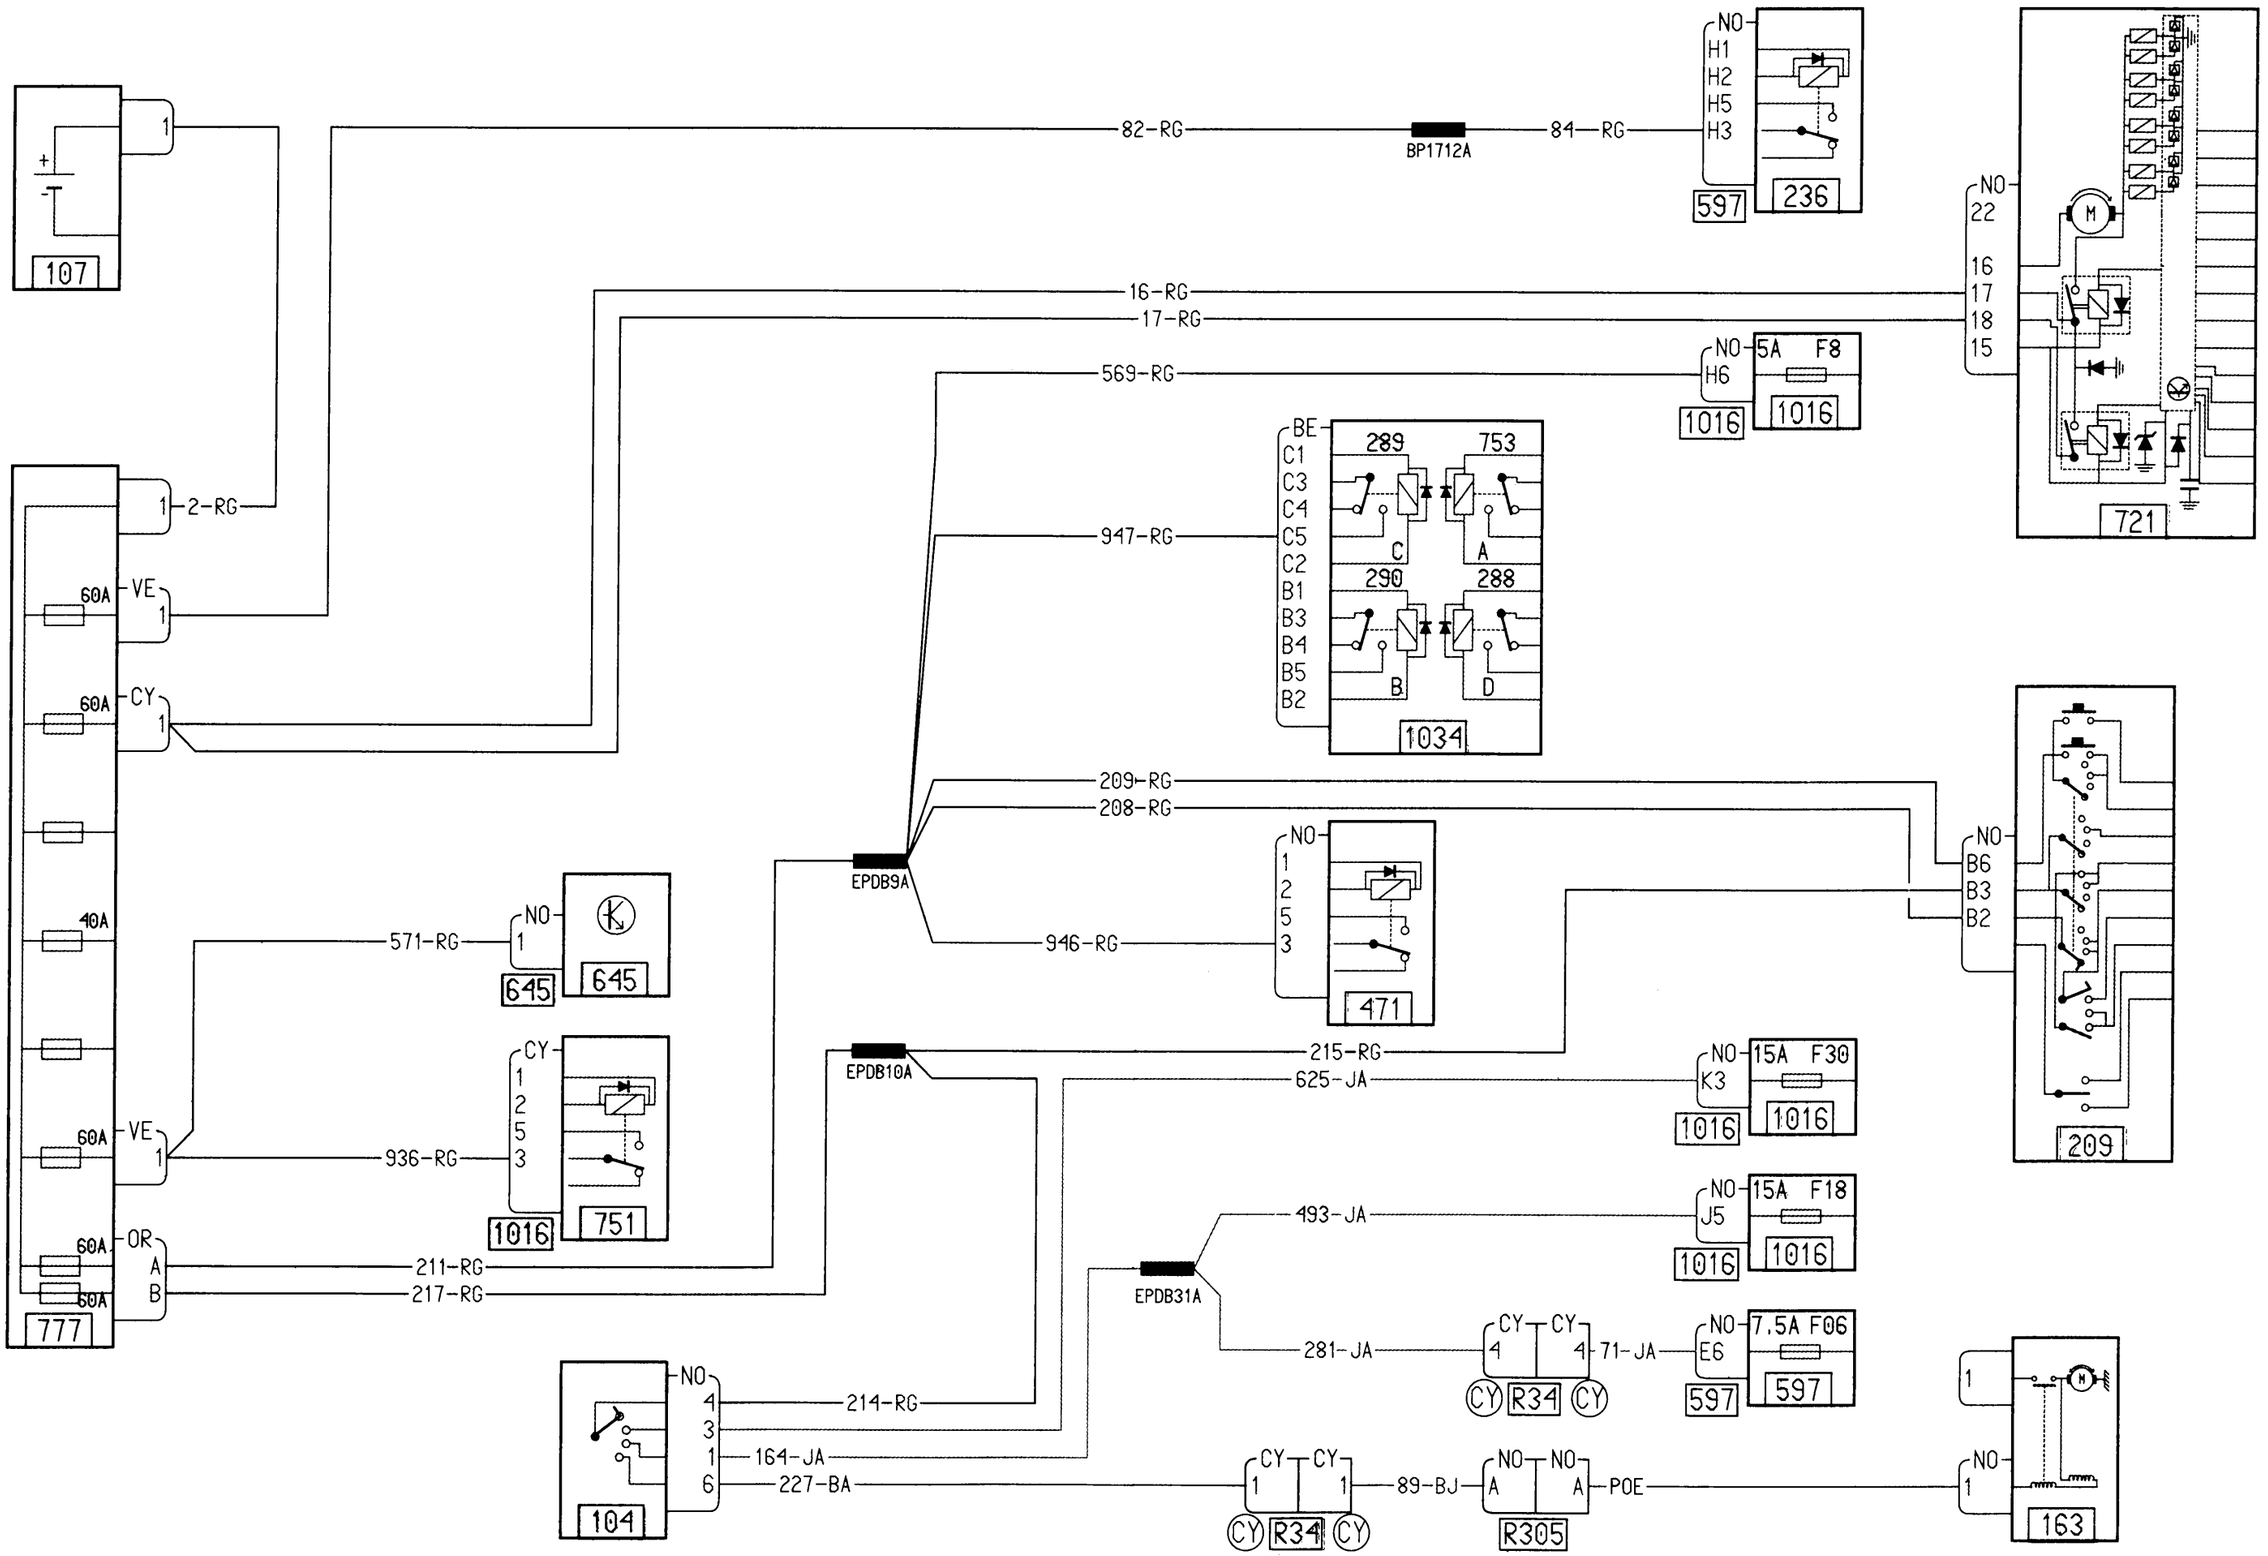

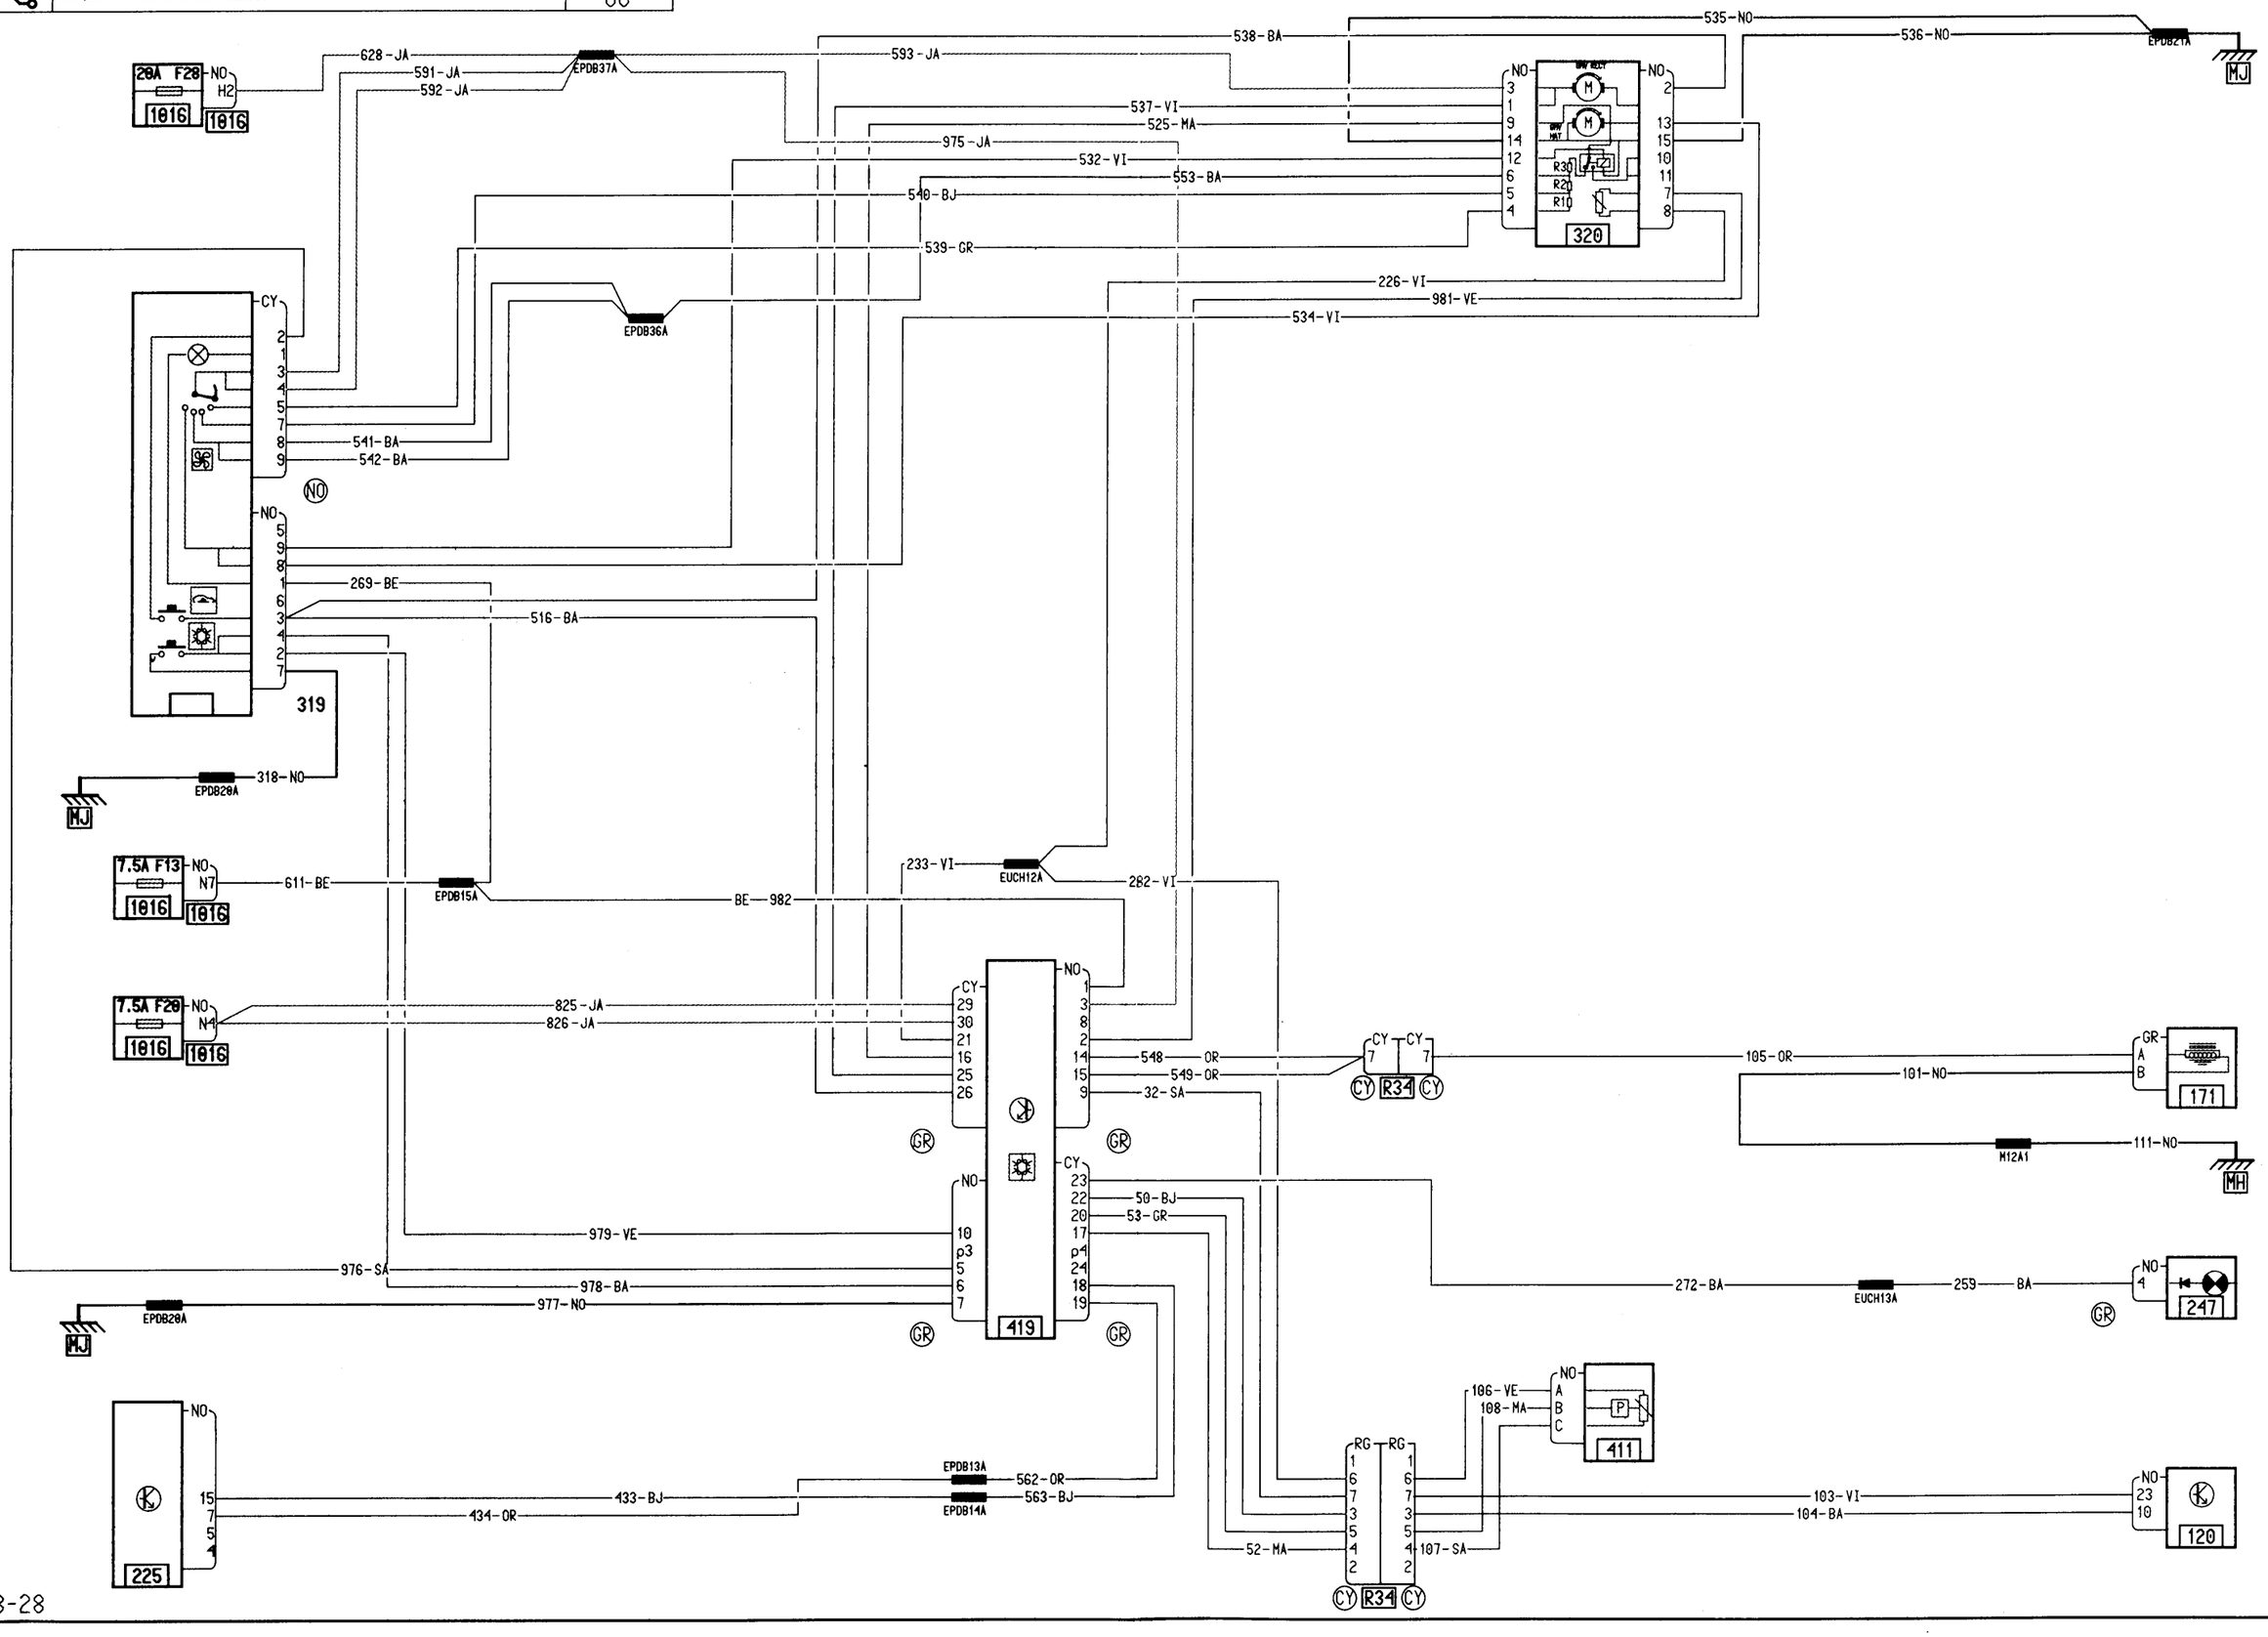
20A F28
1016
NO
H2
628-JA
591-JA
592-JA
EPDB37A
538-BA
593-JA
535-NO
536-NO
EPDB21A
MJ
537-VI
525-MA
975-JA
532-VI
553-BA
540-BJ
539-GR
320
R30
R20
R10
226-VI
981-VE
534-VI
EPDB36A
CY
541-BA
542-BA
269-BE
516-BA
319
318-NO
EPDB20A
7.5A F13
611-BE
EPDB15A
233-VI
EUCH12A
282-VI
BE-982
7.5A F28
825-JA
826-JA
548-OR
549-OR
32-SA
R34
105-OR
101-NO
171
M12A1
111-NO
MH
50-BJ
53-GR
979-VE
976-SA
978-BA
977-NO
419
272-BA
EUCH13A
259-BA
247
106-VE
108-MA
411
52-MA
107-SA
103-VI
104-BA
120
EPDB13A
562-OR
EPDB14A
563-BJ
433-BJ
434-OR
225

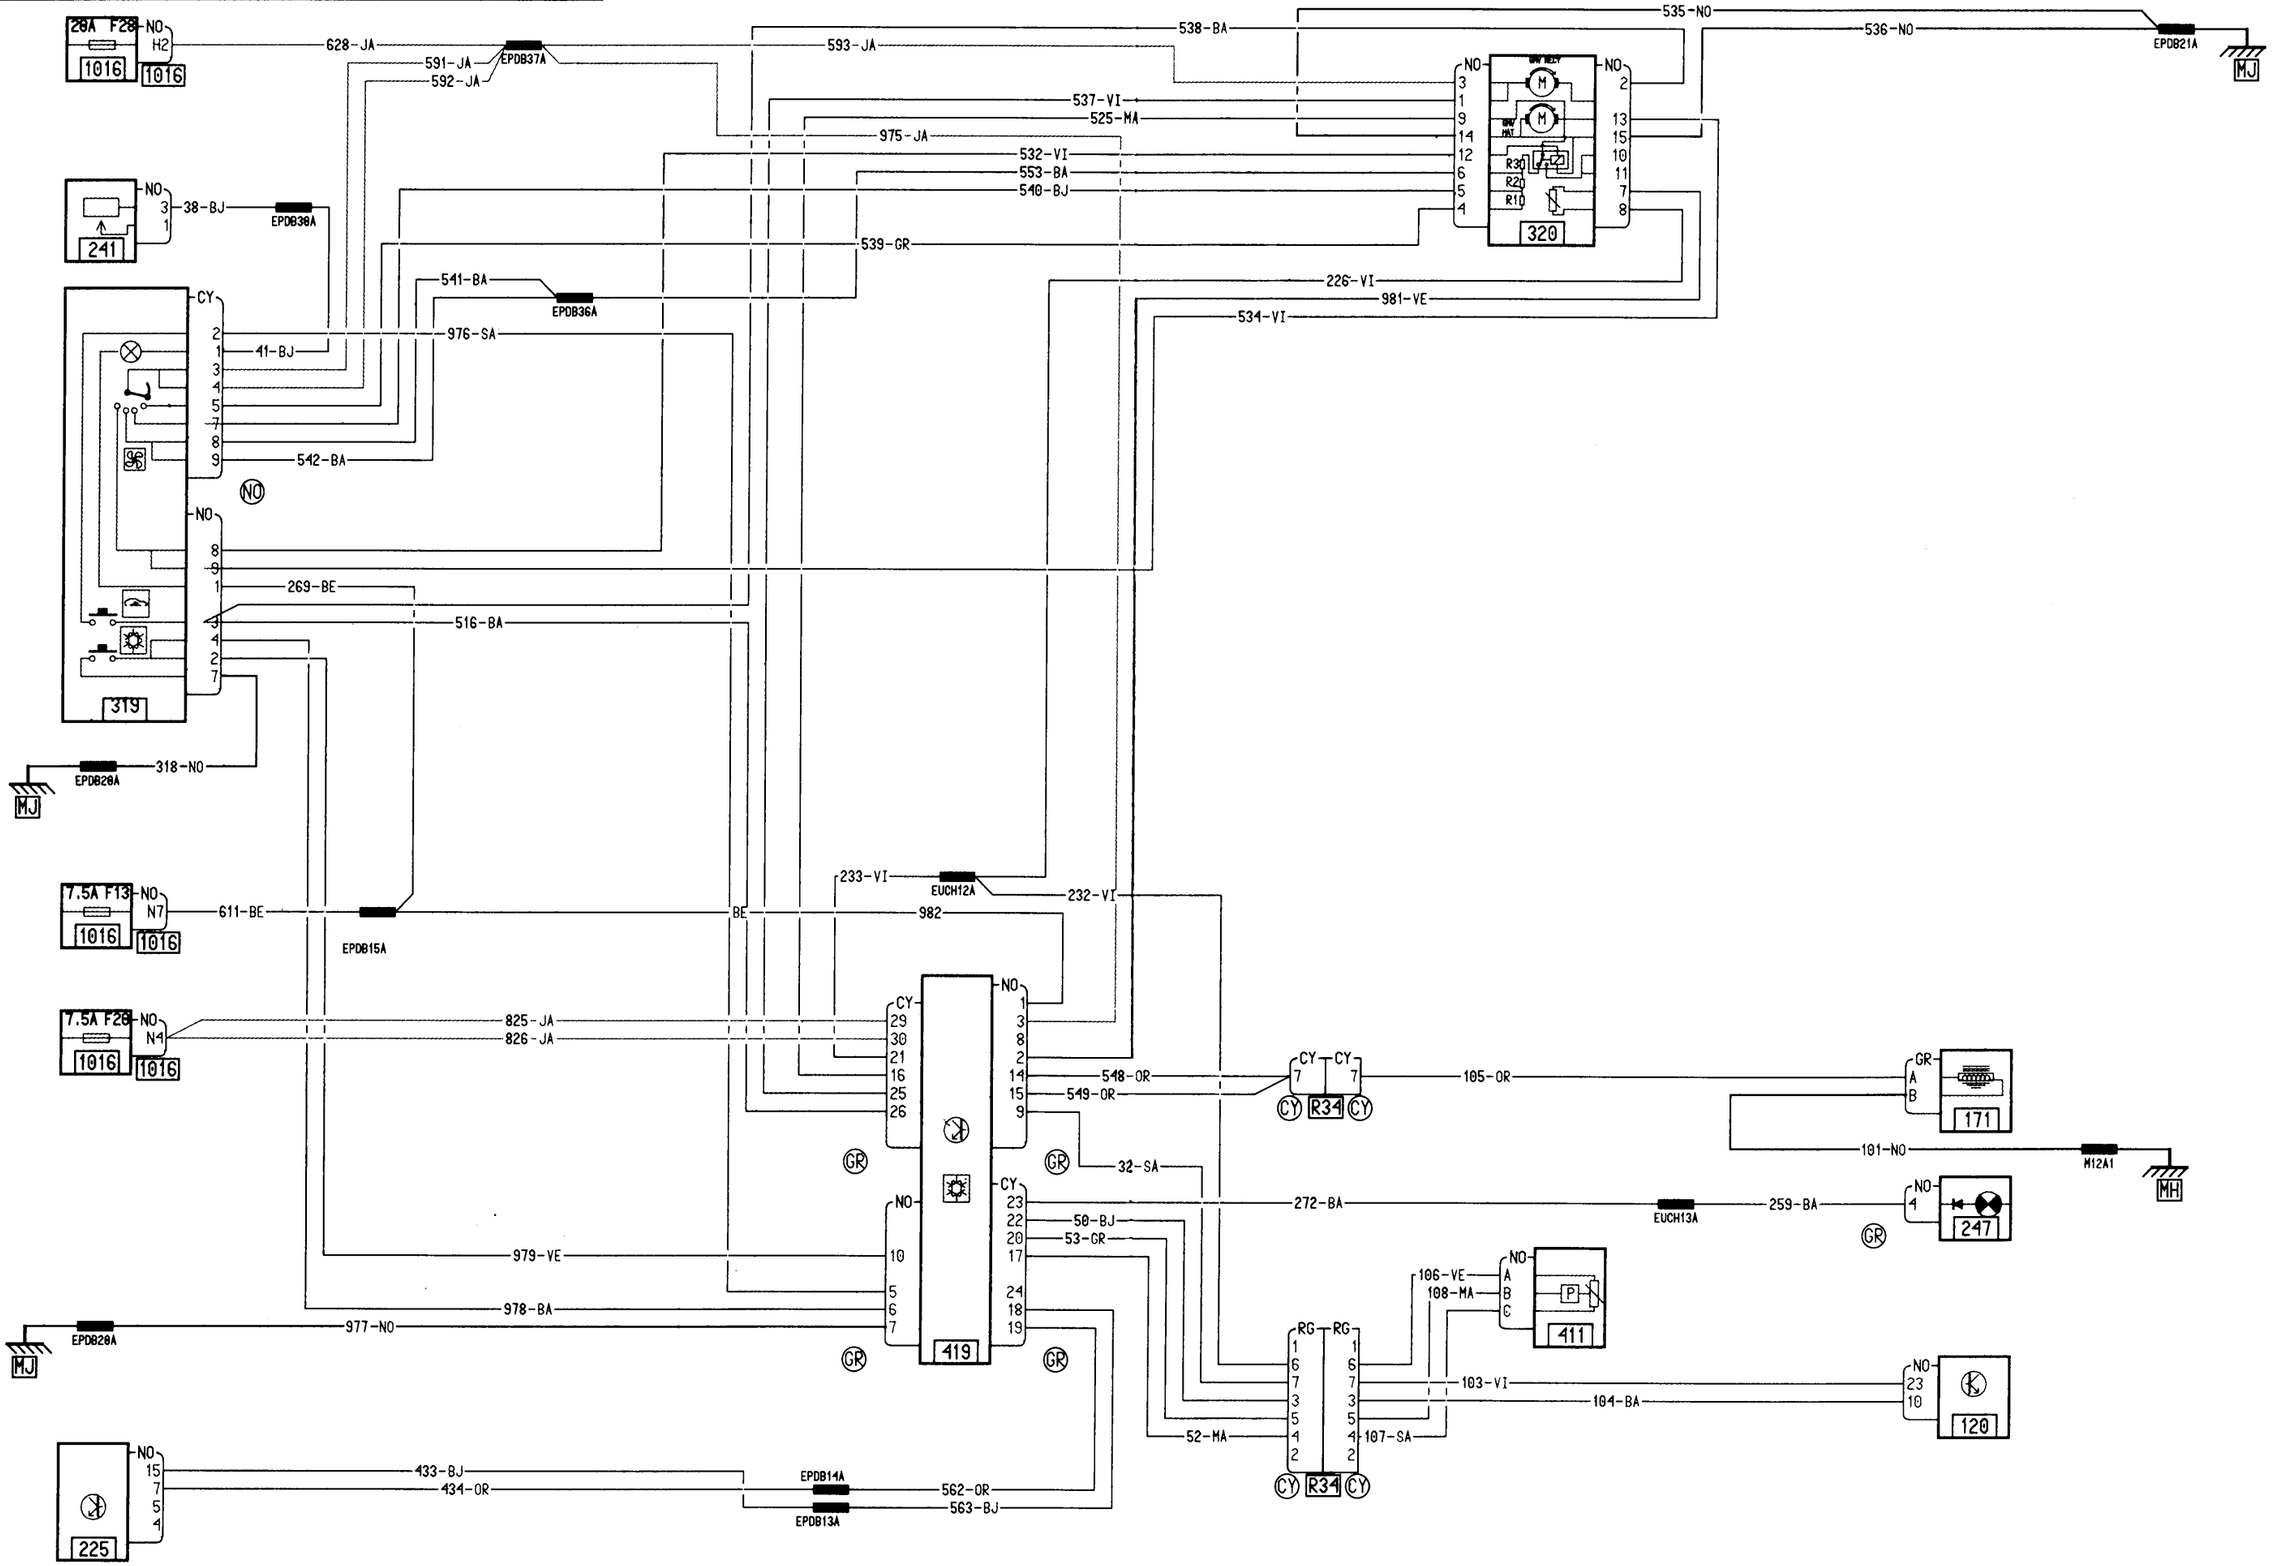
20A F28
1016
H2
628-JA
591-JA
592-JA
EPDB37A
593-JA
538-BA
535-NO
536-NO
EPDB21A
MJ
537-VI
525-MA
975-JA
532-VI
553-BA
540-BJ
539-GR
320
241
38-BJ
EPDB38A
541-BA
EPDB36A
226-VI
981-VE
534-VI
976-SA
41-BJ
542-BA
319
269-BE
516-BA
318-NO
EPDB20A
233-VI
EUCH12A
232-VI
7.5A F13
611-BE
EPDB15A
982
7.5A F26
825-JA
826-JA
548-OR
549-OR
105-OR
171
101-NO
M12A1
MH
32-SA
272-BA
EUCH13A
259-BA
247
50-BJ
53-GR
979-VE
978-BA
977-NO
EPDB28A
419
106-VE
108-MA
411
52-MA
107-SA
103-VI
104-BA
120
433-BJ
434-OR
EPDB14A
EPDB13A
562-OR
563-BJ
225
R34

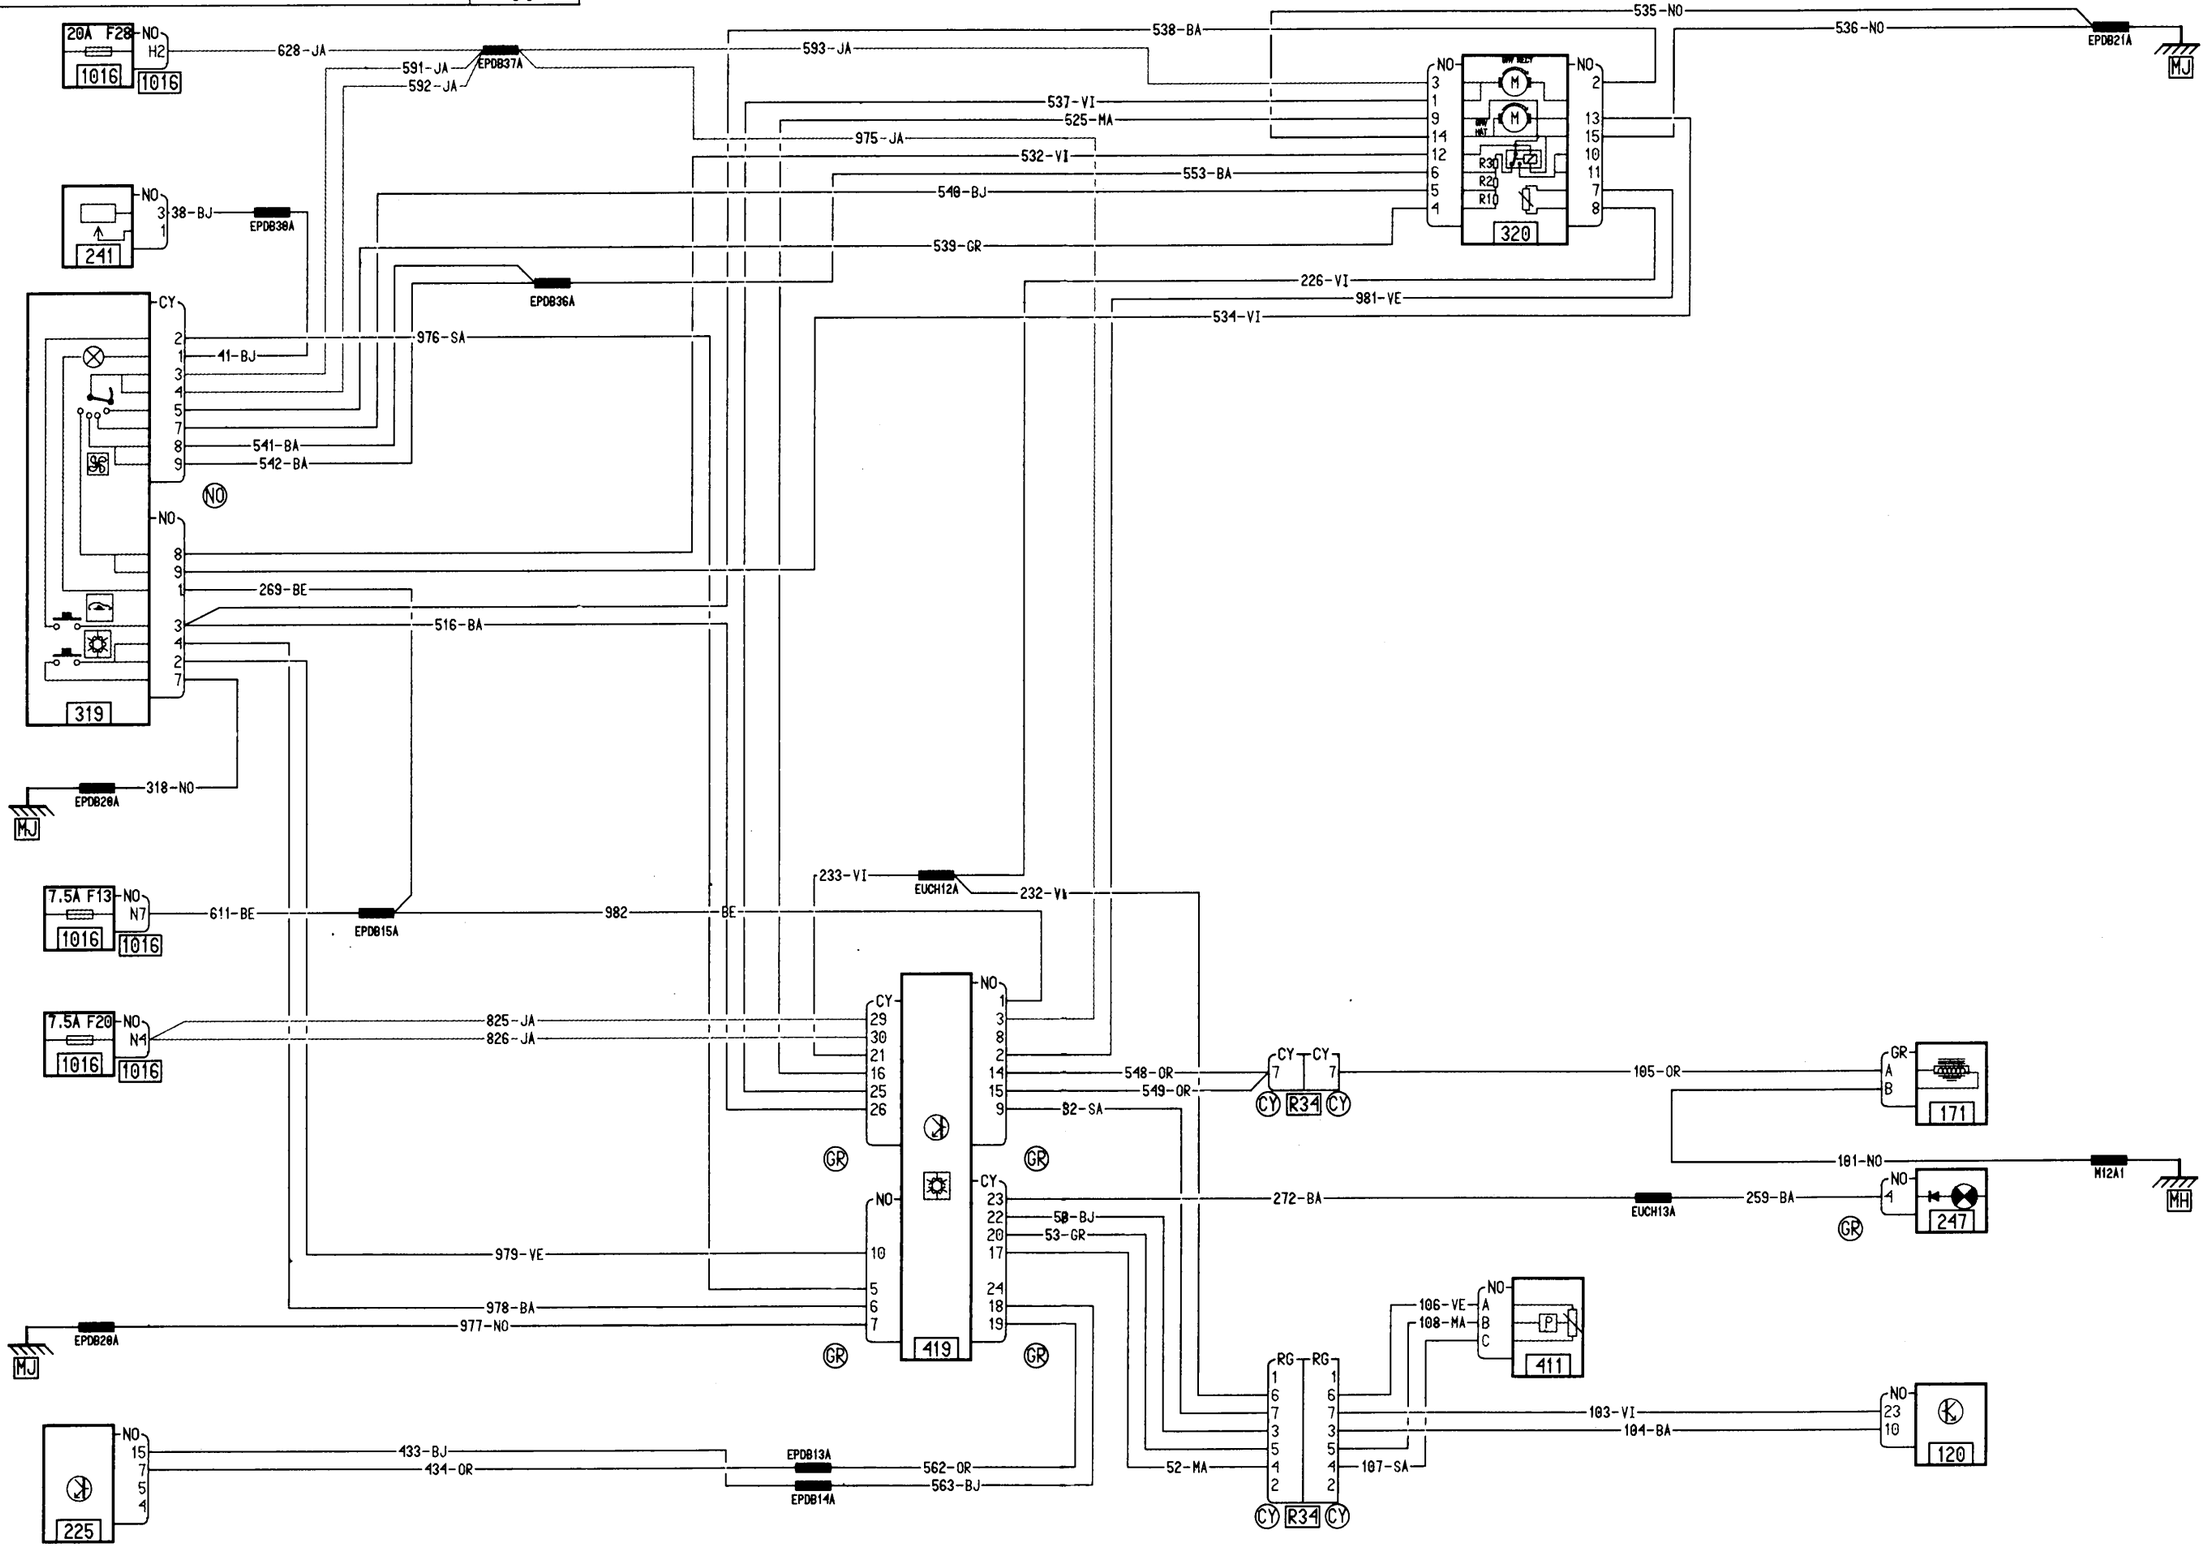
20A F28
1016
628-JA
591-JA
592-JA
EPDB37A
593-JA
538-BA
535-NO
536-NO
EPDB21A
MJ
537-VI
525-MA
975-JA
532-VI
553-BA
548-BJ
539-GR
320
R30
R20
R10
241
38-BJ
EPDB38A
EPDB36A
226-VI
981-VE
534-VI
976-SA
41-BJ
541-BA
542-BA
269-BE
516-BA
319
318-NO
EPDB20A
7.5A F13
611-BE
EPDB15A
982-BE
233-VI
EUCH12A
232-VI
7.5A F20
825-JA
826-JA
548-OR
549-OR
82-SA
105-OR
171
181-NO
M12A1
272-BA
EUCH13A
259-BA
247
58-BJ
53-GR
979-VE
978-BA
977-NO
419
106-VE
108-MA
411
52-MA
107-SA
103-VI
104-BA
120
433-BJ
434-OR
EPDB13A
562-OR
EPDB14A
563-BJ
225
R34

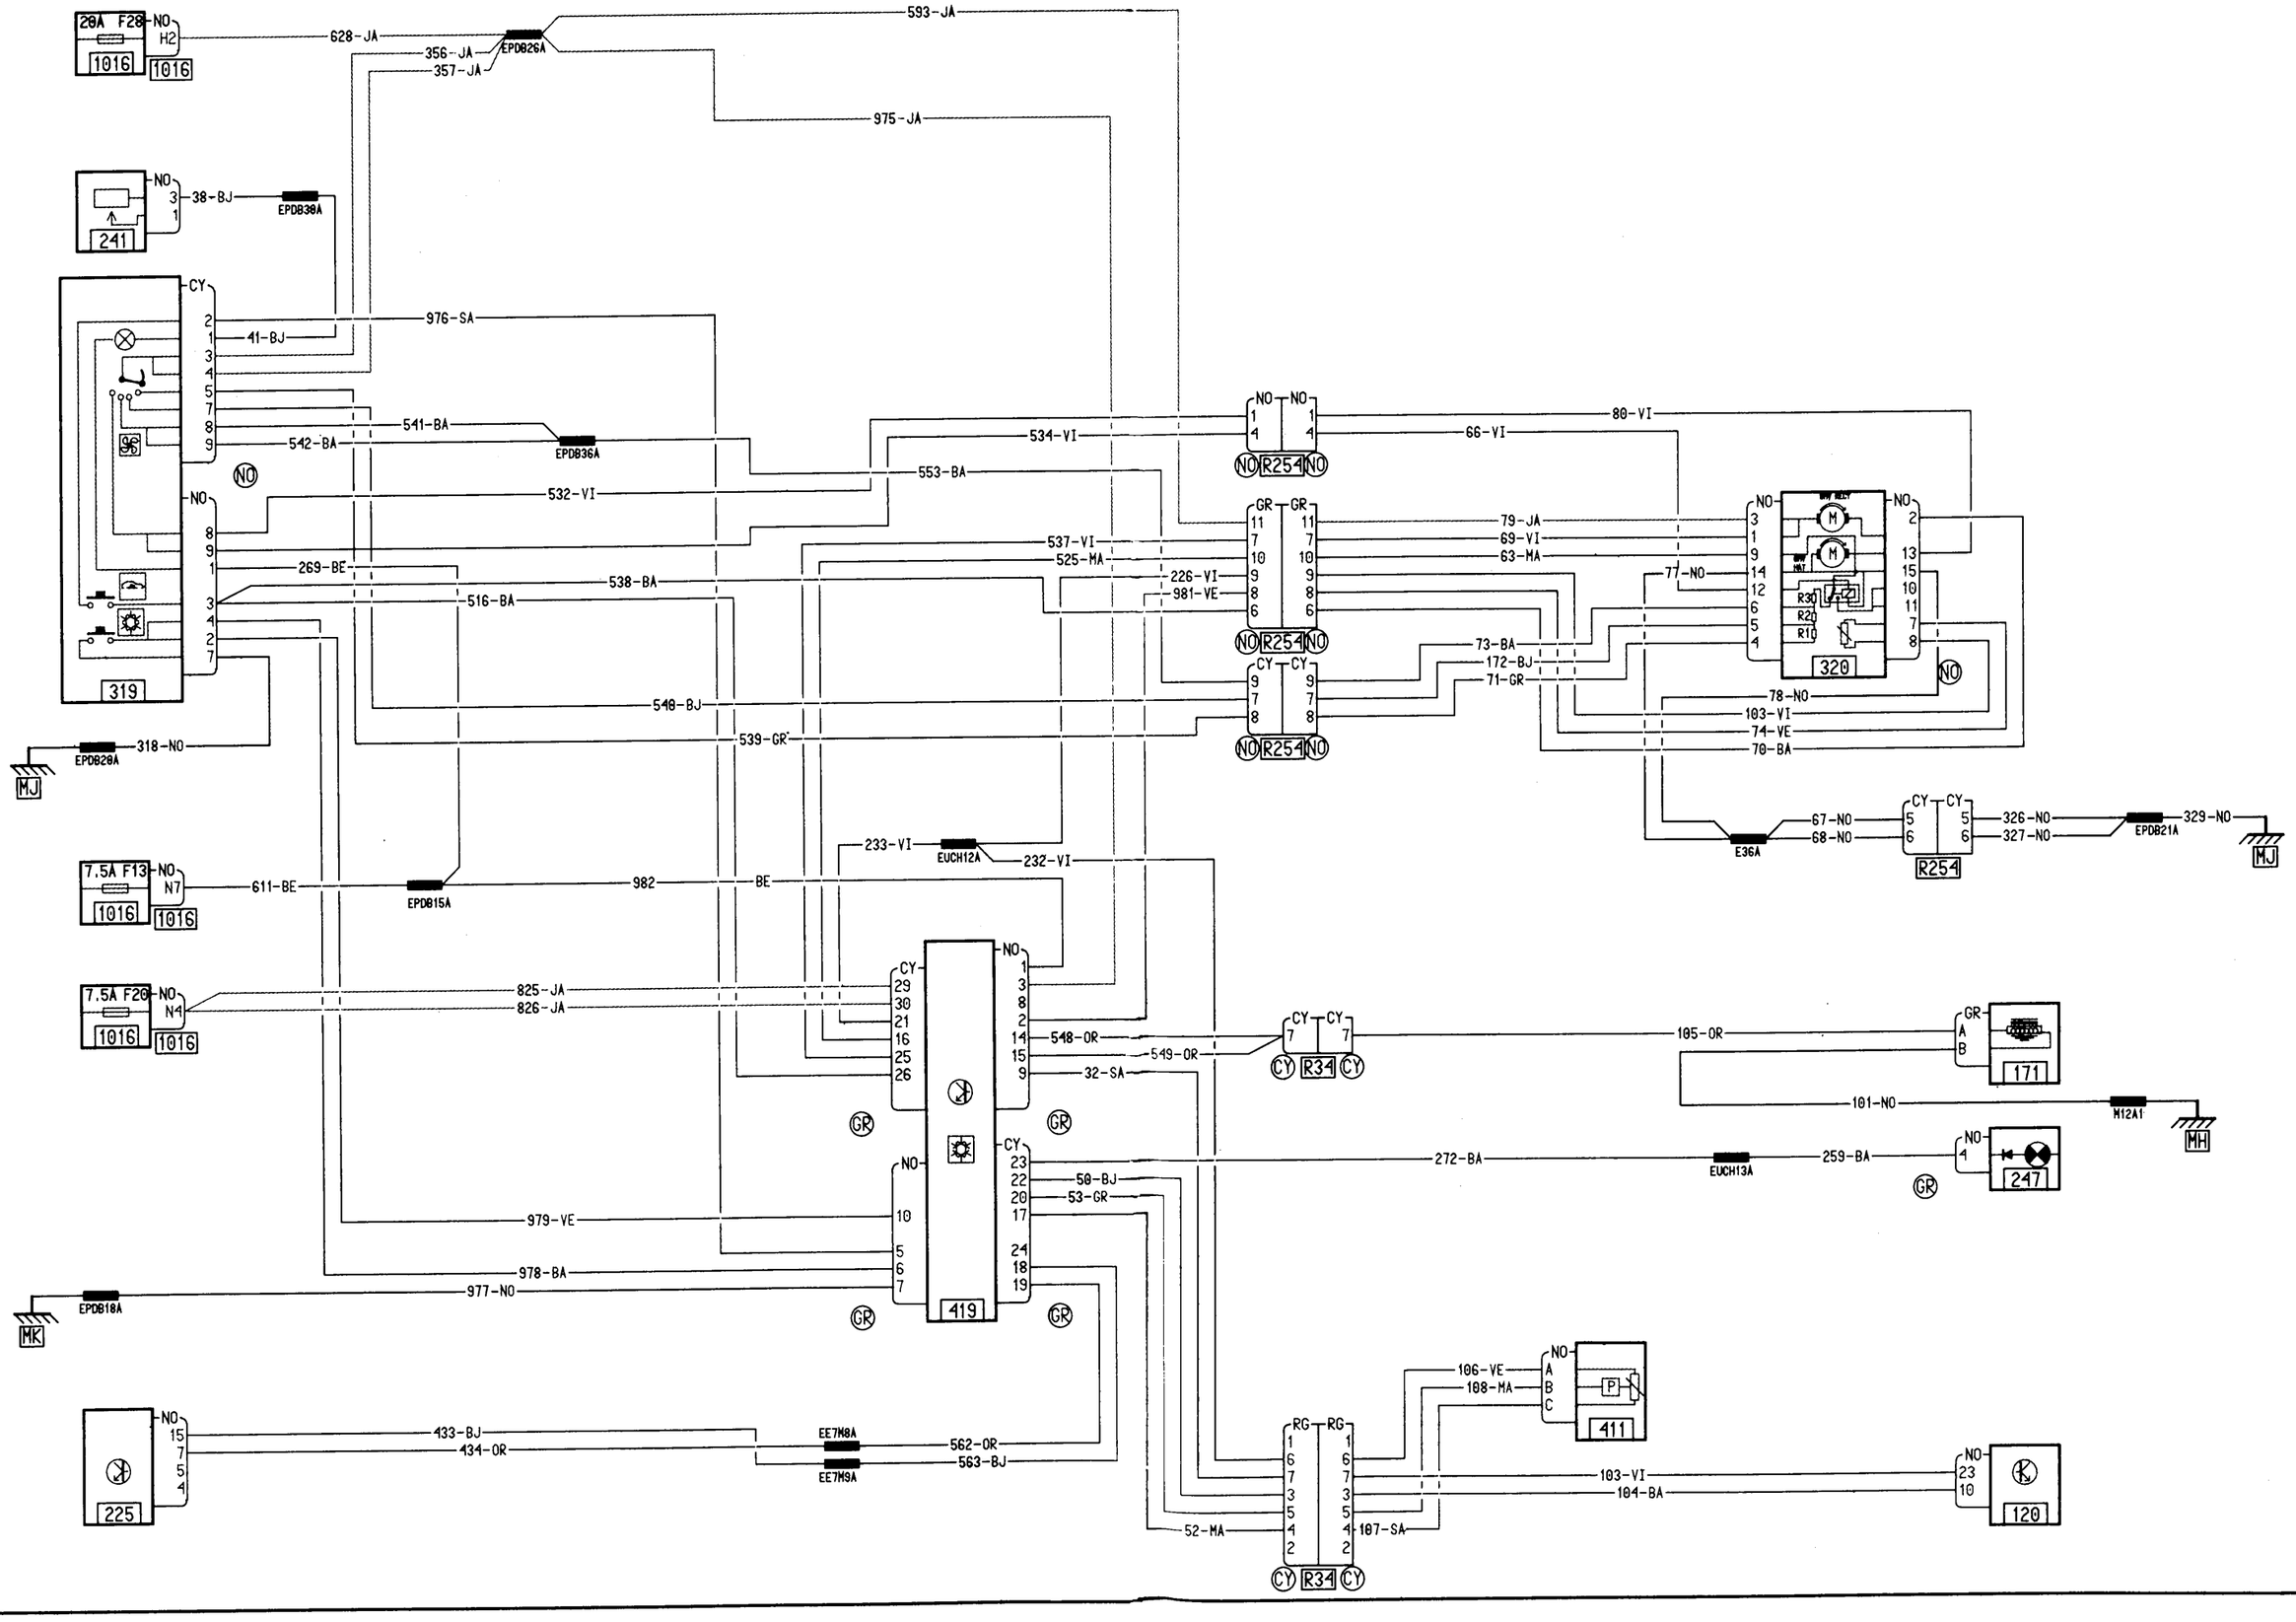
20A F28
1016
1016
628-JA
356-JA
357-JA
EPDB26A
593-JA
975-JA
241
38-BJ
EPDB38A
319
976-SA
41-BJ
541-BA
542-BA
EPDB36A
534-VI
553-BA
532-VI
269-BE
538-BA
516-BA
537-VI
525-MA
226-VI
981-VE
548-BJ
539-GR
318-NO
EPDB20A
MJ
R254
79-JA
69-VI
63-MA
77-NO
80-VI
66-VI
73-BA
172-BJ
71-GR
78-NO
103-VI
74-VE
70-BA
320
67-NO
68-NO
E36A
326-NO
327-NO
EPDB21A
329-NO
7.5A F13
611-BE
EPDB15A
982
BE
233-VI
EUCH12A
232-VI
7.5A F20
825-JA
826-JA
419
979-VE
978-BA
977-NO
EPDB18A
MK
548-OR
549-OR
32-SA
R34
105-OR
171
101-NO
M12A1
MH
272-BA
EUCH13A
259-BA
247
50-BJ
53-GR
52-MA
107-SA
411
106-VE
108-MA
103-VI
104-BA
120
225
433-BJ
434-OR
EE7M8A
EE7M9A
562-OR
563-BJ

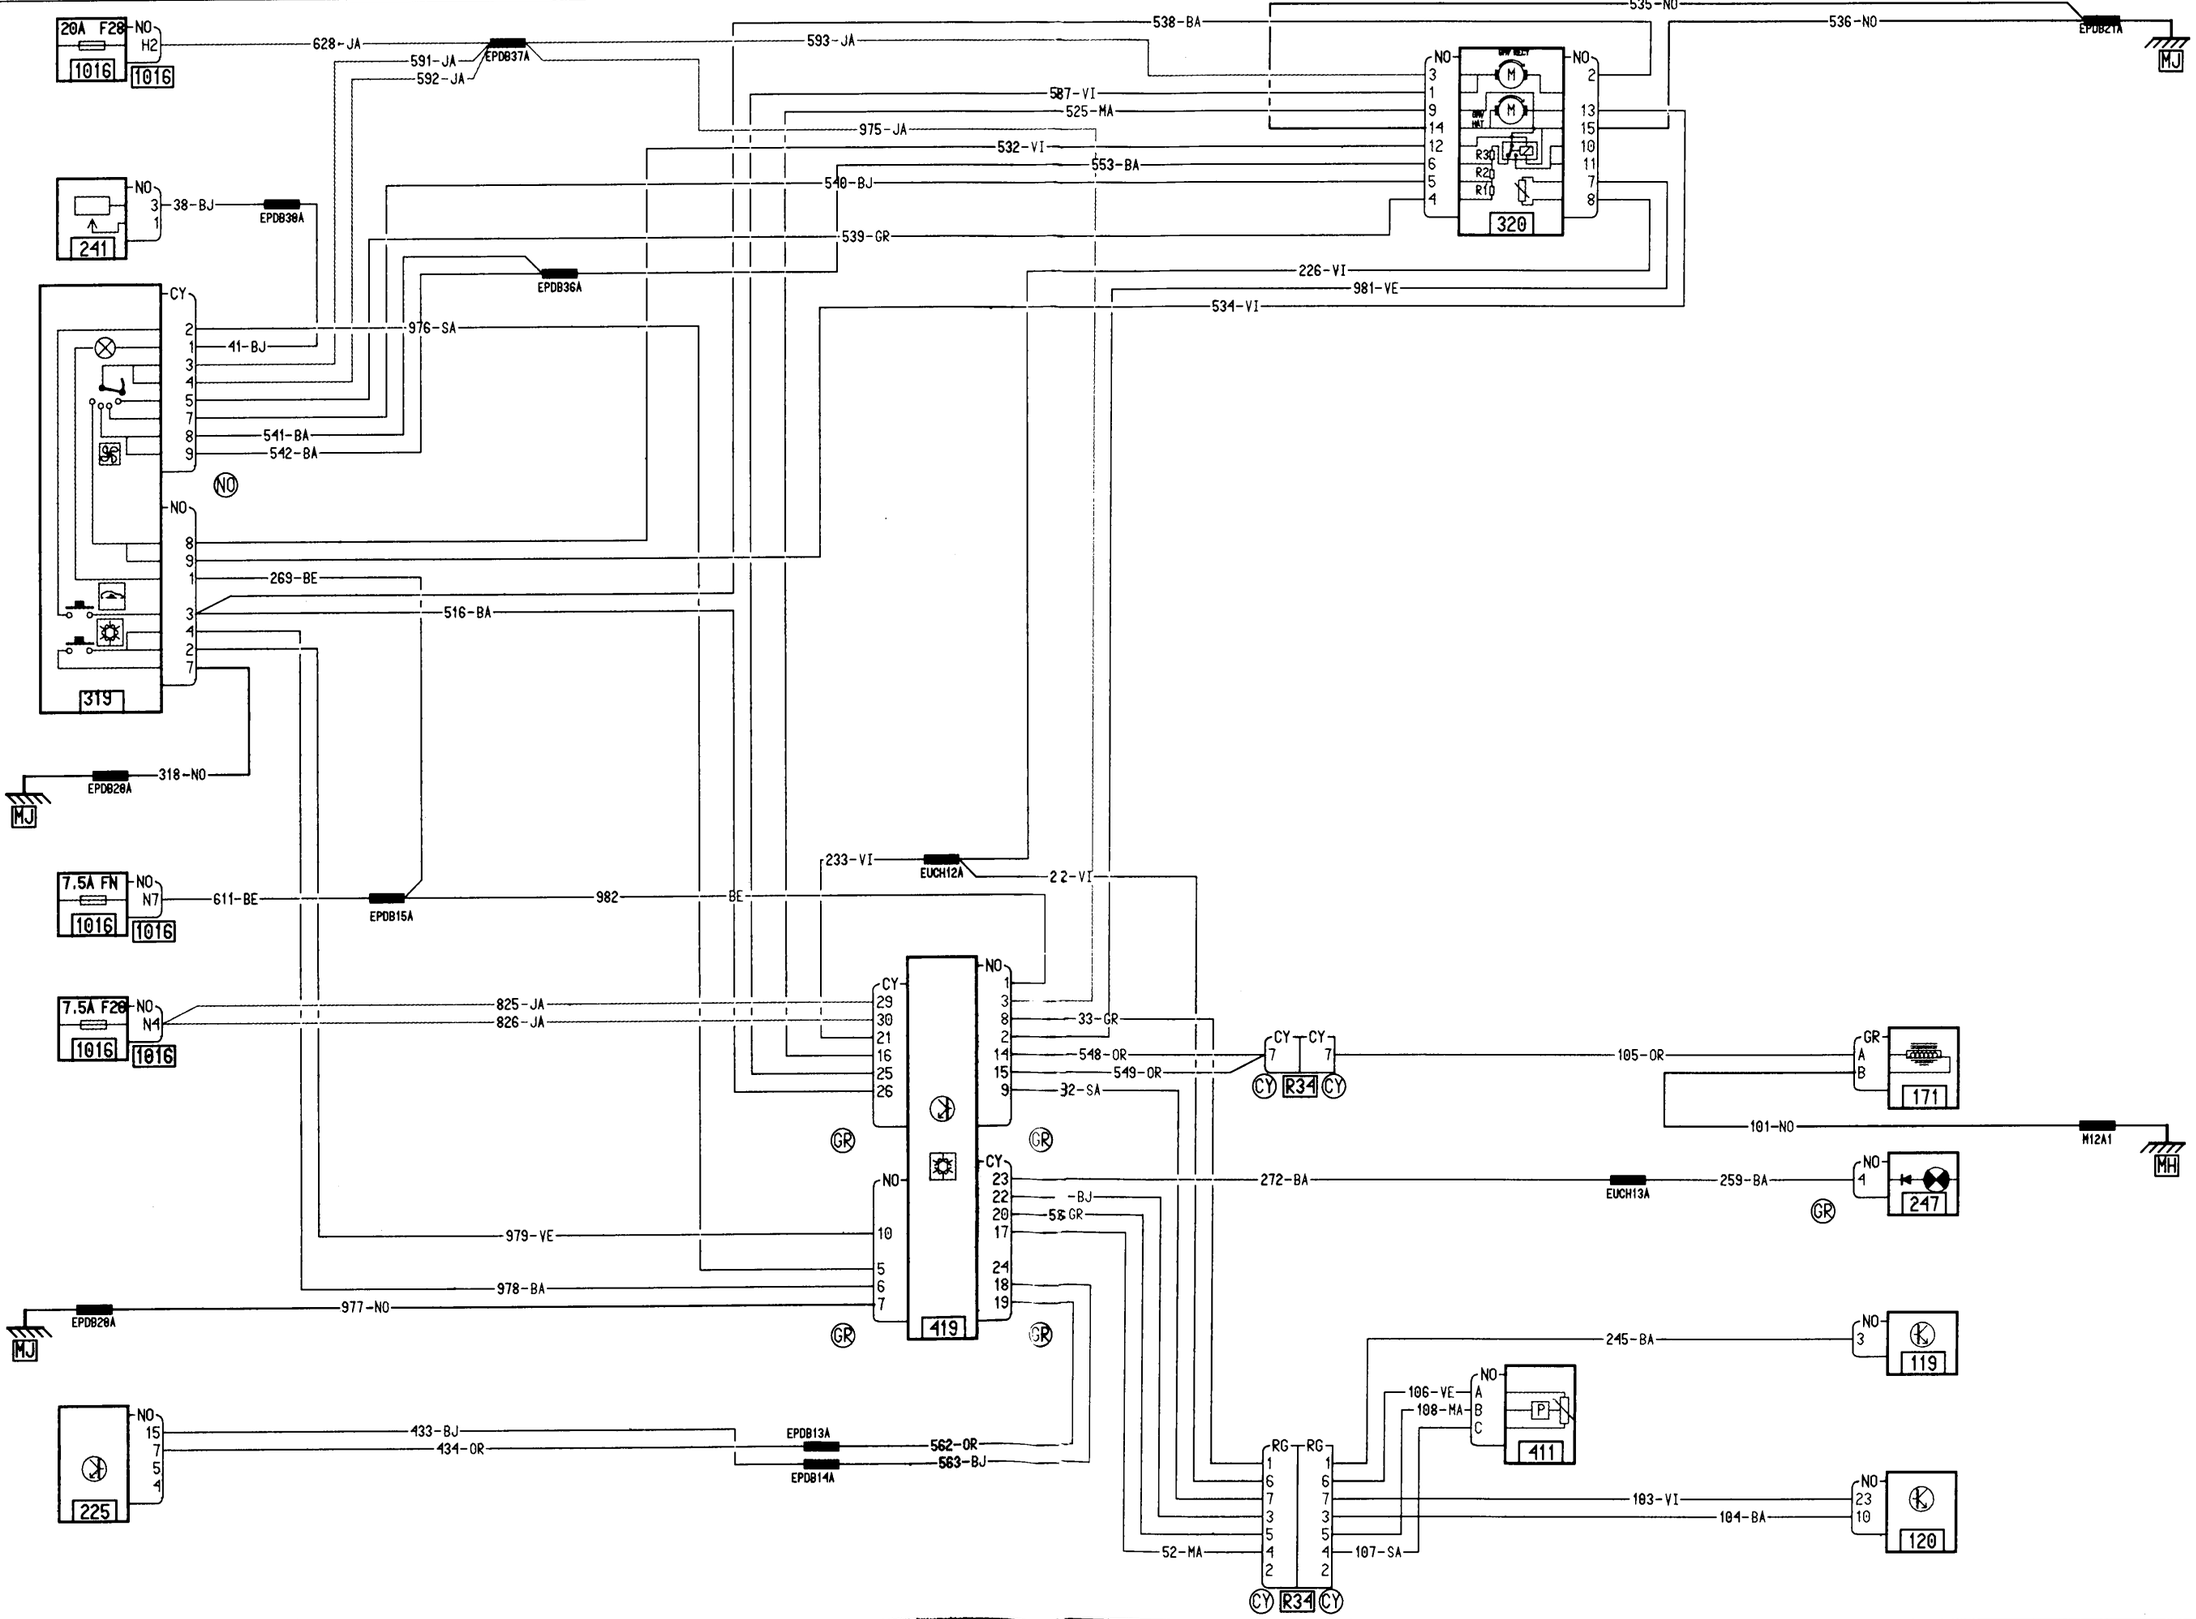
20A F28
1016
1016
628-JA
591-JA
592-JA
EPDB37A
538-BA
593-JA
535-NO
536-NO
EPDB21A
MJ
587-VI
525-MA
975-JA
532-VI
553-BA
540-BJ
539-GR
320
241
38-BJ
EPDB30A
EPDB36A
226-VI
981-VE
534-VI
319
41-BJ
976-SA
541-BA
542-BA
269-BE
516-BA
318-NO
EPDB28A
7.5A FN
611-BE
EPDB15A
982
BE
233-VI
EUCH12A
22-VI
7.5A F28
825-JA
826-JA
419
33-GR
548-OR
549-OR
32-SA
105-OR
171
101-NO
M12A1
MH
272-BA
EUCH13A
259-BA
247
979-VE
978-BA
977-NO
245-BA
119
225
433-BJ
434-OR
EPDB13A
562-OR
EPDB14A
563-BJ
411
106-VE
108-MA
103-VI
104-BA
120
52-MA
107-SA
R34

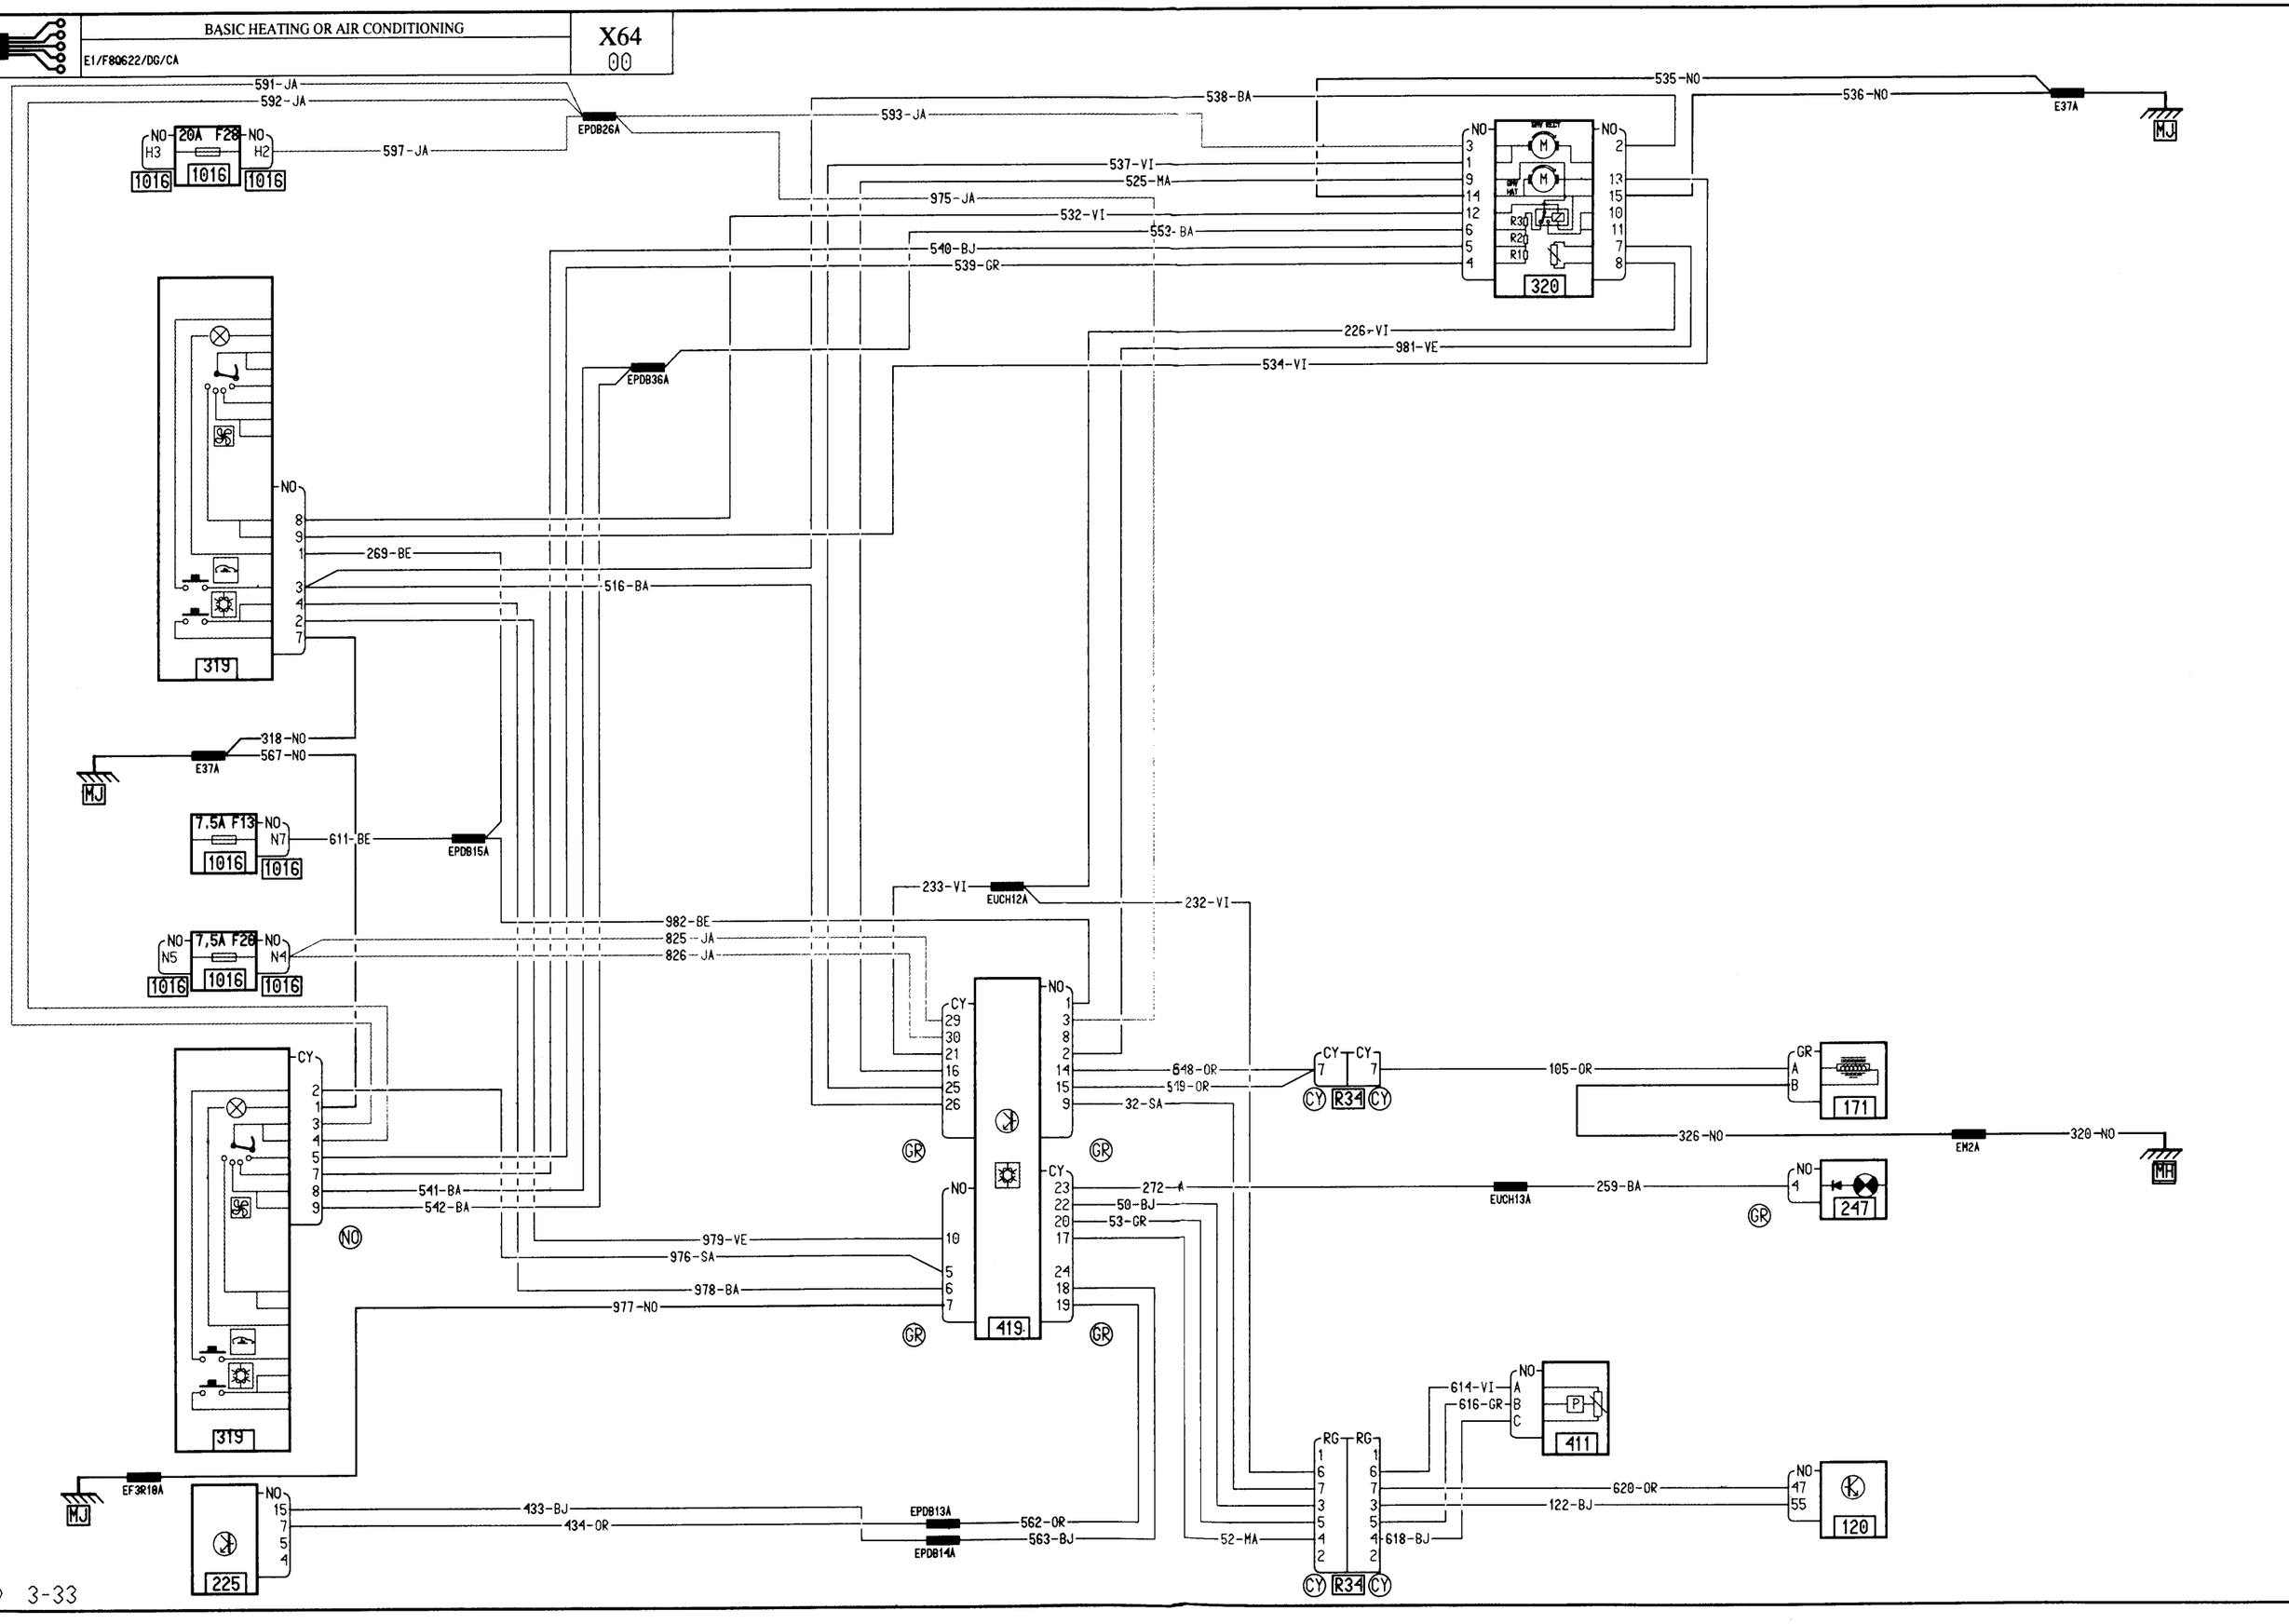
591-JA
592-JA
597-JA
593-JA
538-BA
535-NO
536-NO
E37A
MJ
20A F28
1016
EPDB26A
537-VI
525-MA
975-JA
532-VI
553-BA
540-BJ
539-GR
320
R30
R20
R10
226-VI
981-VE
534-VI
EPDB36A
319
269-BE
516-BA
318-NO
567-NO
7.5A F13
611-BE
EPDB15A
233-VI
EUCH12A
232-VI
982-BE
825-JA
826-JA
7,5A F28
419
541-BA
542-BA
979-VE
976-SA
978-BA
977-NO
648-OR
519-OR
32-SA
R34
105-OR
171
326-NO
EM2A
320-NO
MH
272-A
EUCH13A
259-BA
247
50-BJ
53-GR
52-MA
614-VI
616-GR
411
620-OR
122-BJ
618-BJ
120
EF3R10A
433-BJ
434-OR
EPDB13A
562-OR
EPDB14A
563-BJ
225

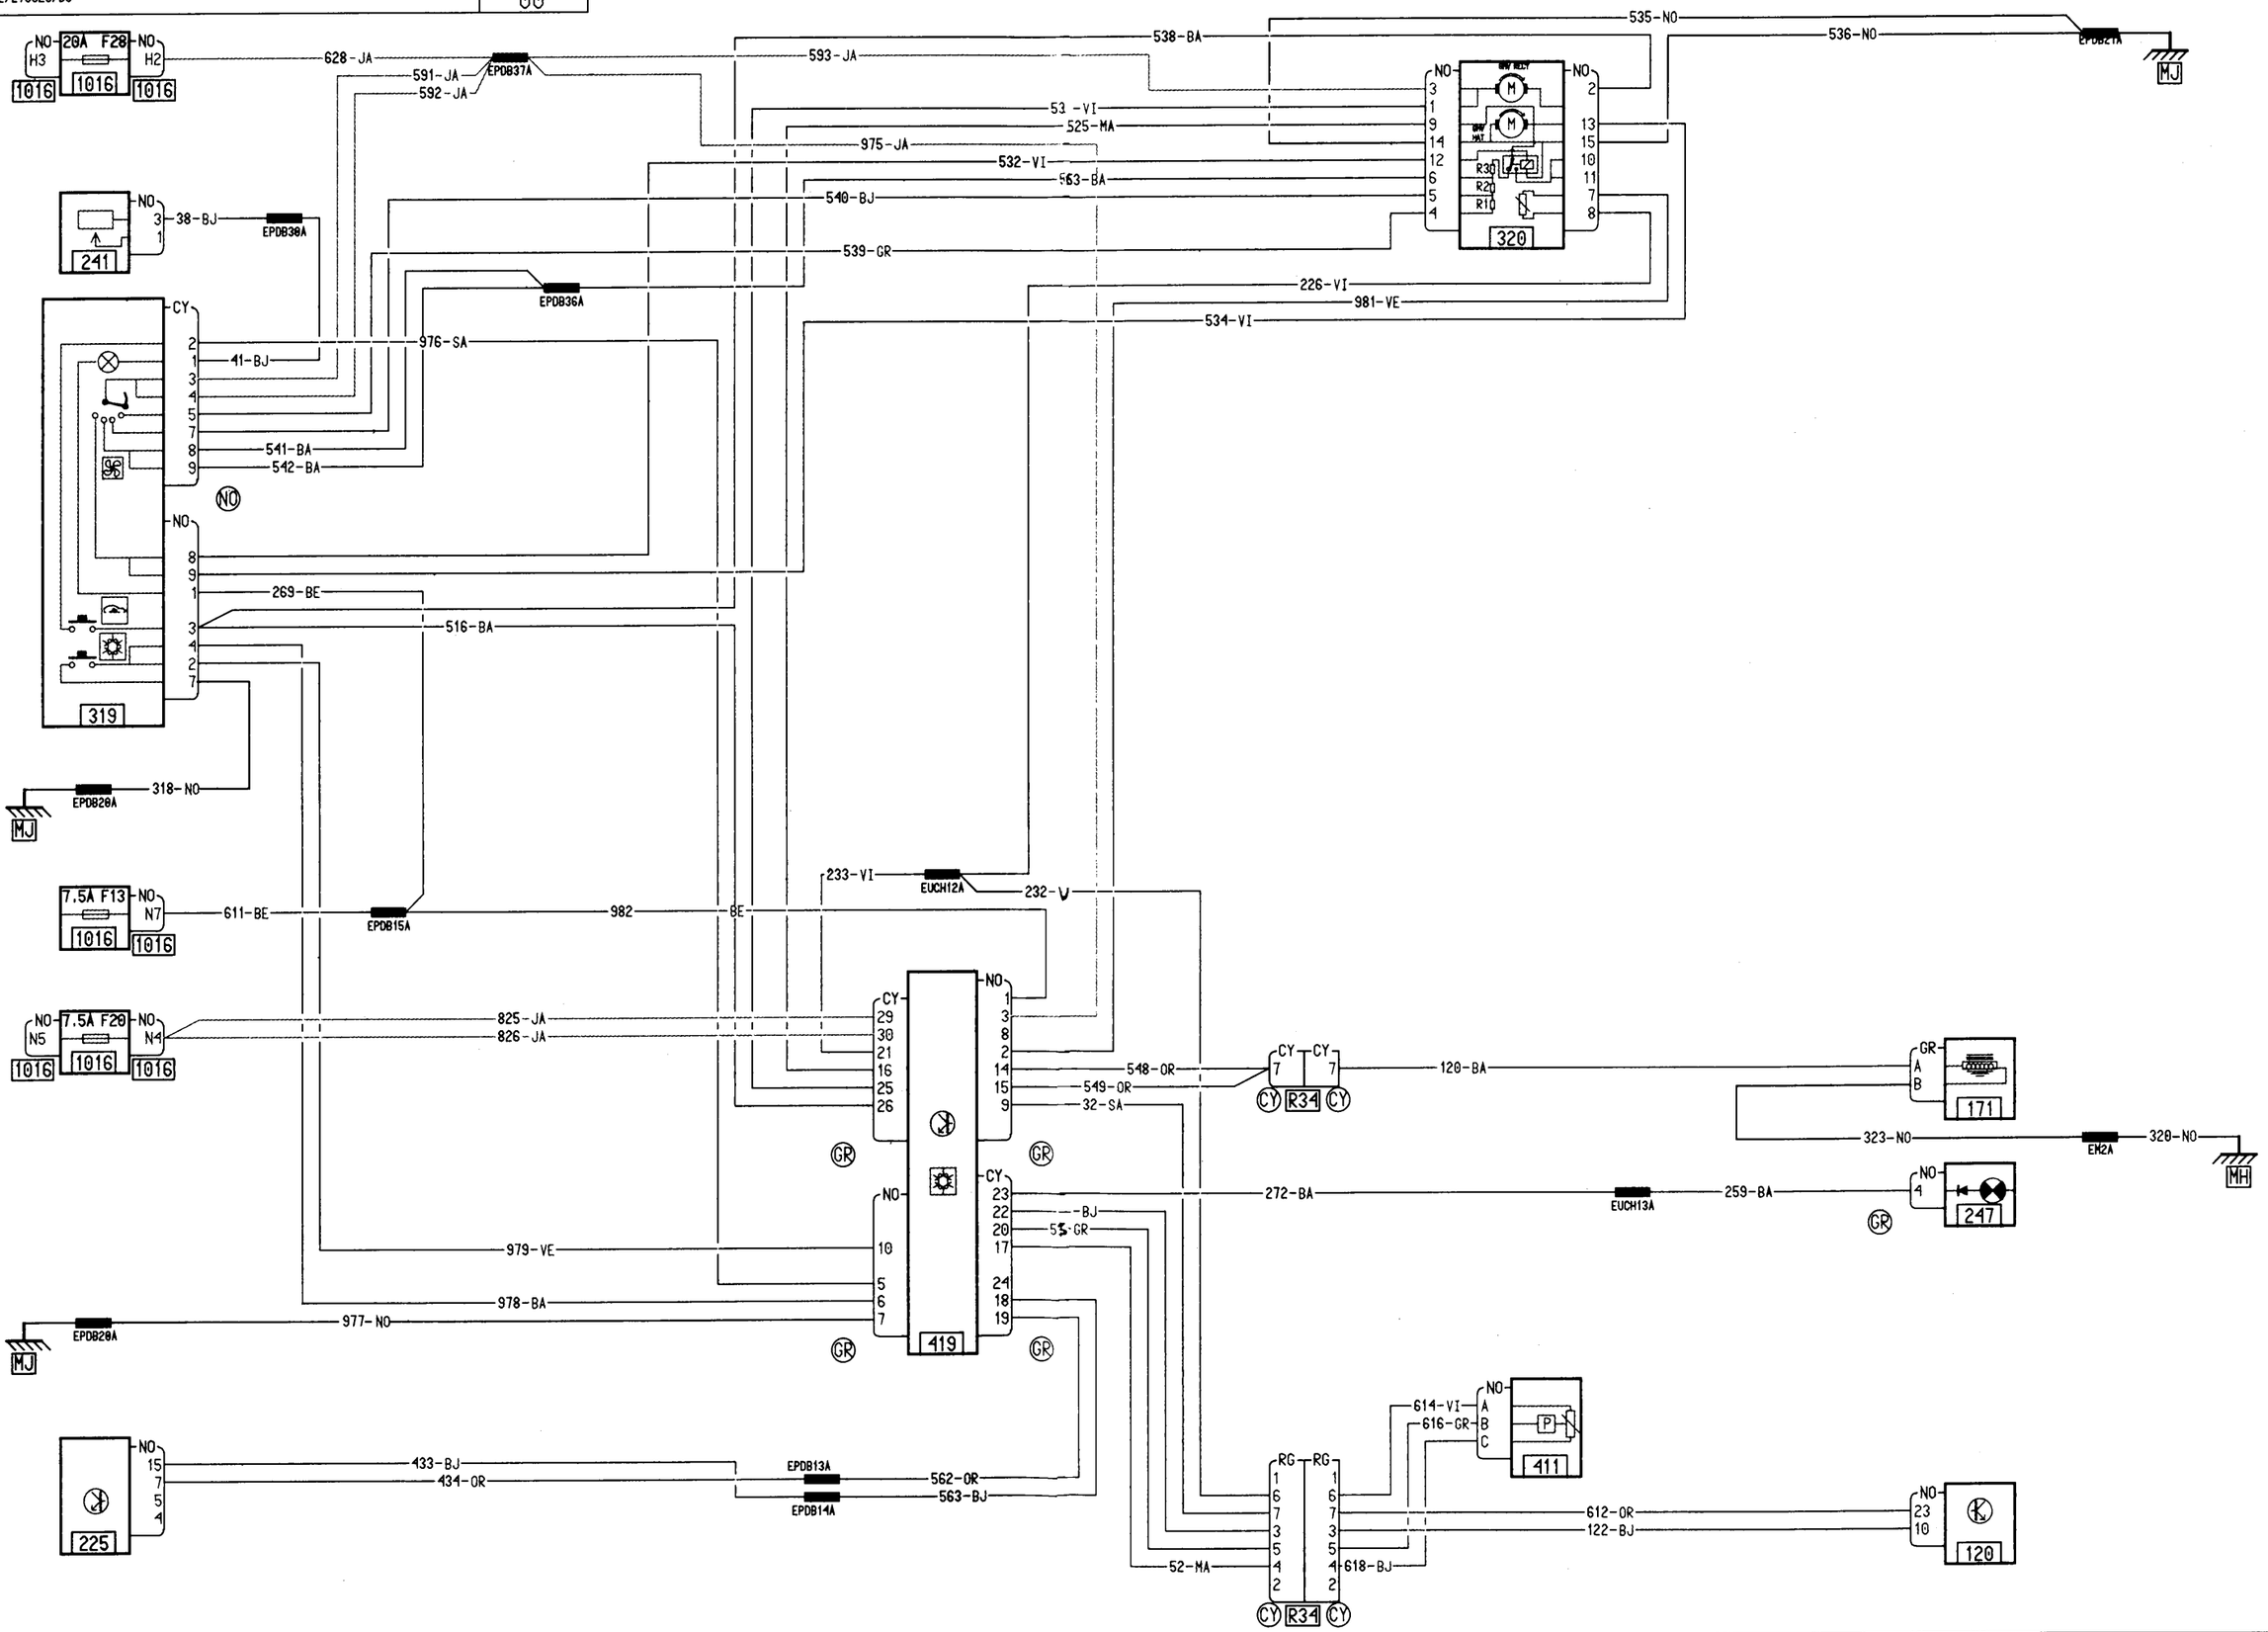
NO 20A F28 NO
H3 H2
1016 1016 1016
628-JA
591-JA
592-JA
EPDB37A
593-JA
538-BA
535-NO
536-NO
EPDB21A
MJ
53-VI
525-MA
975-JA
532-VI
563-BA
540-BJ
539-GR
320
241
38-BJ
EPDB38A
EPDB36A
226-VI
981-VE
534-VI
CY
976-SA
41-BJ
541-BA
542-BA
NO
269-BE
516-BA
319
318-NO
EPDB20A
7.5A F13
611-BE
EPDB15A
982
BE
233-VI
EUCH12A
232-V
7.5A F20
825-JA
826-JA
548-OR
549-OR
32-SA
120-BA
R34
171
323-NO
EM2A
320-NO
MH
272-BA
EUCH13A
259-BA
247
979-VE
978-BA
977-NO
419
52-MA
614-VI
616-GR
411
612-OR
122-BJ
618-BJ
120
433-BJ
434-OR
EPDB13A
EPDB14A
562-OR
563-BJ
225

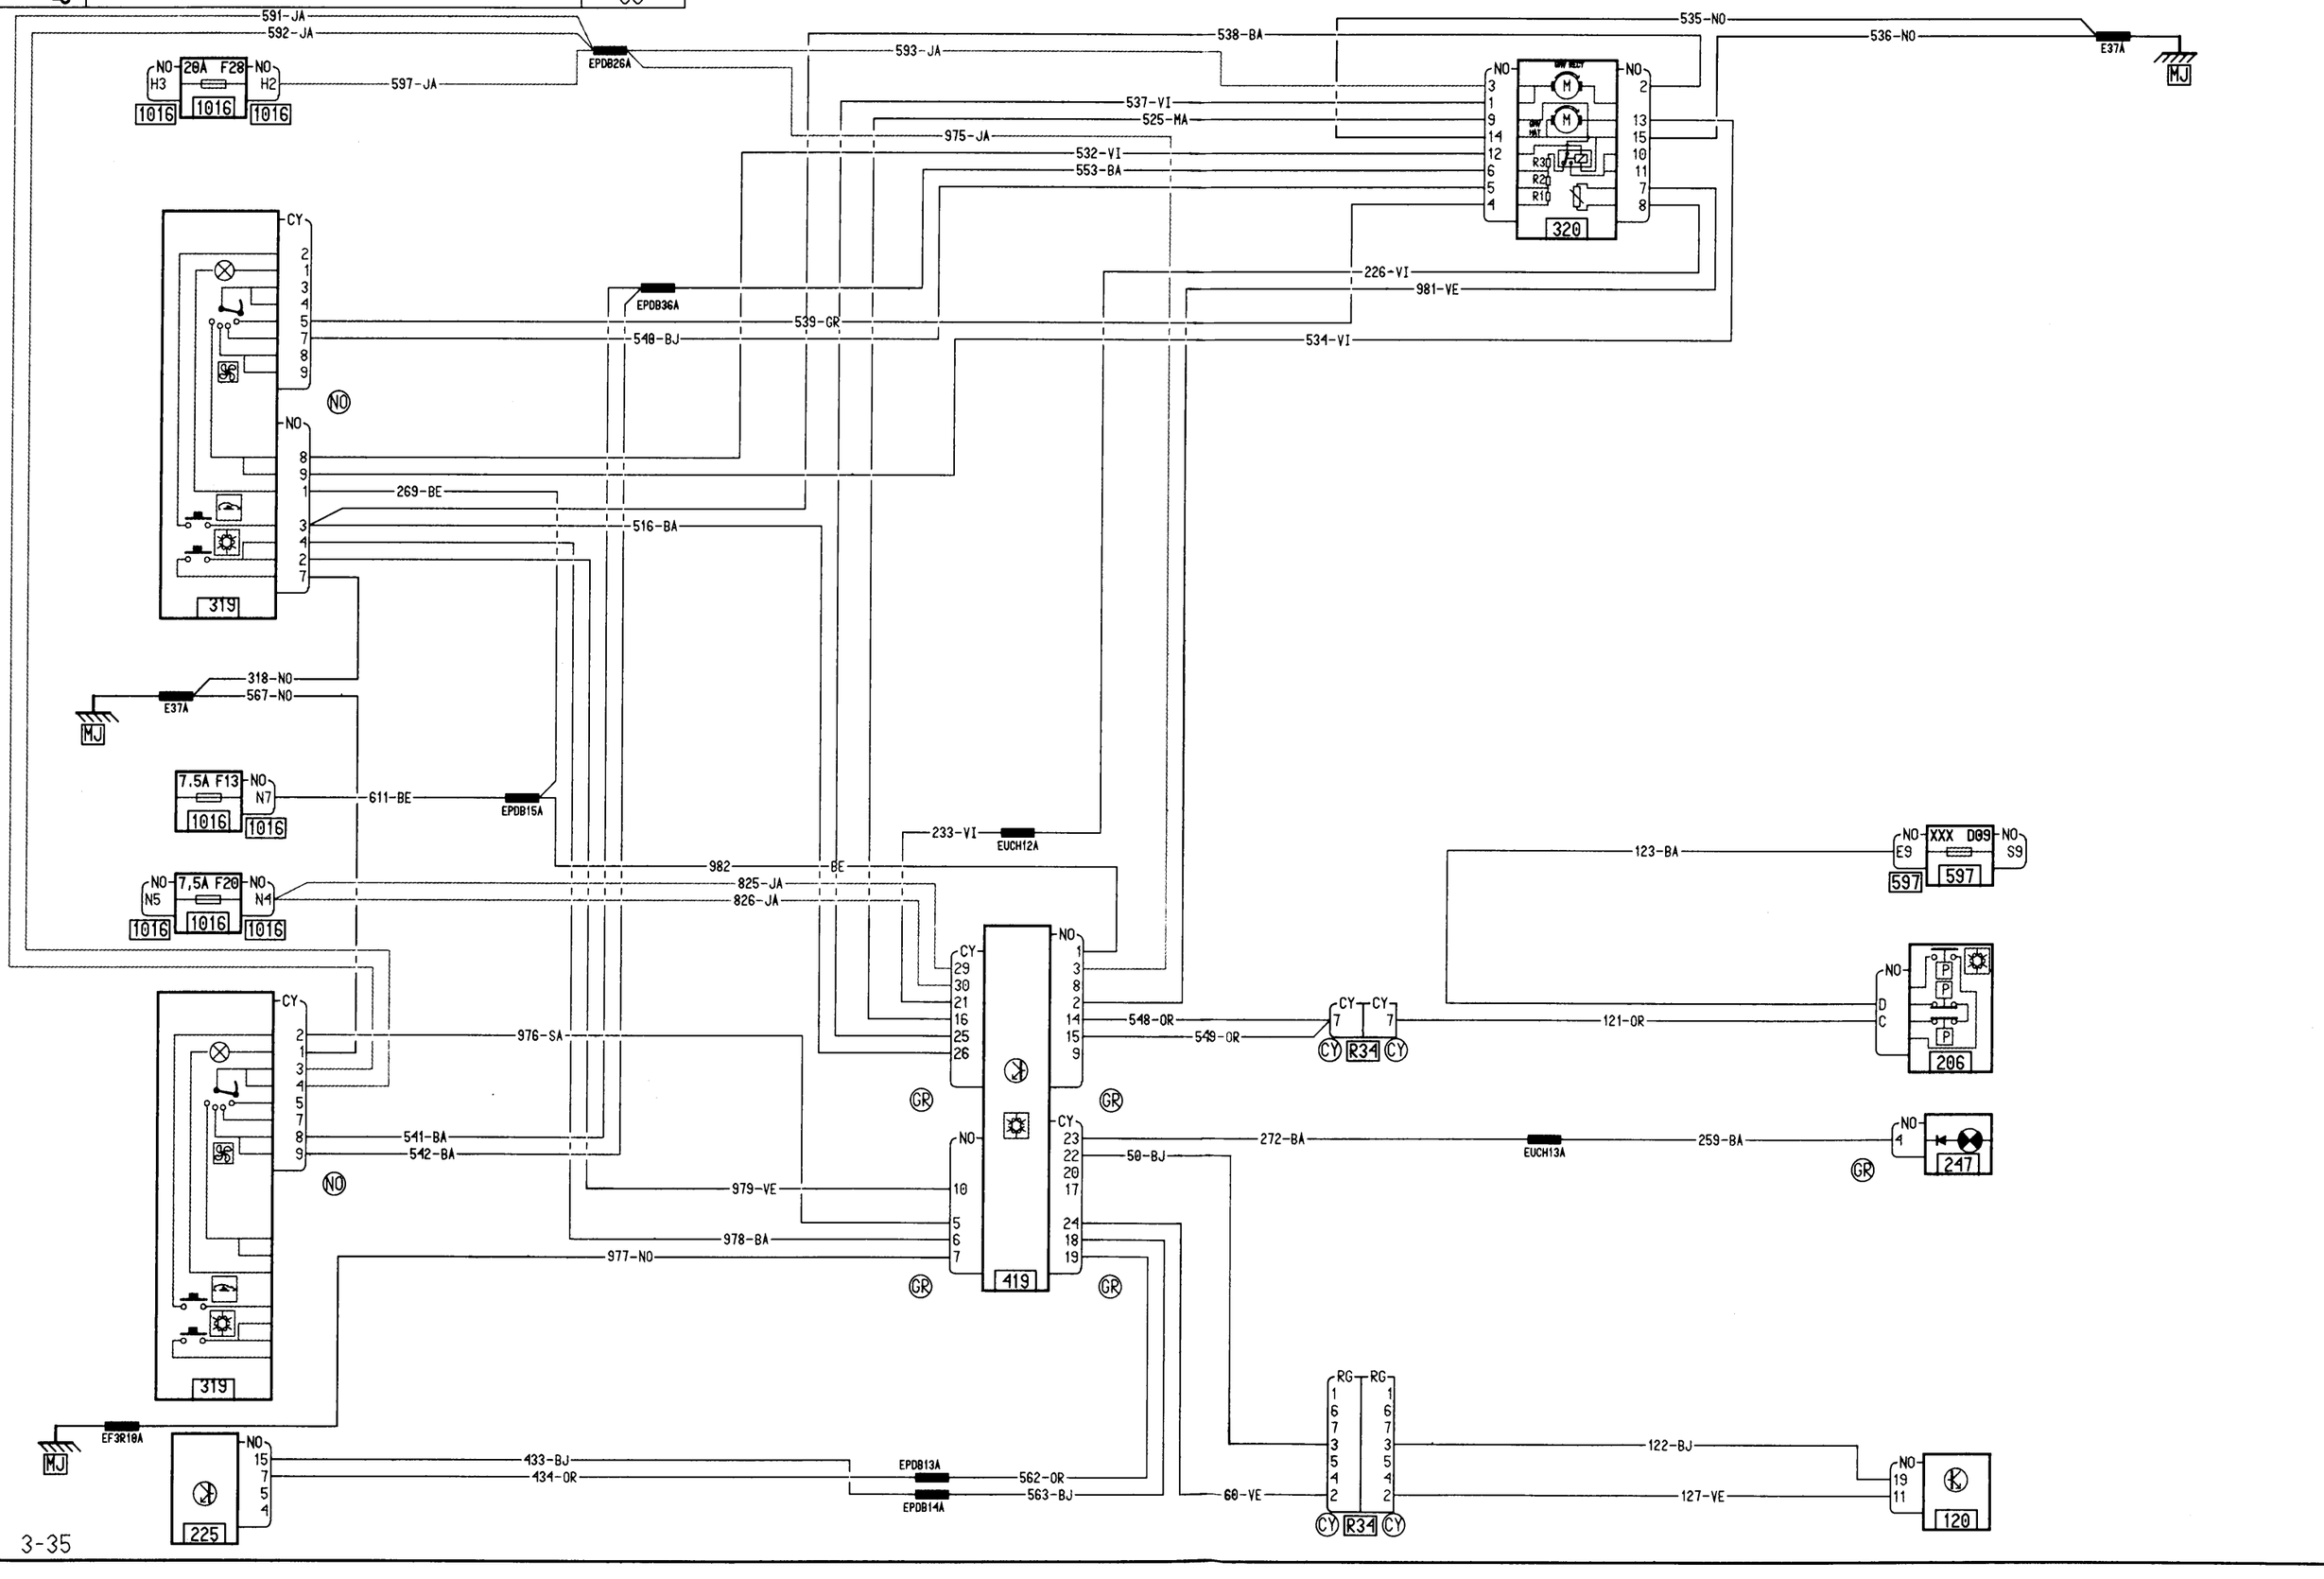
591-JA
592-JA
597-JA
593-JA
538-BA
535-NO
536-NO
537-VI
525-MA
975-JA
532-VI
553-BA
226-VI
981-VE
539-GR
548-BJ
534-VI
269-BE
516-BA
318-NO
567-NO
611-BE
982
825-JA
826-JA
233-VI
976-SA
541-BA
542-BA
979-VE
978-BA
977-NO
548-OR
549-OR
123-BA
121-OR
272-BA
259-BA
50-BJ
433-BJ
434-OR
562-OR
563-BJ
68-VE
122-BJ
127-VE
EPDB26A
EPDB36A
EPDB15A
EUCH12A
EUCH13A
EPDB13A
EPDB14A
EF3R10A
E37A
MJ
1016
320
319
419
597
206
247
120
225
R34
GR
NO
CY
RG

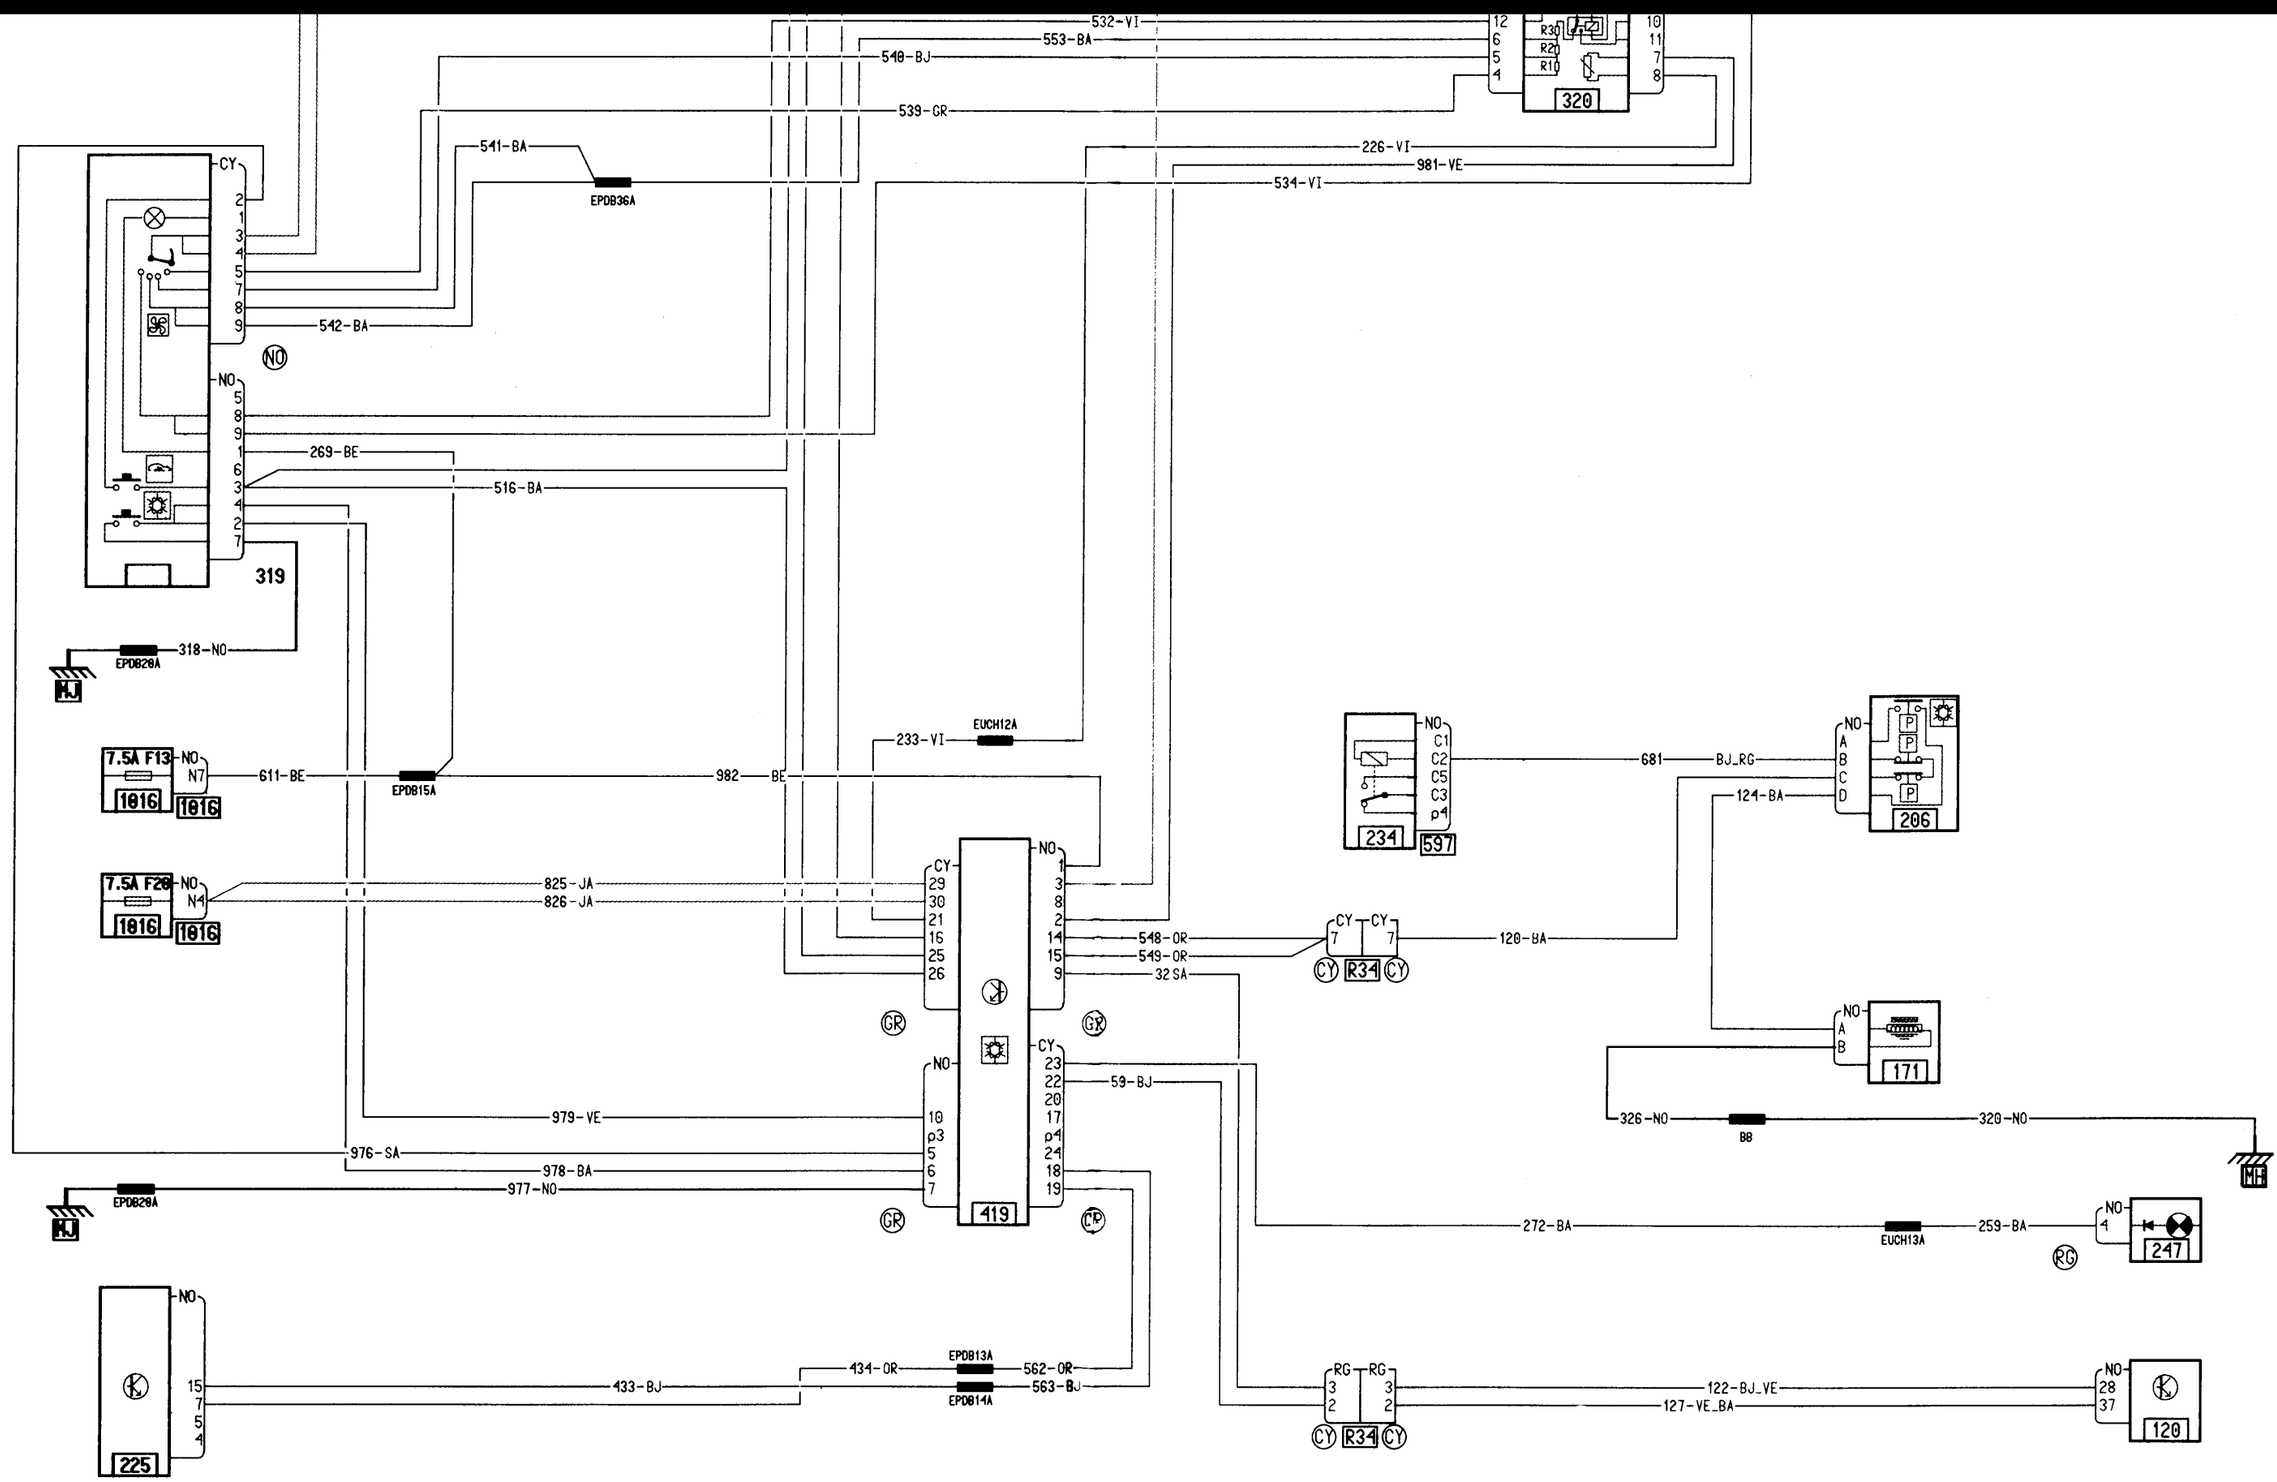
532-VI
553-BA
540-BJ
539-GR
541-BA
EPDB36A
542-BA
226-VI
981-VE
534-VI
320
R30
R20
R10
CY
NO
319
269-BE
516-BA
318-NO
EPDB20A
MJ
7.5A F13
1016
611-BE
EPDB15A
982-BE
EUCH12A
233-VI
7.5A F26
825-JA
826-JA
419
548-OR
549-OR
32 SA
59-BJ
979-VE
976-SA
978-BA
977-NO
234
597
681
BJ_RG
124-BA
206
171
326-NO
BB
320-NO
MH
272-BA
EUCH13A
259-BA
247
RG
120-BA
225
EPDB13A
434-OR
562-OR
433-BJ
563-BJ
EPDB14A
122-BJ_VE
127-VE_BA
120

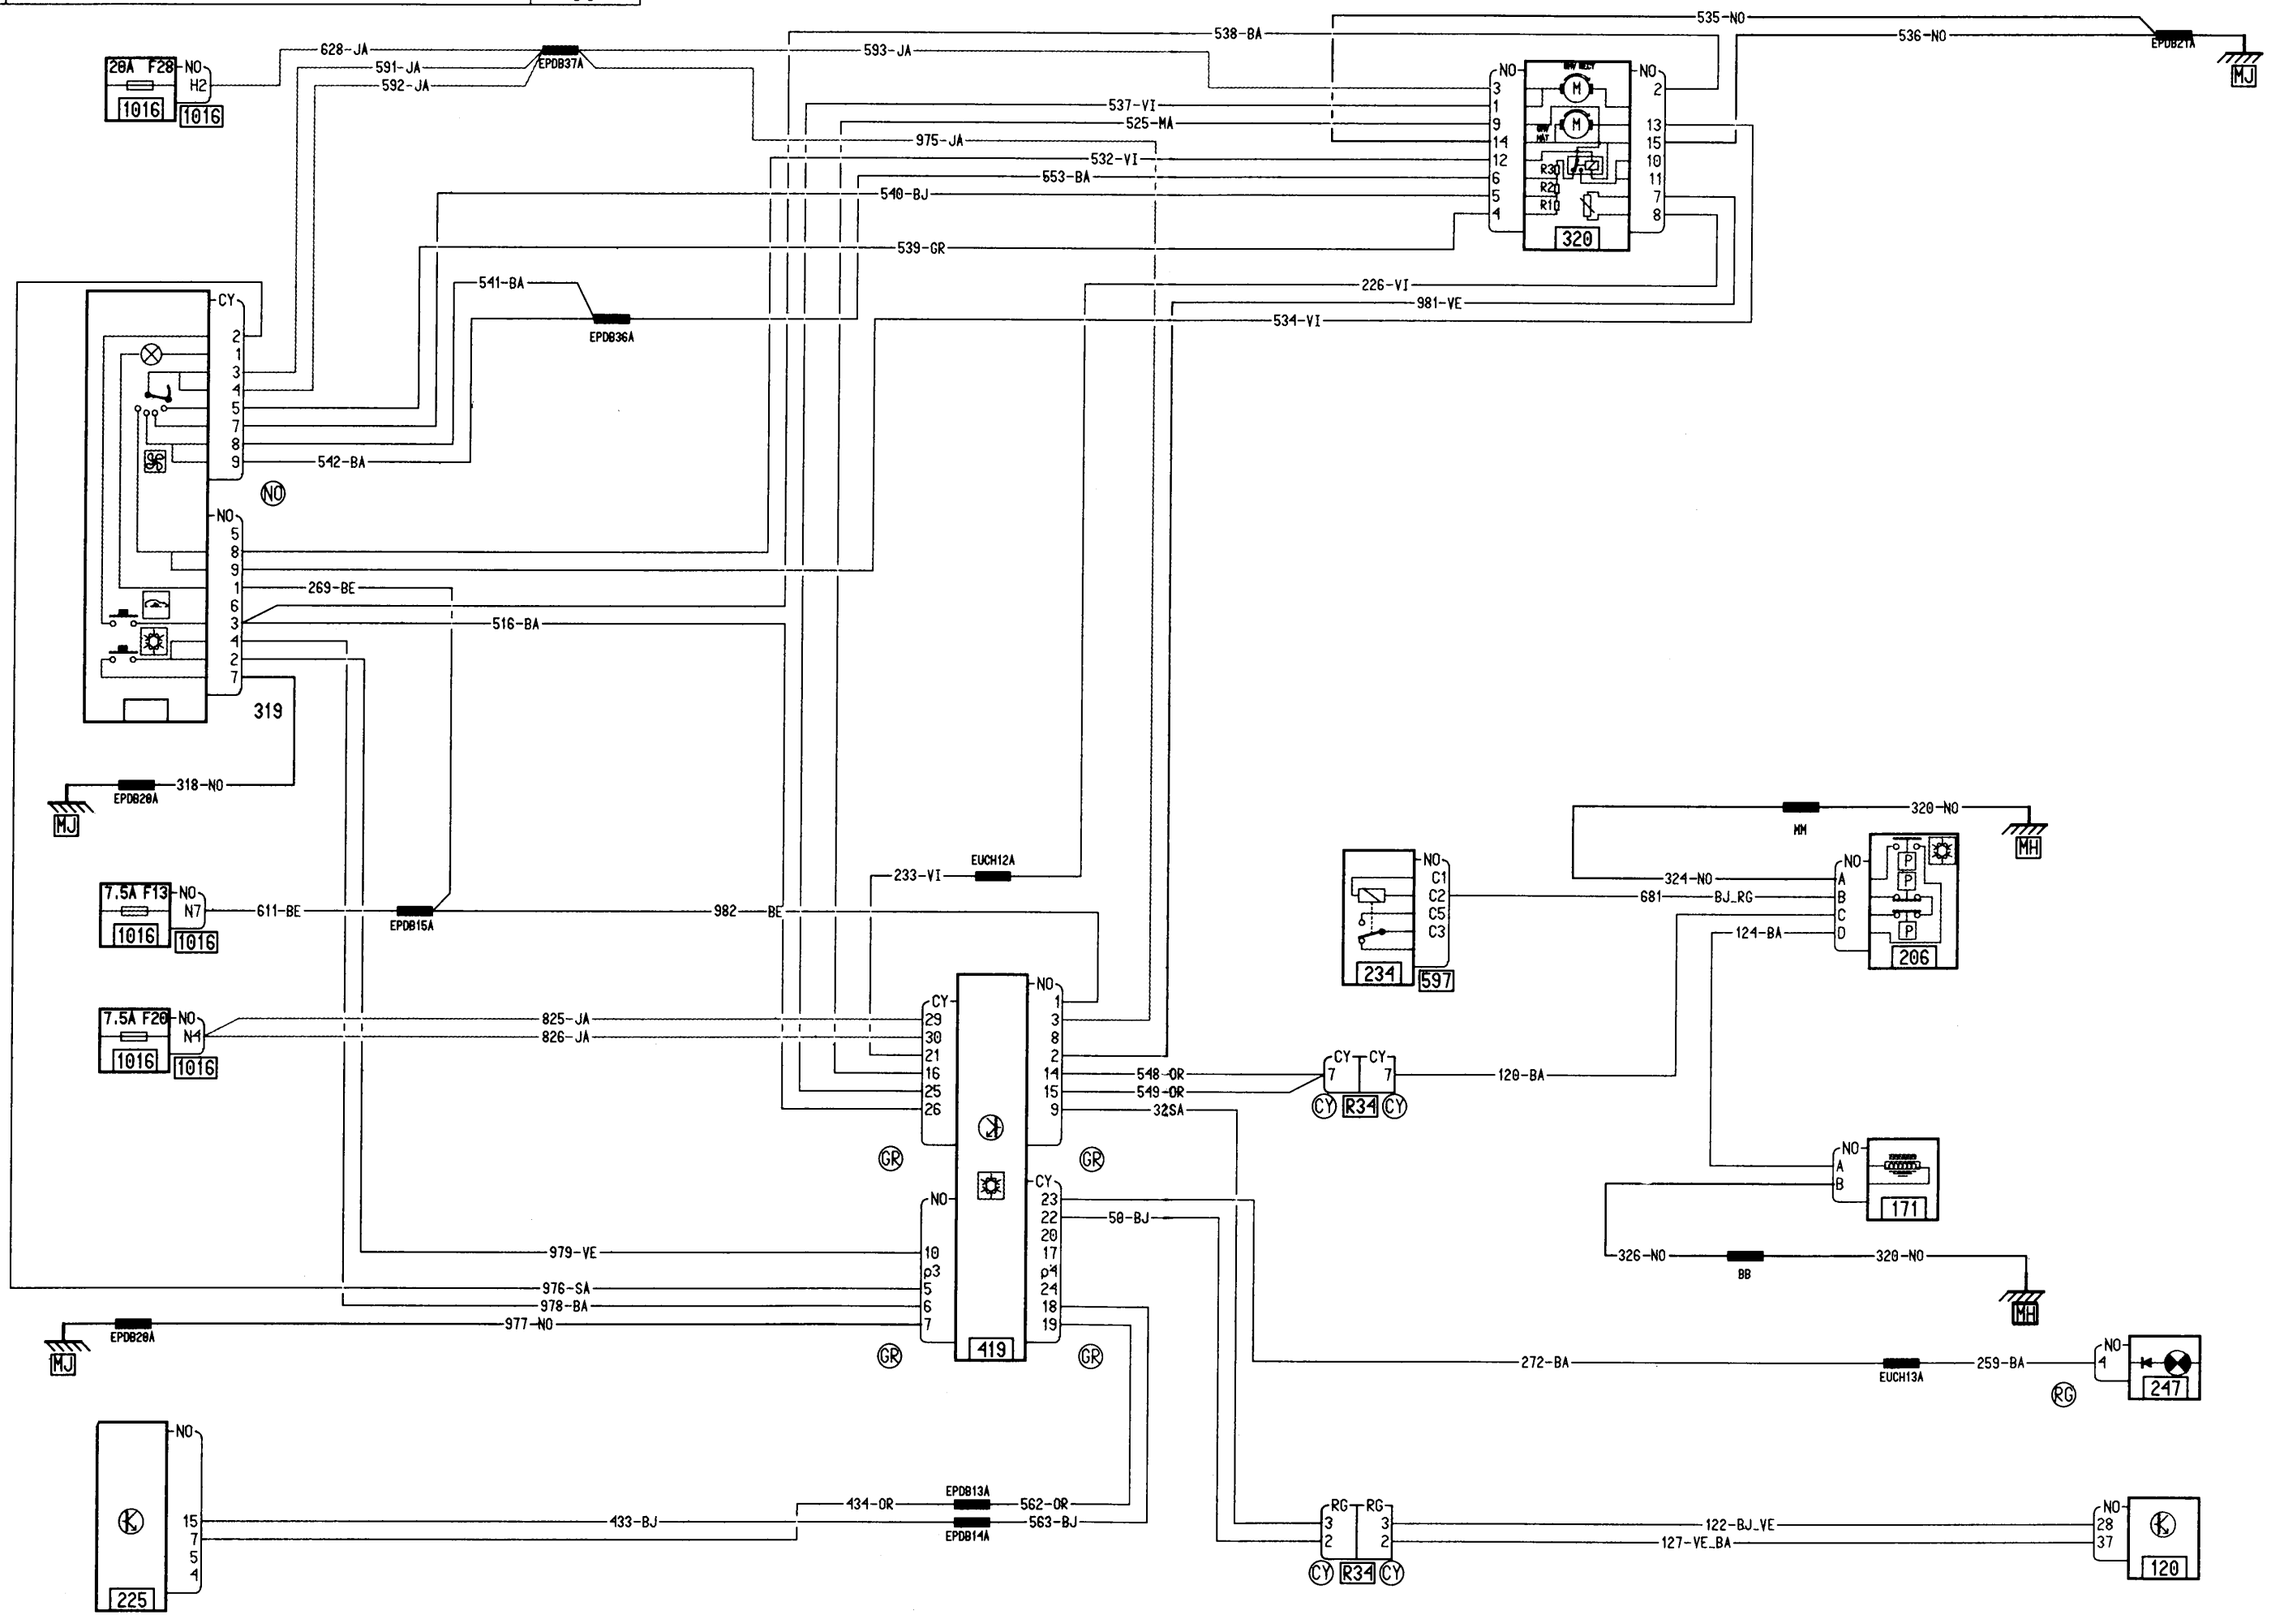
20A F28
1016
H2
628-JA
591-JA
592-JA
EPDB37A
538-BA
593-JA
535-NO
536-NO
EPDB21A
MJ
537-VI
525-MA
975-JA
532-VI
553-BA
540-BJ
539-GR
541-BA
EPDB36A
226-VI
981-VE
534-VI
320
R30
R20
R10
CY
542-BA
269-BE
516-BA
319
318-NO
EPDB20A
7.5A F13
611-BE
EPDB15A
982-BE
EUCH12A
233-VI
7.5A F26
825-JA
826-JA
548-OR
549-OR
32SA
419
979-VE
976-SA
978-BA
977-NO
50-BJ
234
597
320-NO
MH
324-NO
681-BJ_RG
124-BA
206
120-BA
171
326-NO
328-NO
BB
272-BA
259-BA
EUCH13A
247
225
433-BJ
434-OR
562-OR
563-BJ
EPDB13A
EPDB14A
122-BJ_VE
127-VE_BA
120

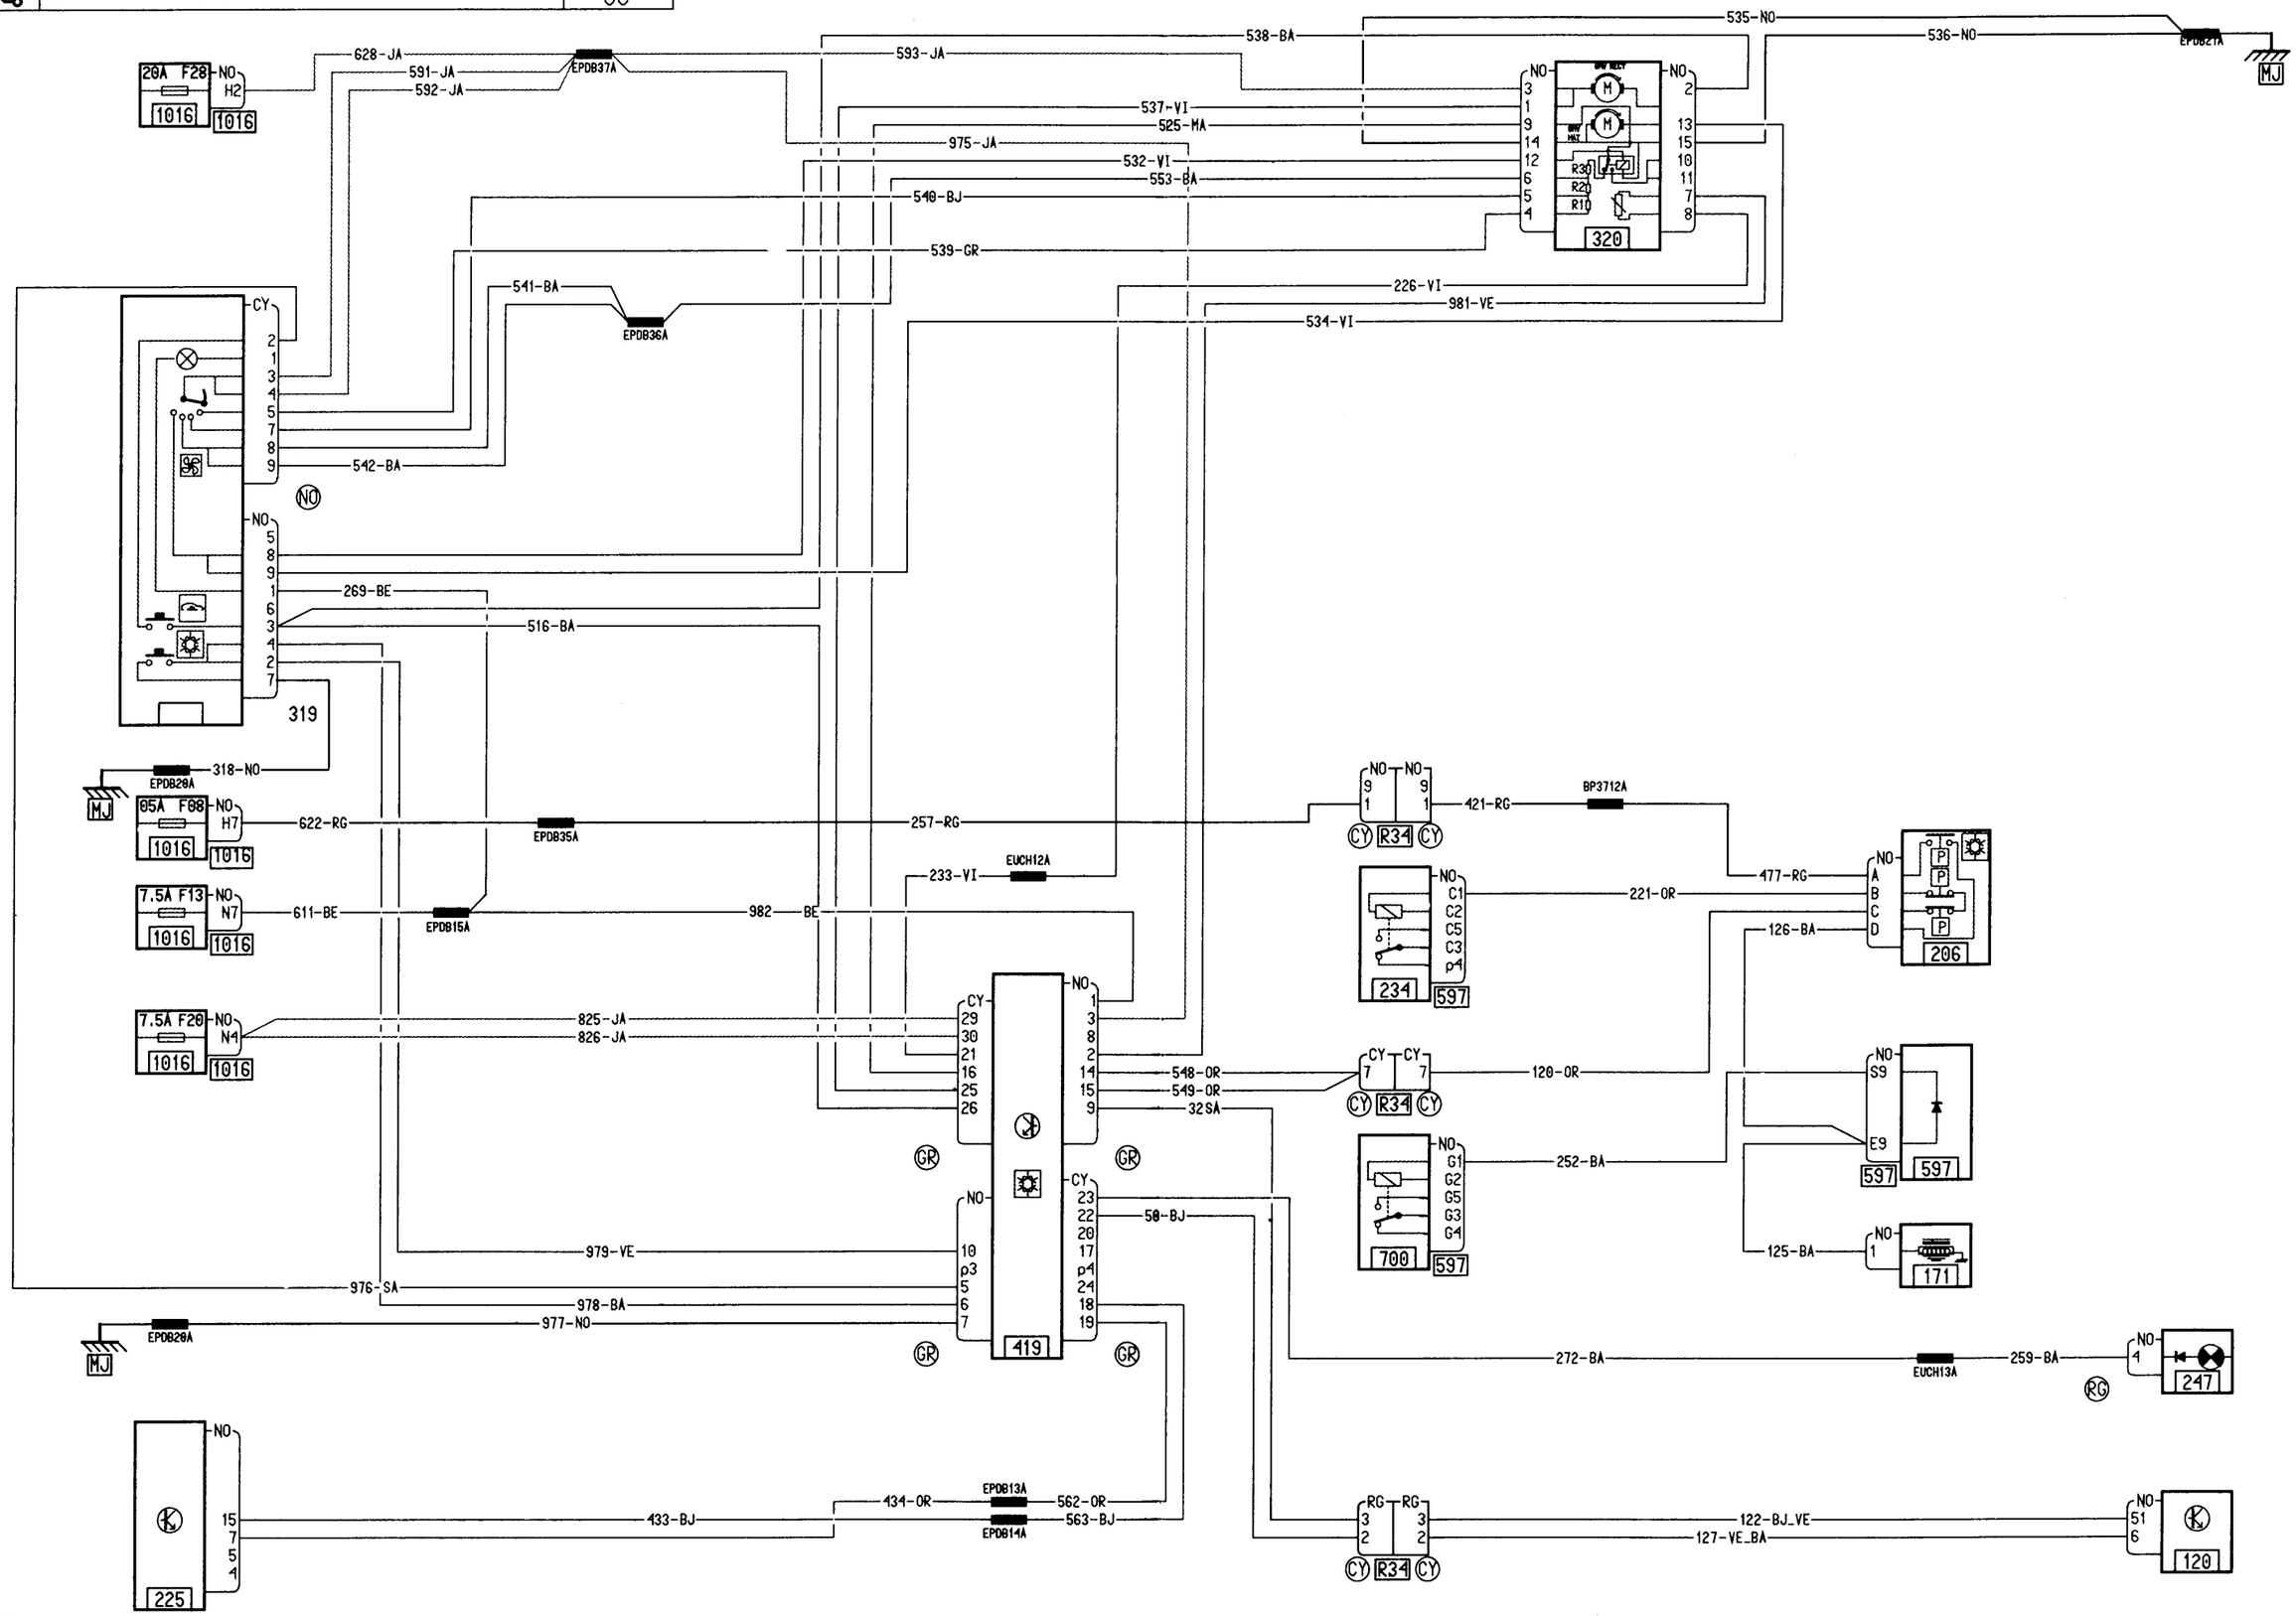
20A F28
1016
H2
628-JA
591-JA
592-JA
EPDB37A
538-BA
593-JA
535-NO
536-NO
EPDB21A
MJ
537-VI
525-MA
975-JA
532-VI
553-BA
540-BJ
539-GR
320
R30
R20
R10
541-BA
EPDB36A
226-VI
981-VE
534-VI
CY
542-BA
319
269-BE
516-BA
318-NO
EPDB20A
05A F08
H7
622-RG
EPDB35A
257-RG
421-RG
BP3712A
EUCH12A
233-VI
7.5A F13
N7
611-BE
EPDB15A
982-BE
234
597
206
477-RG
221-OR
126-BA
7.5A F20
N4
825-JA
826-JA
548-OR
549-OR
32SA
120-OR
700
252-BA
S9
E9
125-BA
171
419
979-VE
976-SA
978-BA
977-NO
50-BJ
272-BA
EUCH13A
259-BA
247
RG
EPDB13A
EPDB14A
434-OR
562-OR
433-BJ
563-BJ
122-BJ_VE
127-VE_BA
225
120

CHARGE CIRCUIT

L64/F3R796/CA/TURKEY/BVM5

X64
00

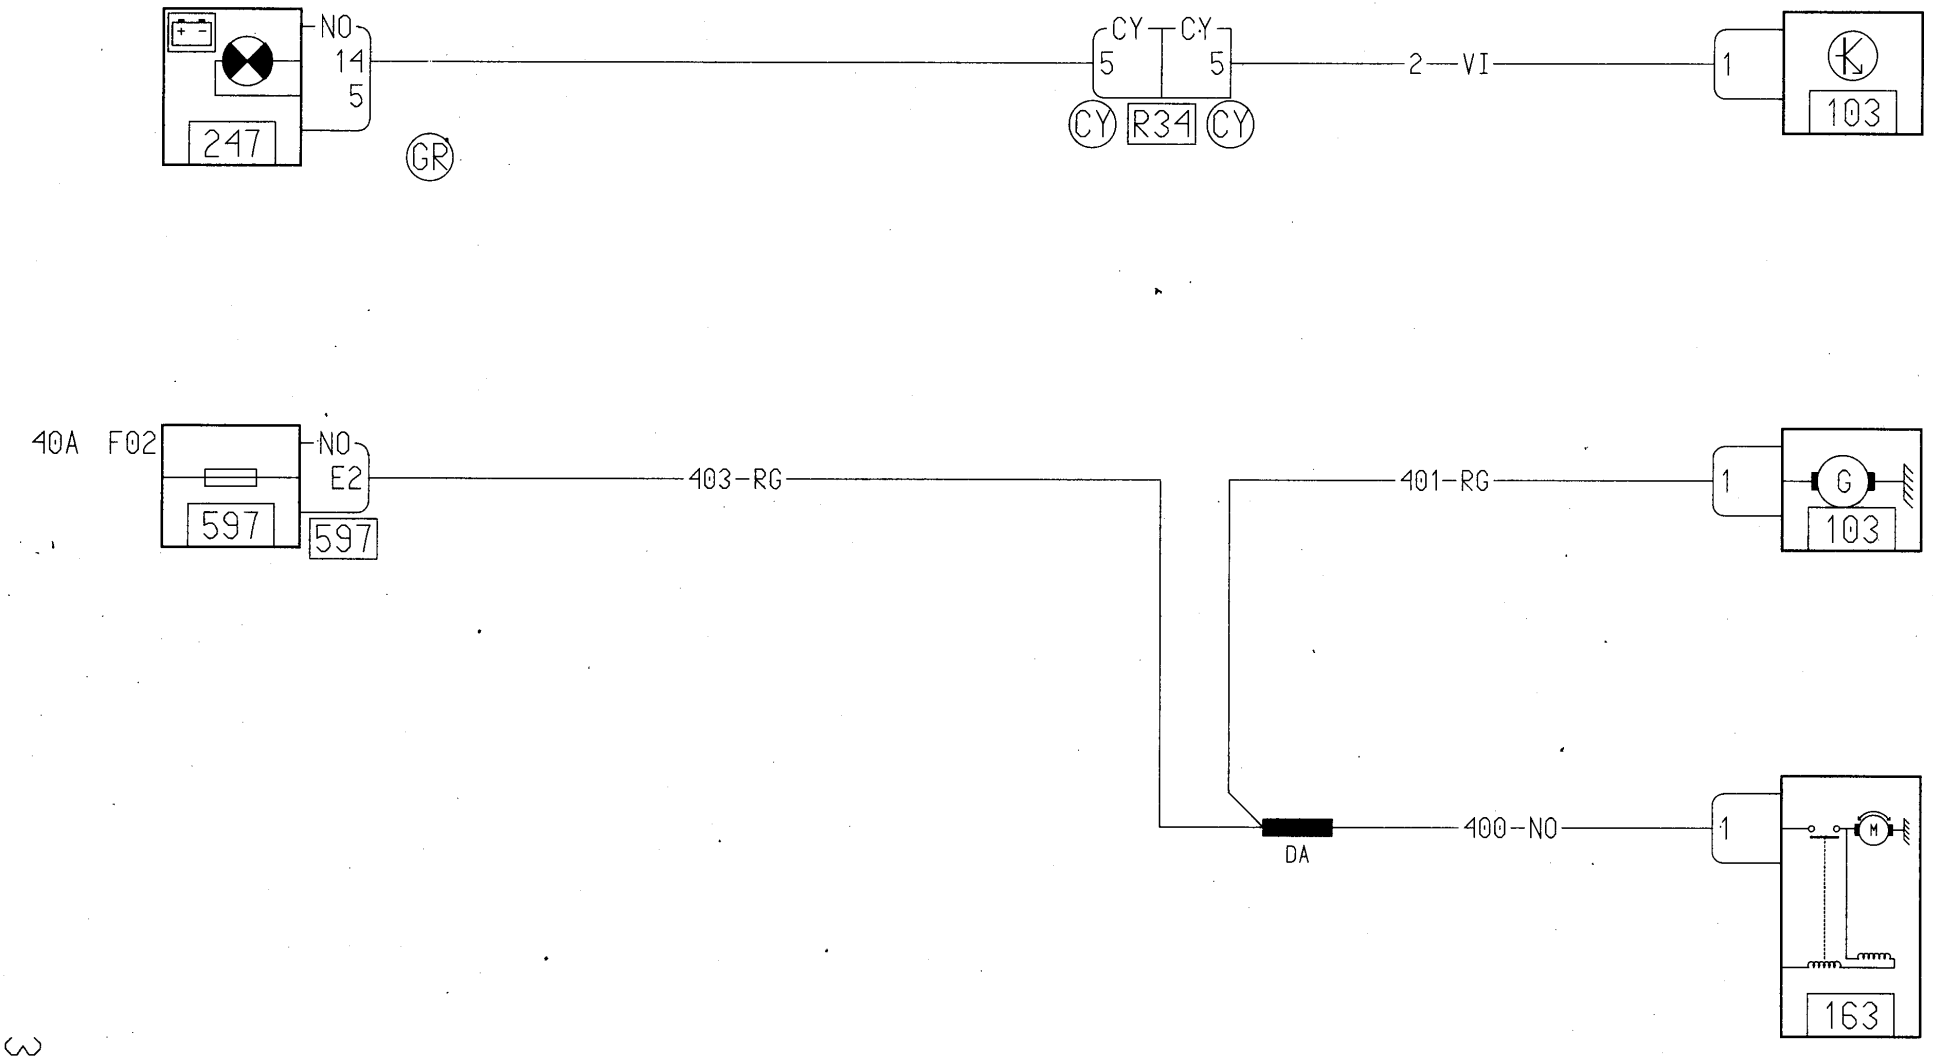

CHARGE CIRCUIT

L64/F3R796/CHAUFO/TURKEY/BVM5

X64
00

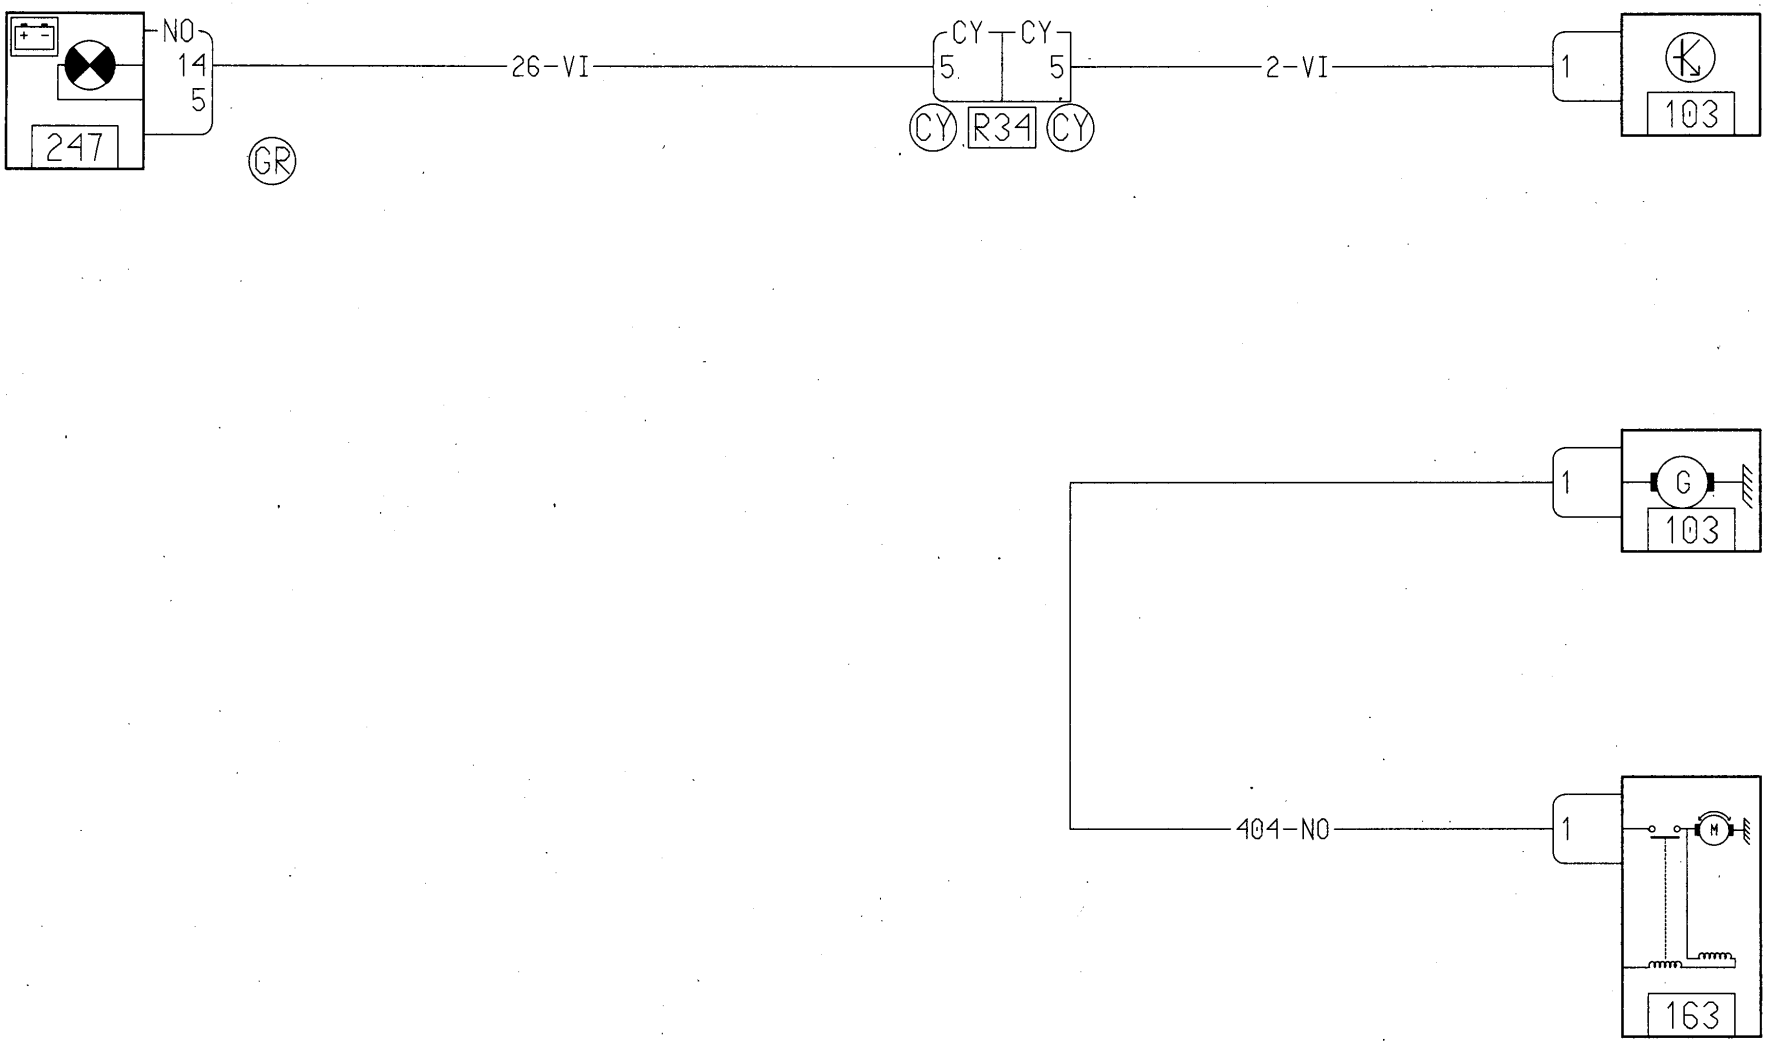

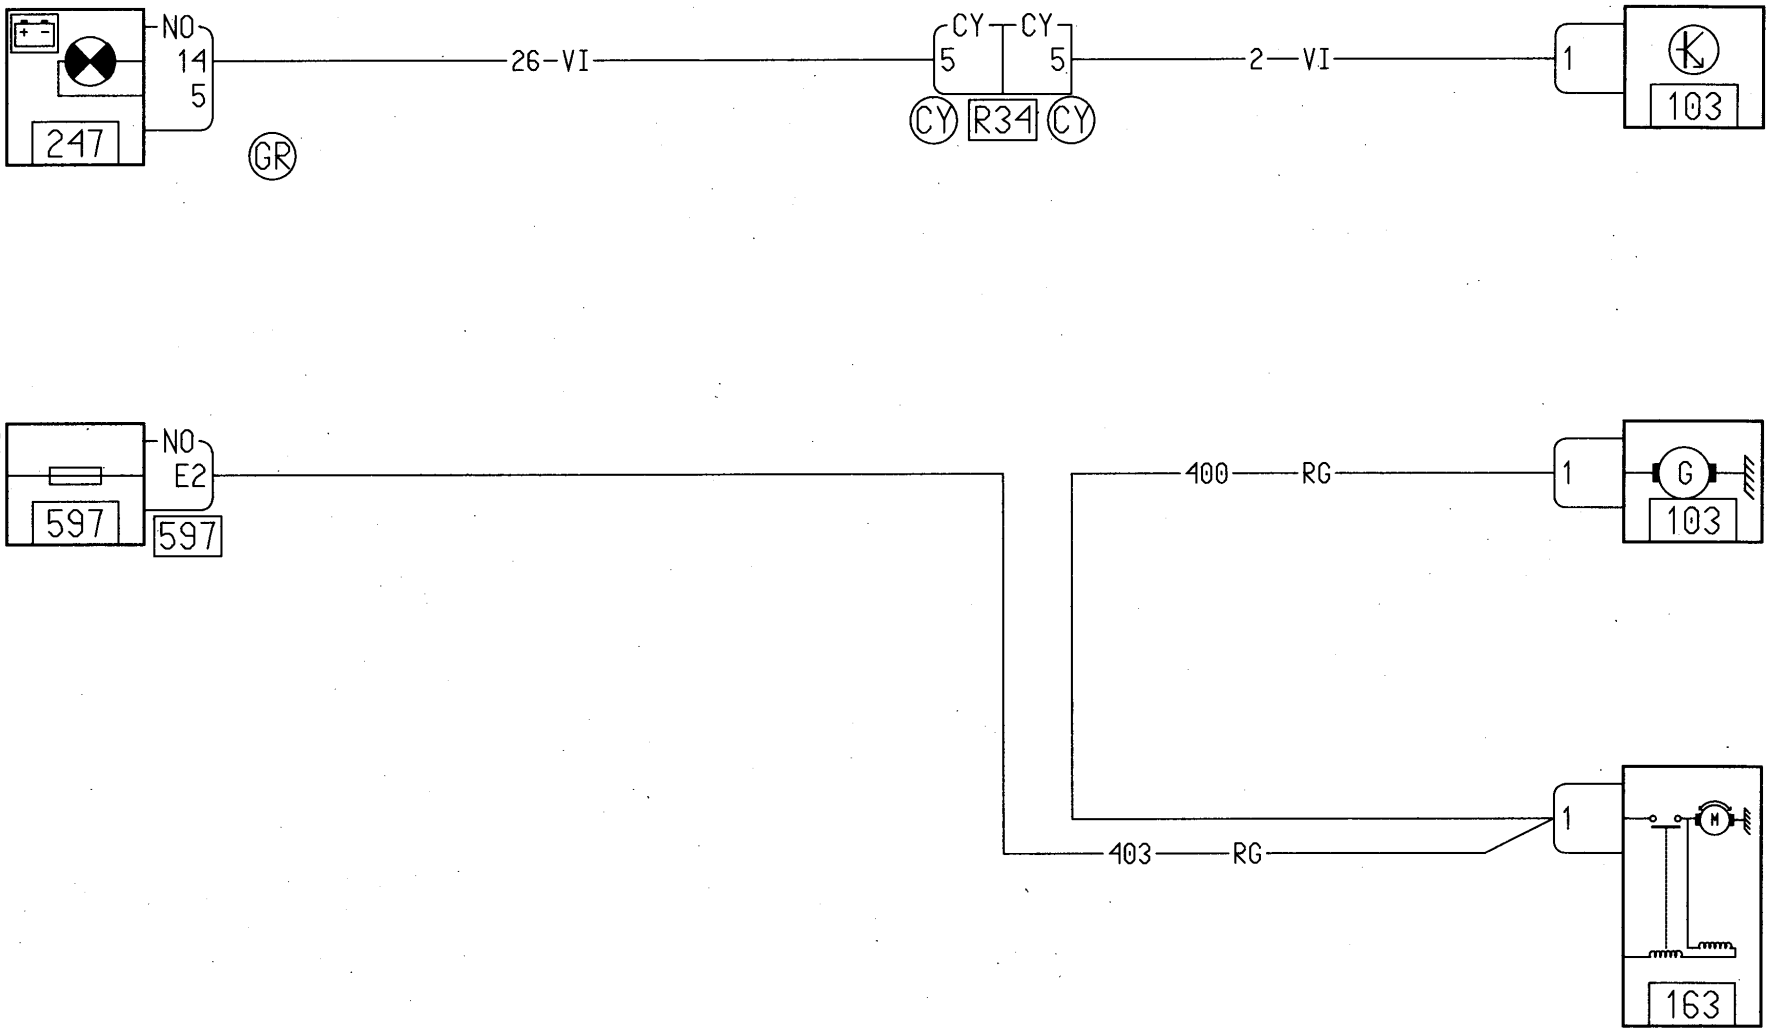
NO
14
5
247
GR
26-VI
CY
5
CY
5
CY
R34
CY
2-VI
1
103
40A F02
NO
E2
597
597
400-RG
1
G
103
403-RG
1
M
163

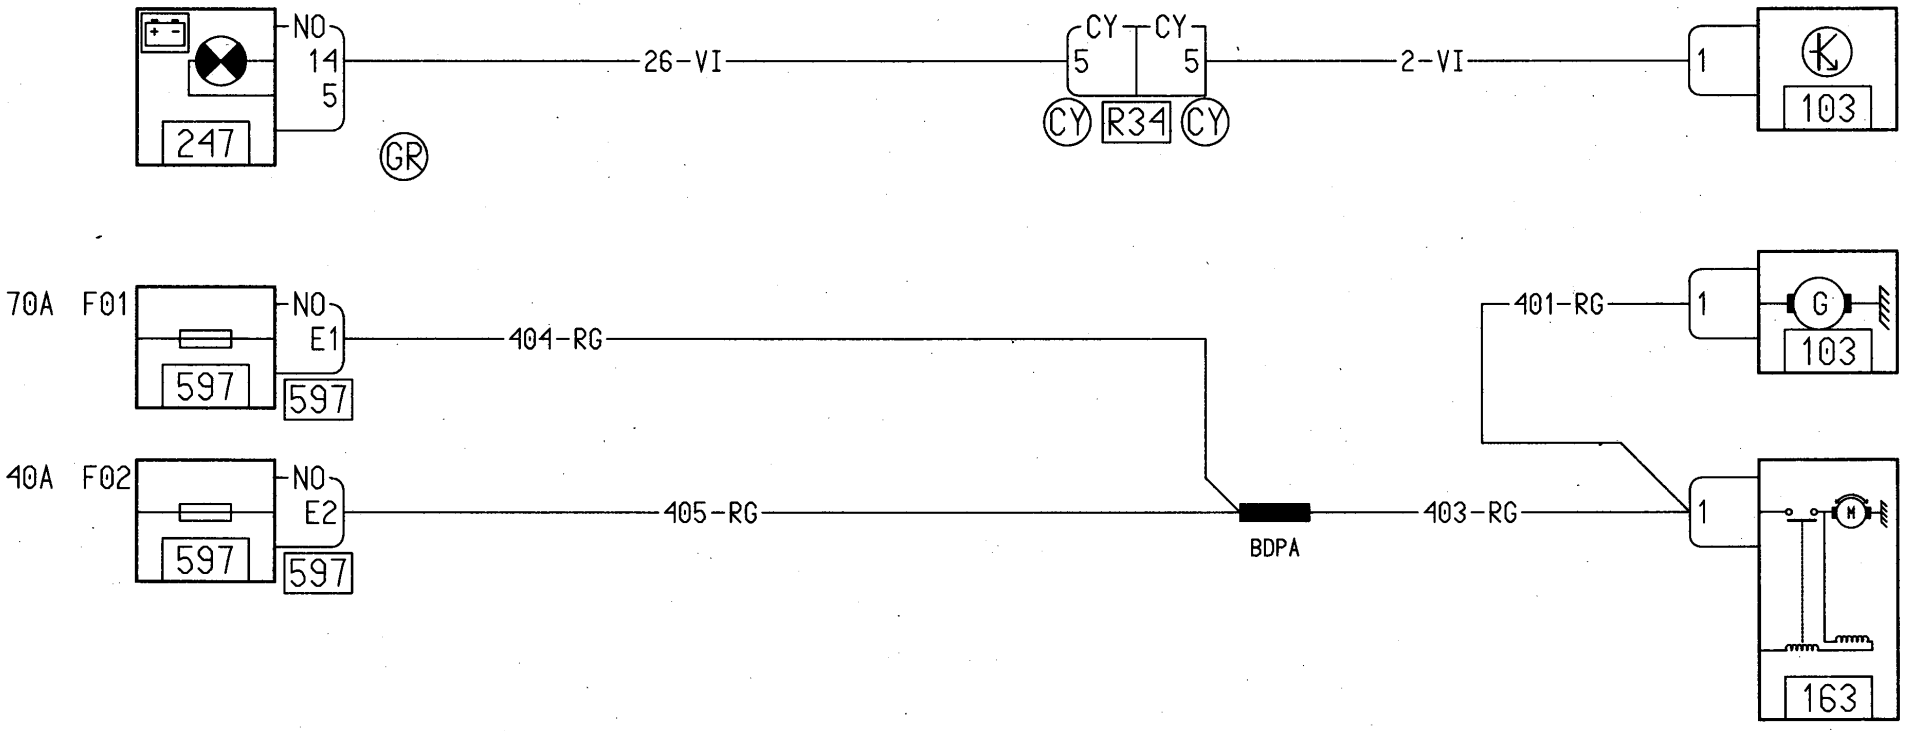
NO
14
5
247
GR
26-VI
CY
5
CY
5
CY
R34
CY
2-VI
1
103
70A F01
NO
E1
597
597
404-RG
40A F02
NO
E2
597
597
405-RG
BDPA
403-RG
401-RG
1
G
103
1
163

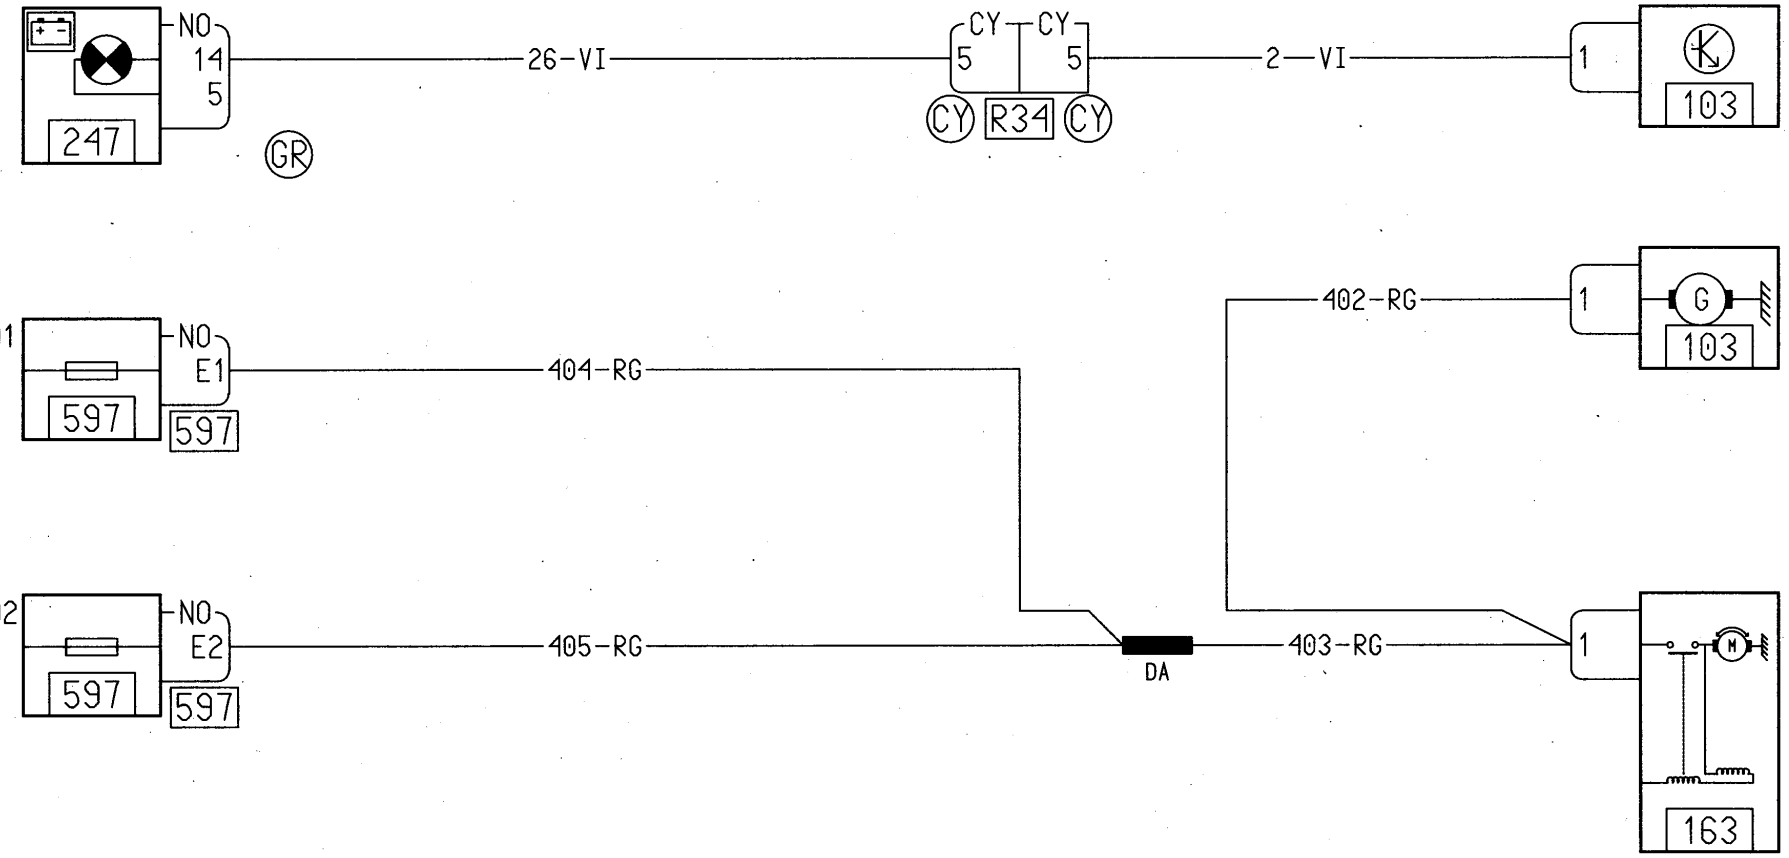
NO
14
5
247
GR
26-VI
CY
5
CY
5
CY
R34
CY
2-VI
1
103
70A F01
NO
E1
597
597
404-RG
402-RG
1
G
103
40A F02
NO
E2
597
597
405-RG
DA
403-RG
1
M
163

CHARGE CIRCUIT

(K4J750/CA/SPRGPL),(K4M700/SPRGPL)

X64
00

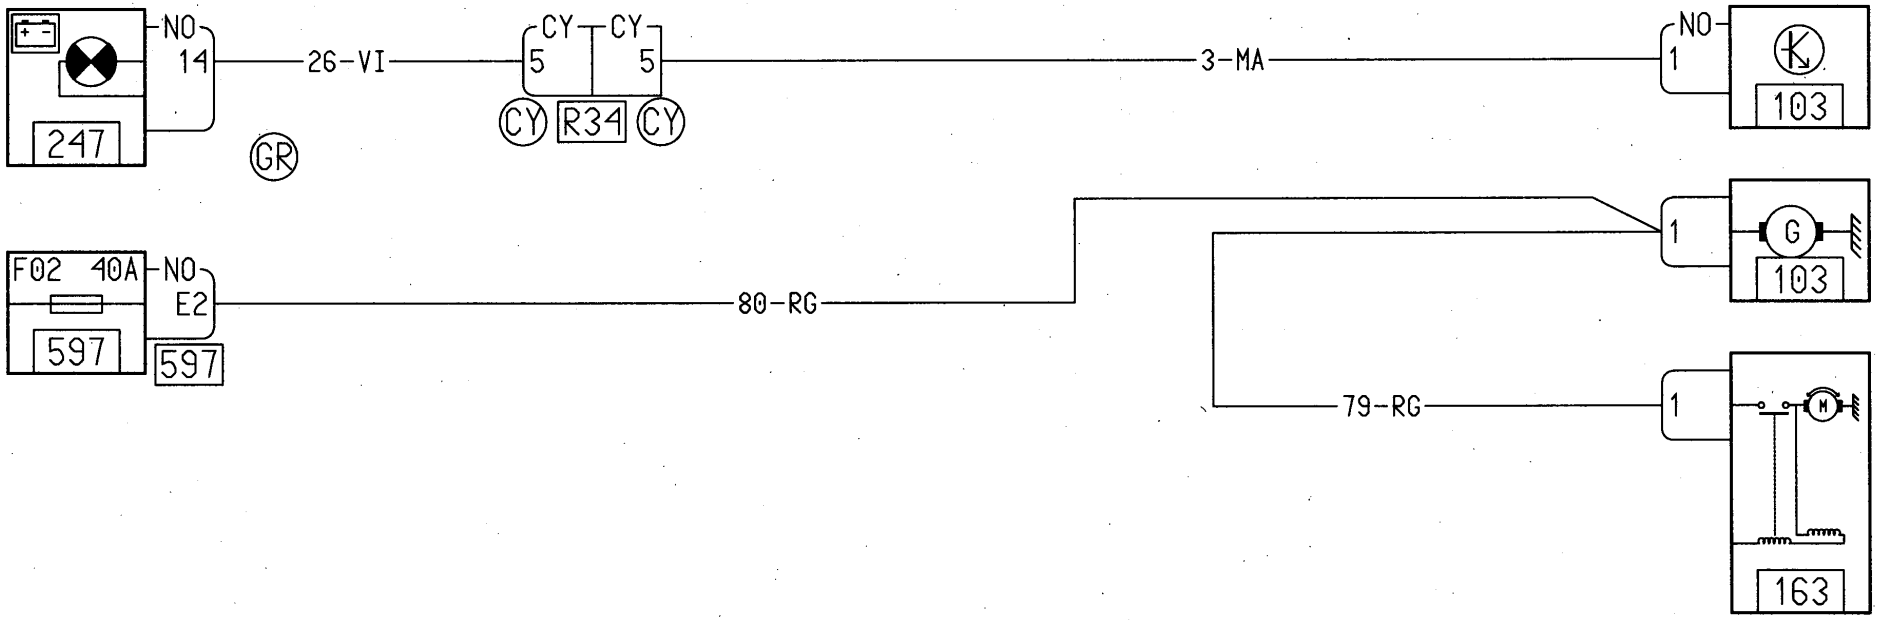

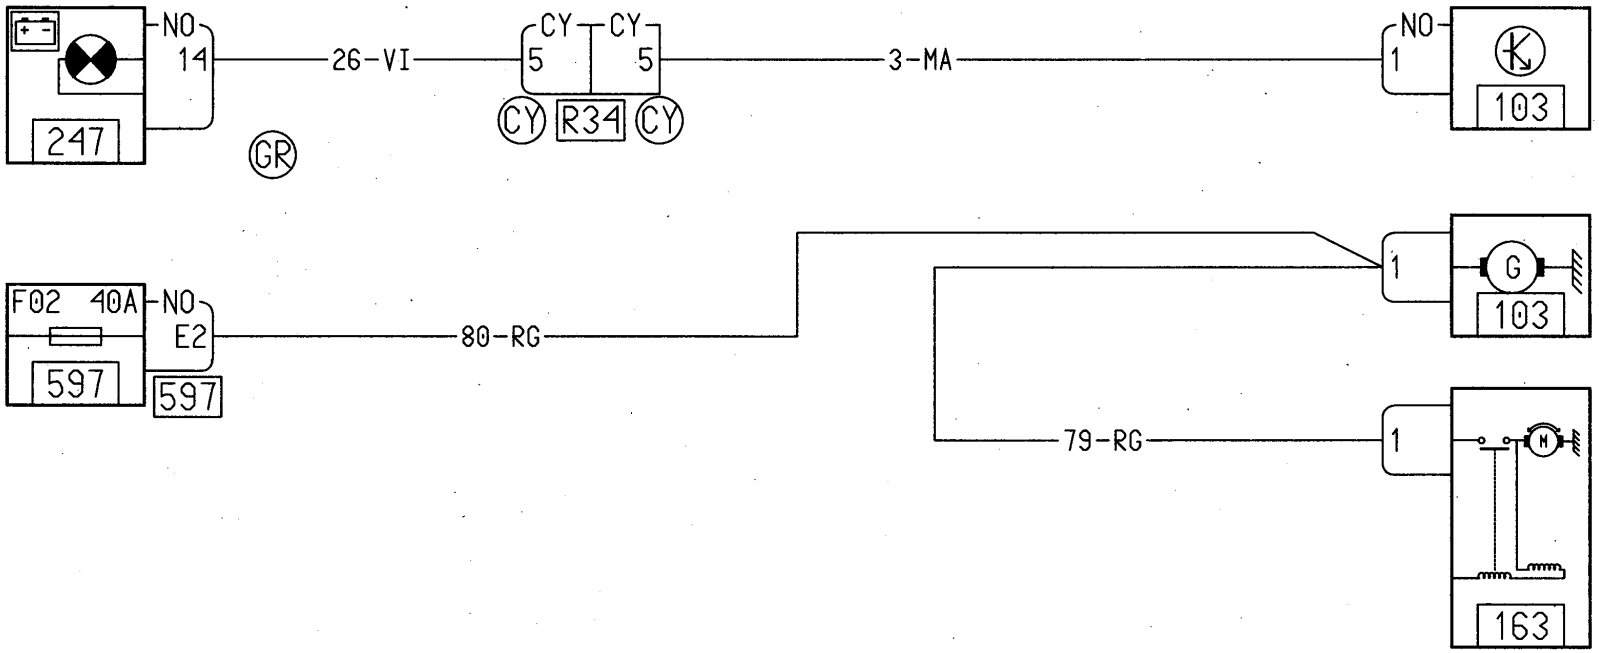
NO
14
247
26-VI
CY
5
CY
5
CY
R34
CY
GR
3-MA
NO
1
103
F02 40A
NO
E2
597
597
80-RG
1
G
103
79-RG
1
M
163

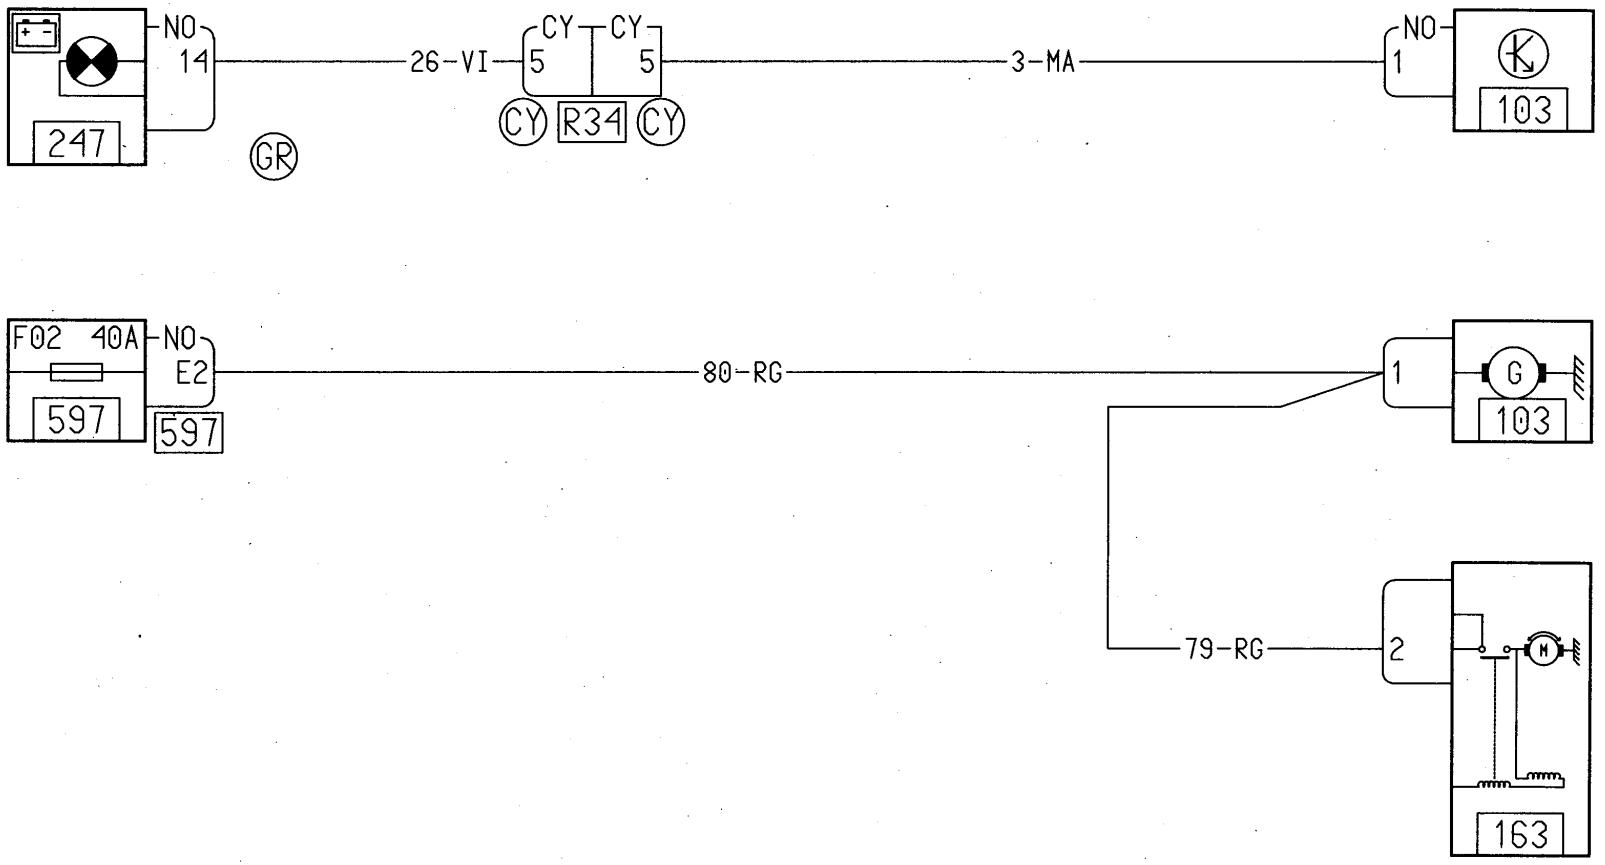
NO
14
247
GR
26-VI
CY
5
CY
5
CY
R34
CY
3-MA
NO
1
103
F02 40A
NO
E2
597
597
80-RG
1
G
103
79-RG
2
M
163

CHARGE CIRCUIT

(F8Q622/CA),(V25/F8Q790/CA)

X64
00

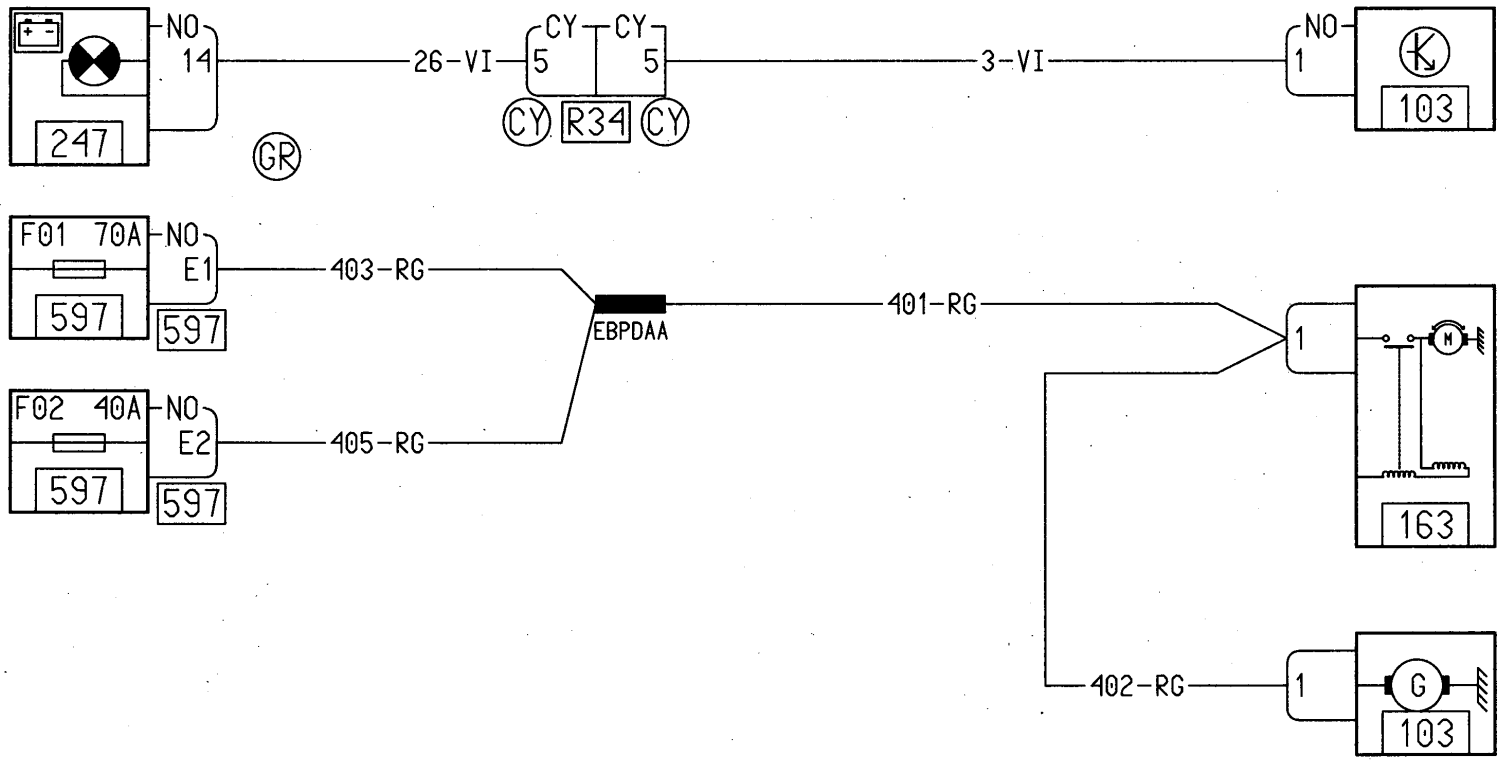

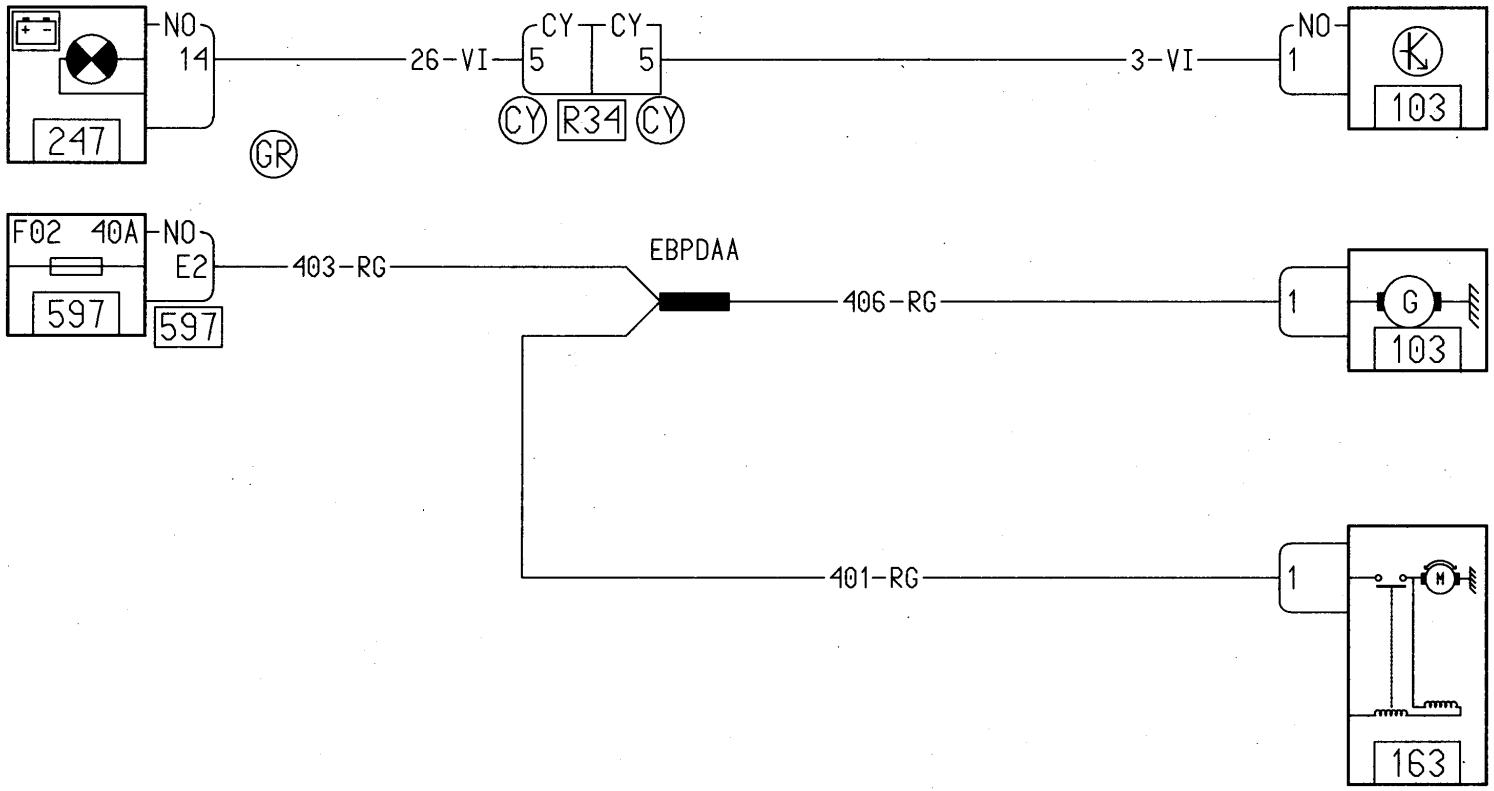
NO
14
247
GR
26-VI
CY
5
CY
5
CY
R34
CY
3-VI
NO
1
103
F02 40A
NO
E2
597
597
403-RG
EBPDAA
406-RG
1
G
103
401-RG
1
M
163

CHARGE CIRCUIT

B64,L64/K4M706/CA/MERCOS/BVM5

X64
00

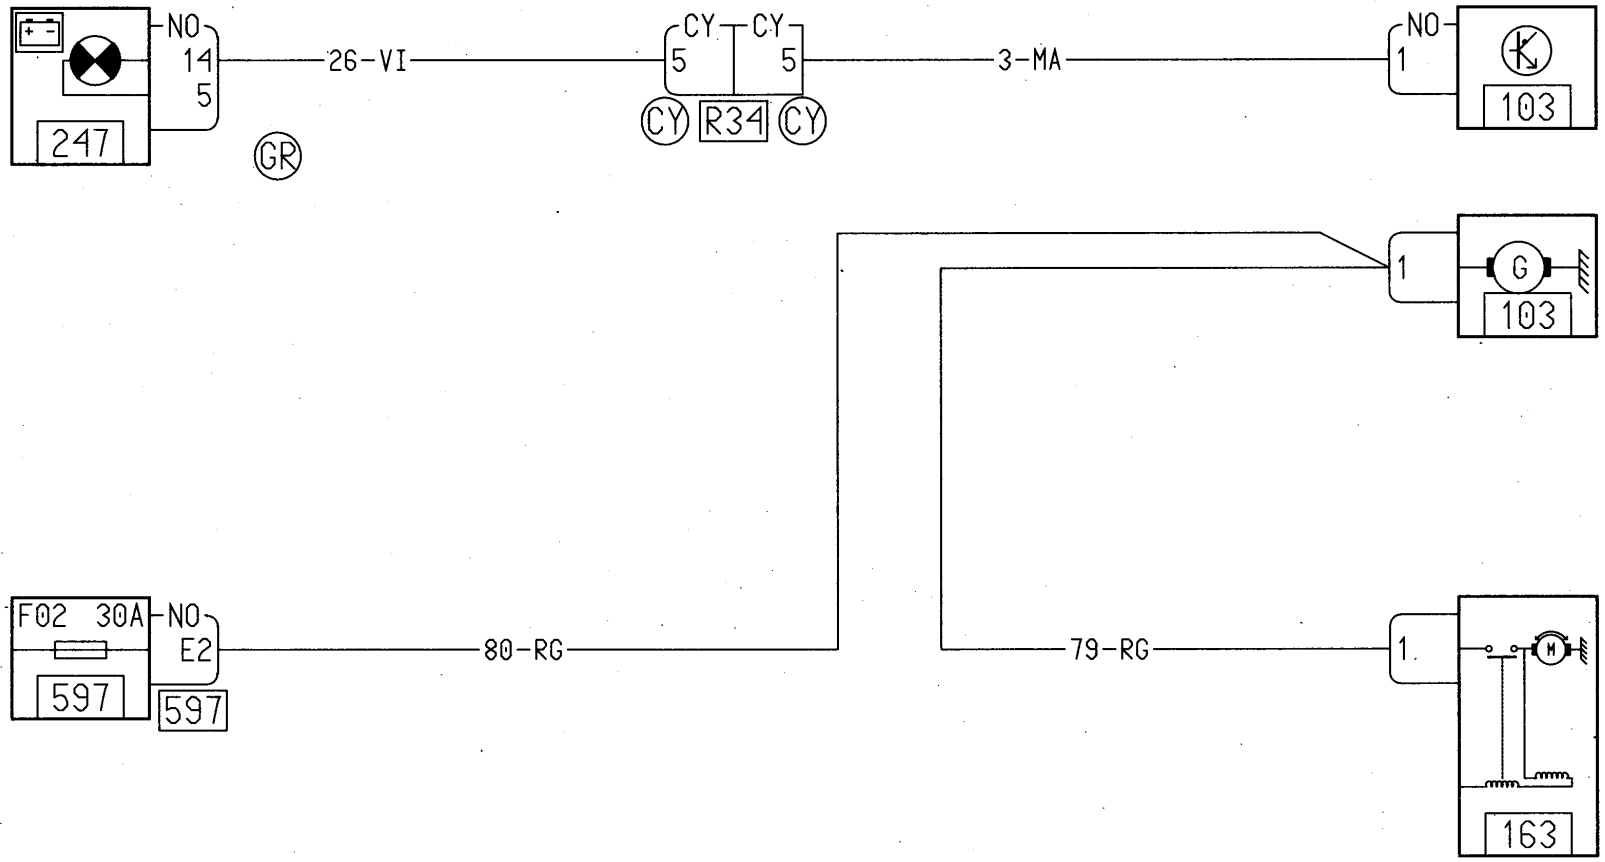

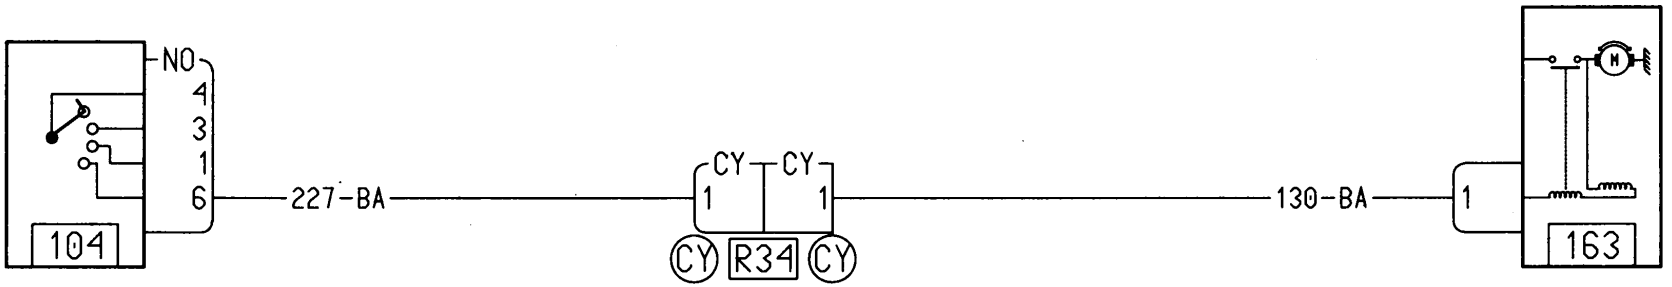
NO
4
3
1
6
104
227-BA
CY
CY
1
1
CY
R34
CY
130-BA
1
M
163

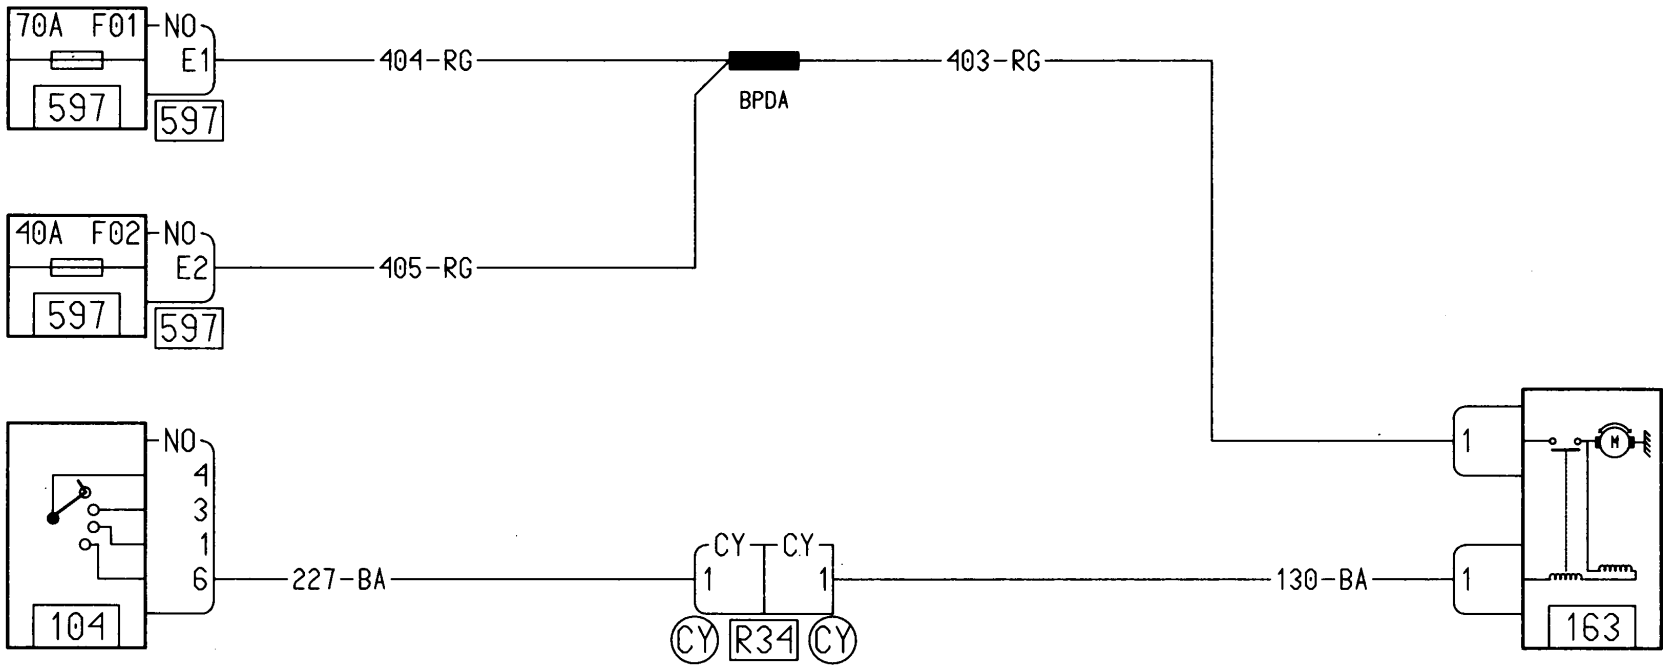
70A F01
NO
E1
597
597
404-RG
BPDA
403-RG
40A F02
NO
E2
597
597
405-RG
NO
4
3
1
6
104
227-BA
CY
CY
1
1
CY
R34
CY
130-BA
1
1
163

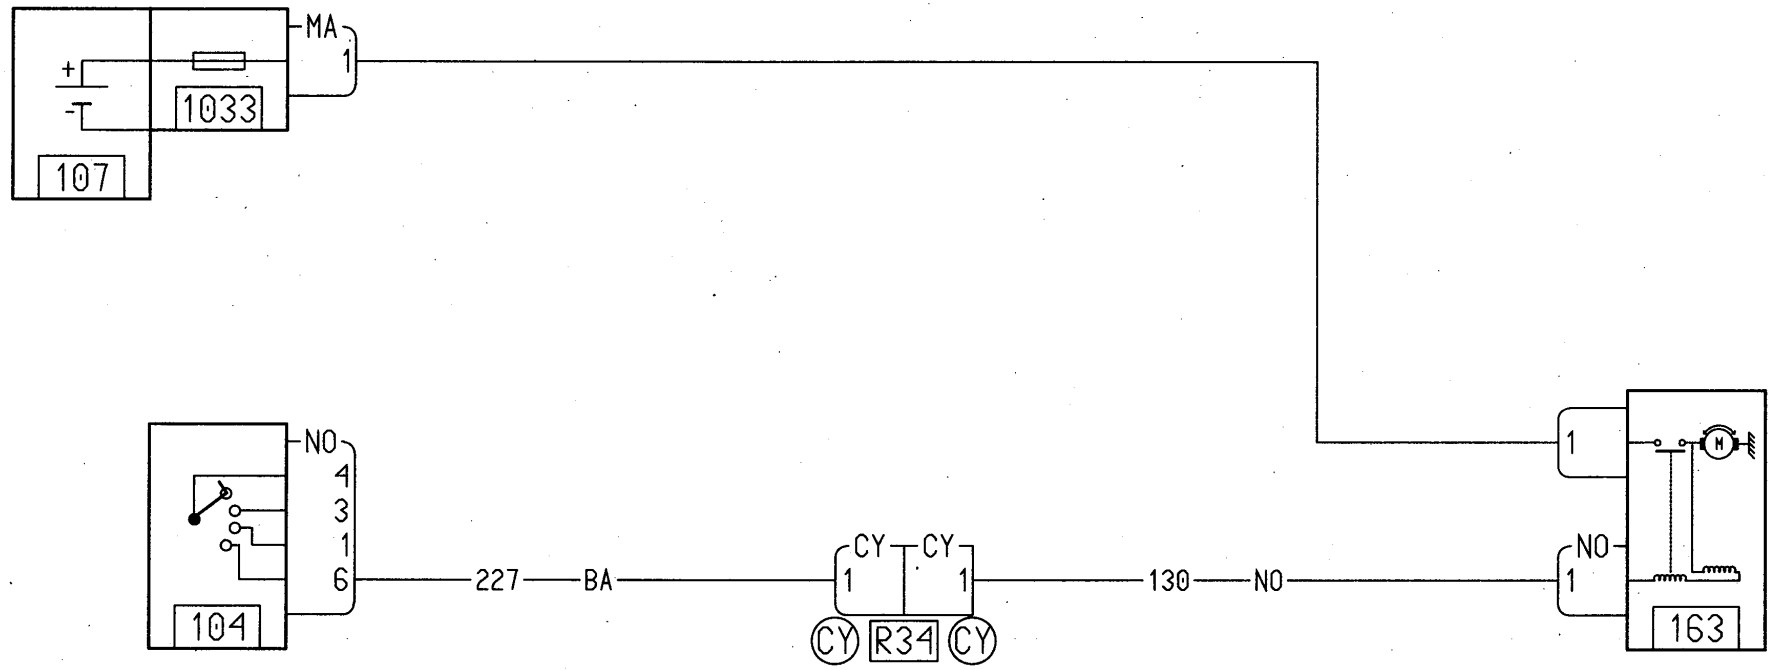
MA
1
+
-
1033
107
NO
4
3
1
6
104
227
BA
CY
CY
1
1
CY
R34
CY
130
NO
1
NO
1
163

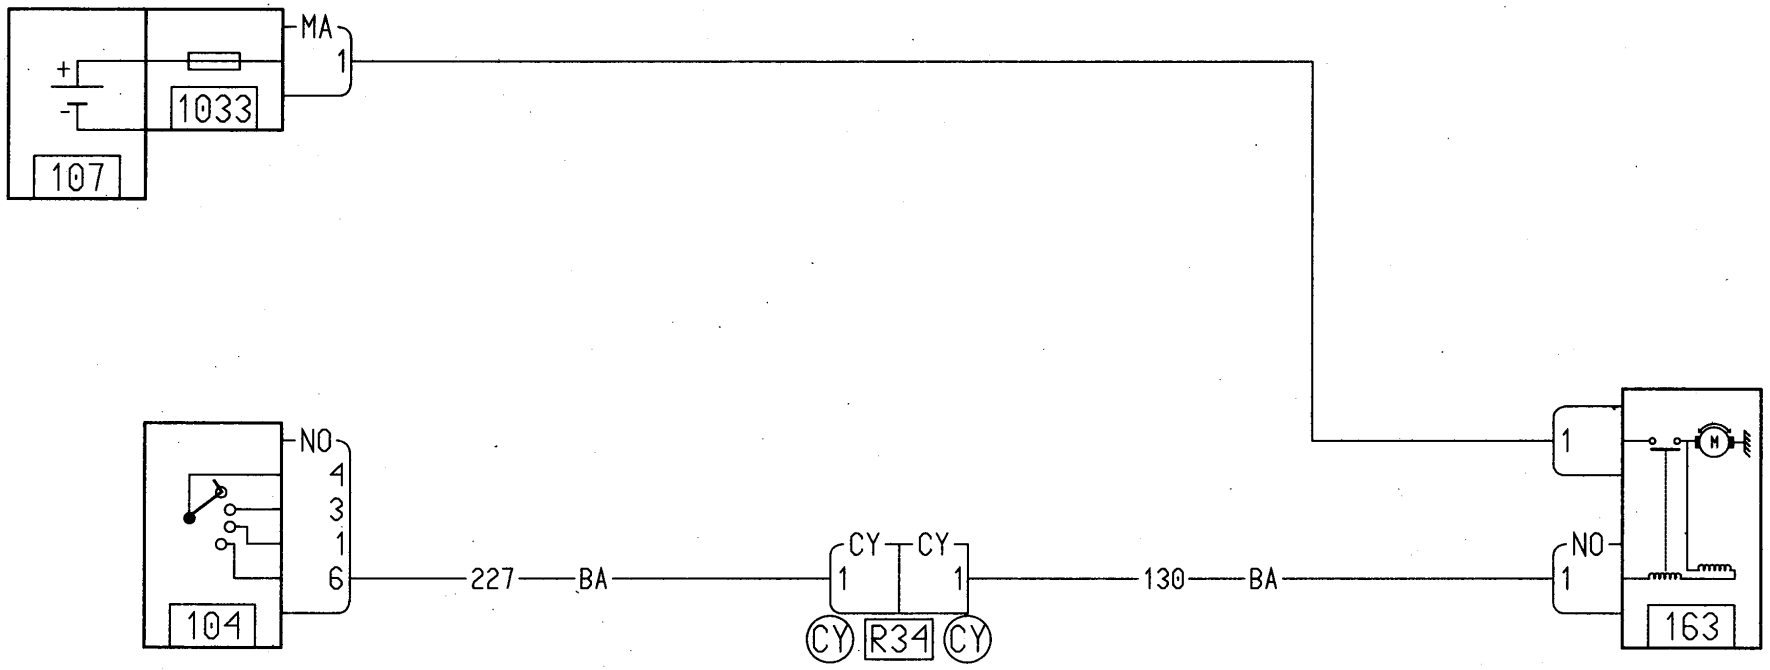
MA
1
+
-
1033
107
NO
4
3
1
6
104
227
BA
CY
CY
1
1
CY
R34
CY
130
BA
1
NO
1
M
163

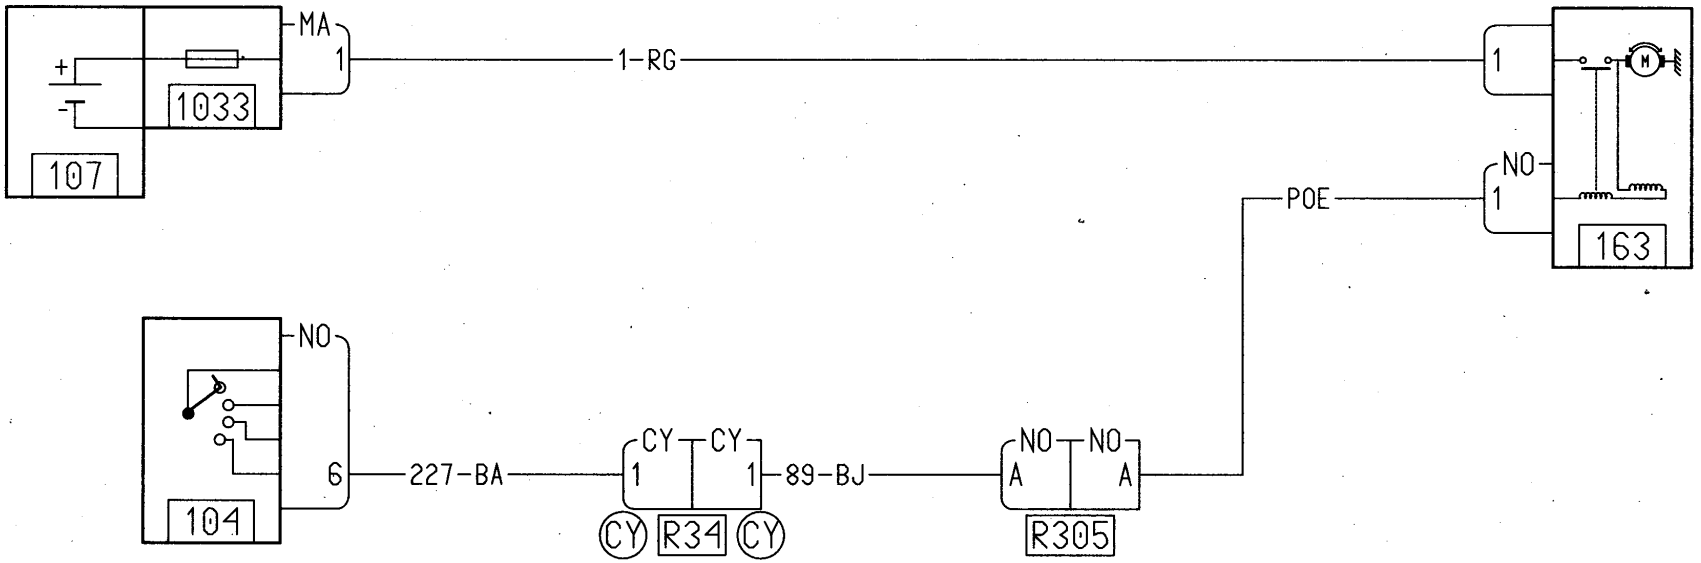
MA
1
1-RG
1
1033
107
NO
1
POE
163
NO
6
104
227-BA
CY
1
CY
1
CY
R34
CY
89-BJ
NO
A
NO
A
R305

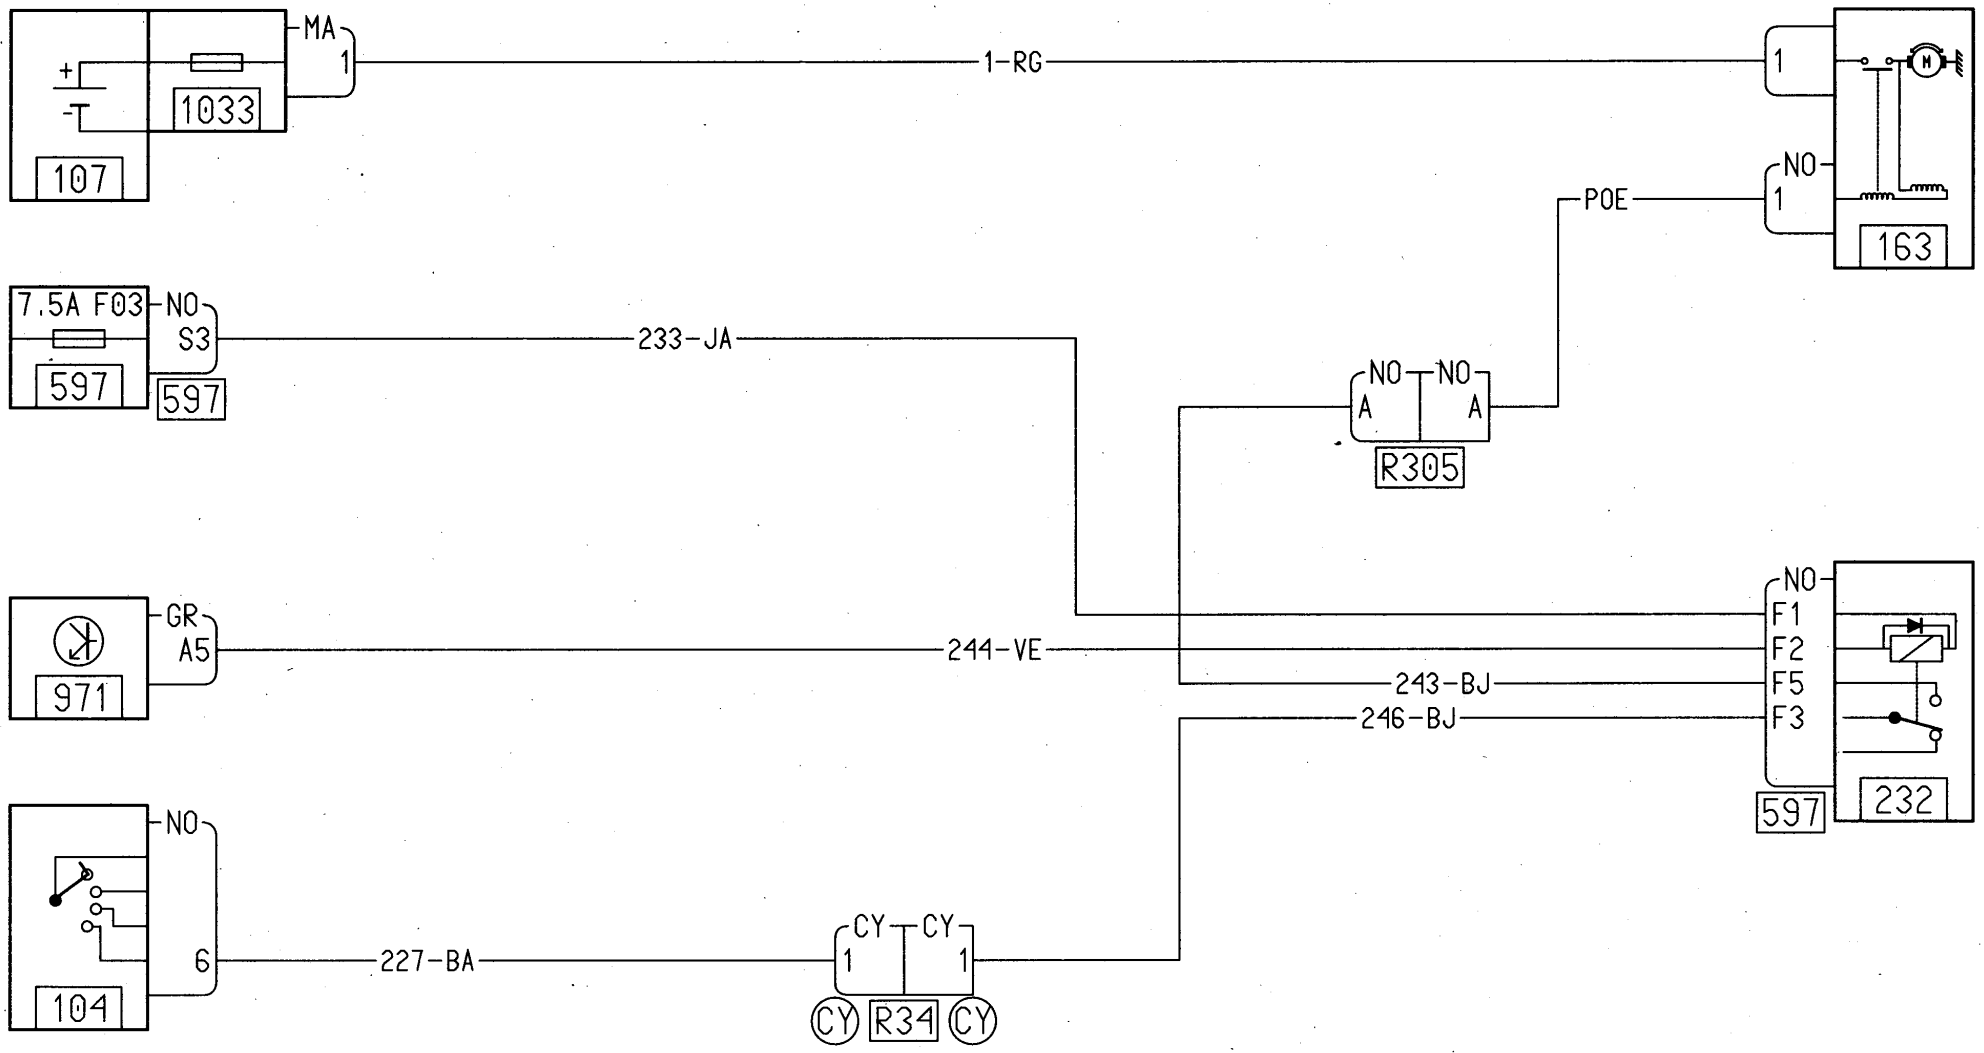
MA
1
1033
107
1-RG
1
NO
1
163
POE
7.5A F03
NO
S3
597
597
233-JA
NO
A
NO
A
R305
GR
A5
971
244-VE
NO
F1
F2
F5
F3
243-BJ
246-BJ
597
232
NO
6
104
227-BA
CY
1
CY
1
CY
R34
CY

STARTING CIRCUIT

(F8Q790,F8Q622/BVM5),(B64/E7J626/BVM5)

X64
00

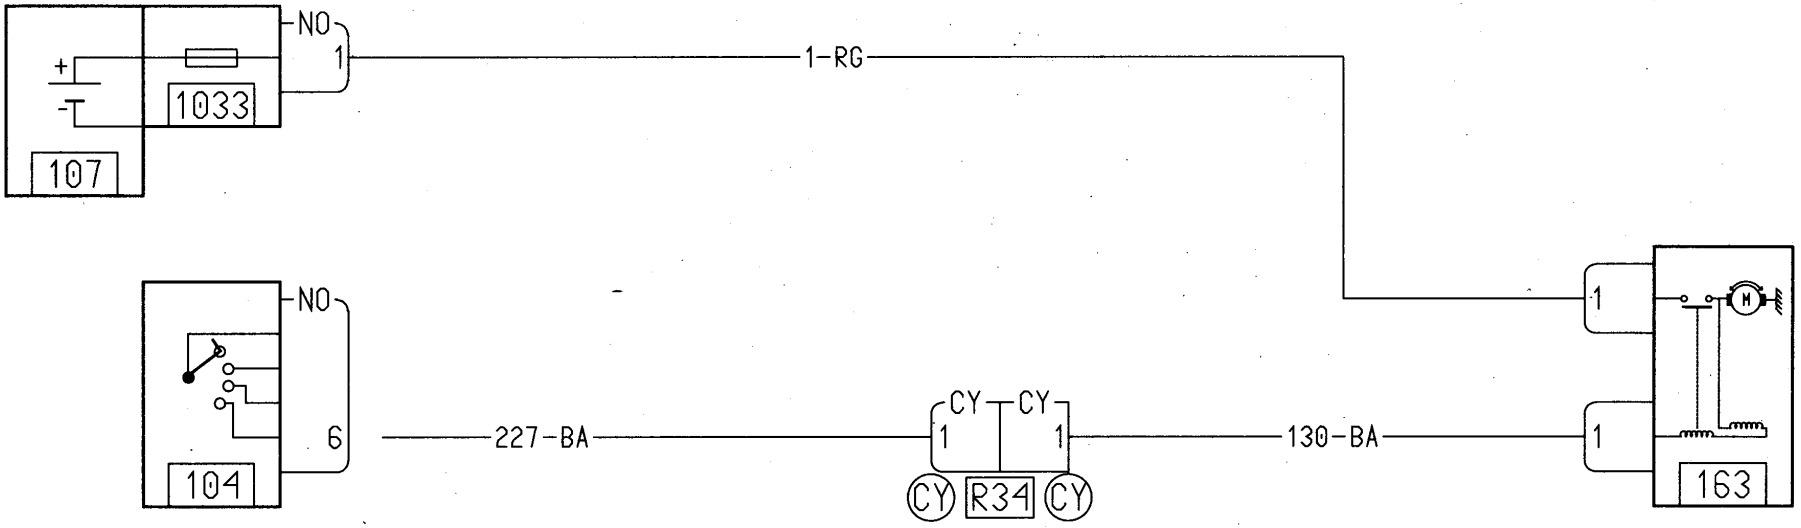

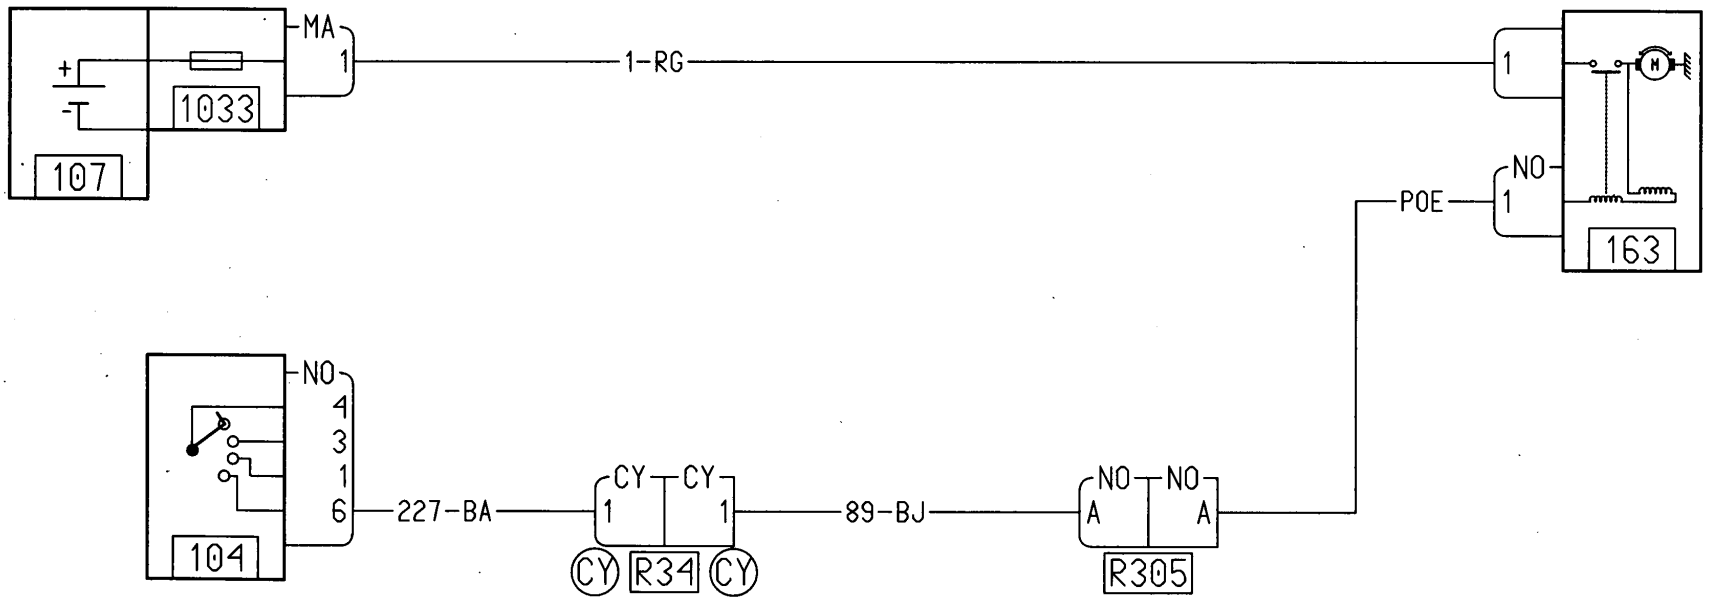
MA
1
1033
107
1-RG
1
NO
1
POE
163
NO
4
3
1
6
104
227-BA
CY
1
CY
1
CY
R34
CY
89-BJ
NO
A
NO
A
R305

[redacted]

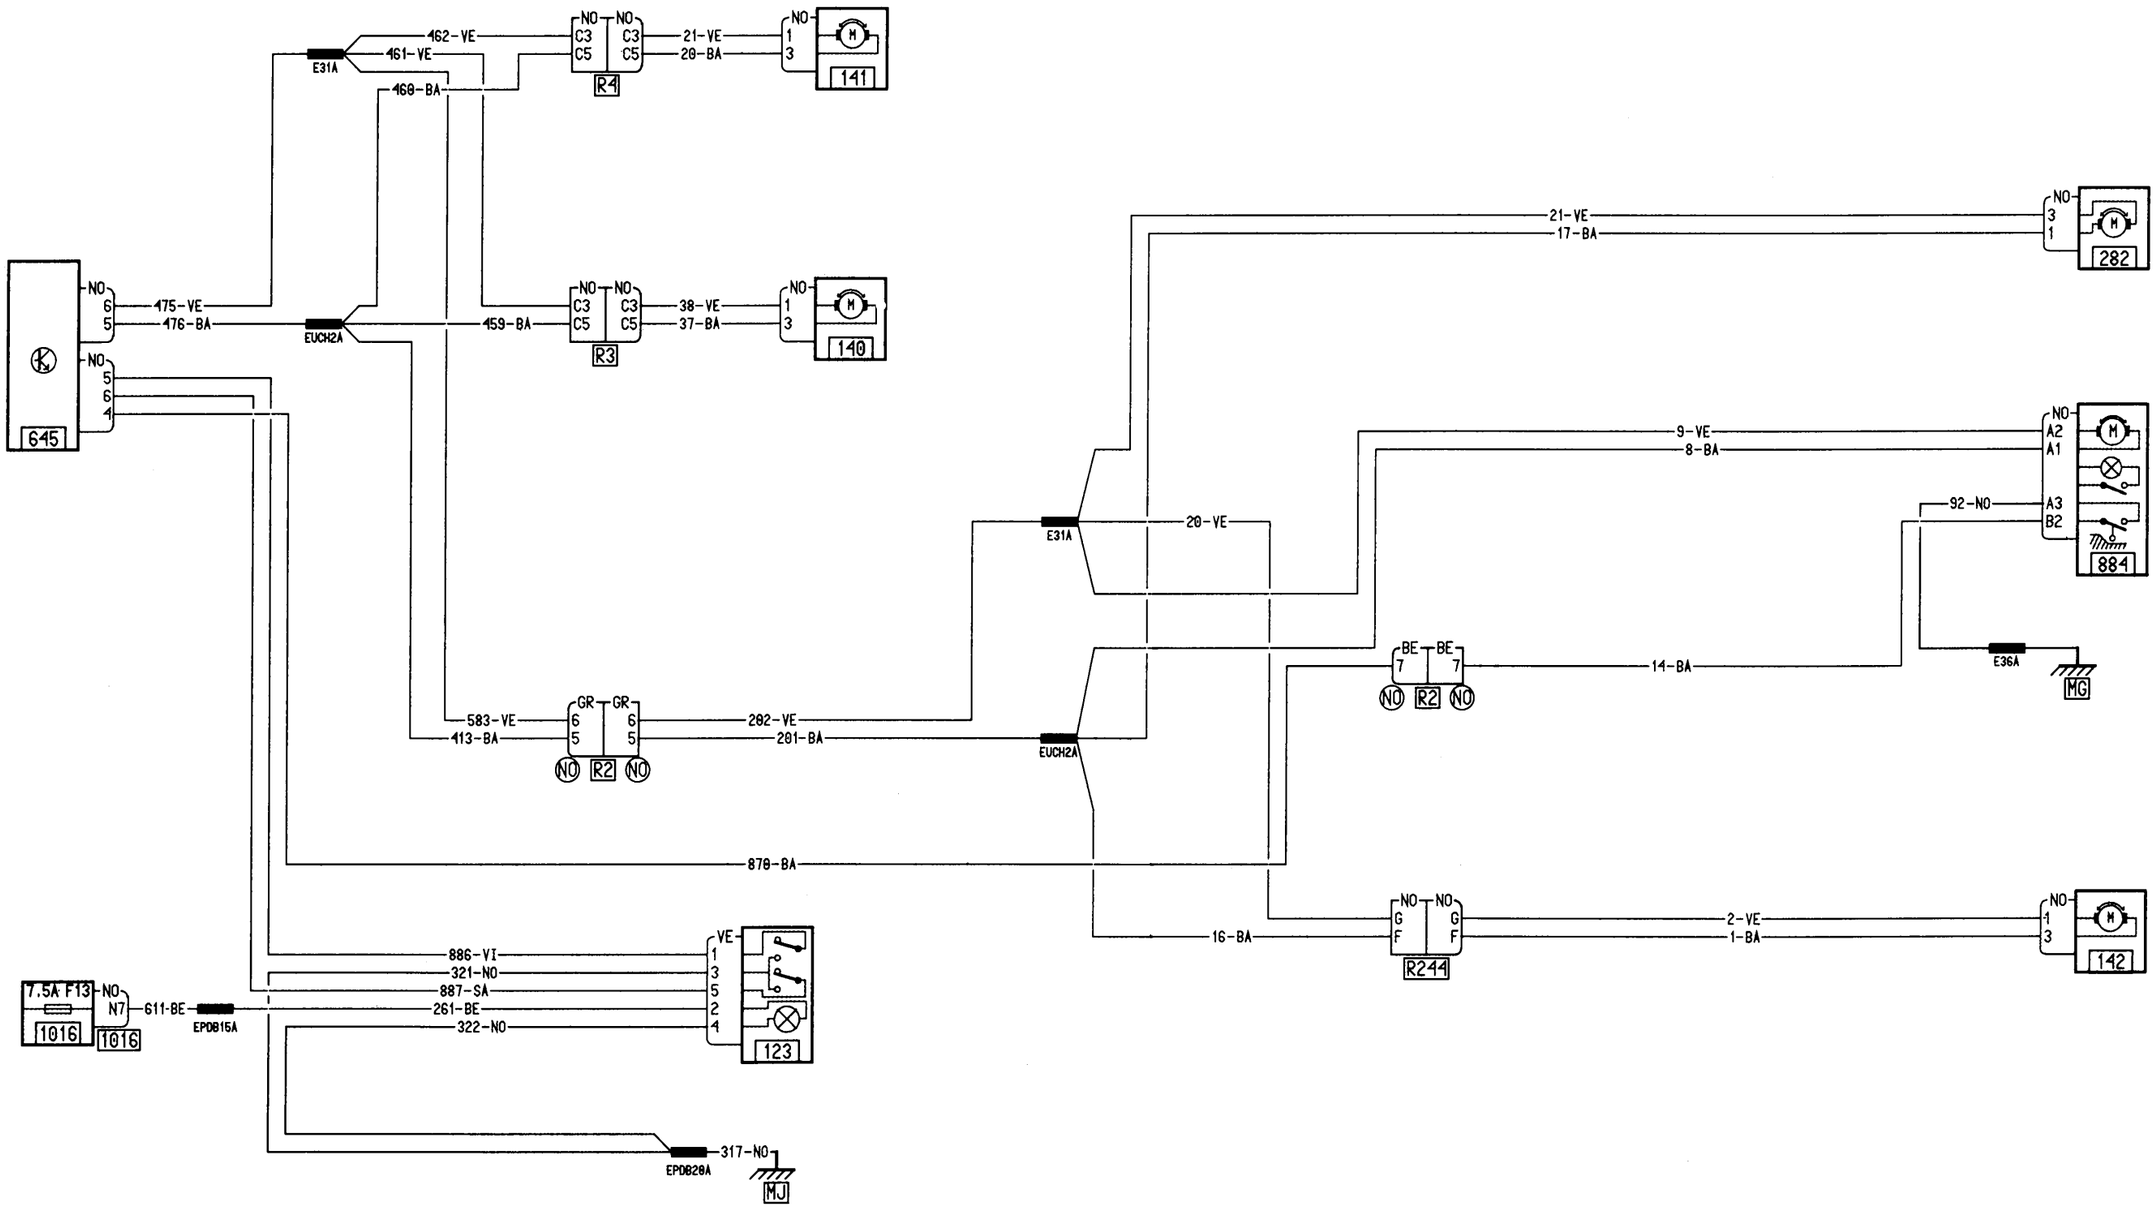
E31A
162-VE
161-VE
160-BA
NO C3 C5 NO C3 C5
R4
21-VE
20-BA
NO 1 3 M
141
645
NO 6 5 4
175-VE
176-BA
EUCH2A
159-BA
R3
38-VE
37-BA
140
583-VE
413-BA
GR 6 5 GR 6 5
R2
202-VE
201-BA
EUCH2A
21-VE
17-BA
282
9-VE
8-BA
20-VE
92-NO
NO A2 A1 A3 B2
884
E36A
MG
BE 7 7
R2
14-BA
878-BA
16-BA
NO G F NO G F
R244
2-VE
1-BA
142
7.5A F13
1016
N7
611-BE
EPDB15A
886-VI
321-NO
887-SA
261-BE
322-NO
VE 1 3 5 2 4
123
317-NO
EPDB20A
MJ

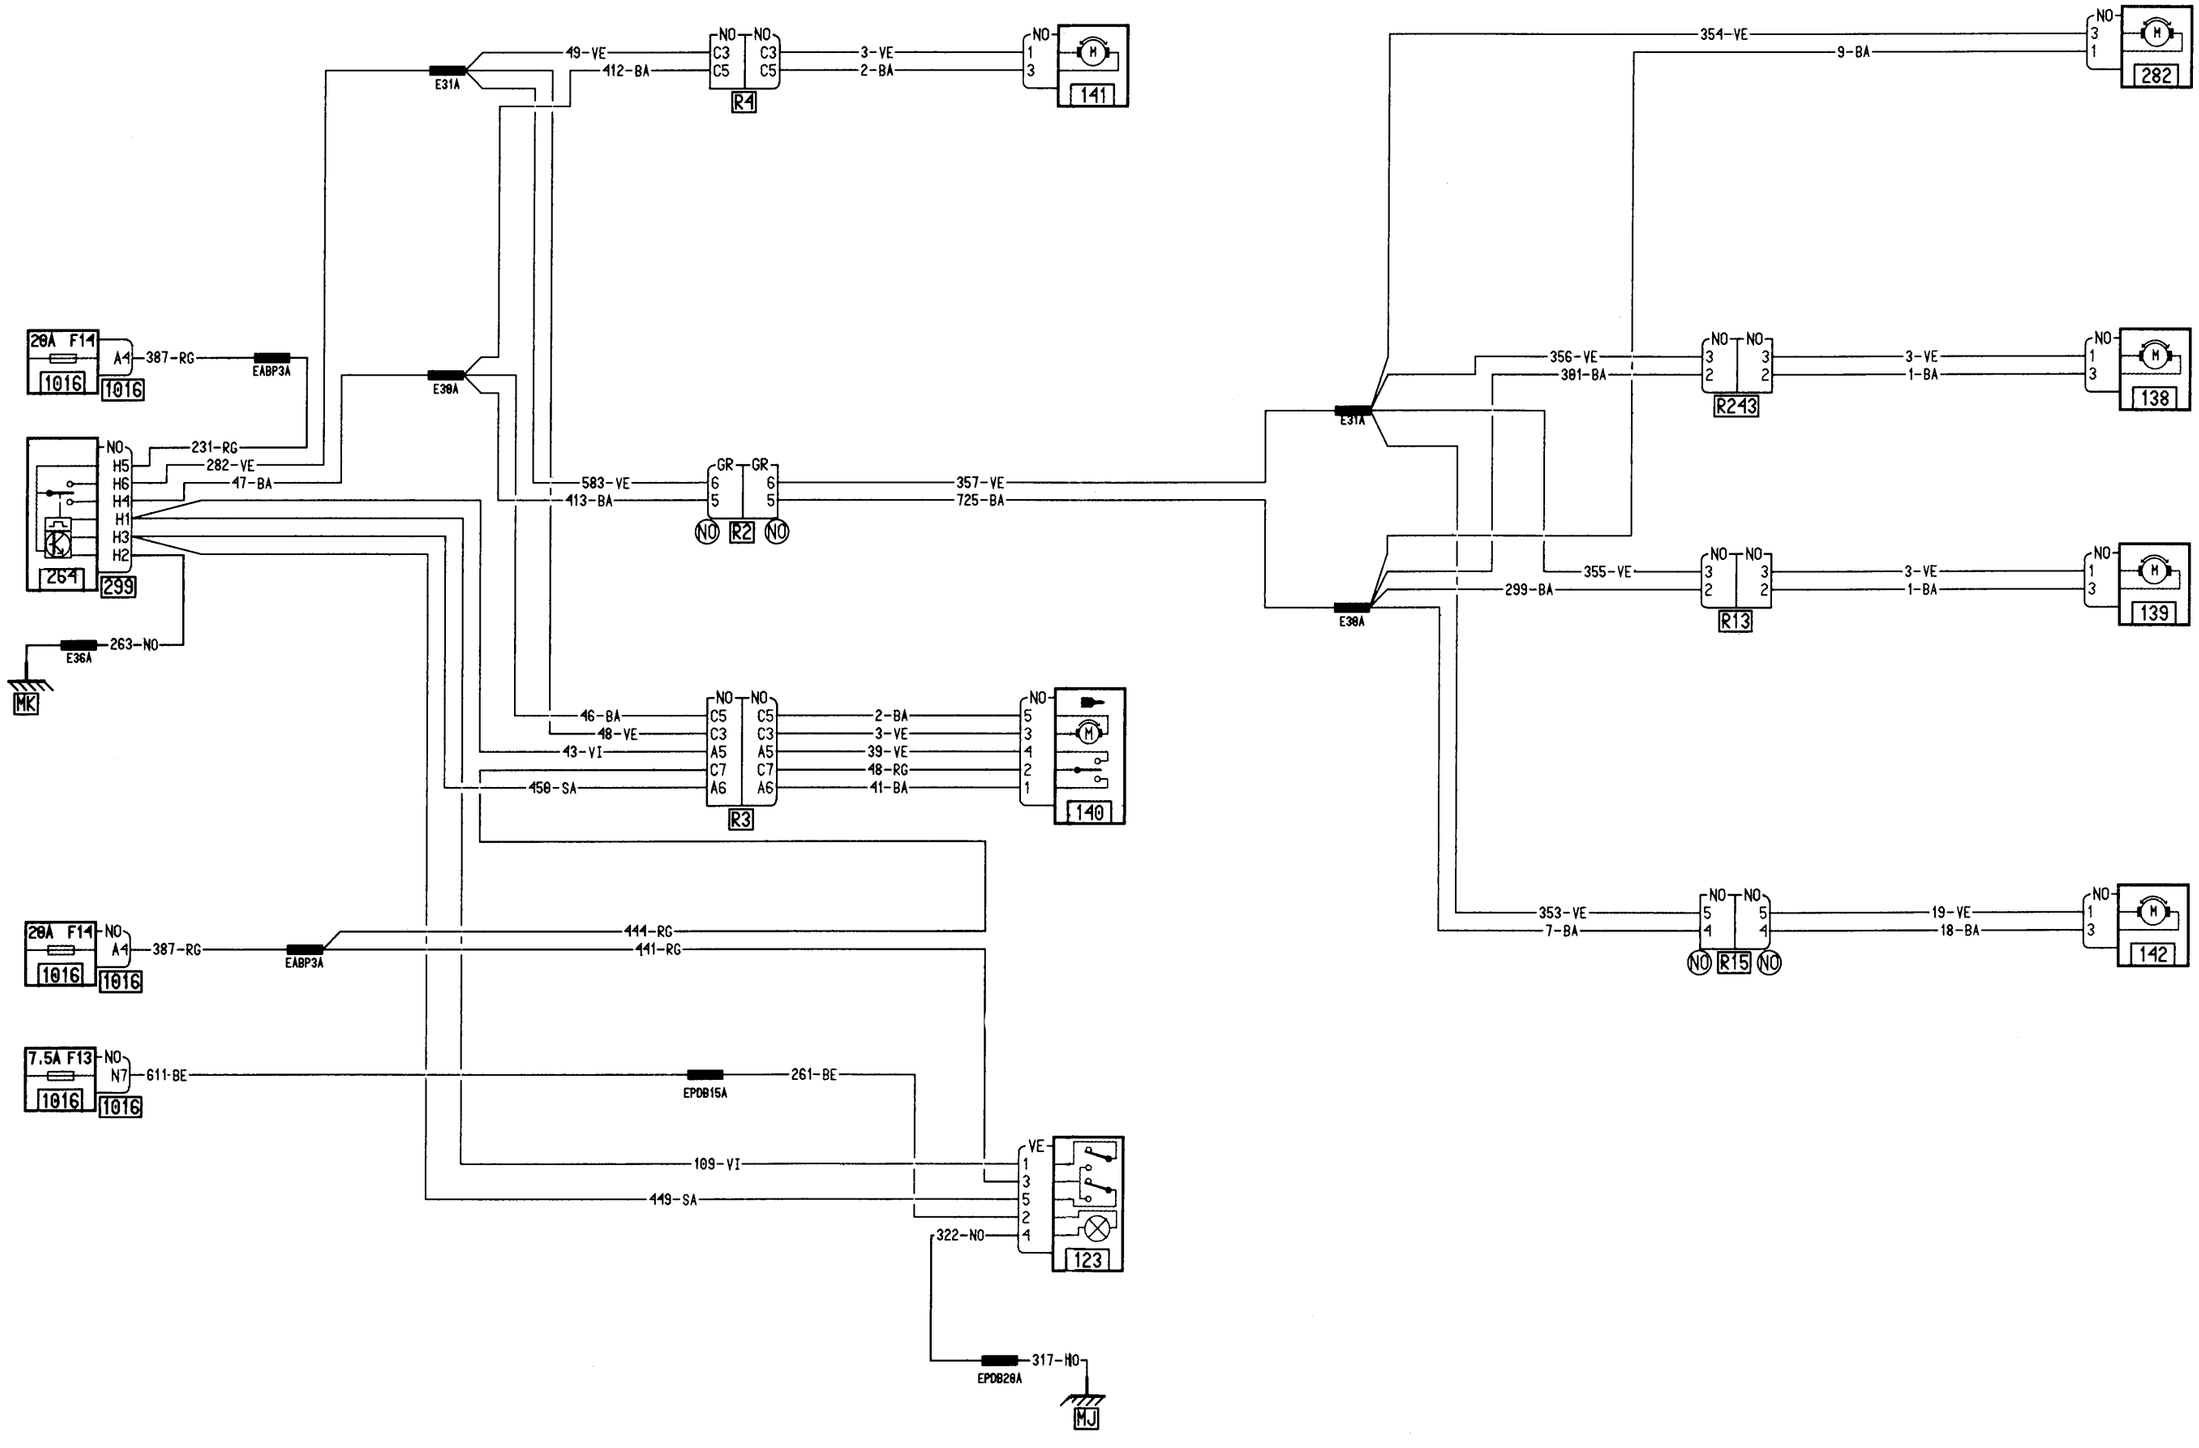
20A F11
1016
A1
387-RG
EABP3A
1016
NO
H5
H6
H4
H1
H3
H2
264
299
231-RG
282-VE
47-BA
263-NO
E36A
MK
E31A
49-VE
412-BA
NO C3 C5
NO C3 C5
3-VE
2-BA
NO 1 3
141
R4
E38A
583-VE
413-BA
GR 6 5
GR 6 5
357-VE
725-BA
NO R2 NO
16-BA
18-VE
43-VI
150-SA
NO C5 C3 A5 C7 A6
NO C5 C3 A5 C7 A6
2-BA
3-VE
39-VE
18-RG
41-BA
NO 5 3 4 2 1
140
R3
20A F14
1016
NO
A1
387-RG
EABP3A
1016
111-RG
111-RG
7.5A F13
1016
NO
N7
611-BE
EPDB15A
261-BE
109-VI
119-SA
VE 1 3 5 2 4
322-NO
123
EPDB28A
317-NO
MJ
354-VE
9-BA
NO 3 1
282
E31A
356-VE
381-BA
NO 3 2
NO 3 2
R243
3-VE
1-BA
NO 1 3
138
E38A
355-VE
299-BA
NO 3 2
NO 3 2
R13
3-VE
1-BA
NO 1 3
139
353-VE
7-BA
NO 5 4
NO 5 4
R15
19-VE
18-BA
NO 1 3
142

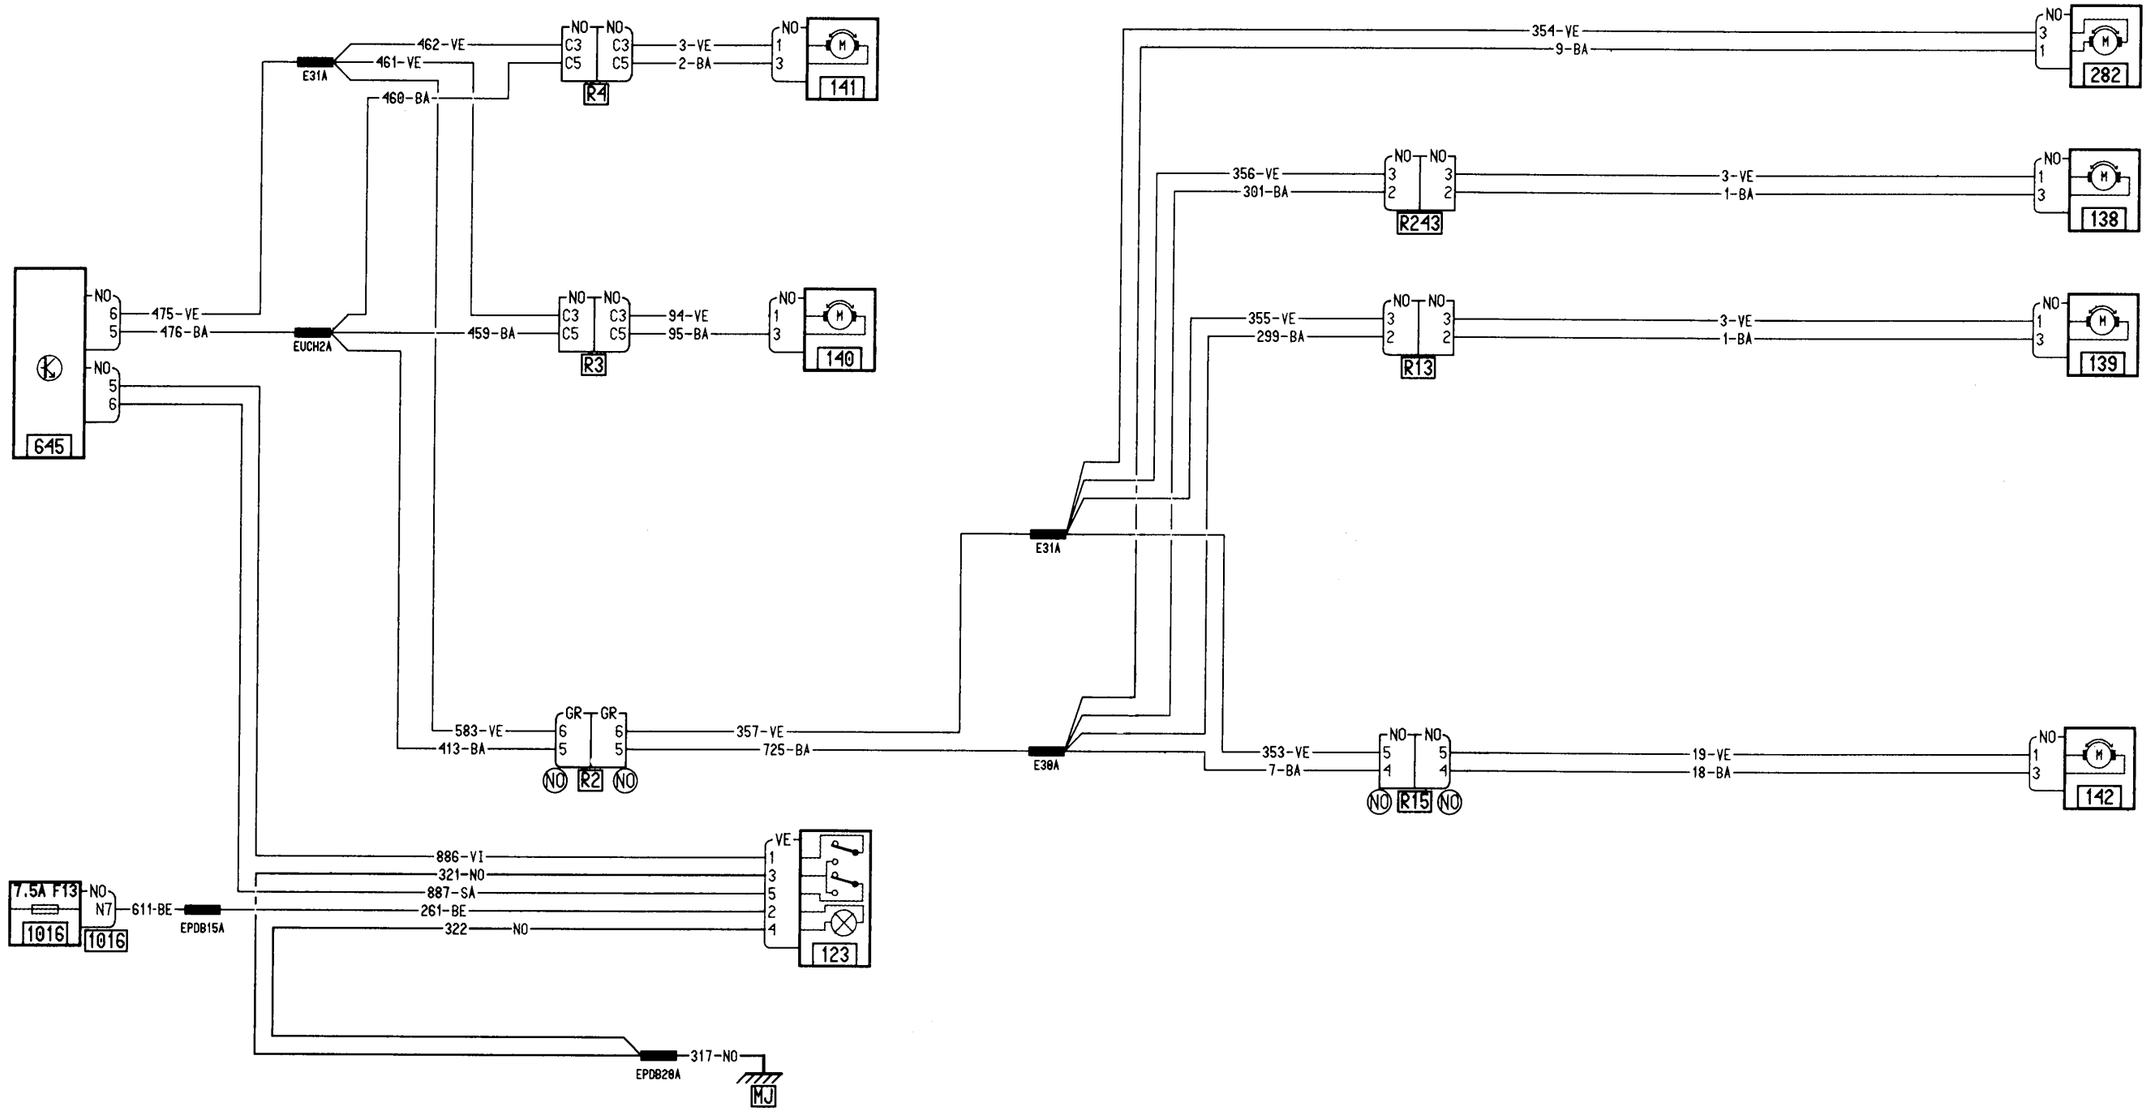
645
NO 6 475-VE
NO 5 476-BA
NO 5
NO 6
E31A
462-VE
461-VE
460-BA
NO C3 NO C3 3-VE NO 1
C5 C5 2-BA 3
R4
141
EUCH2A
459-BA
NO C3 NO C3 94-VE NO 1
C5 C5 95-BA 3
R3
140
583-VE GR 6 GR 6 357-VE
413-BA 5 5 725-BA
NO R2 NO
E38A
354-VE
9-BA
NO 3
1
282
356-VE NO 3 NO 3 3-VE NO 1
301-BA 2 2 1-BA 3
R243
138
355-VE NO 3 NO 3 3-VE NO 1
299-BA 2 2 1-BA 3
R13
139
353-VE NO 5 NO 5 19-VE NO 1
7-BA 4 4 18-BA 3
NO R15 NO
142
7.5A F13 NO
N7 611-BE
1016 1016
EPDB15A
886-VI VE 1
321-NO 3
887-SA 5
261-BE 2
322 NO 4
123
317-NO
EPDB28A
MJ

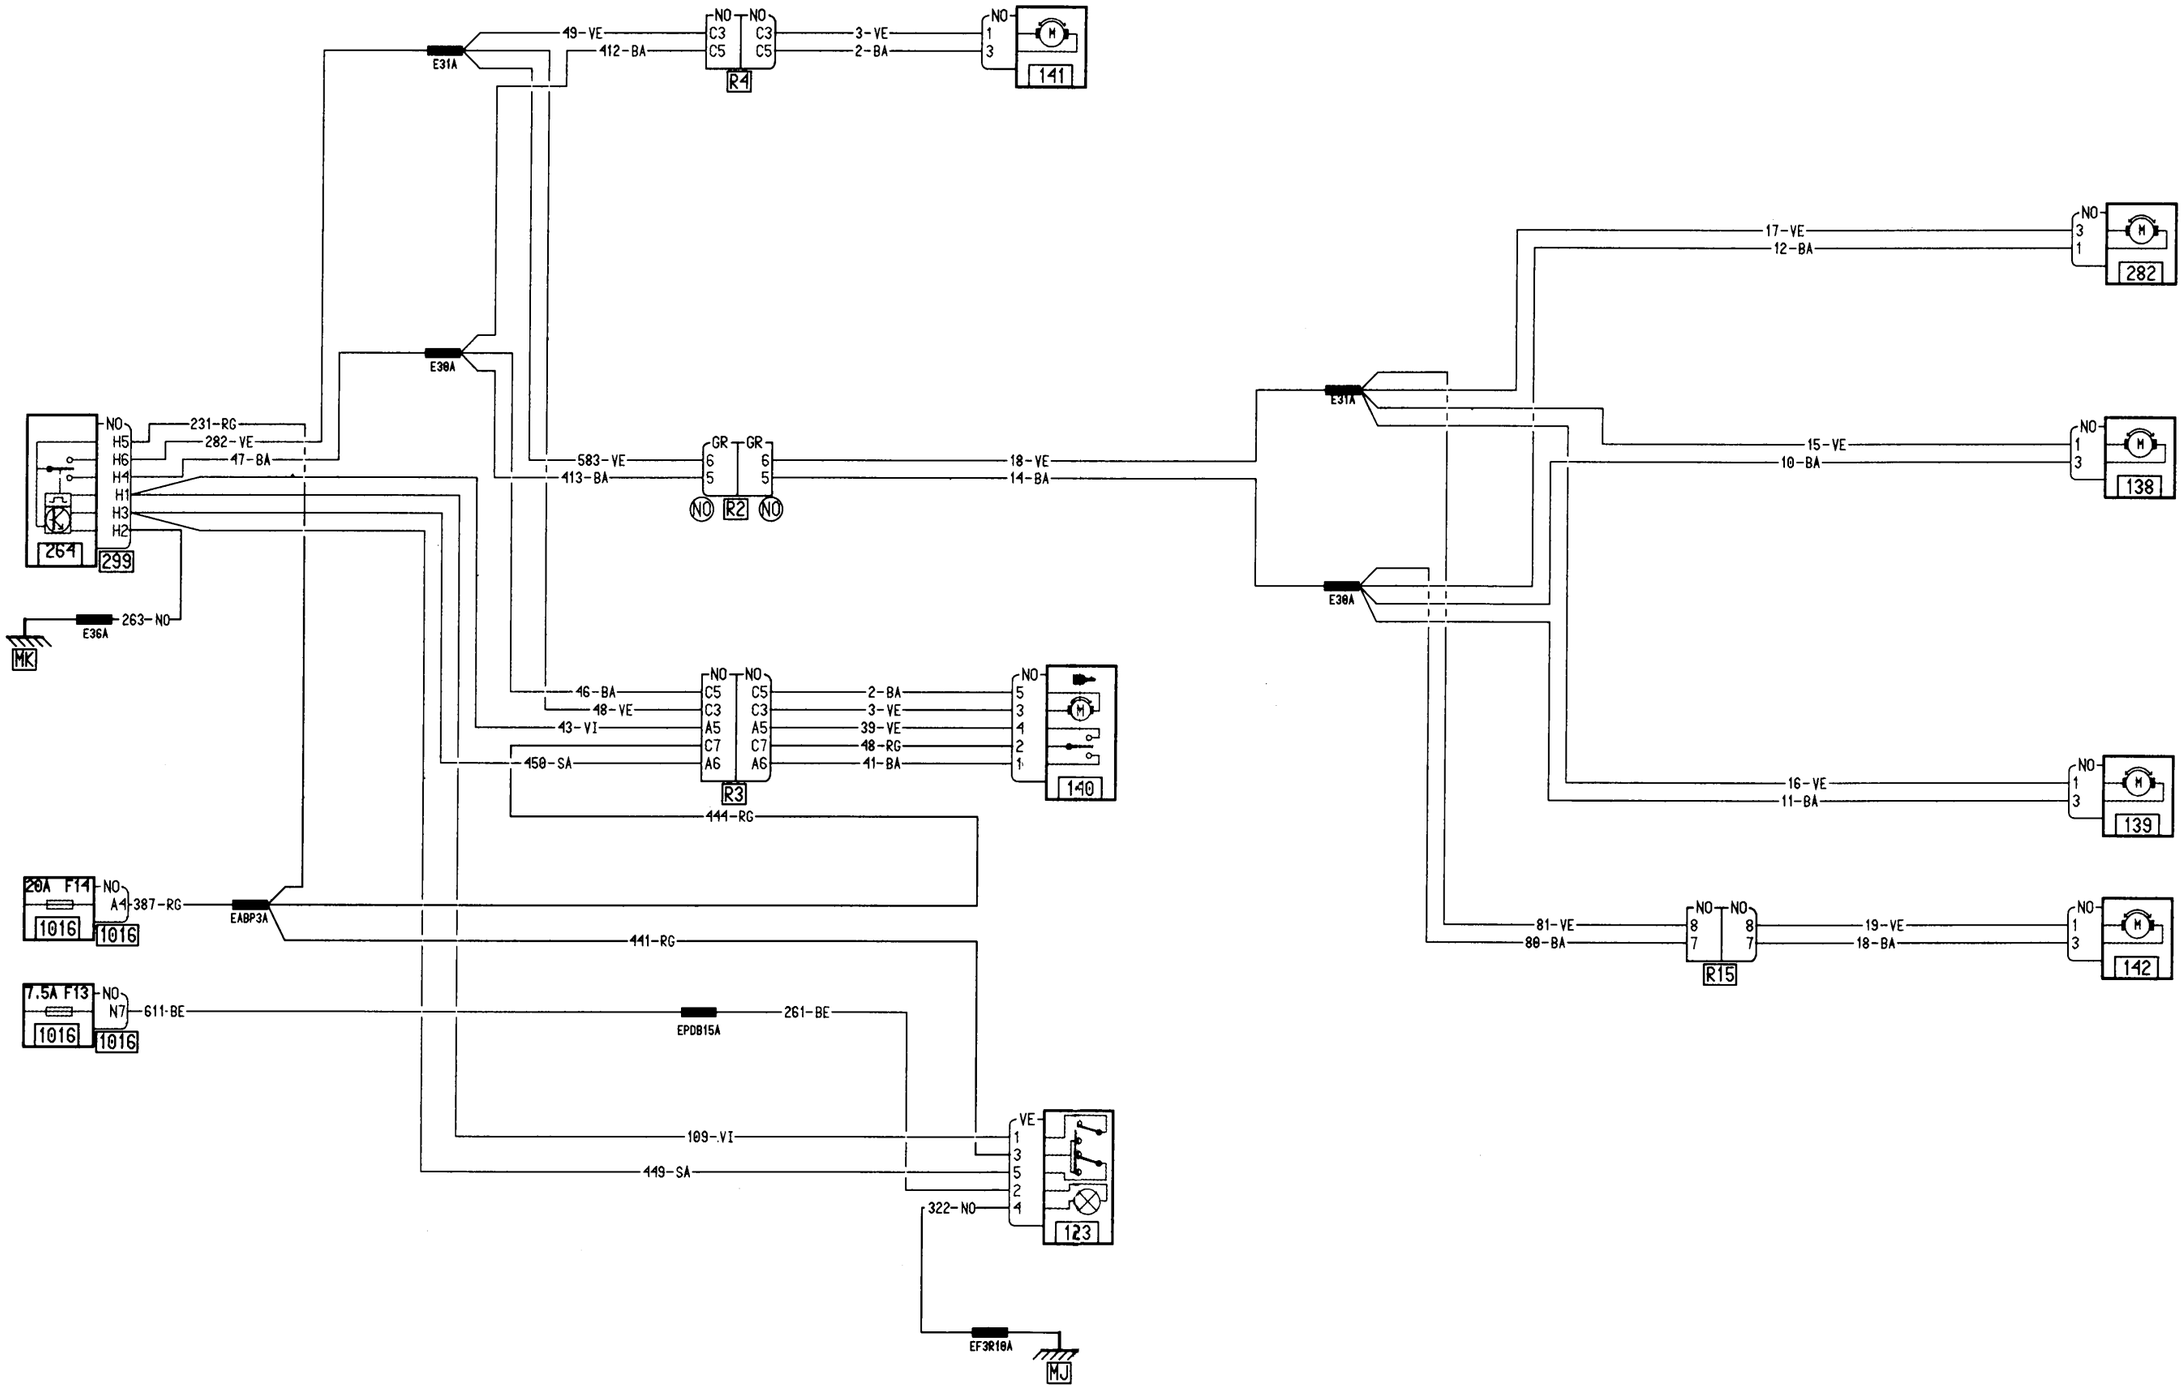
E31A
19-VE
112-BA
NO C3 C5
NO C3 C5
R4
3-VE
2-BA
NO 1 3
141
E39A
231-RG
282-VE
47-BA
NO H5 H6 H4 H1 H3 H2
264
299
583-VE
113-BA
GR 6 5
GR 6 5
NO R2 NO
18-VE
14-BA
E31A
17-VE
12-BA
NO 3 1
282
15-VE
10-BA
NO 1 3
138
E38A
263-NO
E36A
MK
46-BA
18-VE
13-VI
150-SA
NO C5 C3 A5 C7 A6
NO C5 C3 A5 C7 A6
R3
2-BA
3-VE
39-VE
48-RG
41-BA
NO 5 3 4 2 1
140
144-RG
16-VE
11-BA
NO 1 3
139
20A F14
NO A4
387-RG
1016
1016
EABP3A
141-RG
81-VE
80-BA
NO 8 7
NO 8 7
R15
19-VE
18-BA
NO 1 3
142
7.5A F13
NO N7
611-BE
1016
1016
EPDB15A
261-BE
109-VI
149-SA
322-NO
VE 1 3 5 2 4
123
EF3R10A
MJ

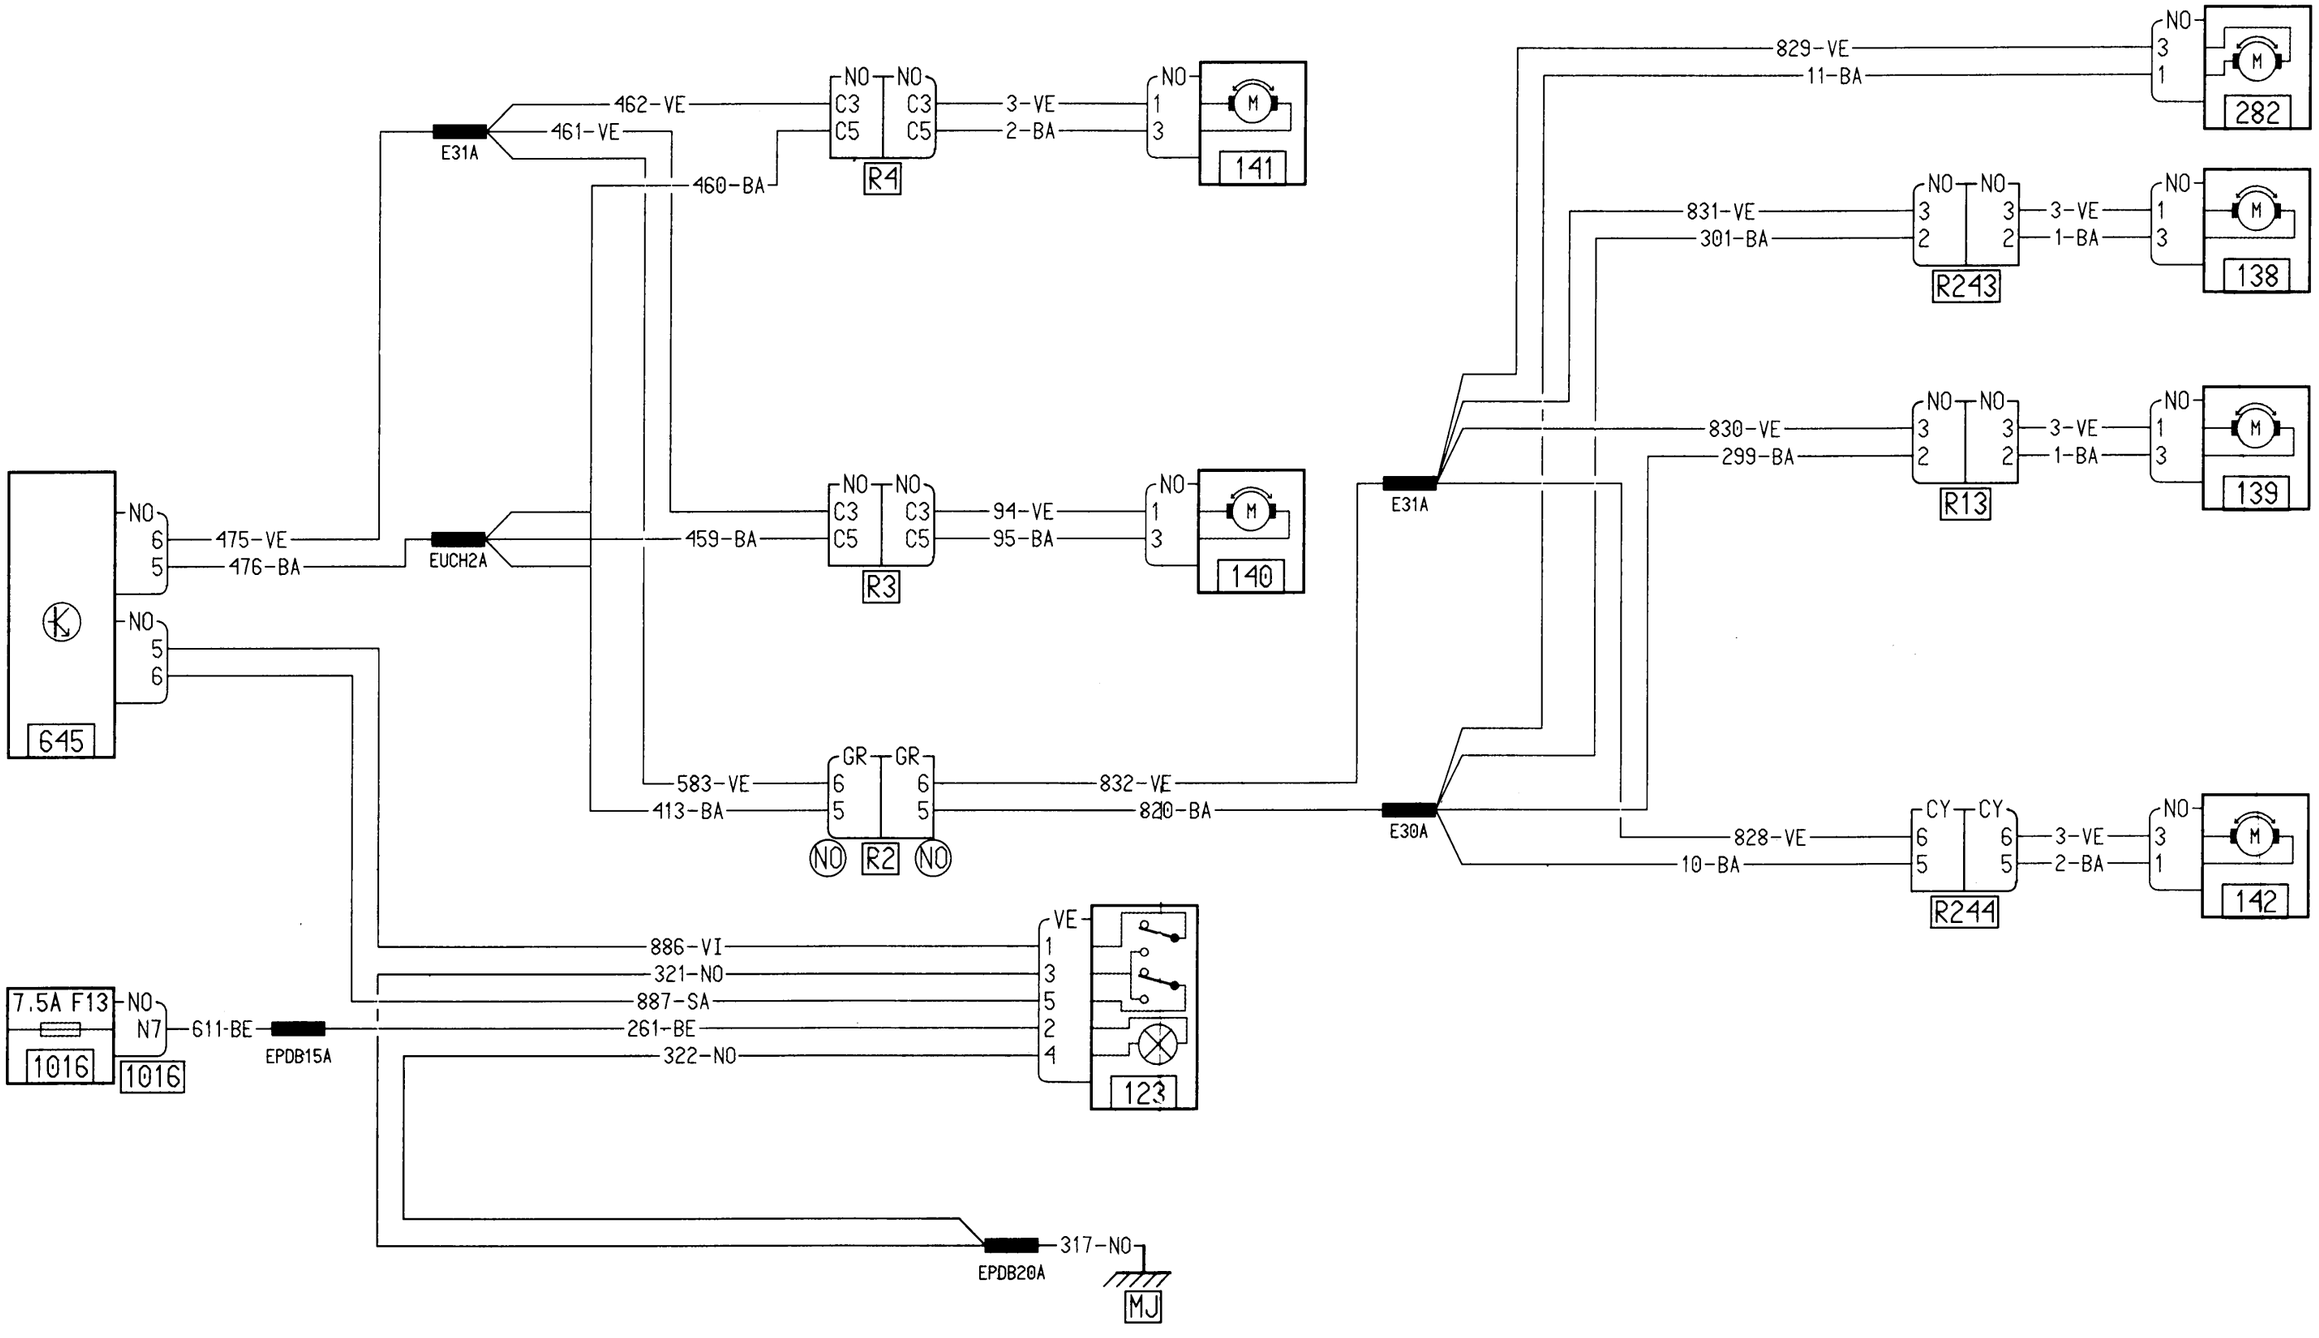
NO
6
5
475-VE
476-BA
645
NO
5
6
E31A
EUCH2A
462-VE
461-VE
460-BA
459-BA
NO C3 C5 NO C3 C5
3-VE
2-BA
94-VE
95-BA
R4
R3
NO 1 3
141
140
M
583-VE
413-BA
GR 6 5 GR 6 5
832-VE
820-BA
NO R2 NO
E30A
829-VE
11-BA
831-VE
301-BA
830-VE
299-BA
828-VE
10-BA
NO 3 1
282
NO 3 2 NO 3 2
R243
R13
1-BA
138
139
CY 6 5 CY 6 5
R244
3-VE
2-BA
142
7.5A F13
1016
NO
N7
611-BE
EPDB15A
886-VI
321-NO
887-SA
261-BE
322-NO
VE 1 3 5 2 4
123
317-NO
EPDB20A
MJ

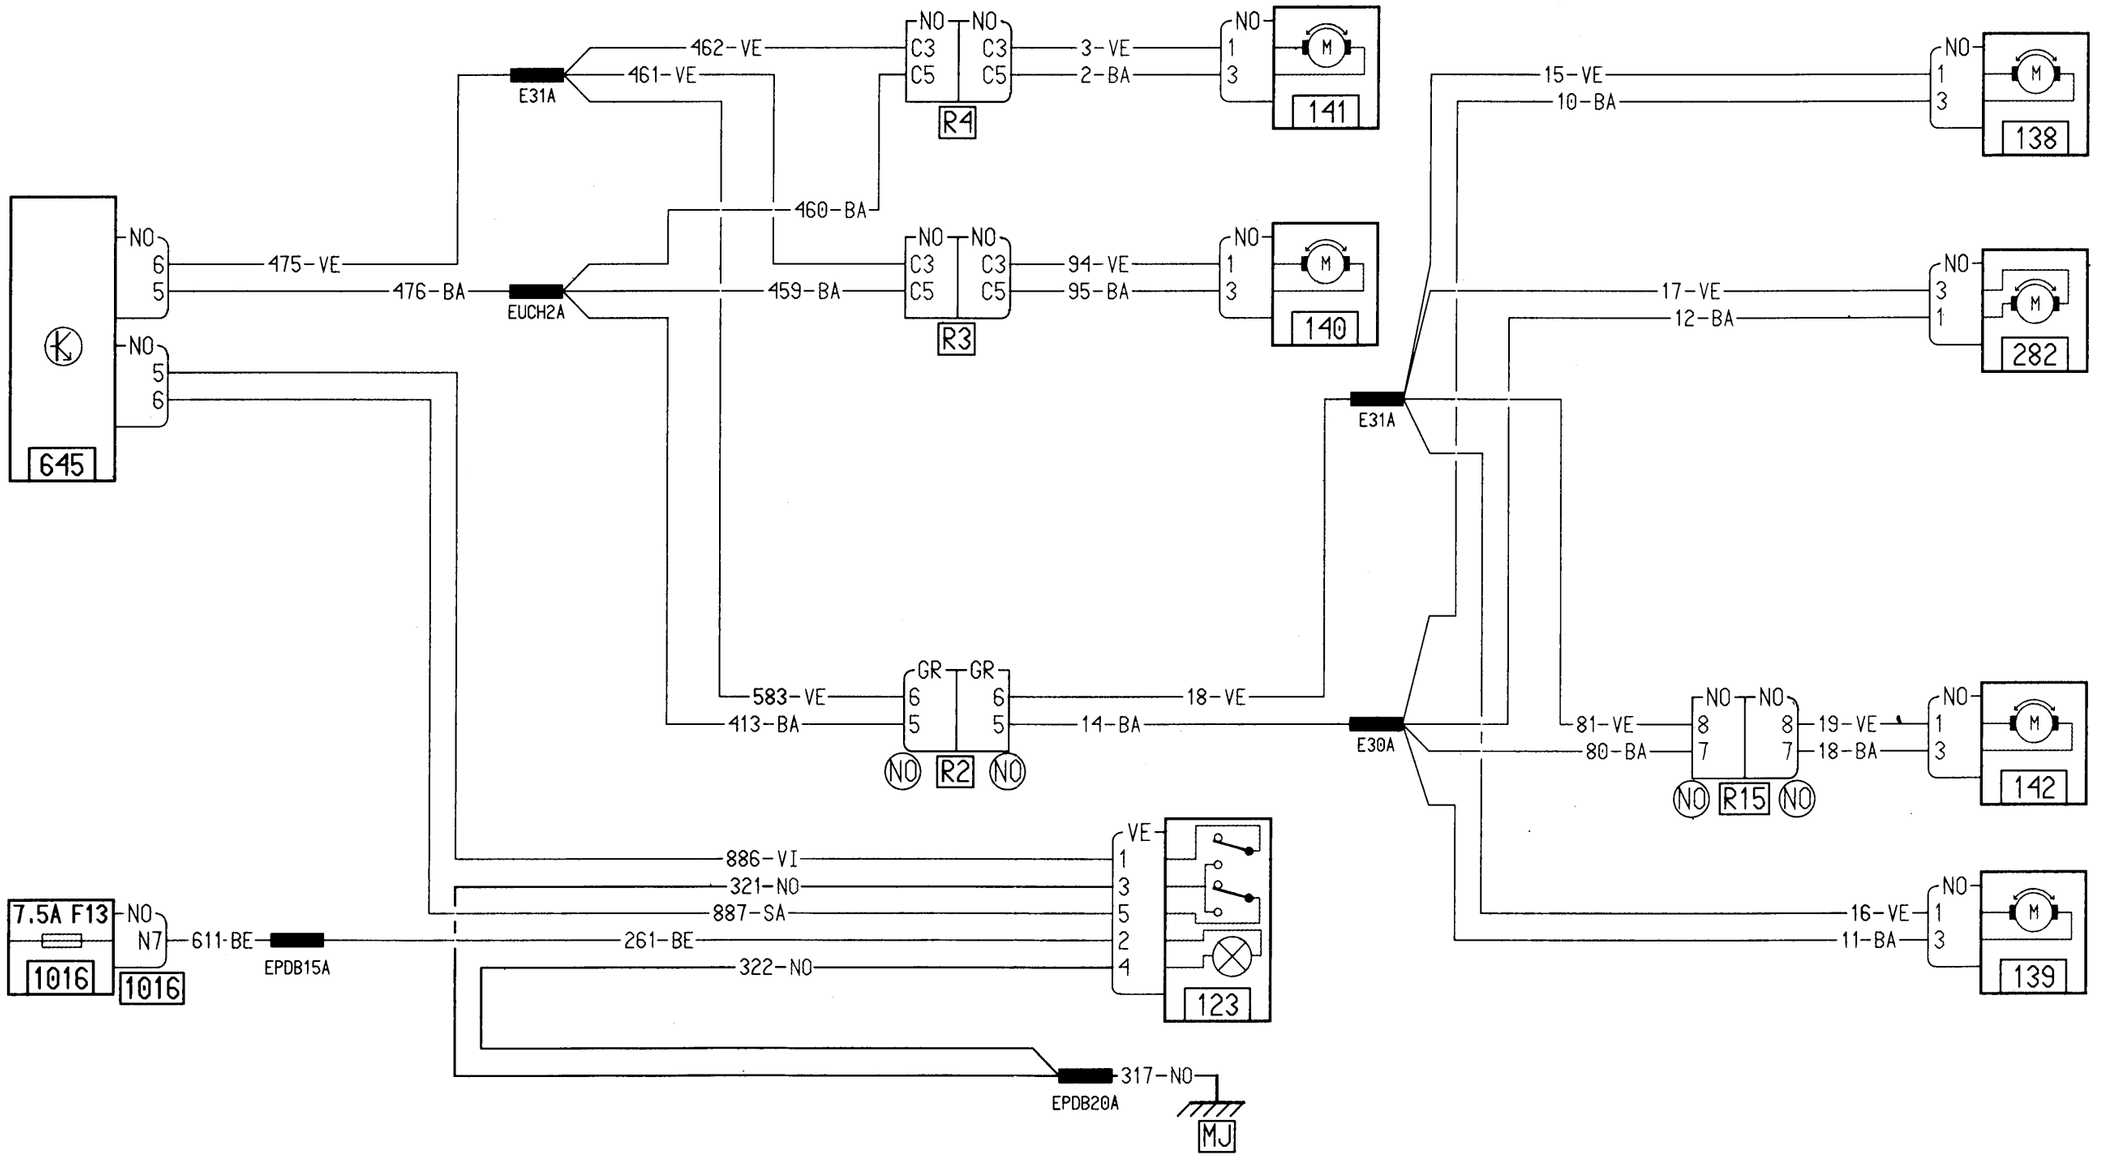
645
NO 6
NO 5
475-VE
476-BA
NO 5
NO 6
E31A
462-VE
461-VE
460-BA
EUCH2A
459-BA
NO C3 NO C3
C5 C5
R4
3-VE
2-BA
R3
94-VE
95-BA
NO 1 3
141
140
583-VE
413-BA
GR 6 GR 6
5 5
NO R2 NO
18-VE
14-BA
E30A
15-VE
10-BA
17-VE
12-BA
81-VE
80-BA
NO 8 NO 8
7 7
NO R15 NO
19-VE
18-BA
138
282
142
139
16-VE
11-BA
7.5A F13
NO N7
1016
1016
611-BE
EPDB15A
886-VI
321-NO
887-SA
261-BE
322-NO
VE 1 3 5 2 4
123
317-NO
EPDB20A
MJ

ELECTRICAL HEADLIGHT CORRECTOR

E2/DD/REGSIT/PROJDO

X64

00

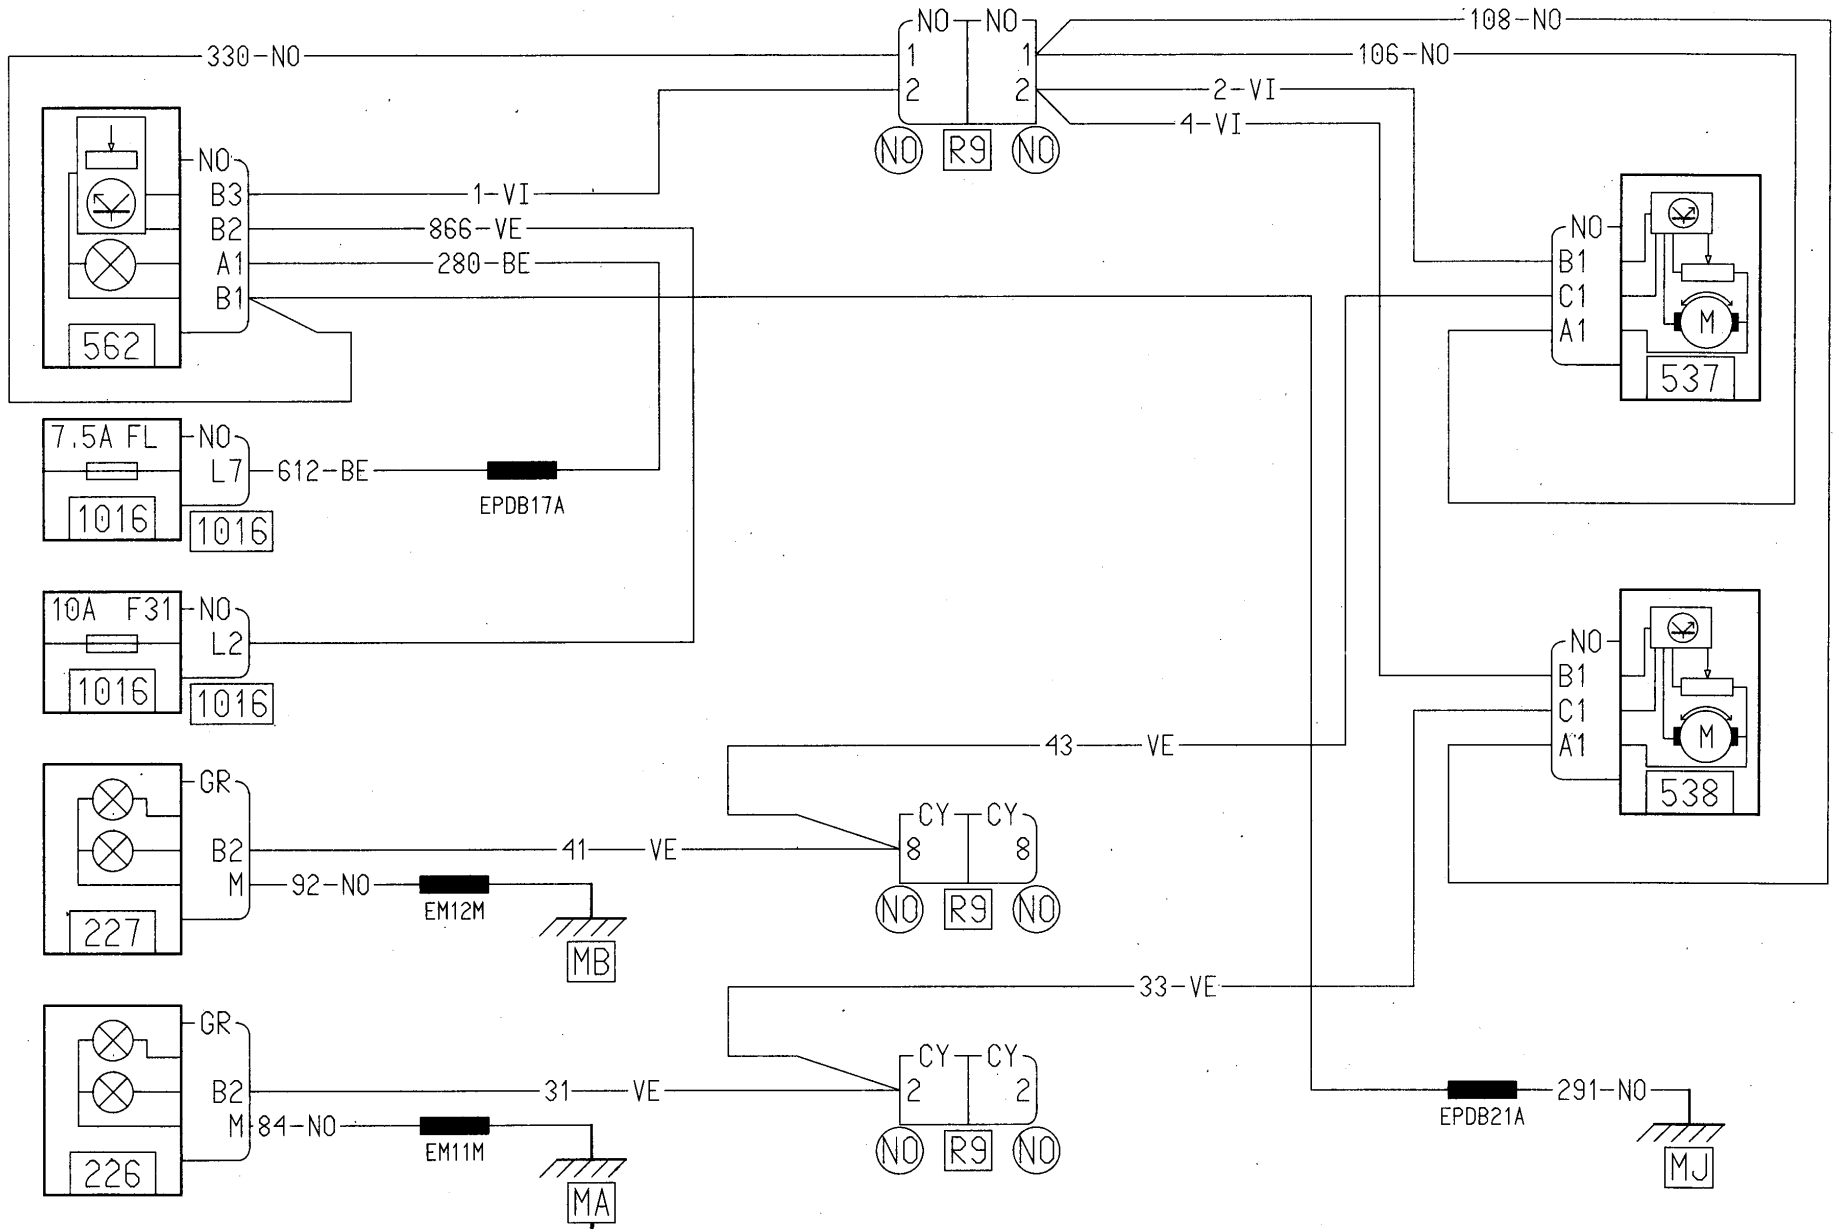

ELECTRICAL HEADLIGHT CORRECTOR

(E64/E2/DG/REGSIT),(E2/DG/PROJDO),(E2/DG/REGSIT/PROJDO)

X64
00

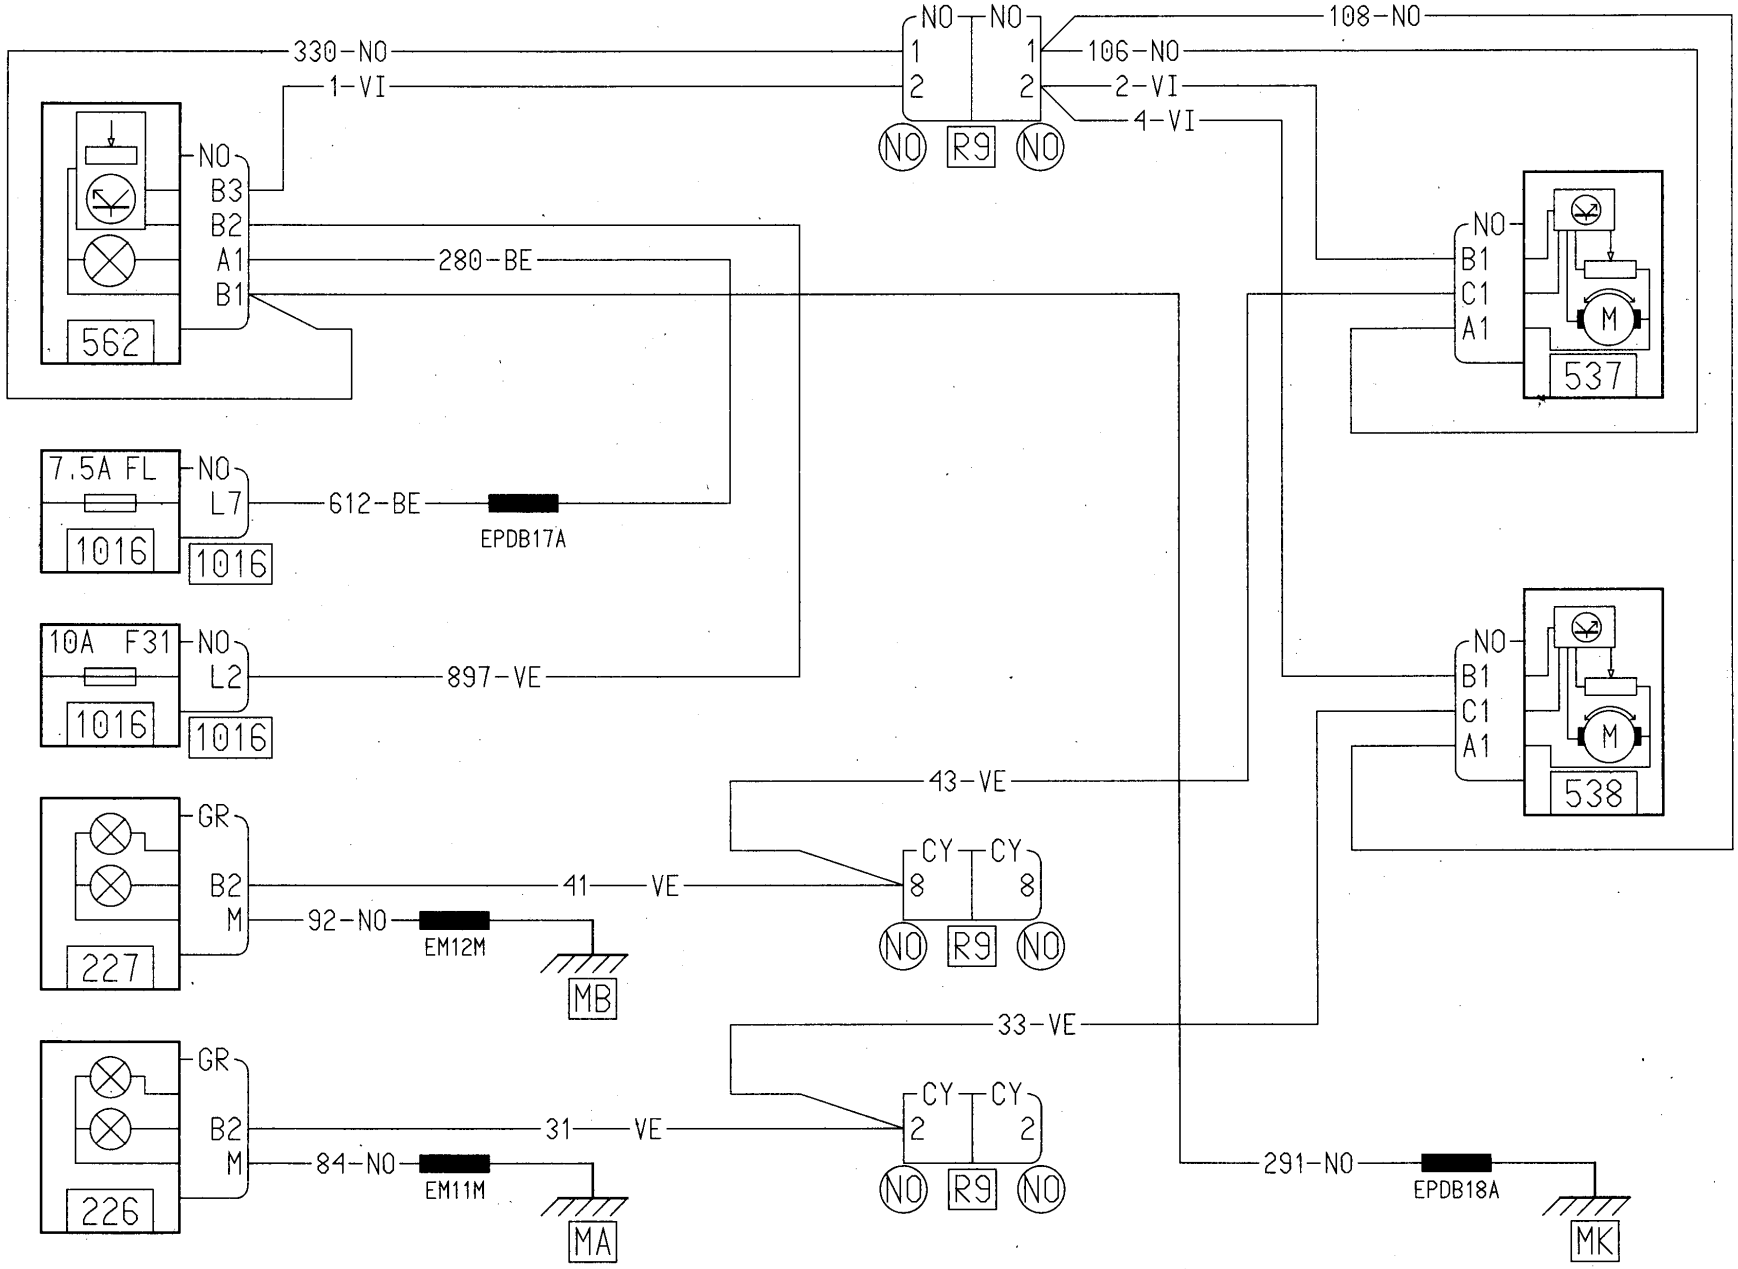

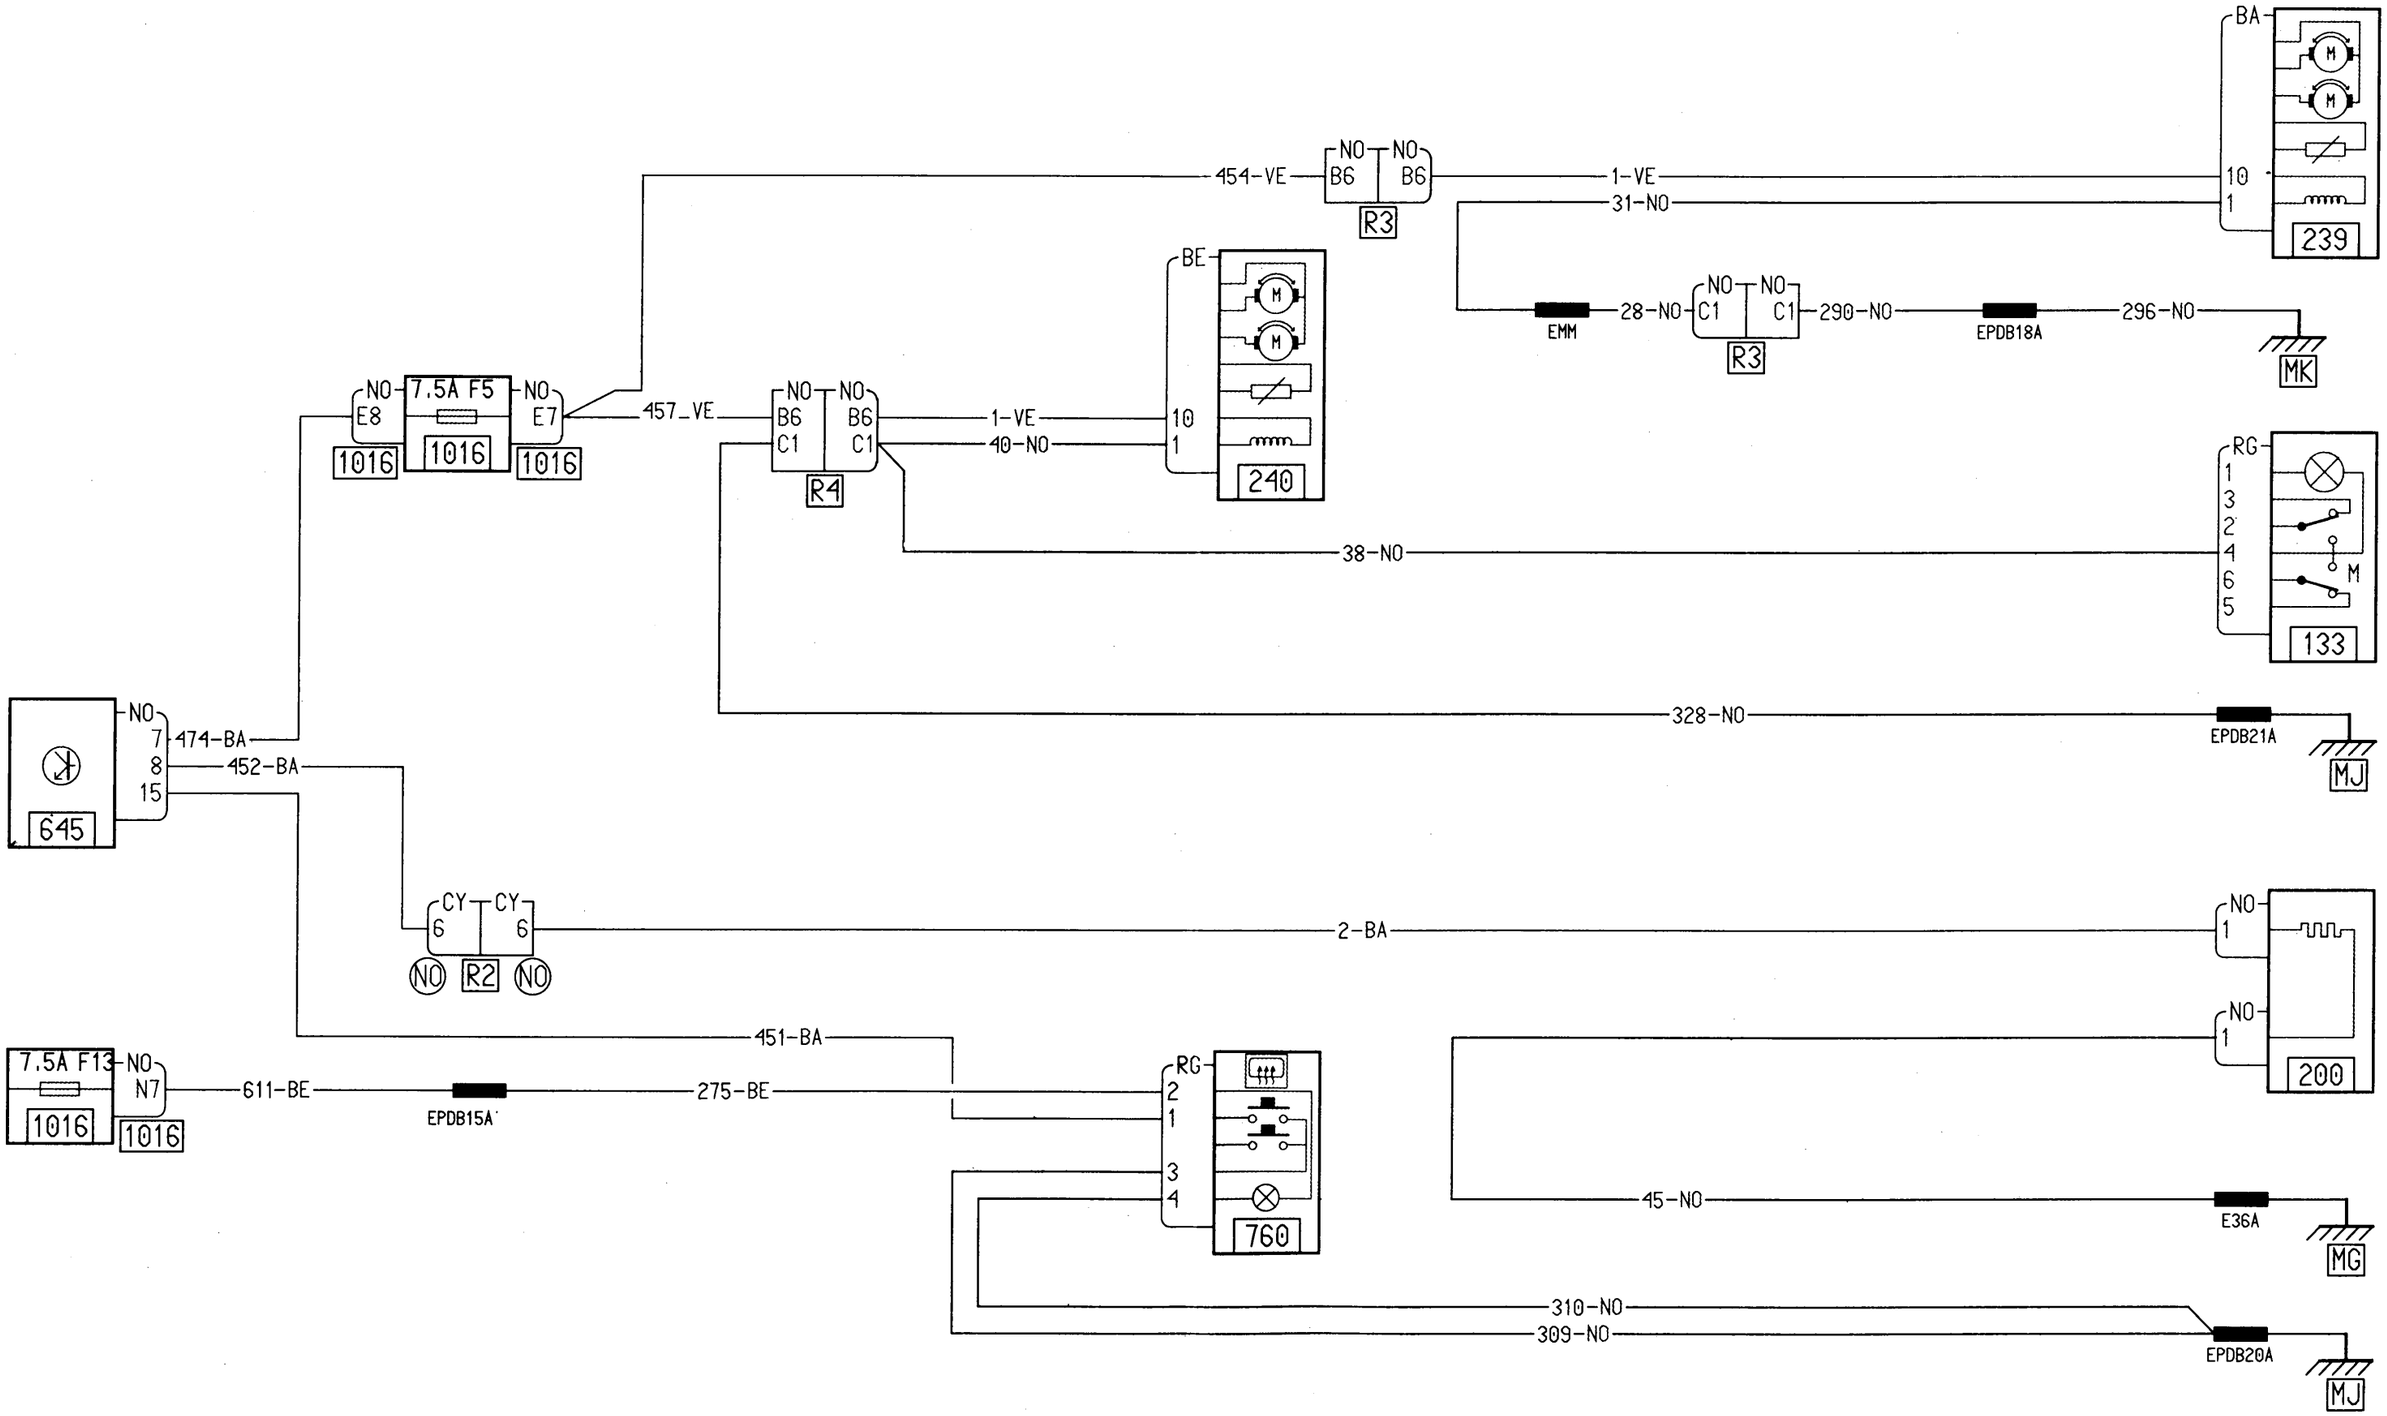
BA
M
M
10
1
239
454-VE
NO
B6
NO
B6
R3
1-VE
31-NO
BE
M
M
10
1
240
NO
E8
7.5A F5
NO
E7
1016
1016
1016
457_VE
NO
B6
C1
NO
B6
C1
R4
1-VE
40-NO
EMM
28-NO
NO
C1
NO
C1
R3
290-NO
EPDB18A
296-NO
MK
RG
1
3
2
4
6
5
M
133
38-NO
328-NO
EPDB21A
MJ
NO
7
8
15
474-BA
452-BA
645
CY
6
CY
6
NO
R2
NO
2-BA
NO
1
NO
1
200
451-BA
7.5A F13
NO
N7
1016
1016
611-BE
EPDB15A
275-BE
RG
2
1
3
4
760
45-NO
E36A
MG
310-NO
309-NO
EPDB20A
MJ

REAR SCREEN DE-ICING

L64/E2/DG/LVAVEL

X64

00

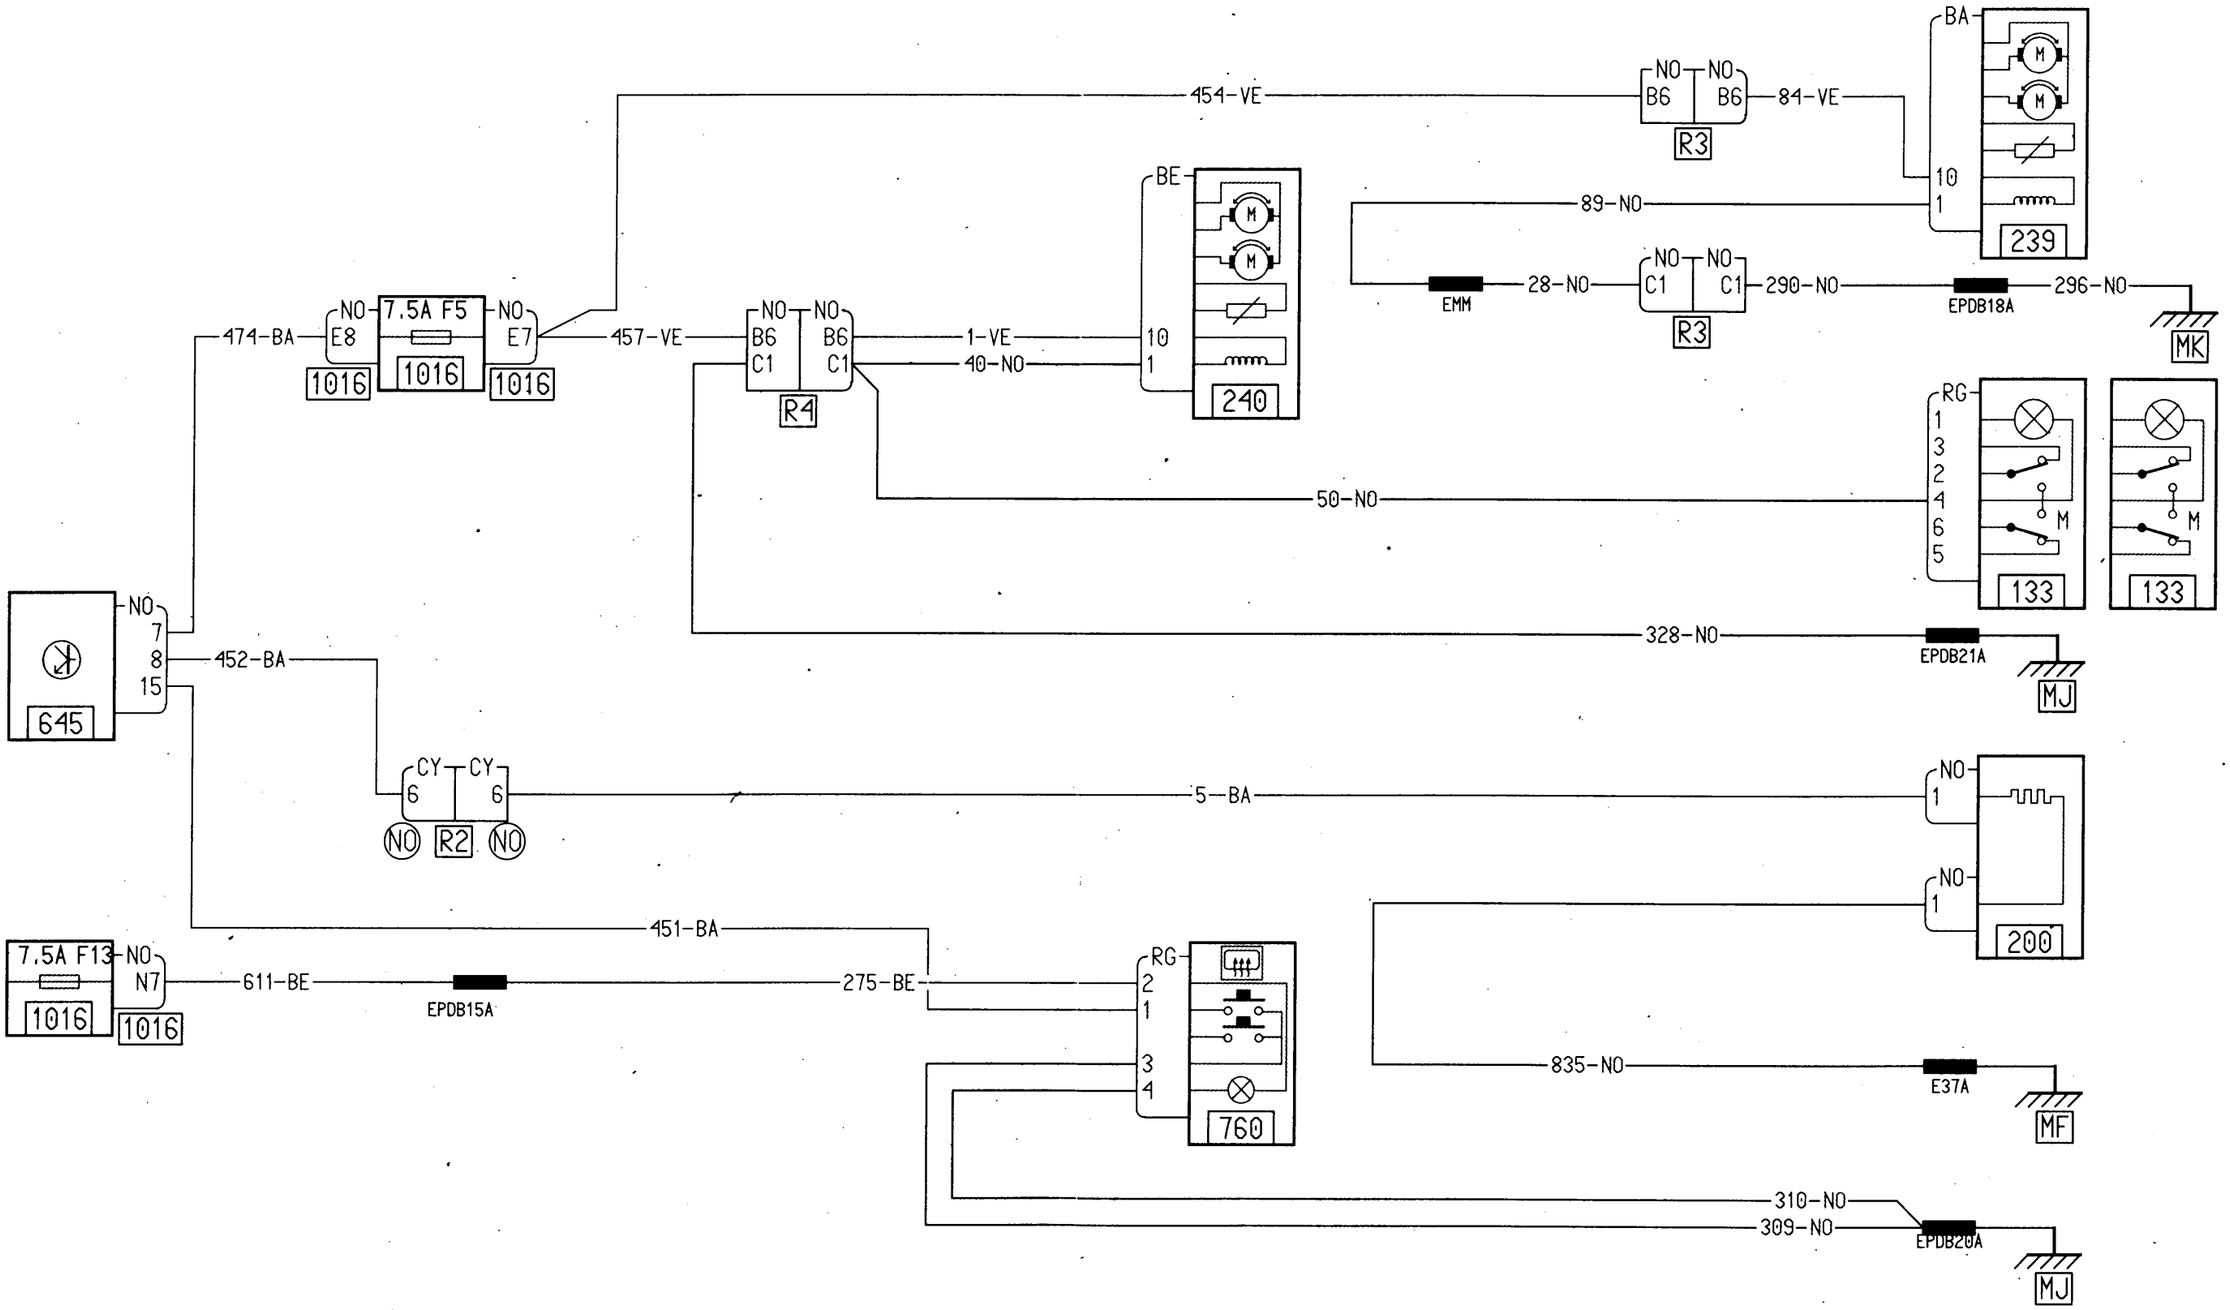

REAR SCREEN DE-ICING

K25/E2/DG/LVAVEL

X64
00

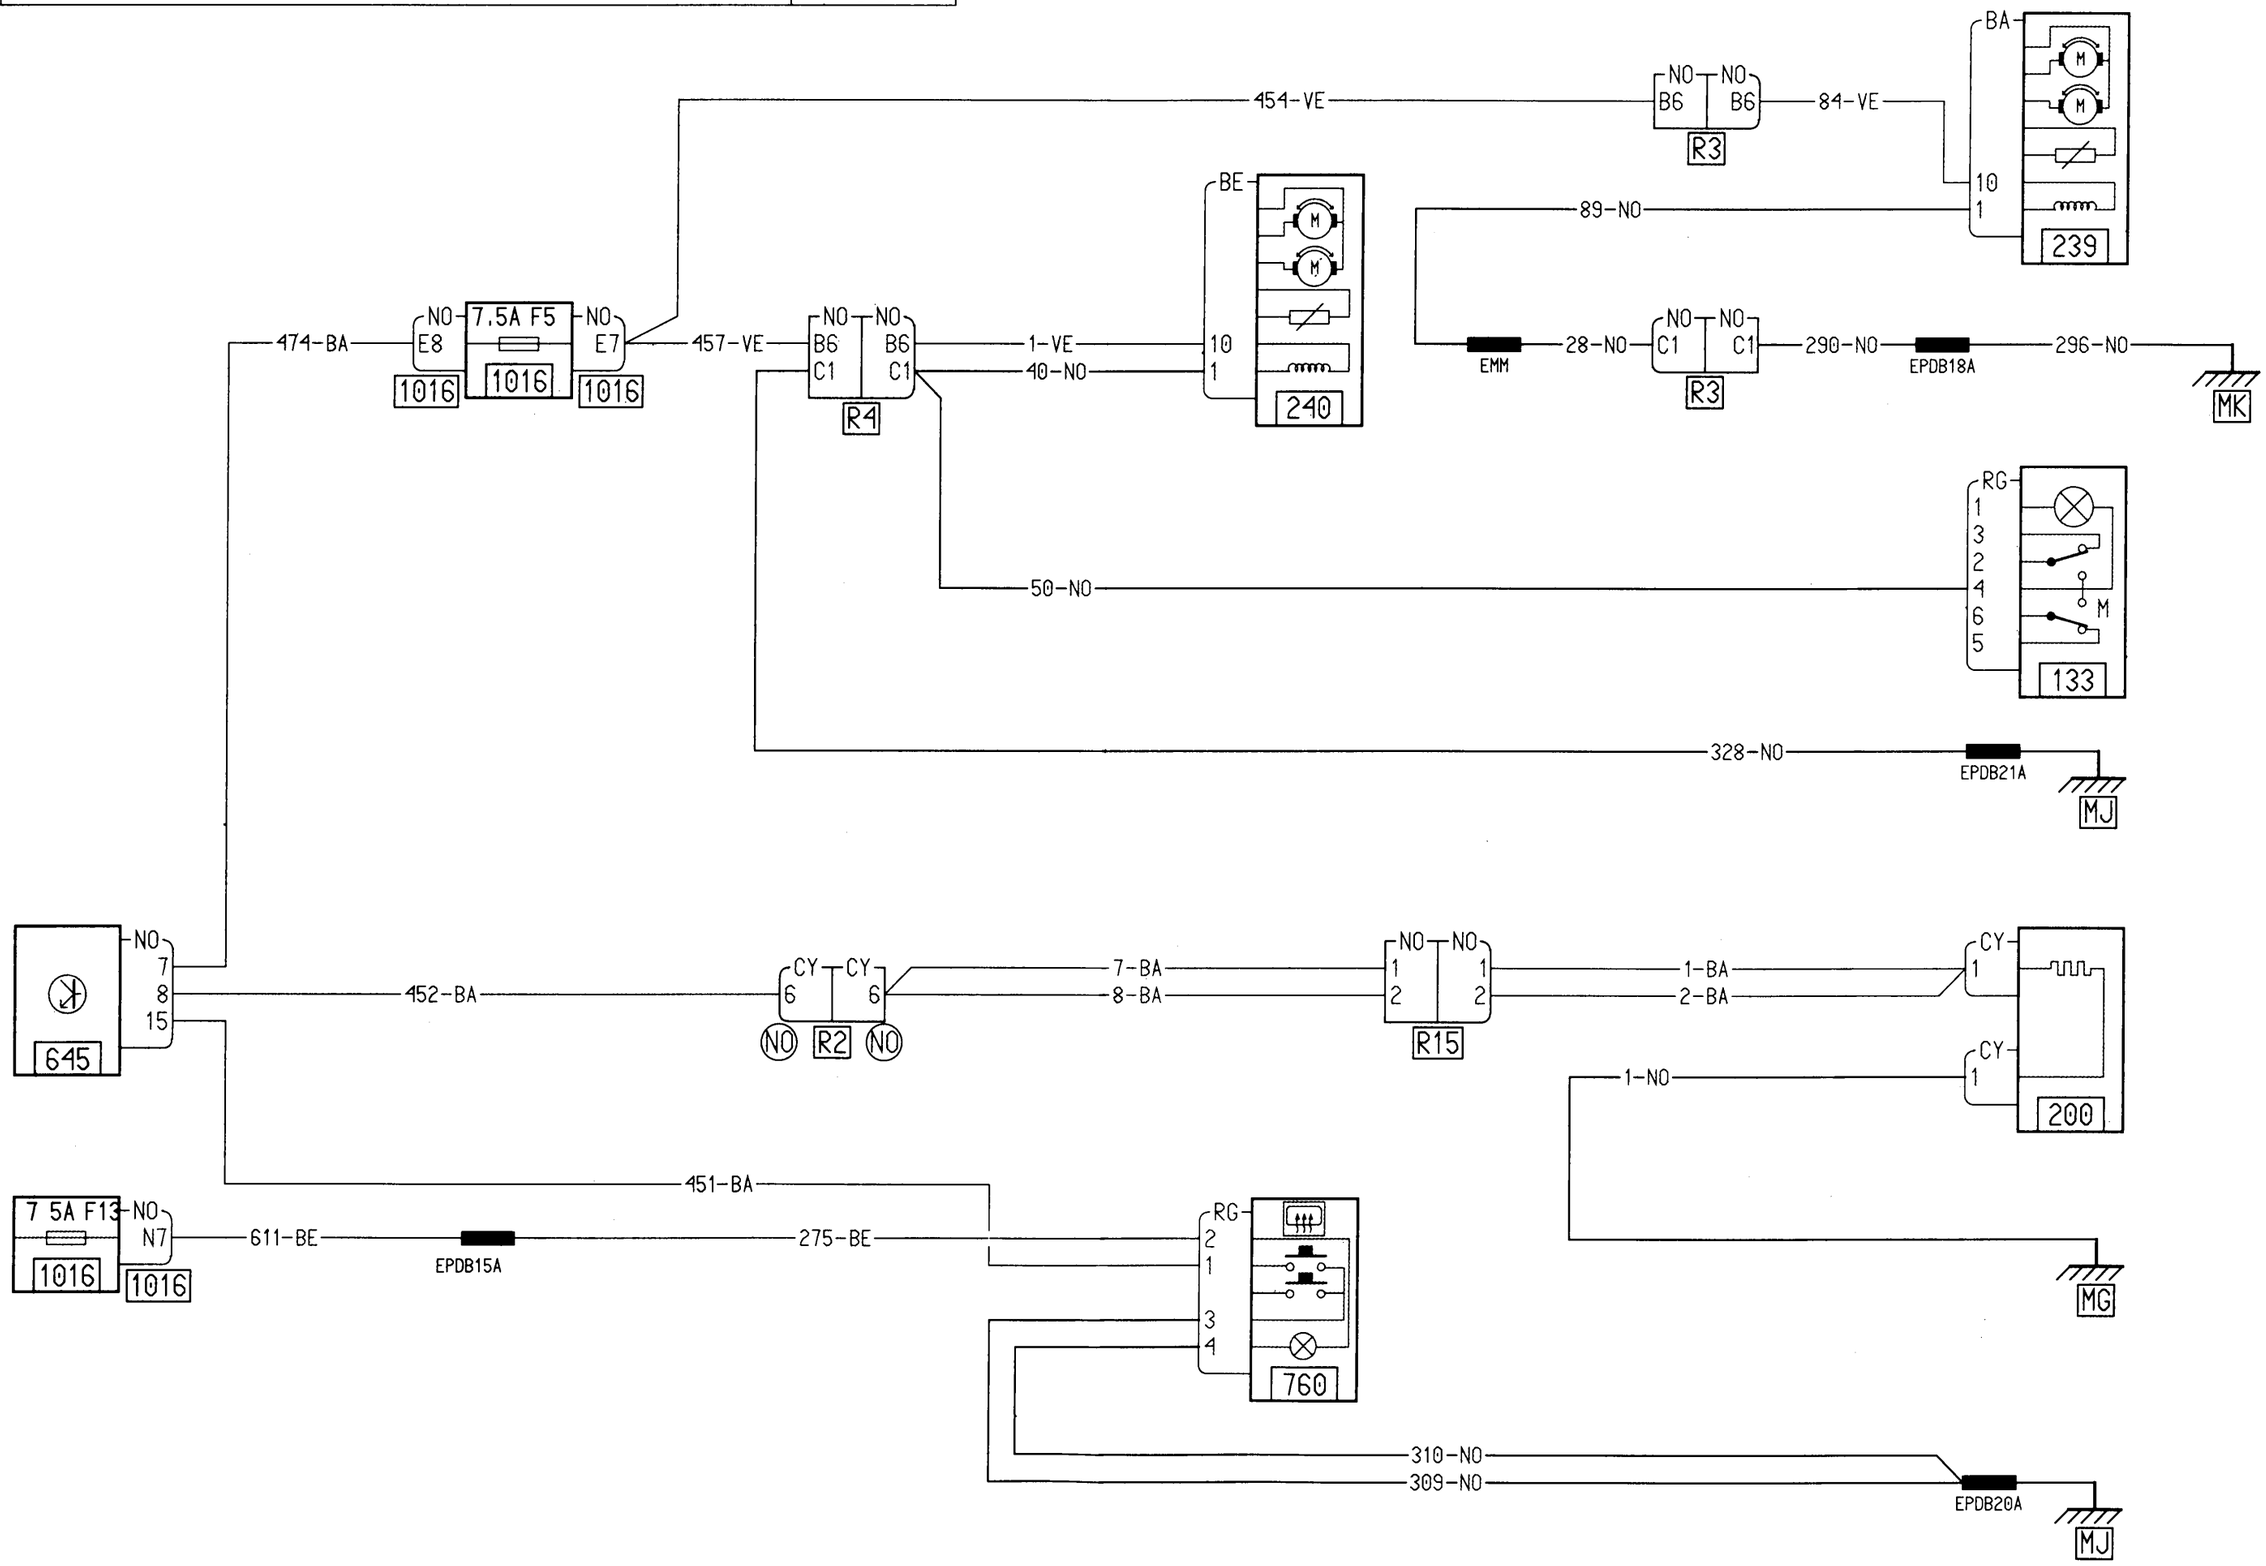

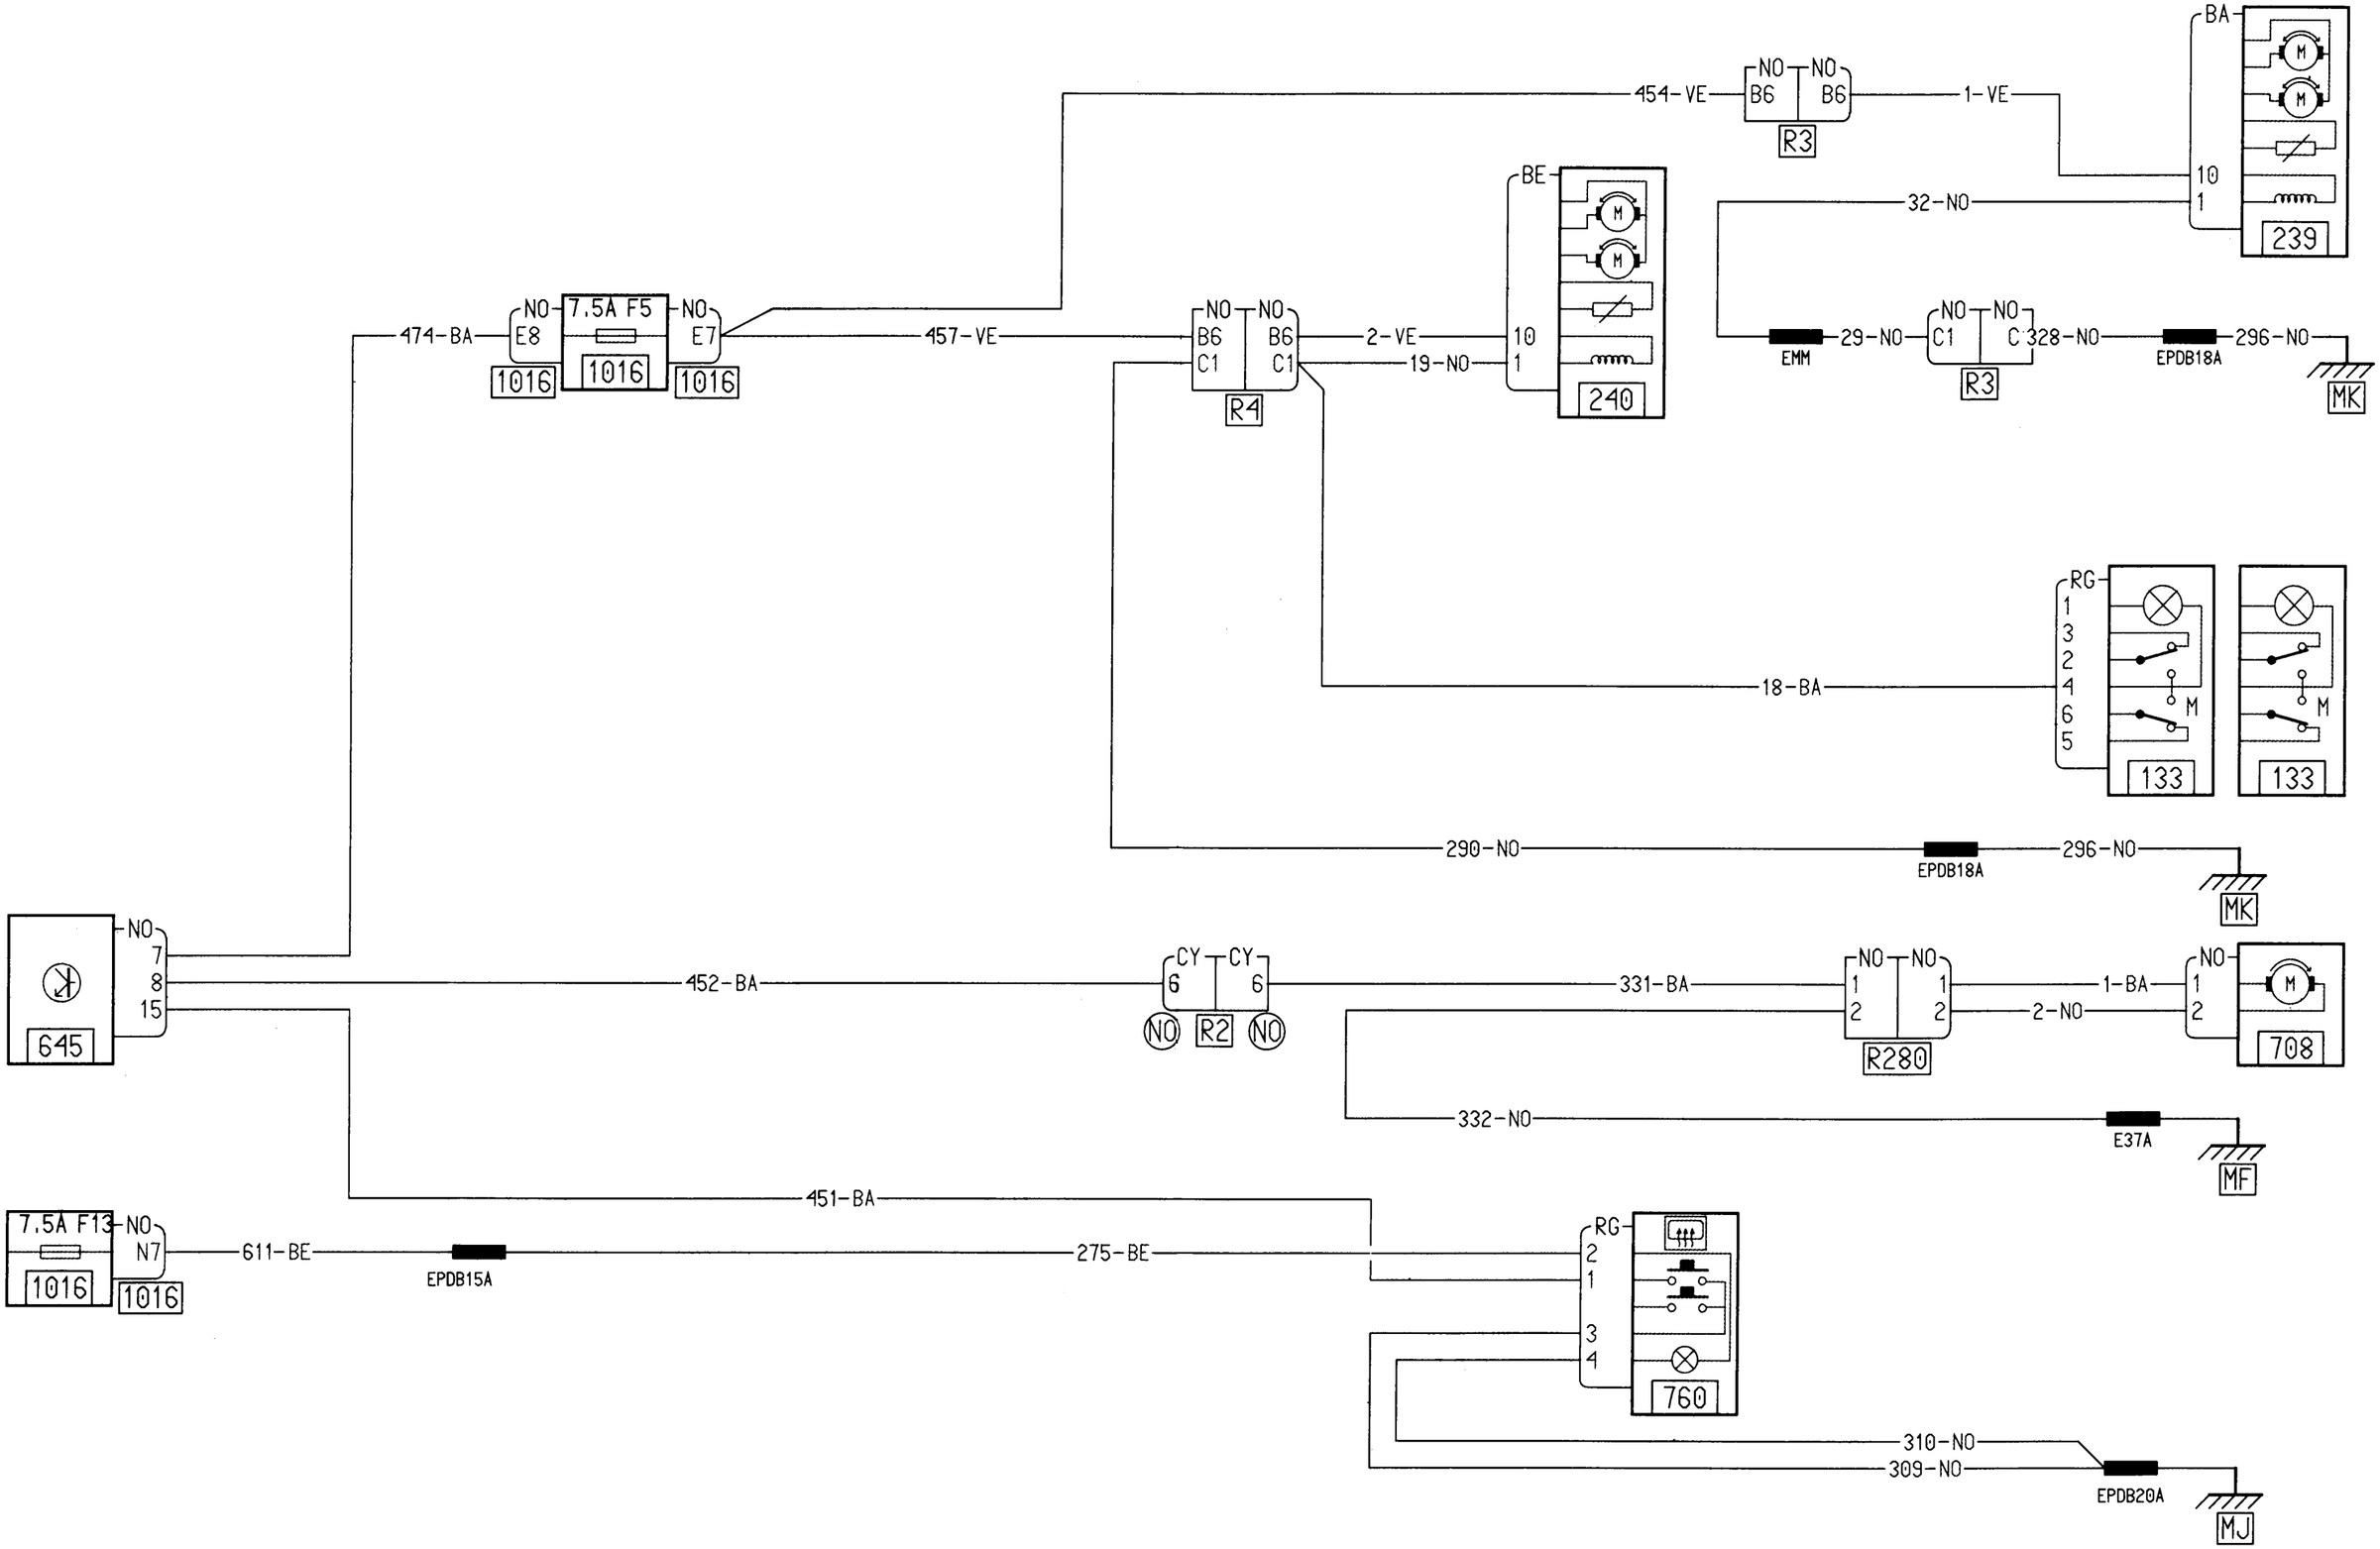
454-VE
NO B6
NO B6
R3
1-VE
BA
M
M
10
1
239
32-NO
BE
M
M
10
1
240
474-BA
NO E8
7.5A F5
1016
1016
NO E7
1016
457-VE
NO B6
NO B6
C1
C1
R4
2-VE
19-NO
EMM
29-NO
NO C1
NO C
R3
328-NO
EPDB18A
296-NO
MK
RG
1
3
2
4
6
5
M
133
M
133
18-BA
290-NO
EPDB18A
296-NO
MK
NO
7
8
15
645
452-BA
CY 6
CY 6
NO
R2
NO
331-BA
NO 1
NO 1
2
2
R280
1-BA
2-NO
NO 1
2
M
708
332-NO
E37A
MF
451-BA
7.5A F13
NO N7
1016
1016
611-BE
EPDB15A
275-BE
RG
2
1
3
4
760
310-NO
309-NO
EPDB20A
MJ

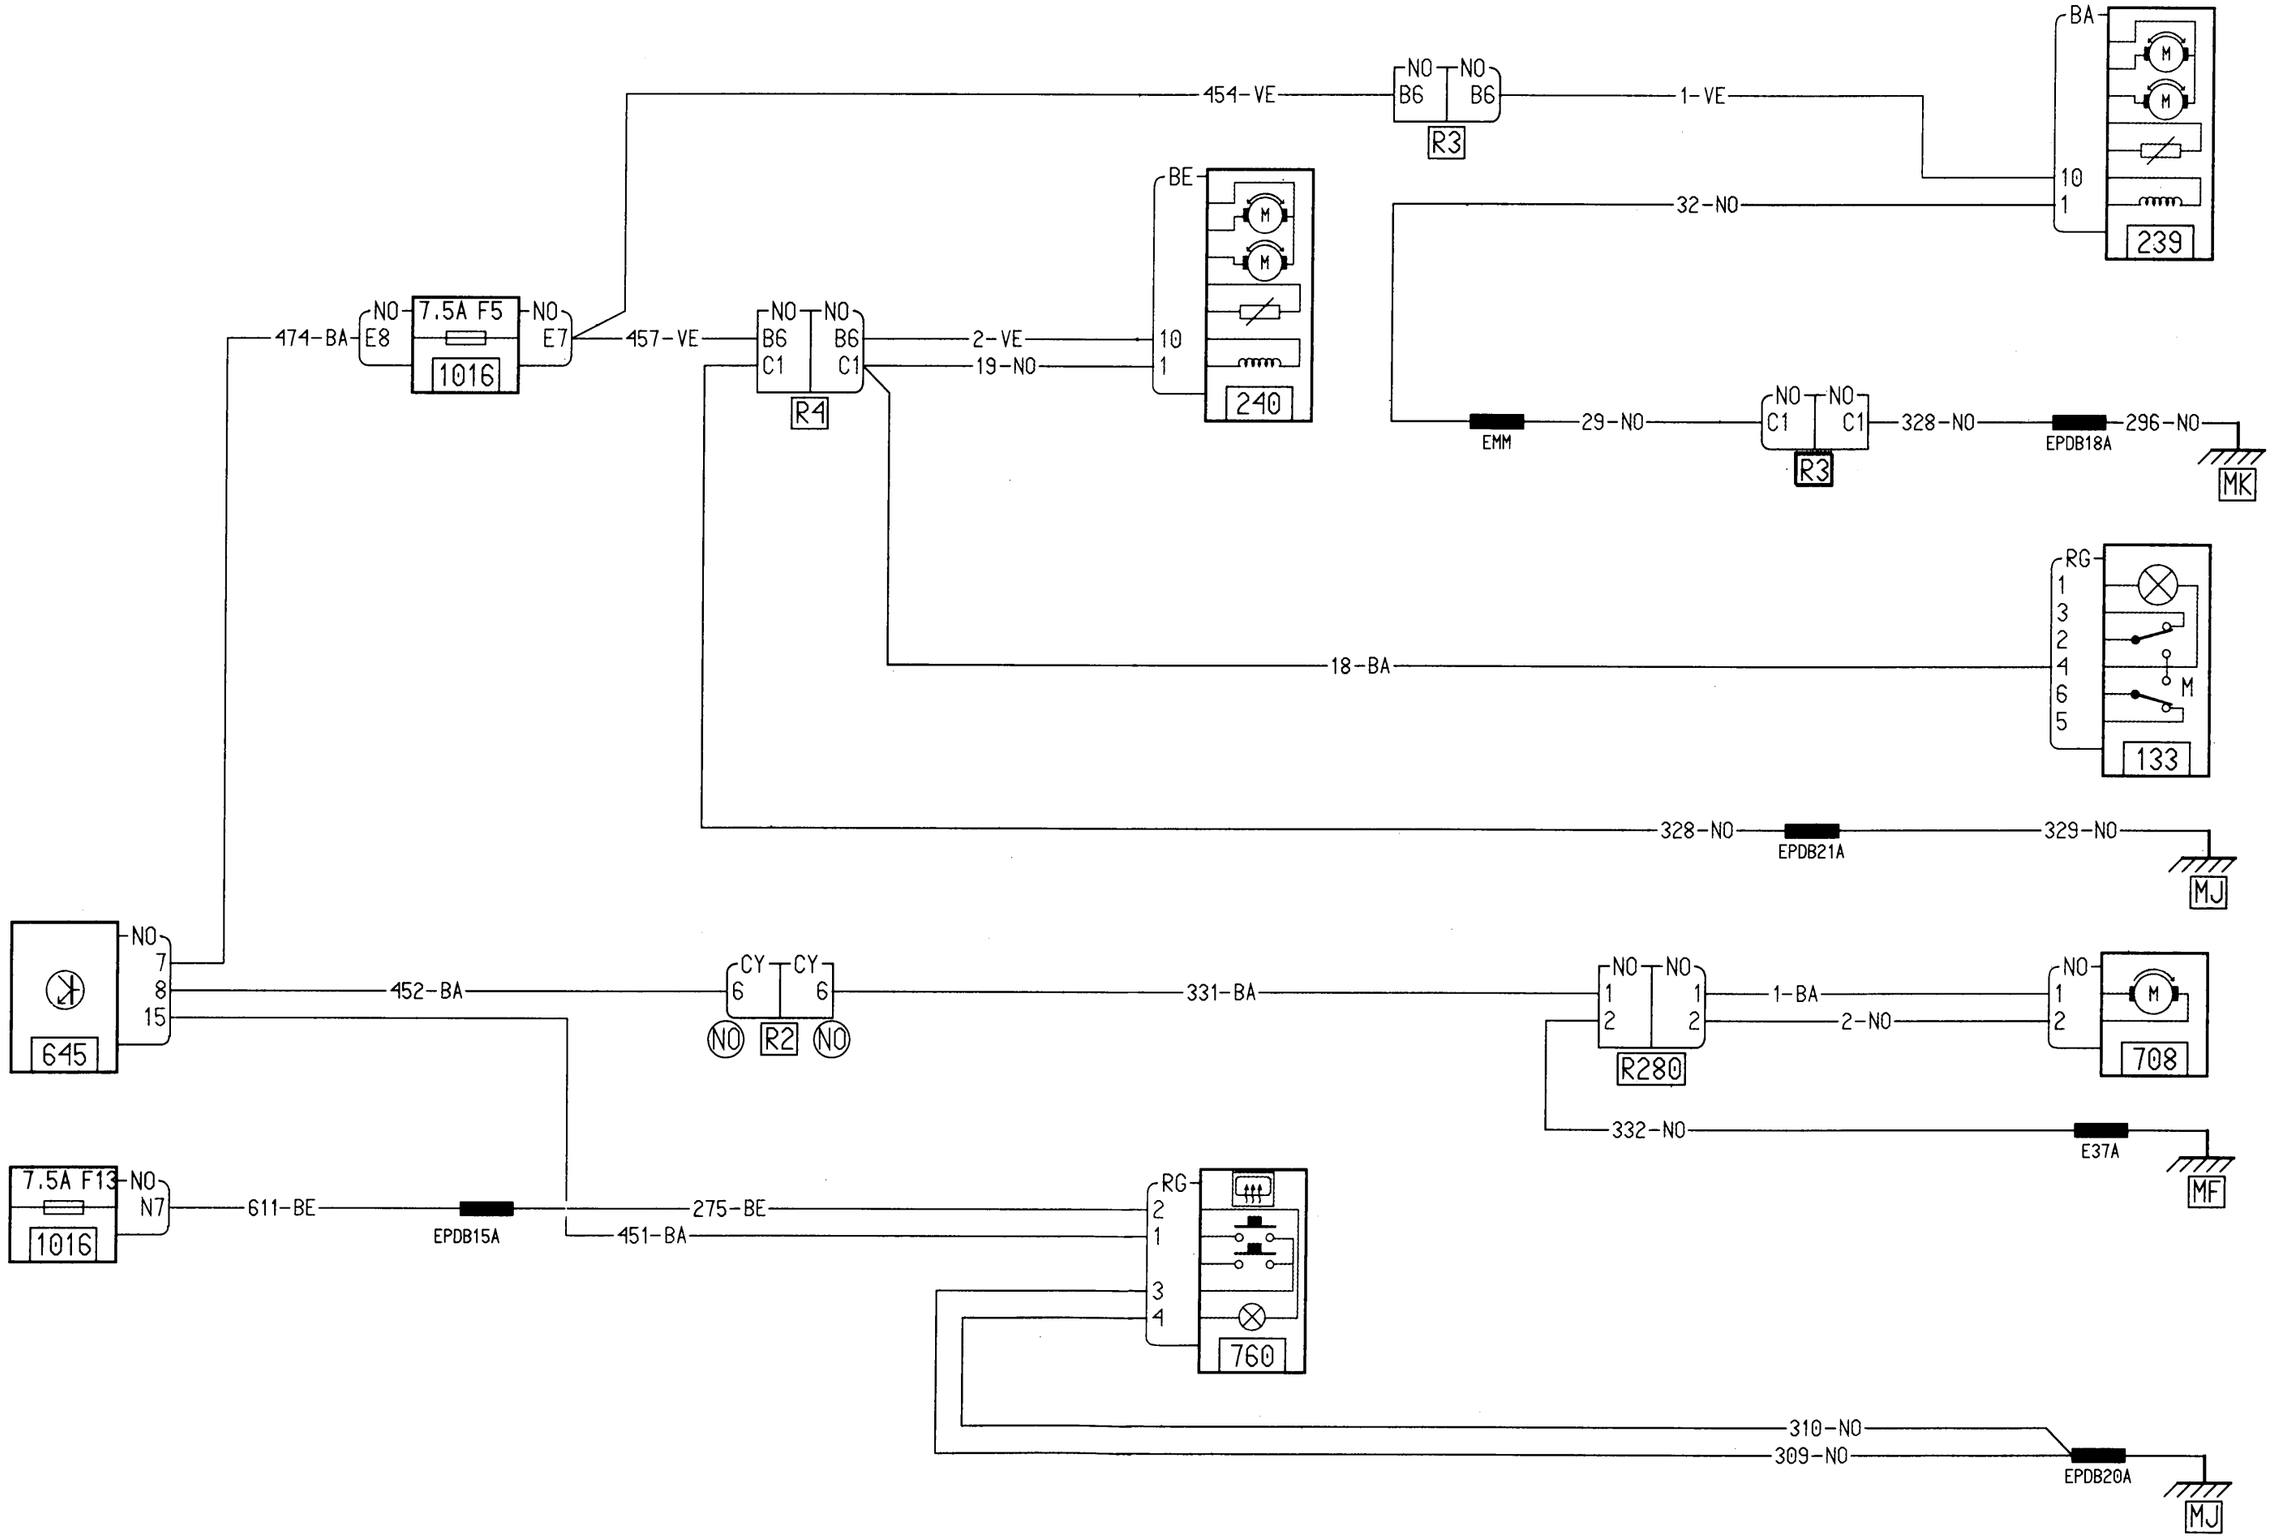
454-VE
NO B6 NO B6
R3
1-VE
BA
M
M
10
1
239
32-NO
BE
M
M
10
1
240
NO E8 7.5A F5 NO E7
1016
474-BA
457-VE
NO B6 NO B6
C1 C1
R4
2-VE
19-NO
EMM
29-NO
NO C1 NO C1
R3
328-NO
EPDB18A
296-NO
MK
RG
1
3
2
4
6
5
M
133
18-BA
328-NO
EPDB21A
329-NO
MJ
NO
7
8
15
645
452-BA
CY 6 CY 6
NO R2 NO
331-BA
NO 1 NO 1
2 2
R280
1-BA
2-NO
NO
1
2
M
708
332-NO
E37A
MF
7.5A F13 NO
N7
1016
611-BE
EPDB15A
275-BE
451-BA
RG
2
1
3
4
760
310-NO
309-NO
EPDB20A
MJ

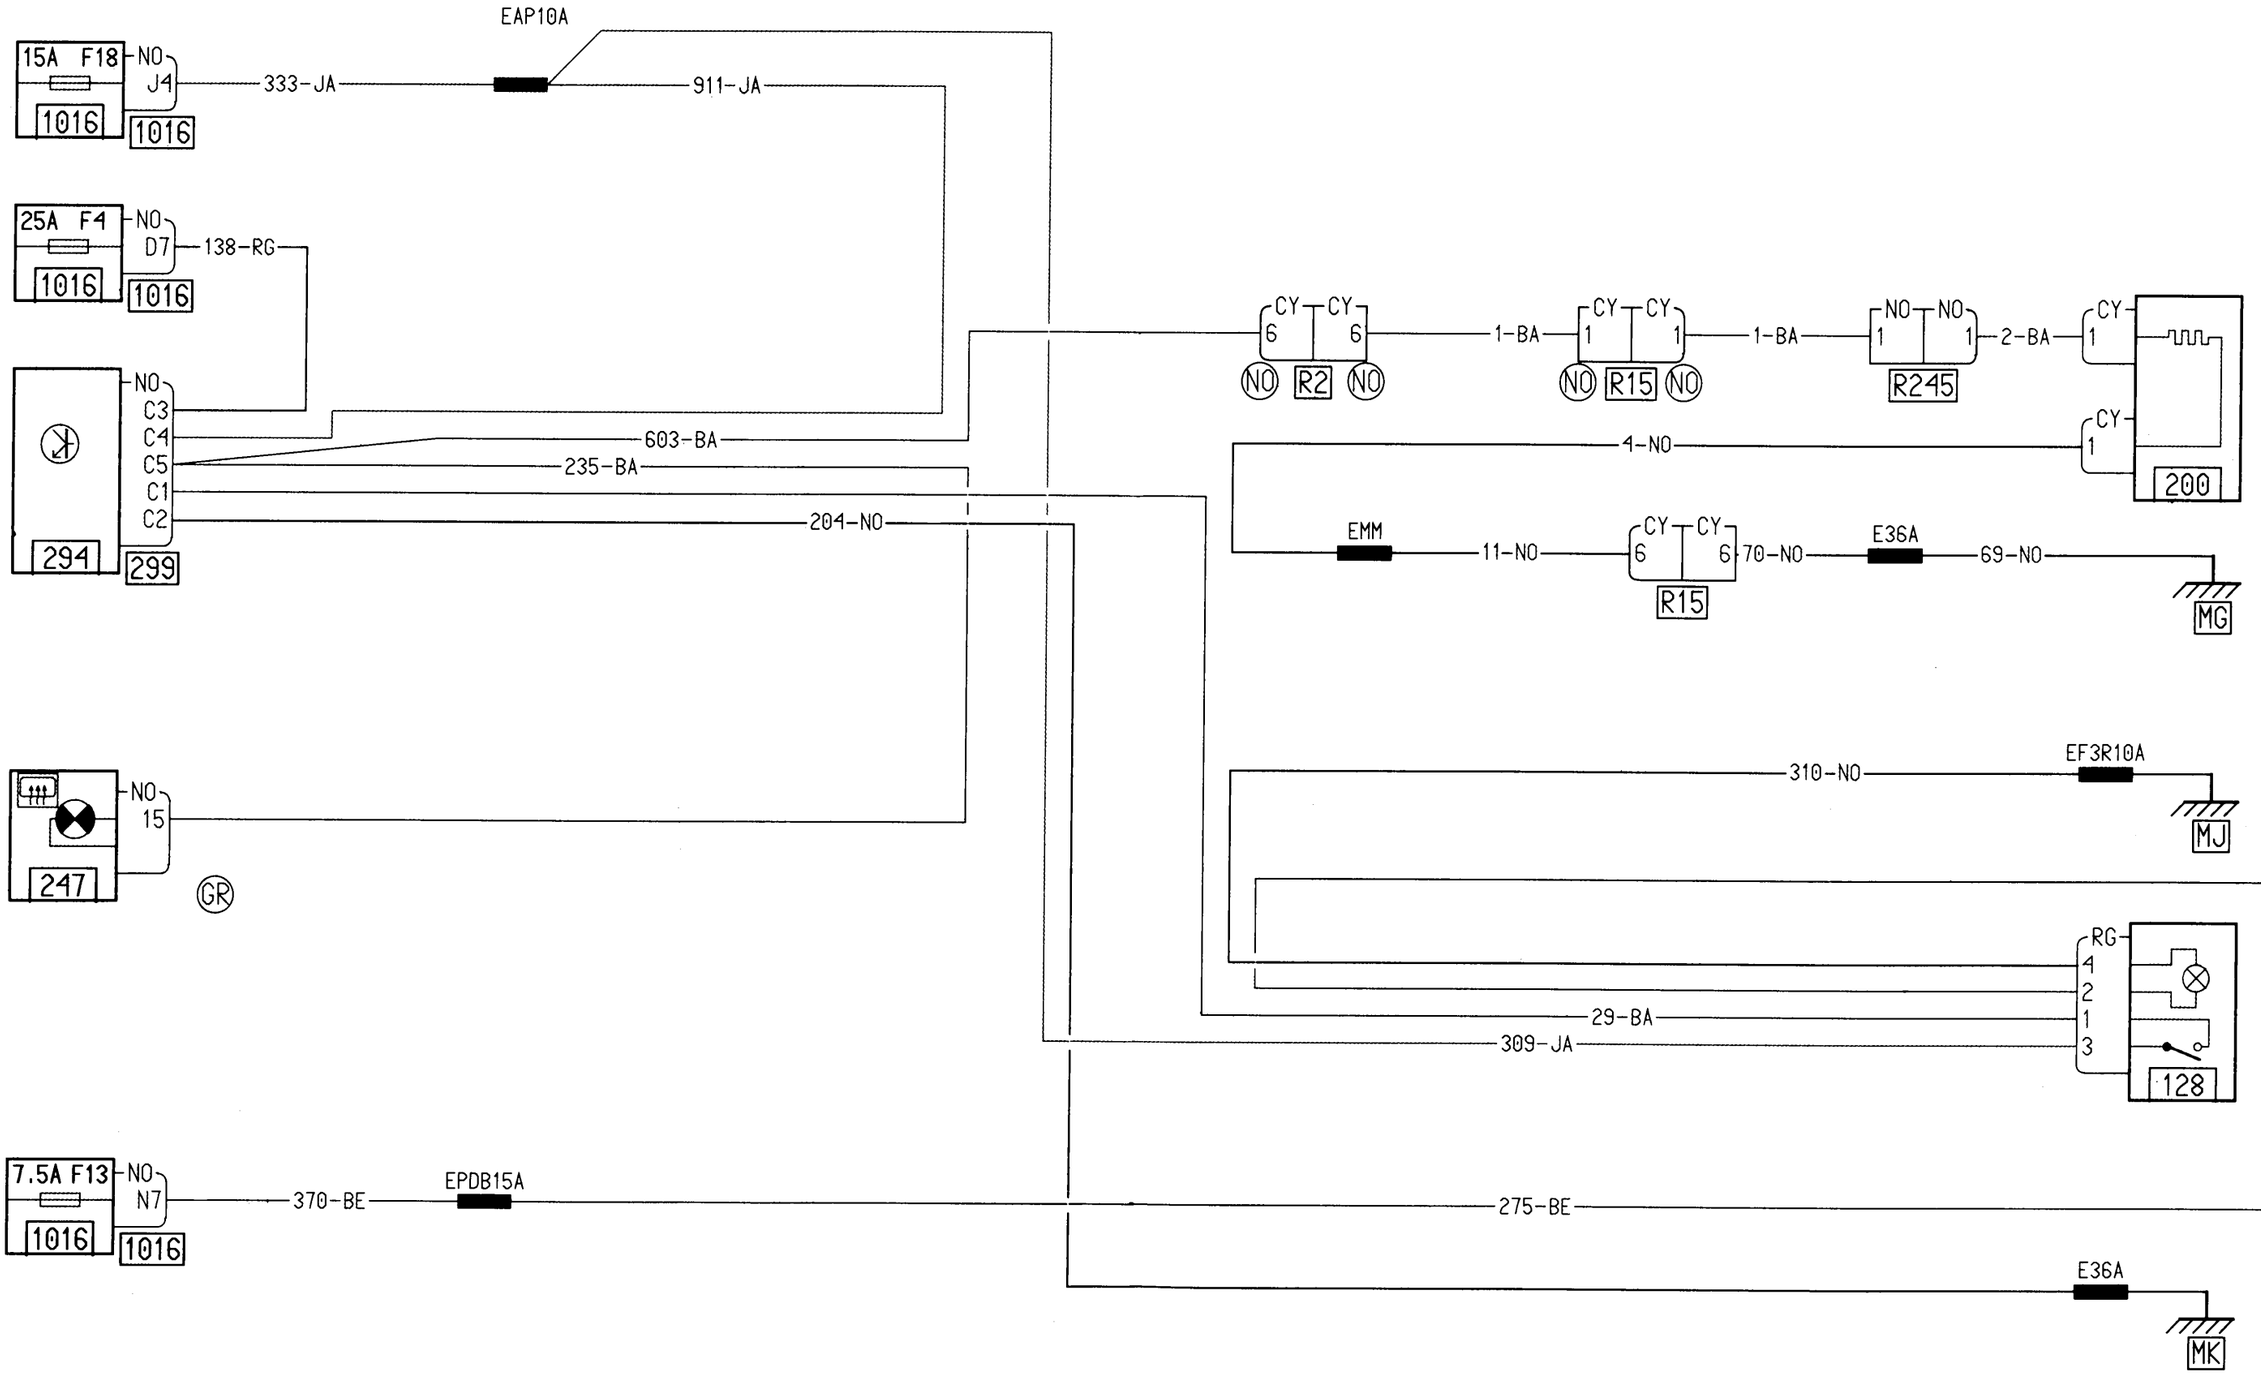
EAP10A
15A F18
NO
J4
1016
1016
333-JA
911-JA
25A F4
NO
D7
1016
1016
138-RG
NO
C3
C4
C5
C1
C2
294
299
603-BA
235-BA
204-NO
CY
6
R2
NO
1-BA
CY
1
R15
NO
1-BA
NO
1
R245
2-BA
CY
1
200
4-NO
EMM
11-NO
CY
6
R15
70-NO
E36A
69-NO
MG
NO
15
247
GR
310-NO
EF3R10A
MJ
RG
4
2
1
3
29-BA
309-JA
128
7.5A F13
NO
N7
1016
1016
370-BE
EPDB15A
275-BE
E36A
MK

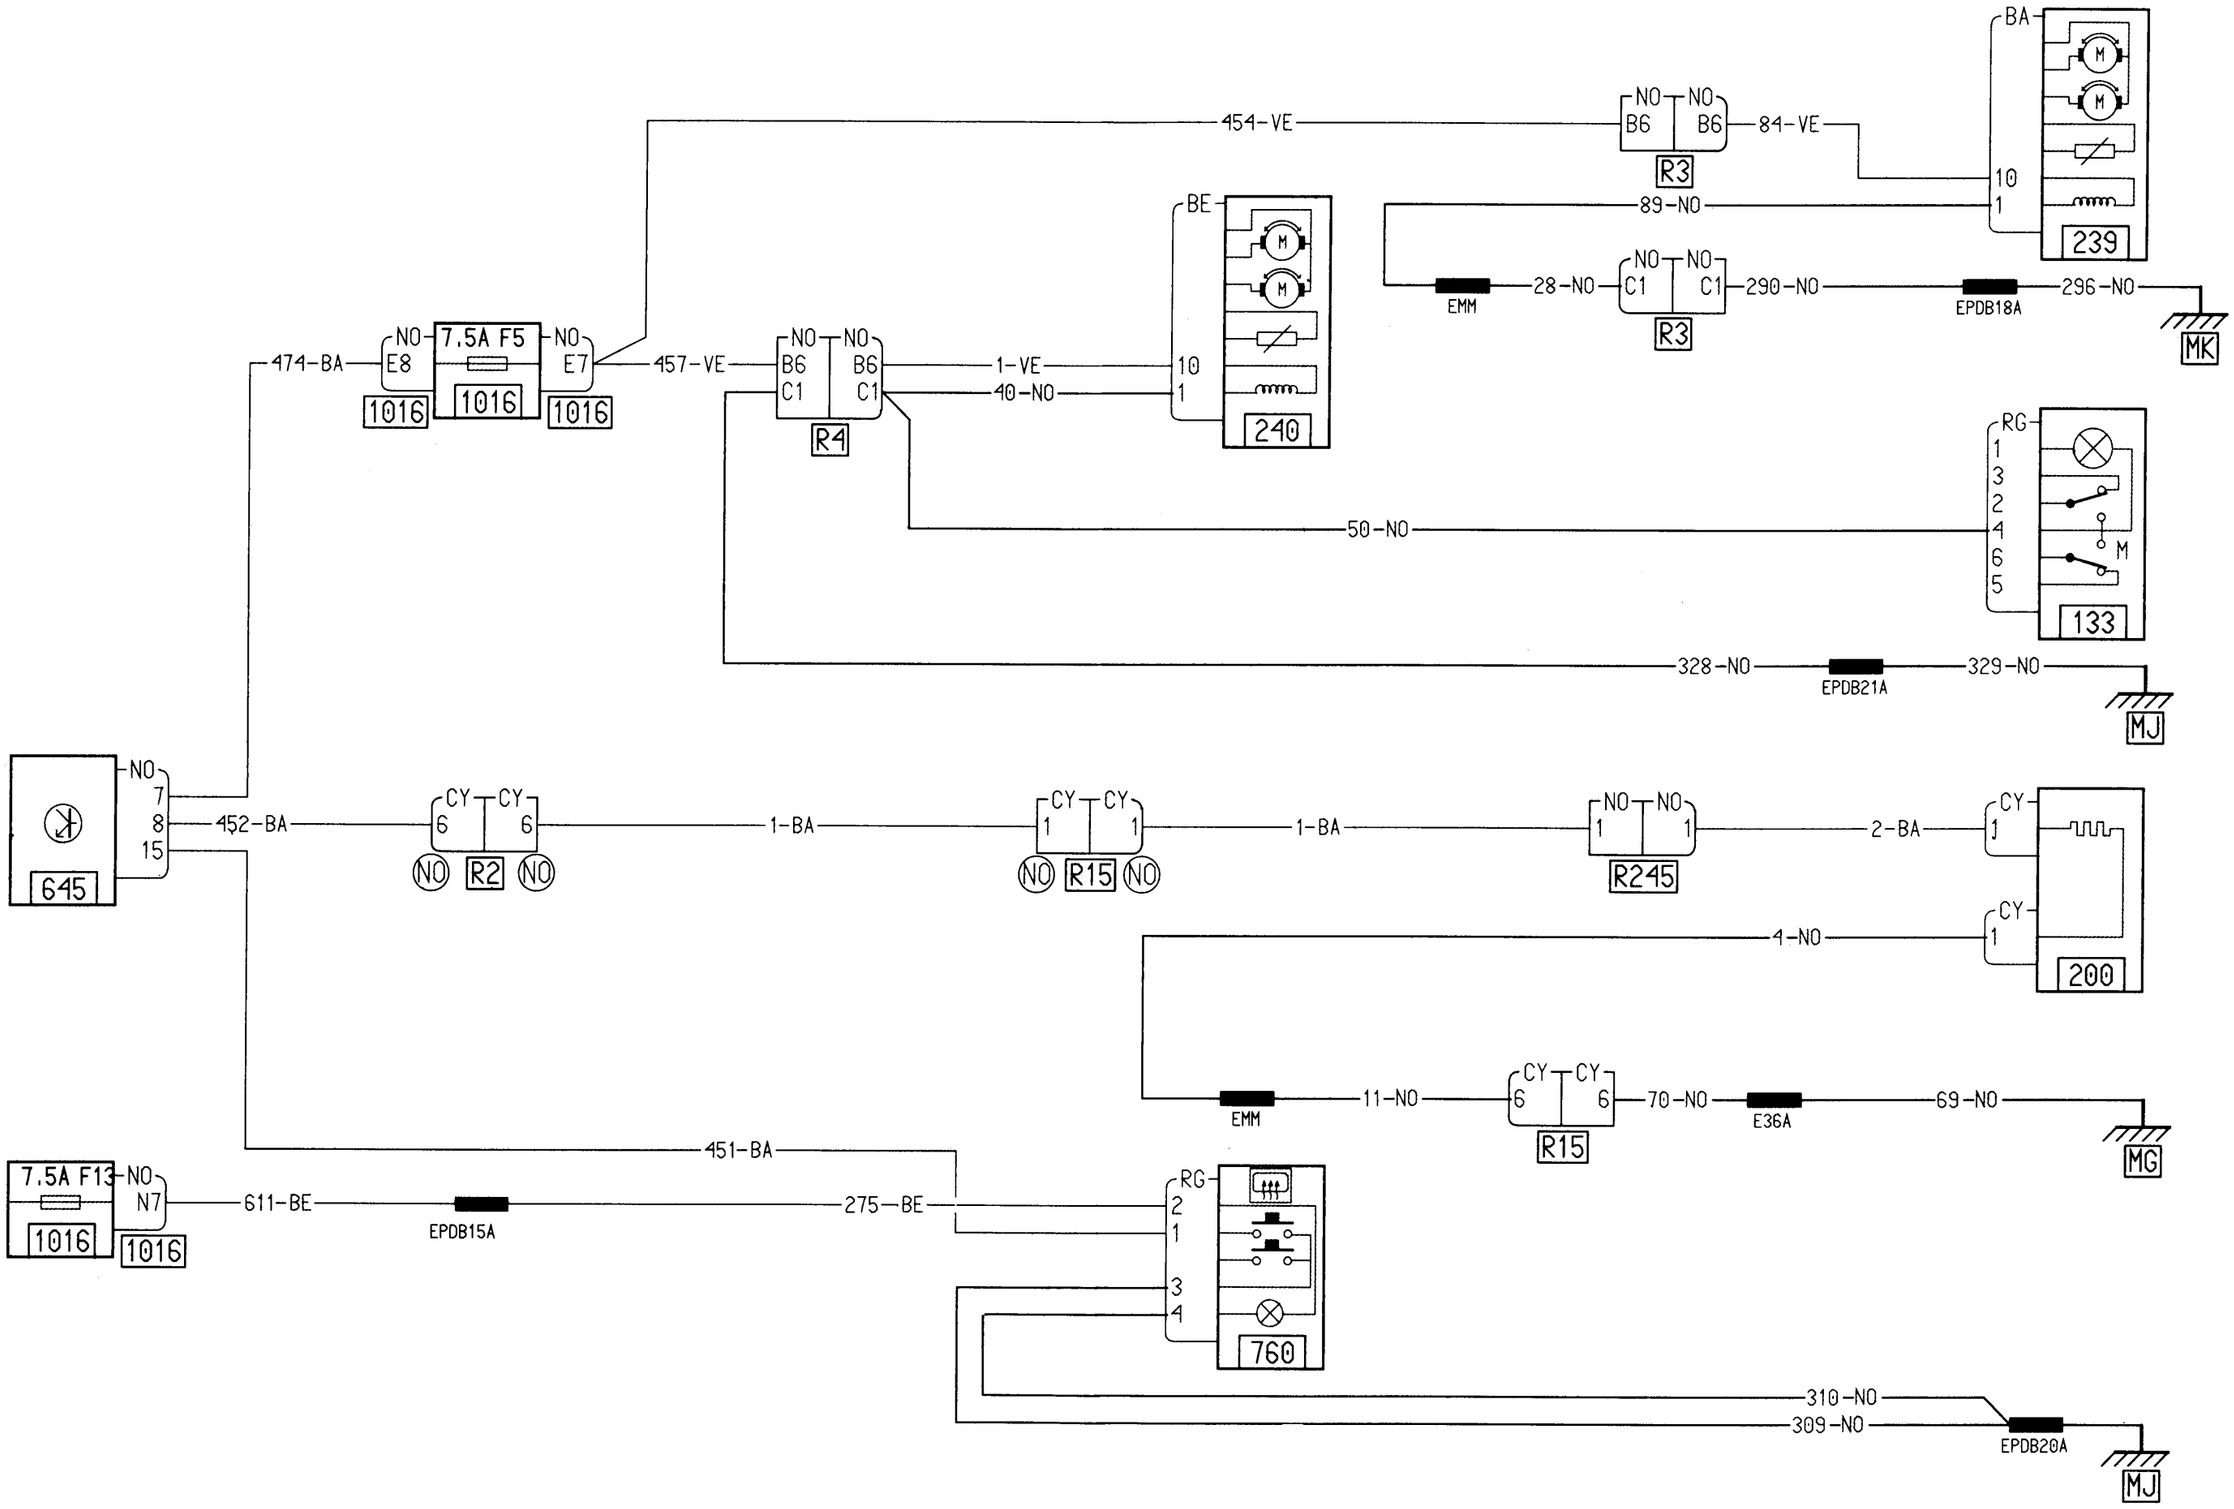
454-VE
NO B6 NO B6
R3
84-VE
BA
M
M
10
1
239
89-NO
BE
M
M
10
1
240
NO C1 NO C1
R3
EMM
28-NO
290-NO
EPDB18A
296-NO
MK
474-BA
NO E8
7.5A F5
NO E7
1016
1016
1016
457-VE
NO B6 NO B6
C1 C1
R4
1-VE
40-NO
50-NO
RG
1
3
2
4
6
5
M
133
328-NO
EPDB21A
329-NO
MJ
NO
7
8
15
645
452-BA
CY 6 CY 6
NO R2 NO
1-BA
CY 1 CY 1
NO R15 NO
1-BA
NO 1 NO 1
R245
2-BA
CY
1
CY
1
200
4-NO
EMM
11-NO
CY 6 CY 6
R15
70-NO
E36A
69-NO
MG
451-BA
7.5A F13
NO N7
1016
1016
611-BE
EPDB15A
275-BE
RG
2
1
3
4
760
310-NO
309-NO
EPDB20A
MJ

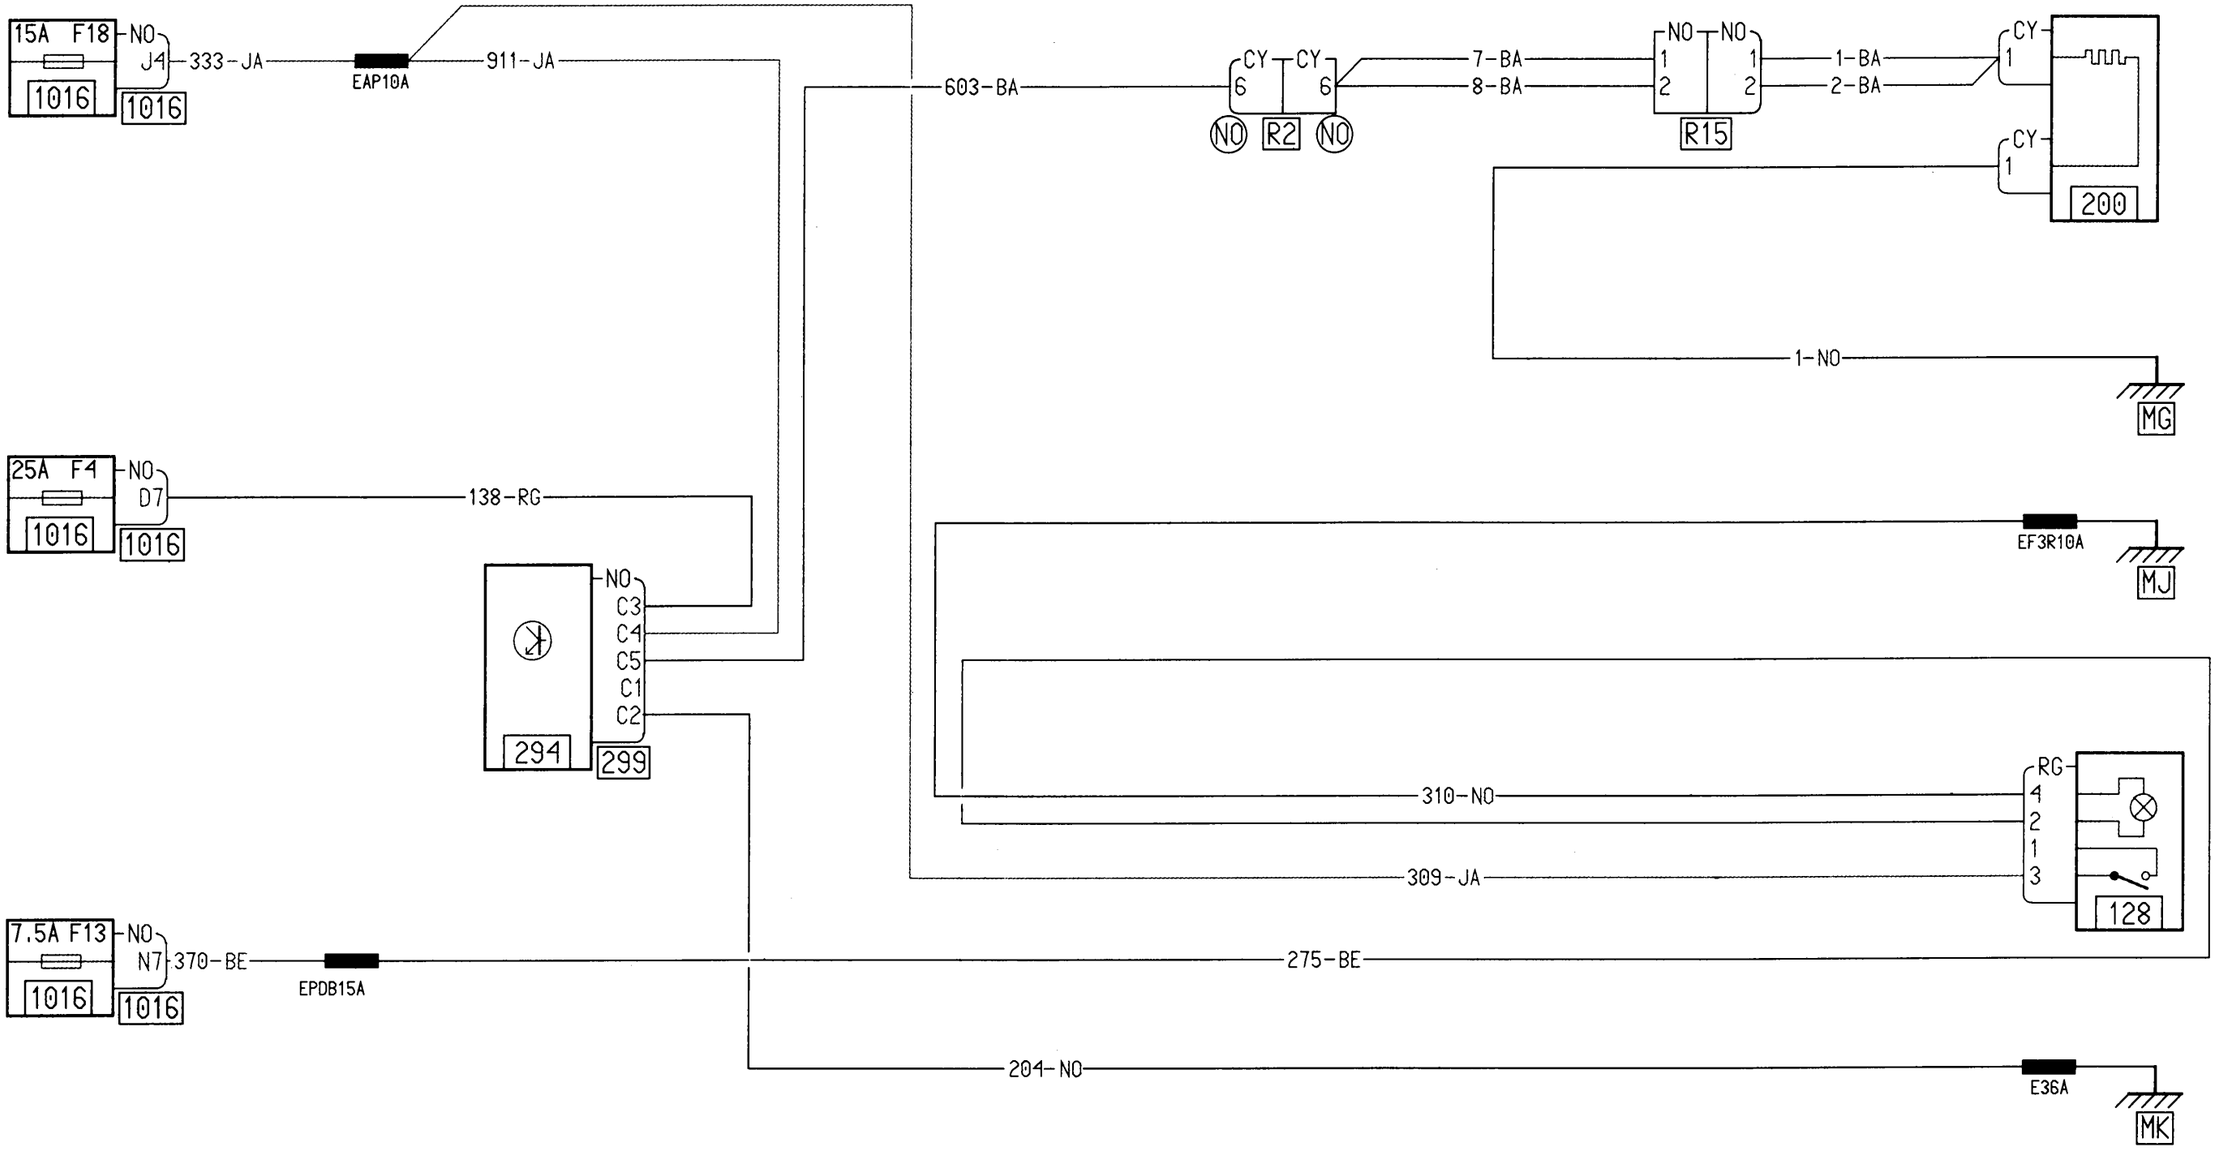
15A F18
NO
J4
1016
1016
333-JA
EAP10A
911-JA
603-BA
CY
6
NO
R2
NO
CY
6
7-BA
8-BA
NO
1
2
R15
NO
1
2
1-BA
2-BA
CY
1
CY
1
200
1-NO
MG
25A F4
NO
D7
1016
1016
138-RG
NO
C3
C4
C5
C1
C2
294
299
EF3R10A
MJ
310-NO
309-JA
RG
4
2
1
3
128
7.5A F13
NO
N7
1016
1016
370-BE
EPDB15A
275-BE
204-NO
E36A
MK

WIRE HEATED REAR WINDOW

B64/E2/E7J626/DG

X64
00

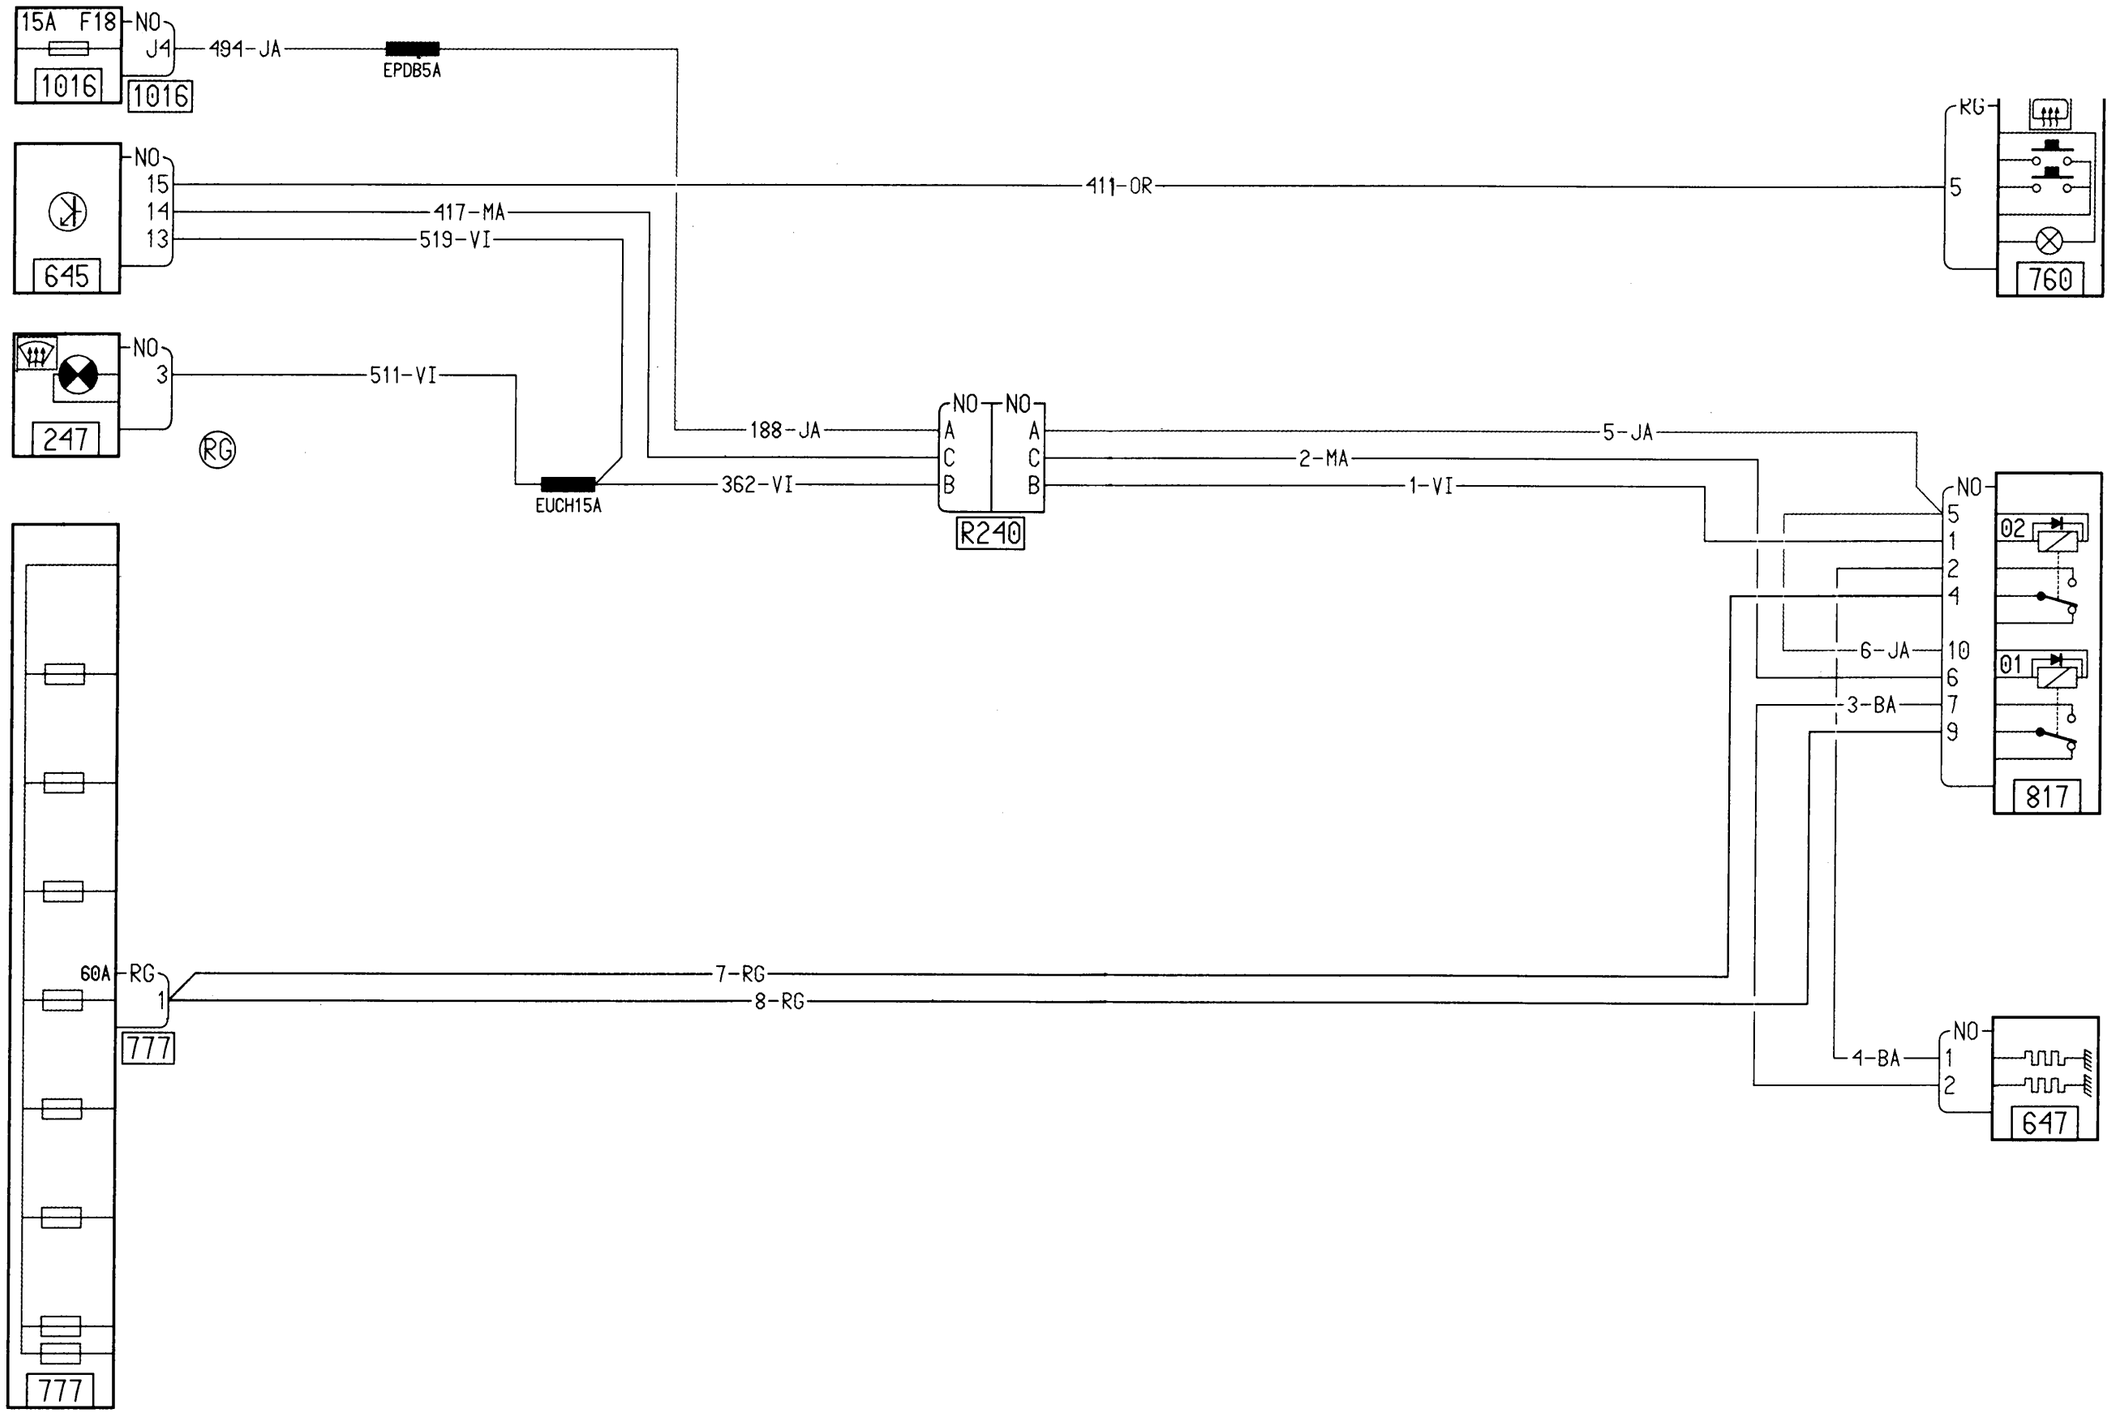

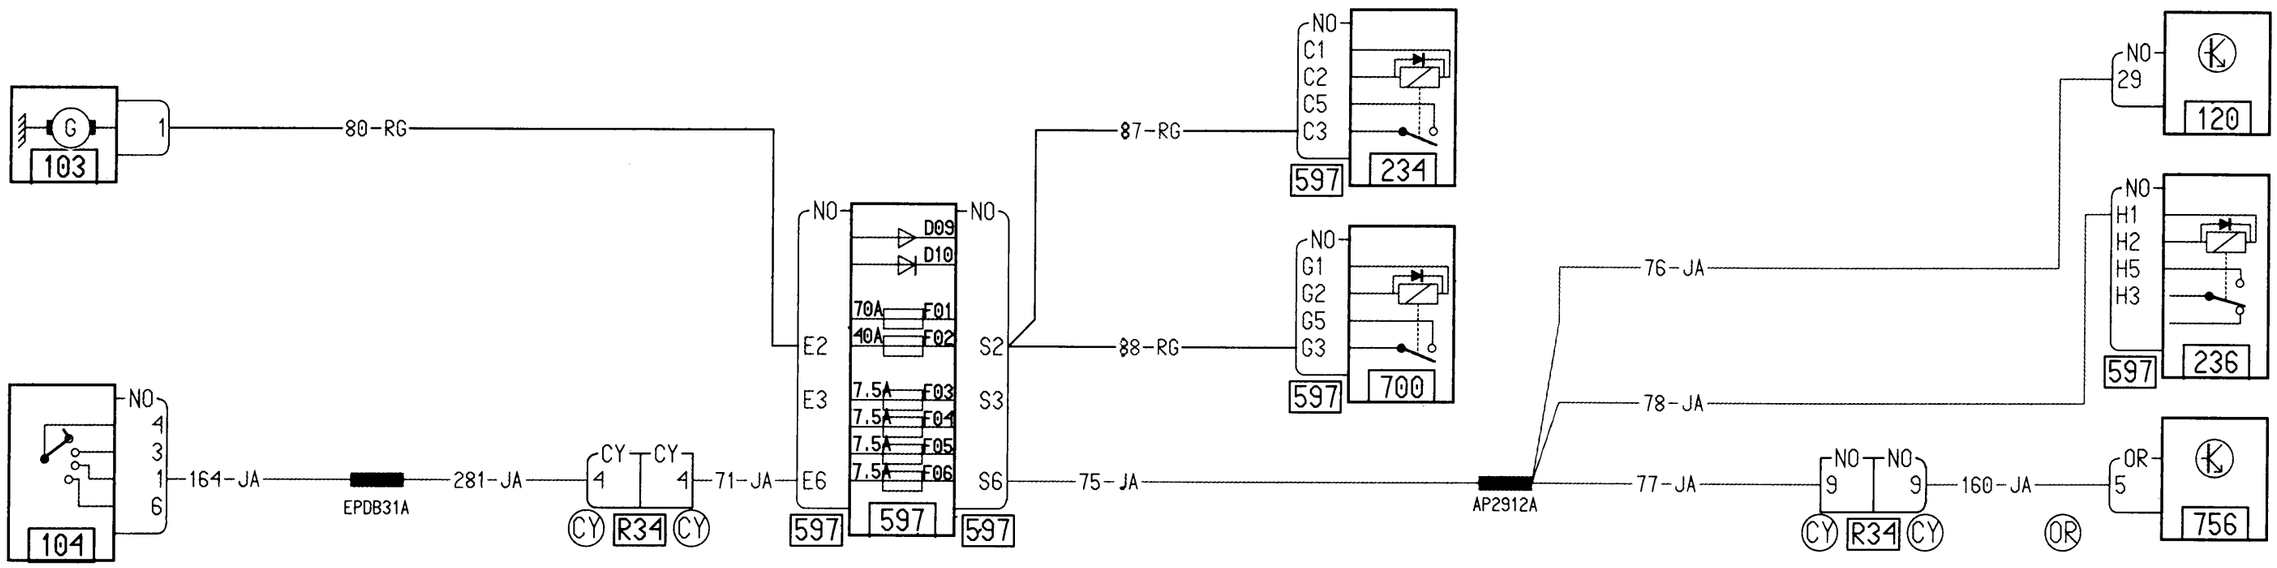
G
103
1
80-RG
NO
D09
D10
NO
70A F01
40A F02
E2
7.5A F03
7.5A F04
E3
7.5A F05
7.5A F06
E6
S2
S3
S6
597
597
597
87-RG
88-RG
75-JA
NO
C1
C2
C5
C3
597
234
NO
G1
G2
G5
G3
597
700
76-JA
78-JA
77-JA
NO
29
120
NO
H1
H2
H5
H3
597
236
NO
4
3
1
6
104
164-JA
EPDB31A
281-JA
CY
4
CY
4
CY
R34
CY
71-JA
AP2912A
NO
9
NO
9
CY
R34
CY
160-JA
OR
5
OR
756

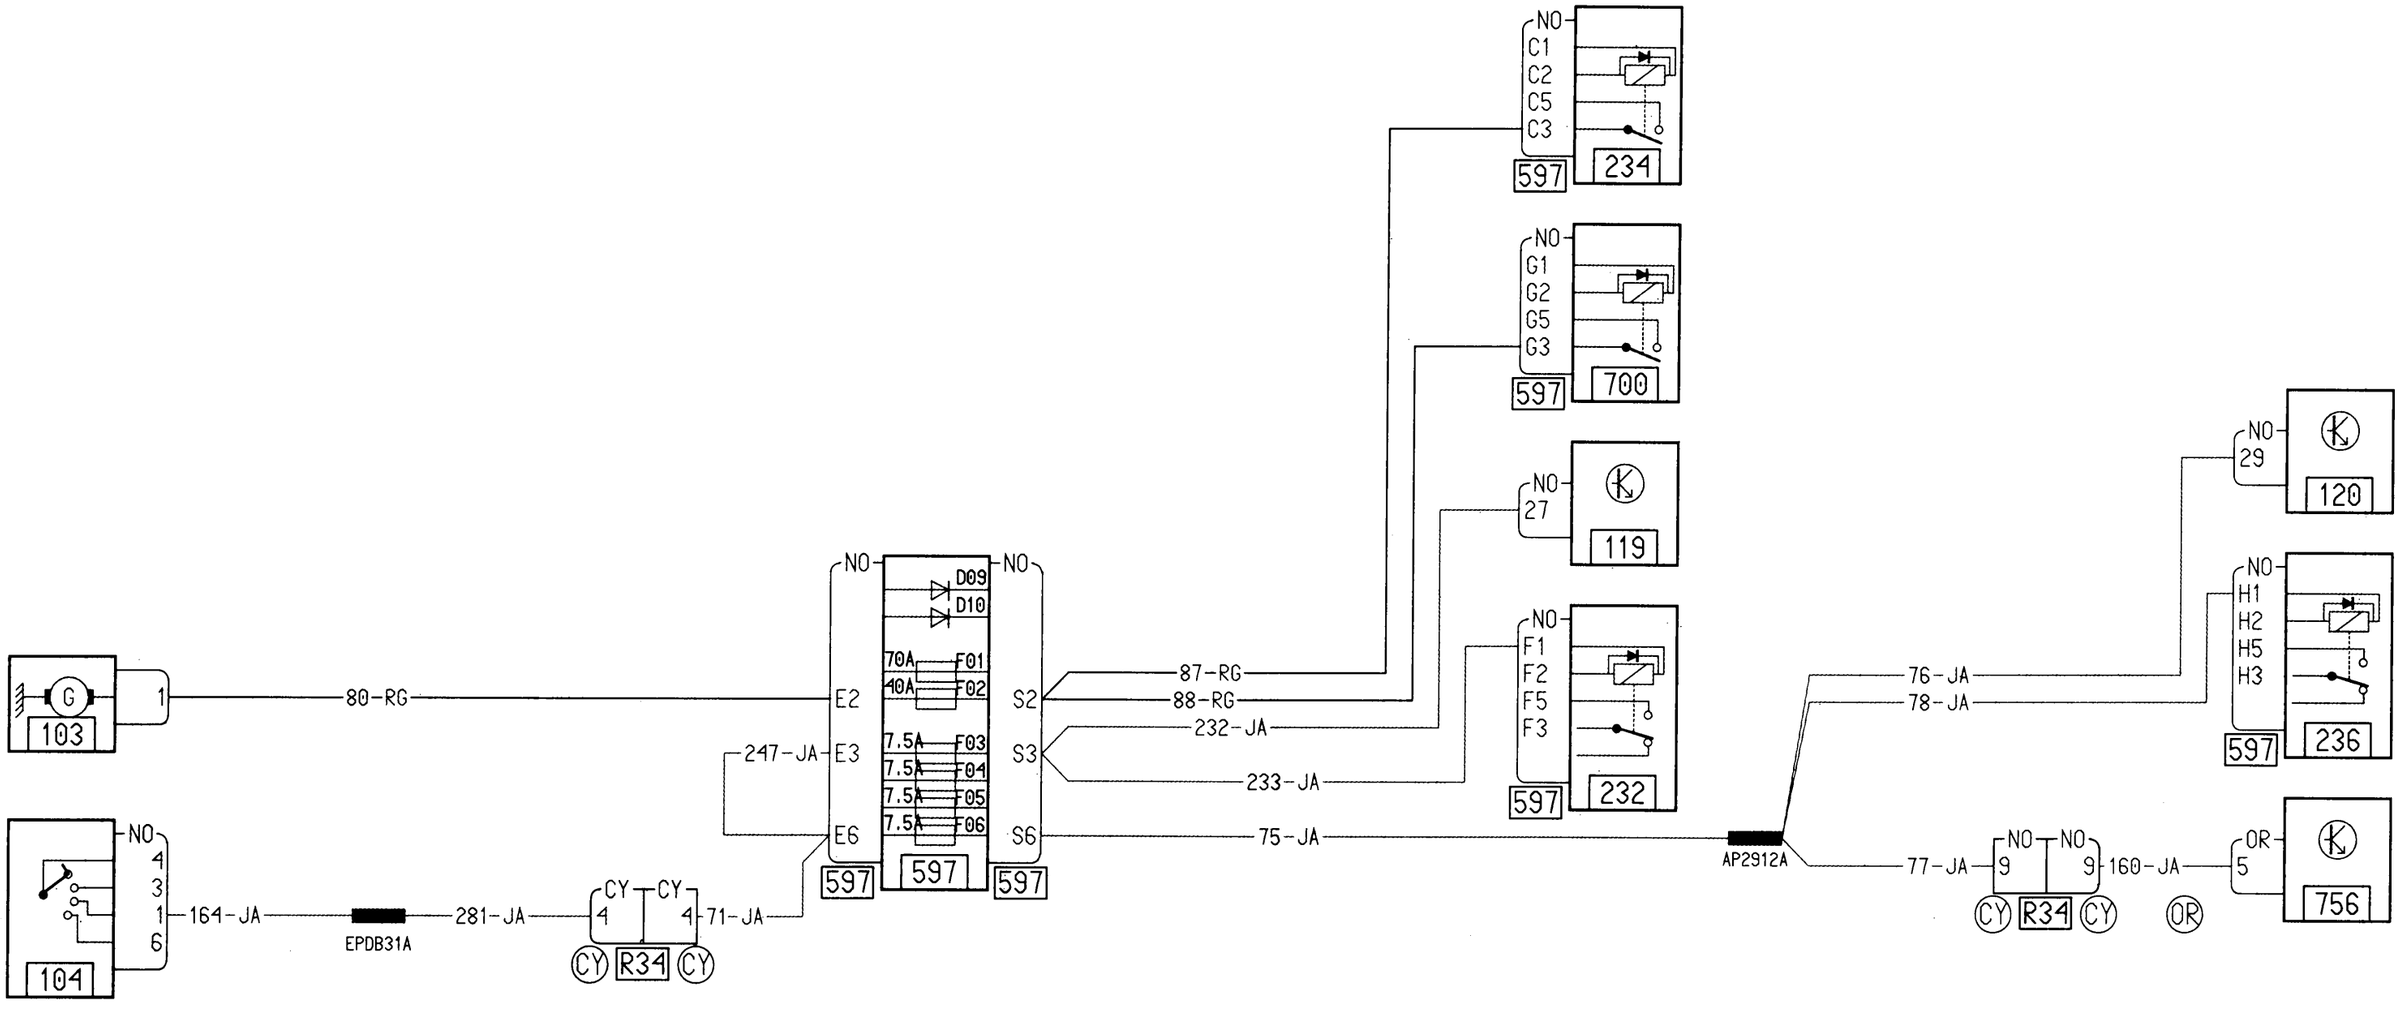
NO
C1
C2
C5
C3
597
234
NO
G1
G2
G5
G3
597
700
NO
27
119
NO
F1
F2
F5
F3
597
232
NO
29
120
NO
H1
H2
H5
H3
597
236
NO
D09
D10
NO
70A F01
40A F02
7.5A F03
7.5A F04
7.5A F05
7.5A F06
597
597
597
S2
S3
S6
87-RG
88-RG
232-JA
233-JA
75-JA
76-JA
78-JA
77-JA
160-JA
AP2912A
NO
9
9
CY
R34
CY
OR
OR
5
756
G
1
103
80-RG
E2
247-JA
E3
E6
NO
4
3
1
6
104
164-JA
EPDB31A
281-JA
CY
4
CY
4
CY
R34
CY
71-JA

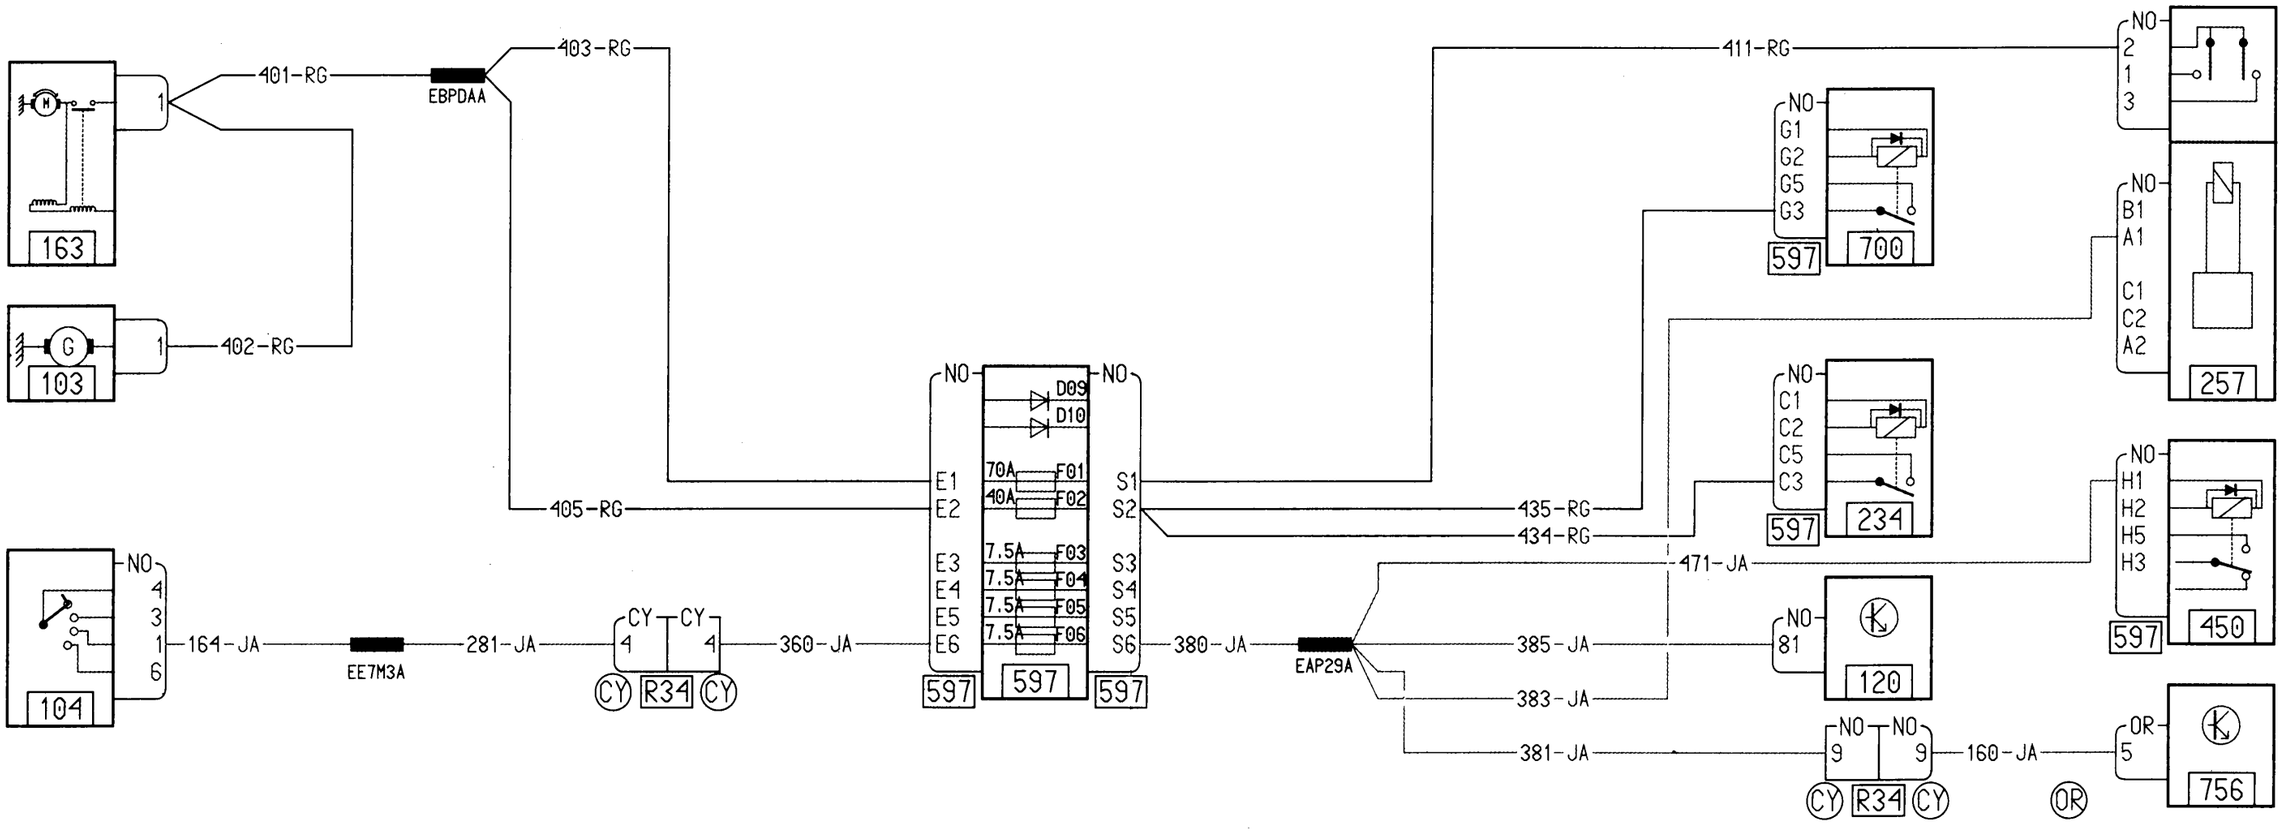
163
401-RG
EBPDAA
403-RG
103
402-RG
411-RG
NO
G1
G2
G5
G3
597
700
NO
2
1
3
NO
B1
A1
C1
C2
A2
257
NO
C1
C2
C5
C3
597
234
NO
H1
H2
H5
H3
597
450
104
NO
4
3
1
6
164-JA
EE7M3A
281-JA
CY
4
CY
4
CY
R34
CY
360-JA
405-RG
NO
D09
D10
NO
E1
E2
70A
F01
40A
F02
S1
S2
E3
E4
E5
E6
7.5A
F03
7.5A
F04
7.5A
F05
7.5A
F06
S3
S4
S5
S6
597
597
597
435-RG
434-RG
471-JA
380-JA
EAP29A
385-JA
383-JA
381-JA
NO
81
120
NO
9
NO
9
CY
R34
CY
160-JA
OR
5
OR
756

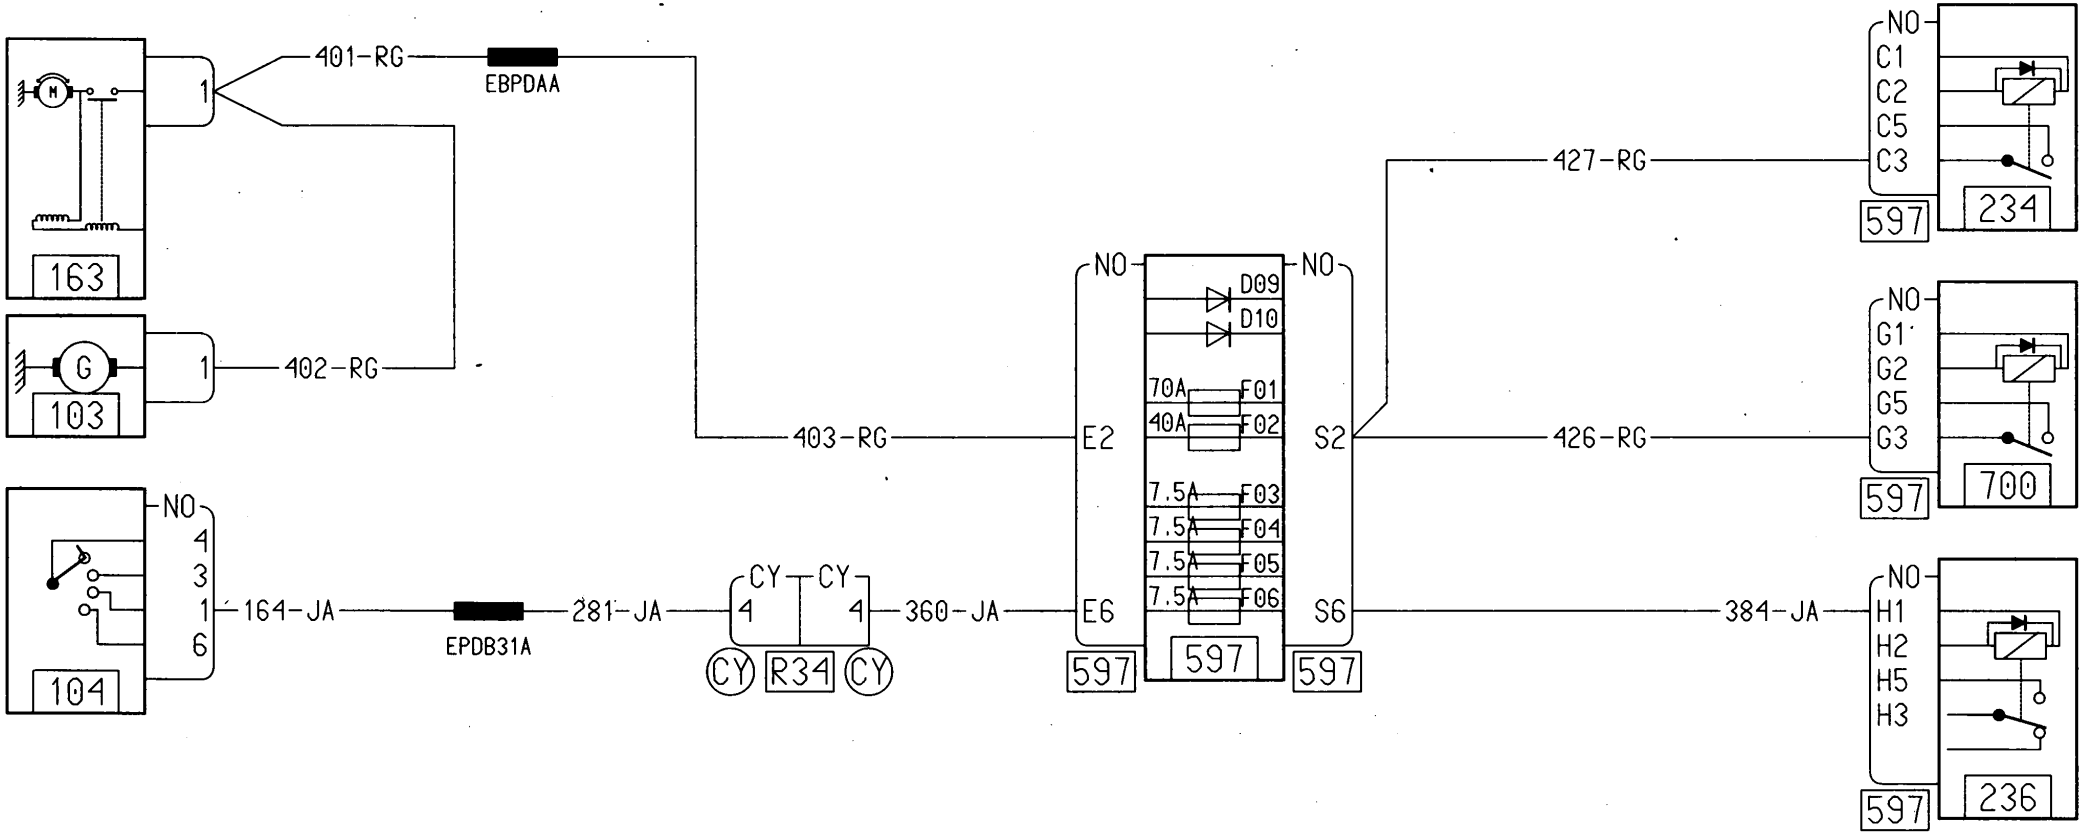
401-RG
EBPDAA
163
1
402-RG
103
G
104
NO
4
3
1
6
164-JA
EPDB31A
281-JA
CY
4
CY
4
CY
R34
CY
360-JA
403-RG
NO
D09
D10
70A
F01
40A
F02
7.5A
F03
7.5A
F04
7.5A
F05
7.5A
F06
E2
E6
S2
S6
NO
597
597
597
427-RG
426-RG
384-JA
NO
C1
C2
C5
C3
597
234
NO
G1
G2
G5
G3
597
700
NO
H1
H2
H5
H3
597
236

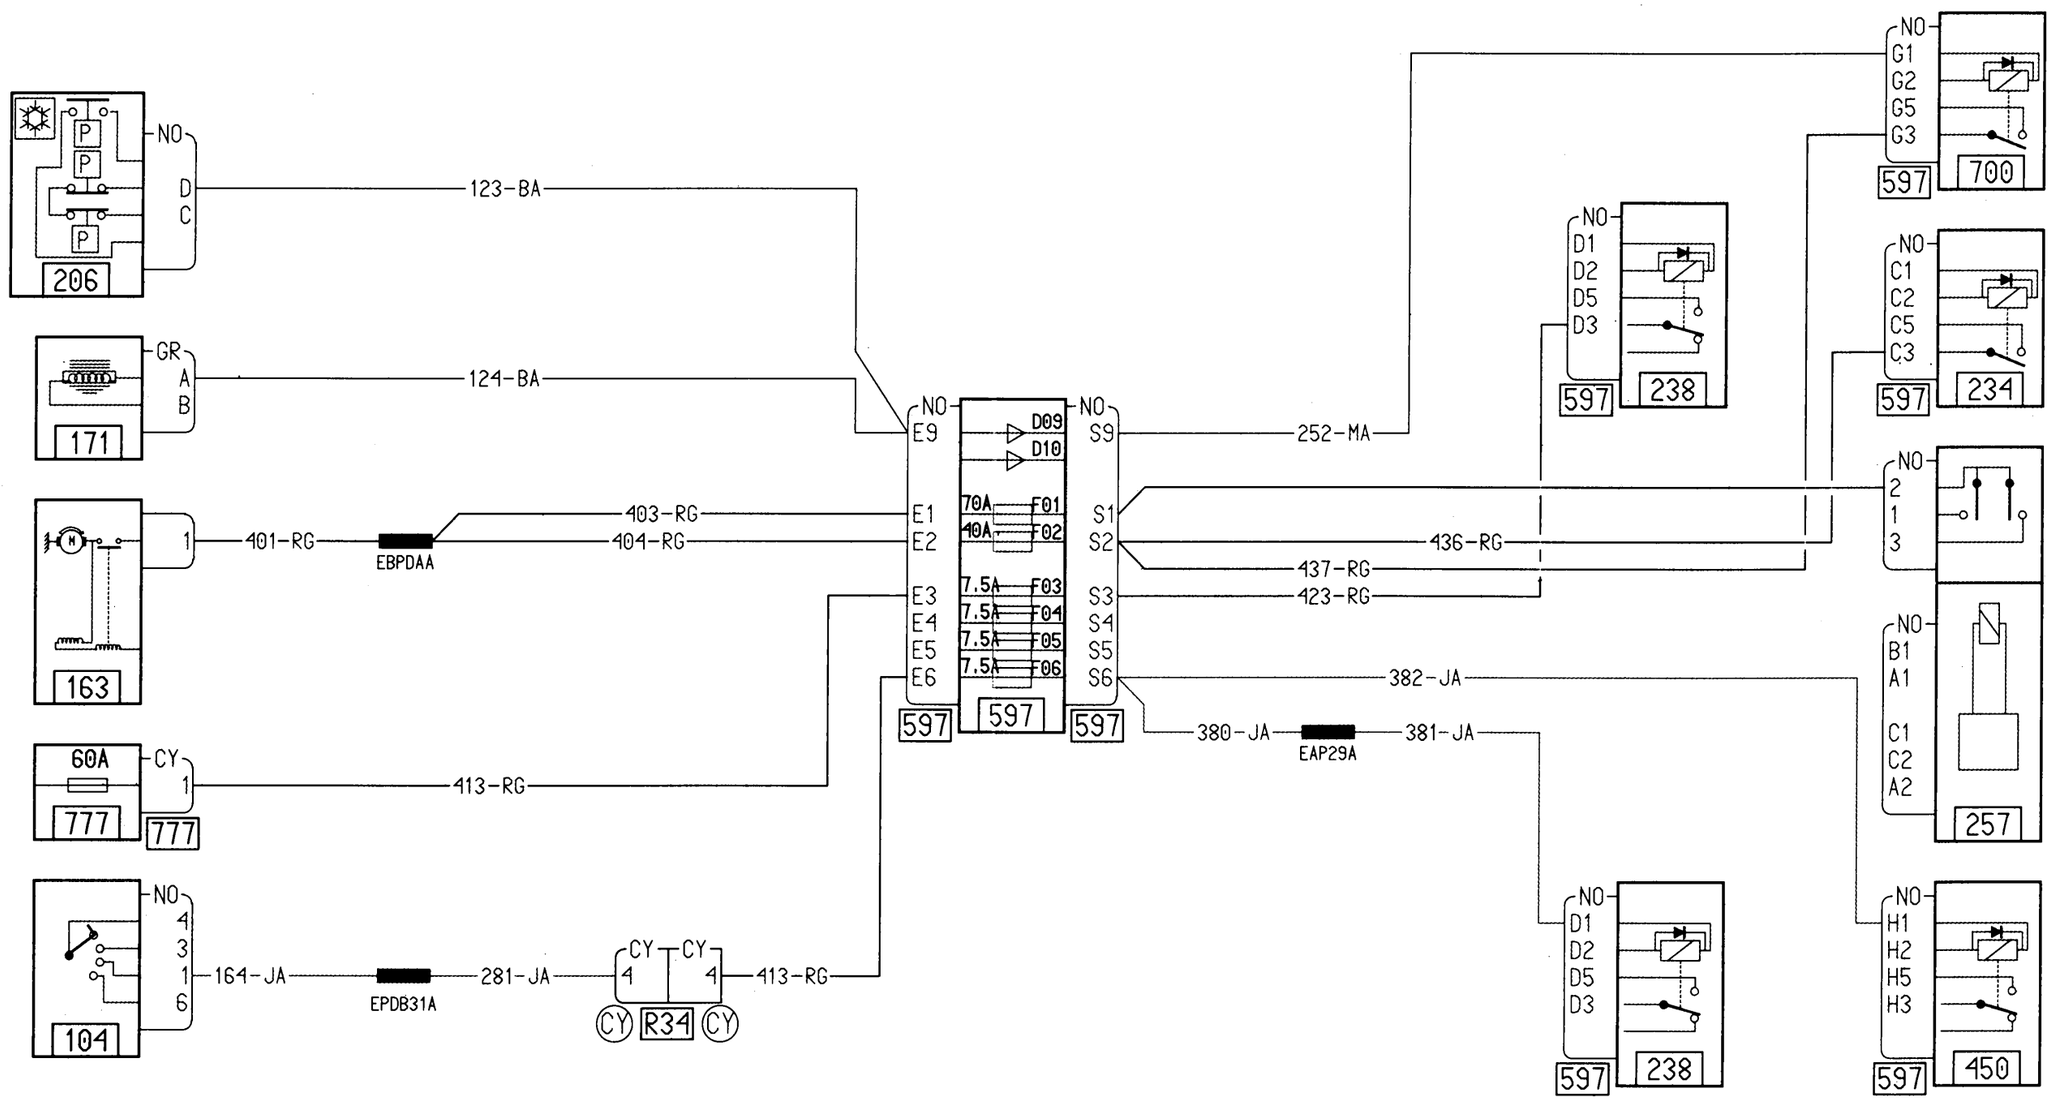
206
NO
D
C
123-BA
171
GR
A
B
124-BA
163
1
401-RG
EBPDAA
403-RG
404-RG
60A
CY
1
777
777
413-RG
104
NO
4
3
1
6
164-JA
EPDB31A
281-JA
CY
4
CY
4
R34
413-RG
E9
E1
E2
E3
E4
E5
E6
597
D09
D10
70A
F01
40A
F02
7.5A
F03
7.5A
F04
7.5A
F05
7.5A
F06
597
S9
S1
S2
S3
S4
S5
S6
597
252-MA
436-RG
437-RG
423-RG
382-JA
380-JA
EAP29A
381-JA
NO
D1
D2
D5
D3
597
238
NO
G1
G2
G5
G3
597
700
NO
C1
C2
C5
C3
597
234
NO
2
1
3
NO
B1
A1
C1
C2
A2
257
NO
D1
D2
D5
D3
597
238
NO
H1
H2
H5
H3
597
450

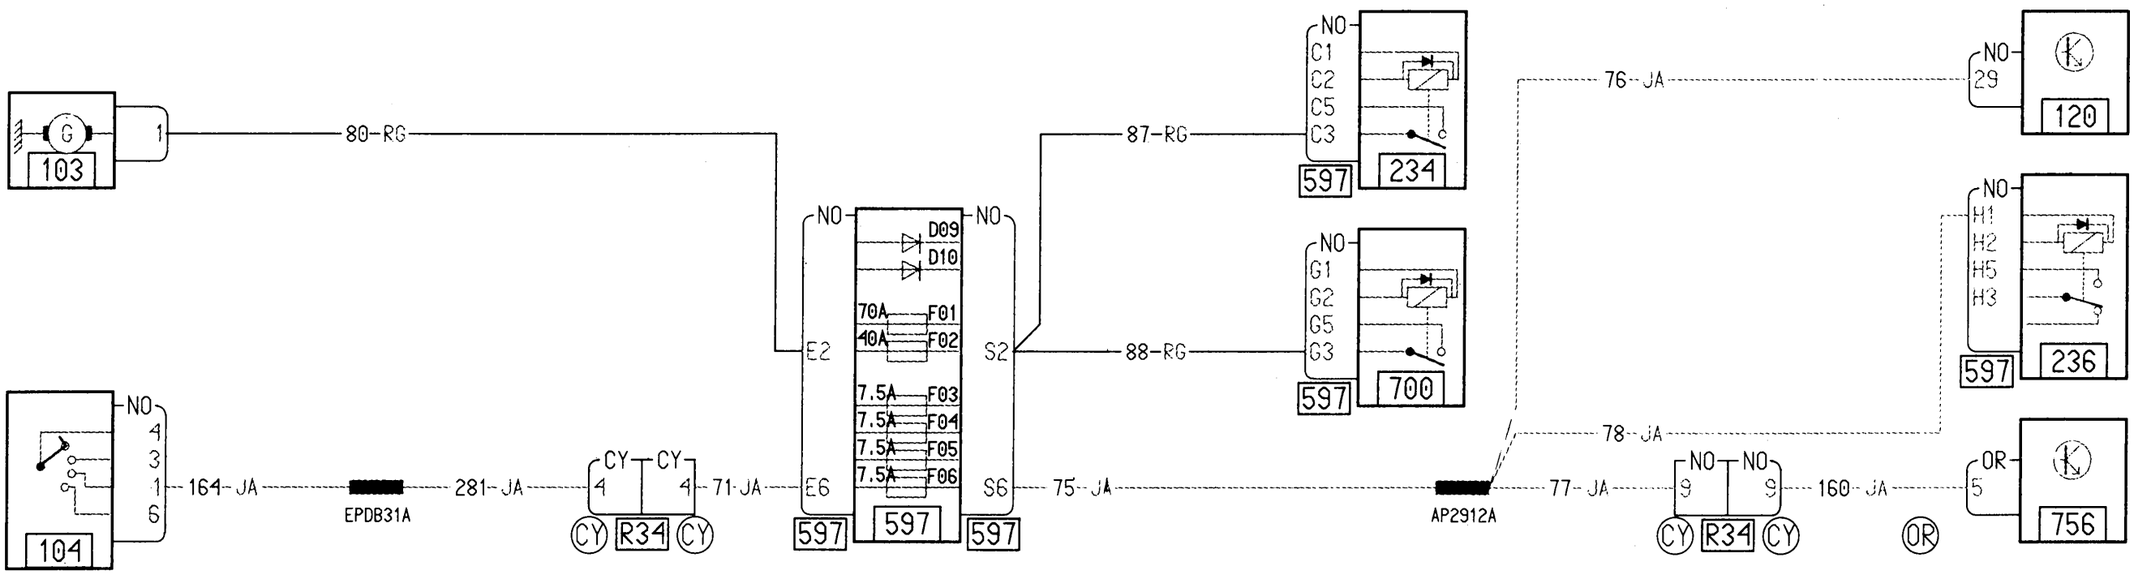
G
103
1
80-RG
NO
E2
D09
D10
70A F01
40A F02
7.5A F03
7.5A F04
7.5A F05
7.5A F06
E6
597
S2
S6
87-RG
88-RG
75-JA
NO
C1
C2
C5
C3
597
234
NO
G1
G2
G5
G3
597
700
76-JA
78-JA
NO
29
120
NO
H1
H2
H5
H3
597
236
104
NO
4
3
1
6
164-JA
EPDB31A
281-JA
CY
4
CY
4
CY
R34
CY
71-JA
AP2912A
77-JA
NO
9
NO
9
CY
R34
CY
160-JA
OR
5
OR
756

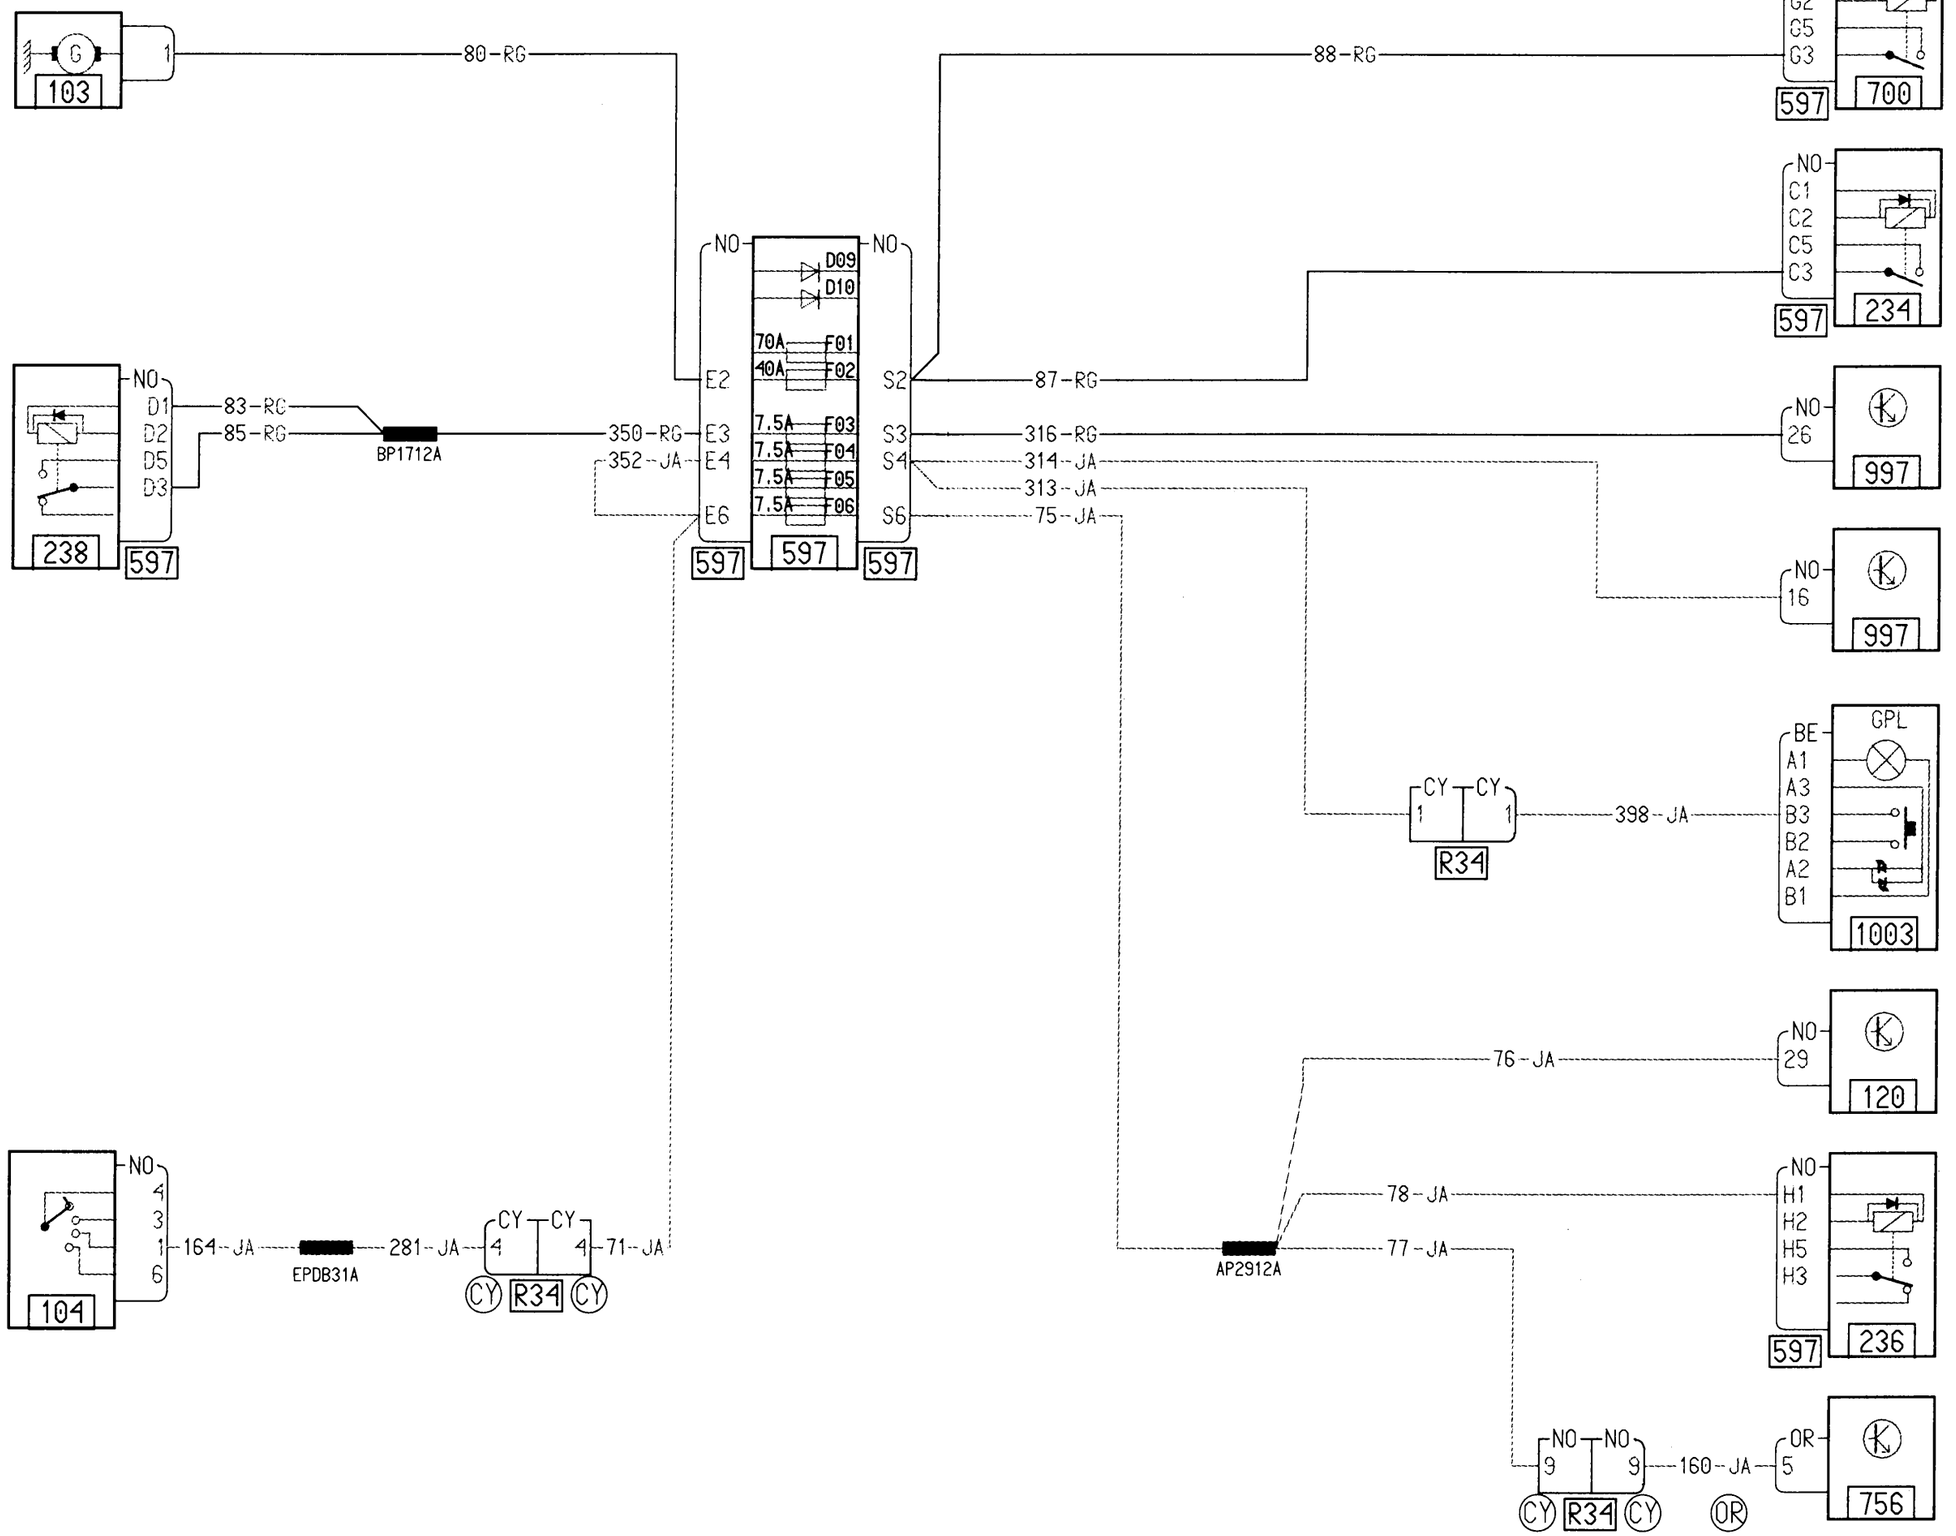
103
80-RG
88-RG
NO
G1
G2
C5
G3
597
700
NO
C1
C2
C5
C3
597
234
238
NO
D1
D2
D5
D3
83-RG
85-RG
BP1712A
350-RG
352-JA
E2
E3
E4
E6
NO
D09
D10
70A F01
40A F02
7.5A F03
7.5A F04
7.5A F05
7.5A F06
NO
S2
S3
S4
S6
87-RG
316-RG
314-JA
313-JA
75-JA
597
597
597
NO
26
997
NO
16
997
CY
CY
1
1
R34
398-JA
BE
GPL
A1
A3
B3
B2
A2
B1
1003
NO
29
120
76-JA
78-JA
77-JA
AP2912A
NO
H1
H2
H5
H3
597
236
NO
NO
9
9
CY
R34
CY
160-JA
OR
OR
5
756
104
NO
4
3
1
6
164-JA
EPDB31A
281-JA
CY
CY
4
4
CY
R34
CY
71-JA

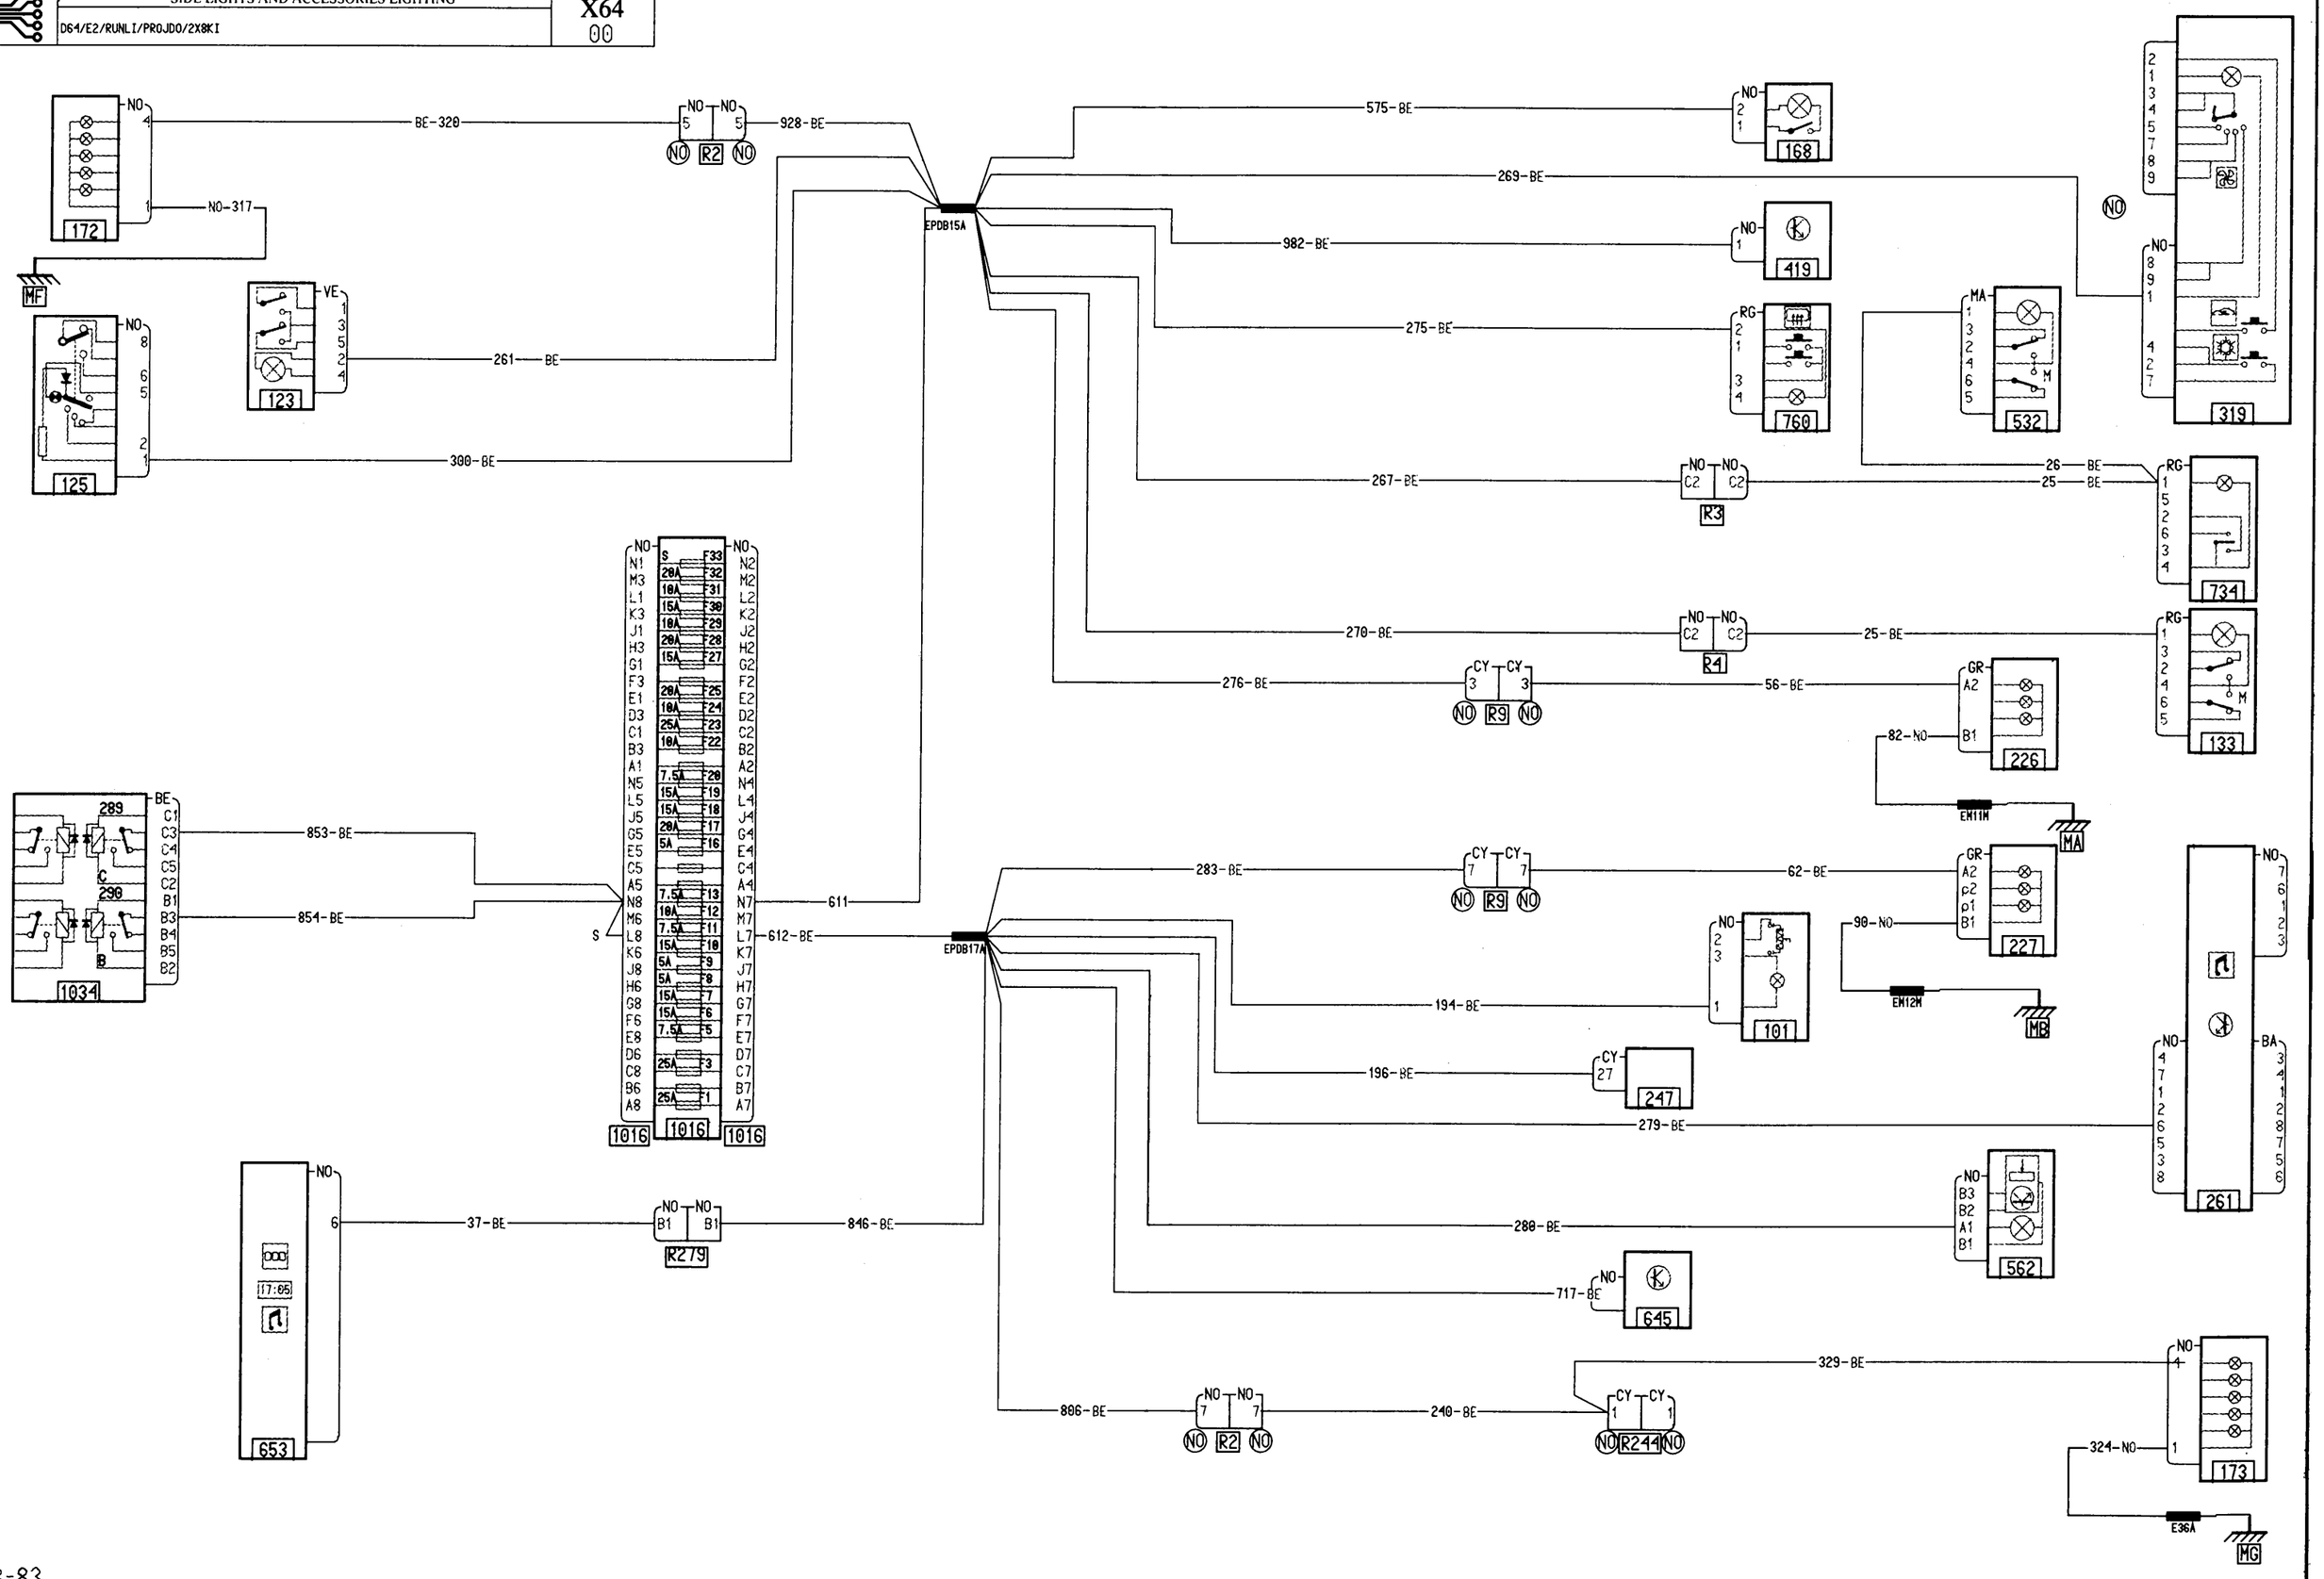
172
NO-317
MF
125
123
261-BE
300-BE
928-BE
BE-320
R2
EPDB15A
575-BE
168
269-BE
982-BE
419
275-BE
760
532
319
267-BE
R3
26-BE
25-BE
734
270-BE
R4
25-BE
276-BE
R9
56-BE
133
226
82-NO
EM11M
MA
283-BE
62-BE
227
90-NO
EM12M
MB
194-BE
101
196-BE
247
279-BE
261
280-BE
562
717-BE
645
1034
853-BE
854-BE
611
612-BE
EPDB17A
1016
806-BE
240-BE
R244
329-BE
324-NO
173
E36A
MG
653
37-BE
R279
846-BE

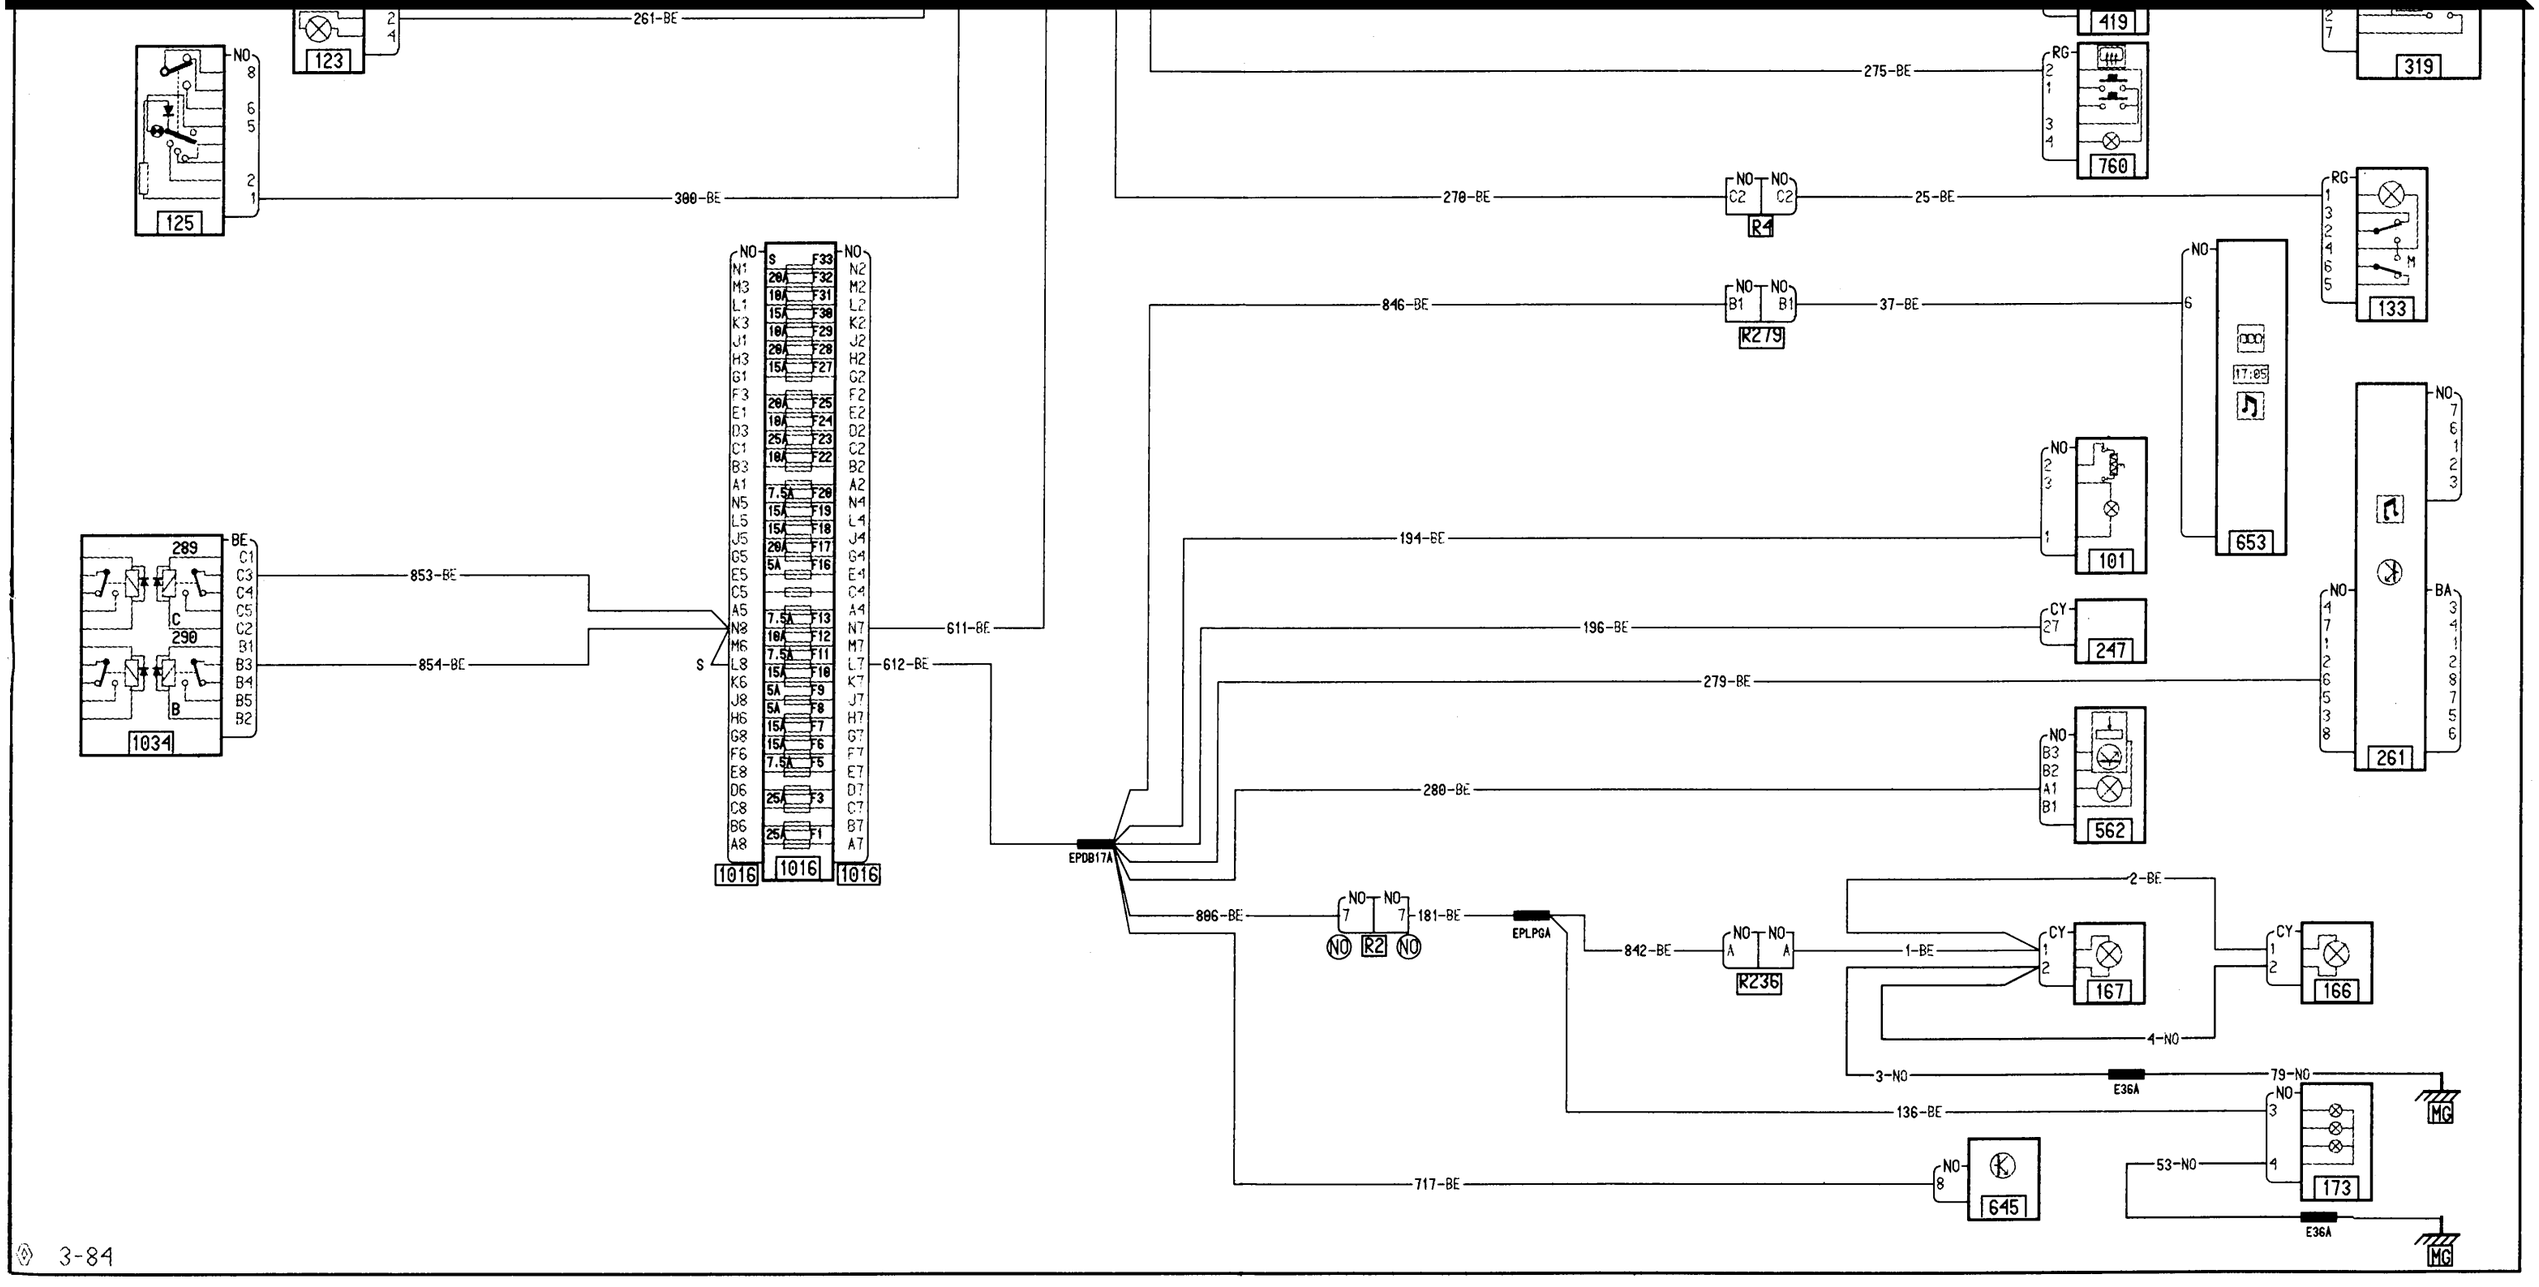
261-BE
123
125
300-BE
NO
8
6
5
2
1
1016
S
F33
F32
F31
F30
F29
F28
F27
F25
F24
F23
F22
F20
F19
F18
F17
F16
F13
F12
F11
F10
F9
F8
F7
F6
F5
F3
F1
611-BE
612-BE
853-BE
854-BE
289
290
C
B
1034
BE
C1
C3
C4
C5
C2
B1
B3
B4
B5
B2
419
275-BE
RG
760
319
270-BE
C2
R4
25-BE
133
846-BE
B1
R279
37-BE
6
17:05
653
194-BE
101
196-BE
CY
27
247
279-BE
261
280-BE
B3
B2
A1
B1
562
EPDB17A
806-BE
7
R2
181-BE
EPLPGA
842-BE
A
R236
1-BE
167
2-BE
166
4-NO
3-NO
E36A
79-NO
MG
136-BE
3
4
173
717-BE
8
645
53-NO

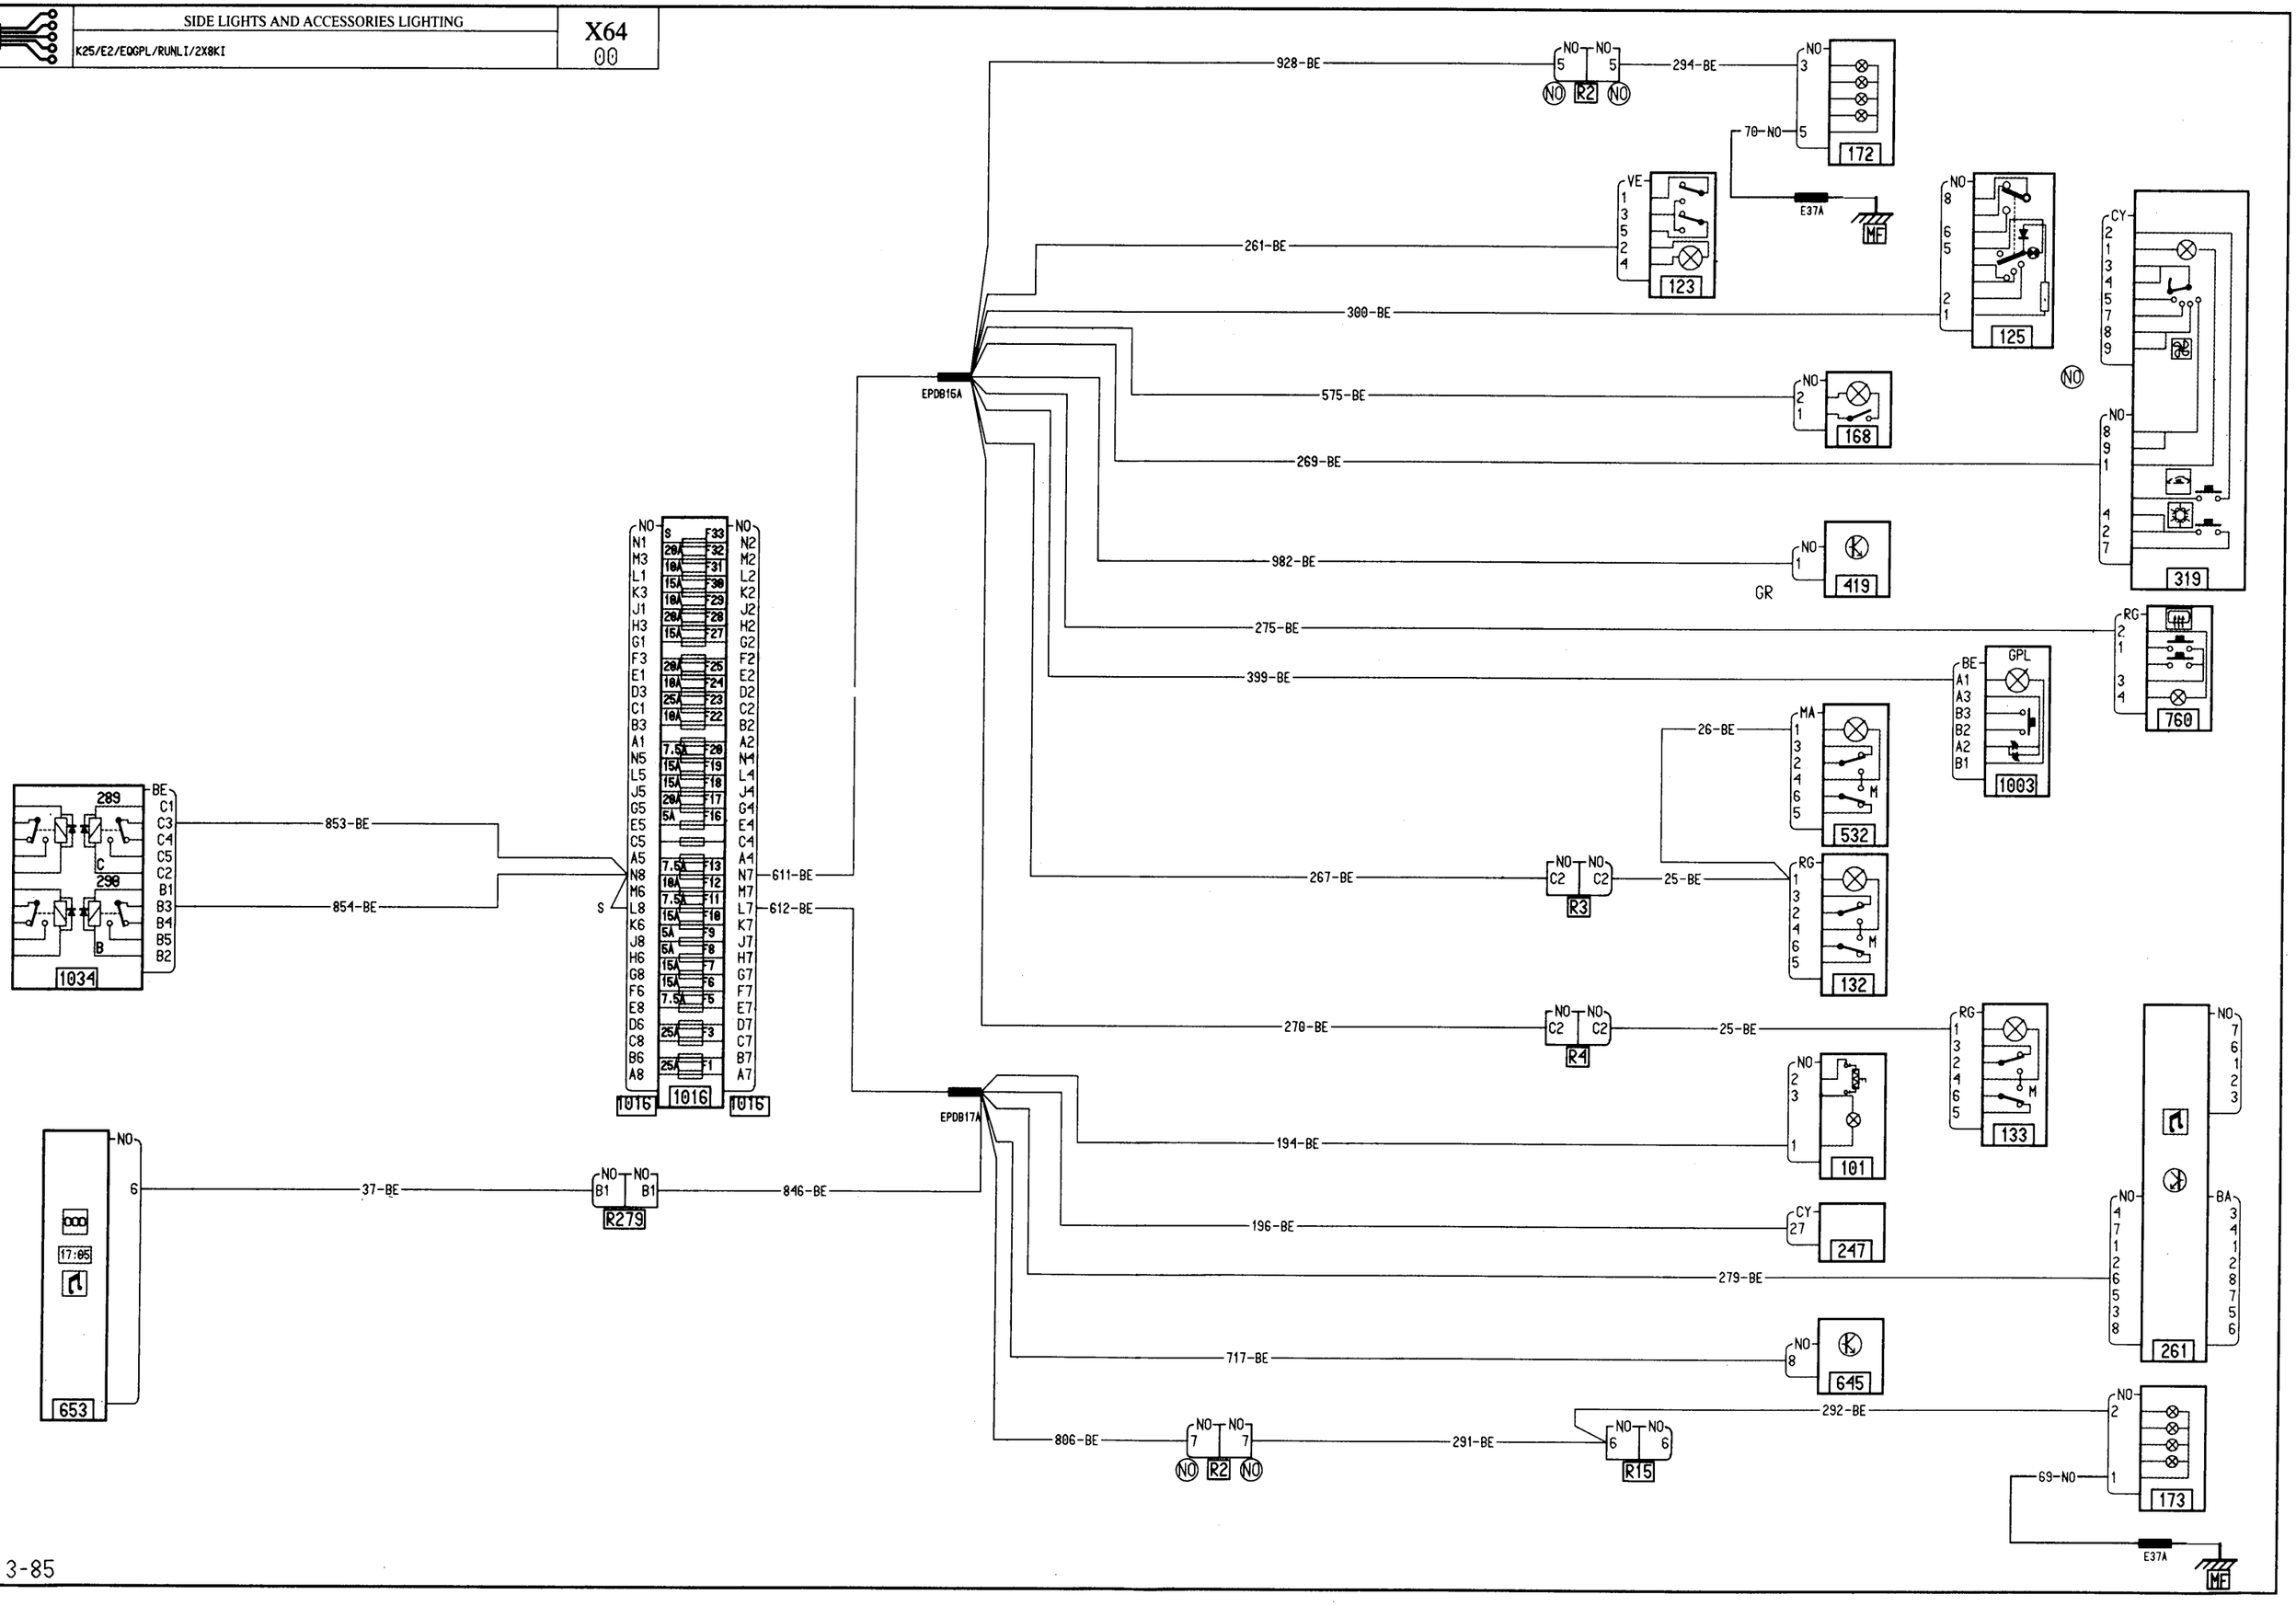
928-BE
261-BE
300-BE
575-BE
269-BE
982-BE
275-BE
399-BE
267-BE
270-BE
194-BE
196-BE
279-BE
717-BE
806-BE
291-BE
292-BE
26-BE
25-BE
70-NO
G9-NO
294-BE
EPDB15A
EPDB17A
853-BE
854-BE
611-BE
612-BE
37-BE
846-BE
GR
E37A
MF
289
298
1034
1016
653
172
123
125
168
419
319
760
1003
532
132
133
101
247
261
645
173
R2
R3
R4
R15
R279

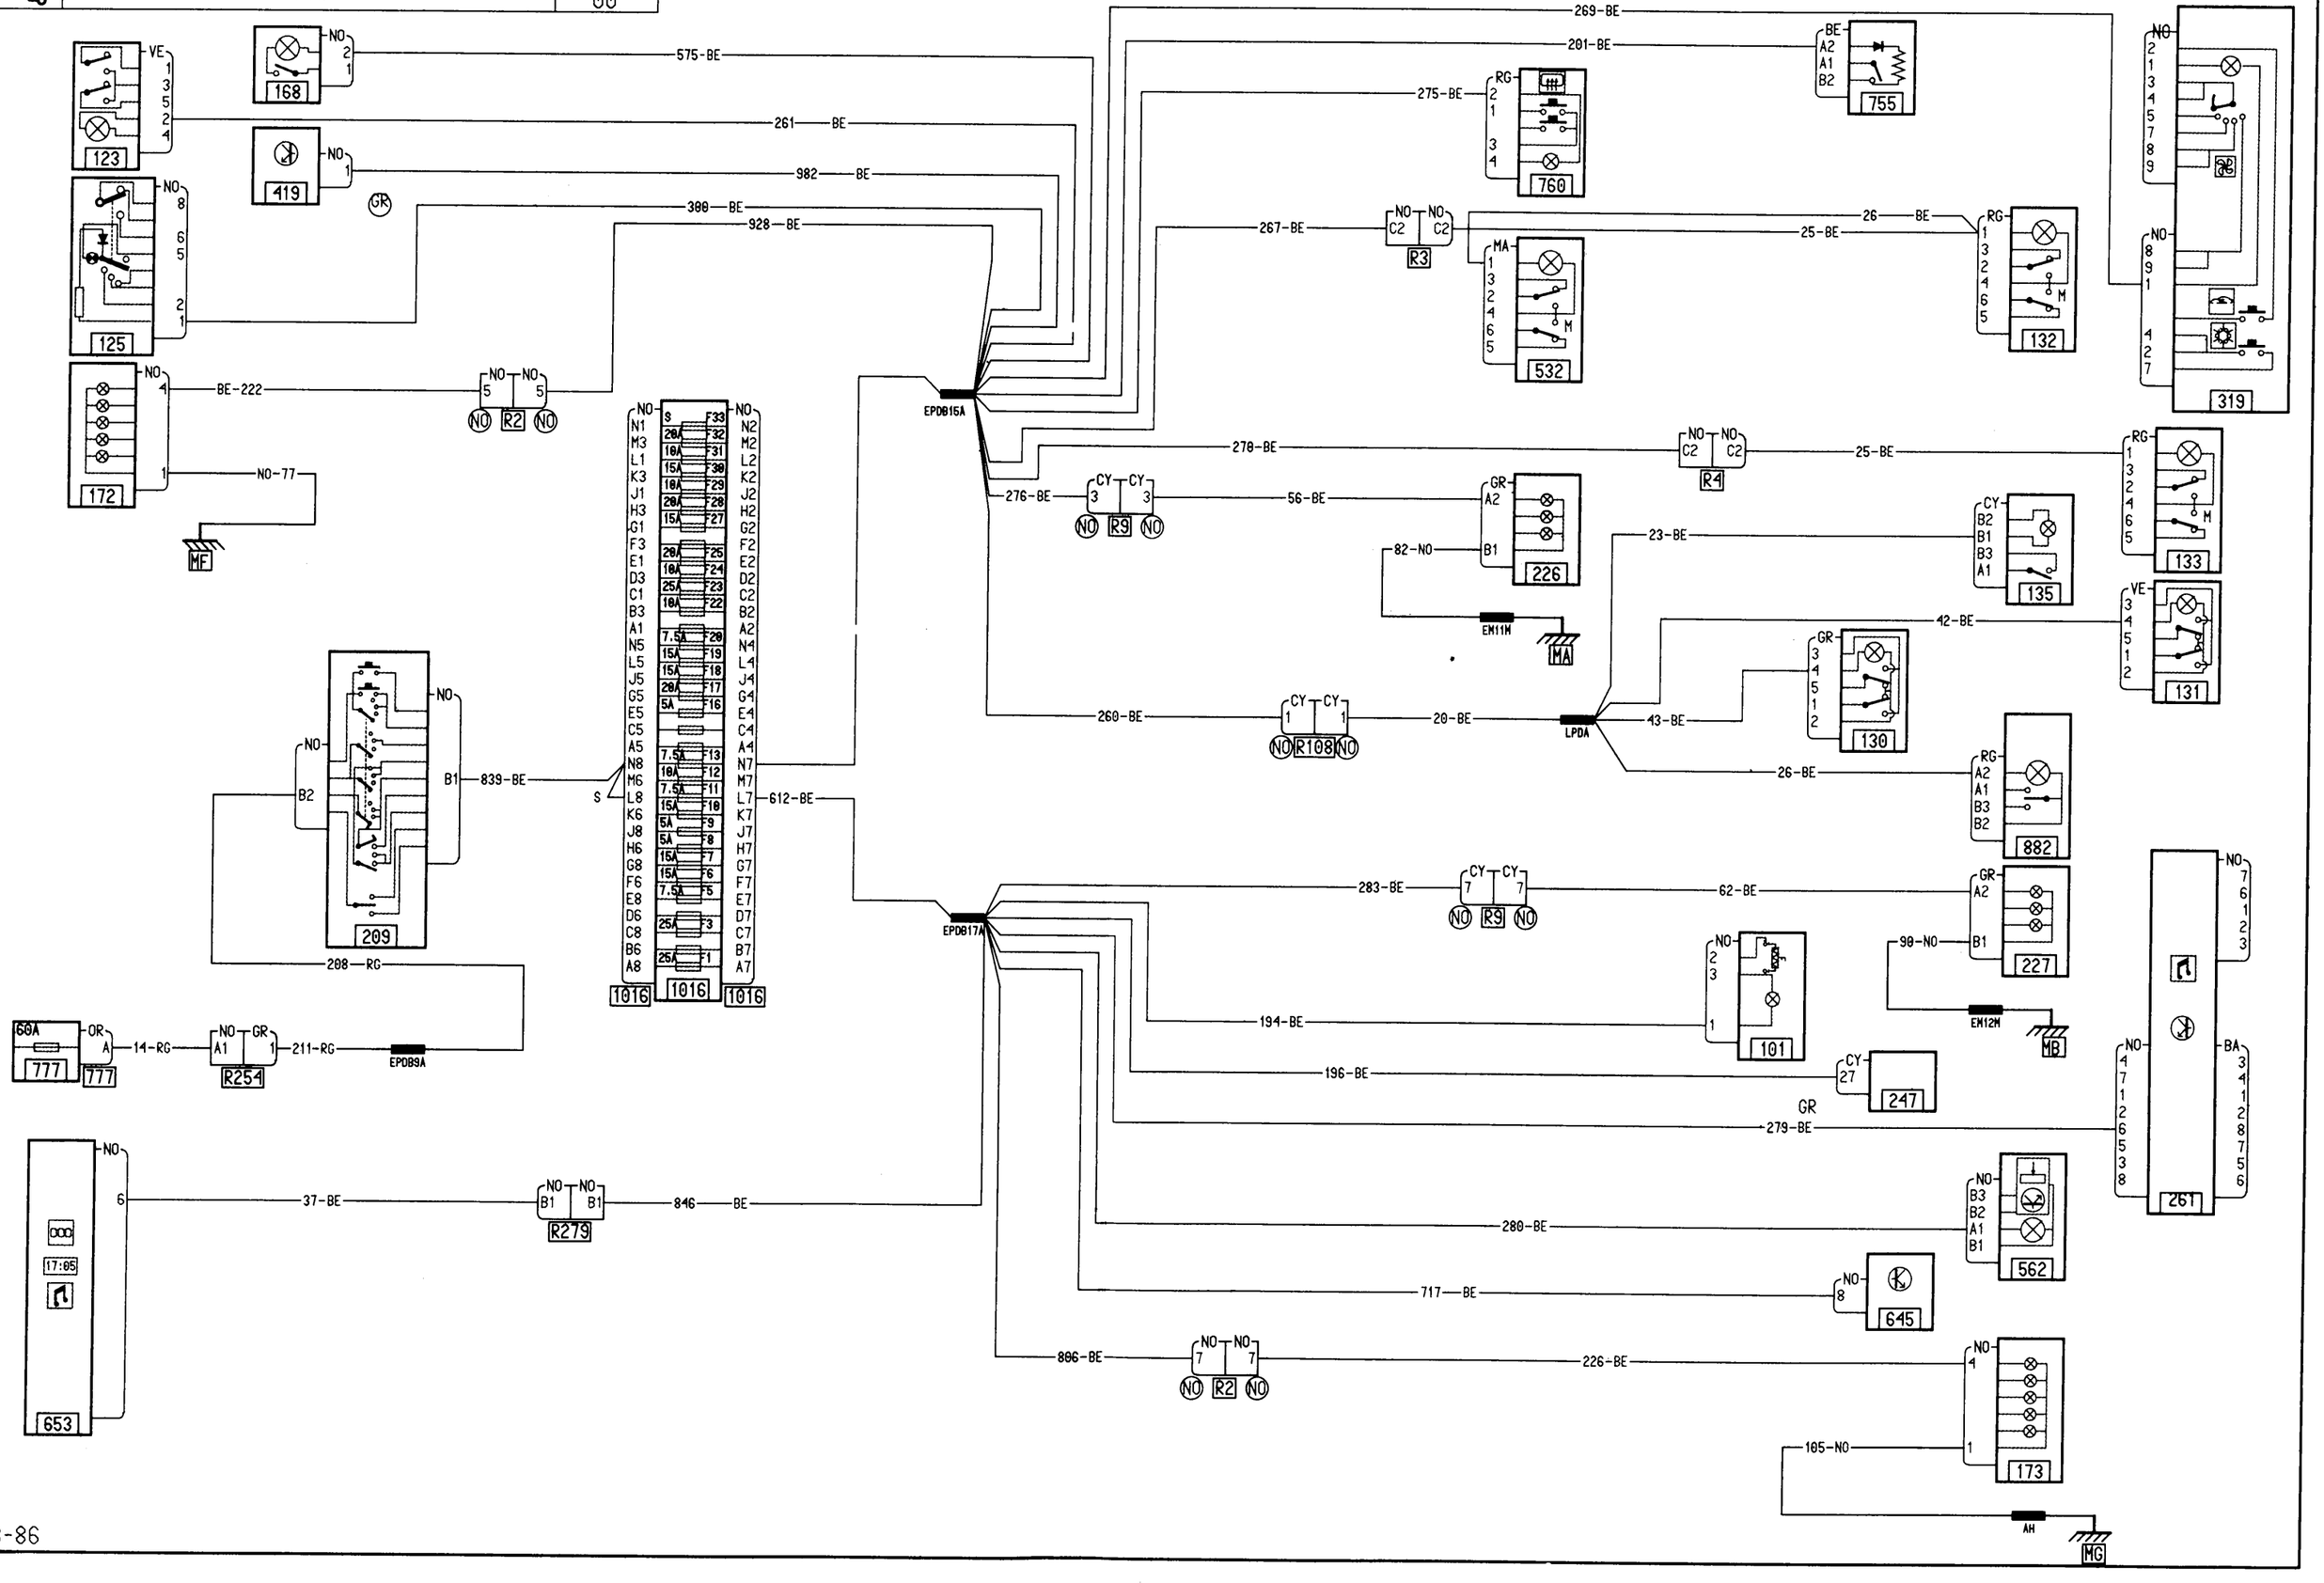
123
168
419
125
172
209
1016
777
653
755
760
532
132
319
133
135
131
130
882
227
101
247
562
645
173
261
226
EPDB15A
EPDB17A
EPDB9A
LPDA
EM11M
EM12M
MF
MA
MB
MG
AH
R2
R3
R4
R9
R108
R254
R279
269-BE
201-BE
275-BE
267-BE
575-BE
261-BE
382-BE
380-BE
928-BE
BE-222
NO-77
278-BE
276-BE
56-BE
82-NO
260-BE
20-BE
23-BE
42-BE
43-BE
26-BE
839-BE
612-BE
208-RG
14-RG
211-RG
283-BE
62-BE
98-NO
194-BE
196-BE
279-BE
280-BE
717-BE
806-BE
226-BE
105-NO
37-BE
846-BE

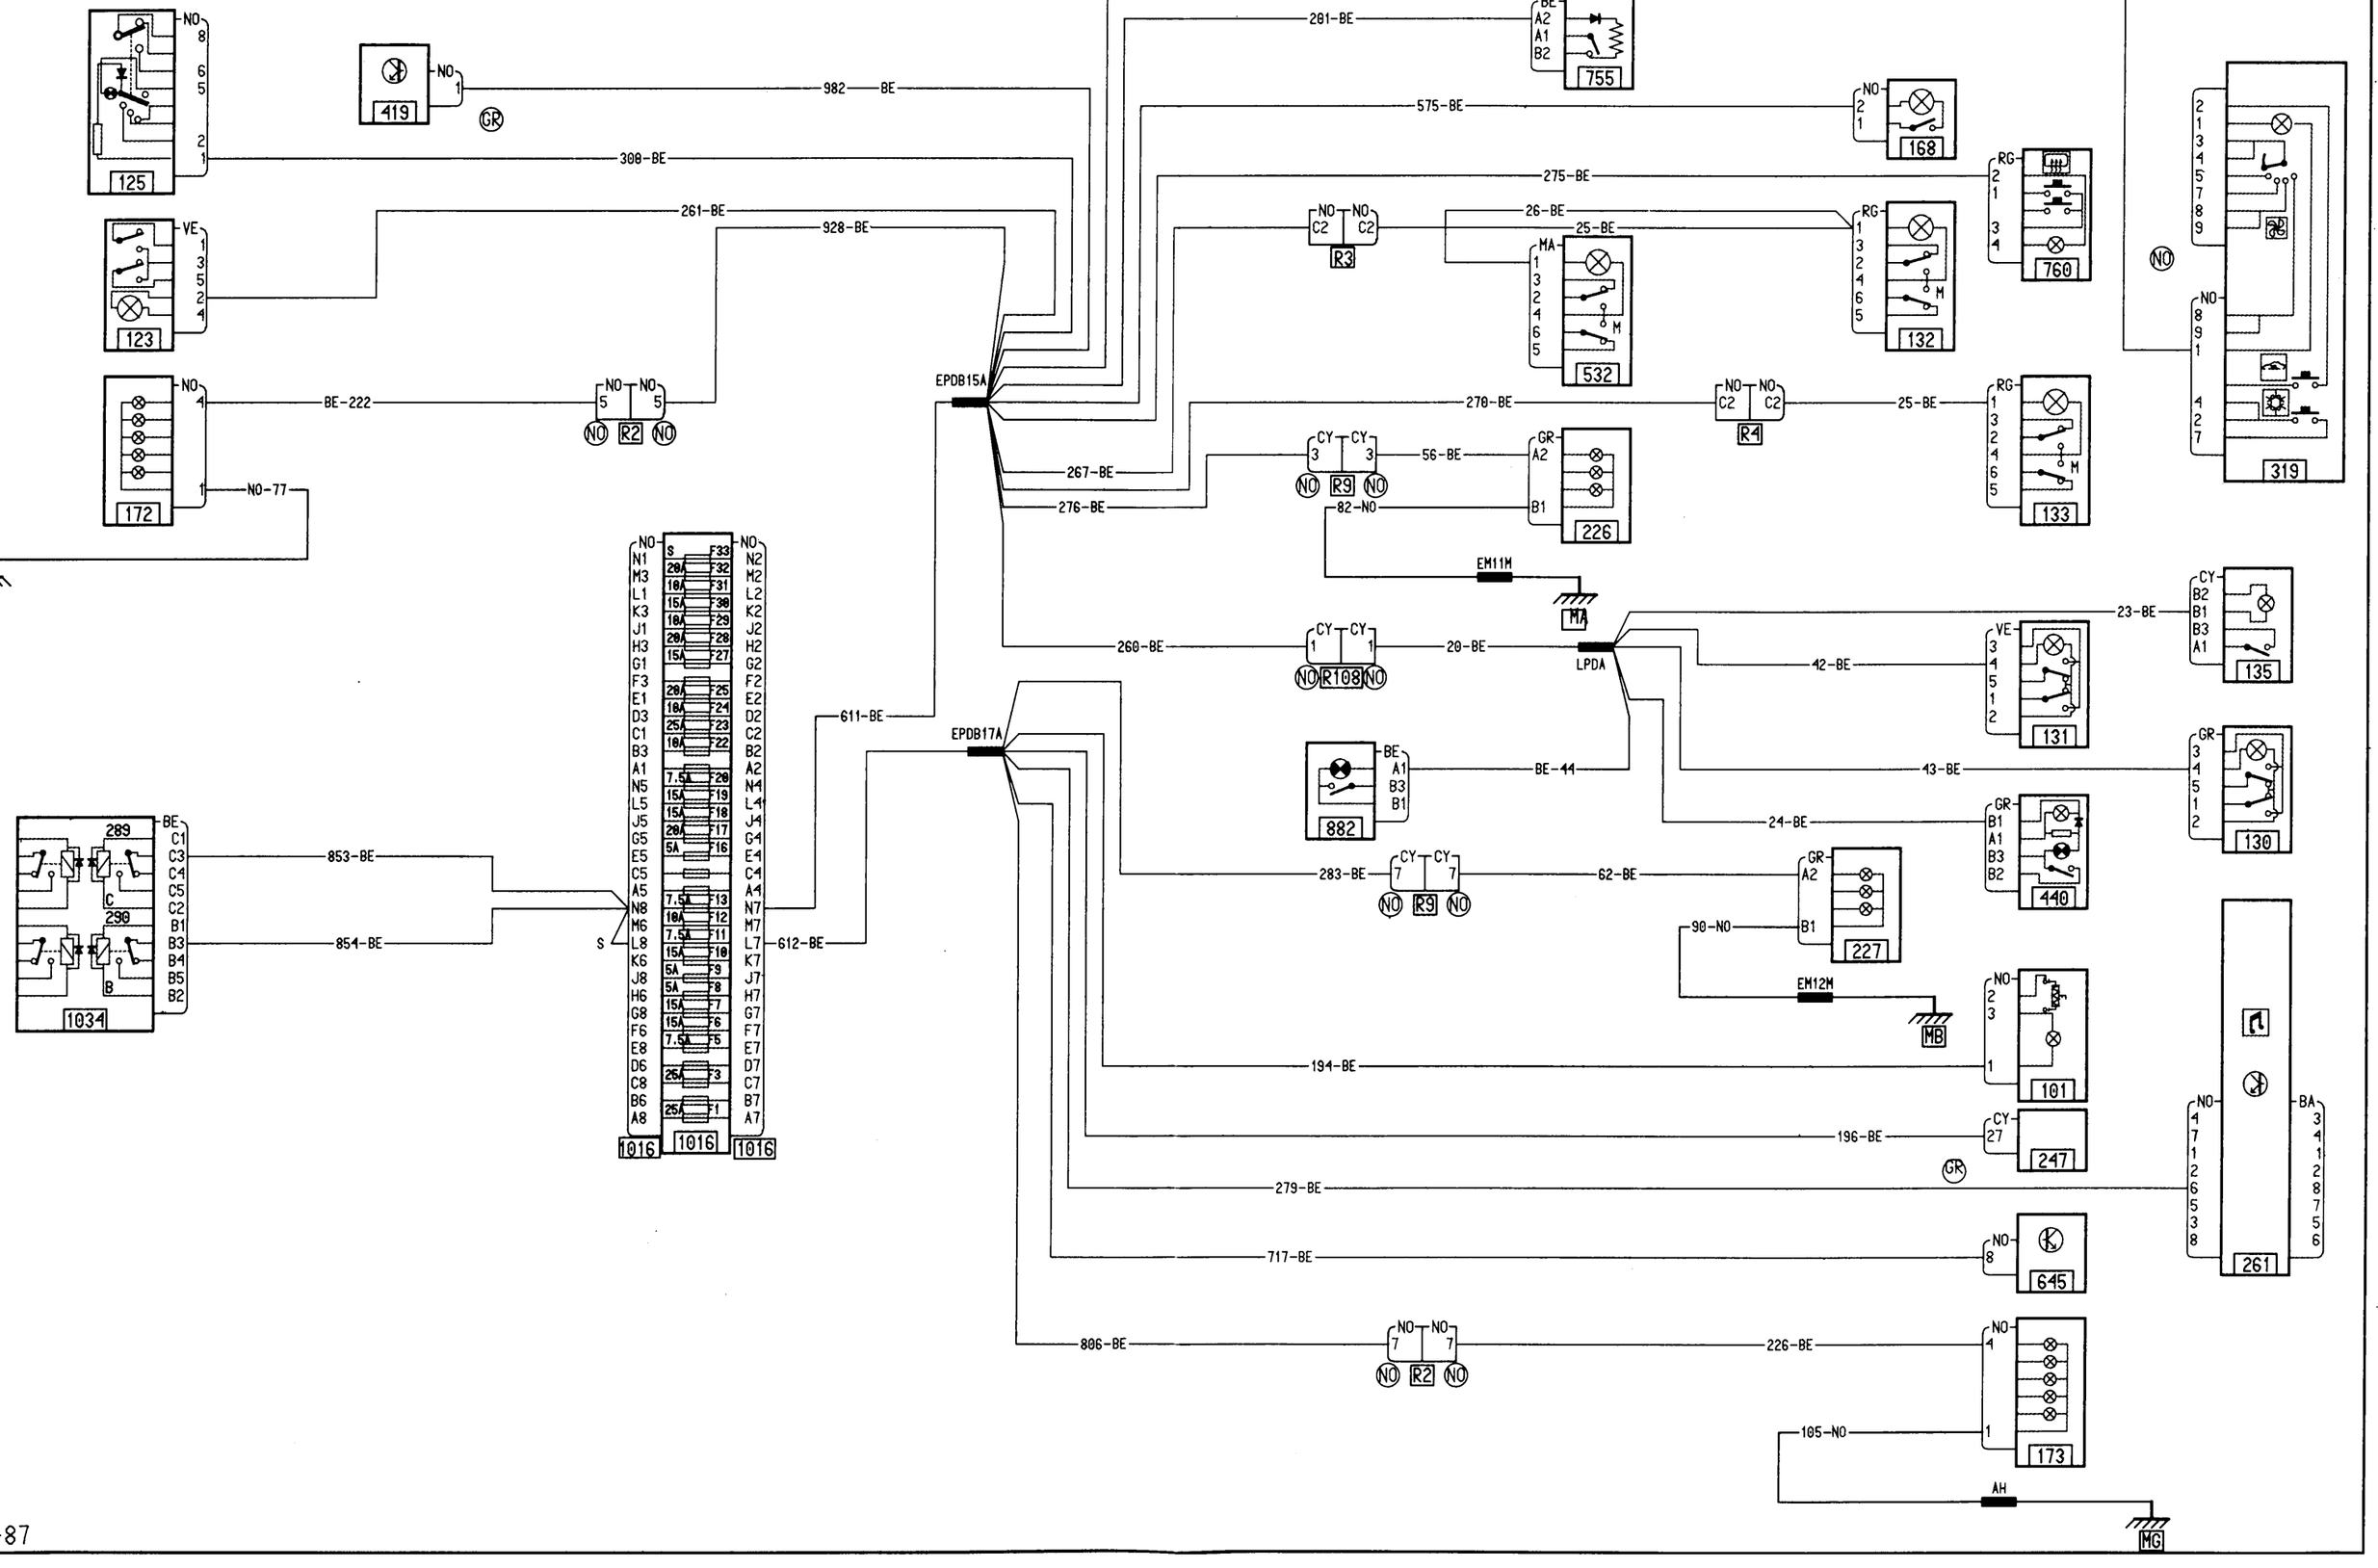
125
419
123
172
168
755
760
132
532
133
226
319
EPDB15A
EPDB17A
R3
R4
R9
R108
R2
R1
R5
R6
R7
R8
982-BE
300-BE
261-BE
928-BE
BE-222
NO-77
269-BE
281-BE
575-BE
275-BE
26-BE
25-BE
270-BE
267-BE
276-BE
56-BE
82-NO
EM11M
MA
260-BE
20-BE
LPDA
611-BE
612-BE
1016
289
290
1034
853-BE
854-BE
135
131
130
440
227
EM12M
MB
101
247
194-BE
196-BE
279-BE
717-BE
645
261
806-BE
226-BE
173
105-NO
AH
MG
MF
882
BE-44
42-BE
23-BE
43-BE
24-BE
283-BE
62-BE
90-NO

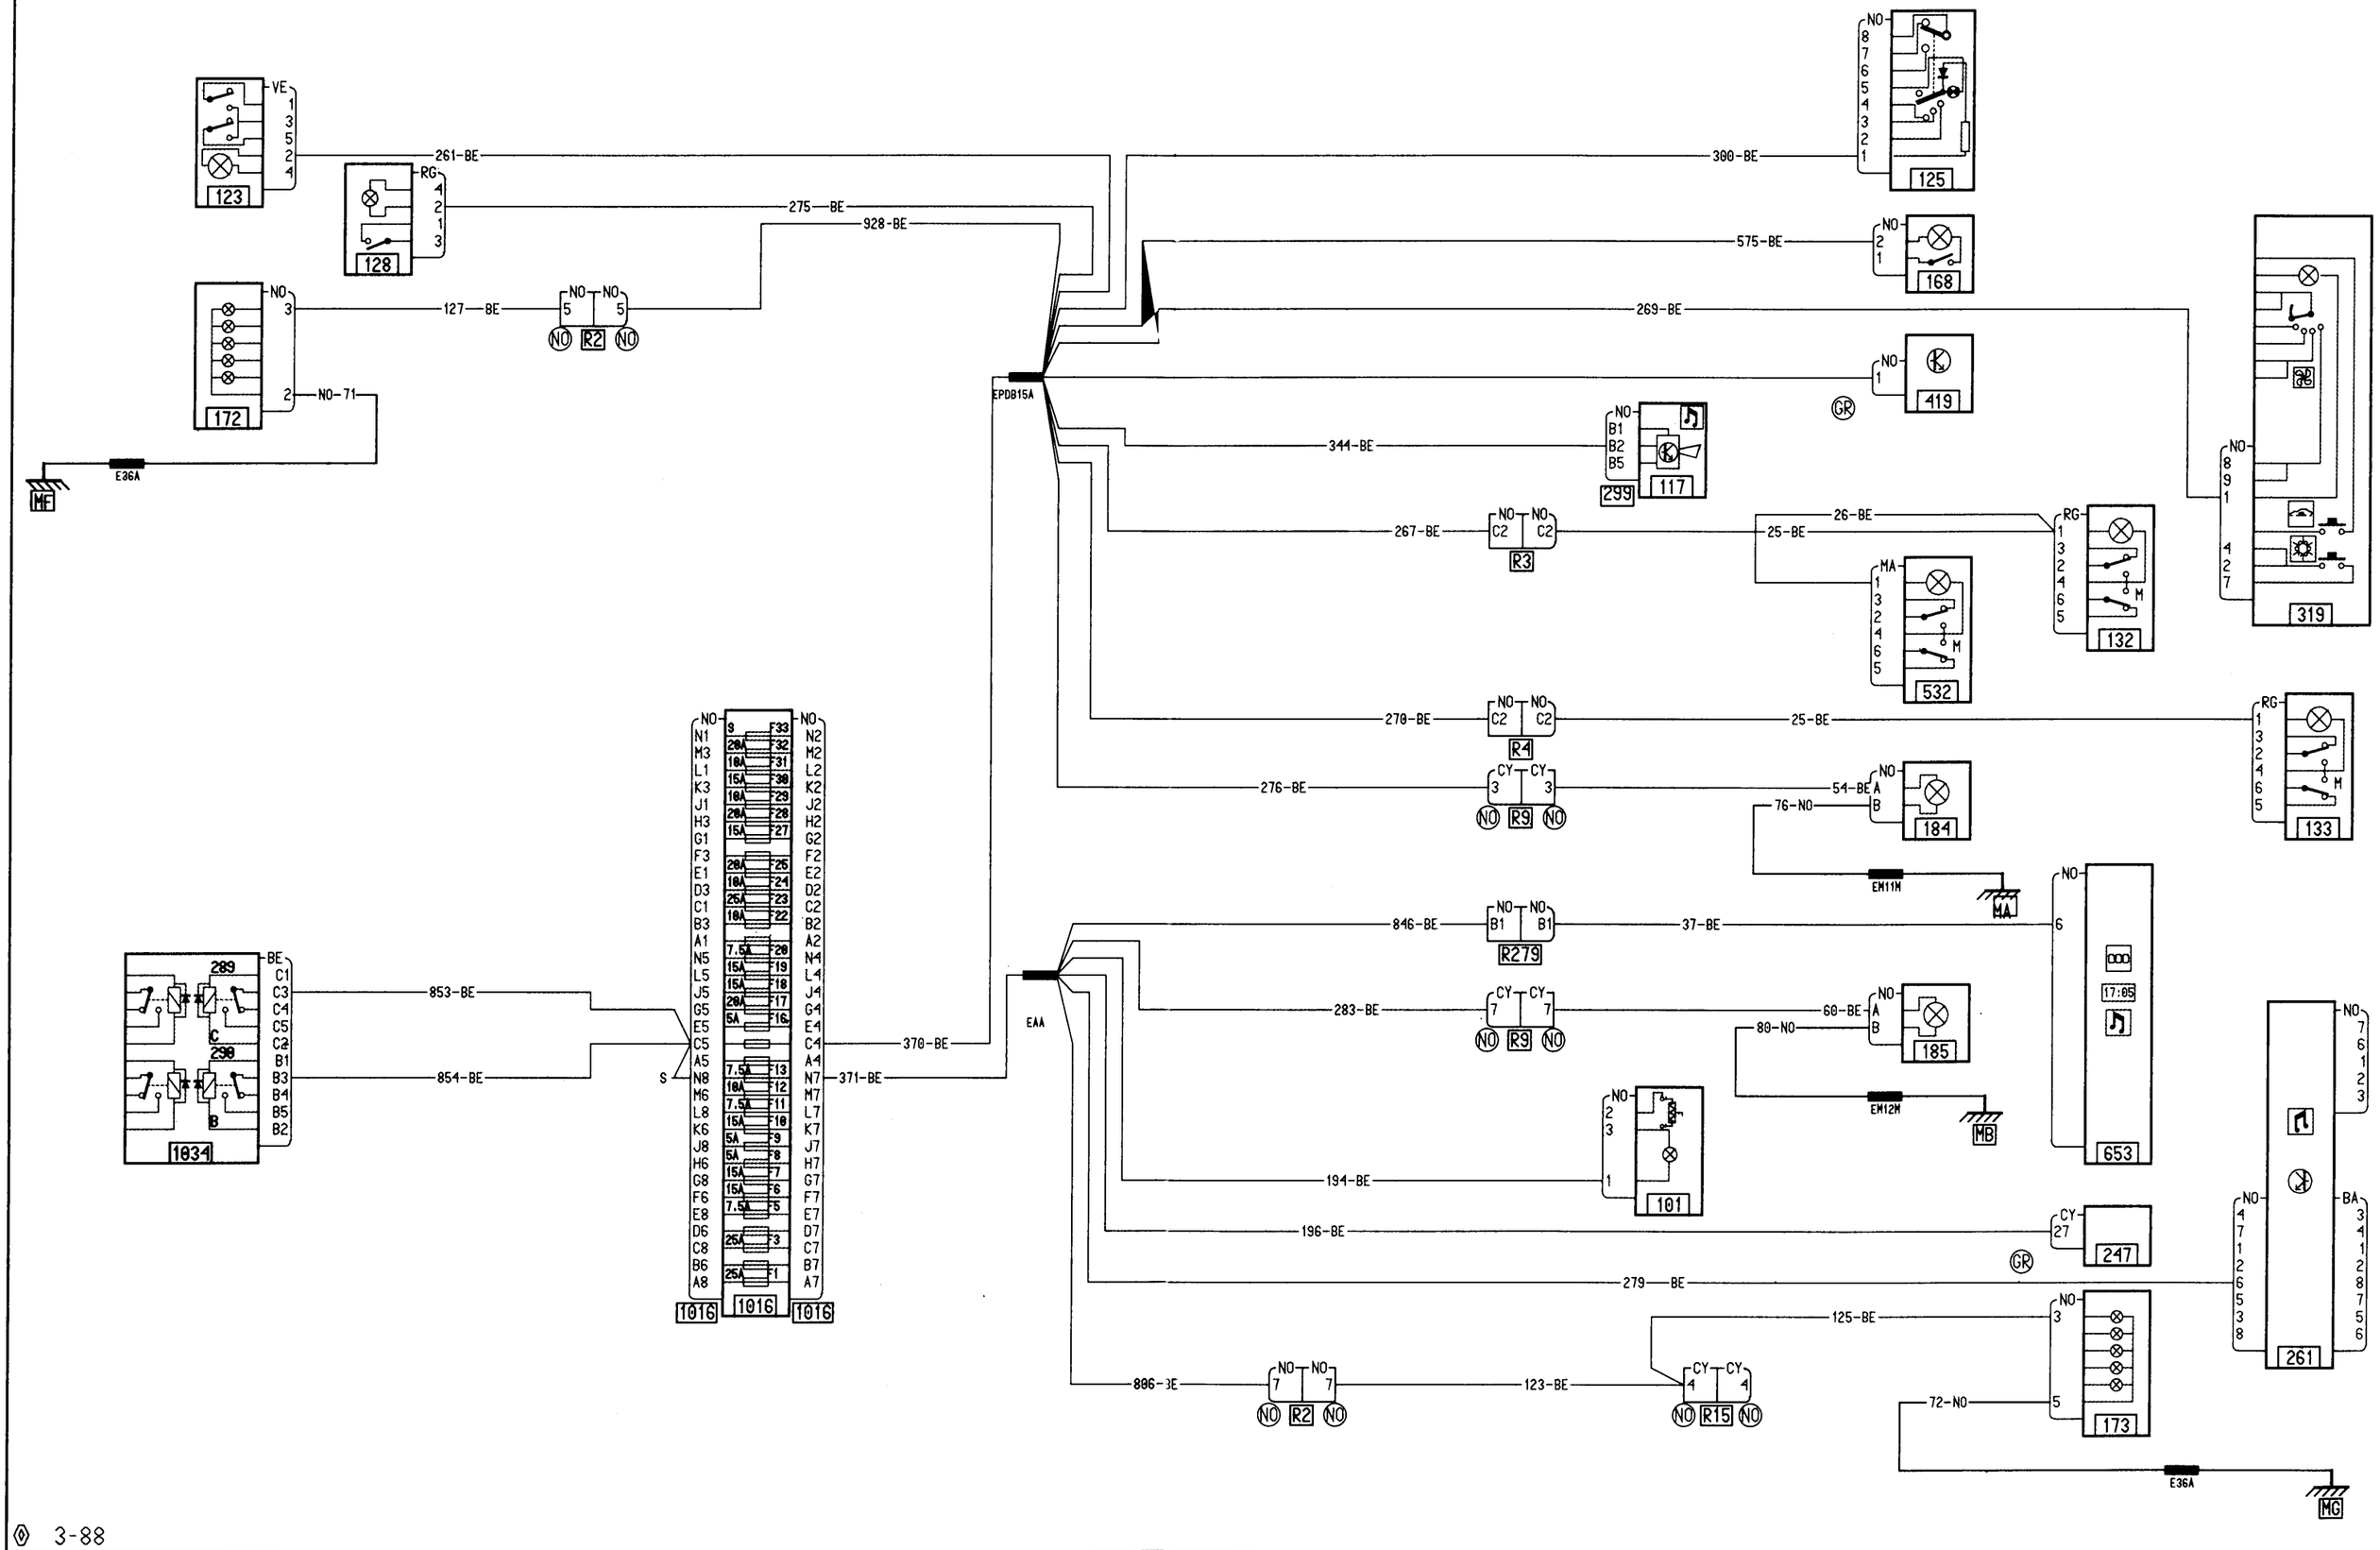
123
128
172
125
168
419
299
117
319
132
532
133
184
653
247
261
173
1034
1016
EPDB15A
EAA
E36A
MF
MA
MB
MG
EM11M
EM12M
R2
R3
R4
R9
R15
R279
261-BE
275-BE
928-BE
300-BE
575-BE
269-BE
127-BE
NO-71
344-BE
267-BE
26-BE
25-BE
270-BE
276-BE
54-BE
76-NO
846-BE
37-BE
283-BE
60-BE
80-NO
194-BE
196-BE
279-BE
125-BE
72-NO
853-BE
854-BE
370-BE
371-BE
886-BE
123-BE
GR

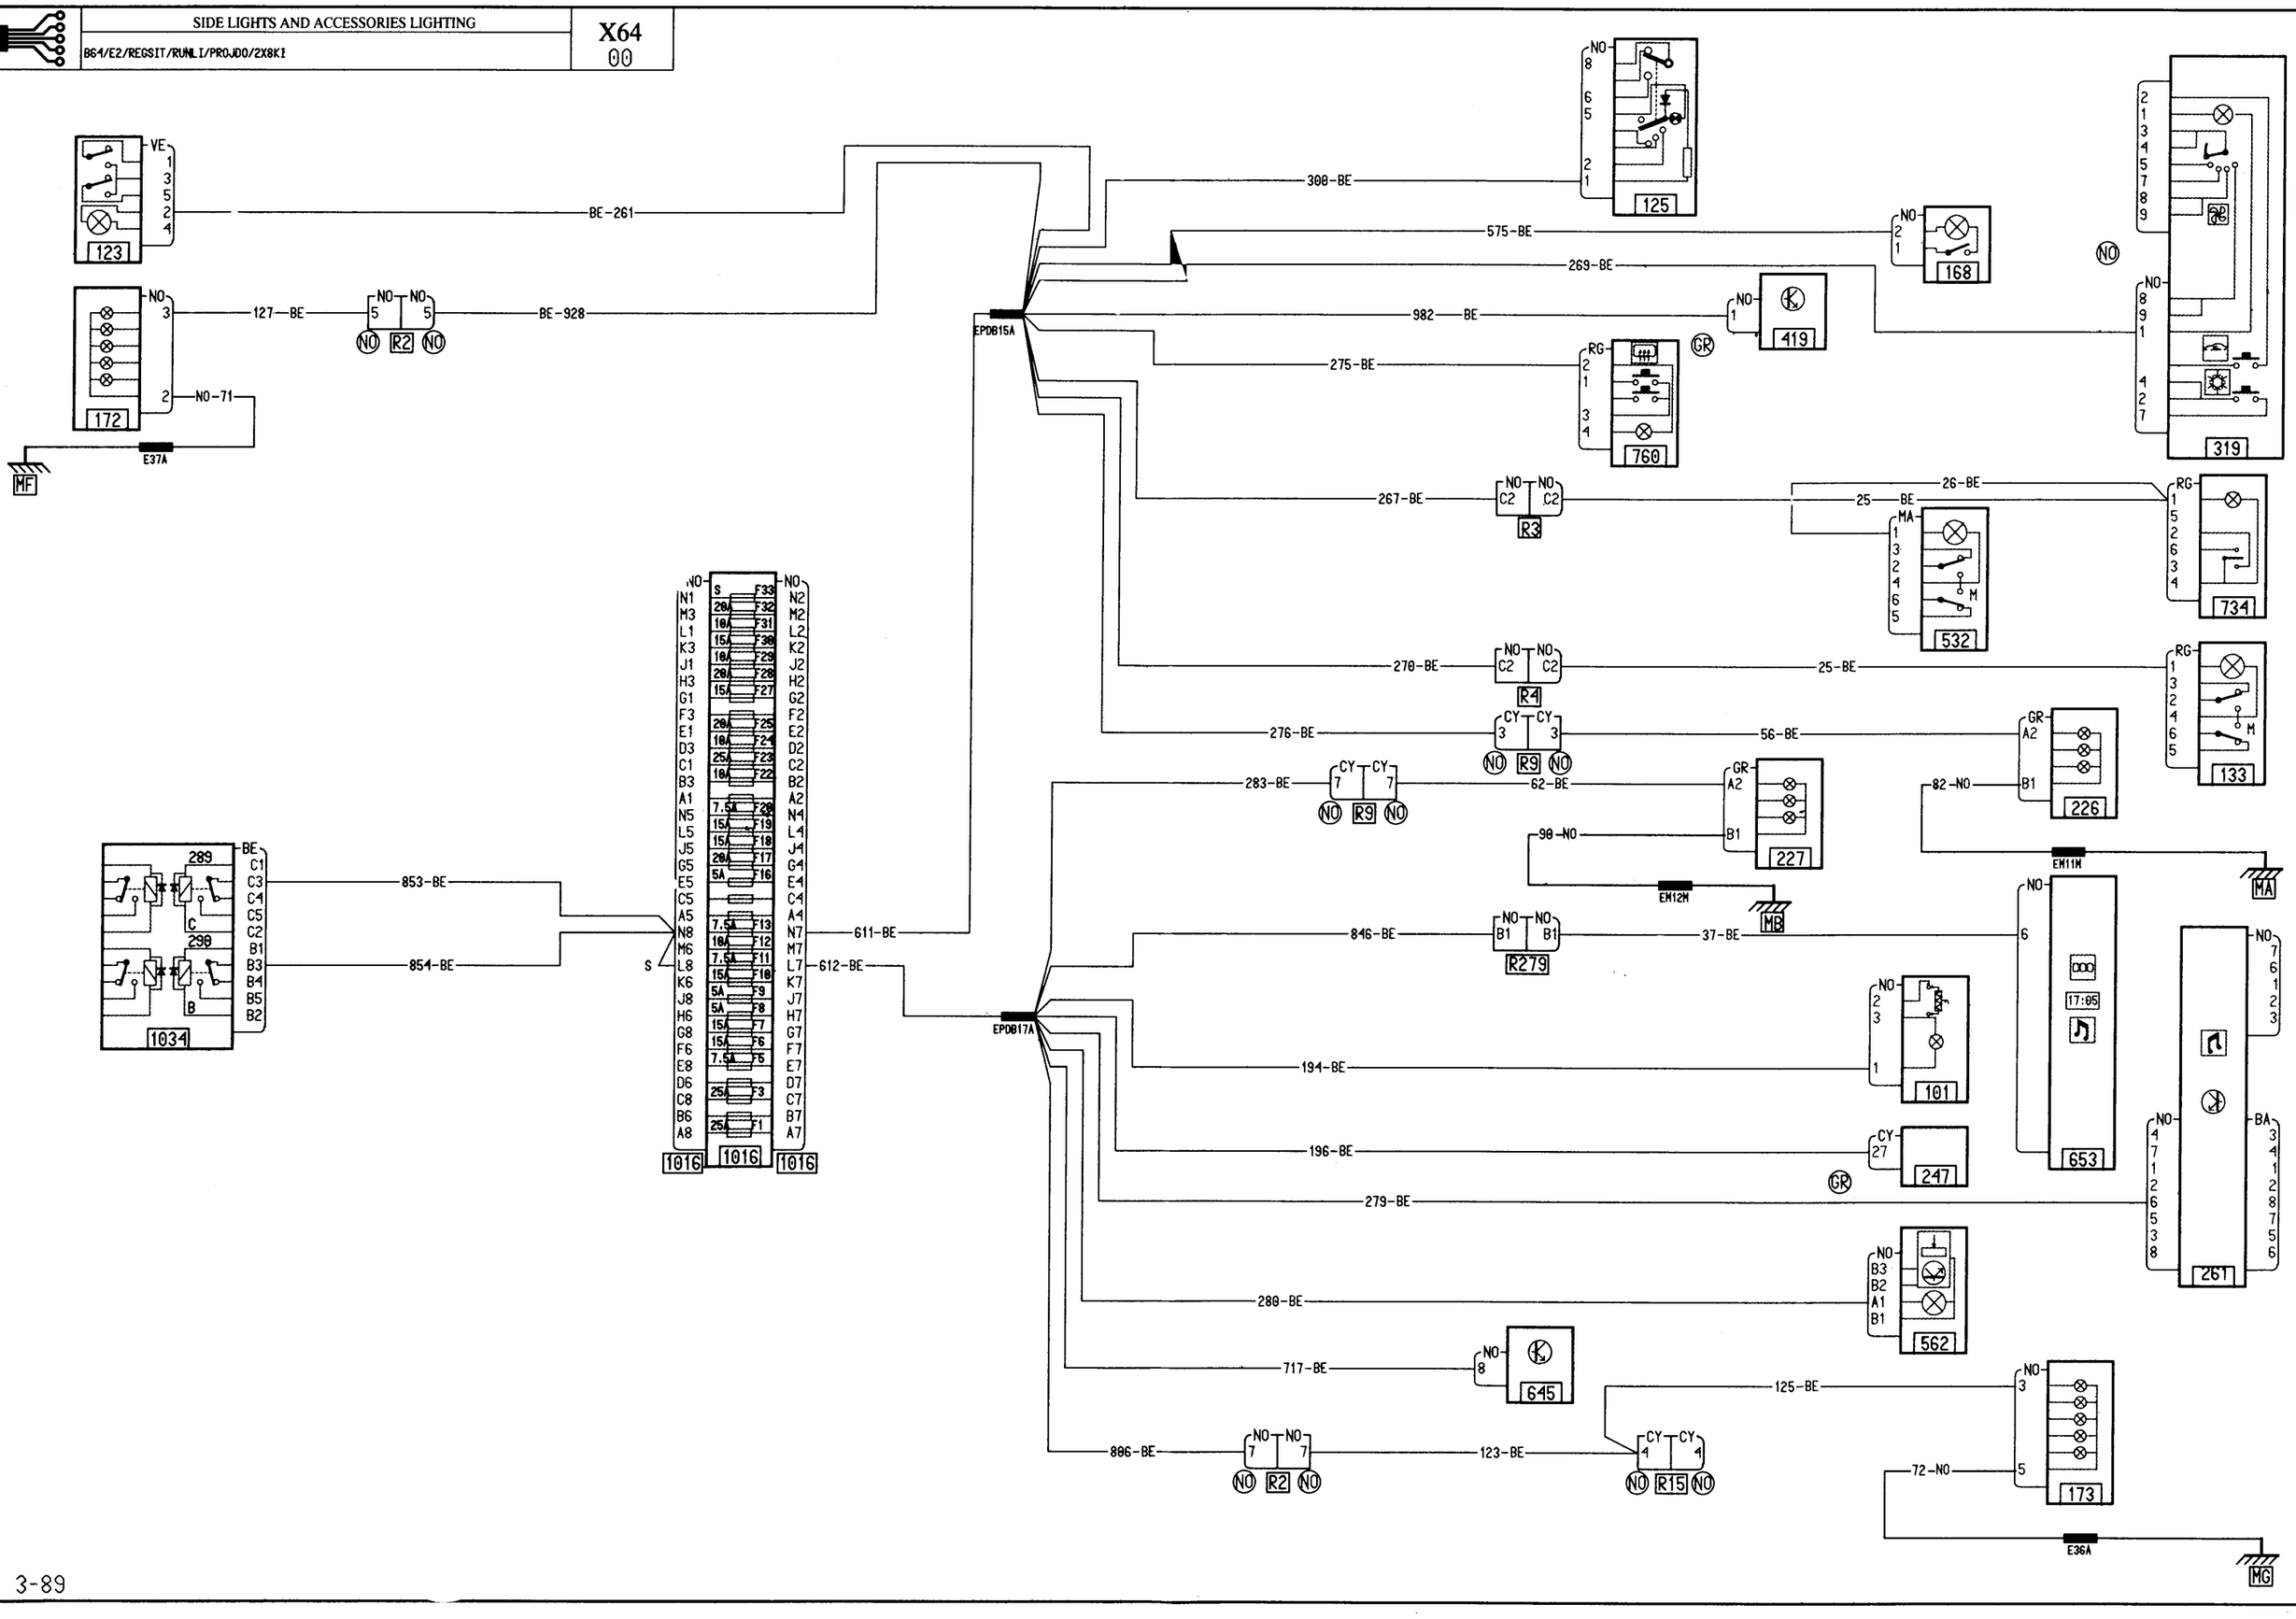
123
BE-261
172
127-BE
BE-928
NO-71
E37A
MF
EPDB15A
300-BE
125
575-BE
168
269-BE
982-BE
419
275-BE
760
319
267-BE
R3
25-BE
26-BE
532
734
270-BE
R4
25-BE
133
276-BE
R9
56-BE
283-BE
62-BE
98-NO
227
82-NO
226
EM11M
MA
EM12M
MB
846-BE
R279
37-BE
653
194-BE
101
196-BE
247
279-BE
261
280-BE
562
717-BE
645
125-BE
173
72-NO
E36A
MG
806-BE
R2
123-BE
R15
289
290
1034
853-BE
854-BE
611-BE
612-BE
1016
F33
F32
F31
F30
F29
F28
F27
F25
F24
F23
F22
F20
F19
F18
F17
F16
F13
F12
F11
F10
F9
F8
F7
F6
F5
F3
F1

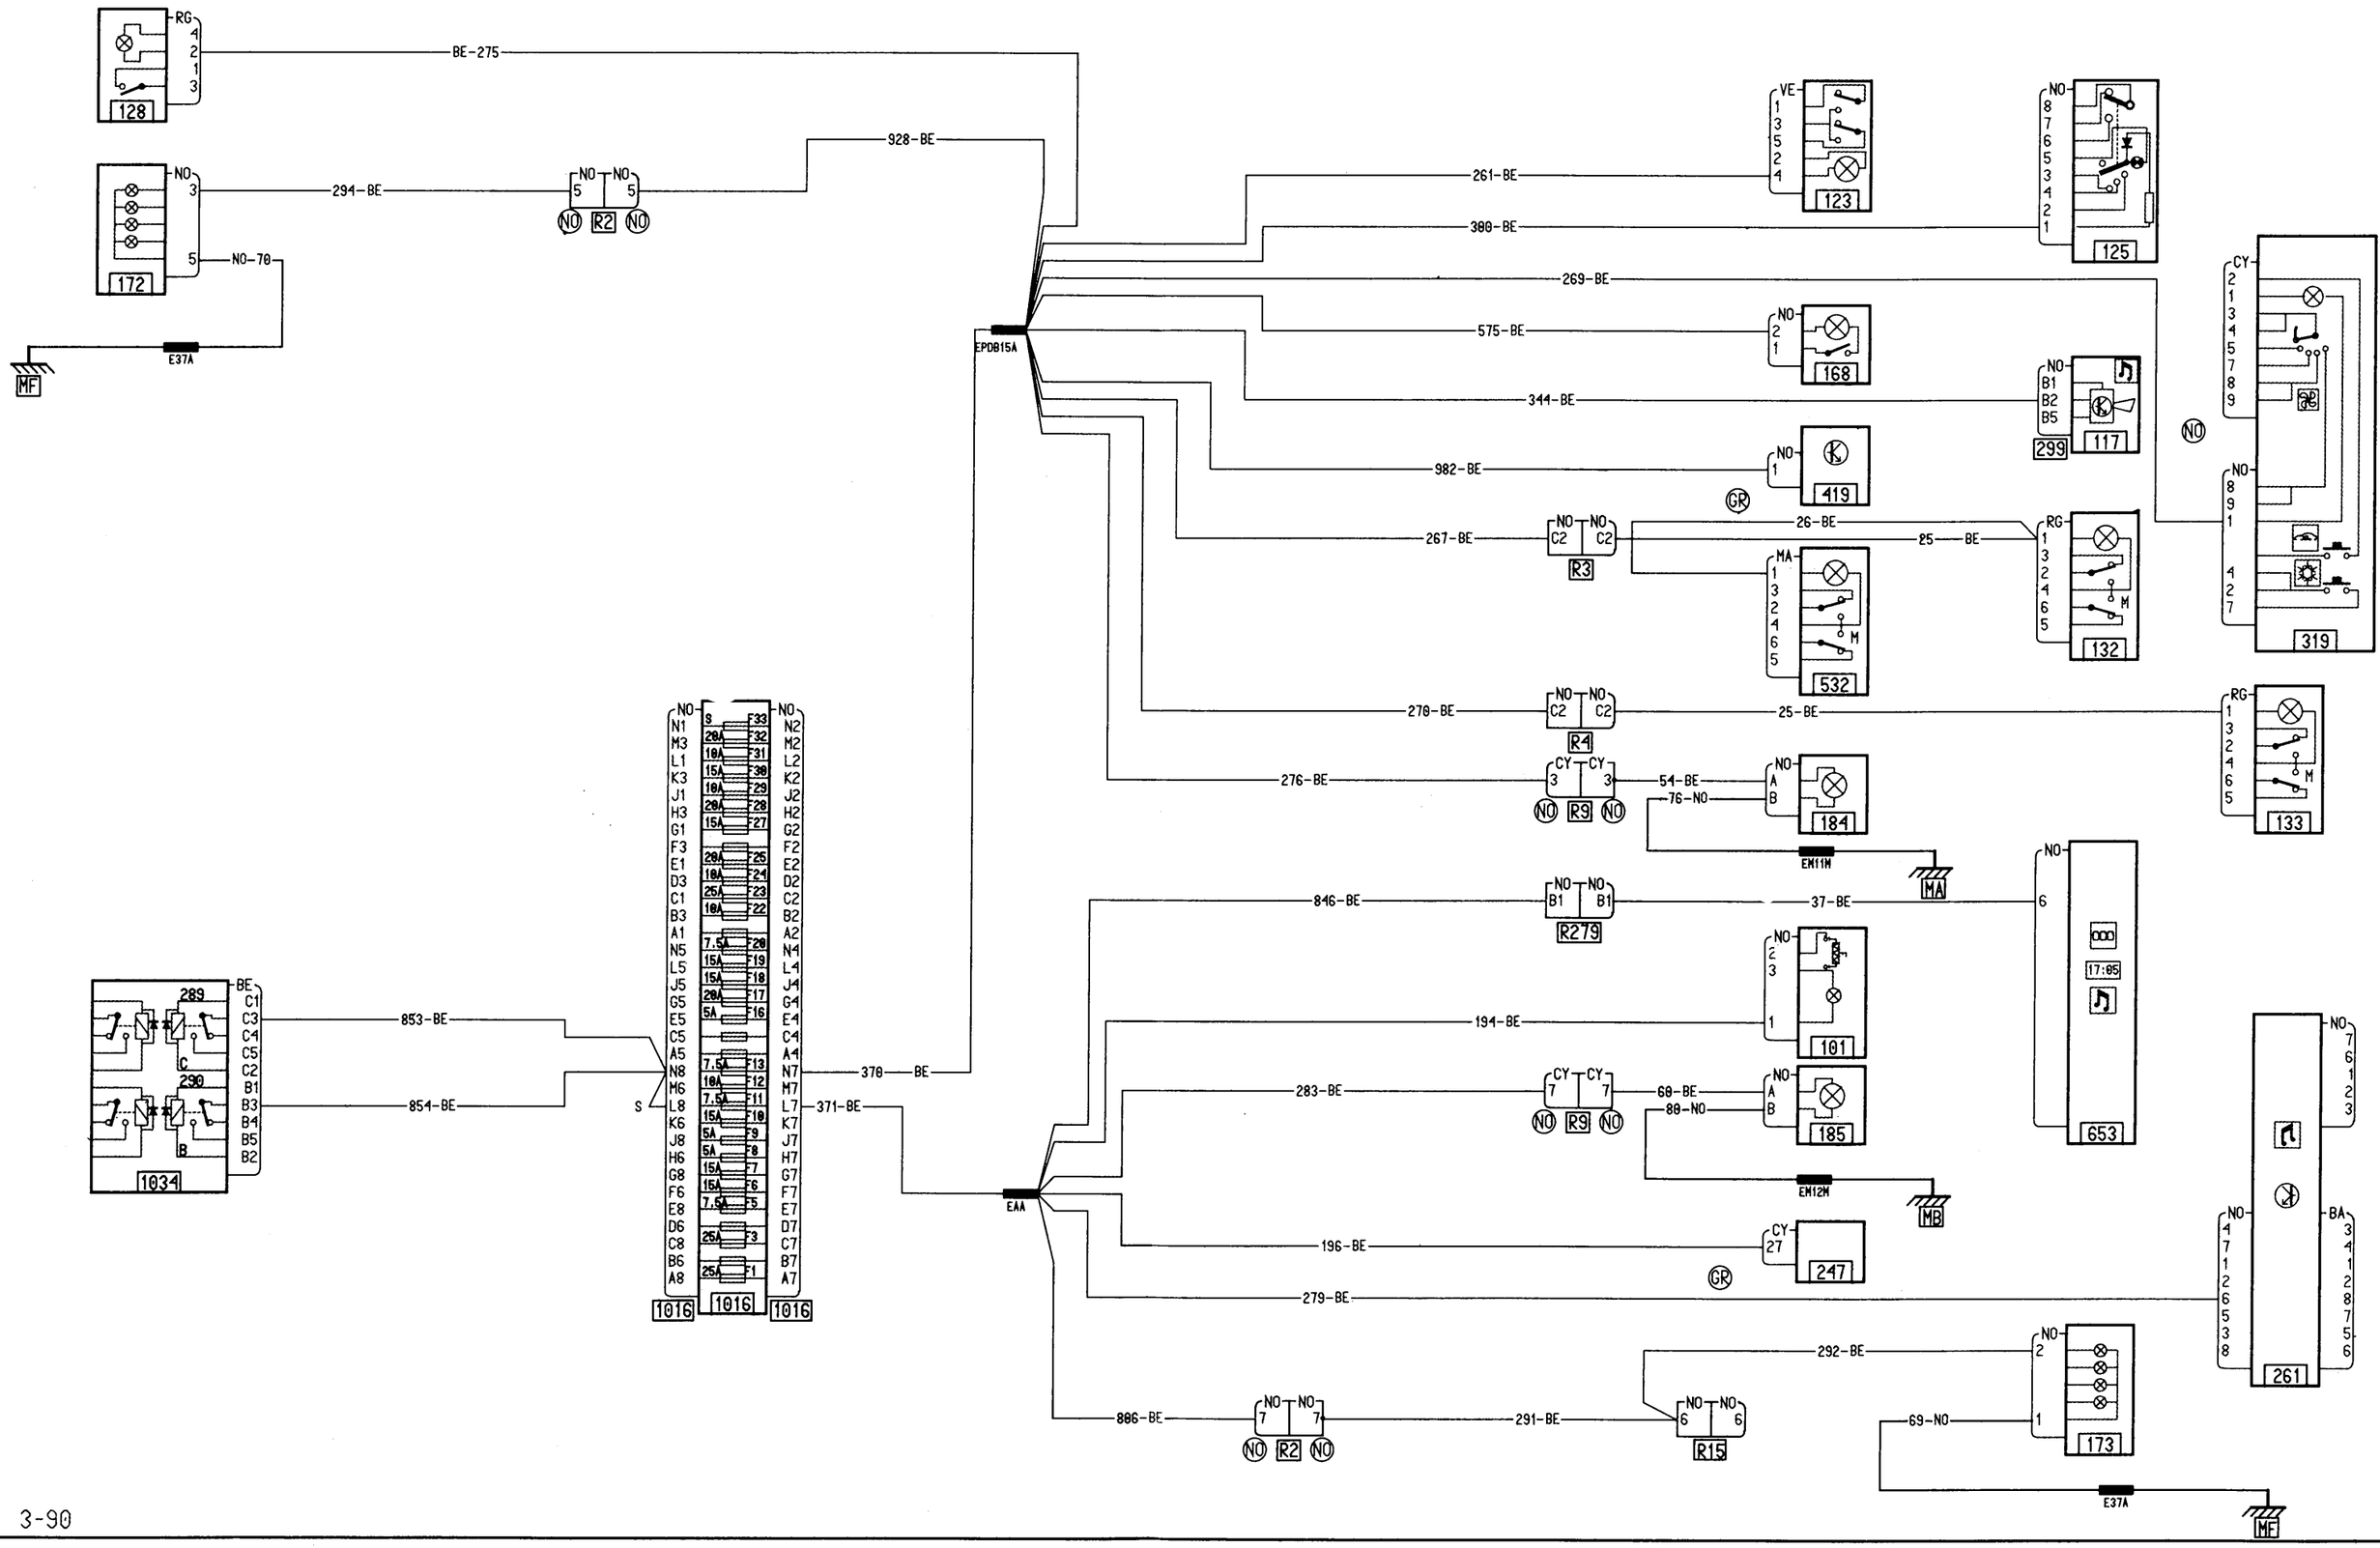
128
RG
BE-275
172
NO
294-BE
NO-70
E37A
MF
928-BE
R2
EPDB15A
261-BE
123
VE
300-BE
125
269-BE
575-BE
168
344-BE
299
117
982-BE
419
267-BE
R3
26-BE
25-BE
132
M
532
278-BE
R4
276-BE
R9
54-BE
76-NO
184
EM11M
MA
133
319
CY
846-BE
R279
37-BE
17:05
653
194-BE
101
283-BE
69-BE
80-NO
185
EM12M
MB
196-BE
247
279-BE
261
292-BE
69-NO
173
E37A
MF
289
290
1034
853-BE
854-BE
EAA
370-BE
371-BE
1016
886-BE
R15
291-BE

BOOT LIGHTING

S64/E1

X64
00

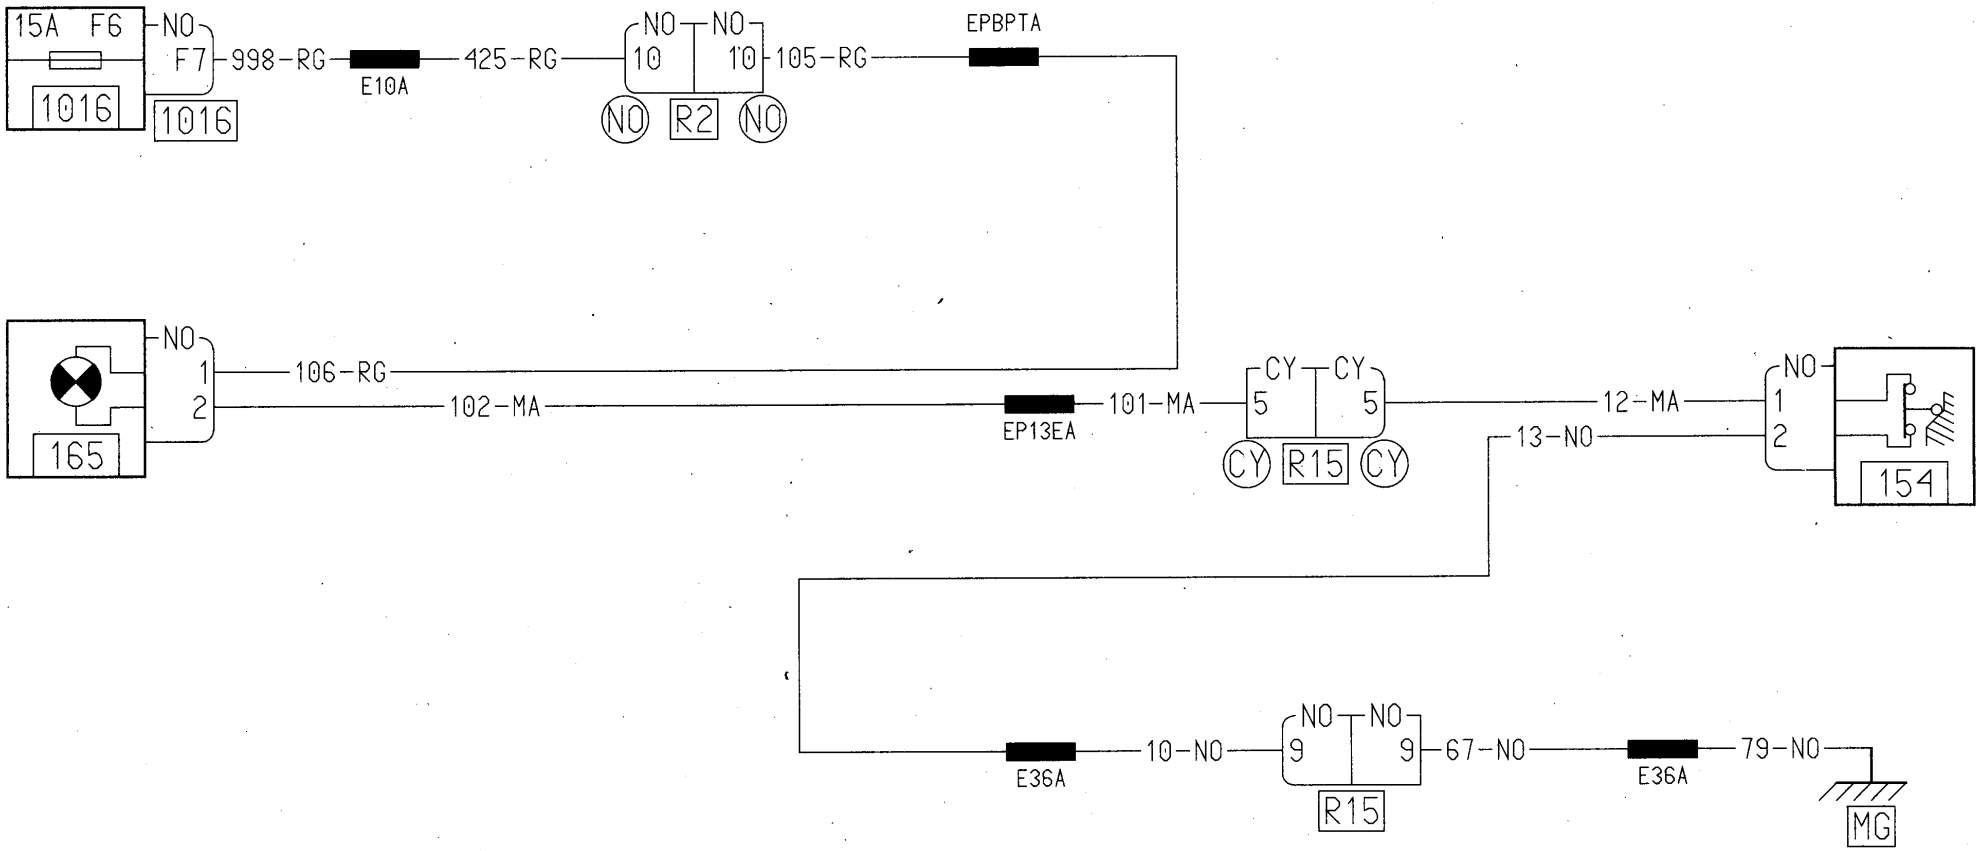

BOOT LIGHTING

V25/E1

X64
00

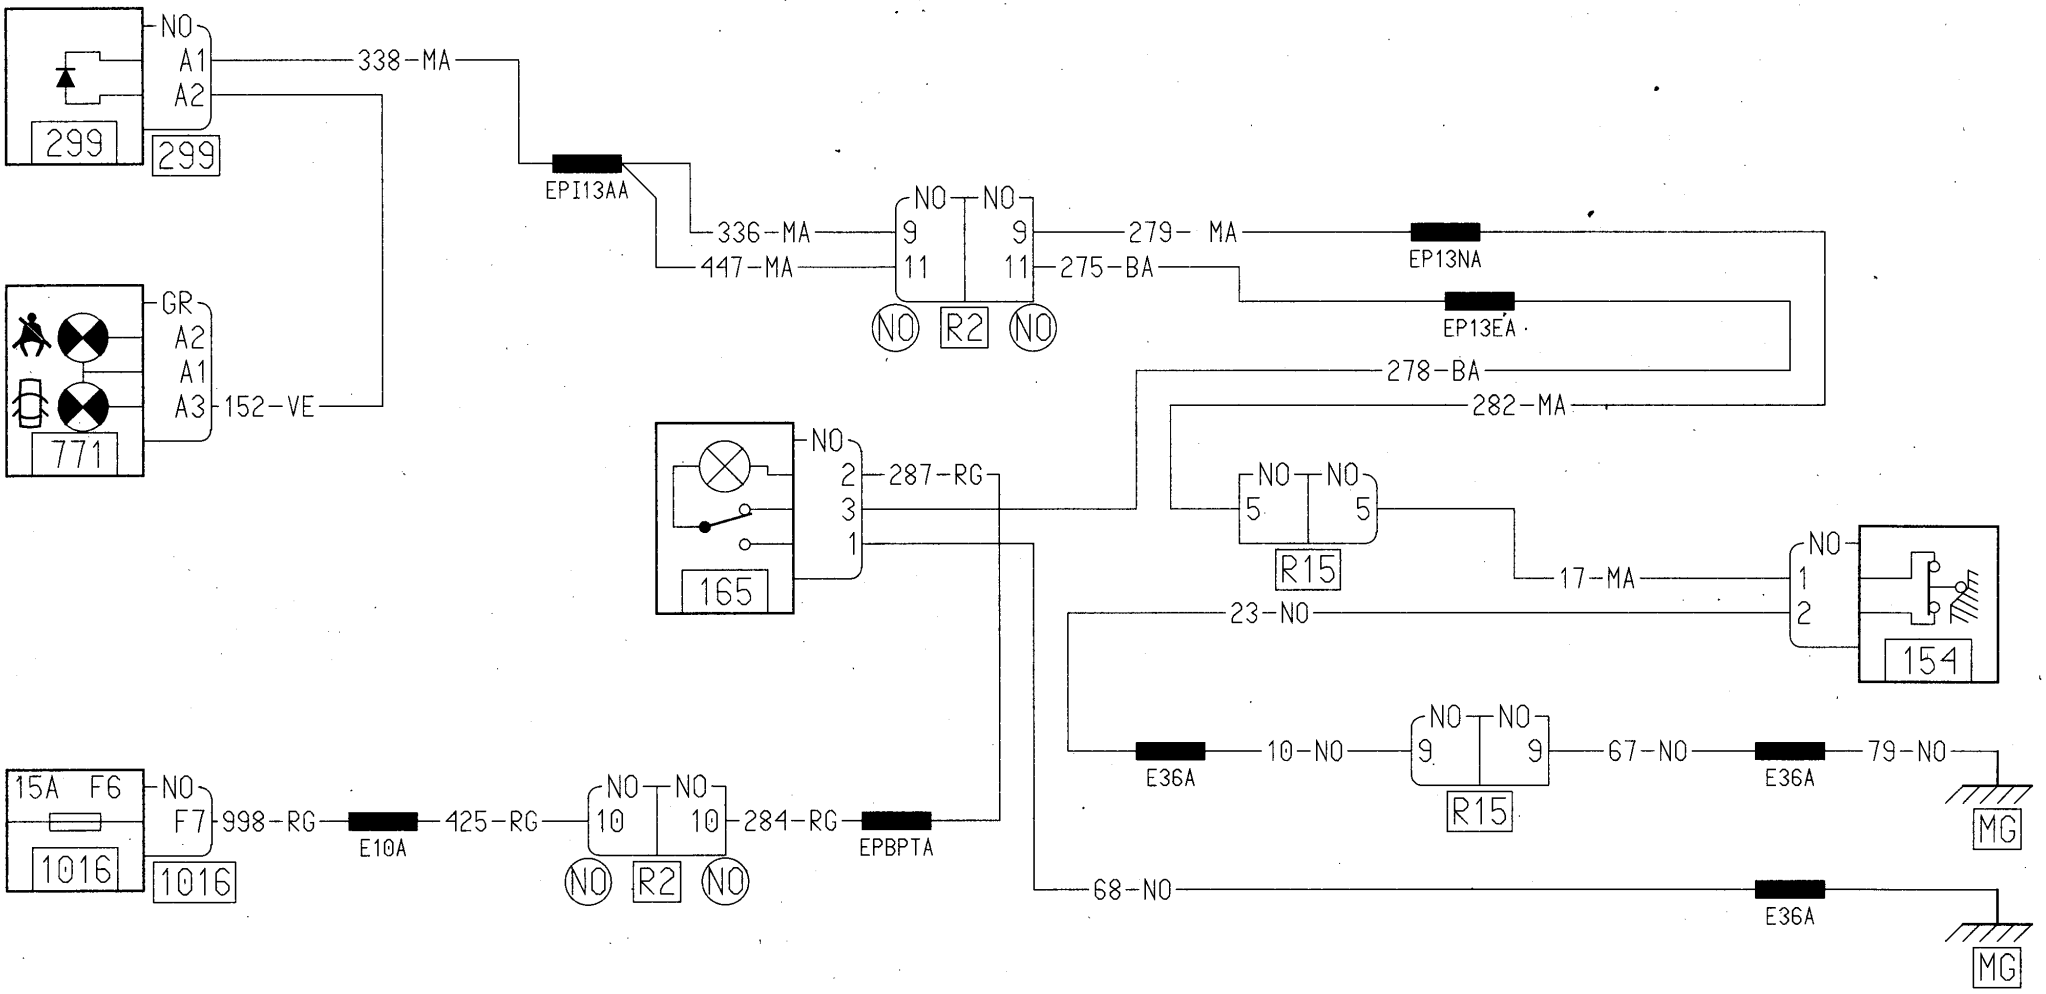

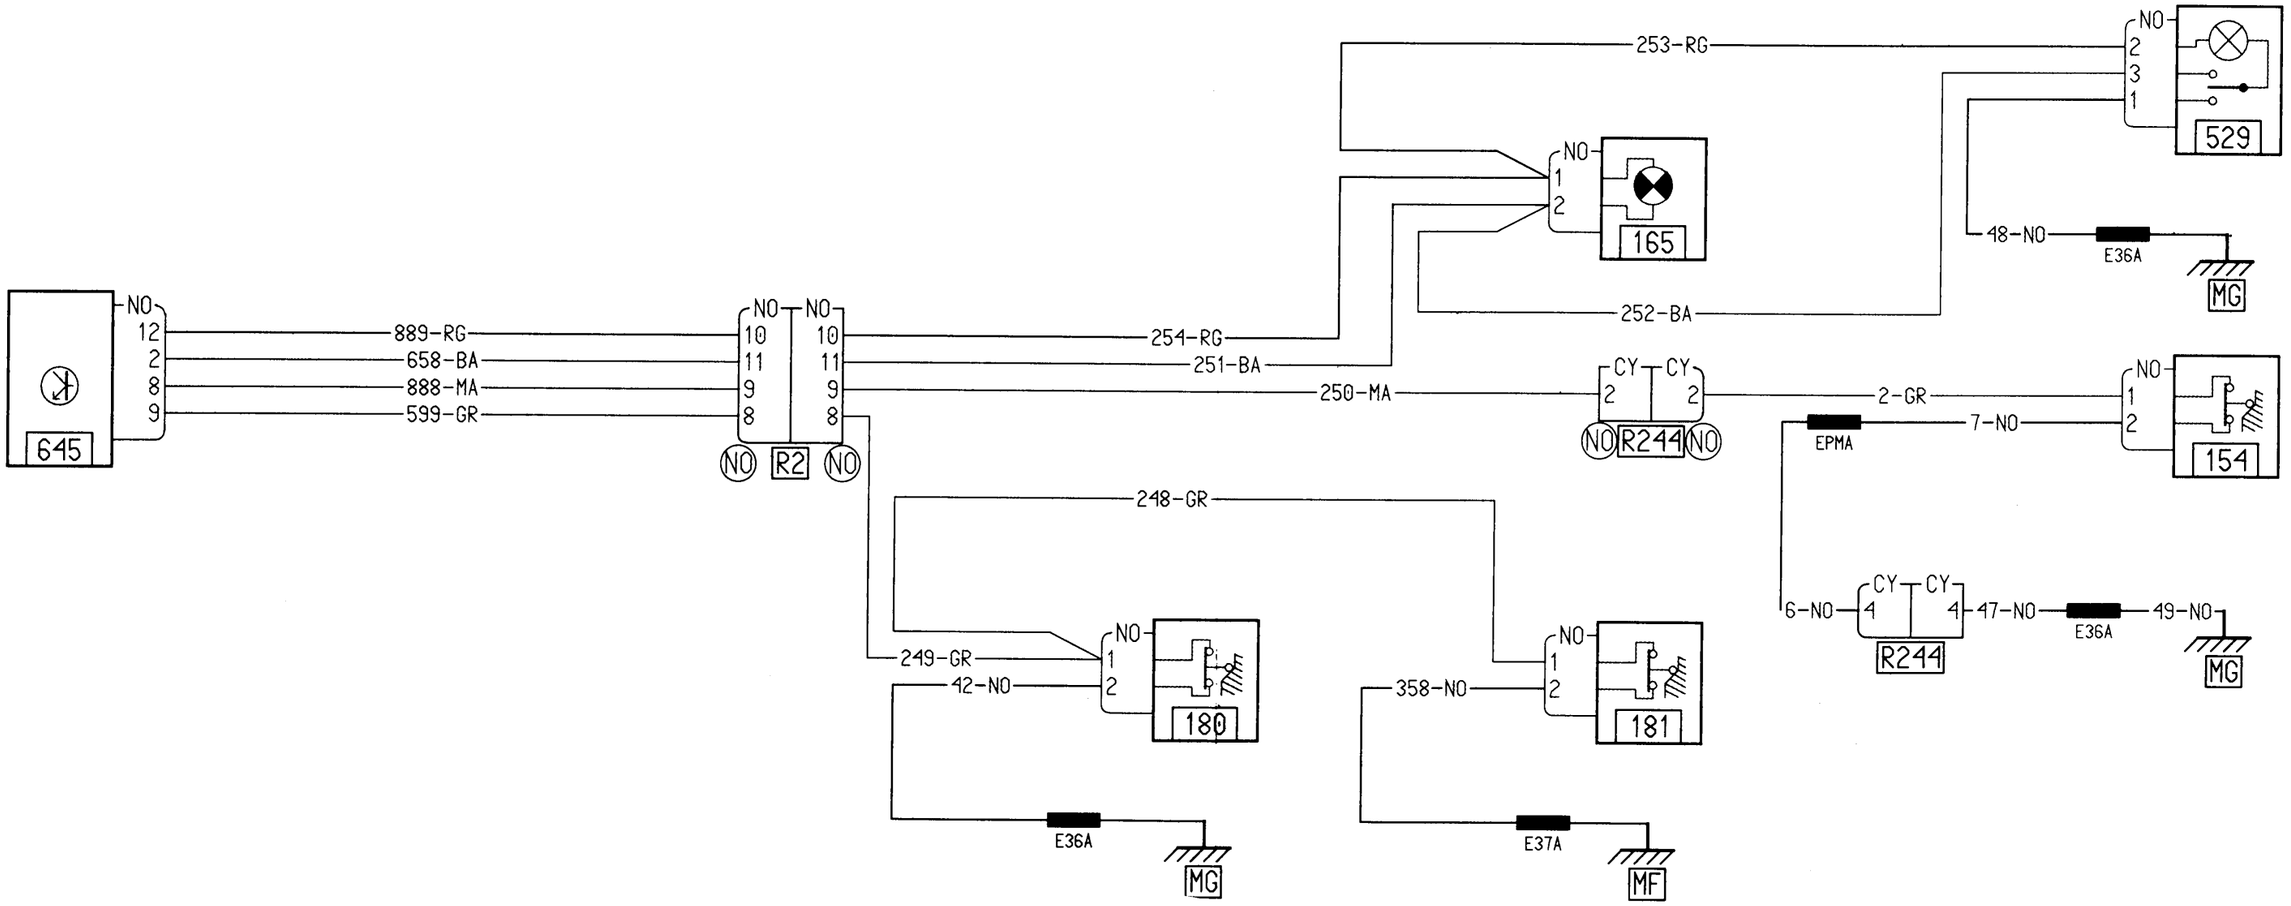
645
NO
12
2
8
9
889-RG
658-BA
888-MA
599-GR
NO
10
11
9
8
NO
R2
NO
254-RG
251-BA
250-MA
253-RG
165
252-BA
529
48-NO
E36A
MG
CY
2
R244
2-GR
EPMA
7-NO
154
248-GR
249-GR
42-NO
180
E36A
MG
358-NO
181
E37A
MF
6-NO
4
47-NO
49-NO

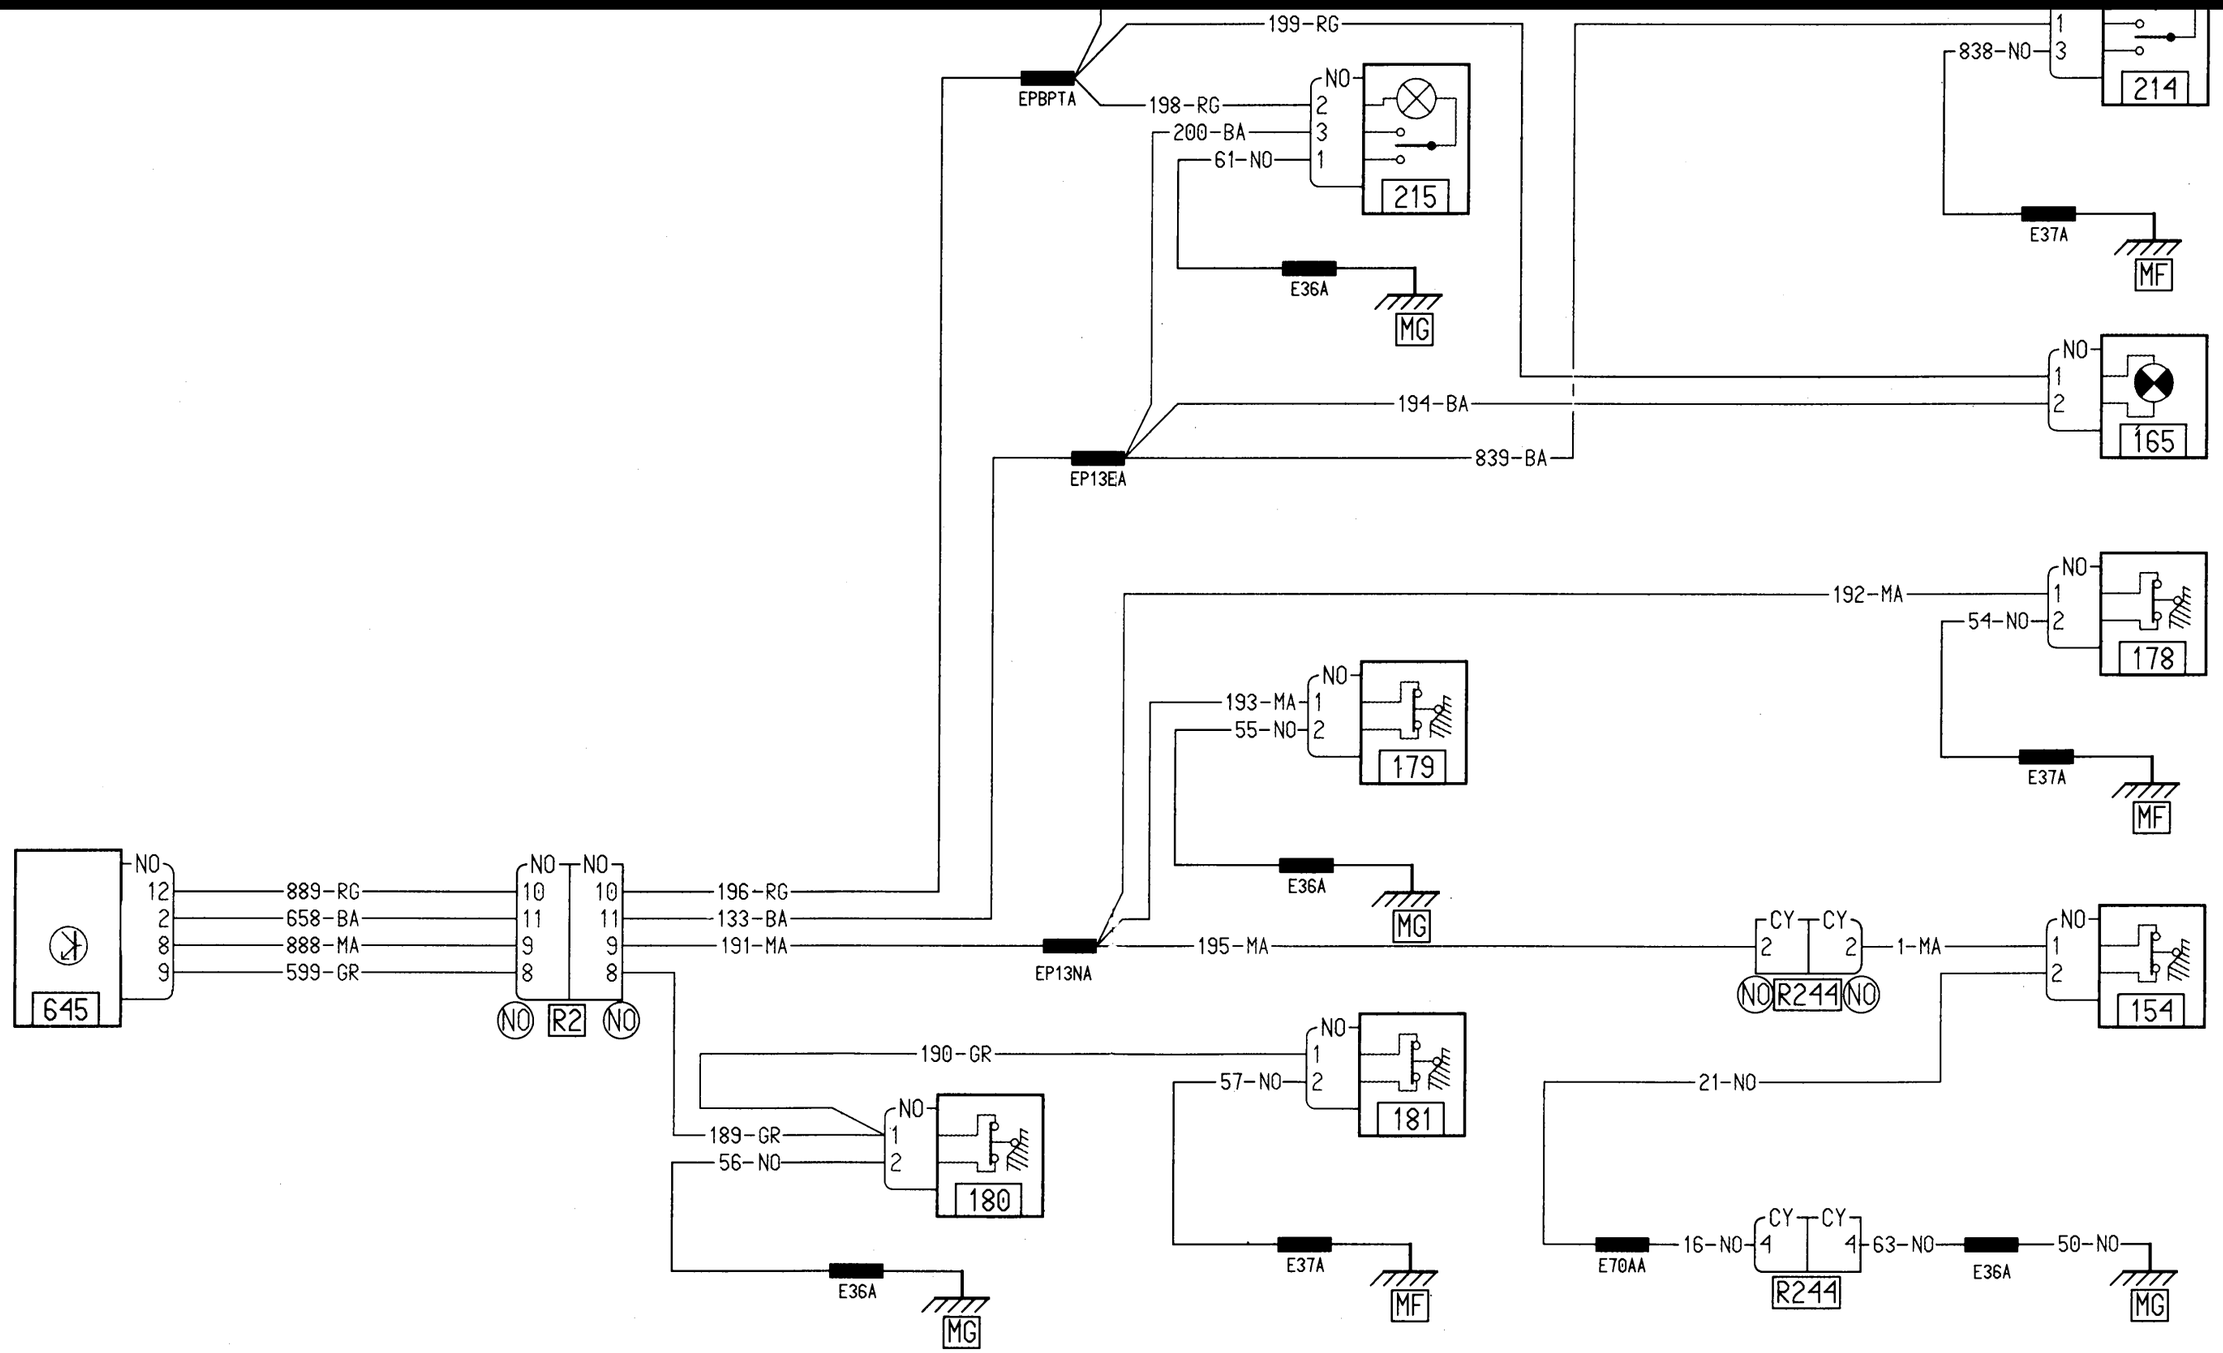
199-RG
EPBPTA
198-RG
200-BA
61-NO
NO
2
3
1
215
E36A
MG
838-NO
1
3
214
E37A
MF
NO
1
2
165
194-BA
839-BA
EP13EA
192-MA
54-NO
178
193-MA
55-NO
179
645
NO
12
2
8
9
889-RG
658-BA
888-MA
599-GR
NO
10
11
9
8
R2
196-RG
133-BA
191-MA
EP13NA
195-MA
CY
2
R244
1-MA
154
190-GR
189-GR
56-NO
180
57-NO
181
21-NO
E70AA
16-NO
4
63-NO
50-NO

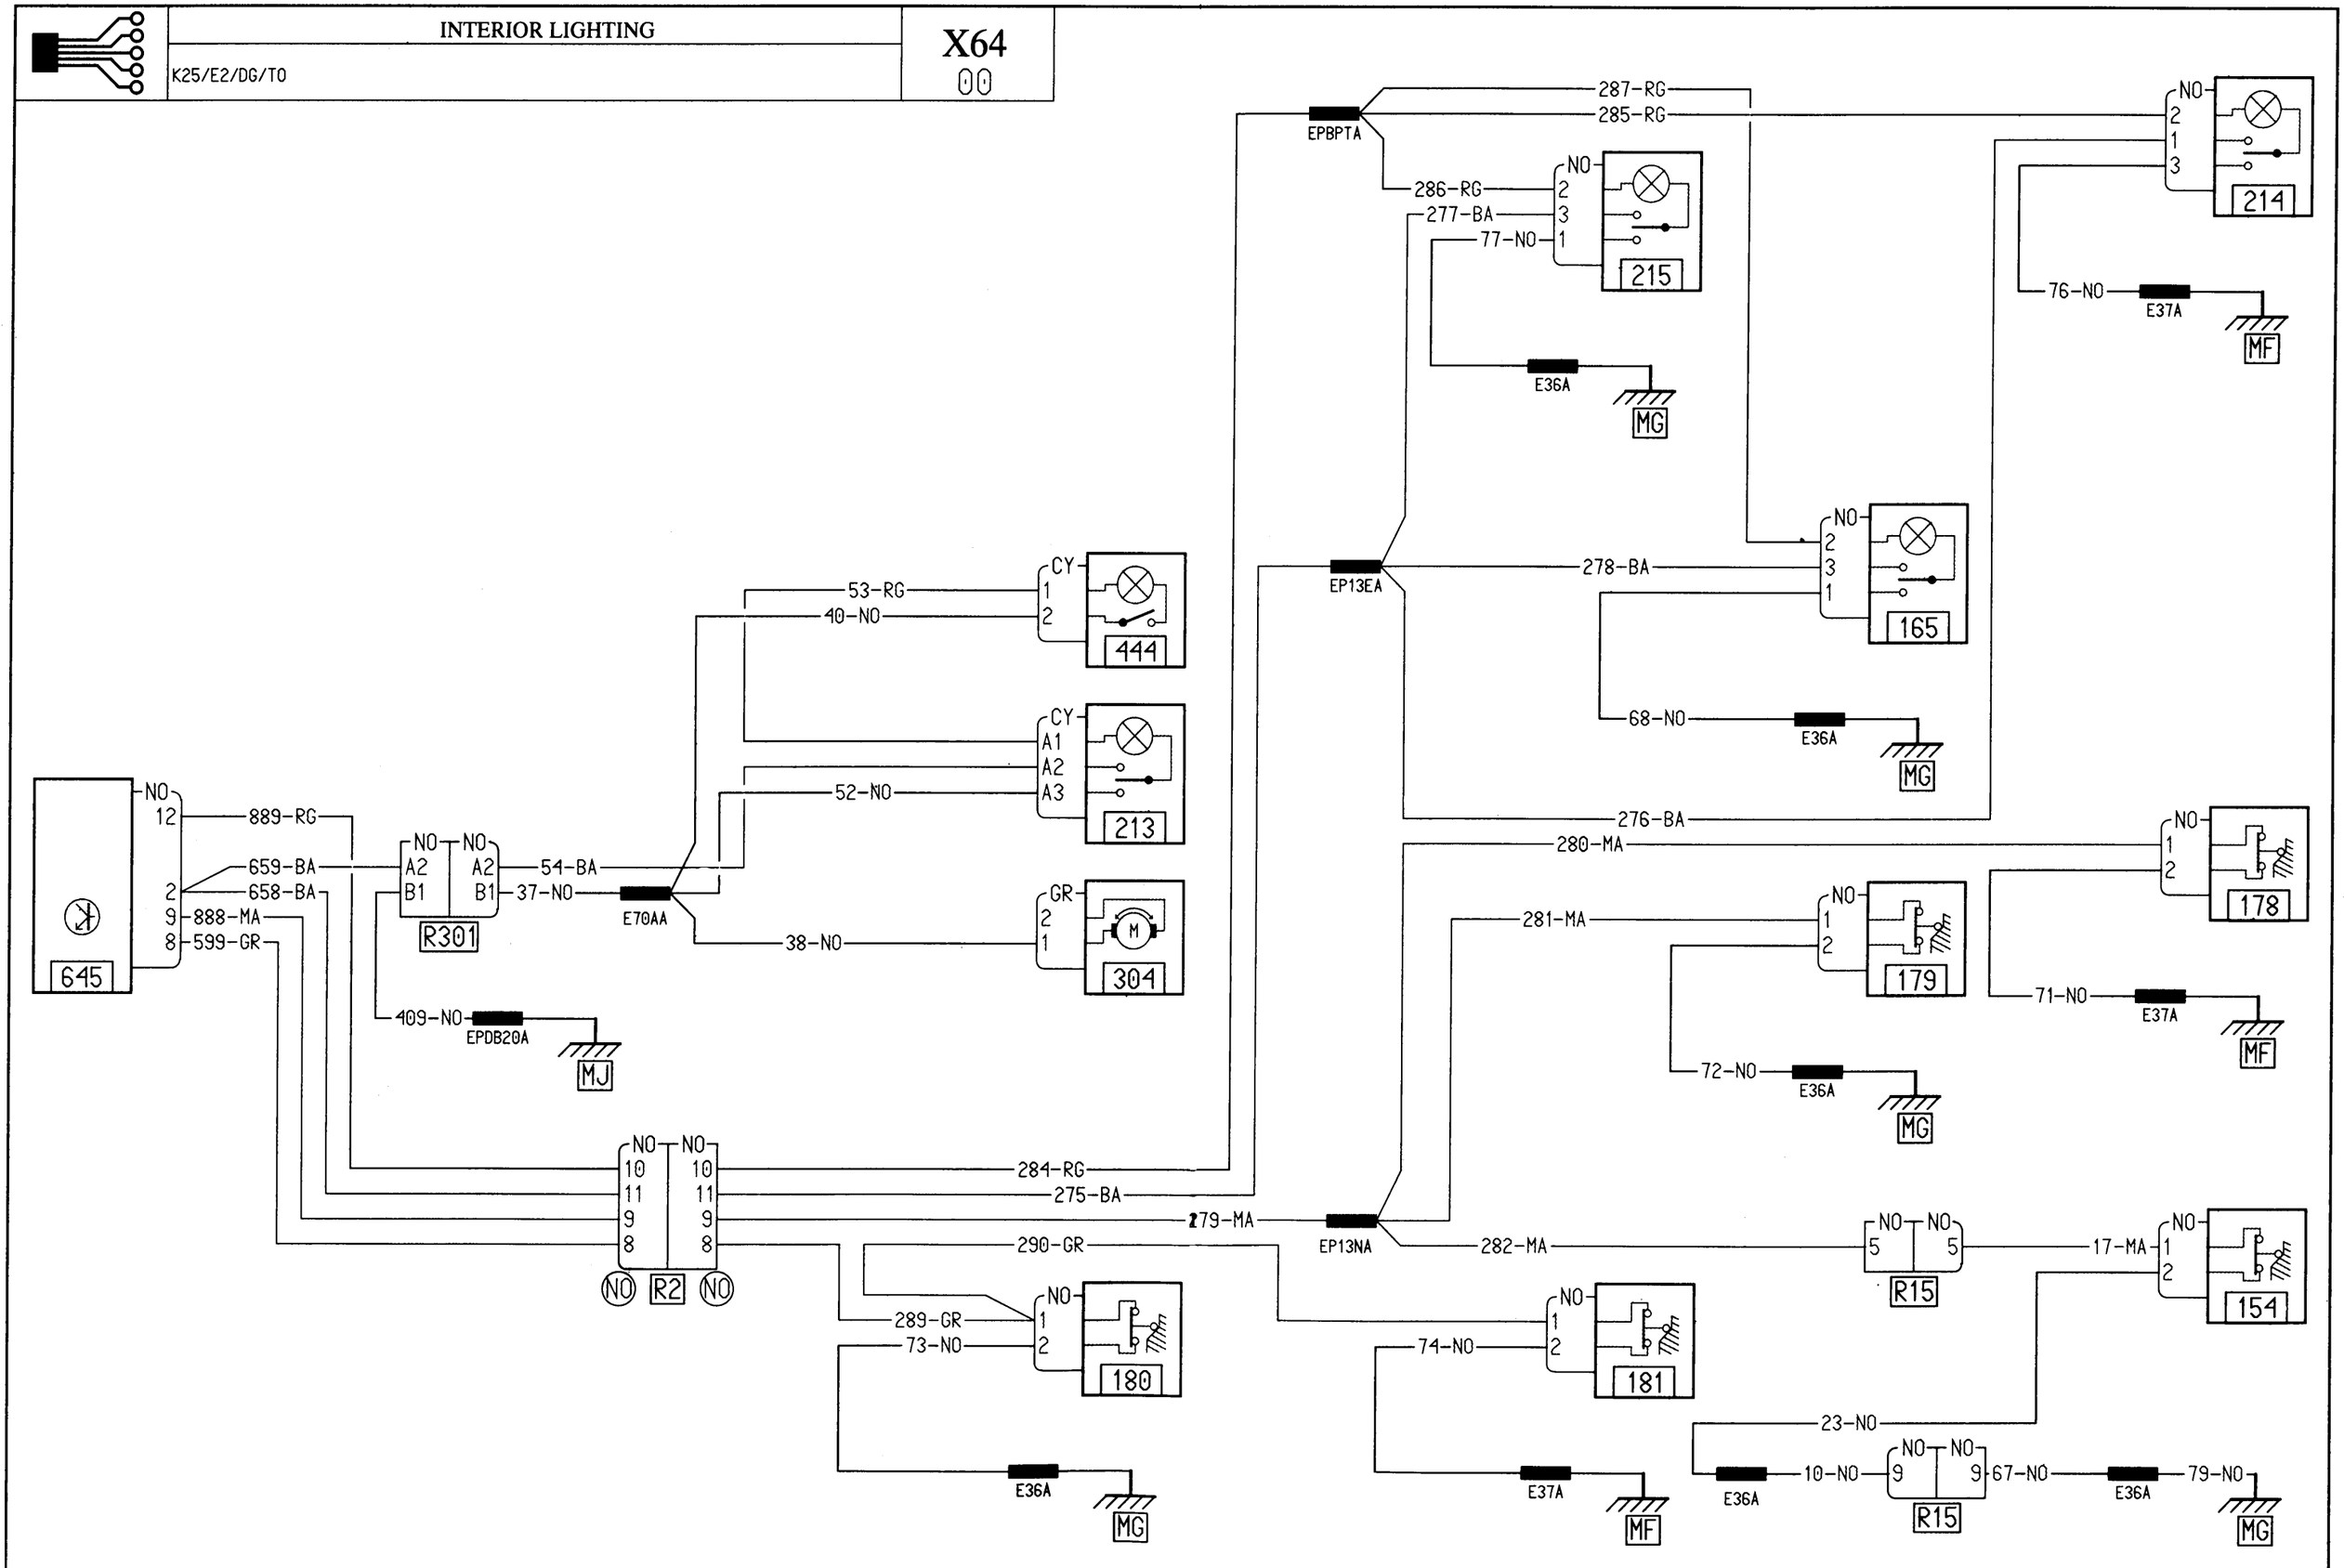
645
NO
12
2
9
8
889-RG
659-BA
658-BA
888-MA
599-GR
R301
A2
B1
54-BA
37-NO
E70AA
409-NO
EPDB20A
MJ
53-RG
40-NO
52-NO
38-NO
CY
1
2
444
A1
A2
A3
213
GR
M
304
EPBPTA
287-RG
285-RG
286-RG
277-BA
77-NO
215
E36A
MG
214
76-NO
E37A
MF
EP13EA
278-BA
165
68-NO
276-BA
280-MA
281-MA
178
179
71-NO
72-NO
284-RG
275-BA
279-MA
290-GR
289-GR
73-NO
180
E36A
MG
EP13NA
282-MA
R15
17-MA
154
74-NO
181
E37A
MF
23-NO
10-NO
67-NO
79-NO

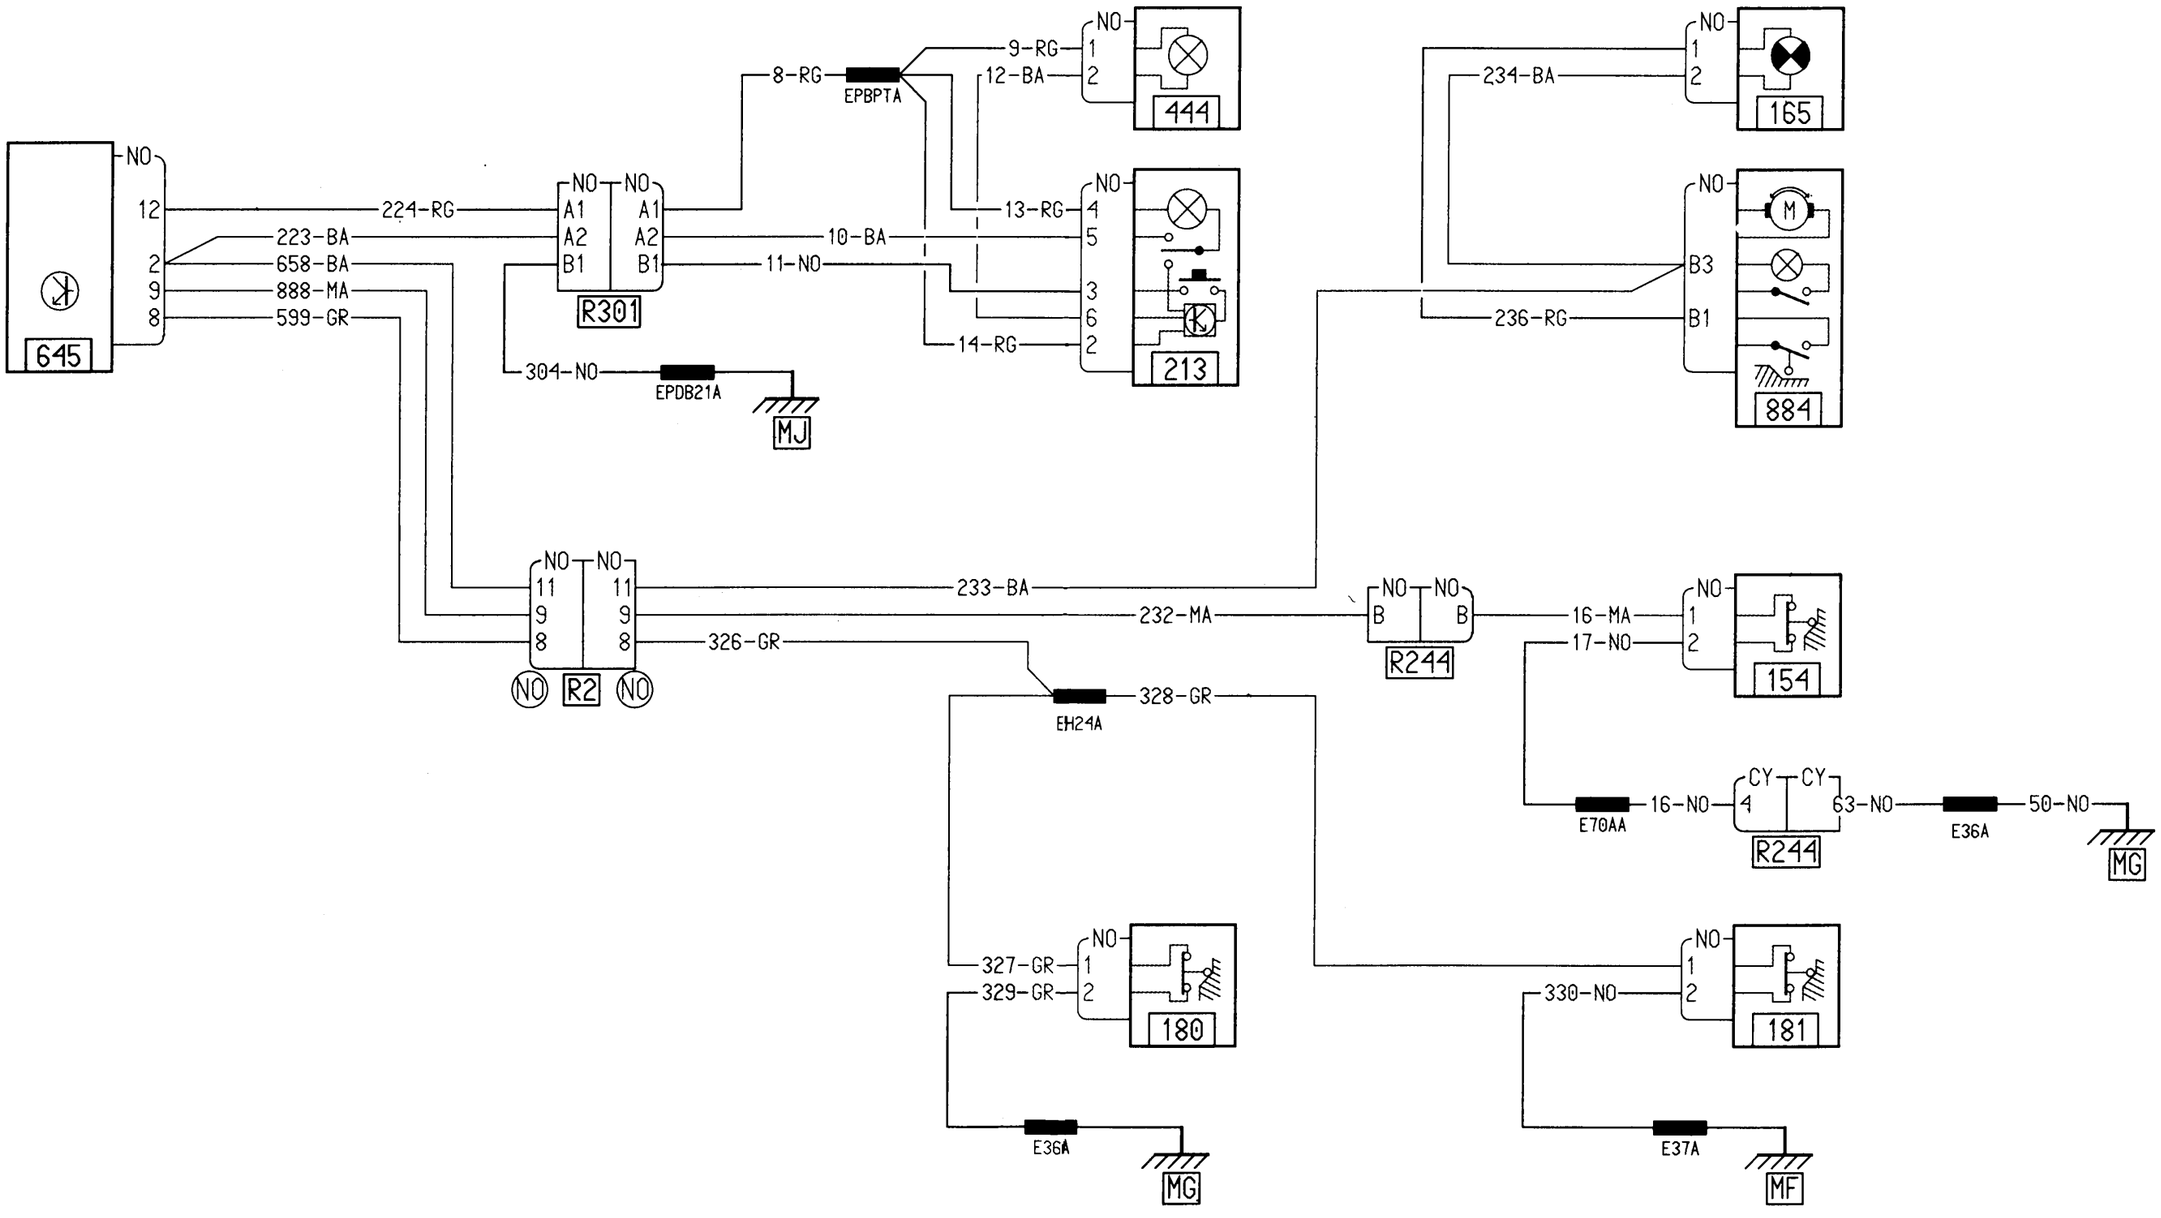
645
NO
12
2
9
8
224-RG
223-BA
658-BA
888-MA
599-GR
R301
A1
A2
B1
8-RG
EPBPTA
9-RG
12-BA
13-RG
10-BA
11-NO
14-RG
444
213
304-NO
EPDB21A
MJ
234-BA
165
236-RG
884
M
B3
B1
R2
11
233-BA
232-MA
326-GR
R244
B
16-MA
17-NO
154
EH24A
328-GR
E70AA
16-NO
CY
4
63-NO
50-NO
E36A
MG
327-GR
329-GR
180
330-NO
181
E37A
MF

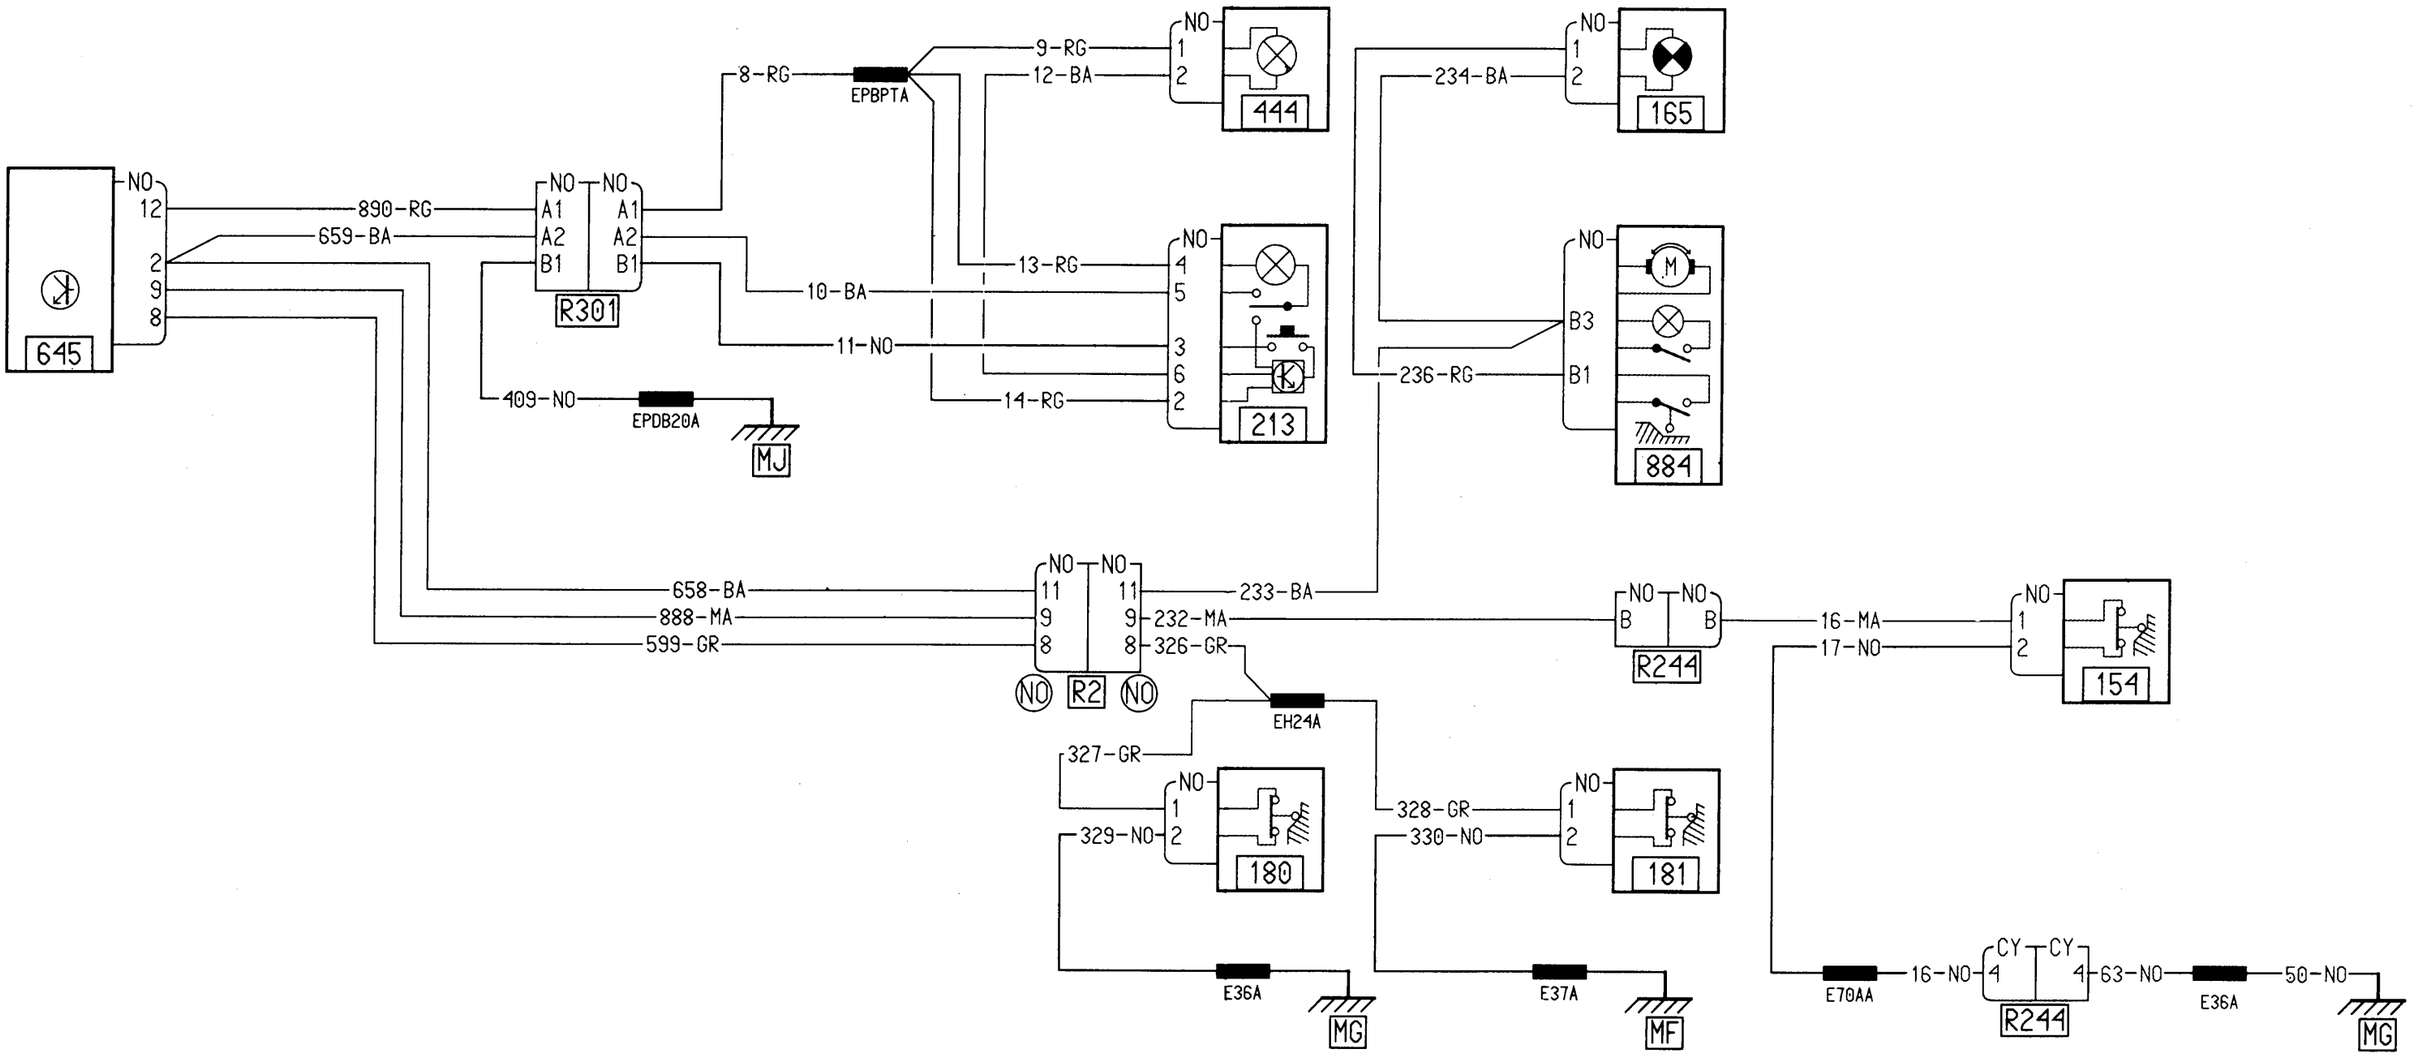
645
NO
12
2
9
8
890-RG
659-BA
R301
A1
A2
B1
8-RG
EPBPTA
9-RG
12-BA
444
10-BA
11-NO
13-RG
14-RG
213
409-NO
EPDB20A
MJ
234-BA
165
236-RG
B3
B1
884
658-BA
888-MA
599-GR
11
9
8
233-BA
232-MA
326-GR
R2
R244
16-MA
17-NO
154
EH24A
327-GR
329-NO
180
328-GR
330-NO
181
E36A
MG
E37A
MF
E70AA
16-NO
CY
4
63-NO
50-NO

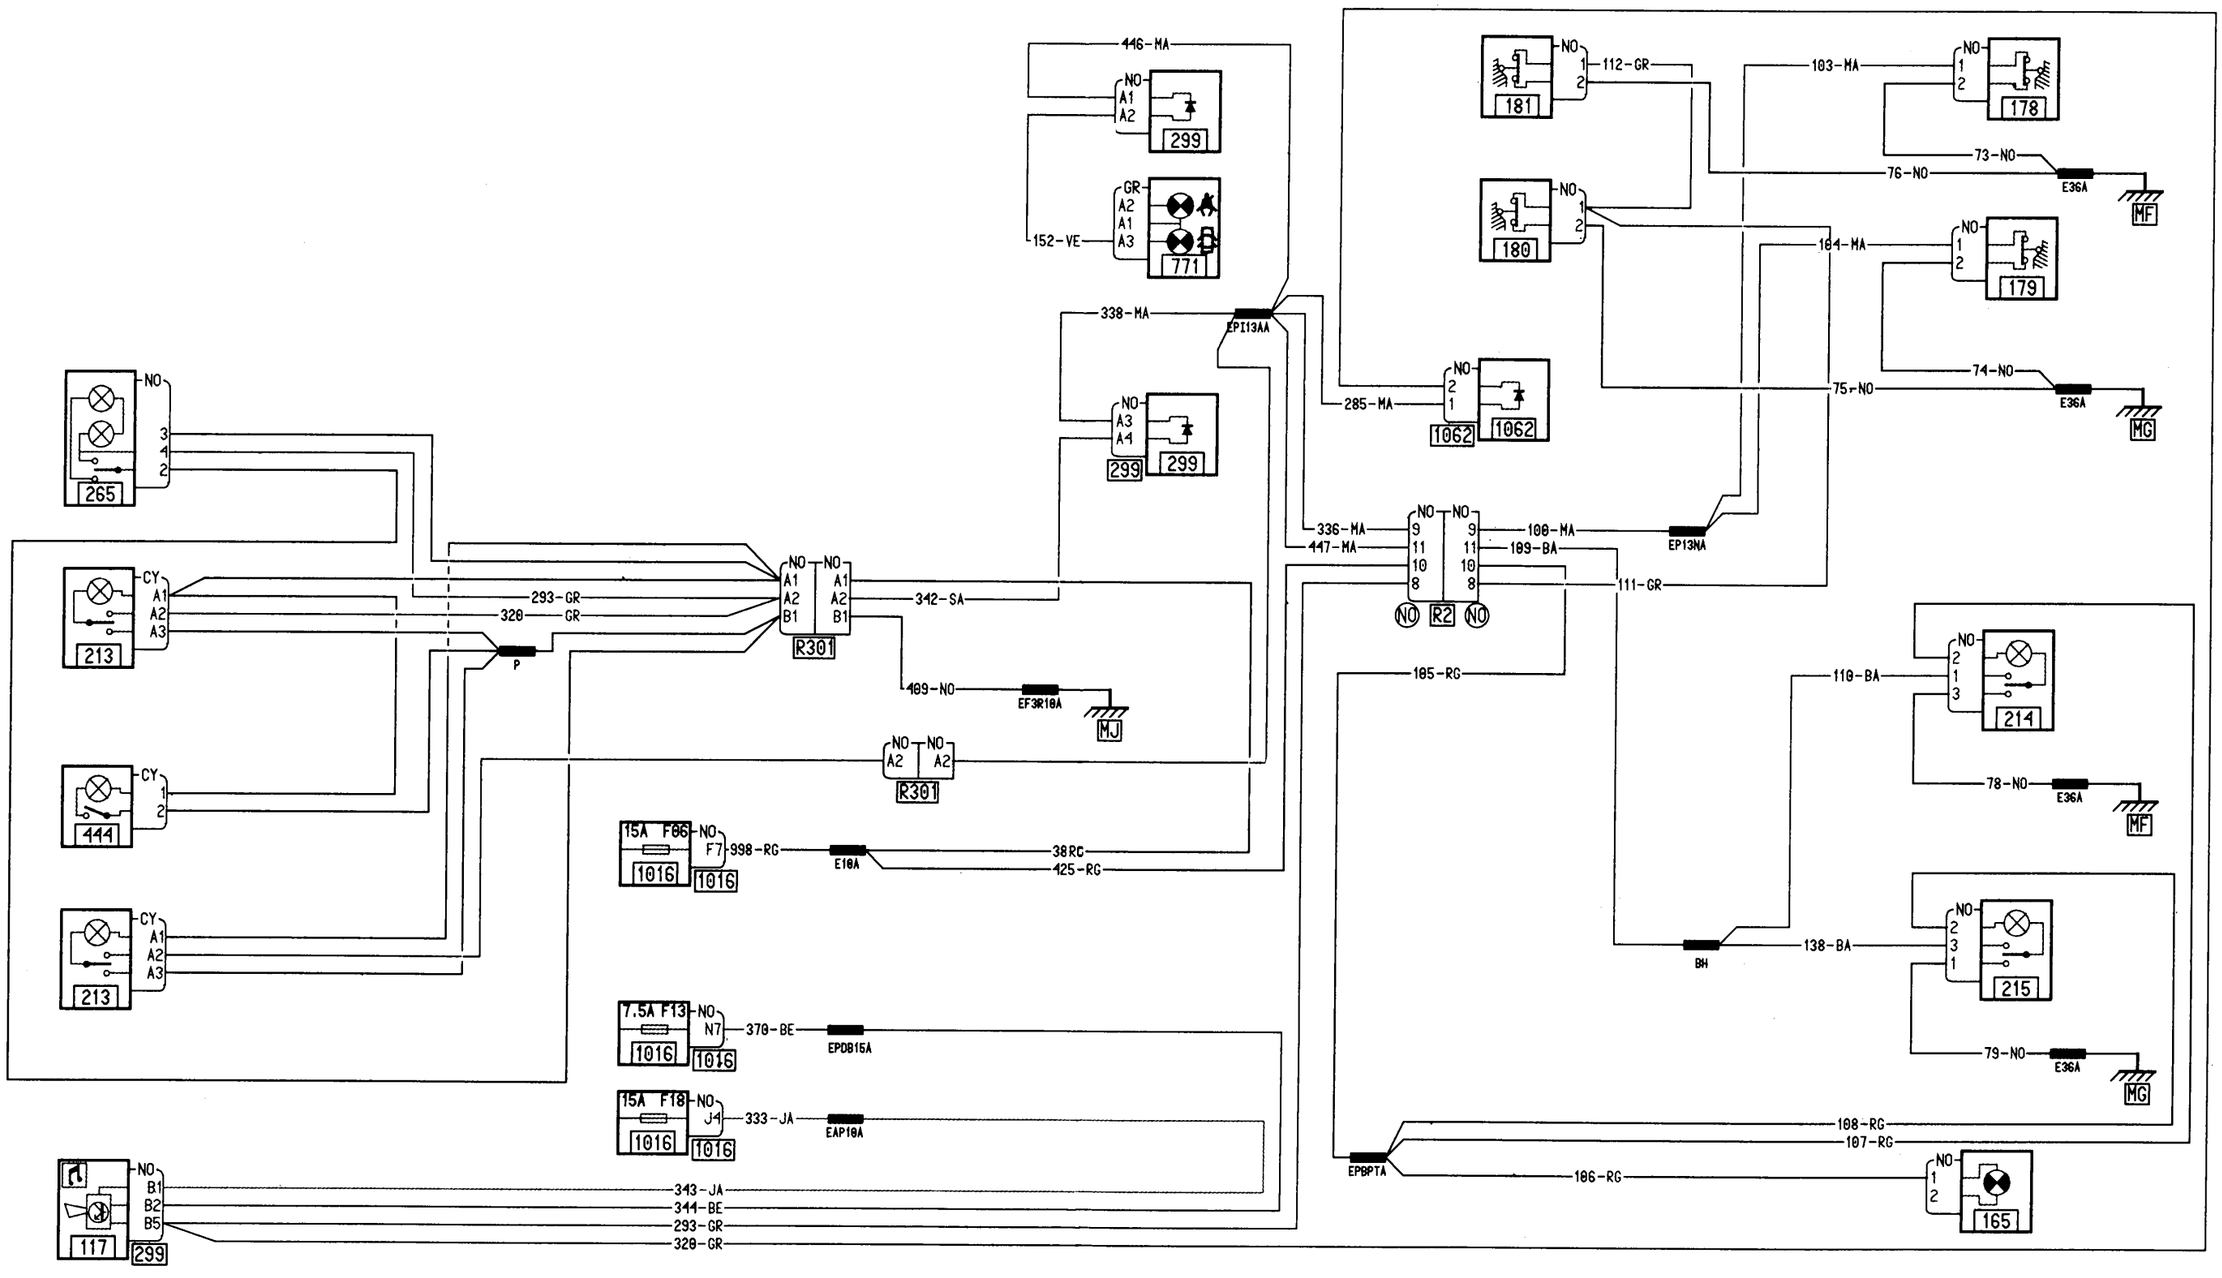
265
213
444
213
117
299
R301
R301
1016
1016
1016
1016
299
299
771
299
1062
1062
181
180
178
179
214
215
165
R2
EPI3AA
EPI3NA
EPBPTA
EF3R10A
E10A
EPDB15A
EAP10A
E36A
E36A
E36A
P
BH
MJ
MF
MG
MF
MG
NO
CY
GR
A1
A2
A3
B1
B2
B5
F7
N7
J4
F6
F8
F13
F18
1
2
3
4
5
7
8
9
10
11
146-MA
152-VE
338-MA
285-MA
336-MA
447-MA
100-MA
109-BA
111-GR
112-GR
103-MA
104-MA
105-RG
110-BA
138-BA
108-RG
107-RG
106-RG
293-GR
320-GR
342-SA
343-JA
344-BE
333-JA
370-BE
998-RG
38RG
425-RG
109-NO
73-NO
76-NO
74-NO
75-NO
78-NO
79-NO
15A F6
15A F8
7.5A F13
15A F18

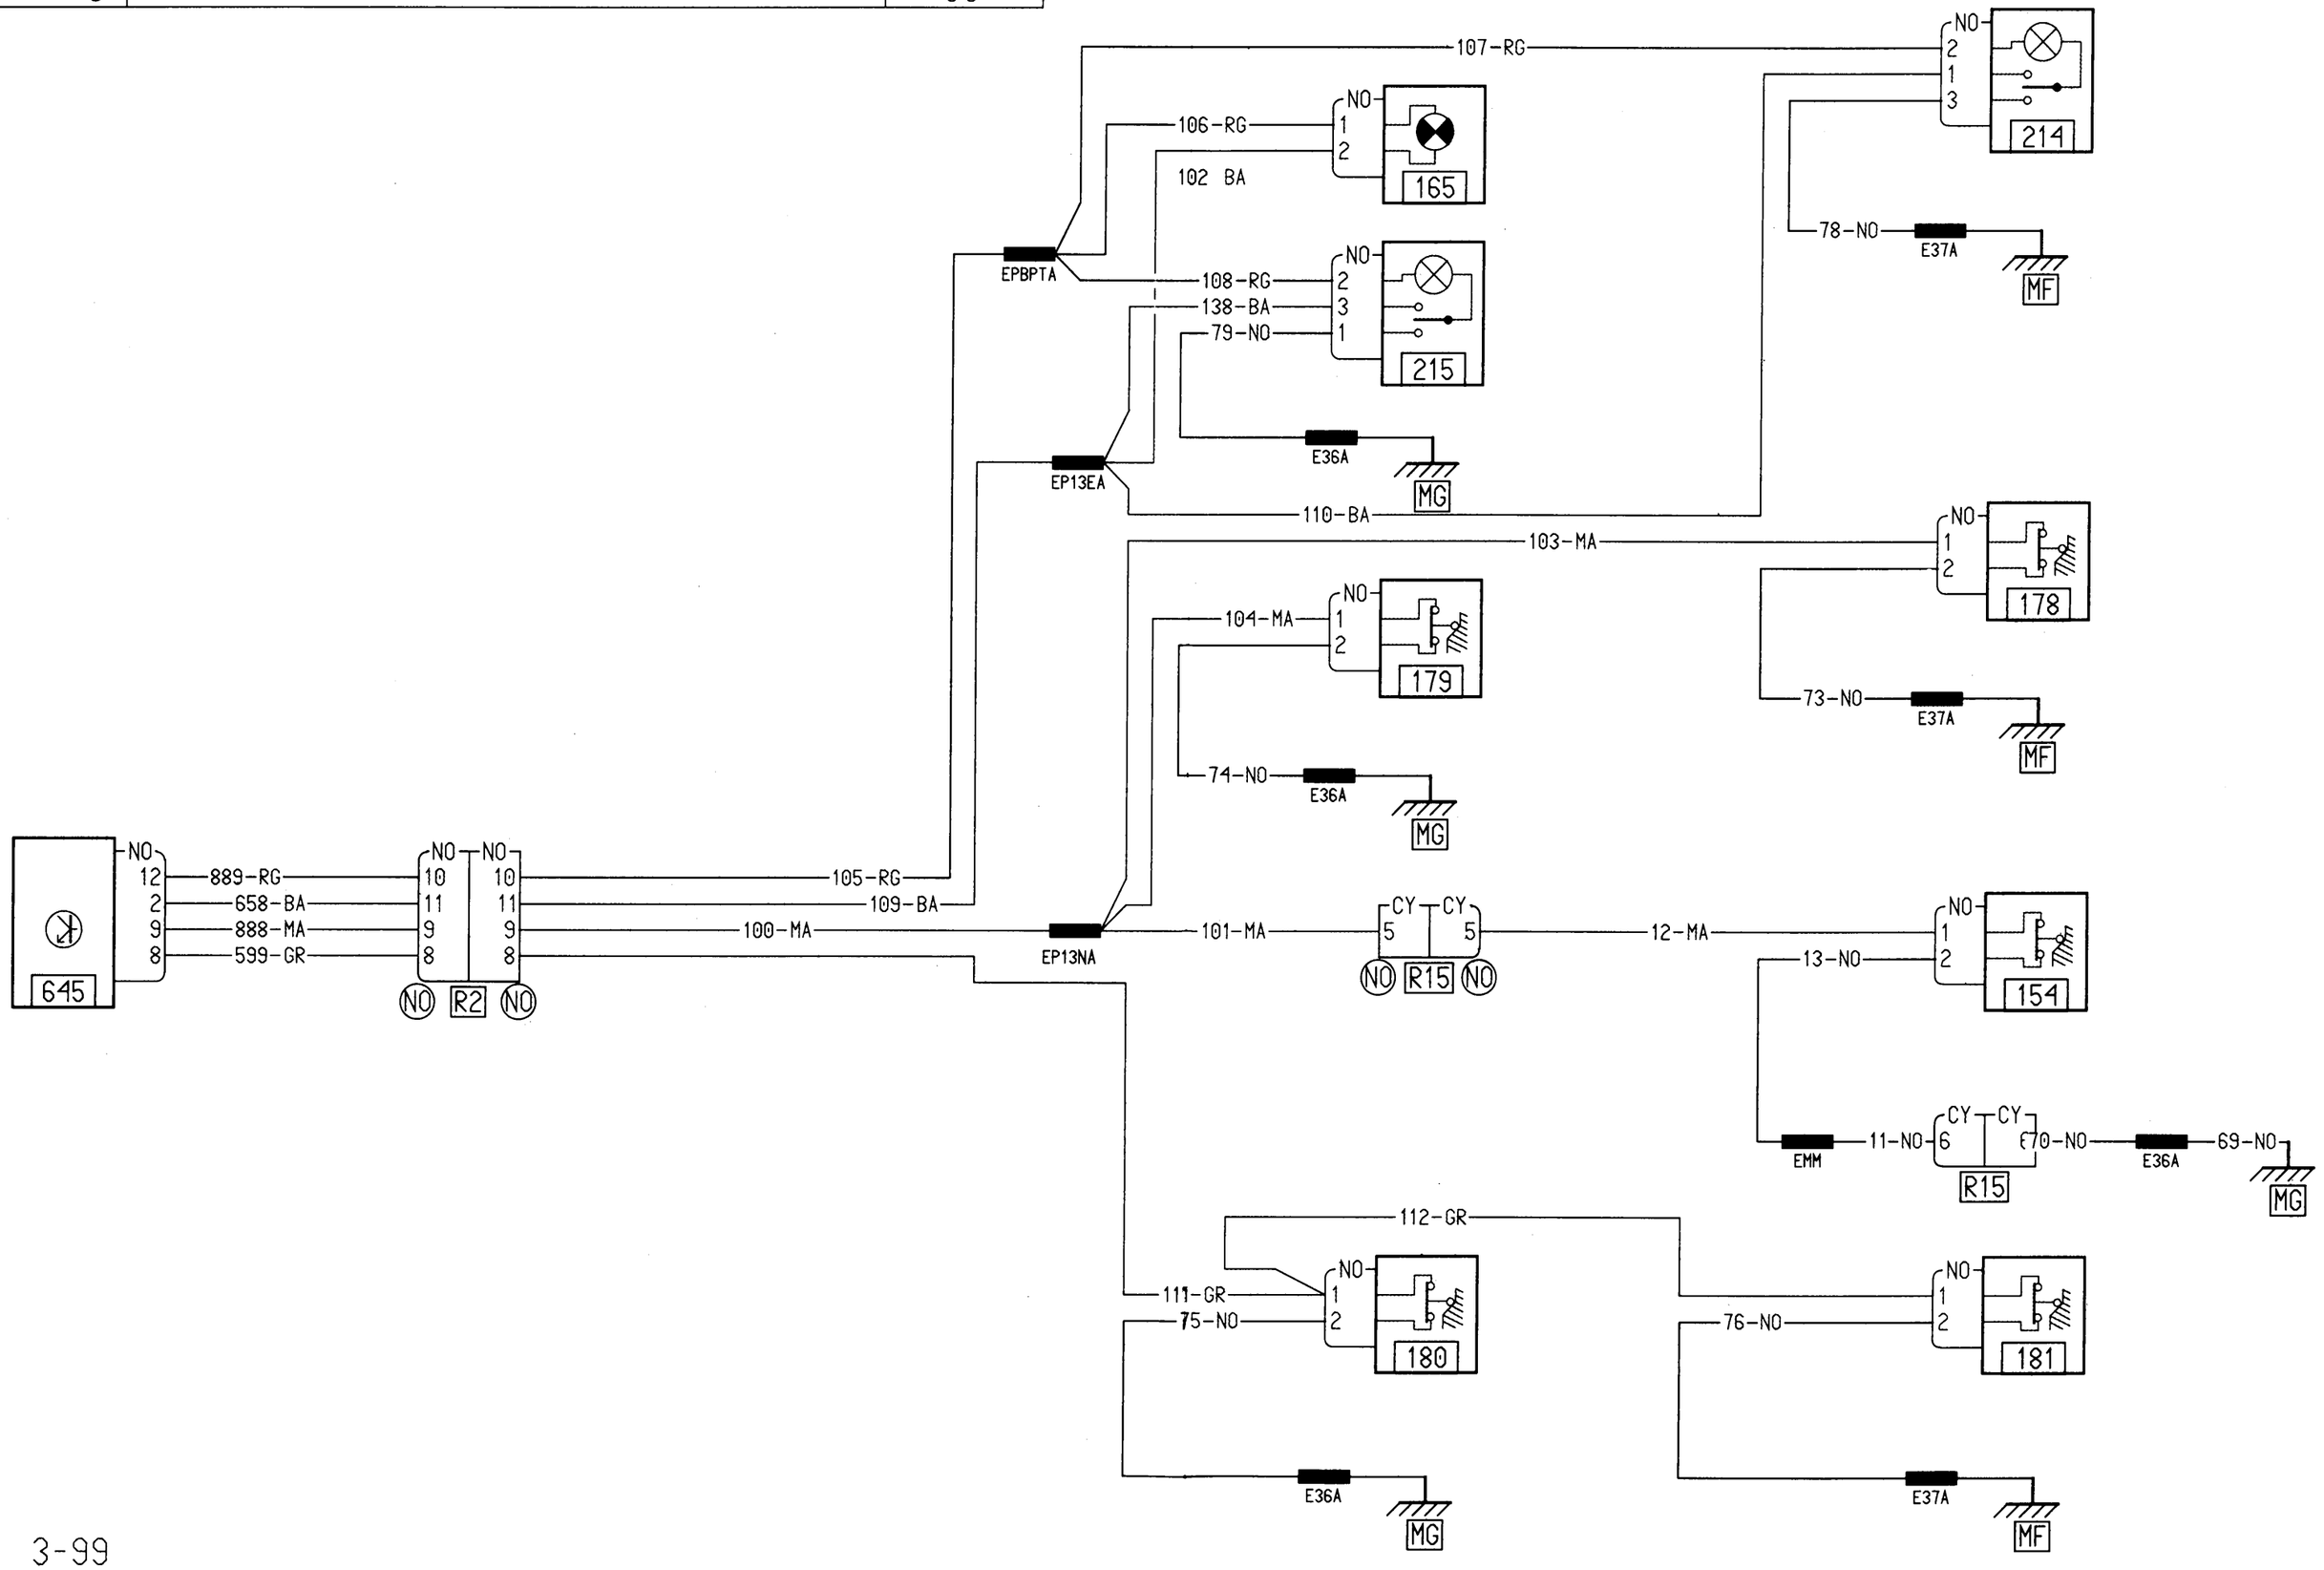
107-RG
106-RG
102 BA
108-RG
138-BA
79-NO
110-BA
103-MA
104-MA
74-NO
78-NO
73-NO
75-NO
111-GR
112-GR
76-NO
889-RG
658-BA
888-MA
599-GR
105-RG
109-BA
100-MA
101-MA
12-MA
13-NO
11-NO
70-NO
69-NO
NO
CY
EPBPTA
EP13EA
EP13NA
EMM
165
214
215
178
179
154
180
181
645
R2
R15
E36A
E37A
MG
MF

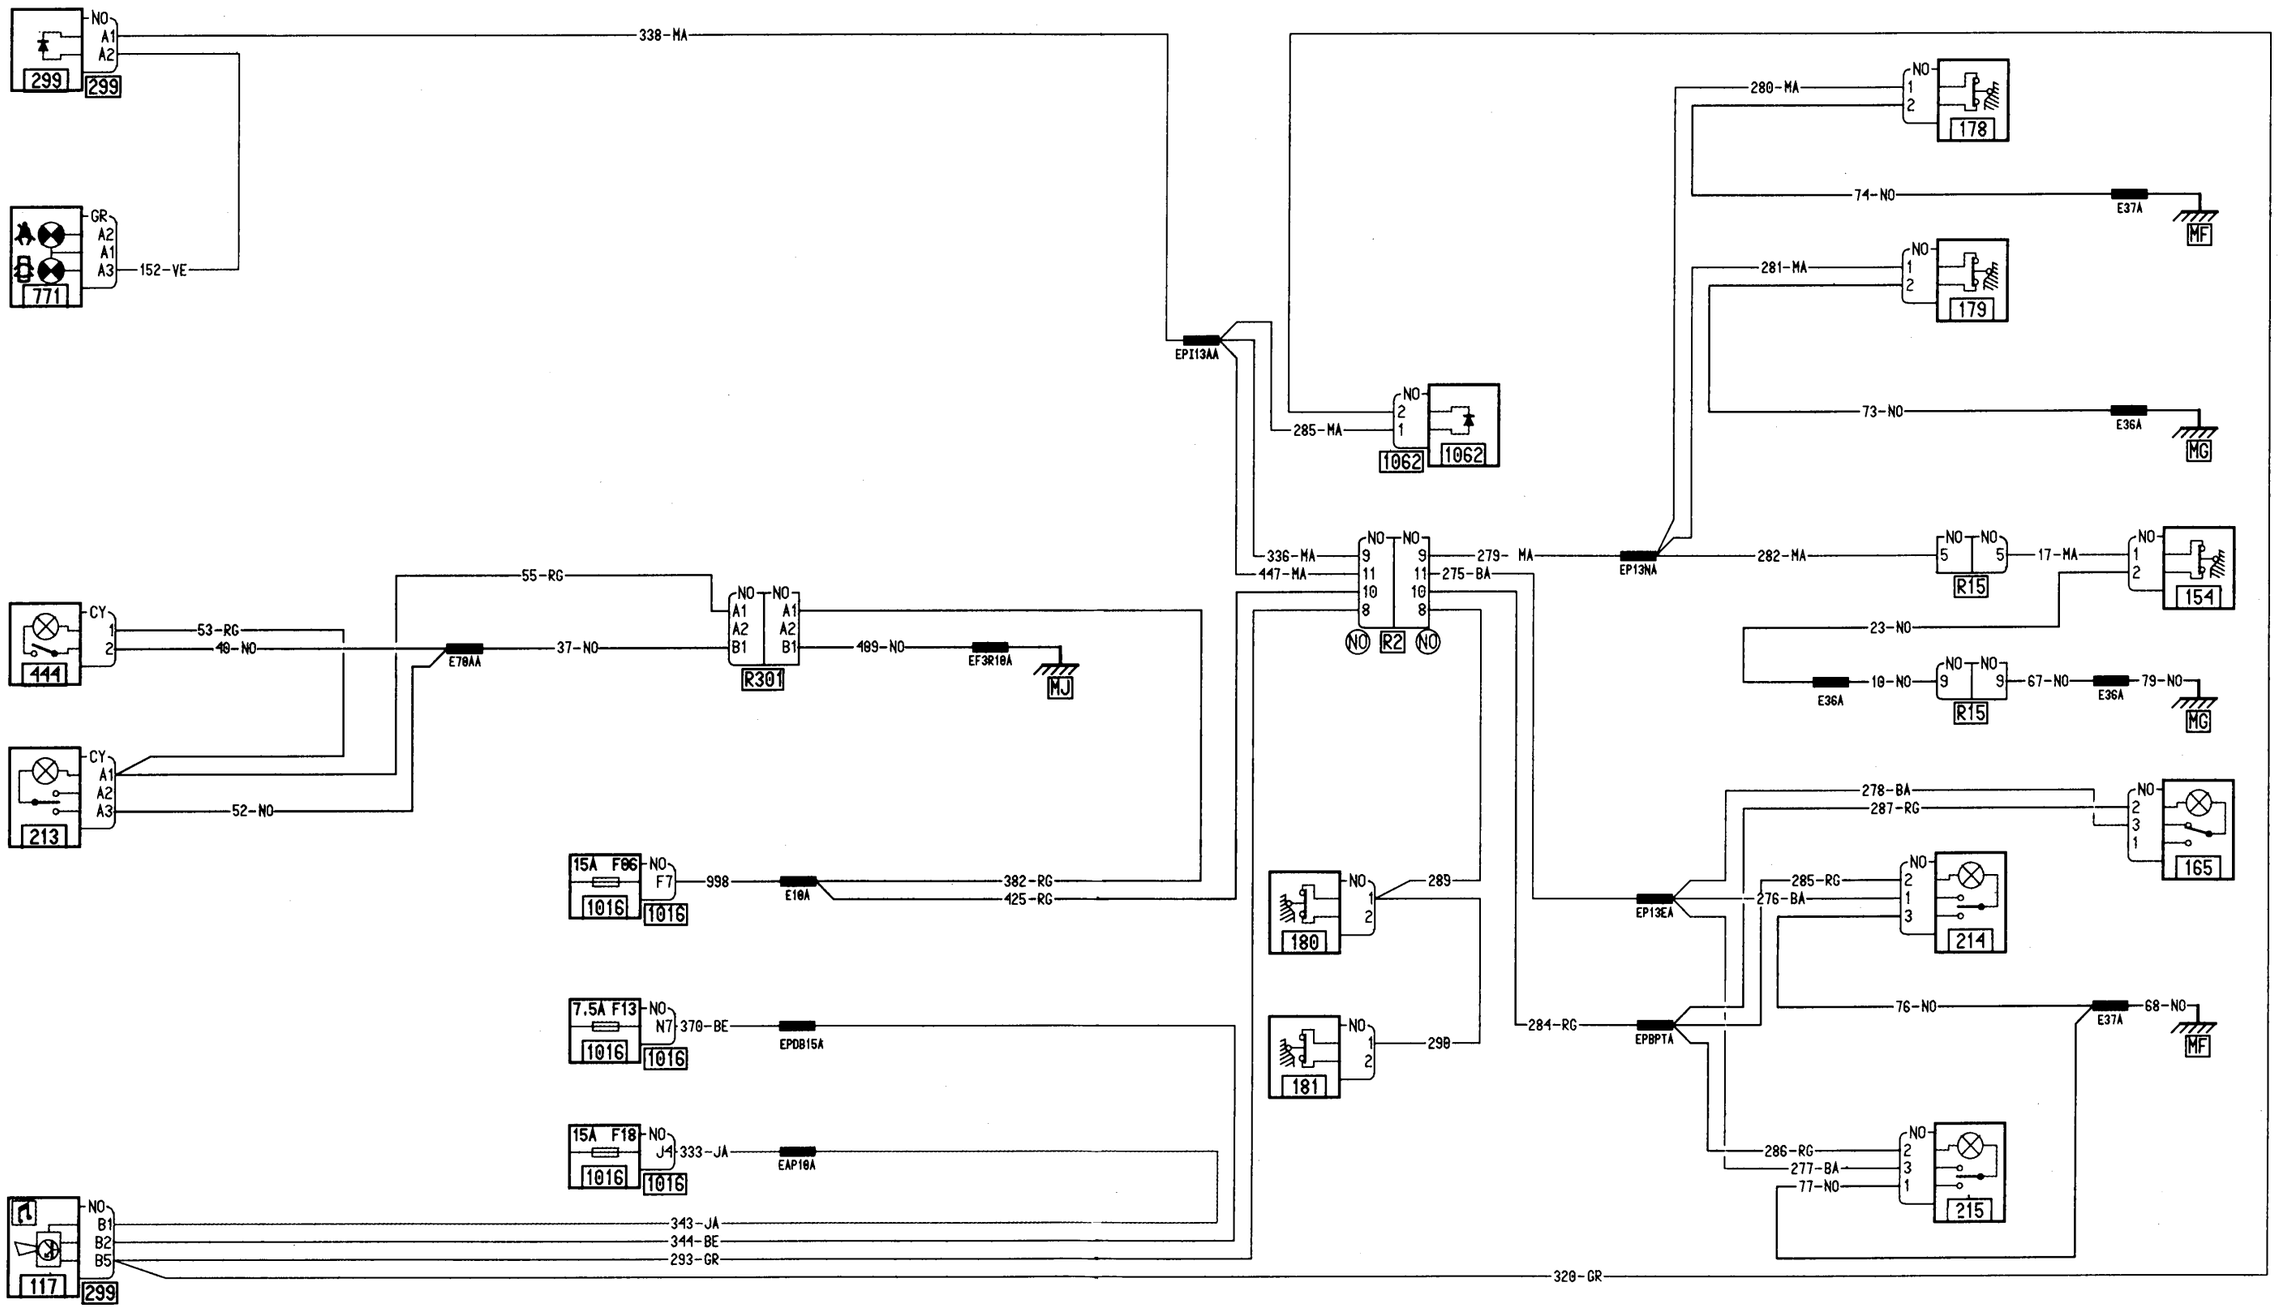
299
NO
A1
A2
338-MA
771
GR
A2
A1
A3
152-VE
EPI13AA
1062
285-MA
1062
NO
2
1
280-MA
178
74-NO
E37A
MF
281-MA
179
73-NO
E36A
MG
336-MA
447-MA
279- MA
275-BA
EP13NA
282-MA
R15
17-MA
154
23-NO
E36A
18-NO
67-NO
79-NO
R15
MG
444
CY
1
2
53-RG
48-NO
55-RG
E78AA
37-NO
R301
109-NO
EF3R10A
MJ
213
CY
A1
A2
A3
52-NO
15A F86
1016
F7
998
E10A
382-RG
425-RG
7,5A F13
N7
370-BE
EPDB15A
15A F18
J4
333-JA
EAP10A
117
B1
B2
B5
343-JA
344-BE
293-GR
320-GR
180
289
181
298
278-BA
287-RG
165
285-RG
276-BA
EP13EA
214
284-RG
EPBPTA
76-NO
68-NO
E37A
MF
286-RG
277-BA
77-NO
215

RHEOSTAT DRIVER'S POSITION LIGHTING

E2/DG/SRADIO

X64
00

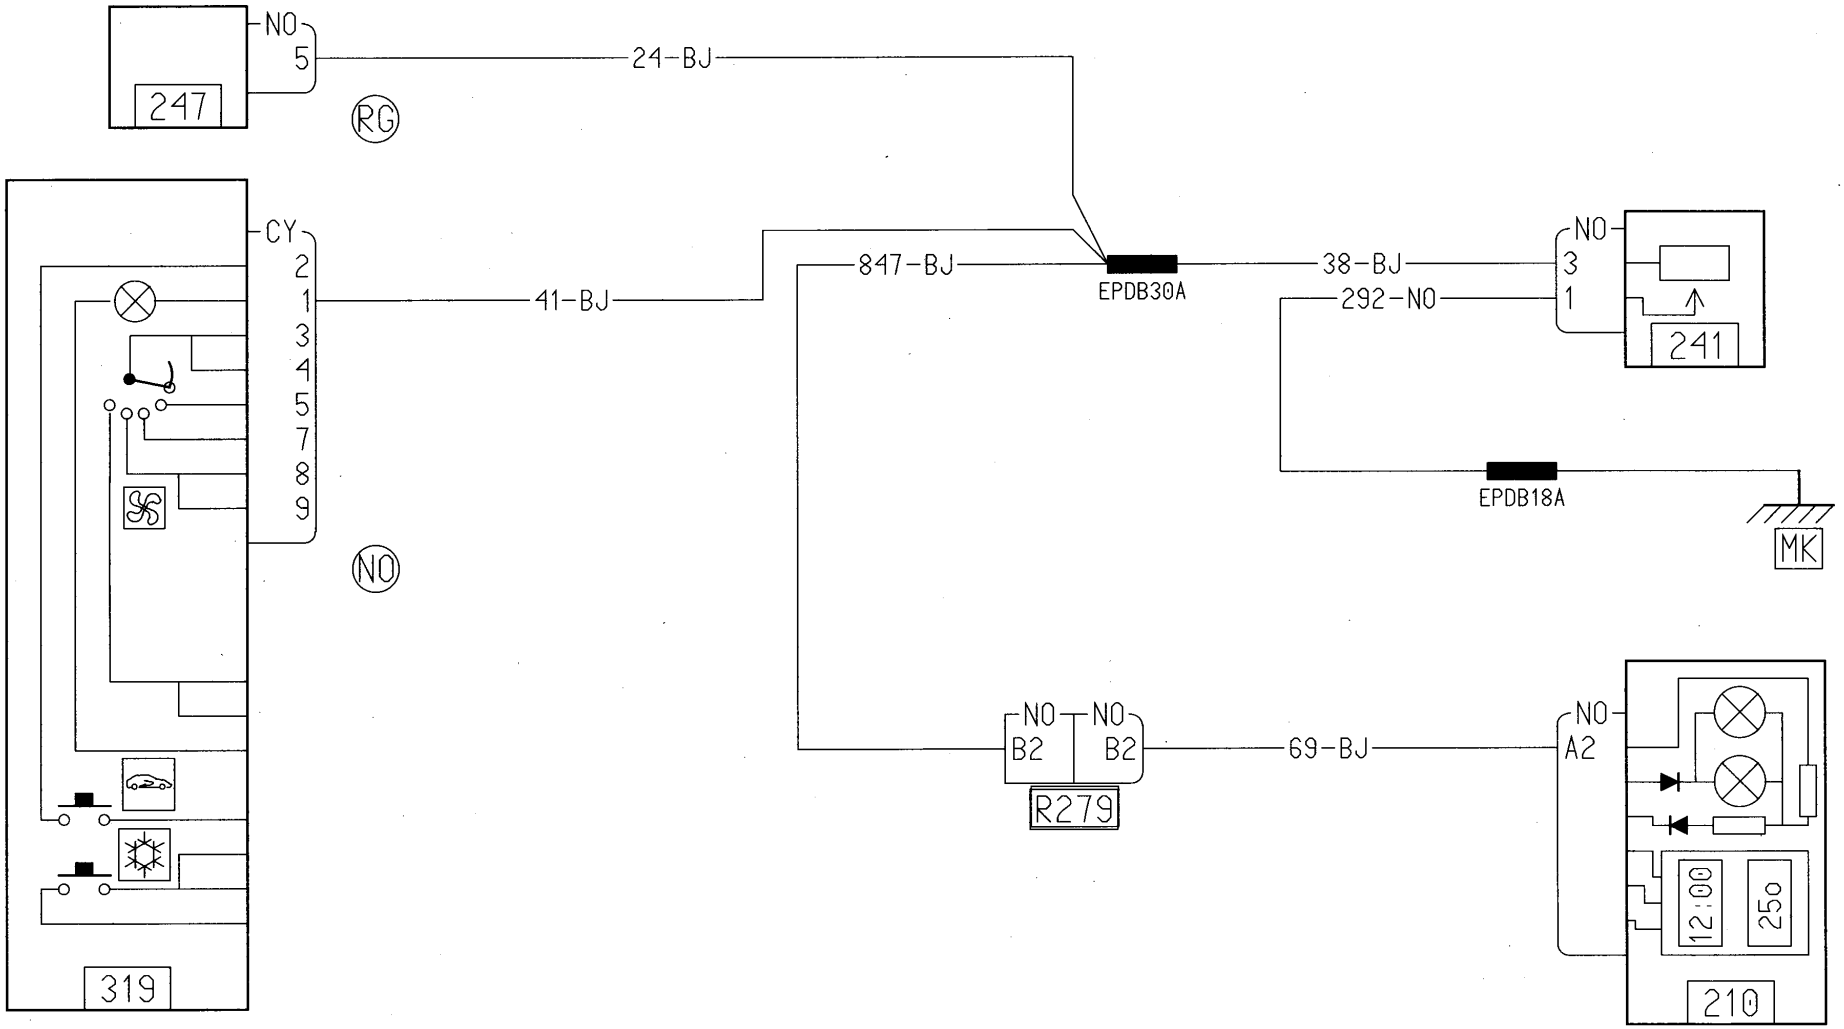

RHEOSTAT DRIVER'S POSITION LIGHTING

E2/DG

X64
00

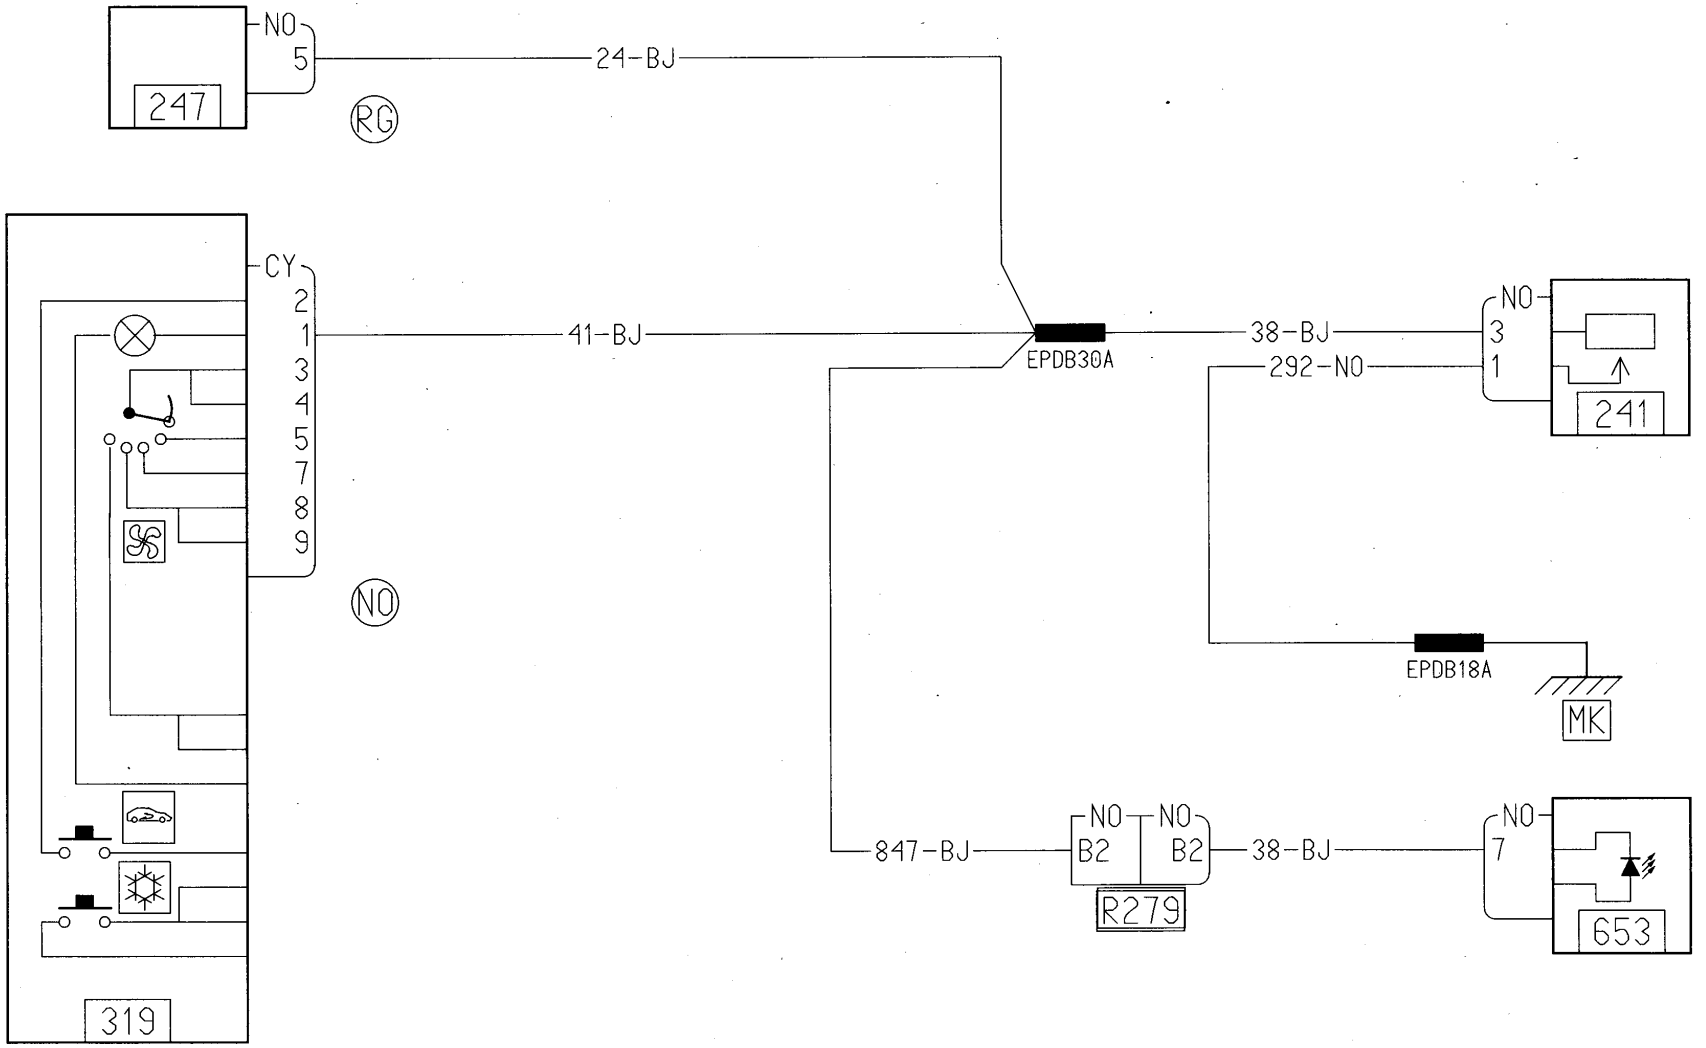

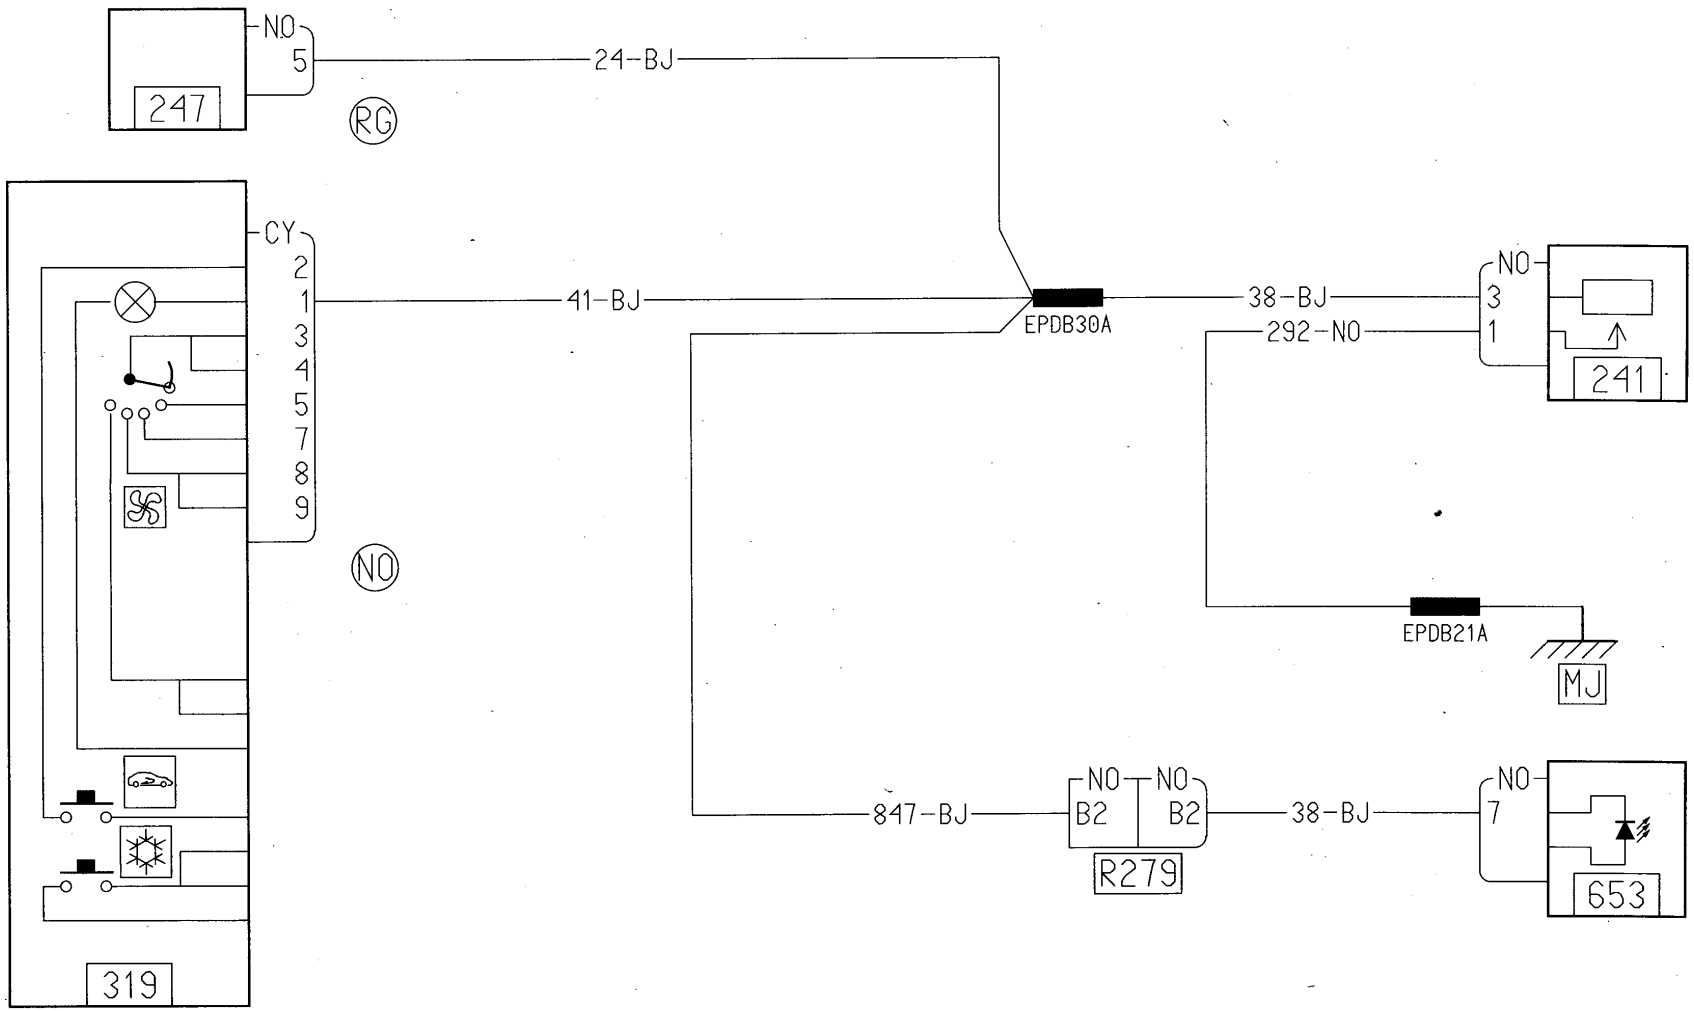
NO
5
247
24-BJ
RG
CY
2
1
3
4
5
7
8
9
41-BJ
EPDB30A
38-BJ
NO
3
1
241
292-NO
EPDB21A
MJ
NO
319
847-BJ
NO
B2
NO
B2
R279
38-BJ
NO
7
653

GLOVE COMPARTMENT LIGHTING

E1,E2/DG

X64
00

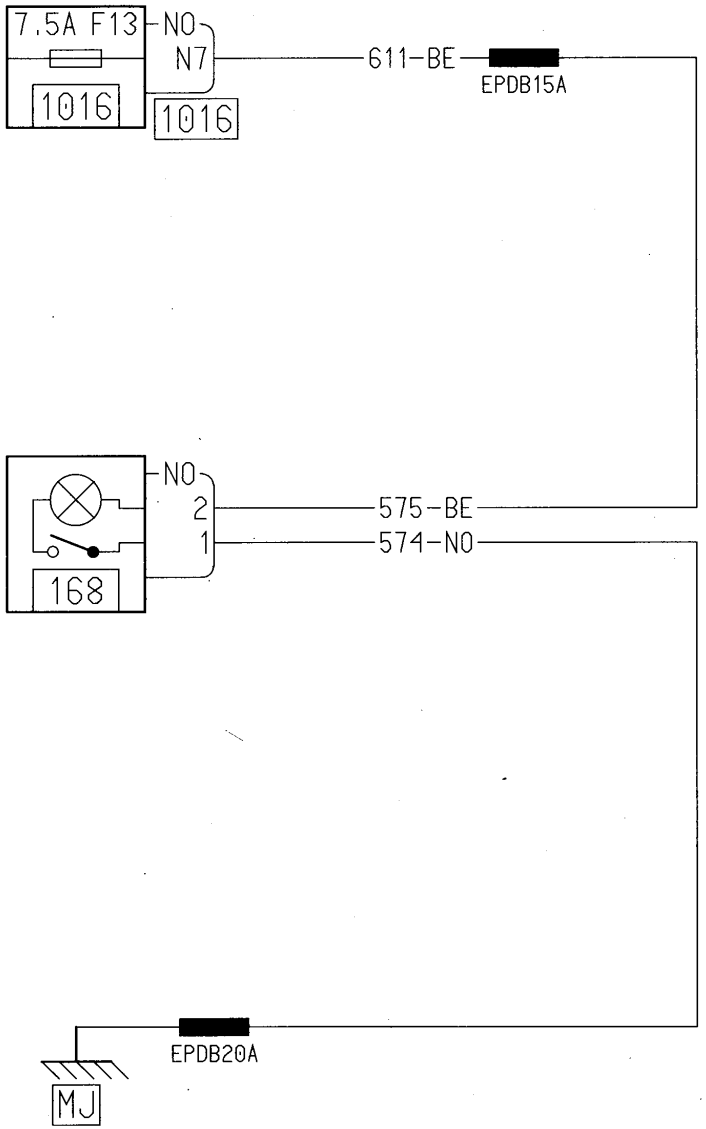

GLOVE COMPARTMENT LIGHTING

E2/DD

X64
00

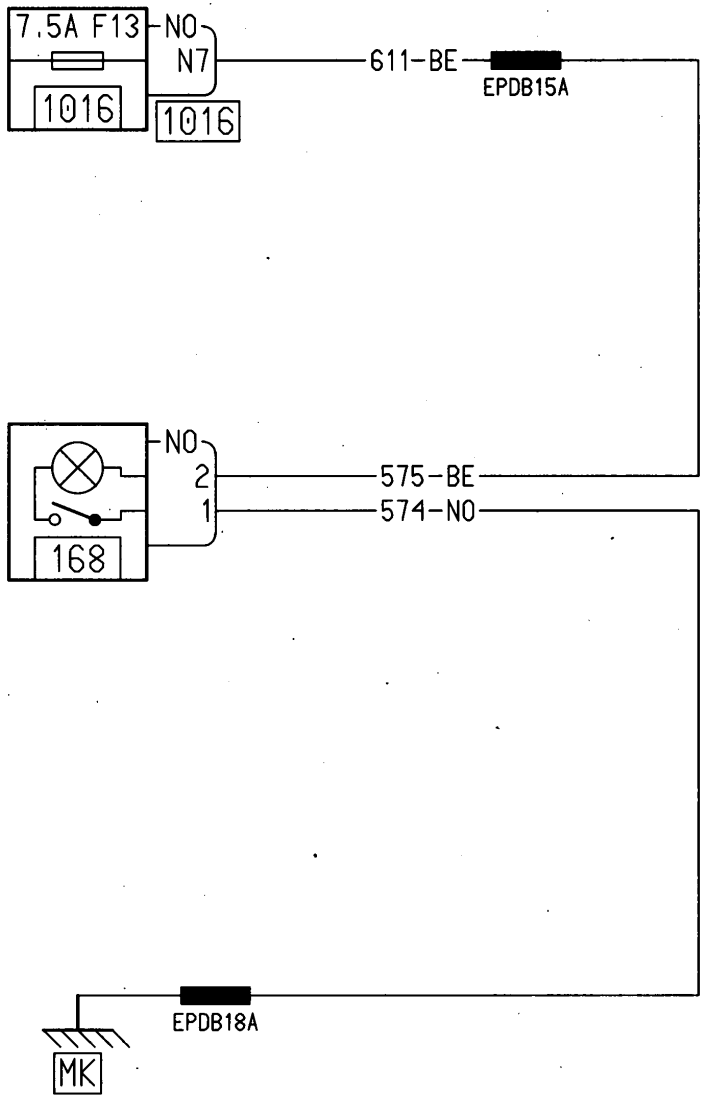

FRONT WIPING SPEED WITH BI-DIRECTIONAL PUMP

L64/E2/DG/ANTID

X64
00

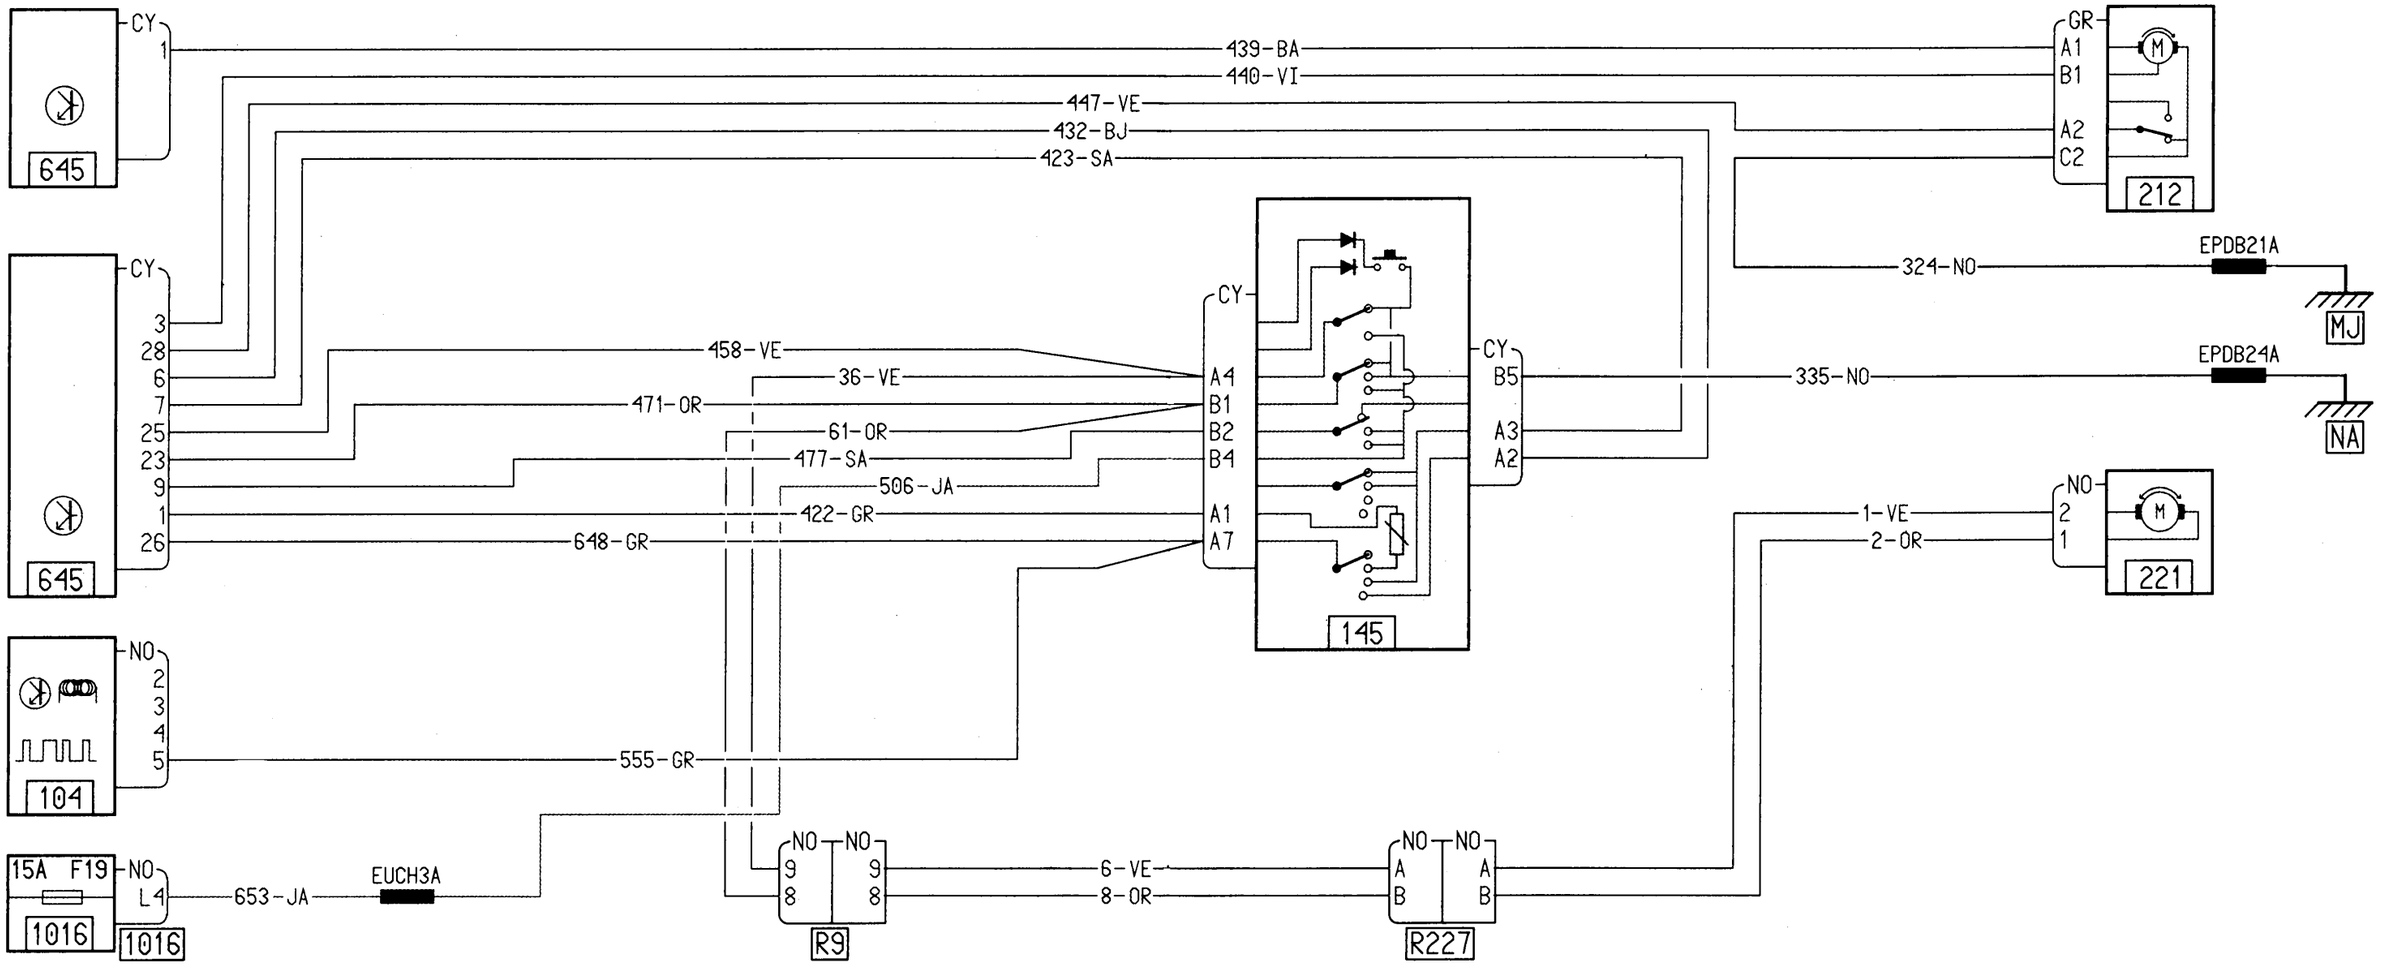

FRONT WIPING SPEED WITH BI-DIRECTIONAL PUMP

E64/E2/DD/ANTID

X64
00

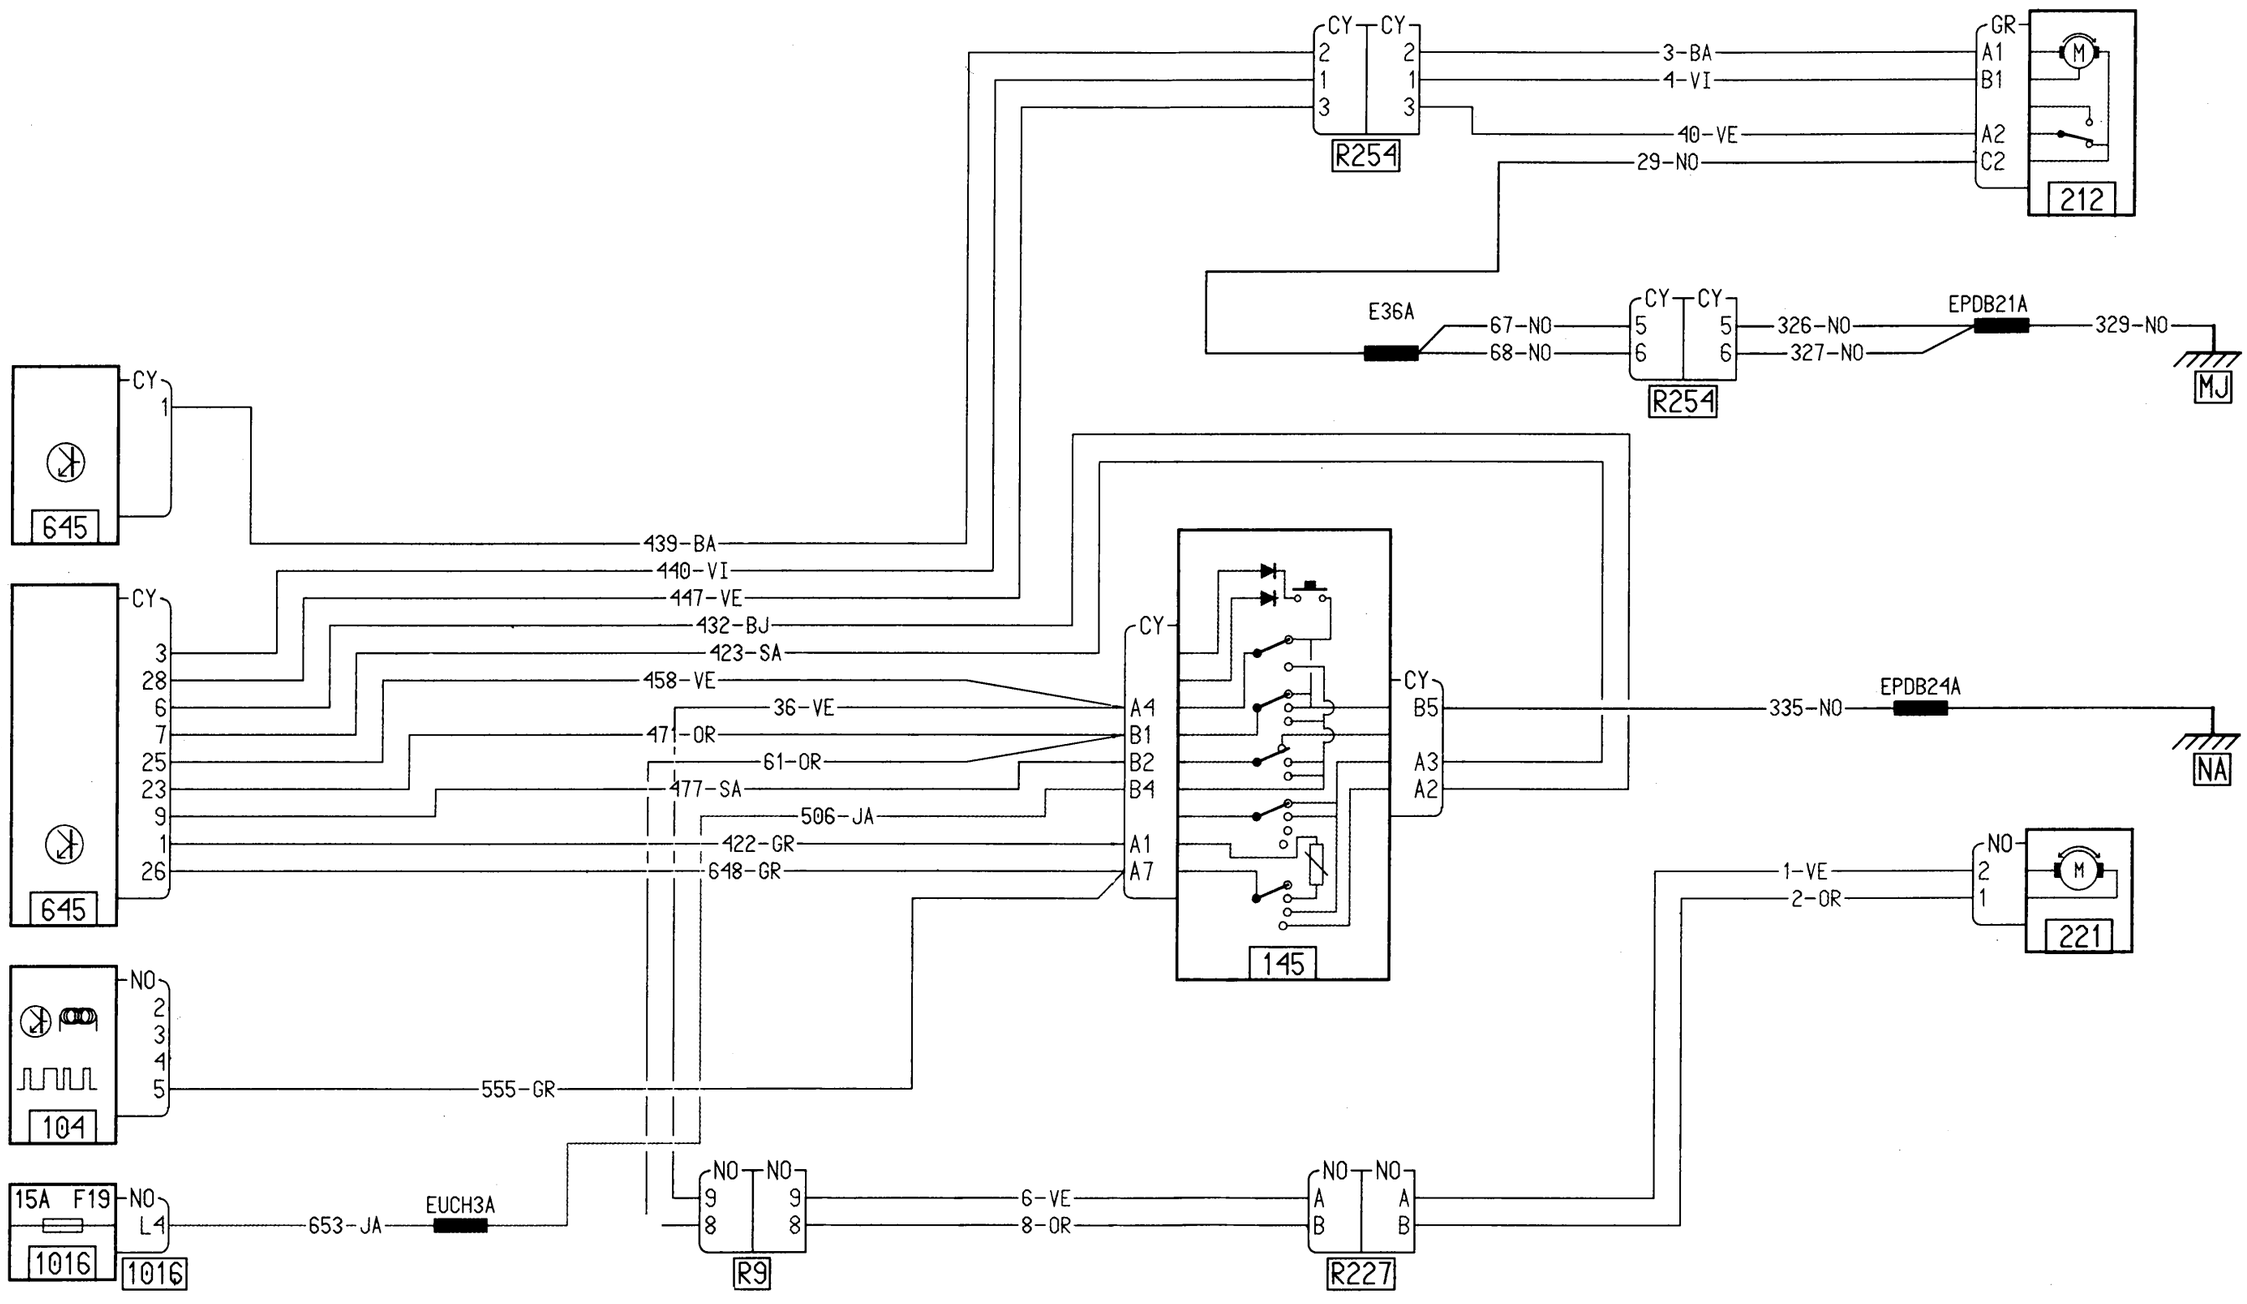

FRONT WIPING SPEED WITH BI-DIRECTIONAL PUMP

E64/E2/DG/ANTID

X64
00

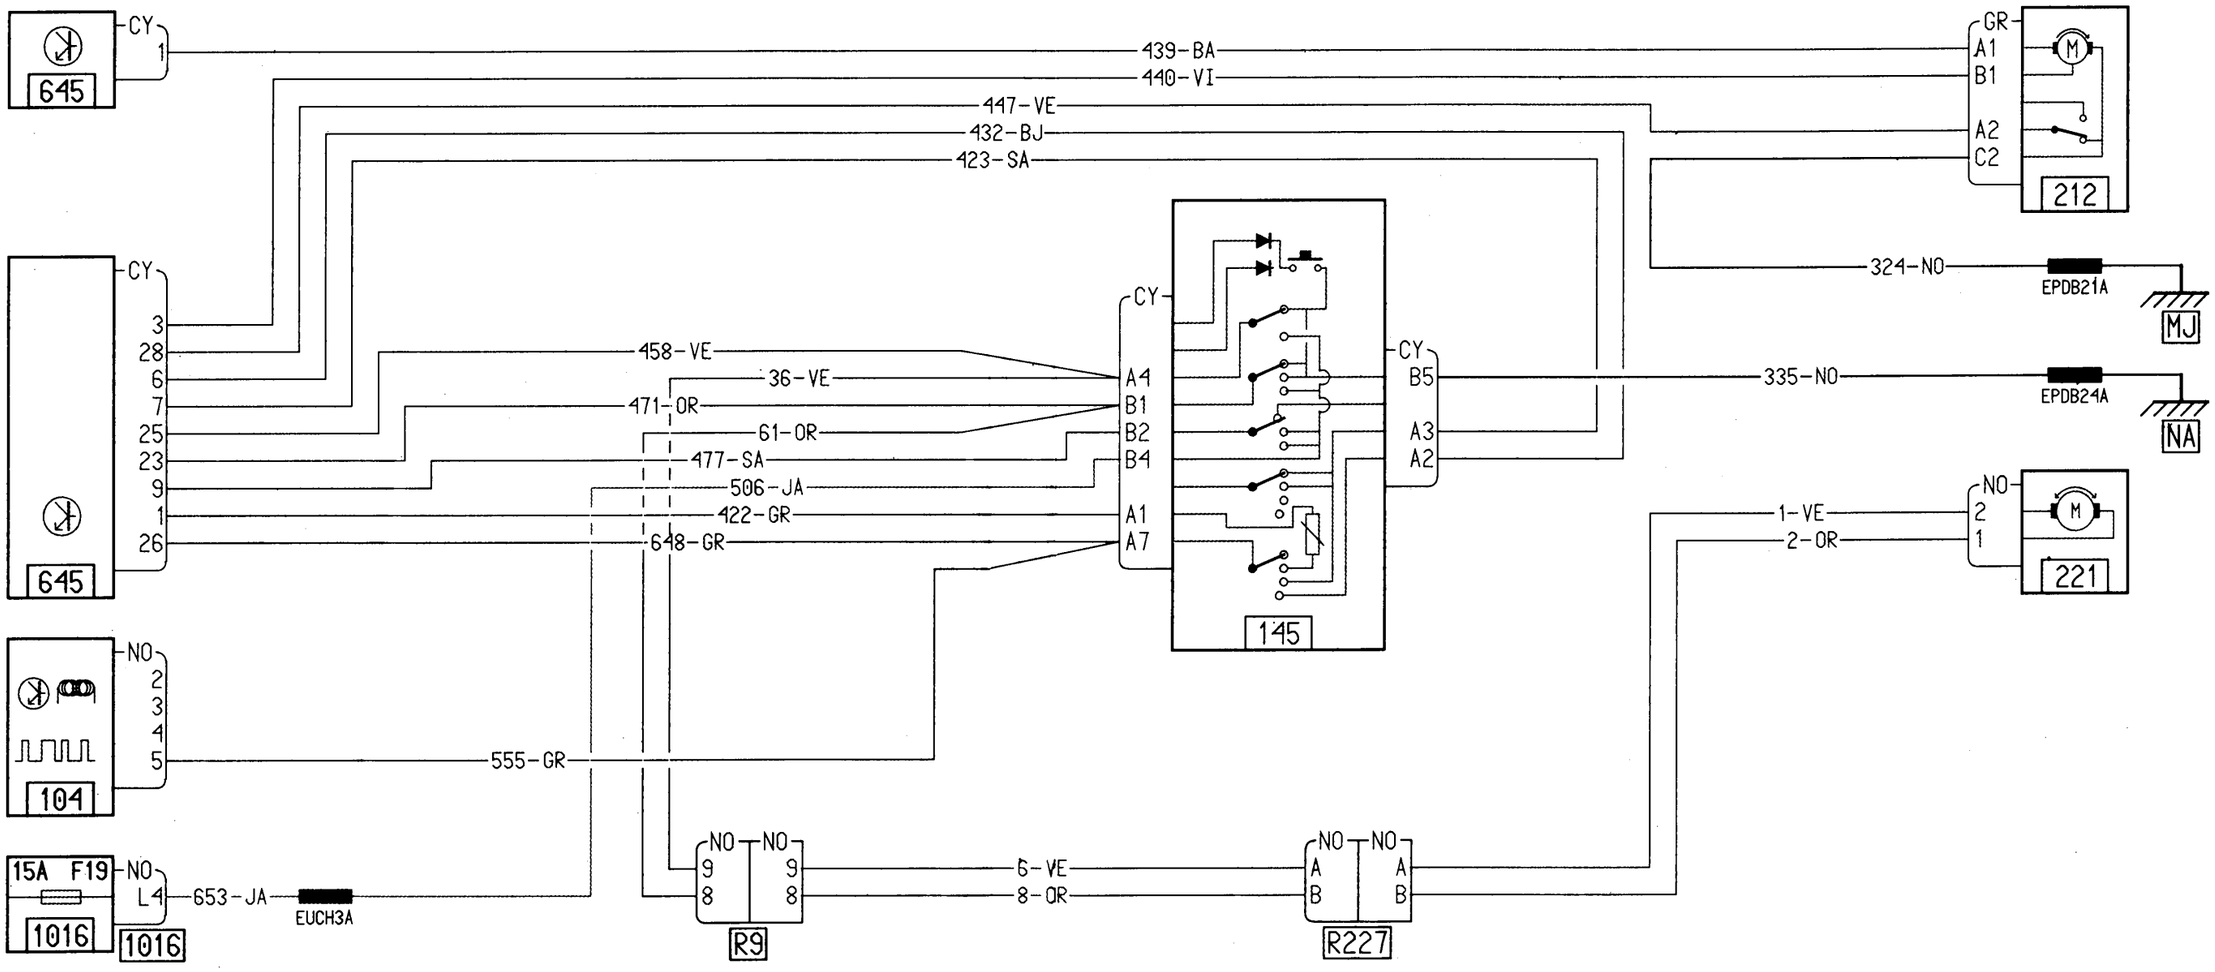

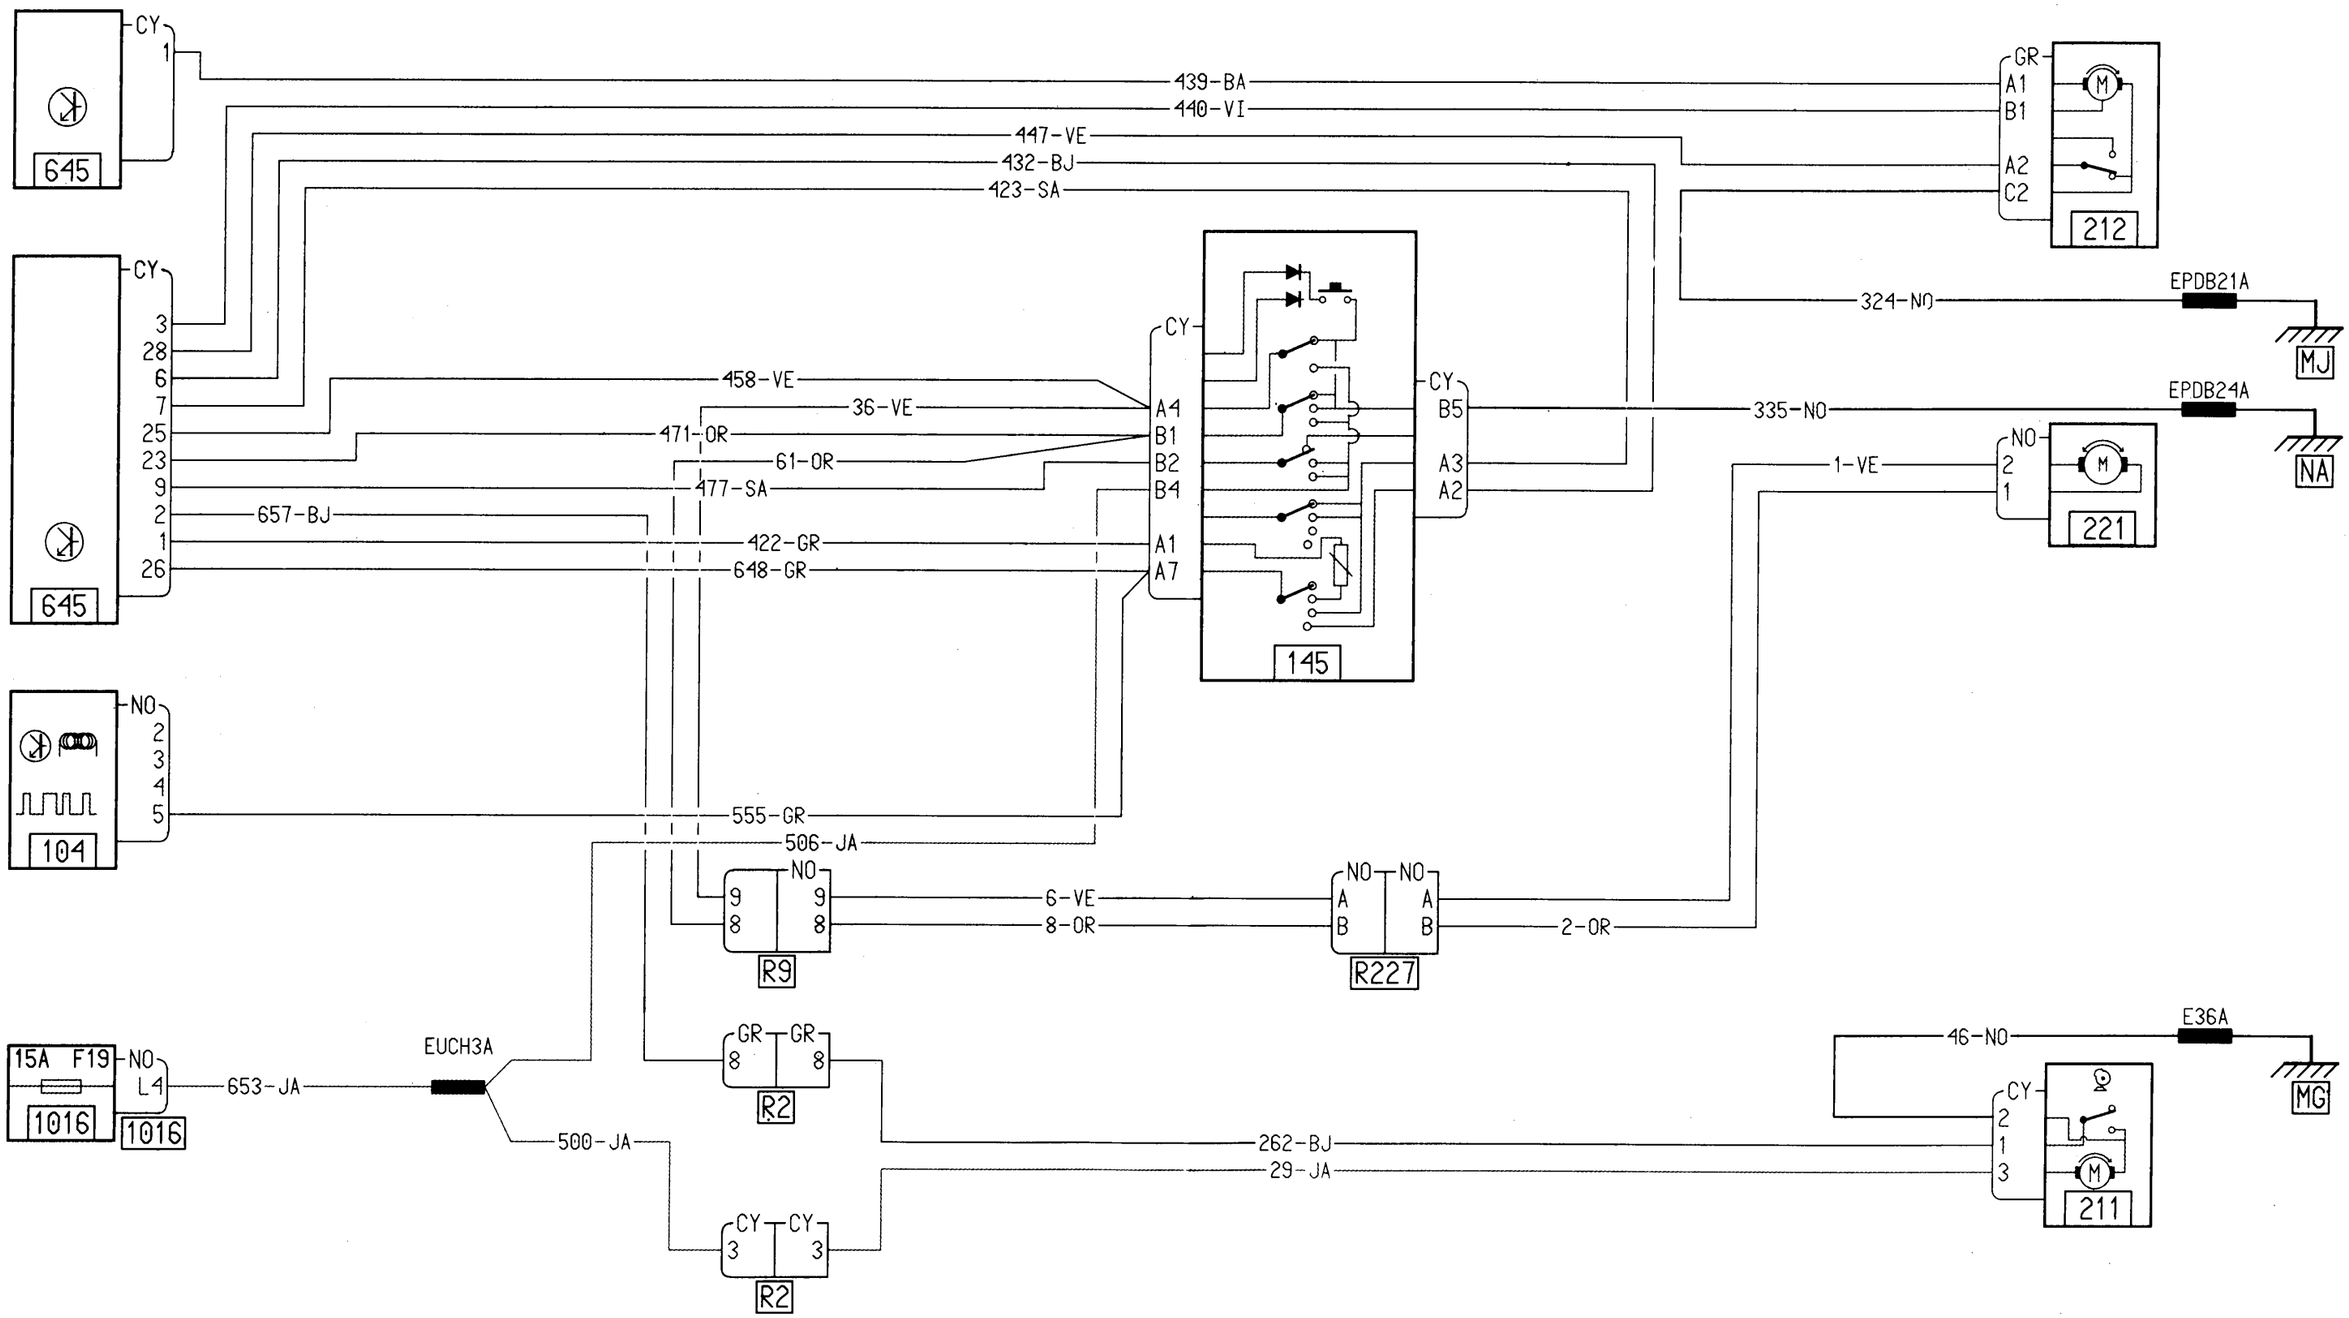
645
CY
1
439-BA
440-VI
447-VE
432-BJ
423-SA
212
GR
A1
B1
A2
C2
324-NO
EPDB21A
MJ
645
CY
3
28
6
7
25
23
9
2
1
26
458-VE
36-VE
471-OR
61-OR
477-SA
657-BJ
422-GR
648-GR
145
CY
A4
B1
B2
B4
A1
A7
CY
B5
A3
A2
335-NO
EPDB24A
NA
1-VE
NO
2
1
221
104
NO
2
3
4
5
555-GR
506-JA
R9
NO
9
8
6-VE
8-OR
R227
NO
A
B
2-OR
15A F19
1016
NO
L4
653-JA
EUCH3A
500-JA
R2
GR
8
262-BJ
29-JA
R2
CY
3
46-NO
E36A
MG
211
CY
2
1
3

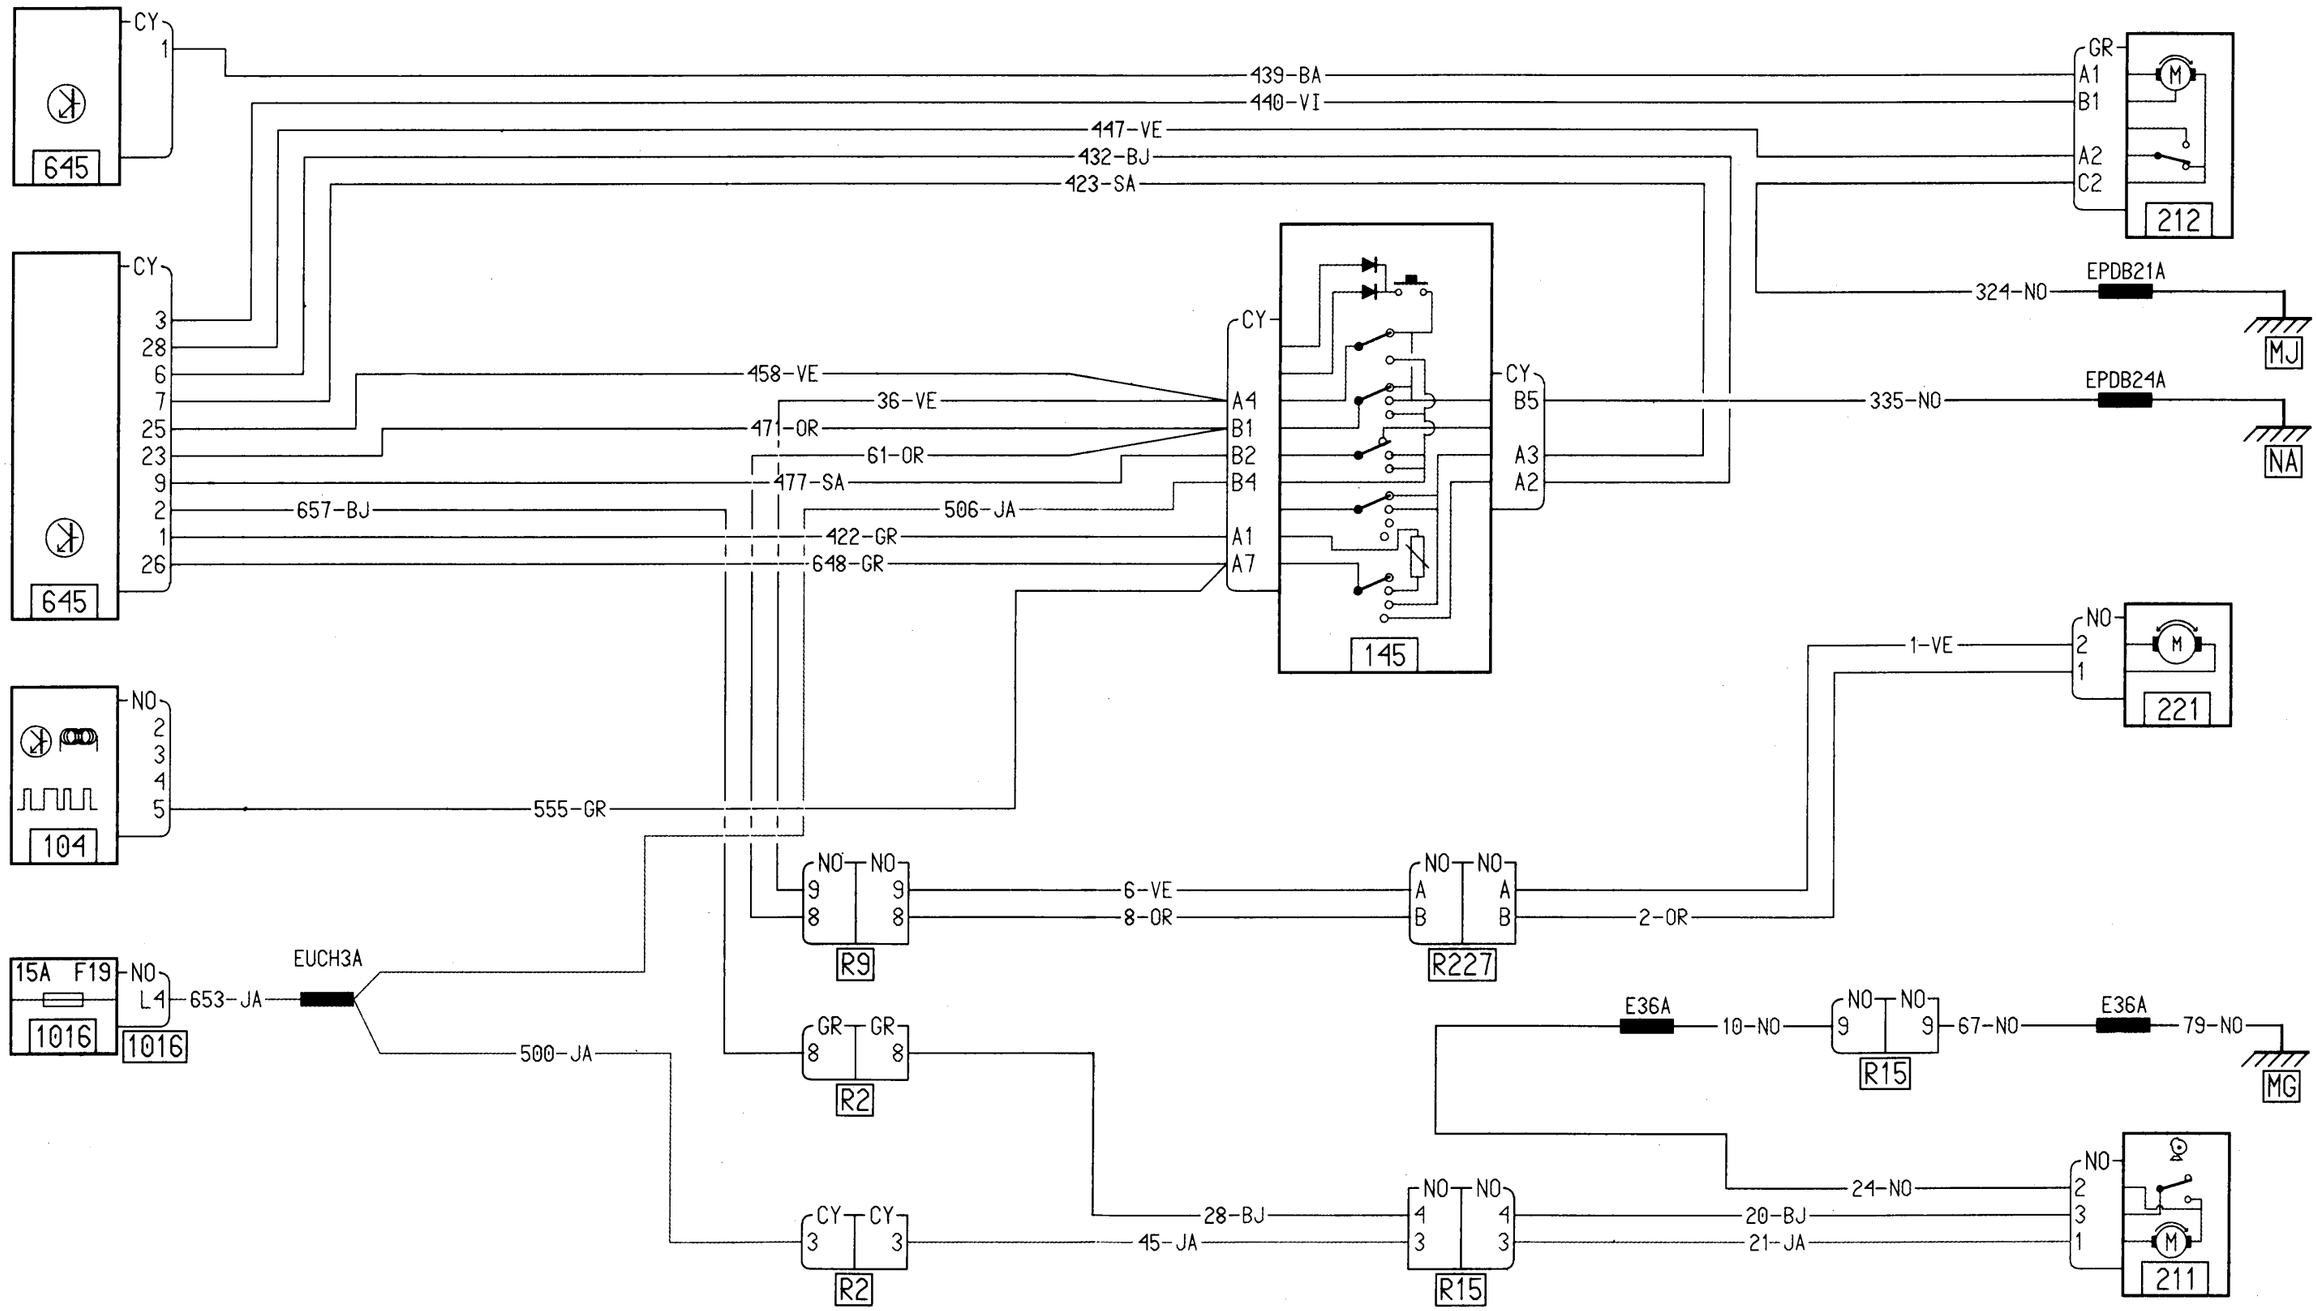
645
CY
1
439-BA
440-VI
447-VE
432-BJ
423-SA
212
GR
A1
B1
A2
C2
324-NO
EPDB21A
MJ
335-NO
EPDB24A
NA
3
28
6
7
25
23
9
2
1
26
458-VE
36-VE
471-OR
61-OR
477-SA
657-BJ
506-JA
422-GR
648-GR
145
A4
B1
B2
B4
A1
A7
B5
A3
A2
104
NO
2
3
4
5
555-GR
1-VE
221
R9
6-VE
8-OR
R227
2-OR
15A F19
1016
L4
653-JA
EUCH3A
500-JA
R2
E36A
10-NO
R15
67-NO
79-NO
MG
28-BJ
45-JA
24-NO
20-BJ
21-JA
211

REAR AND FRONT WIPING SPEED WITH BI-DIRECTIONAL PUMP

S64/E1/DG/VHECOL

X64
00

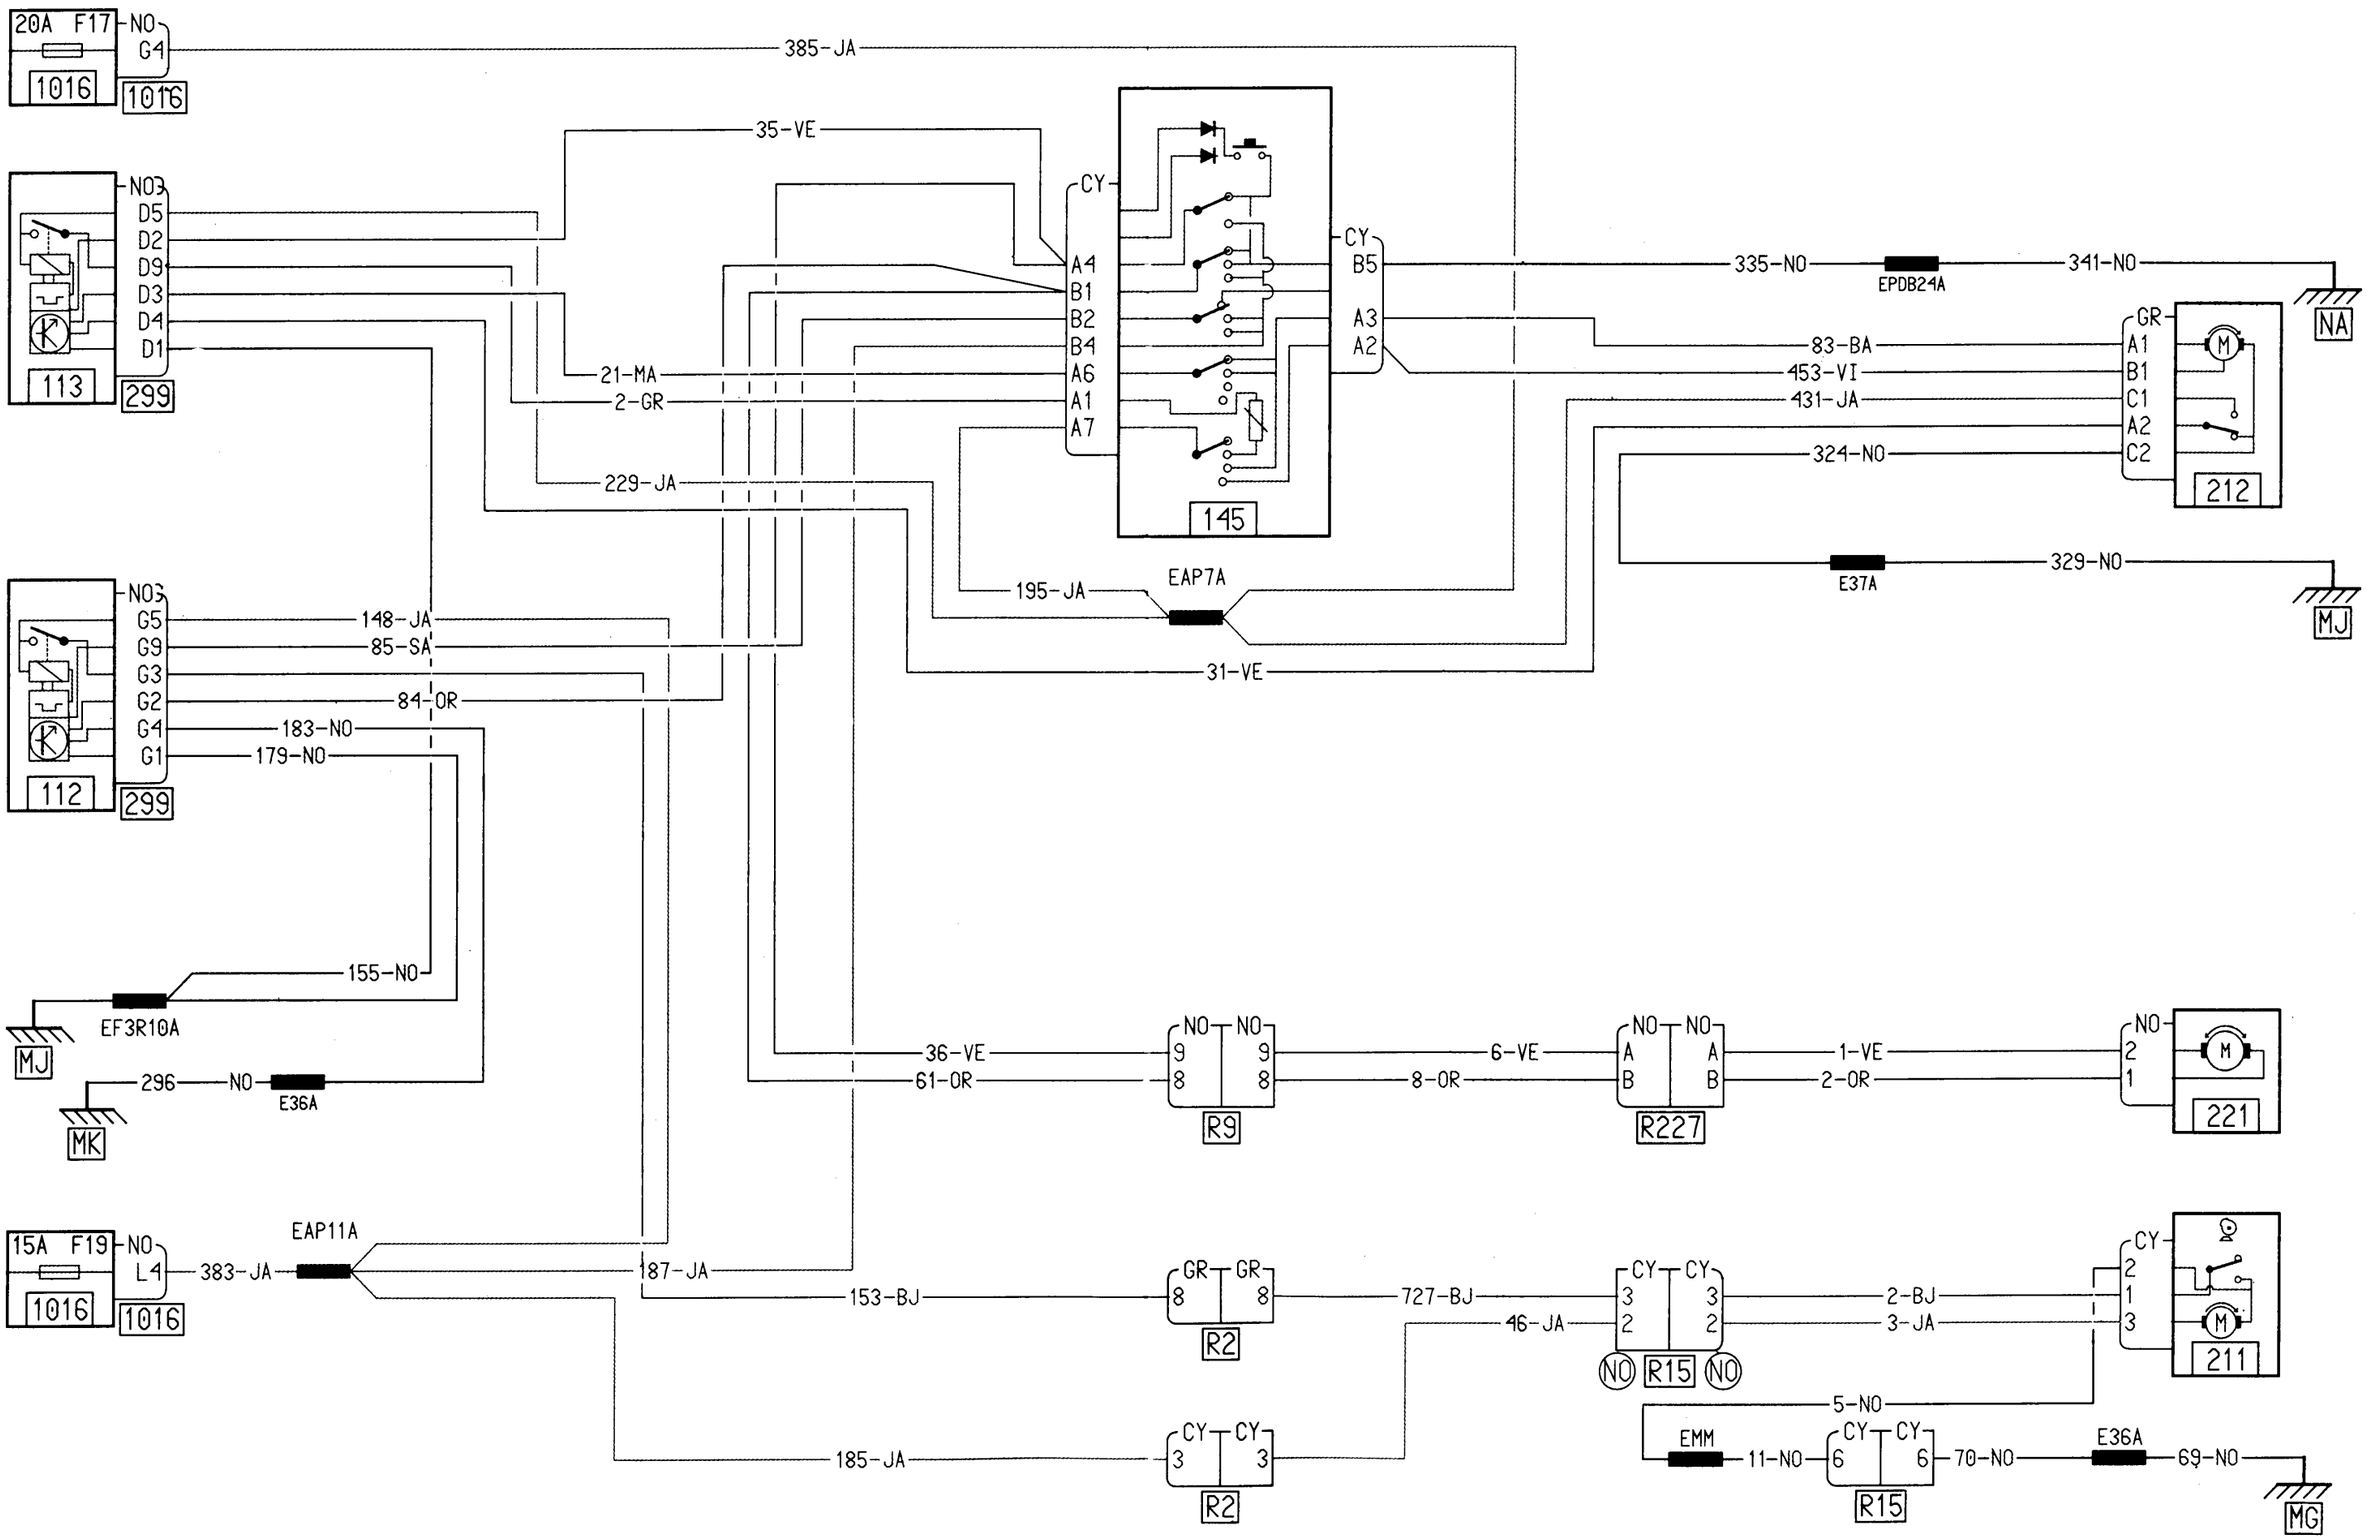

REAR AND FRONT WIPING SPEED WITH BI-DIRECTIONAL PUMP

B64/E2/DG/ANTID

X64
00

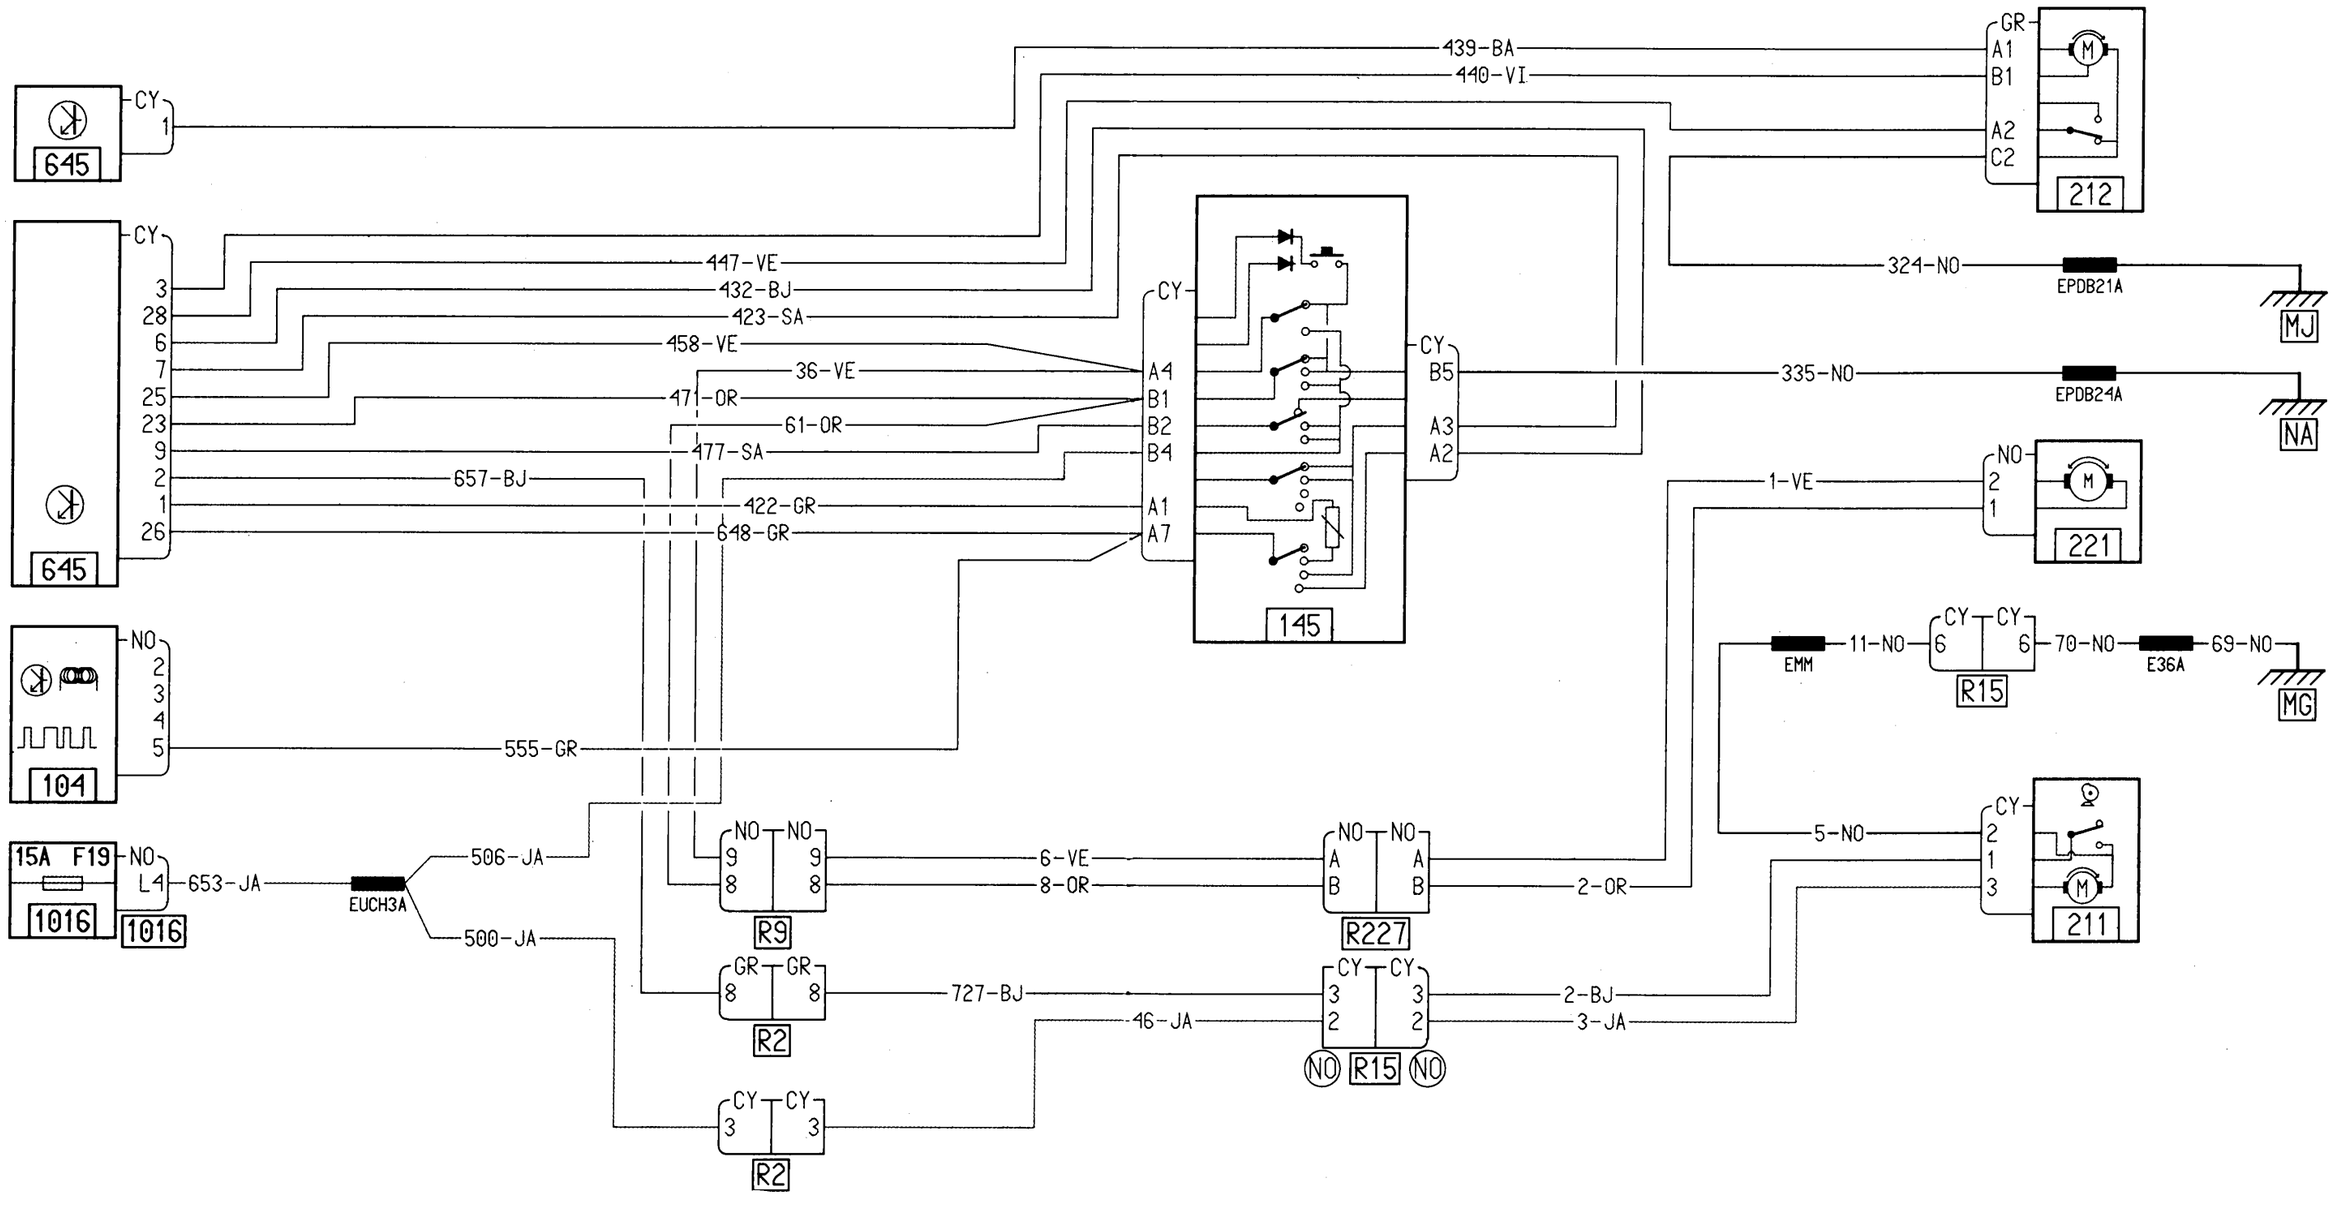

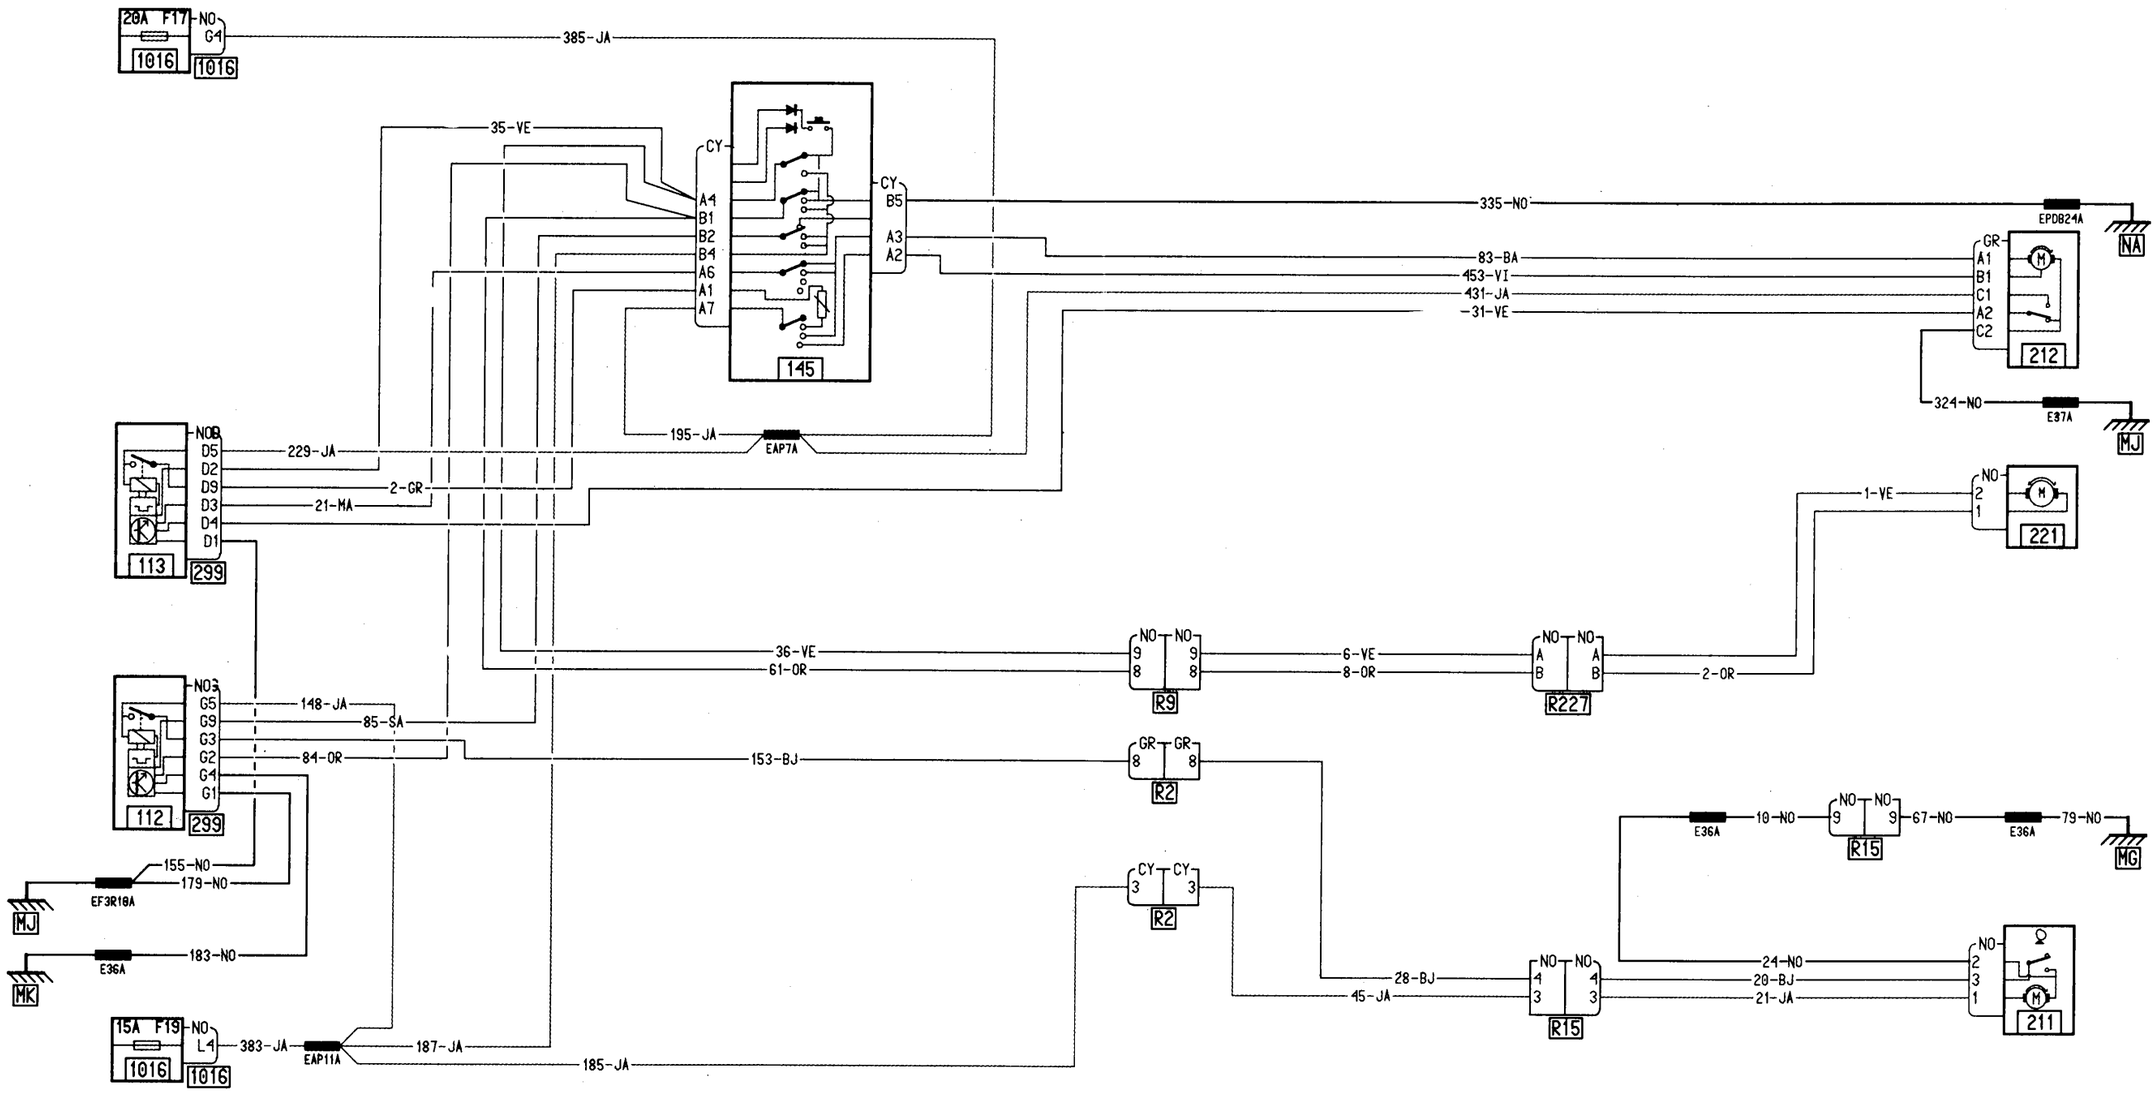
20A F17
NO
G1
1016
1016
385-JA
35-VE
CY
A4
B1
B2
B4
A6
A1
A7
CY
B5
A3
A2
145
335-NO
83-BA
453-VI
431-JA
31-VE
EPD824A
NA
GR
A1
B1
C1
A2
C2
212
324-NO
E37A
MJ
NOB
D5
D2
D9
D3
D4
D1
229-JA
2-GR
21-MA
195-JA
EAP7A
113
299
1-VE
NO
2
1
221
36-VE
61-OR
NO
9
8
R9
6-VE
8-OR
NO
A
B
R227
2-OR
NO3
G5
G9
G3
G2
G4
G1
148-JA
85-SA
84-OR
153-BJ
GR
8
R2
112
299
155-NO
179-NO
EF3R18A
MJ
183-NO
E36A
MK
E36A
10-NO
NO
9
R15
67-NO
E36A
79-NO
MG
CY
3
R2
28-BJ
45-JA
NO
4
3
R15
24-NO
20-BJ
21-JA
NO
2
3
1
211
15A F19
NO
L1
1016
1016
383-JA
EAP11A
187-JA
185-JA

REAR FOGLIGHTS

D64/E2/RUNLI

X64
00

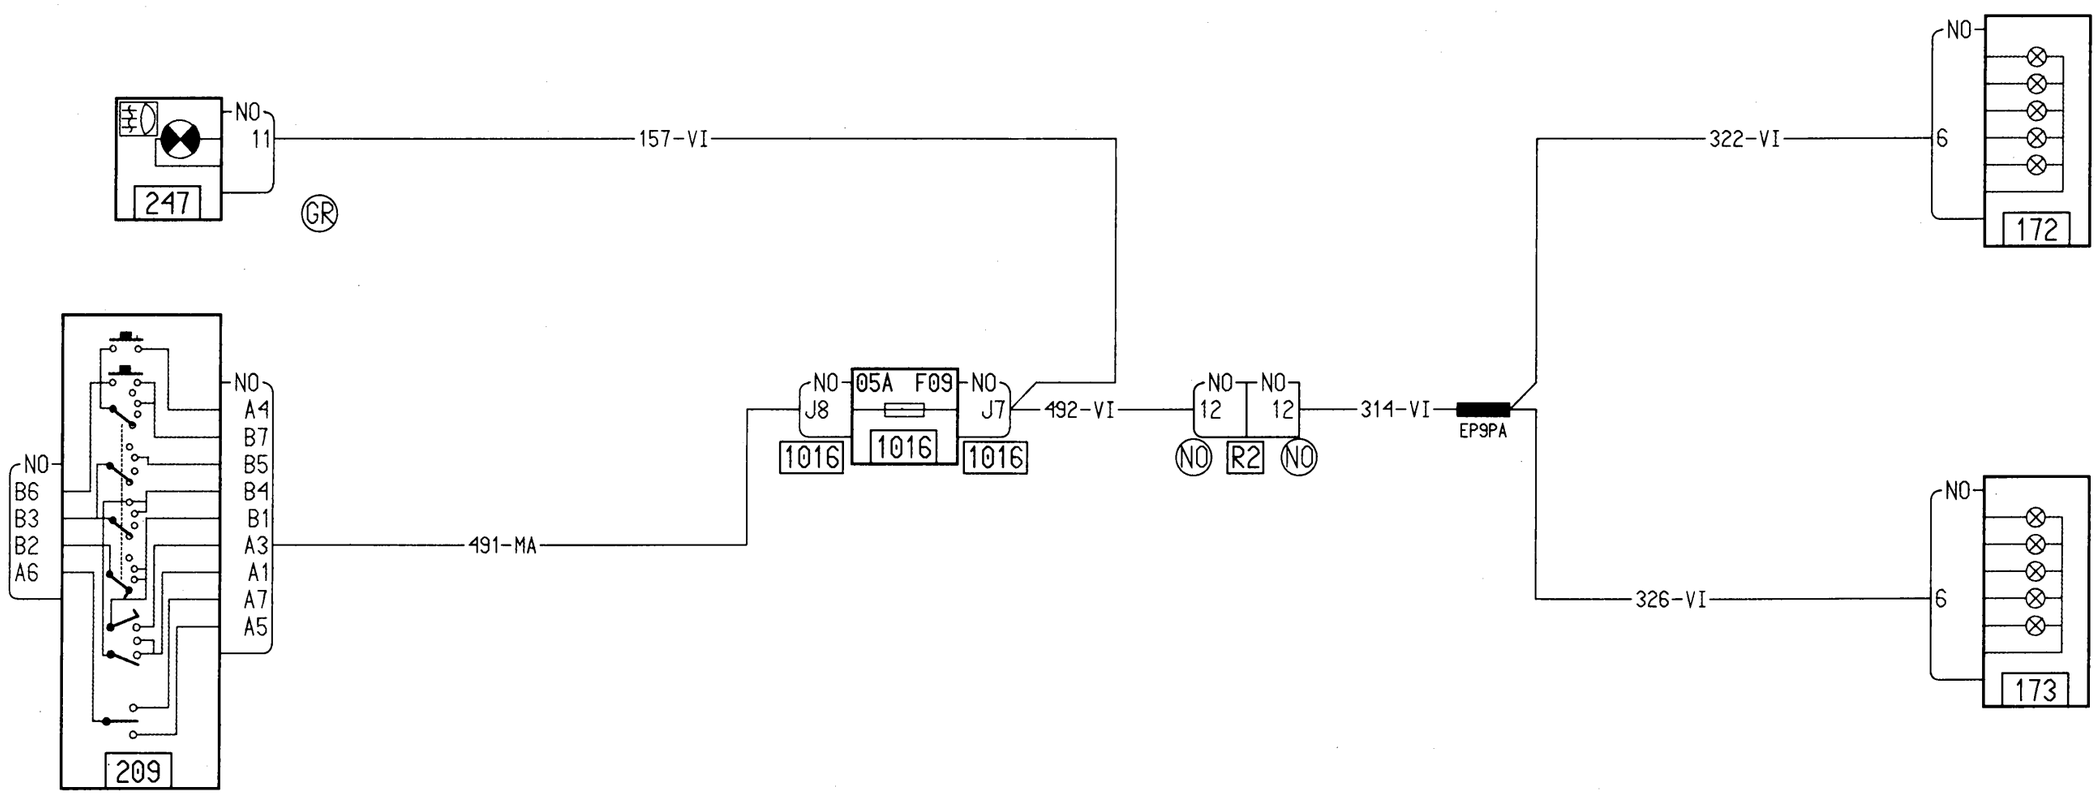

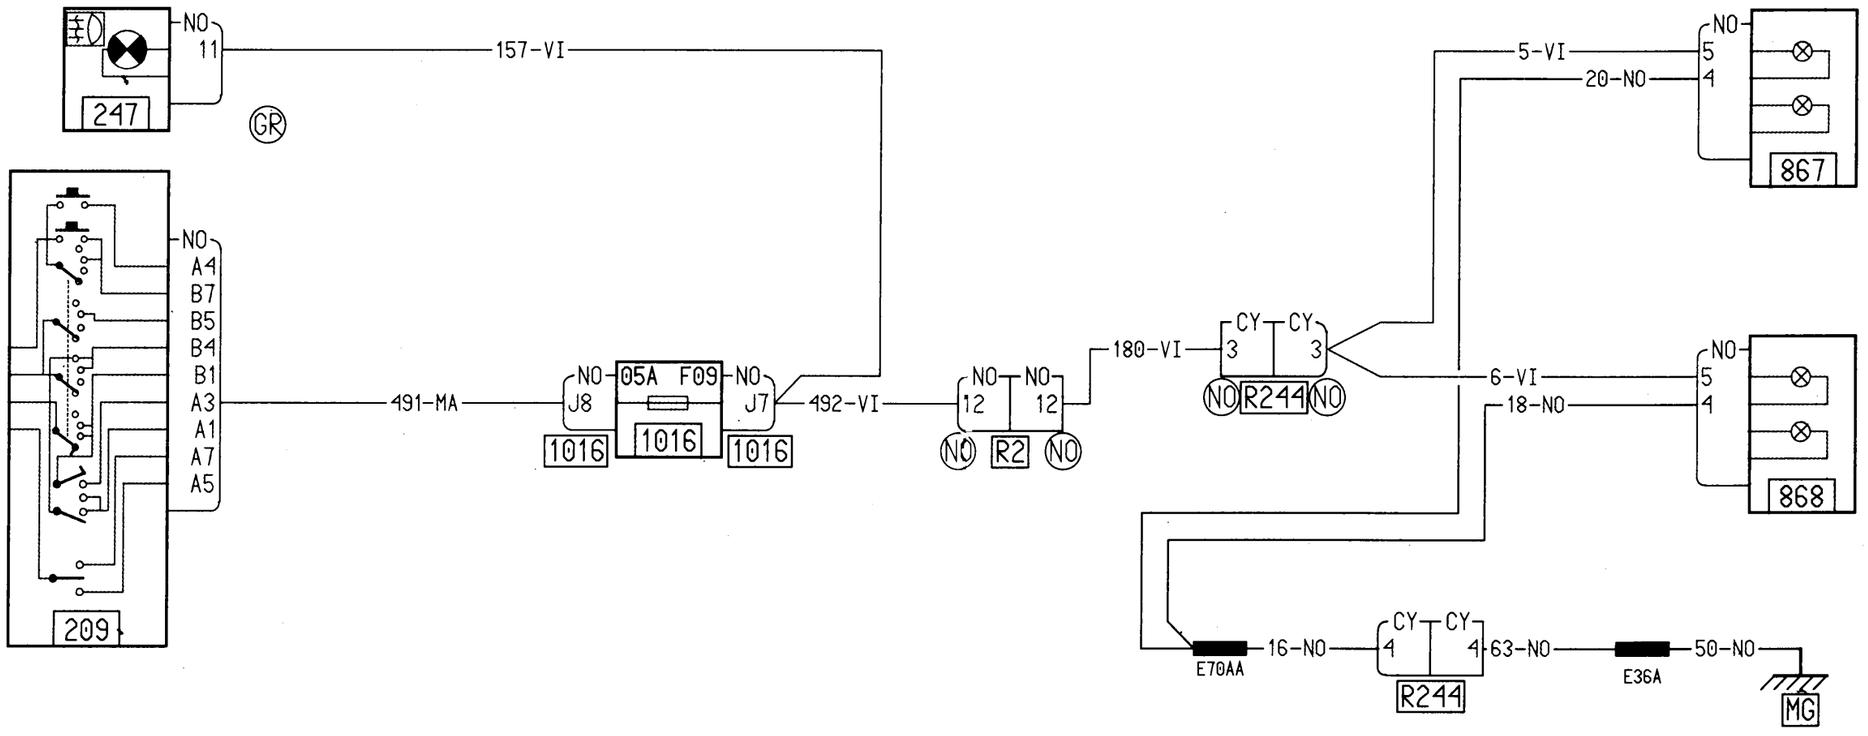
NO
11
157-VI
247
GR
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
209
491-MA
NO
J8
05A F09
NO
J7
1016
1016
1016
492-VI
NO
12
NO
12
NO
R2
NO
180-VI
CY
3
CY
3
NO
R244
NO
5-VI
20-NO
6-VI
18-NO
NO
5
4
867
NO
5
4
868
E70AA
16-NO
CY
4
CY
4
R244
63-NO
E36A
50-NO
MG

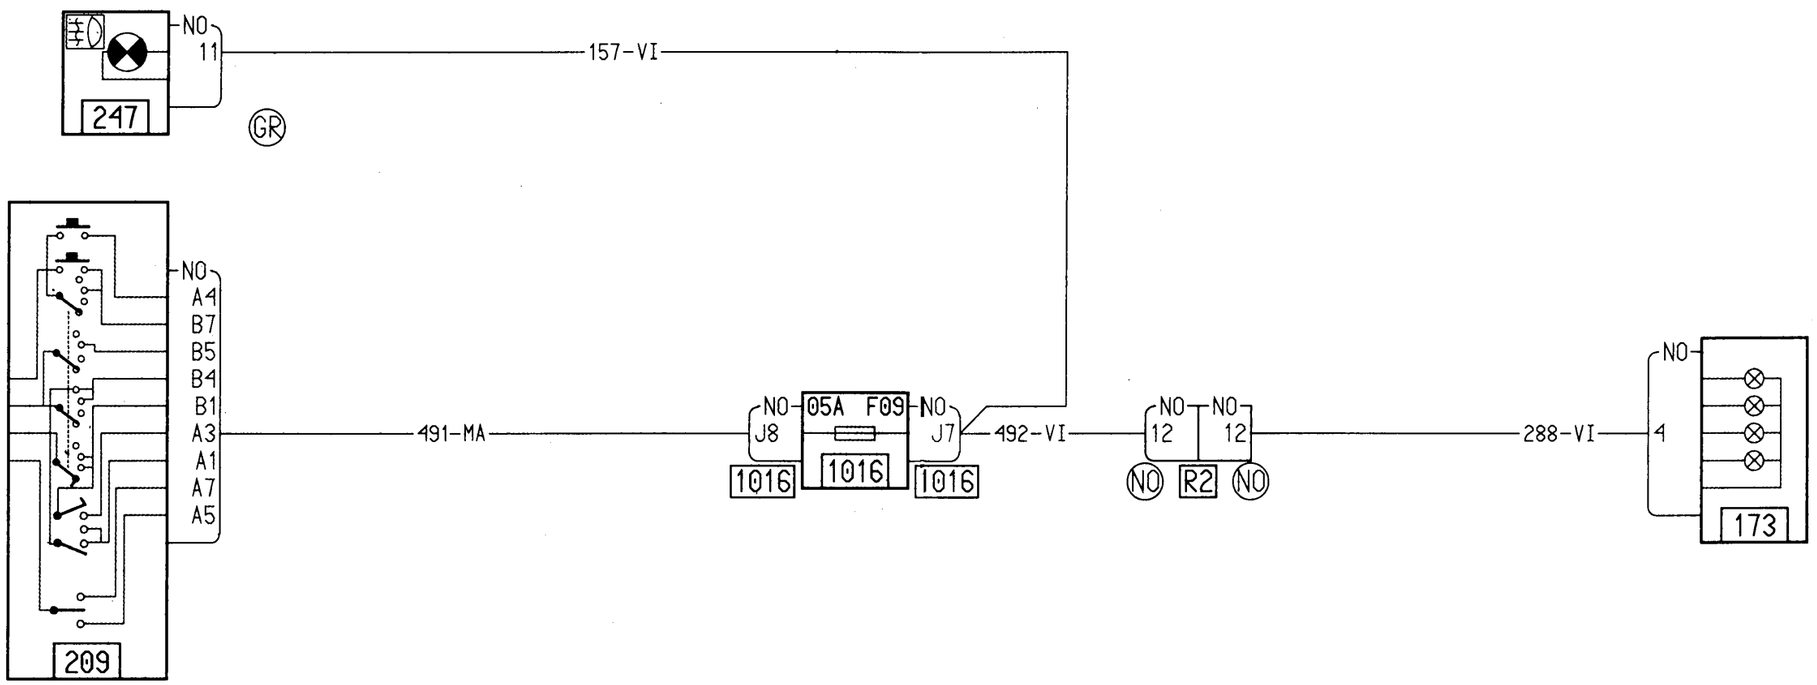
NO
11
157-VI
247
GR
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
209
491-MA
NO
J8
05A F09
NO
J7
1016
1016
1016
492-VI
NO
12
NO
12
NO
R2
NO
288-VI
NO
4
173

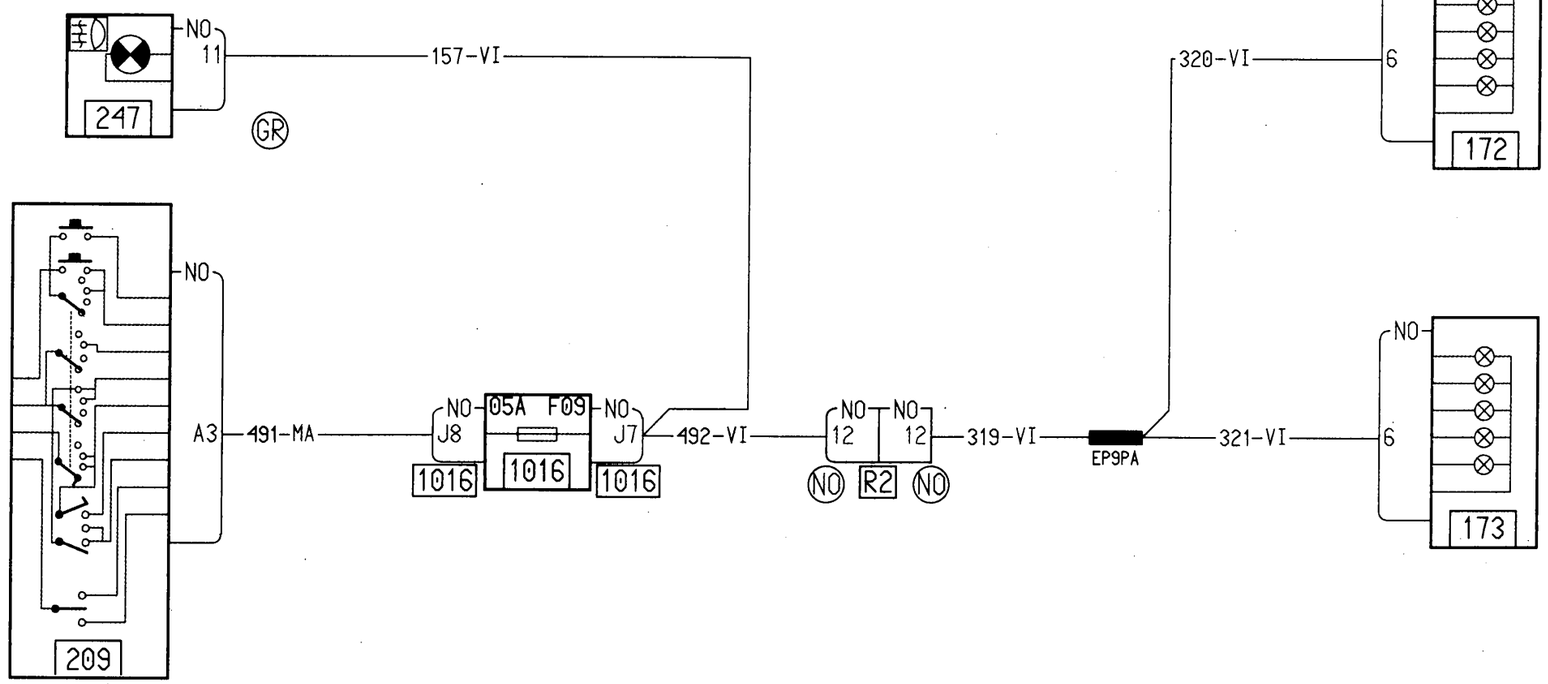
NO
11
157-VI
247
GR
NO
A3
491-MA
209
NO
05A F09
NO
J8
J7
1016
1016
1016
492-VI
NO
12
NO
12
NO
R2
NO
319-VI
EP9PA
321-VI
320-VI
NO
6
172
NO
6
173

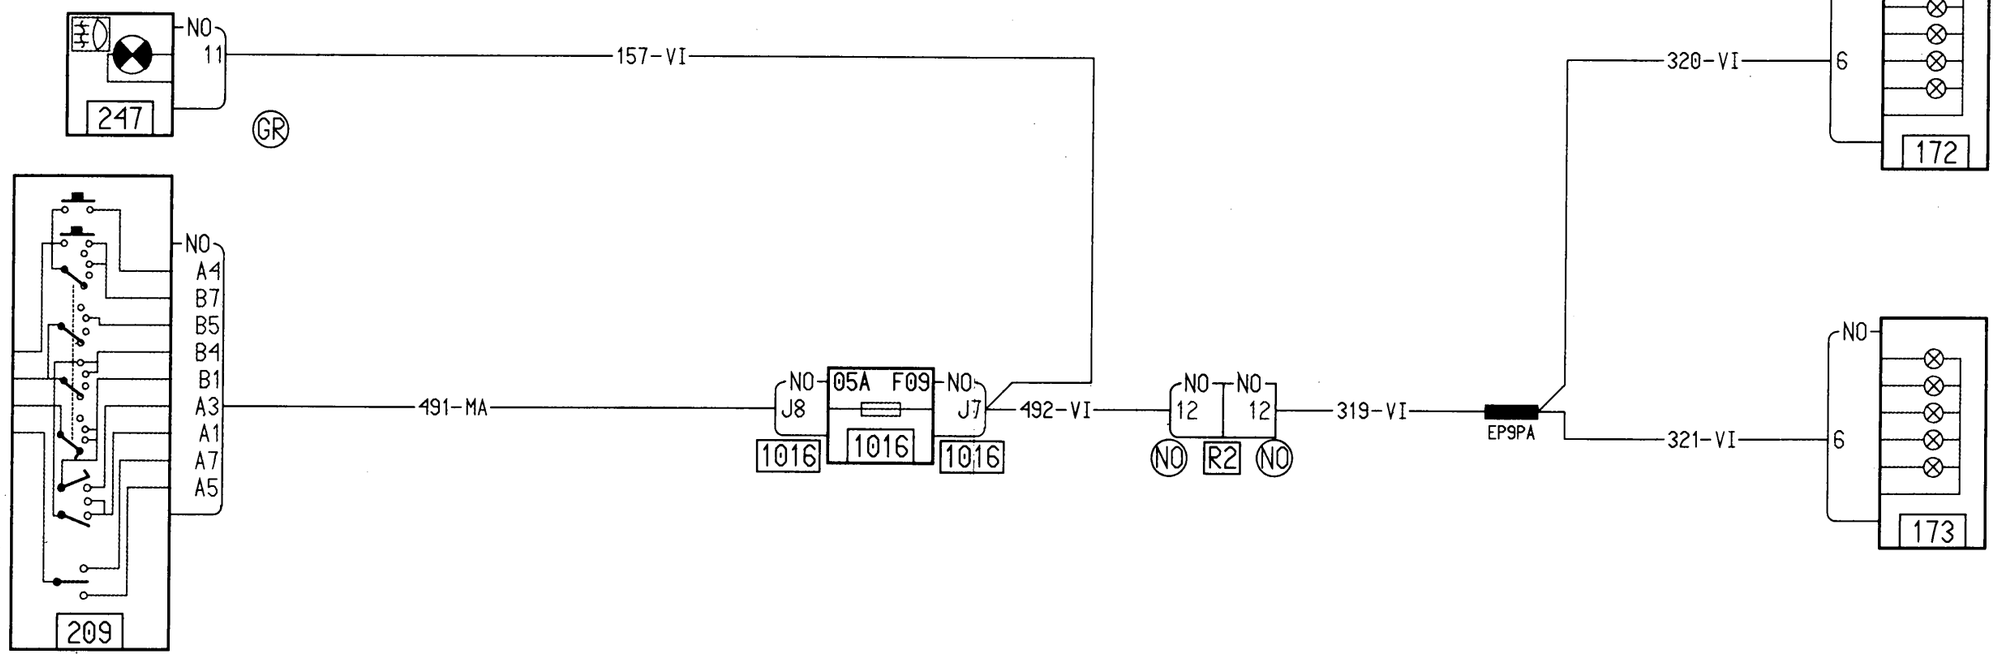
NO
11
247
157-VI
GR
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
209
491-MA
NO
J8
05A F09
NO
J7
1016
1016
1016
492-VI
NO
12
NO
12
NO
R2
NO
319-VI
EP9PA
320-VI
NO
6
172
321-VI
NO
6
173

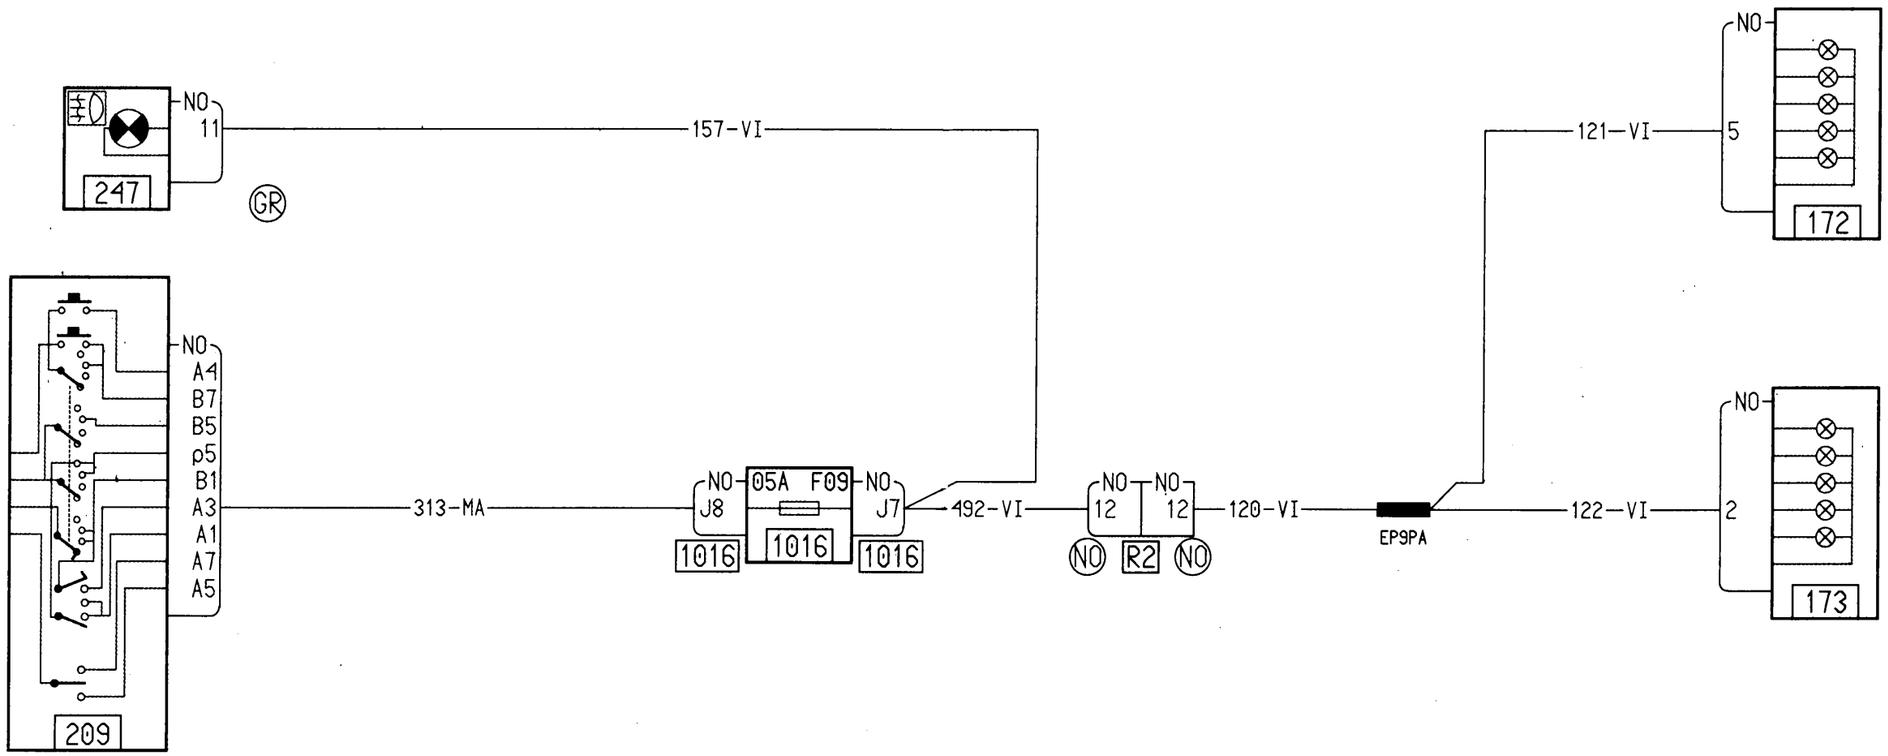
NO
11
247
157-VI
GR
121-VI
5
172
NO
A4
B7
B5
ρ5
B1
A3
A1
A7
A5
209
313-MA
NO
J8
05A F09
NO
J7
1016
1016
1016
492-VI
NO
12
NO
12
NO
R2
NO
120-VI
EP9PA
122-VI
NO
2
173

REAR FOGLIGHTS

B64/E2/RUNLI

X64

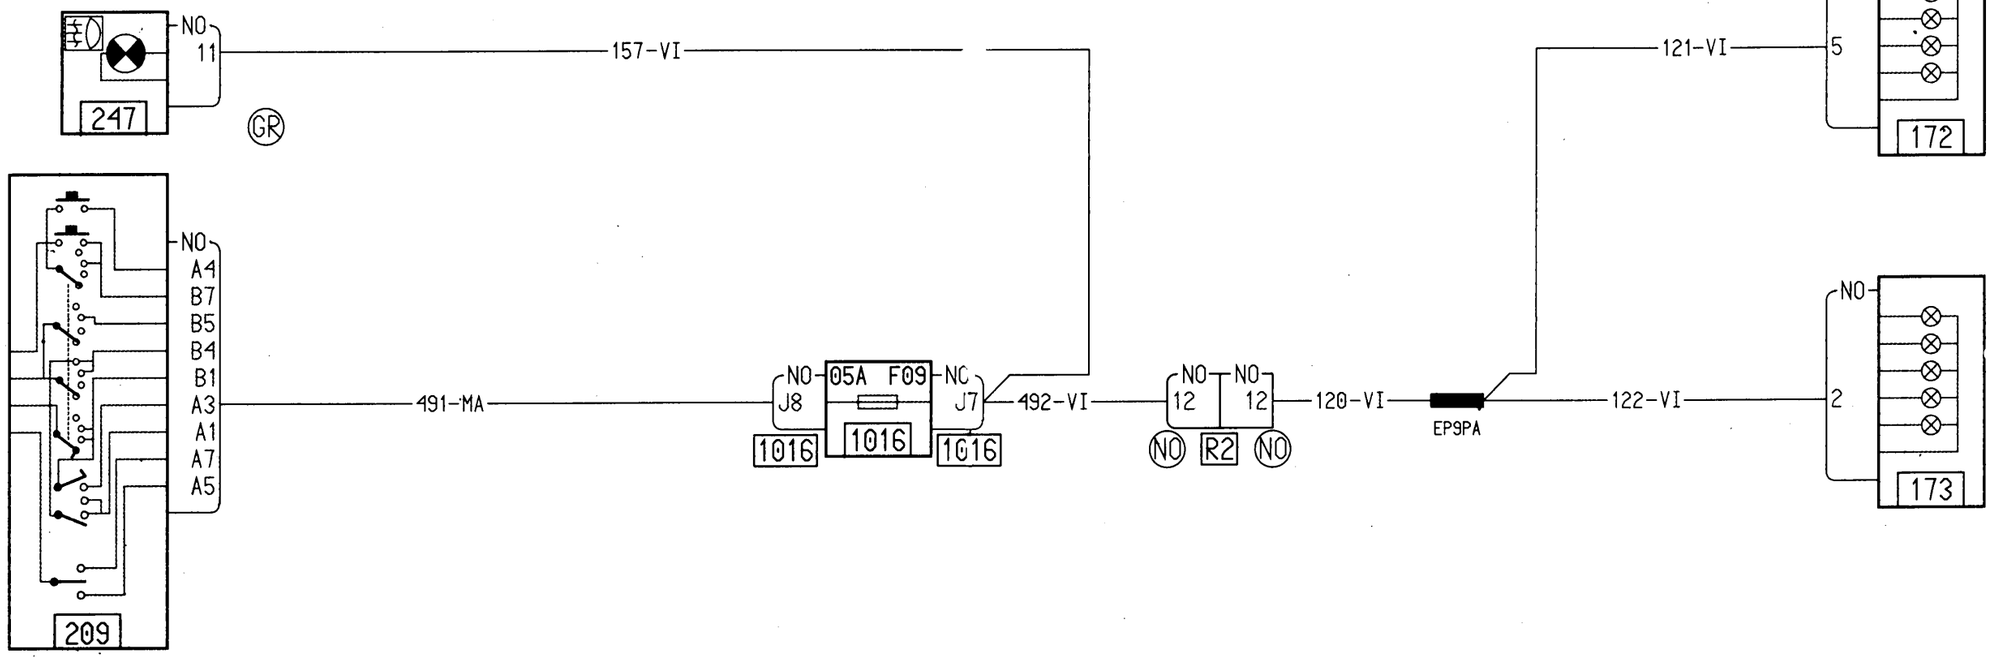

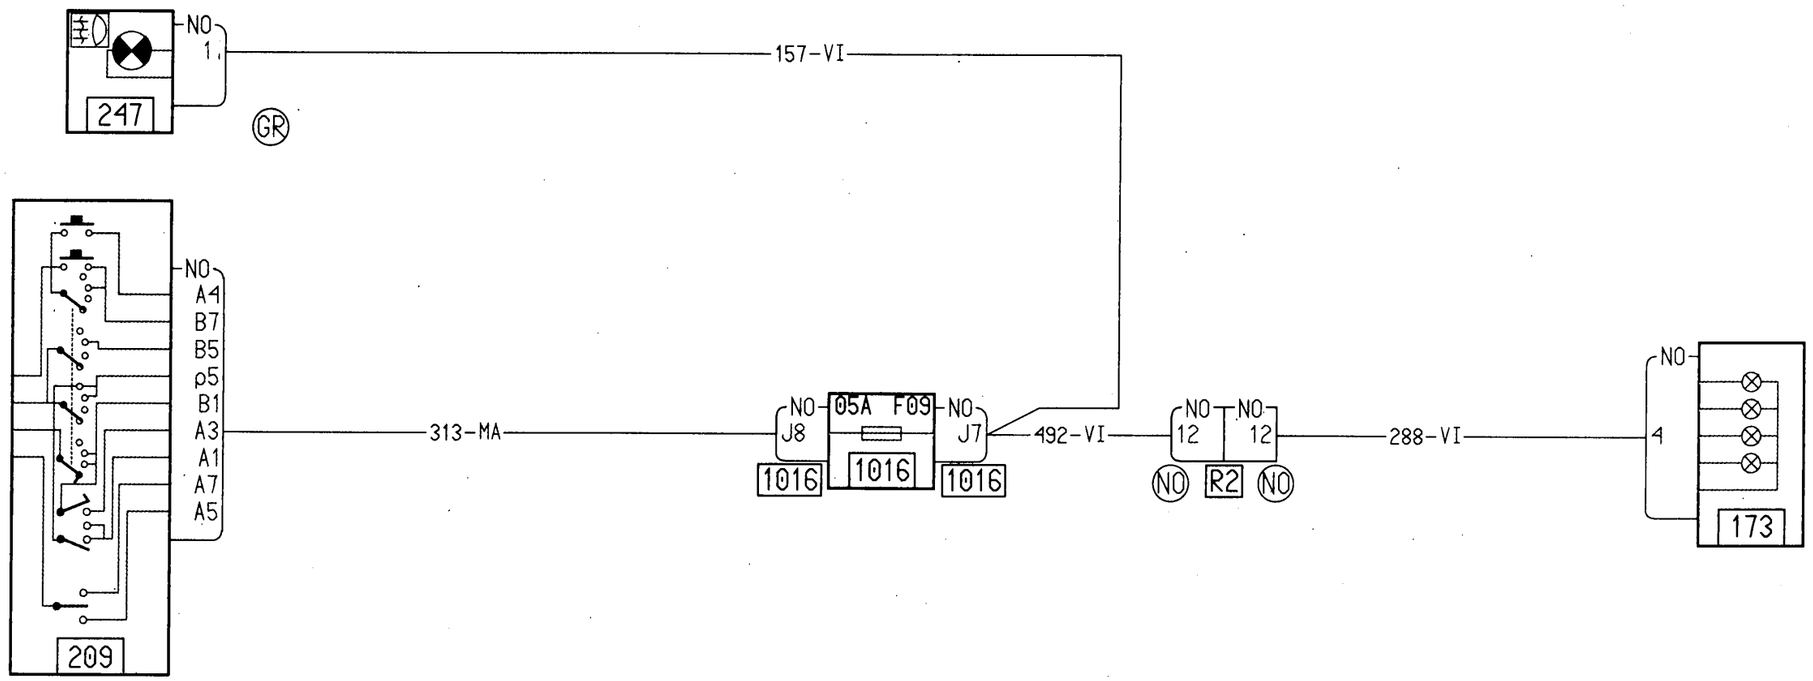
NO
1
247
GR
157-VI
NO
A4
B7
B5
ρ5
B1
A3
A1
A7
A5
209
313-MA
NO
J8
05A F09
1016
1016
NO
J7
1016
492-VI
NO
12
NO
12
NO
R2
288-VI
NO
4
173

FRONT FOGLIGHTS

(B64/E2/DG/PROJAB/RUNLI),(K25/E2/DG/PROJAB/RUNLI)

X64
00

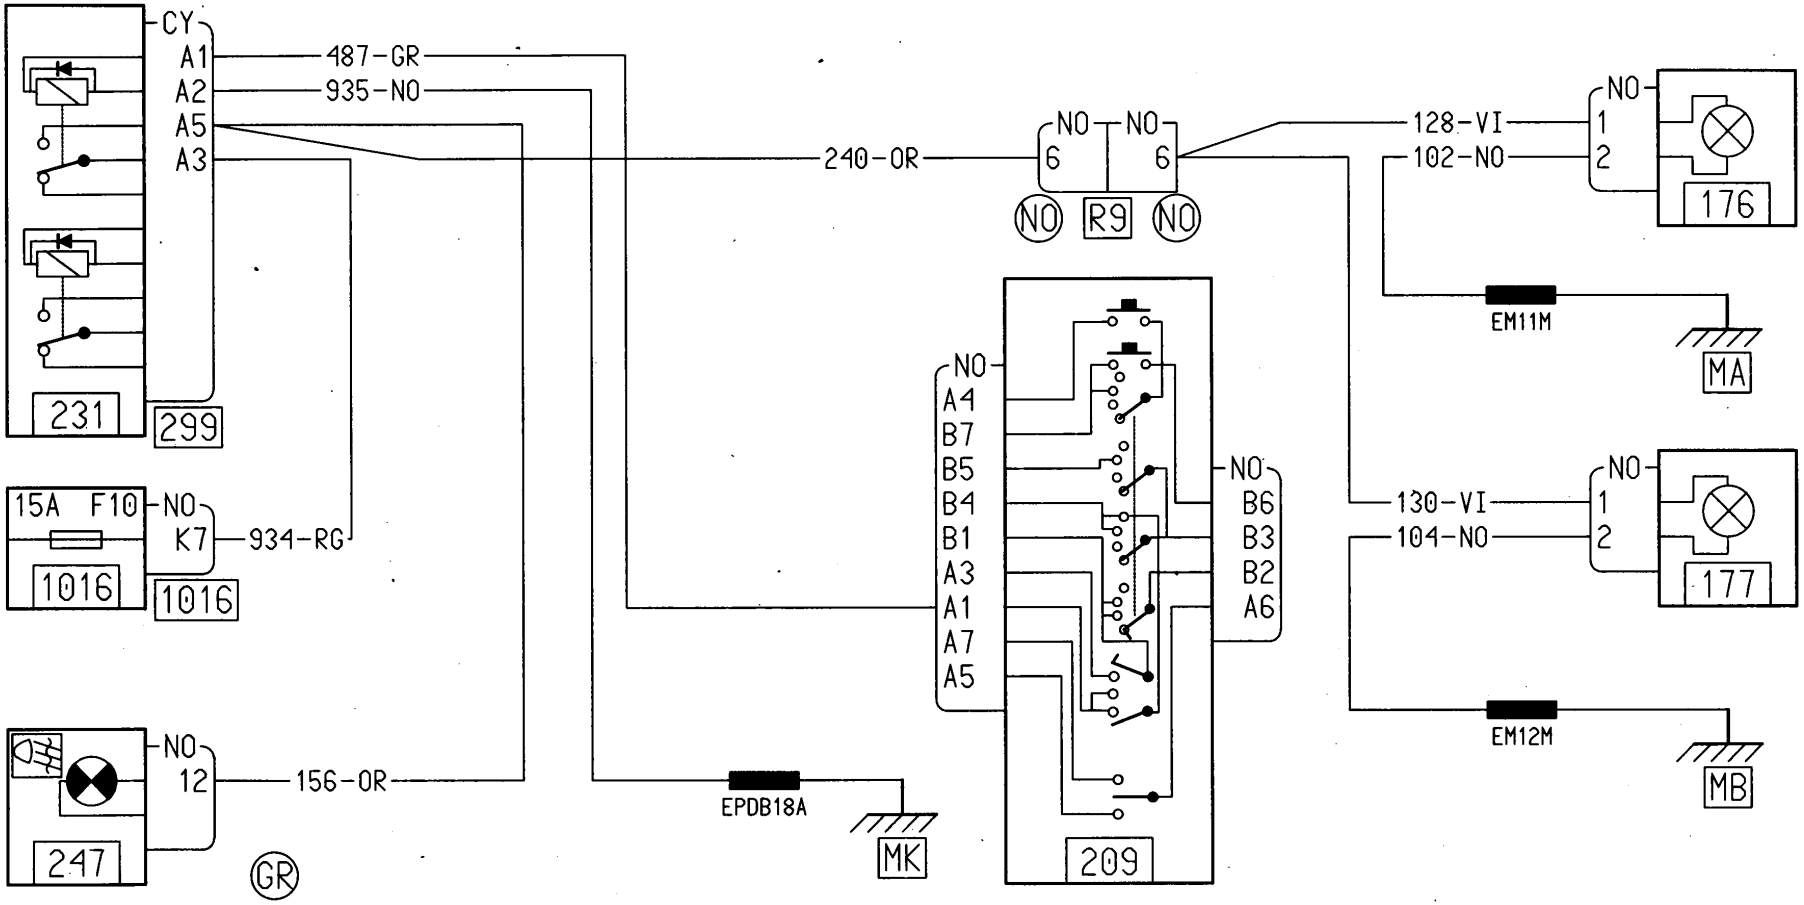

FRONT FOGLIGHTS

E1/DG/PROJAB/RUNLI

X64
00

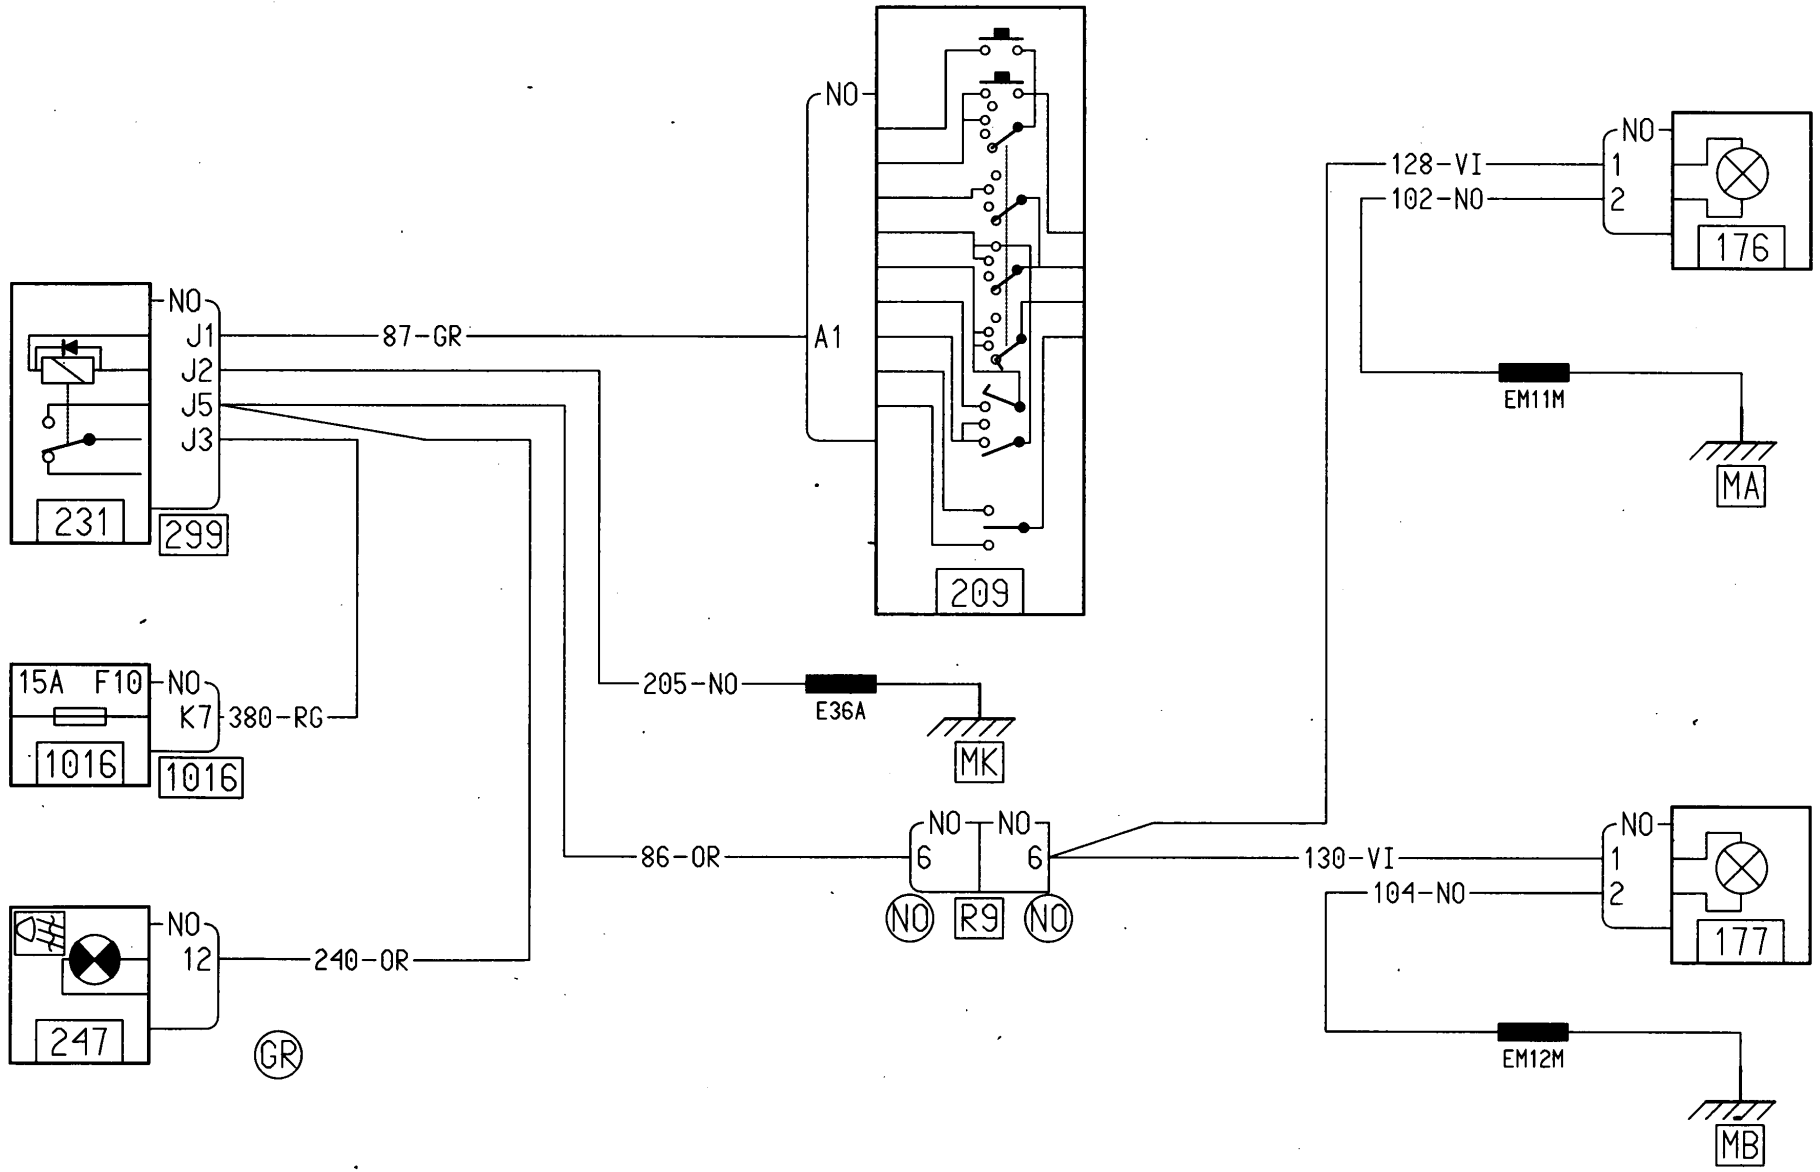

DIPPED BEAM HEADLIGHTS AND MAIN BEAM HEADLIGHTS

(E2/RUNLI/PROJDO),(B64/E2/REGSIT/RUNLI/PROJDO)

X64
00

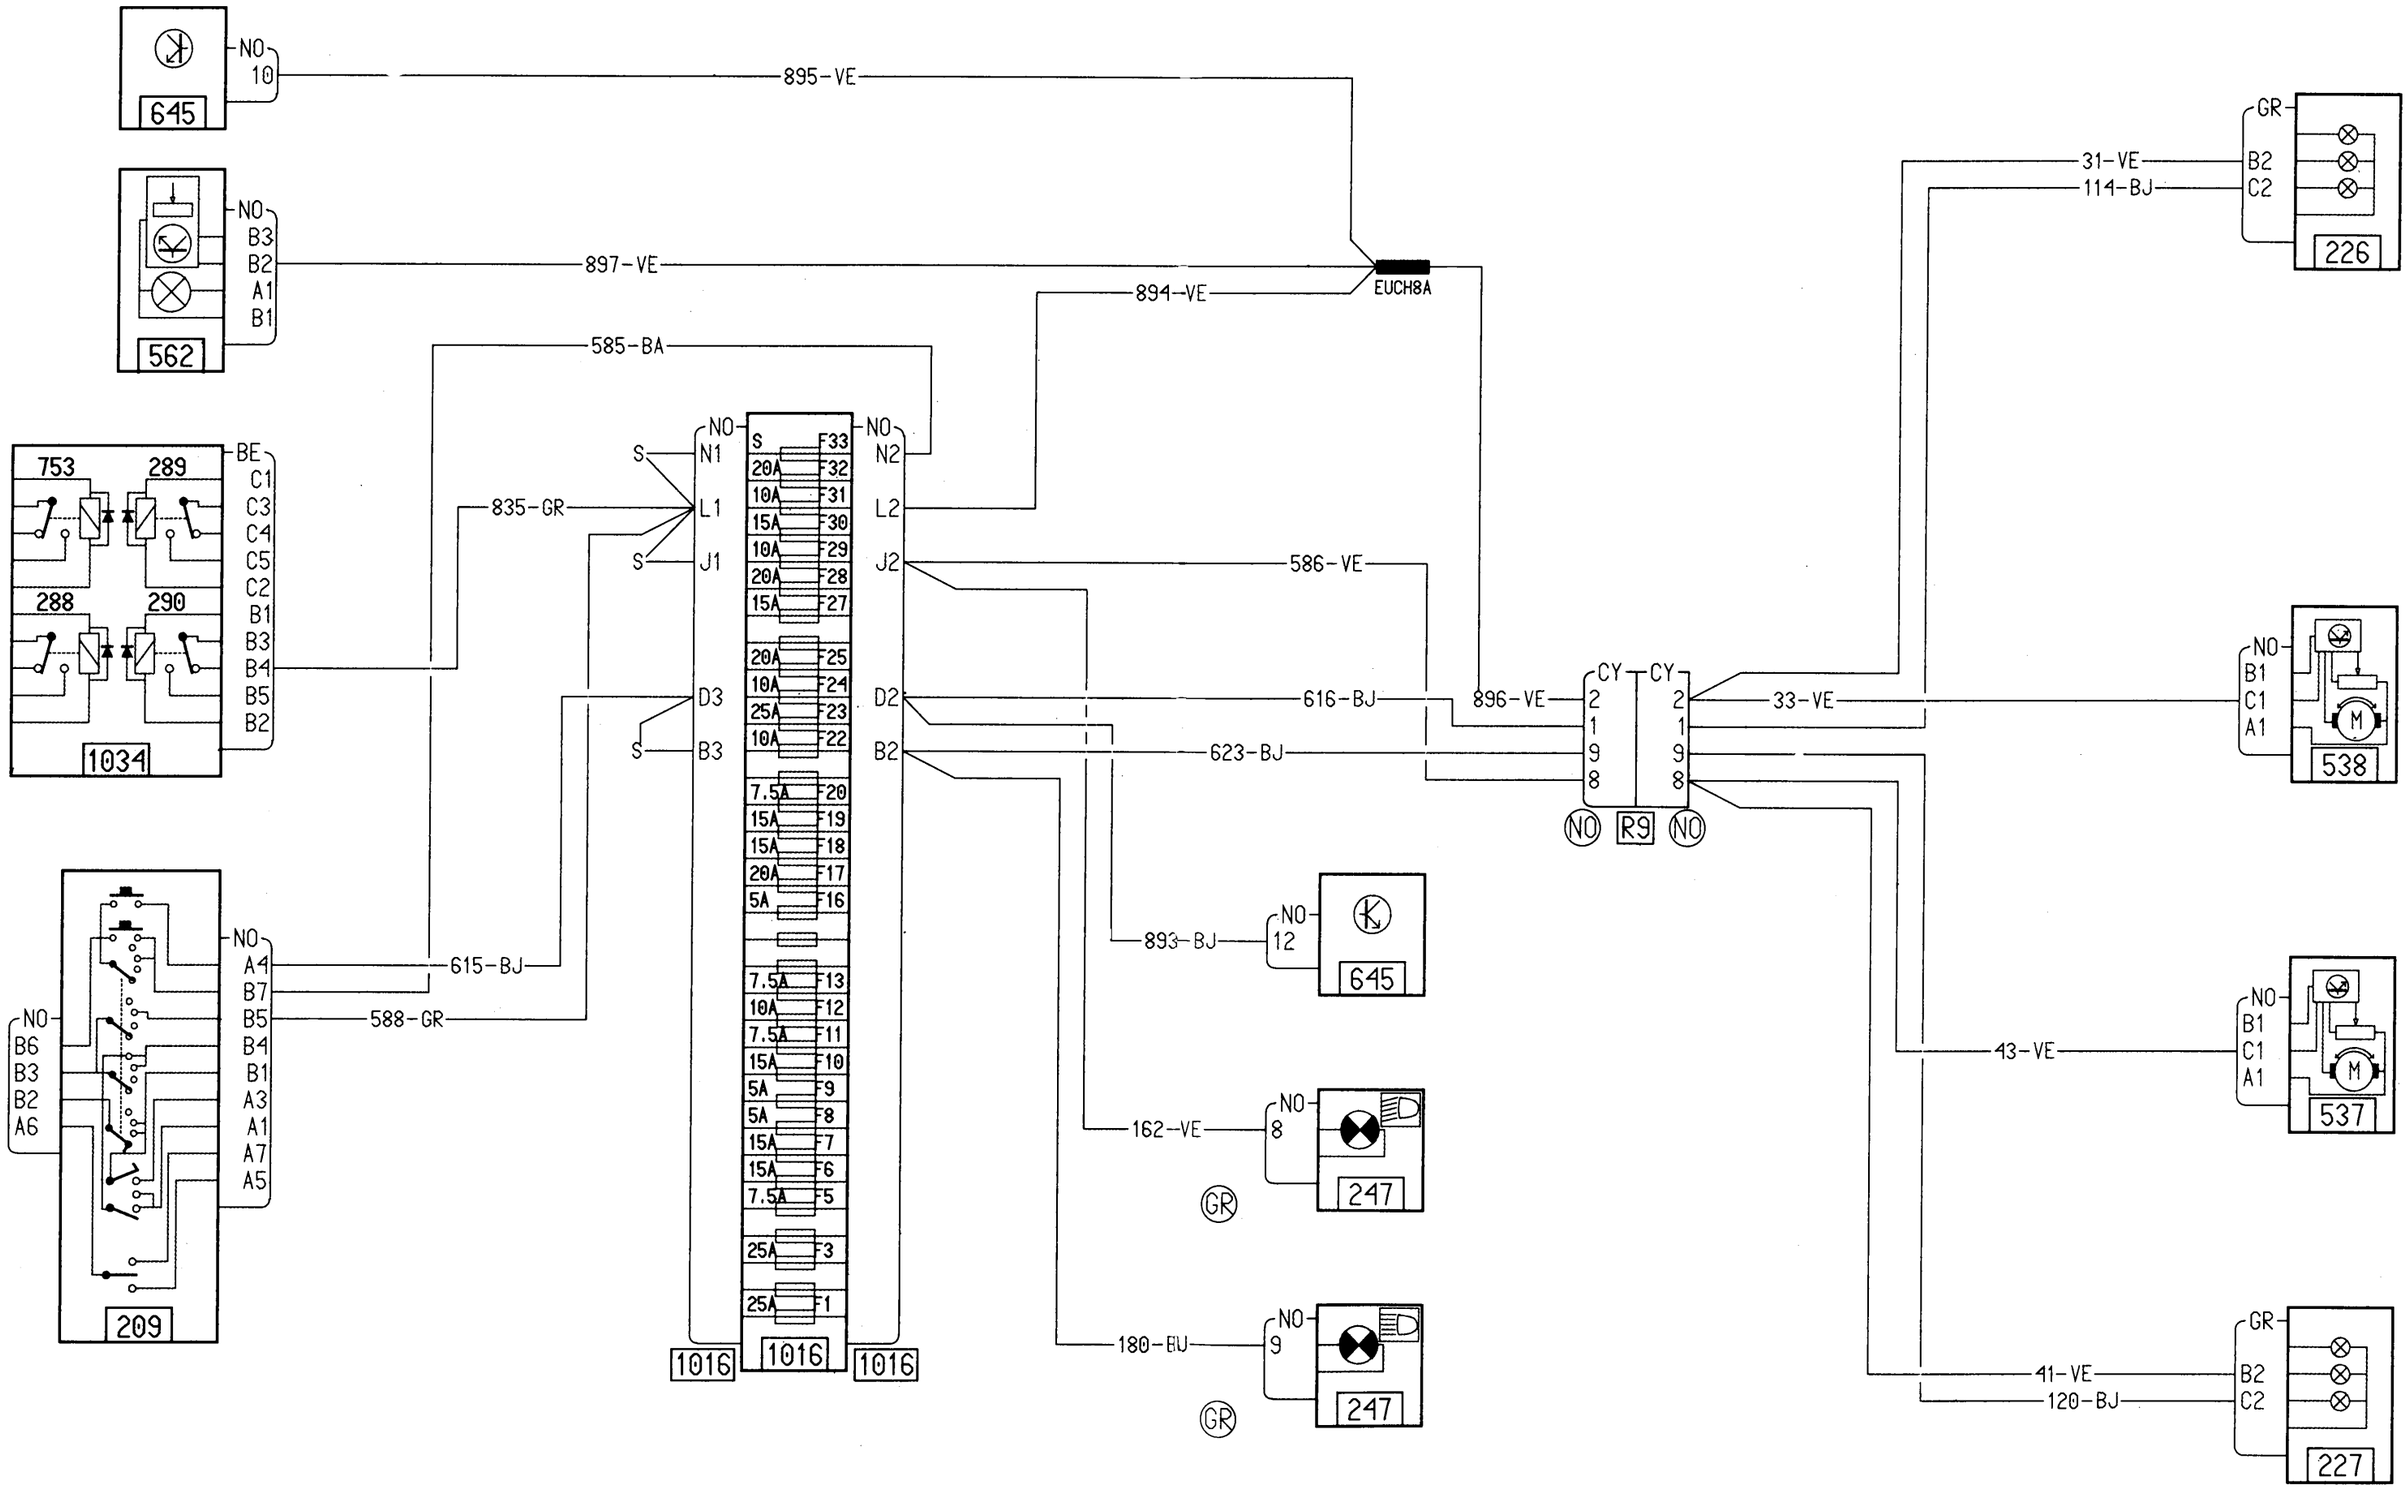

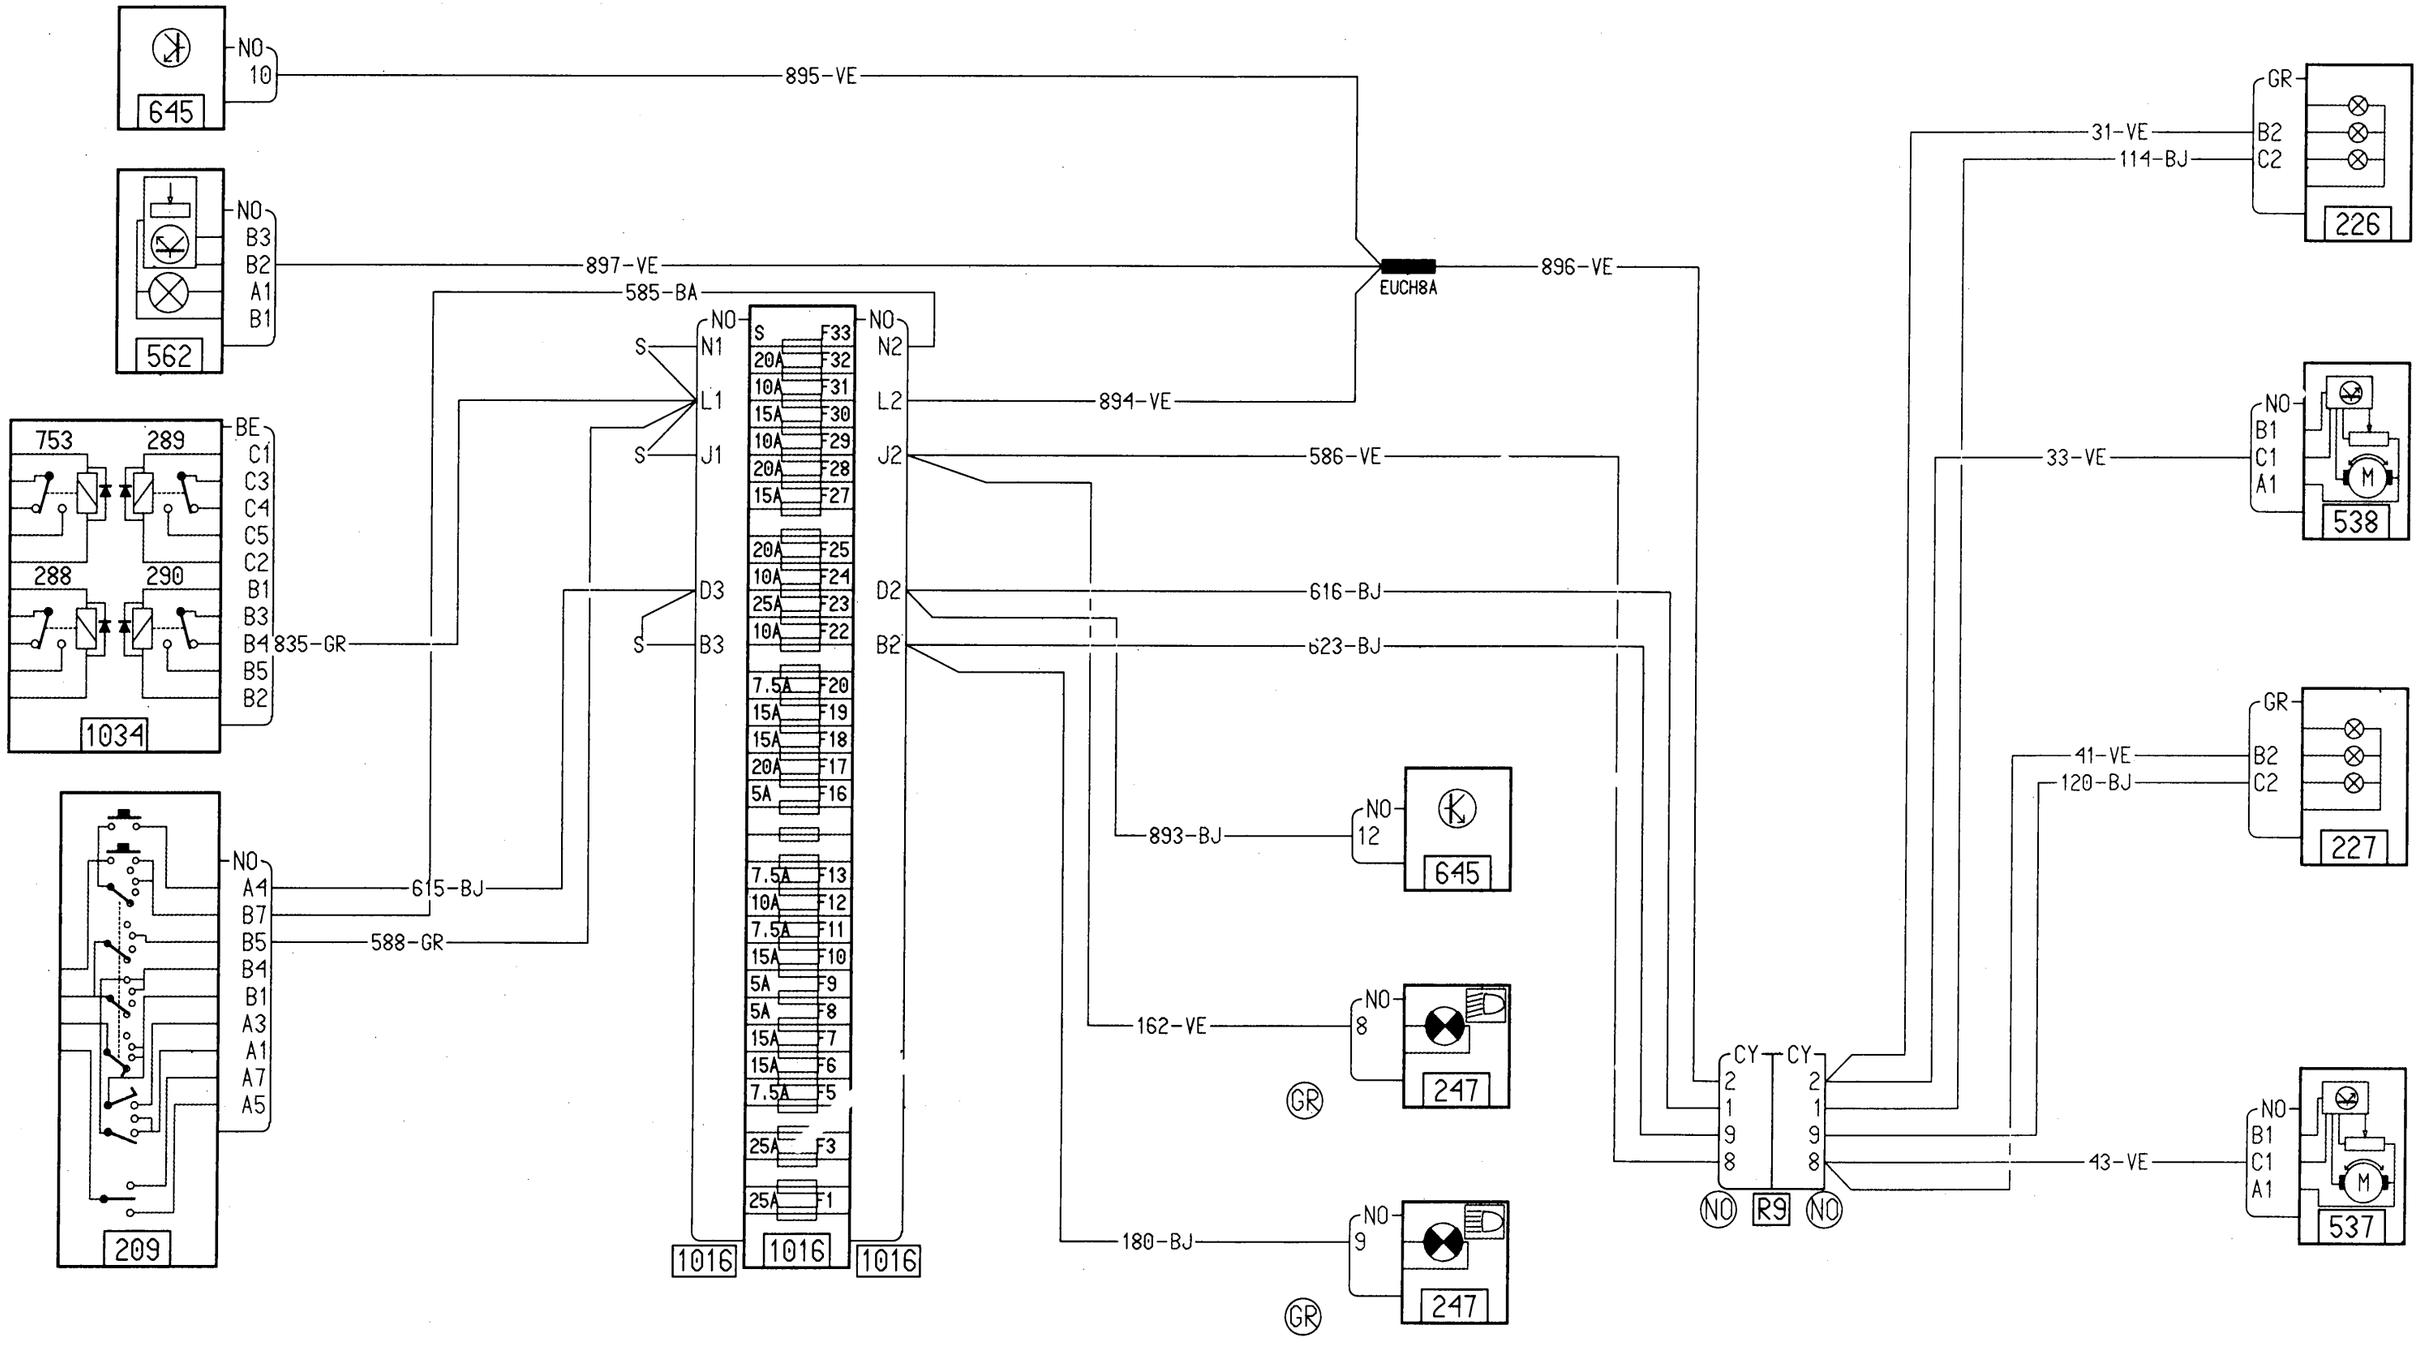
645
NO
10
895-VE
562
NO
B3
B2
A1
B1
897-VE
585-BA
EUCH8A
896-VE
753
289
288
290
1034
BE
C1
C3
C4
C5
C2
B1
B3
B4
B5
B2
835-GR
209
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
615-BJ
588-GR
1016
S
N1
L1
J1
D3
B3
NO
S
F33
F32
F31
F30
F29
F28
F27
F25
F24
F23
F22
F20
F19
F18
F17
F16
F13
F12
F11
F10
F9
F8
F7
F6
F5
F3
F1
20A
10A
15A
25A
7.5A
5A
N2
L2
J2
D2
B2
894-VE
586-VE
616-BJ
623-BJ
893-BJ
NO
12
645
162-VE
NO
8
247
GR
180-BJ
NO
9
247
GR
31-VE
114-BJ
GR
B2
C2
226
33-VE
NO
B1
C1
A1
M
538
41-VE
120-BJ
GR
B2
C2
227
CY
CY
2
1
9
8
NO
R9
NO
43-VE
NO
B1
C1
A1
M
537

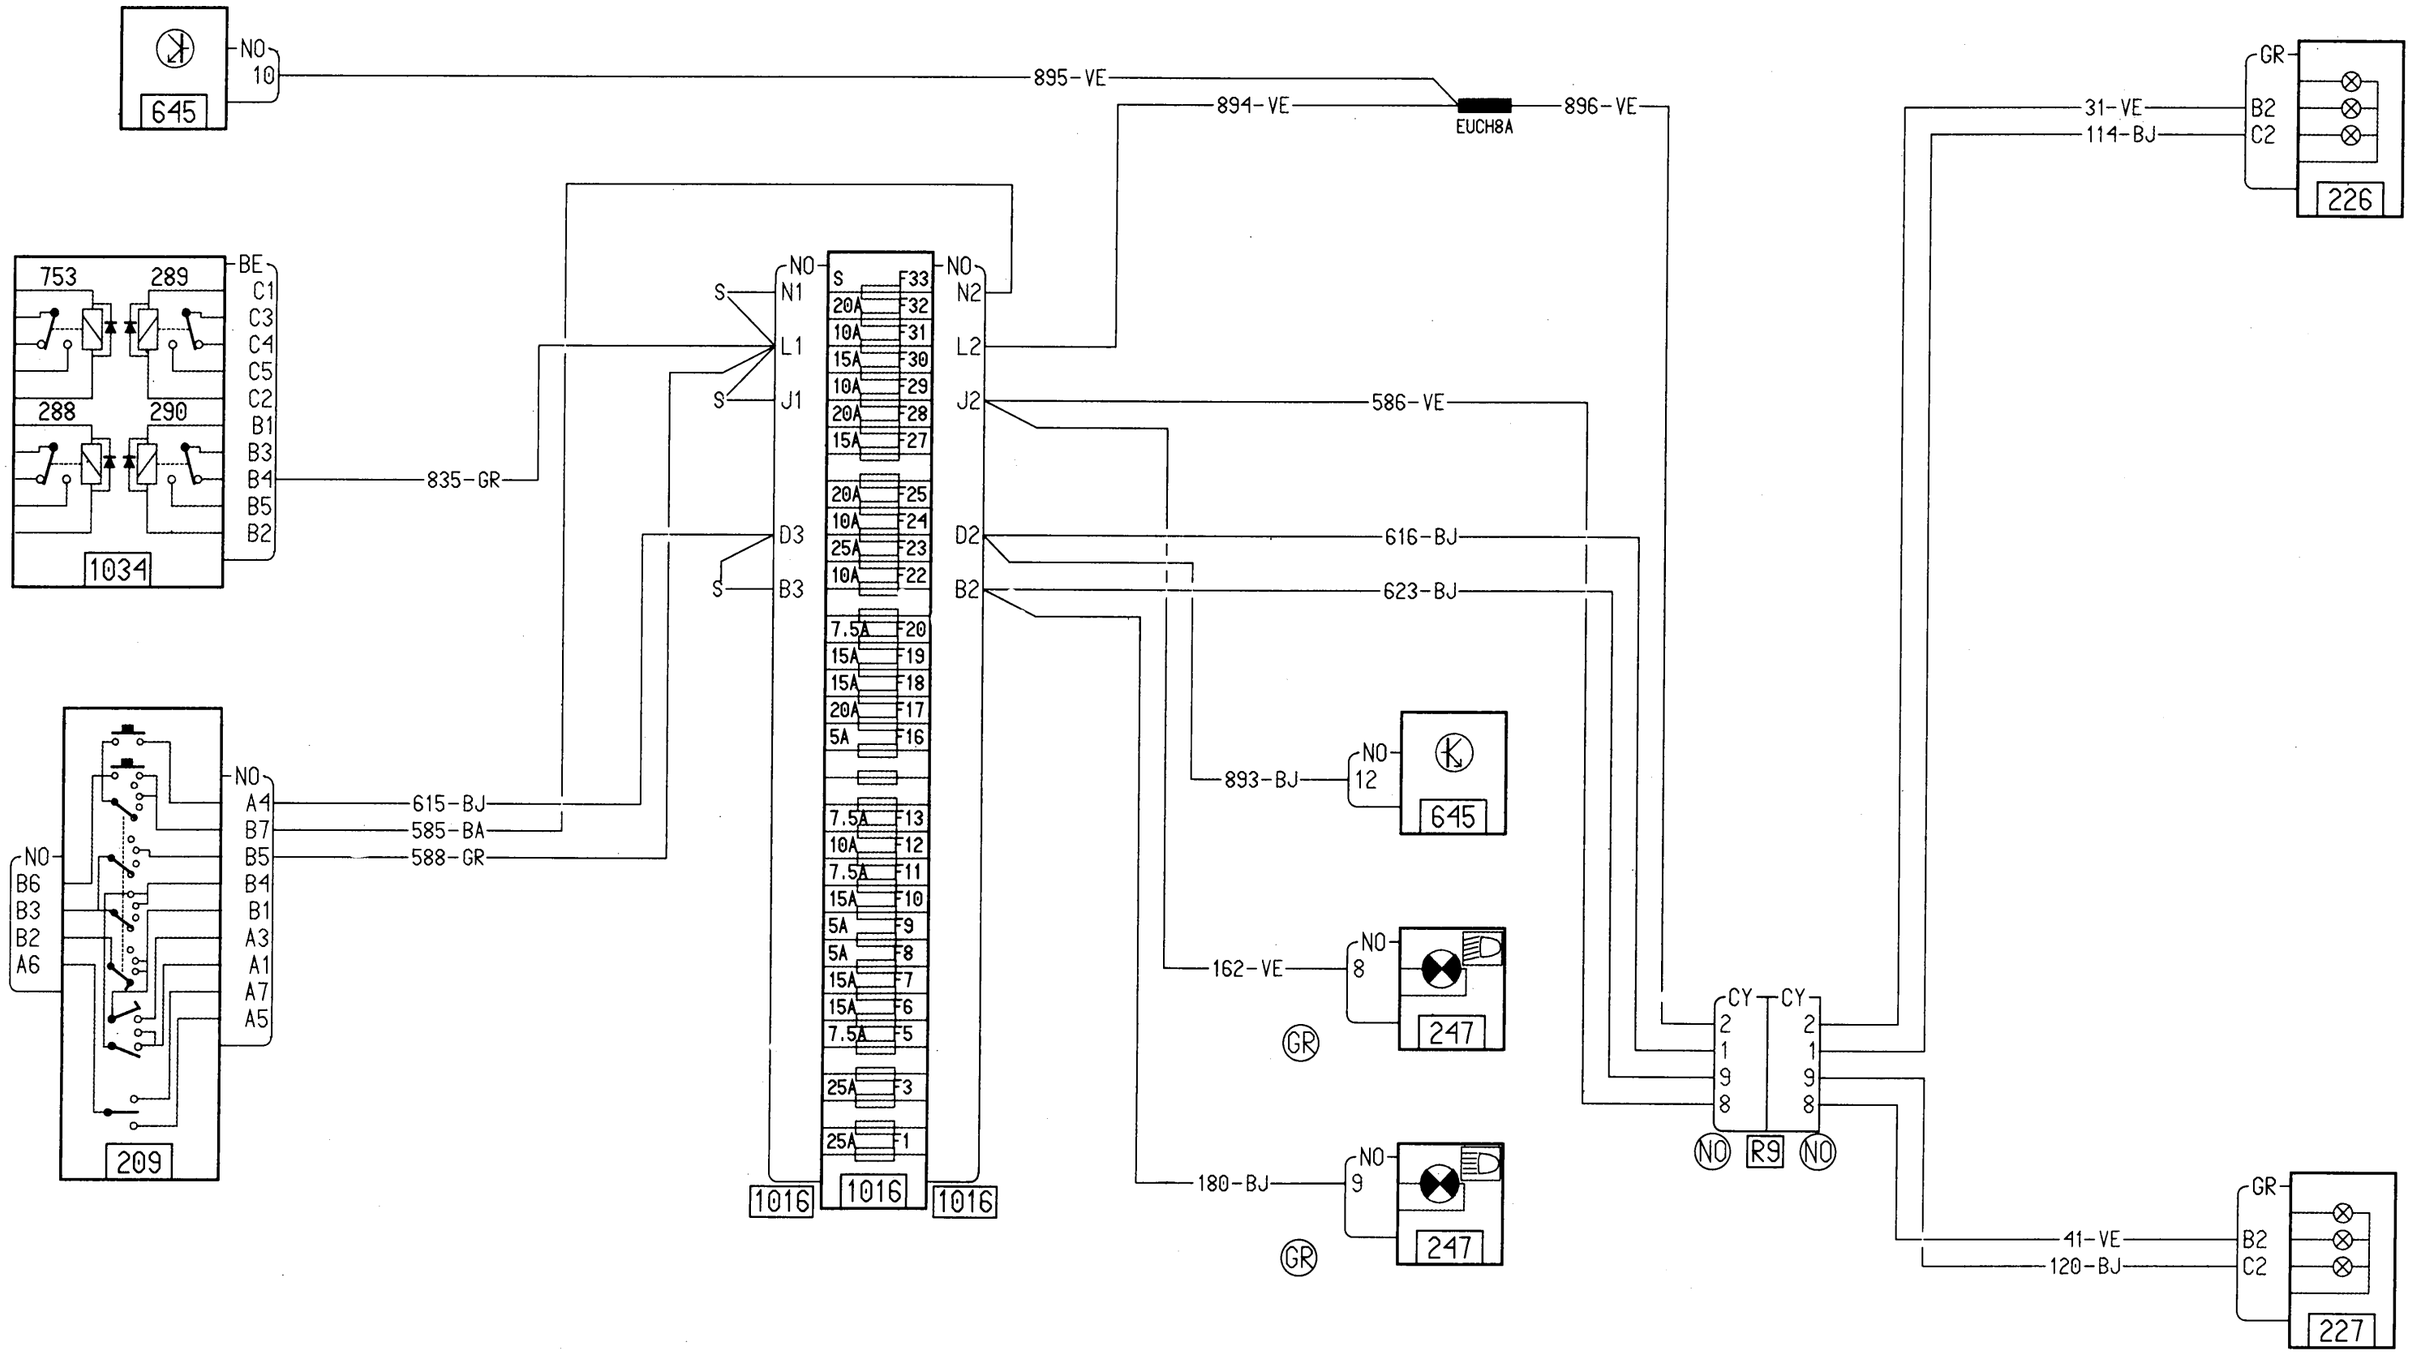
645
NO
10
895-VE
894-VE
EUCH8A
896-VE
753
289
288
290
1034
BE
C1
C3
C4
C5
C2
B1
B3
B4
B5
B2
835-GR
NO
S
N1
L1
J1
D3
B3
NO
N2
L2
J2
D2
B2
F33
F32
F31
F30
F29
F28
F27
F25
F24
F23
F22
F20
F19
F18
F17
F16
F13
F12
F11
F10
F9
F8
F7
F6
F5
F3
F1
20A
10A
15A
25A
7.5A
5A
1016
586-VE
616-BJ
623-BJ
615-BJ
585-BA
588-GR
209
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
B6
B3
B2
A6
893-BJ
12
162-VE
8
180-BJ
9
247
GR
CY
2
1
9
8
R9
31-VE
114-BJ
226
41-VE
120-BJ
227
C2

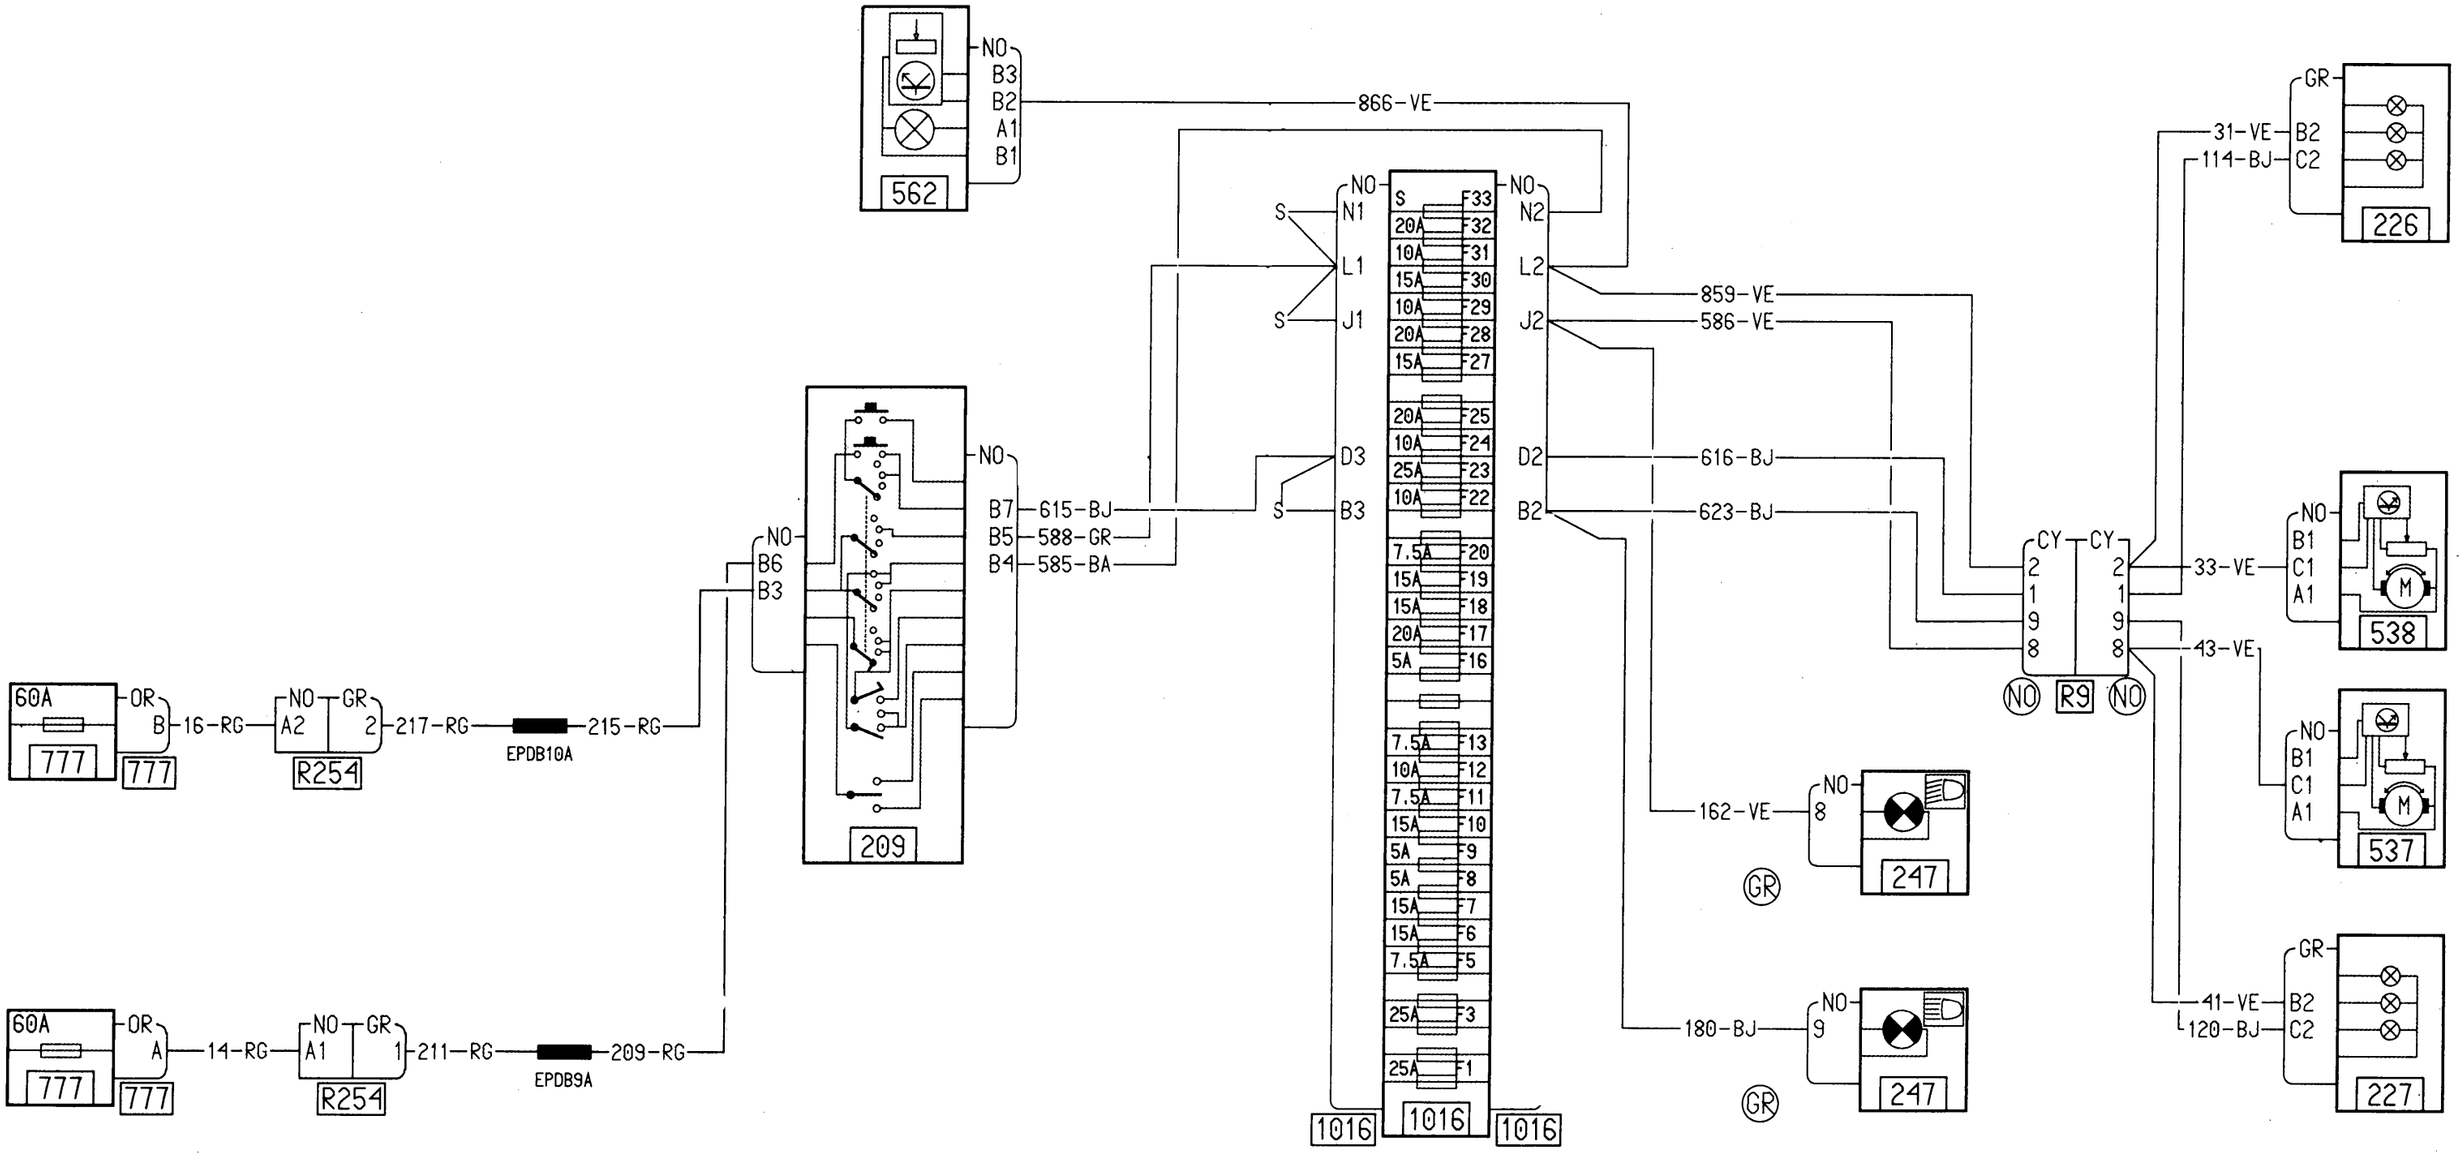
562
NO
B3
B2
A1
B1
866-VE
NO
S
N1
L1
S
J1
NO
S
F33
20A F32
10A F31
15A F30
10A F29
20A F28
15A F27
20A F25
10A F24
25A F23
10A F22
7.5A F20
15A F19
15A F18
20A F17
5A F16
7.5A F13
10A F12
7.5A F11
15A F10
5A F9
5A F8
15A F7
15A F6
7.5A F5
25A F3
25A F1
NO
N2
L2
J2
D2
B2
859-VE
586-VE
616-BJ
623-BJ
NO
B7
B5
B4
615-BJ
588-GR
585-BA
D3
S
B3
209
NO
B6
B3
60A
OR
B
16-RG
NO
A2
GR
2
217-RG
215-RG
EPDB10A
777
777
R254
60A
OR
A
14-RG
NO
A1
GR
1
211-RG
209-RG
EPDB9A
777
777
R254
1016
1016
1016
GR
31-VE
114-BJ
B2
C2
226
CY
CY
2
1
9
8
33-VE
43-VE
NO
R9
NO
NO
B1
C1
A1
M
538
537
NO
B1
C1
A1
M
GR
41-VE
120-BJ
B2
C2
227
162-VE
NO
8
247
GR
180-BJ
NO
9
247
GR

DIPPED BEAM HEADLIGHTS AND MAIN BEAM HEADLIGHTS

E64/E2/REGSIT/RUNLI/PROJDO

X64
00

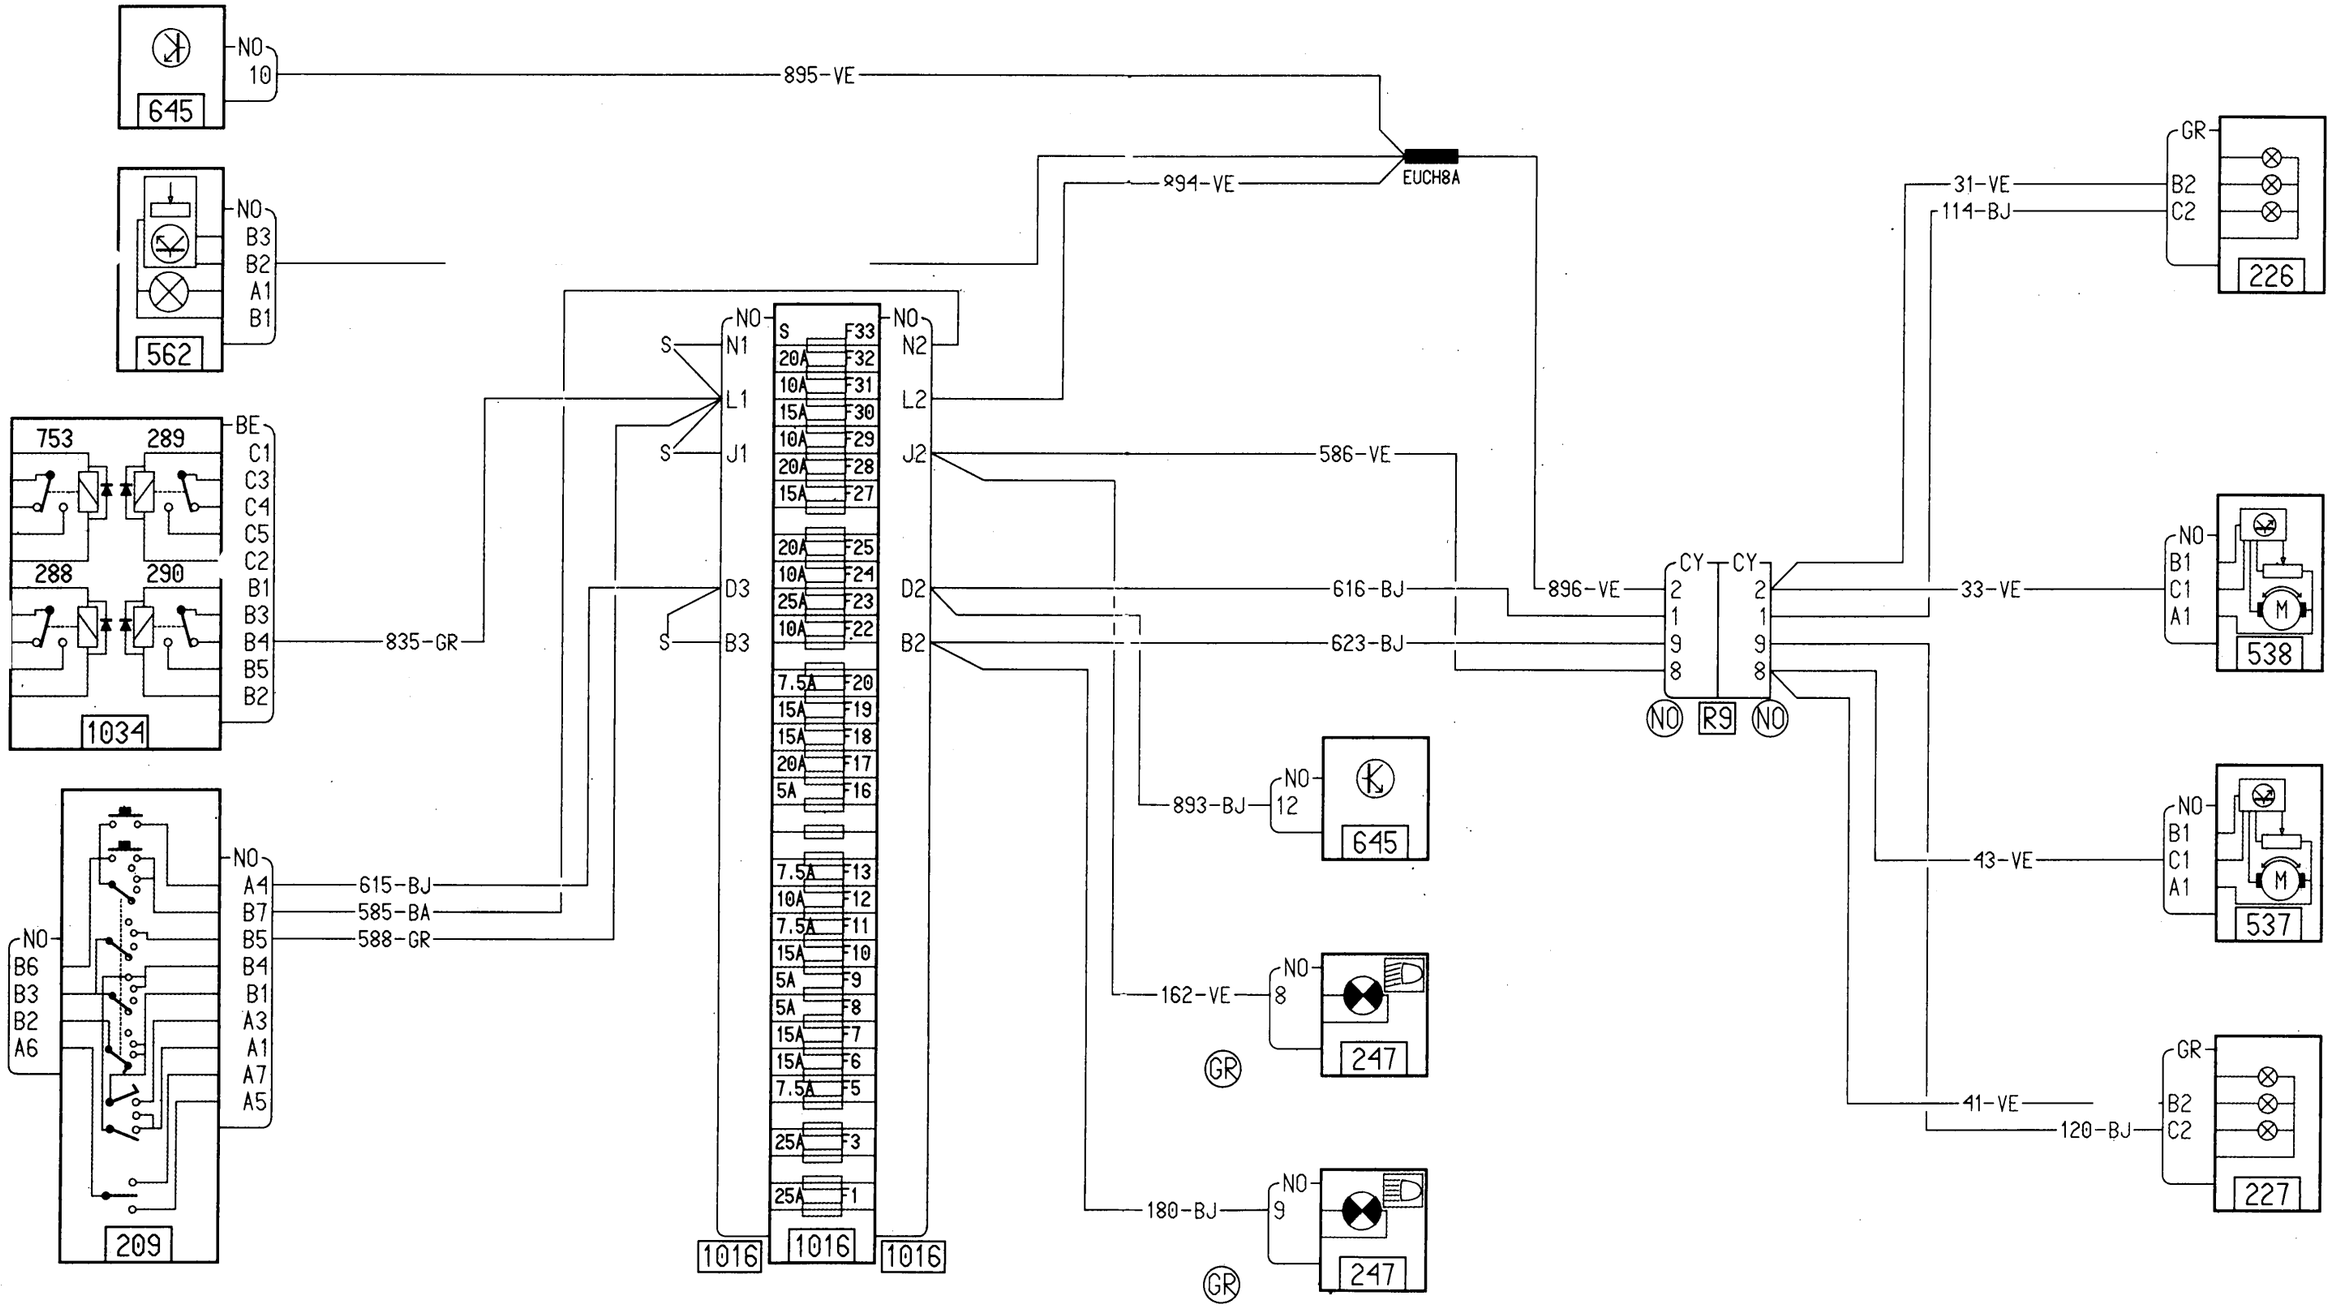

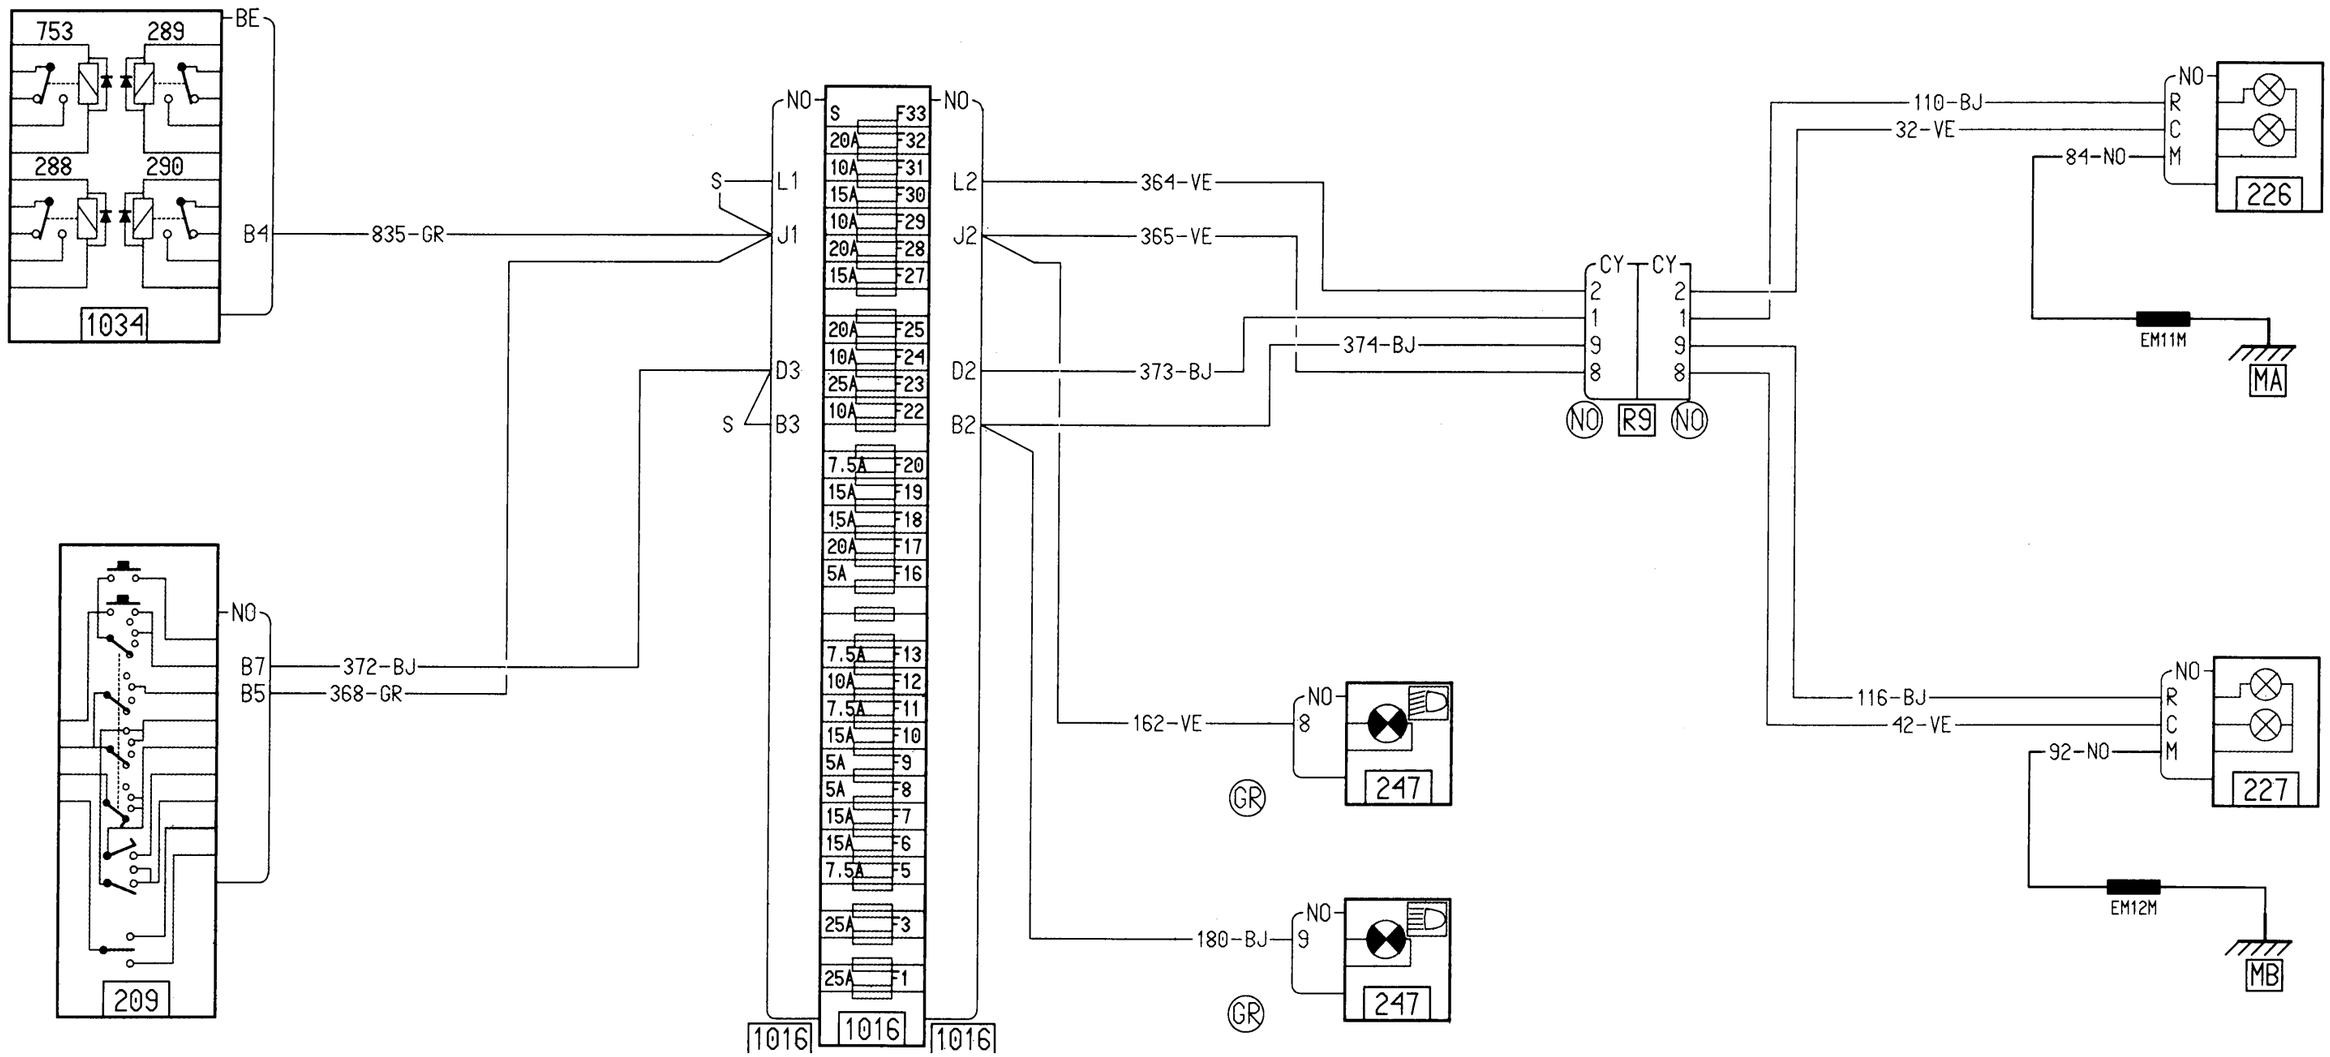
753
289
288
290
BE
B4
1034
835-GR
209
NO
B7
B5
372-BJ
368-GR
S
L1
J1
D3
B3
NO
S
F33
20A F32
10A F31
15A F30
10A F29
20A F28
15A F27
20A F25
10A F24
25A F23
10A F22
7.5A F20
15A F19
15A F18
20A F17
5A F16
7.5A F13
10A F12
7.5A F11
15A F10
5A F9
5A F8
15A F7
15A F6
7.5A F5
25A F3
25A F1
1016
1016
1016
NO
L2
J2
D2
B2
364-VE
365-VE
373-BJ
374-BJ
CY
CY
2
1
9
8
NO
R9
NO
162-VE
NO
8
247
GR
180-BJ
NO
9
247
GR
110-BJ
32-VE
84-NO
NO
R
C
M
226
EM11M
MA
116-BJ
42-VE
92-NO
NO
R
C
M
227
EM12M
MB

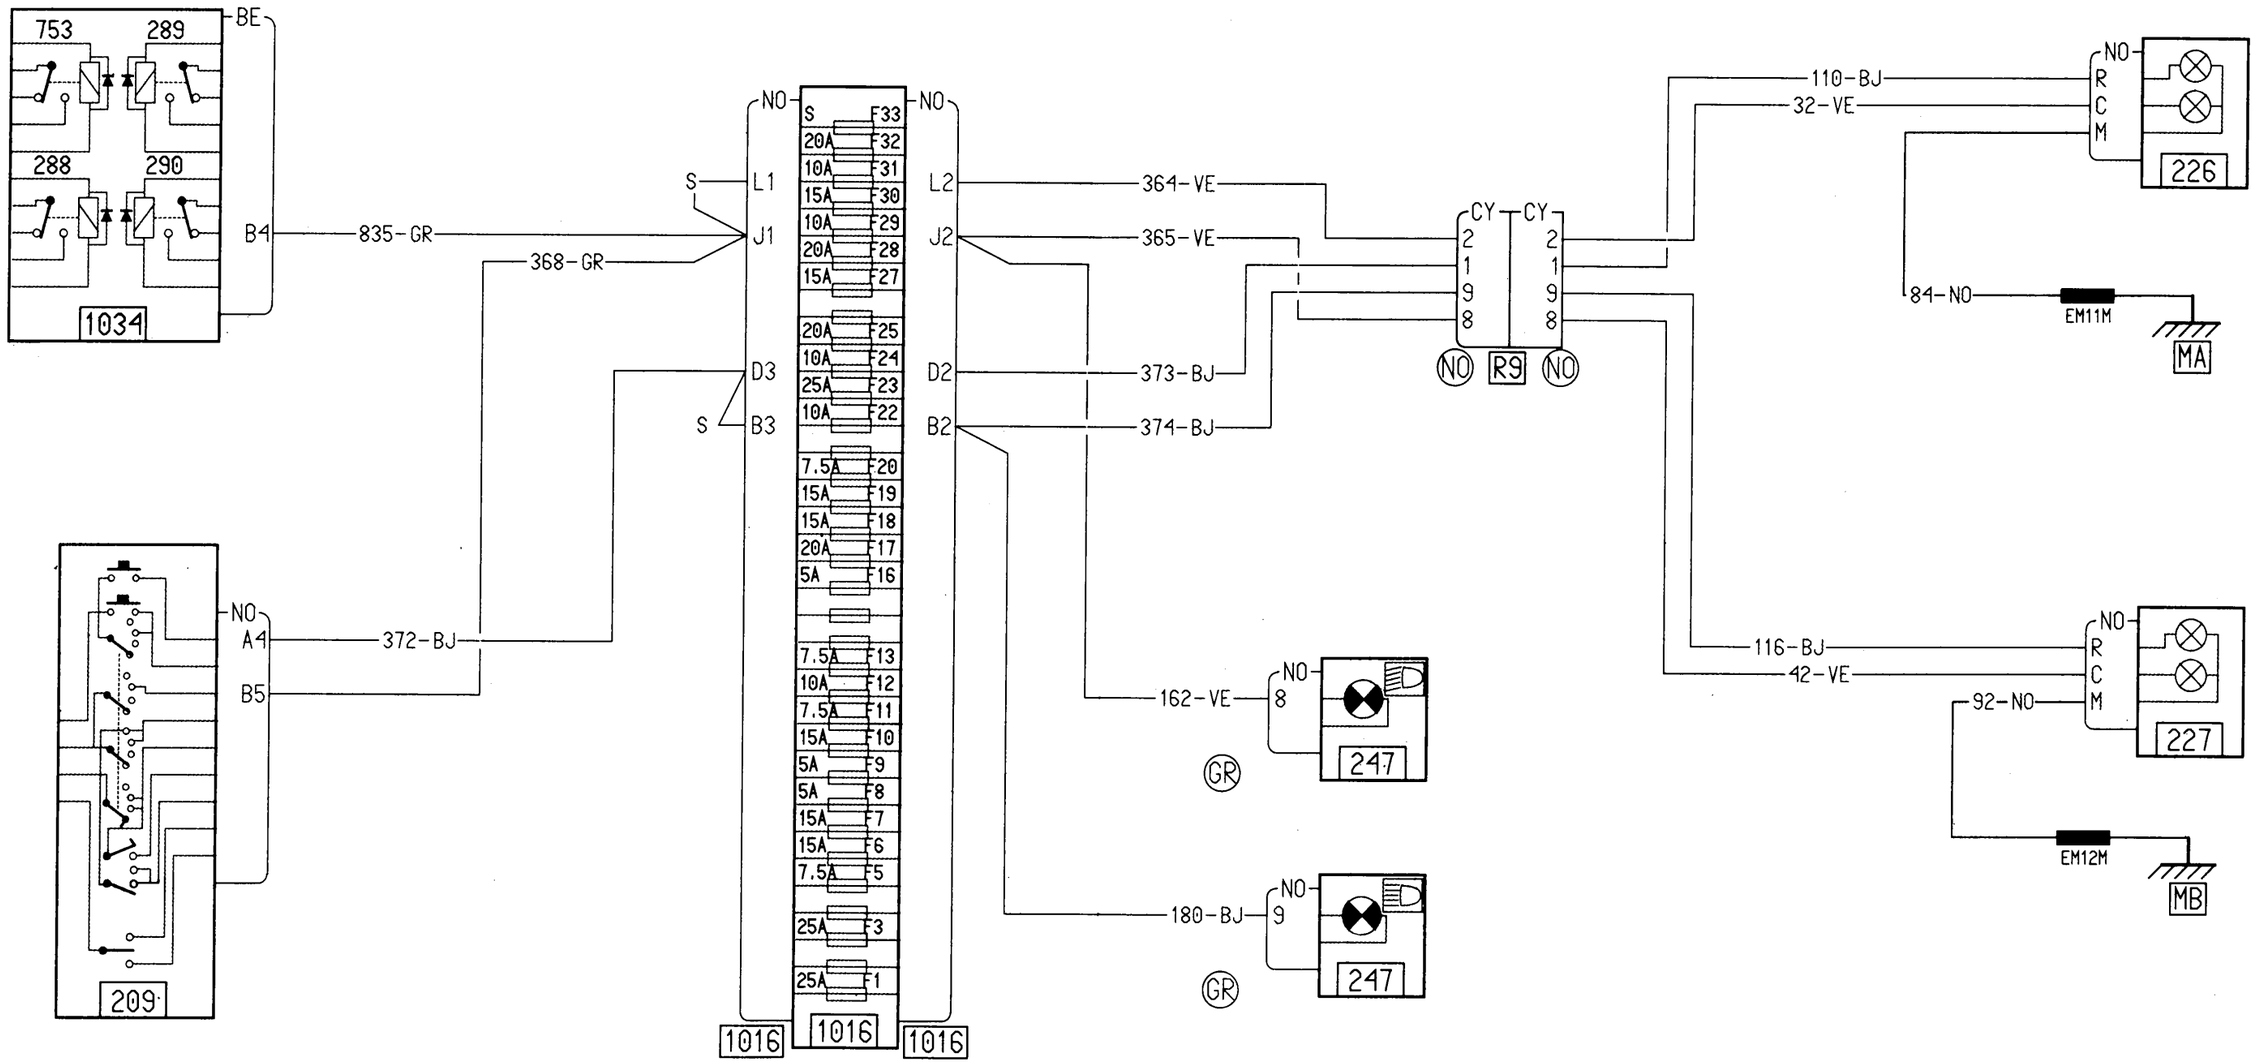
753
289
288
290
1034
BE
B4
835-GR
368-GR
209
NO
A4
372-BJ
B5
1016
S
L1
J1
D3
S
B3
NO
S
F33
20A F32
10A F31
15A F30
10A F29
20A F28
15A F27
20A F25
10A F24
25A F23
10A F22
7.5A F20
15A F19
15A F18
20A F17
5A F16
7.5A F13
10A F12
7.5A F11
15A F10
5A F9
5A F8
15A F7
15A F6
7.5A F5
25A F3
25A F1
NO
L2
J2
D2
B2
364-VE
365-VE
373-BJ
374-BJ
CY
CY
2
1
9
8
NO
R9
NO
110-BJ
32-VE
NO
R
C
M
226
84-NO
EM11M
MA
162-VE
NO
8
247
GR
180-BJ
NO
9
247
GR
116-BJ
42-VE
NO
R
C
M
227
92-NO
EM12M
MB

DAYTIME DRIVING LIGHTS

(E2/DG/PROJAB/RUNLI),(K25/E2/DG/PROJAB/RUNLI),(E2/DG/PROJAB/RUNLI)

X64
00

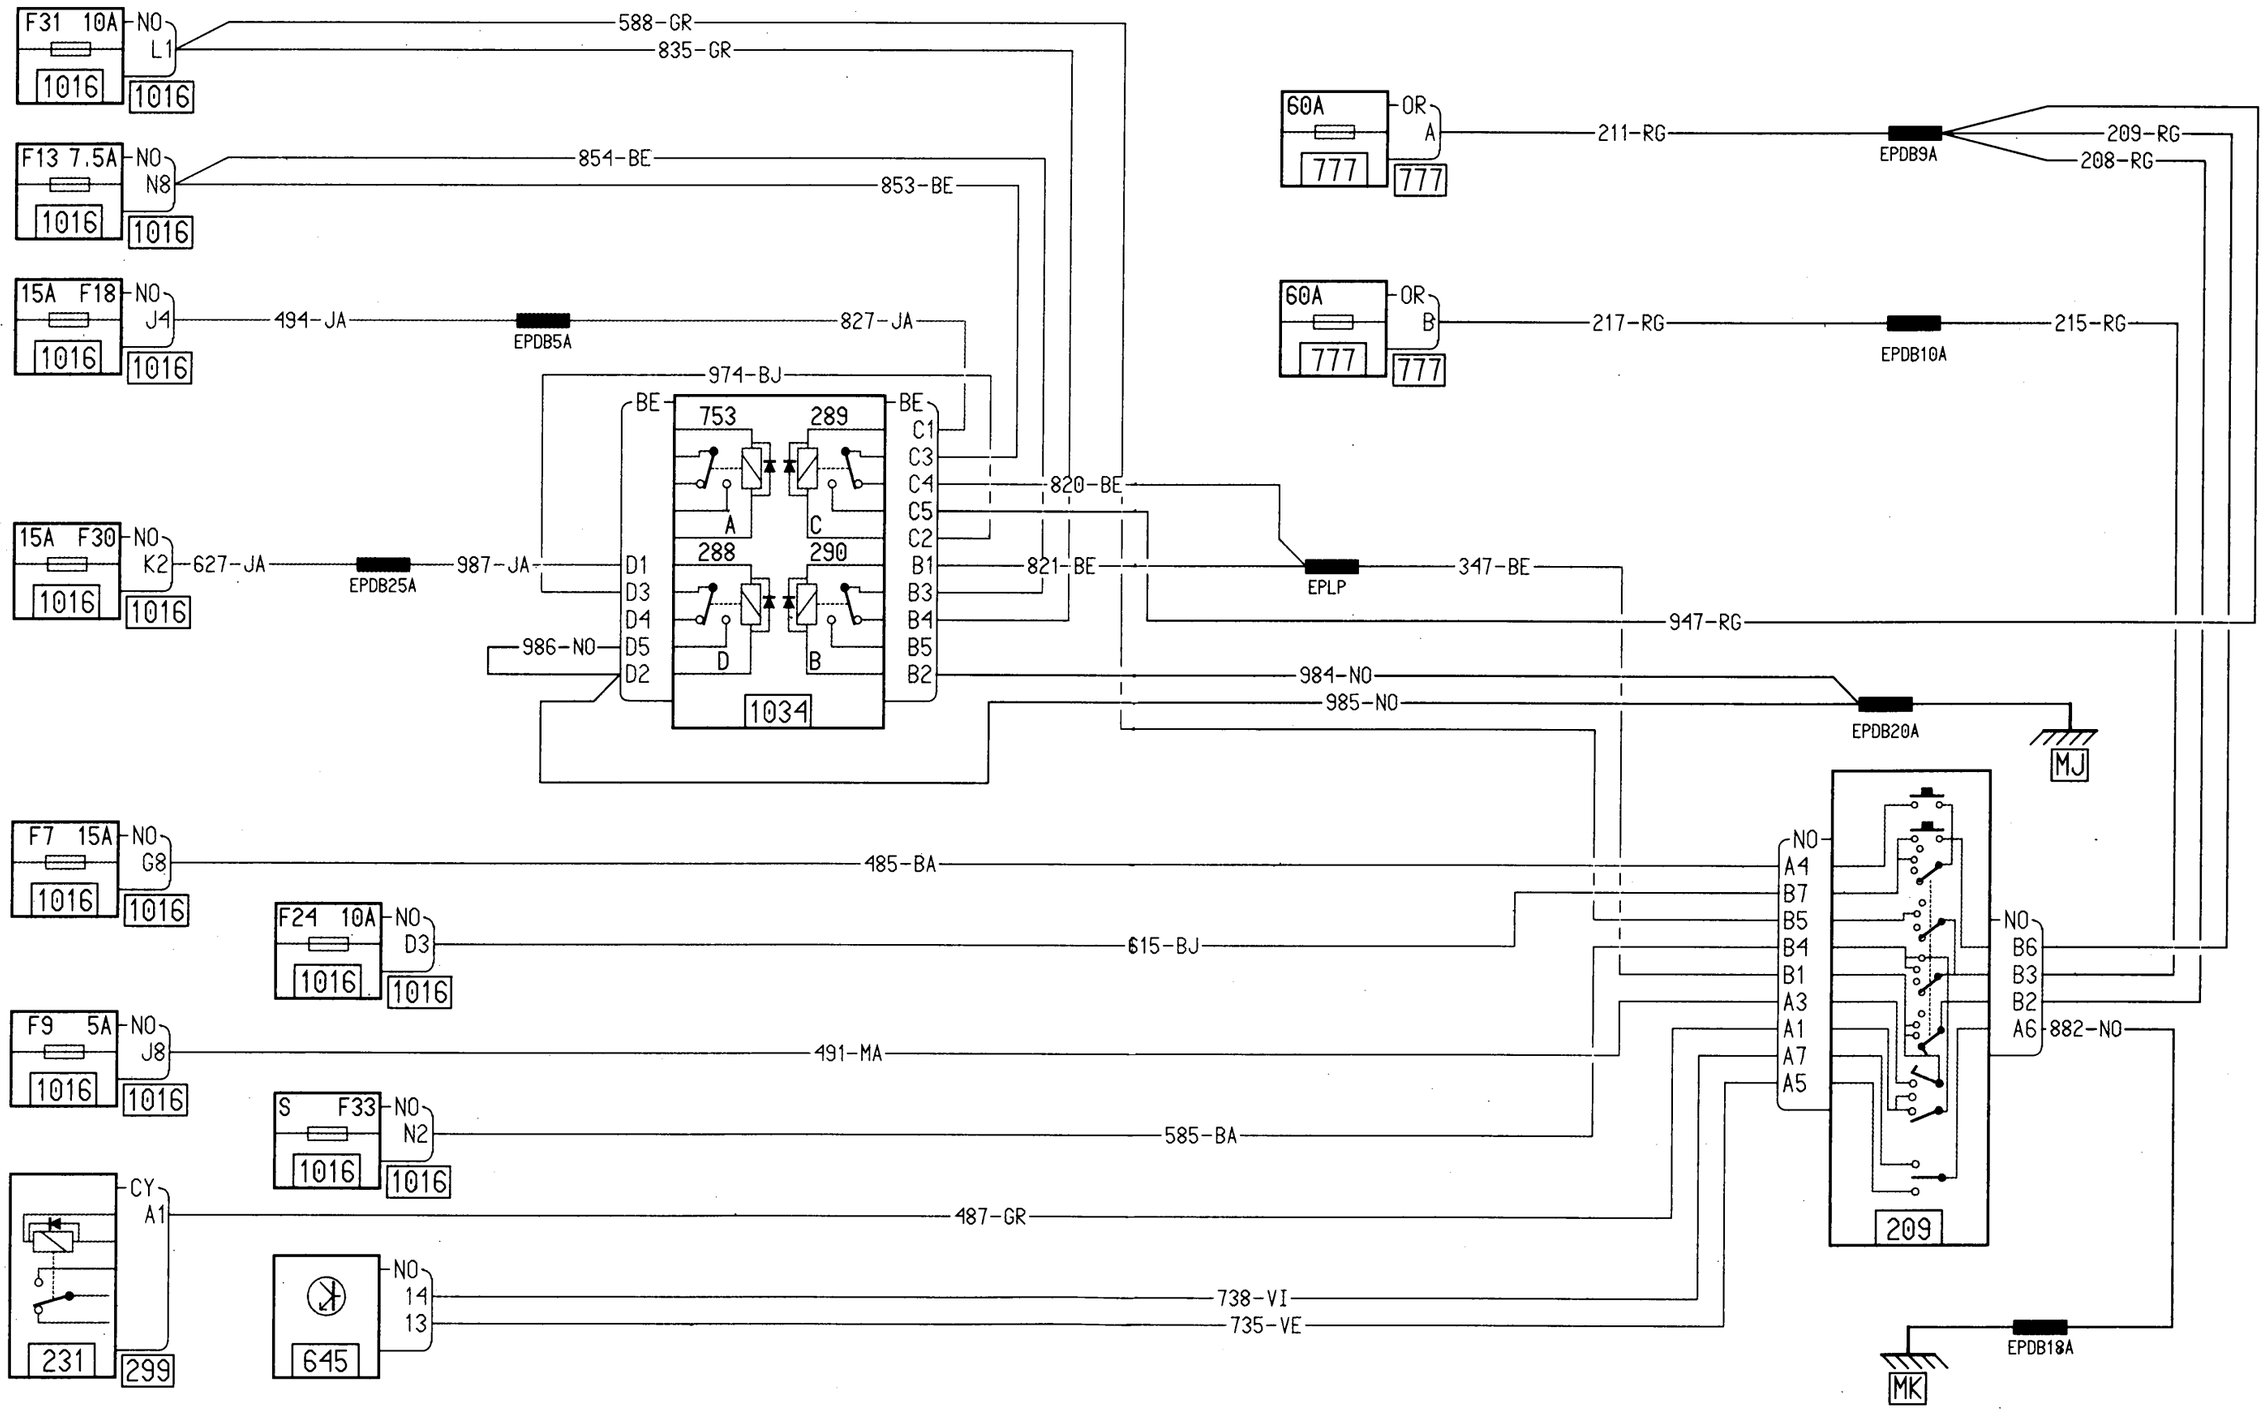

DAYTIME DRIVING LIGHTS

E64/E2/DG/PROJAB/RUNLI

X64
00

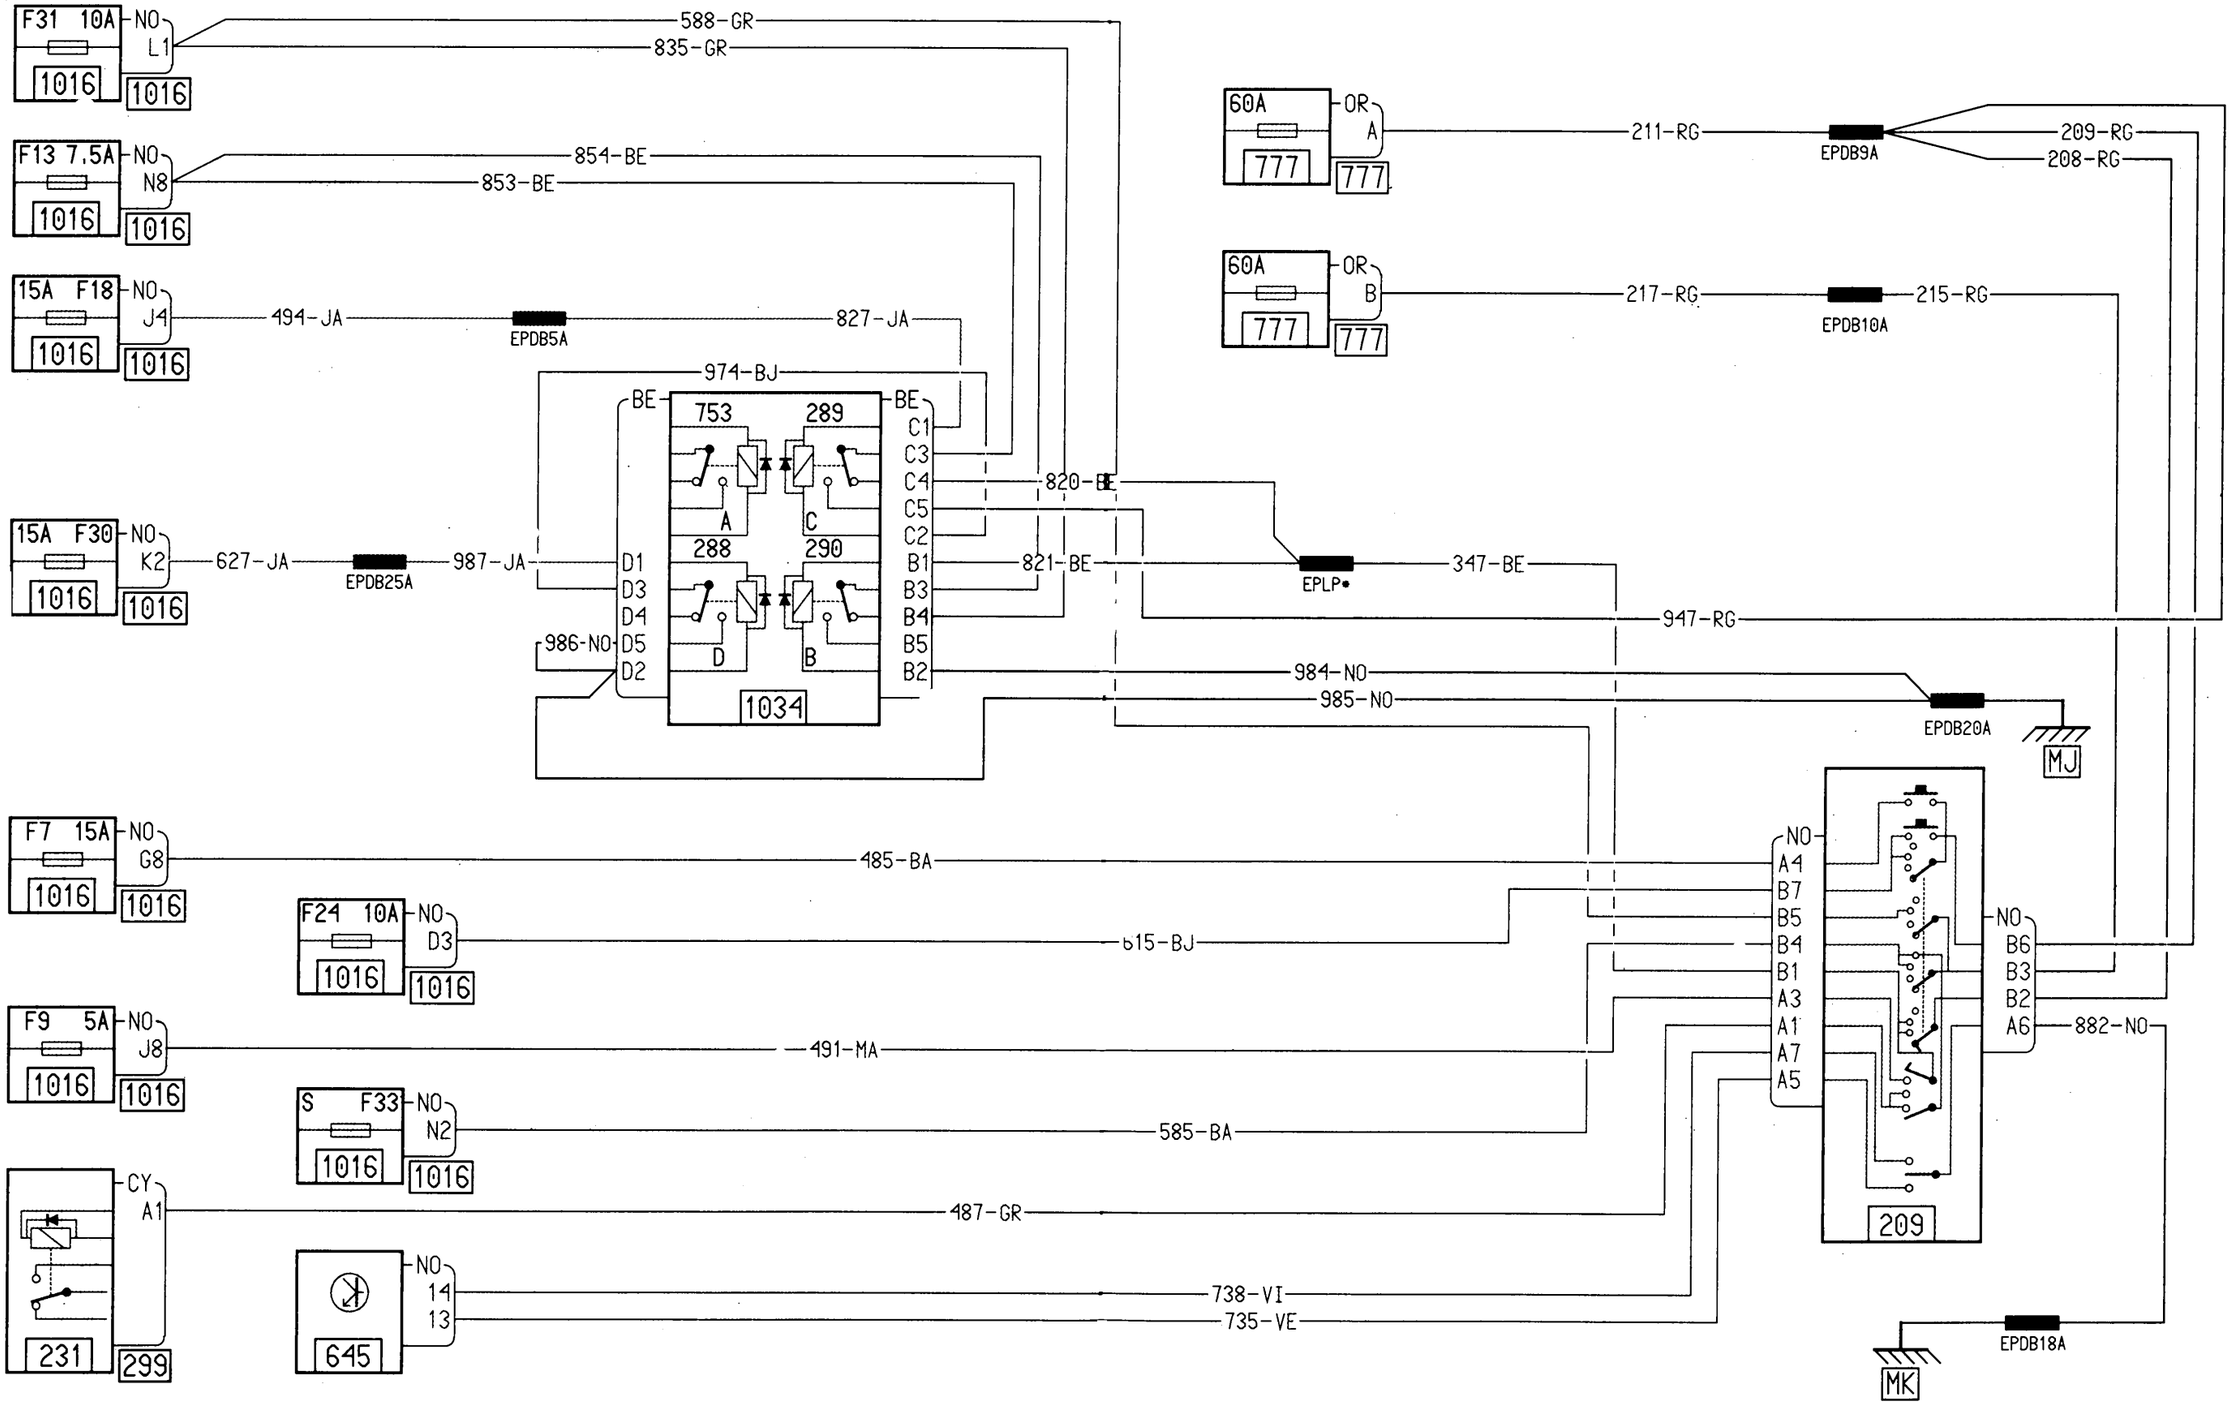

DAYTIME DRIVING LIGHTS

S64/E1/DG/RUNLI/VHECOL

X64
00

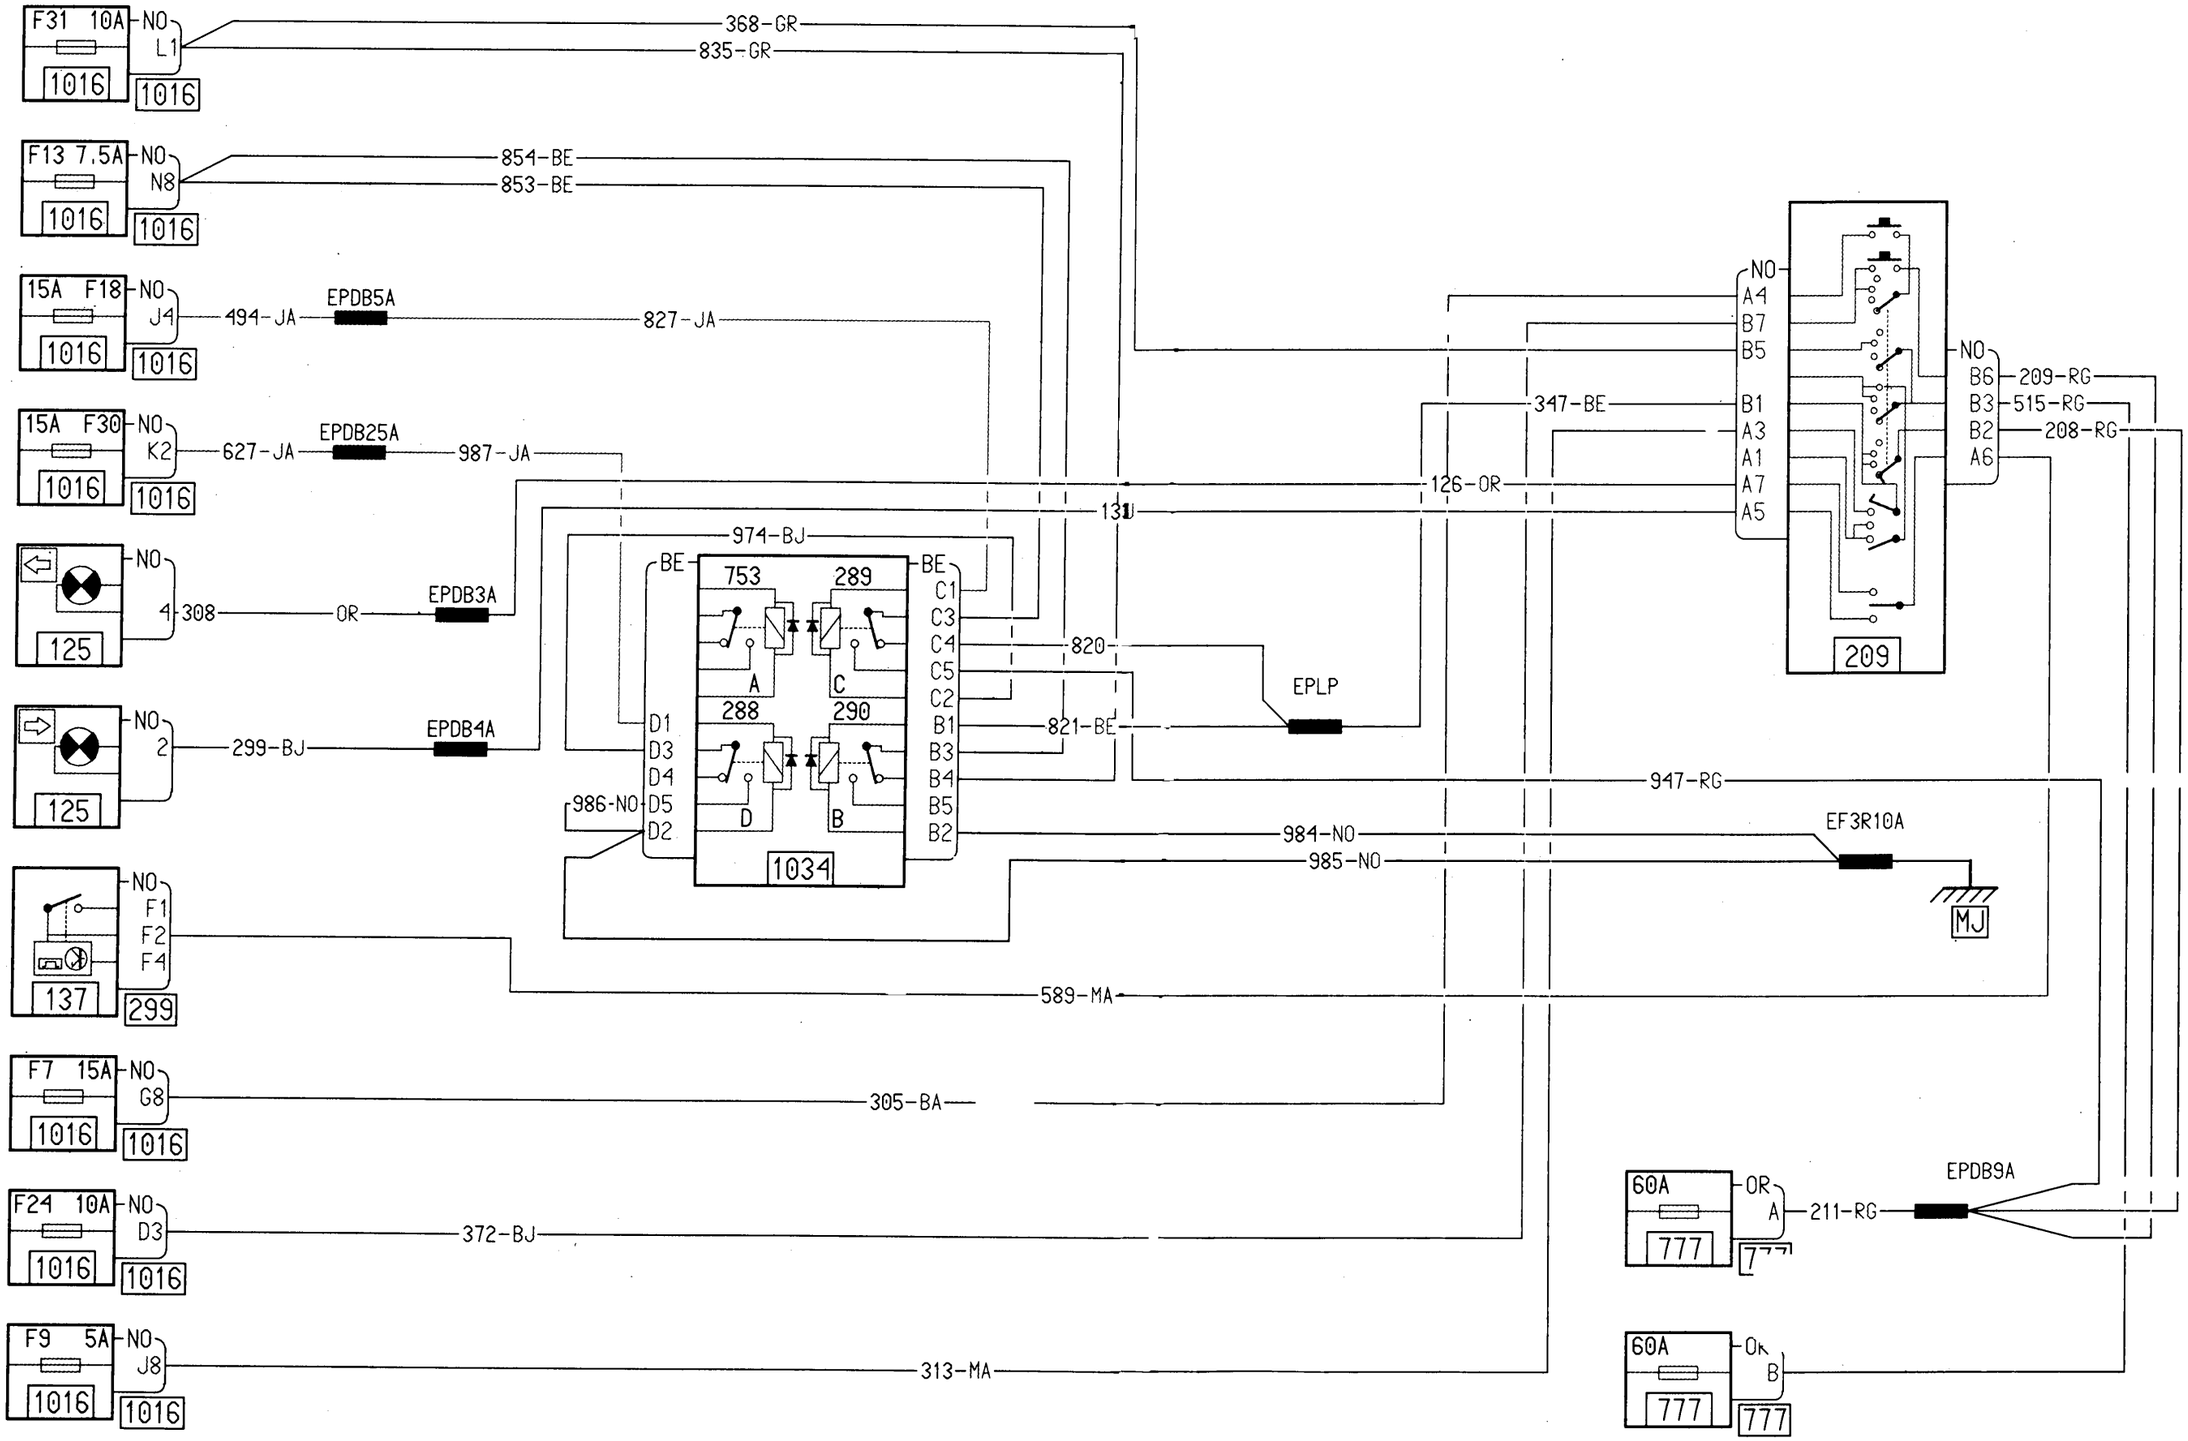

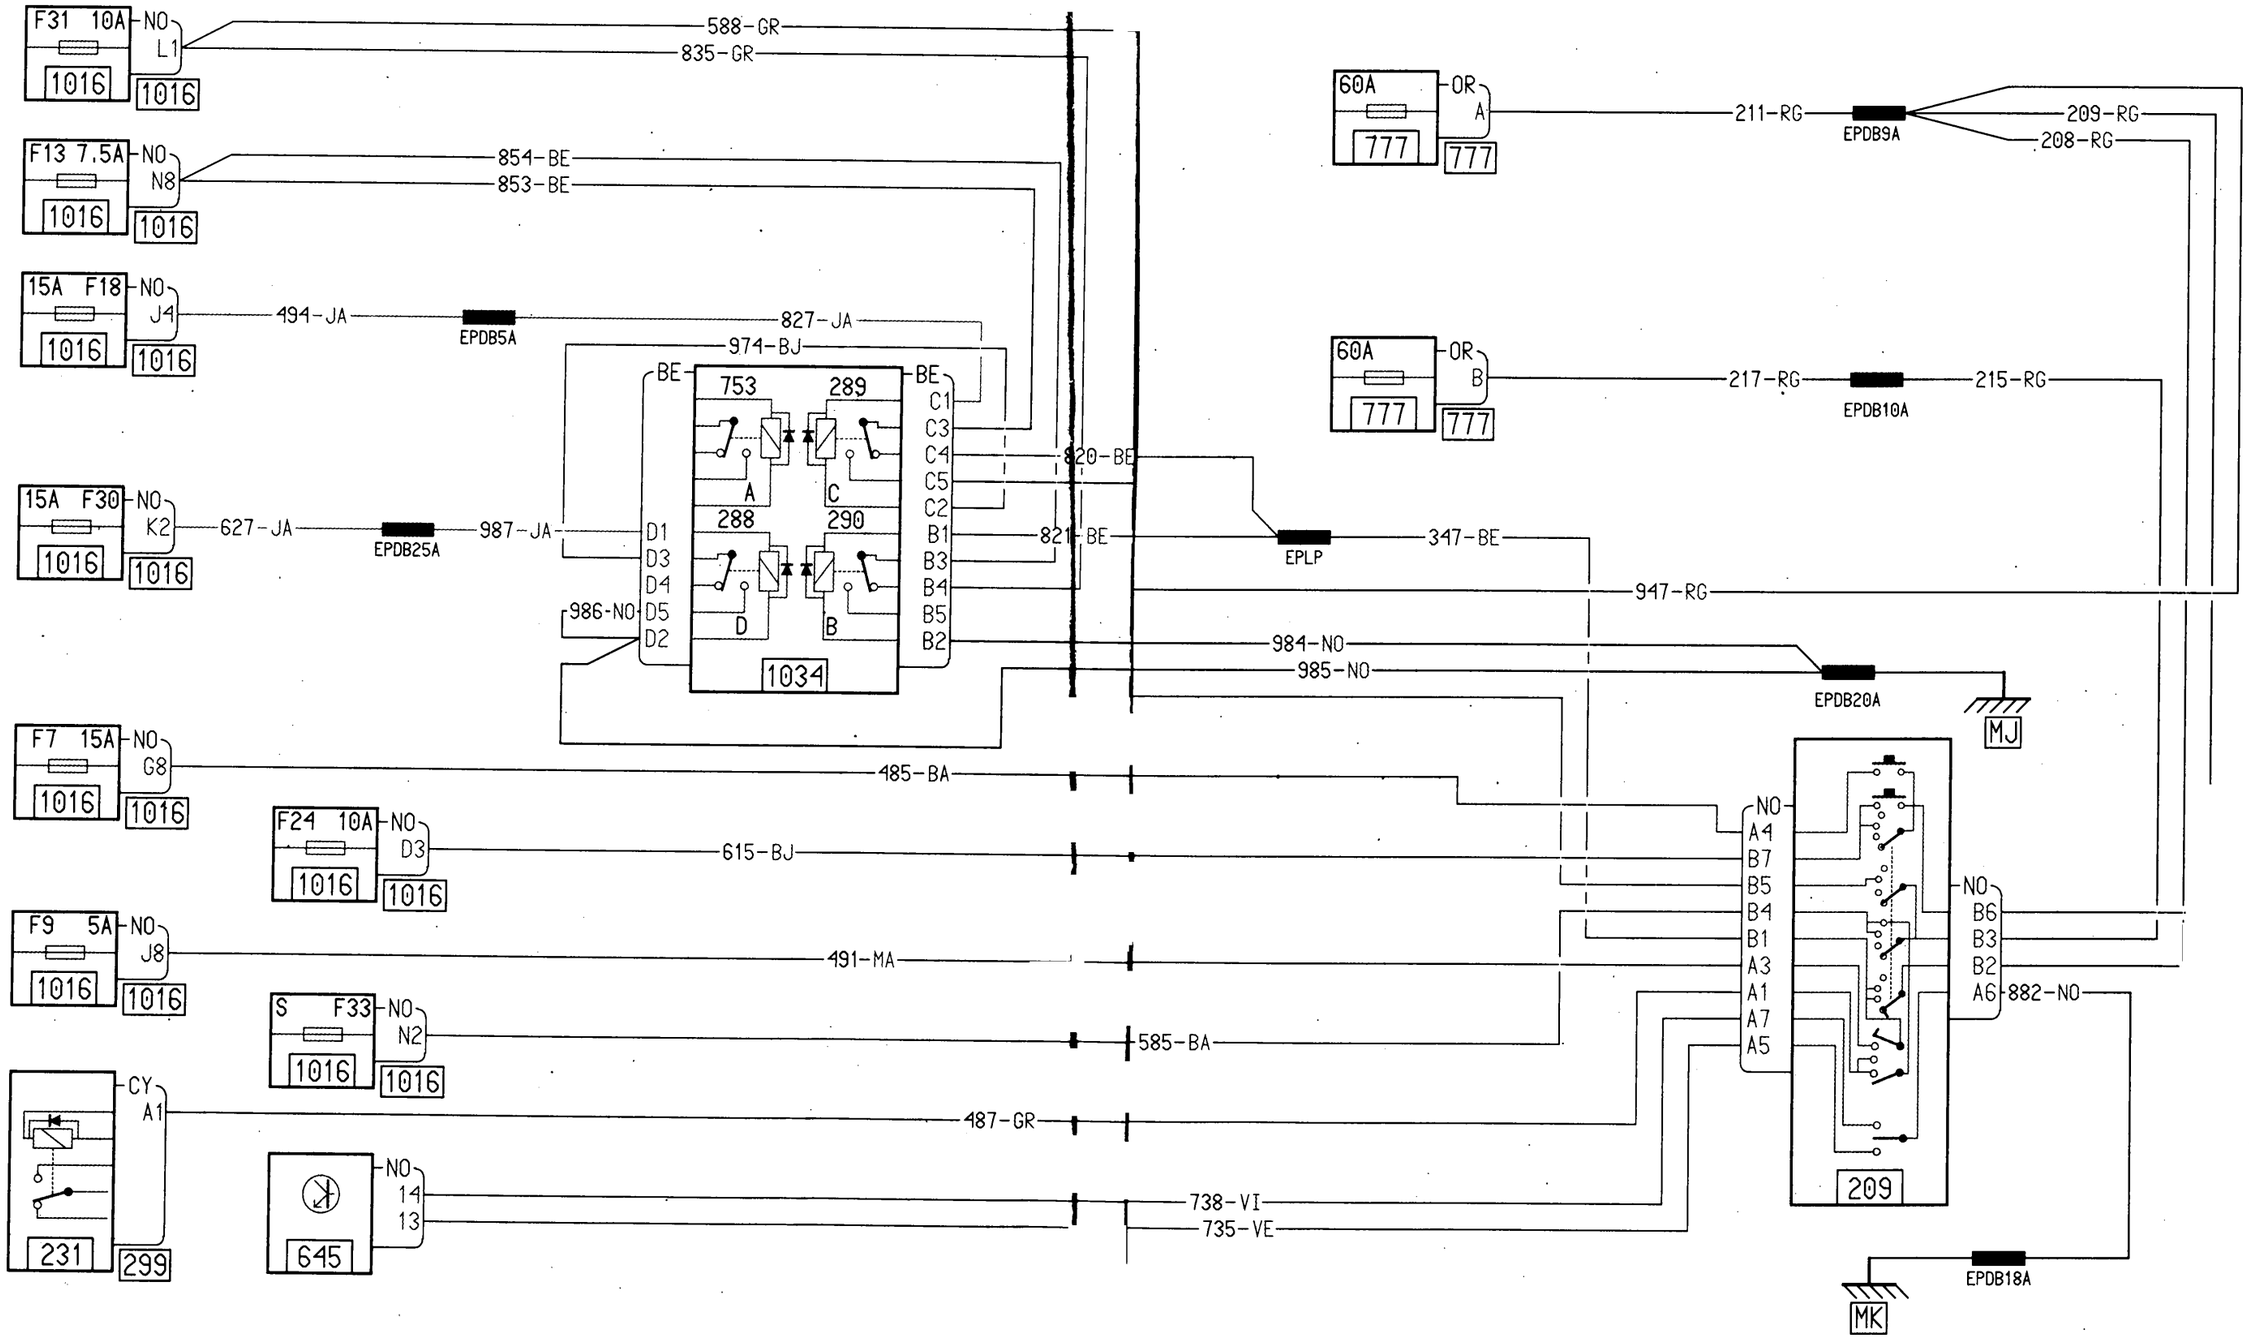
F31 10A
NO
L1
1016
1016
588-GR
835-GR
F13 7.5A
NO
N8
1016
1016
854-BE
853-BE
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
827-JA
974-BJ
15A F30
NO
K2
1016
1016
627-JA
EPDB25A
987-JA
BE
753
289
BE
C1
C3
C4
C5
C2
A
C
288
290
D1
D3
D4
D5
D2
D
B
1034
B1
B3
B4
B5
B2
820-BE
821-BE
986-NO
984-NO
985-NO
60A
OR
A
777
777
211-RG
EPDB9A
209-RG
208-RG
60A
OR
B
777
777
217-RG
EPDB10A
215-RG
EPLP
347-BE
947-RG
EPDB20A
MJ
F7 15A
NO
G8
1016
1016
485-BA
F24 10A
NO
D3
1016
1016
615-BJ
F9 5A
NO
J8
1016
1016
491-MA
S F33
NO
N2
1016
1016
585-BA
CY
A1
231
299
487-GR
NO
14
13
645
738-VI
735-VE
NO
A4
B7
B5
B4
B1
A3
A1
A7
A5
209
NO
B6
B3
B2
A6
882-NO
EPDB18A
MK

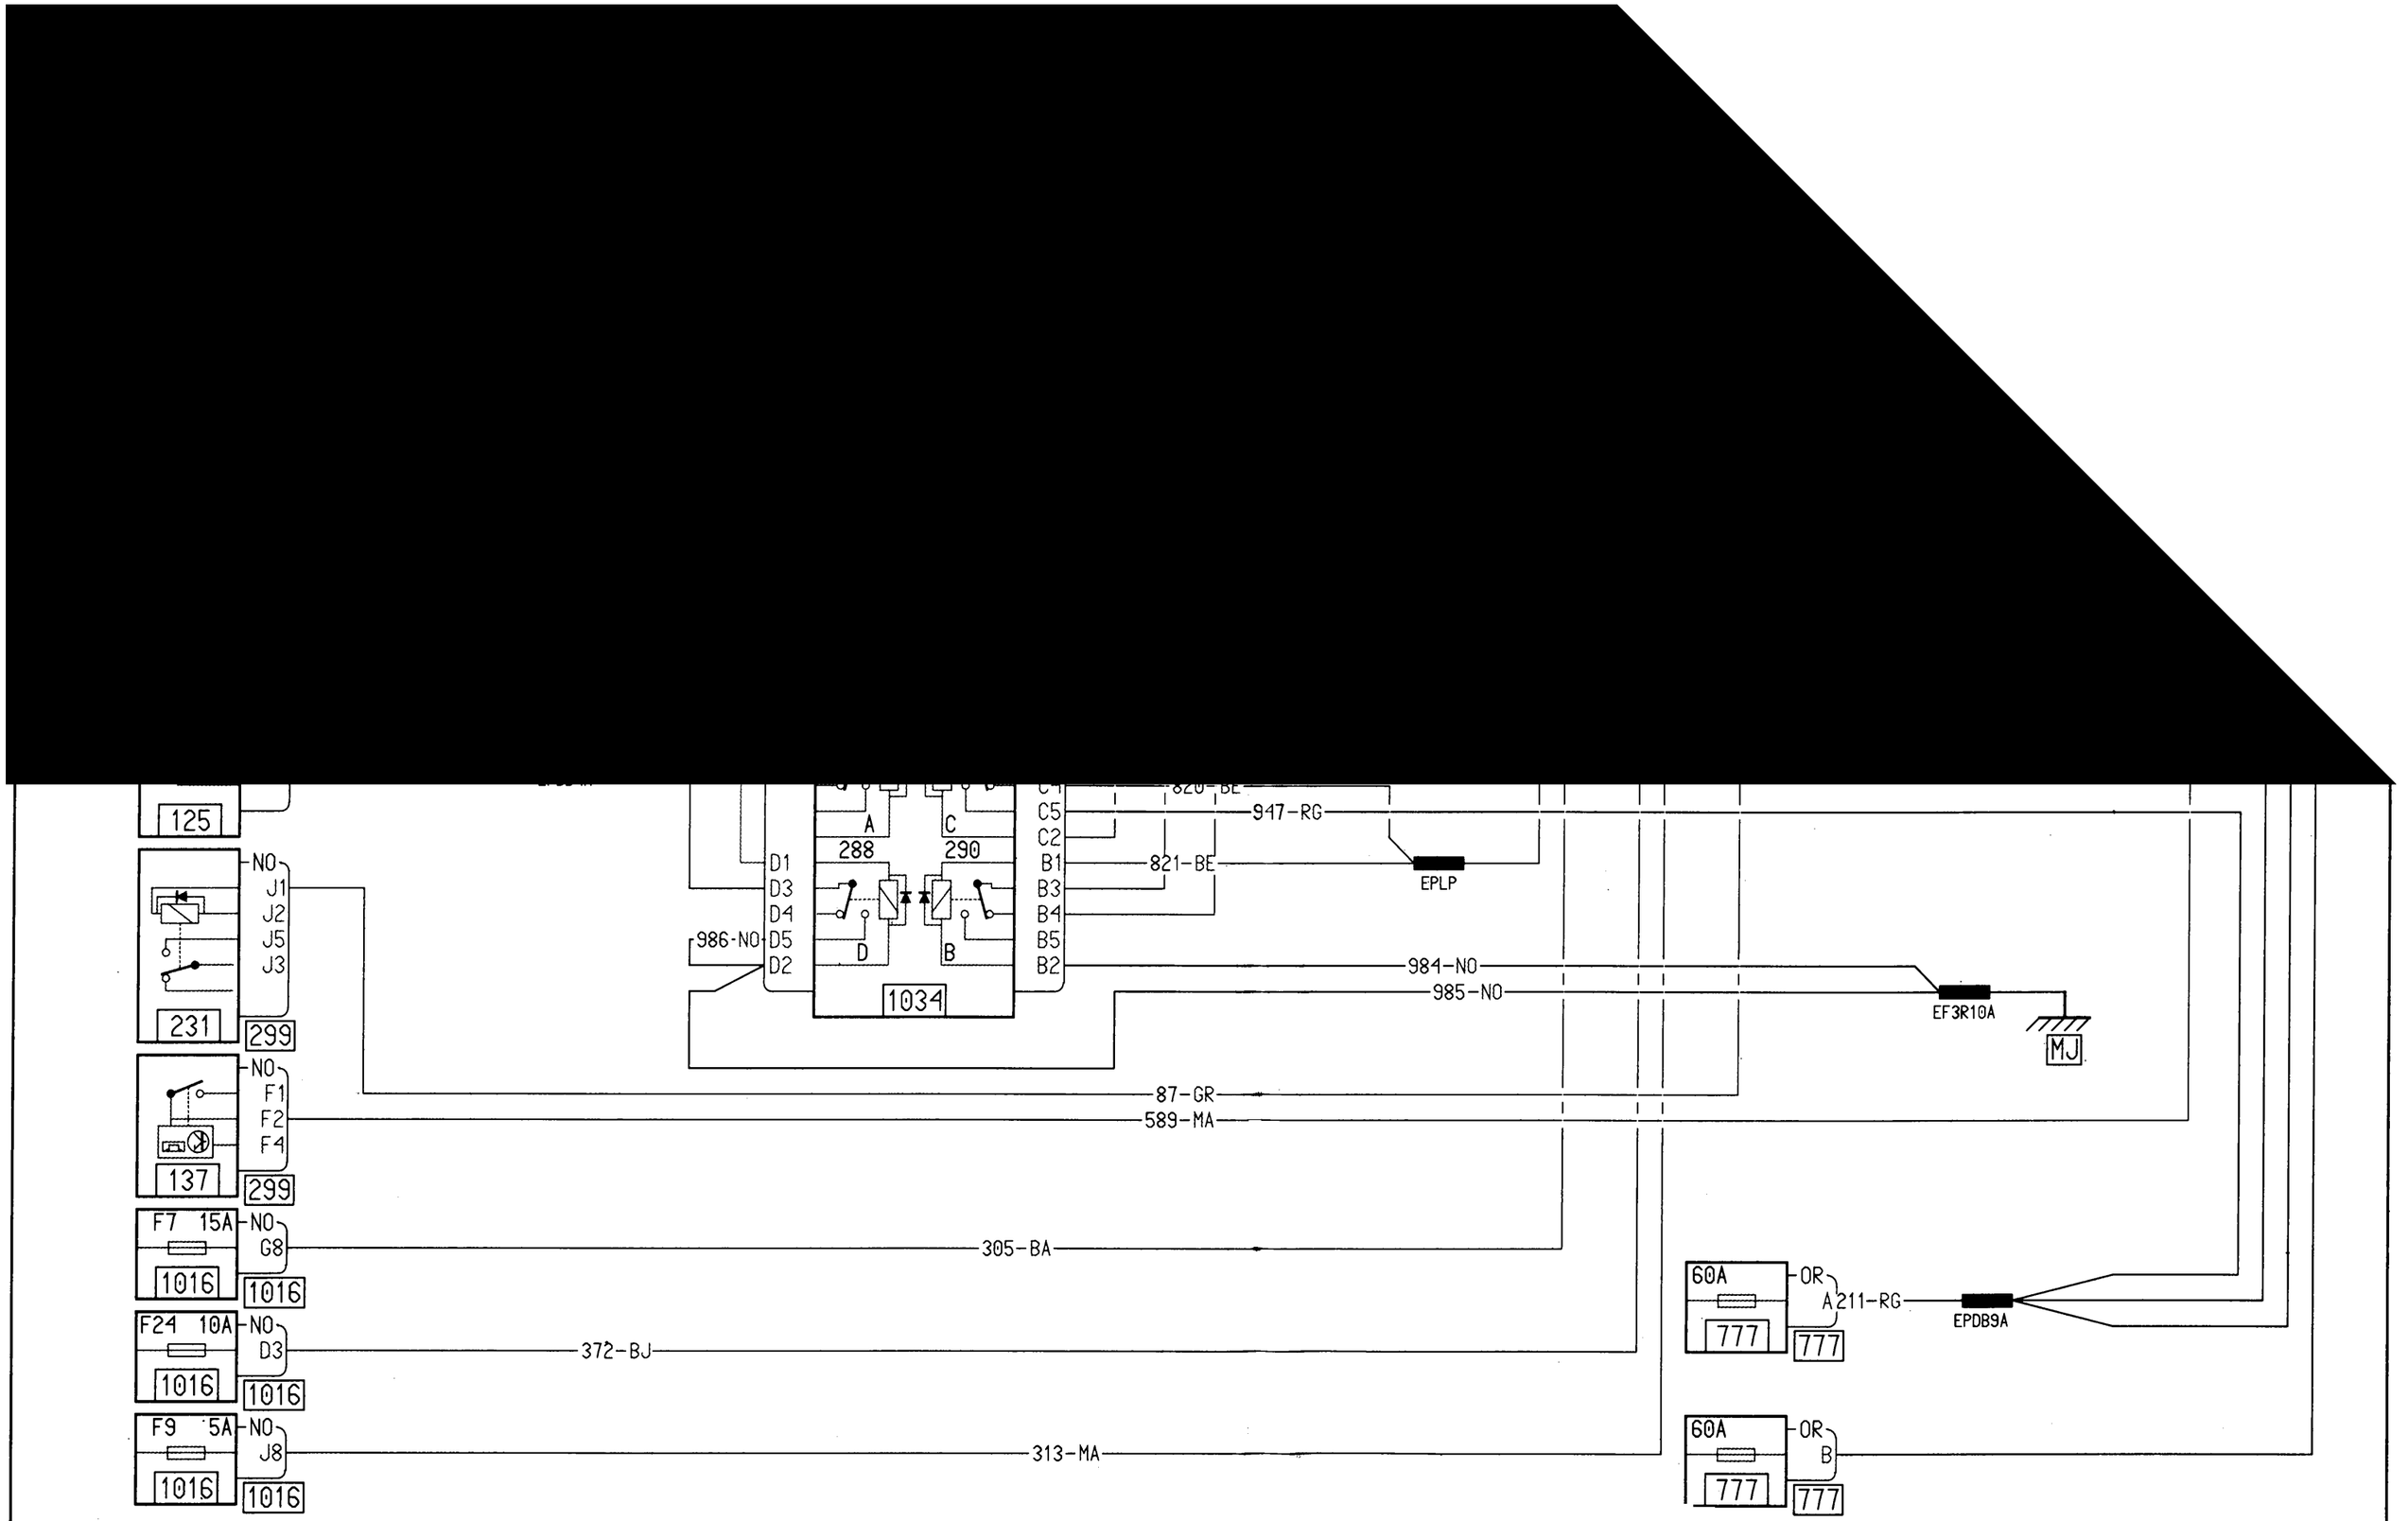
125
NO
J1
J2
J5
J3
231
299
NO
F1
F2
F4
137
299
F7 15A
NO
G8
1016
1016
F24 10A
NO
D3
1016
1016
F9 5A
NO
J8
1016
1016
A
C
288
290
D1
D3
D4
986-NO
D5
D2
D
B
1034
C4
C5
C2
B1
B3
B4
B5
B2
820-BE
947-RG
821-BE
EPLP
984-NO
985-NO
EF3R10A
MJ
87-GR
589-MA
305-BA
372-BJ
313-MA
60A
777
OR
A
211-RG
EPDB9A
777
60A
777
OR
B
777

MANUAL OR AUTOMATIC GEARBOX REVERSING LIGHTS

(D64/E2/BVM5),(E64/E2/BVM5)

X64
00

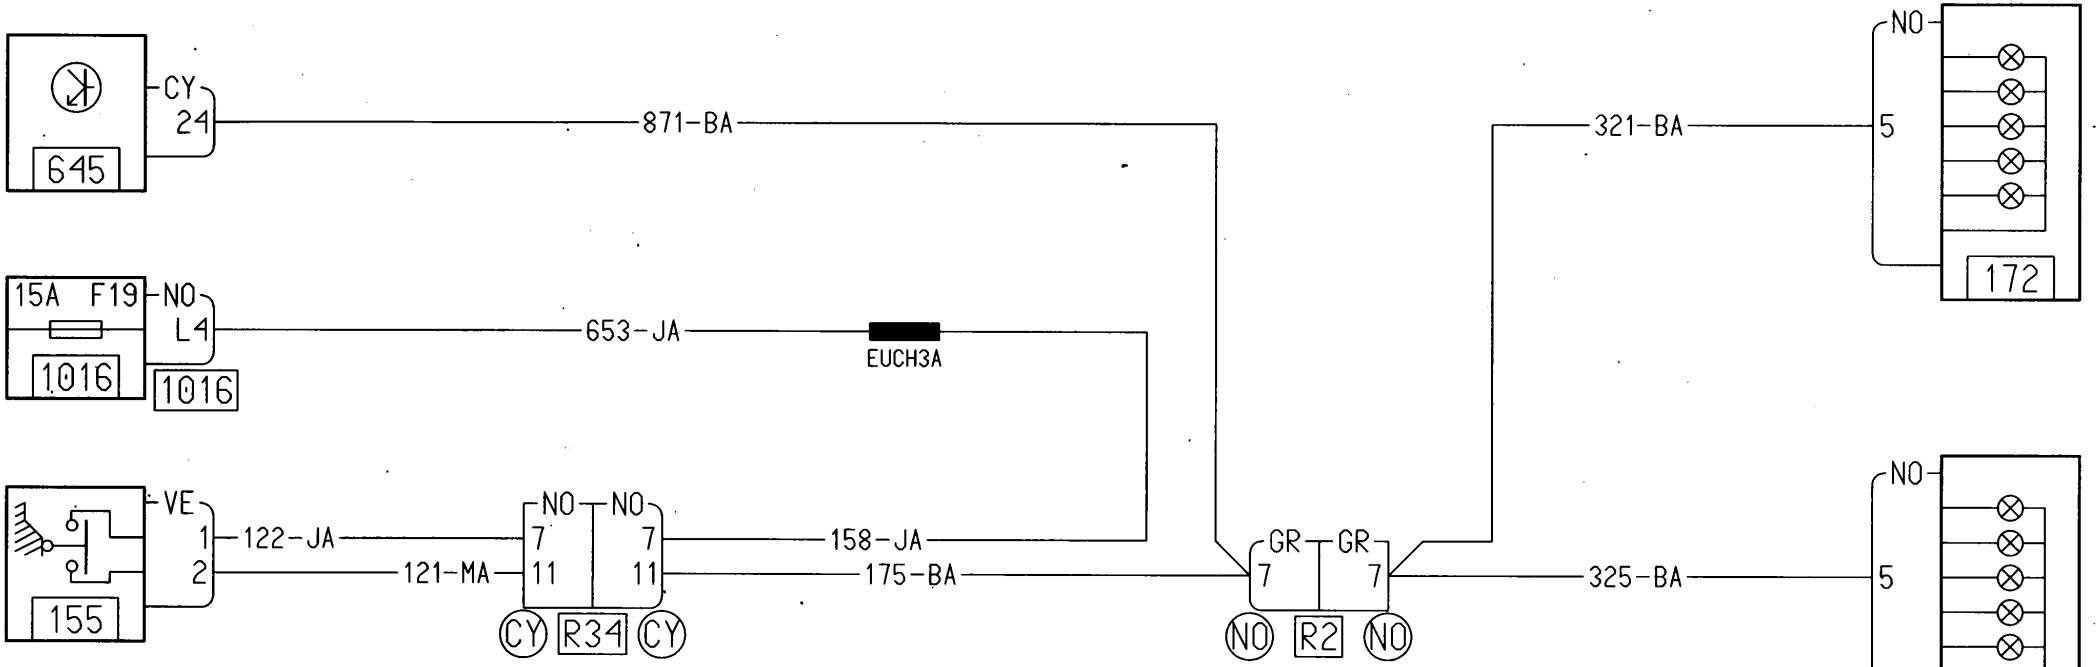

MANUAL OR AUTOMATIC GEARBOX REVERSING LIGHTS

L64/E2/BVM5

X64
00

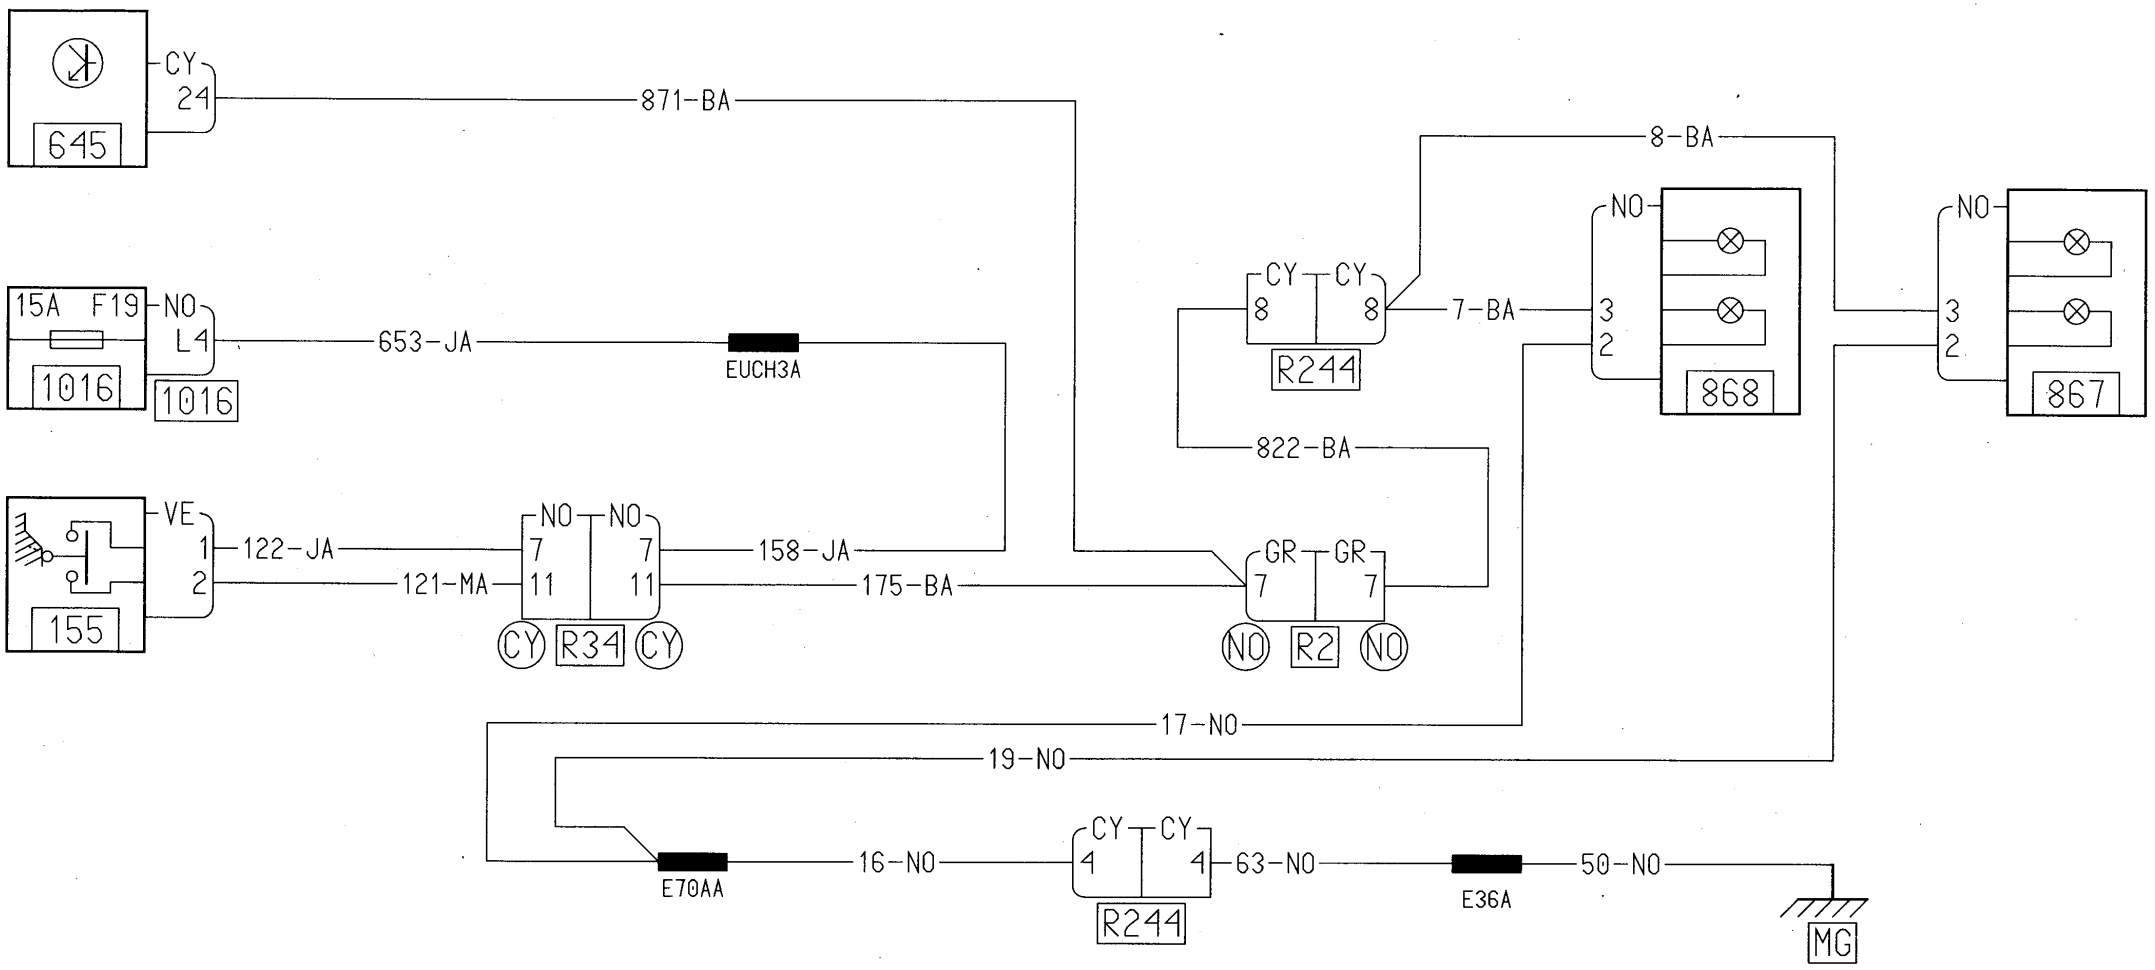

MANUAL OR AUTOMATIC GEARBOX REVERSING LIGHTS

K25/E2/BVM5

X64

00

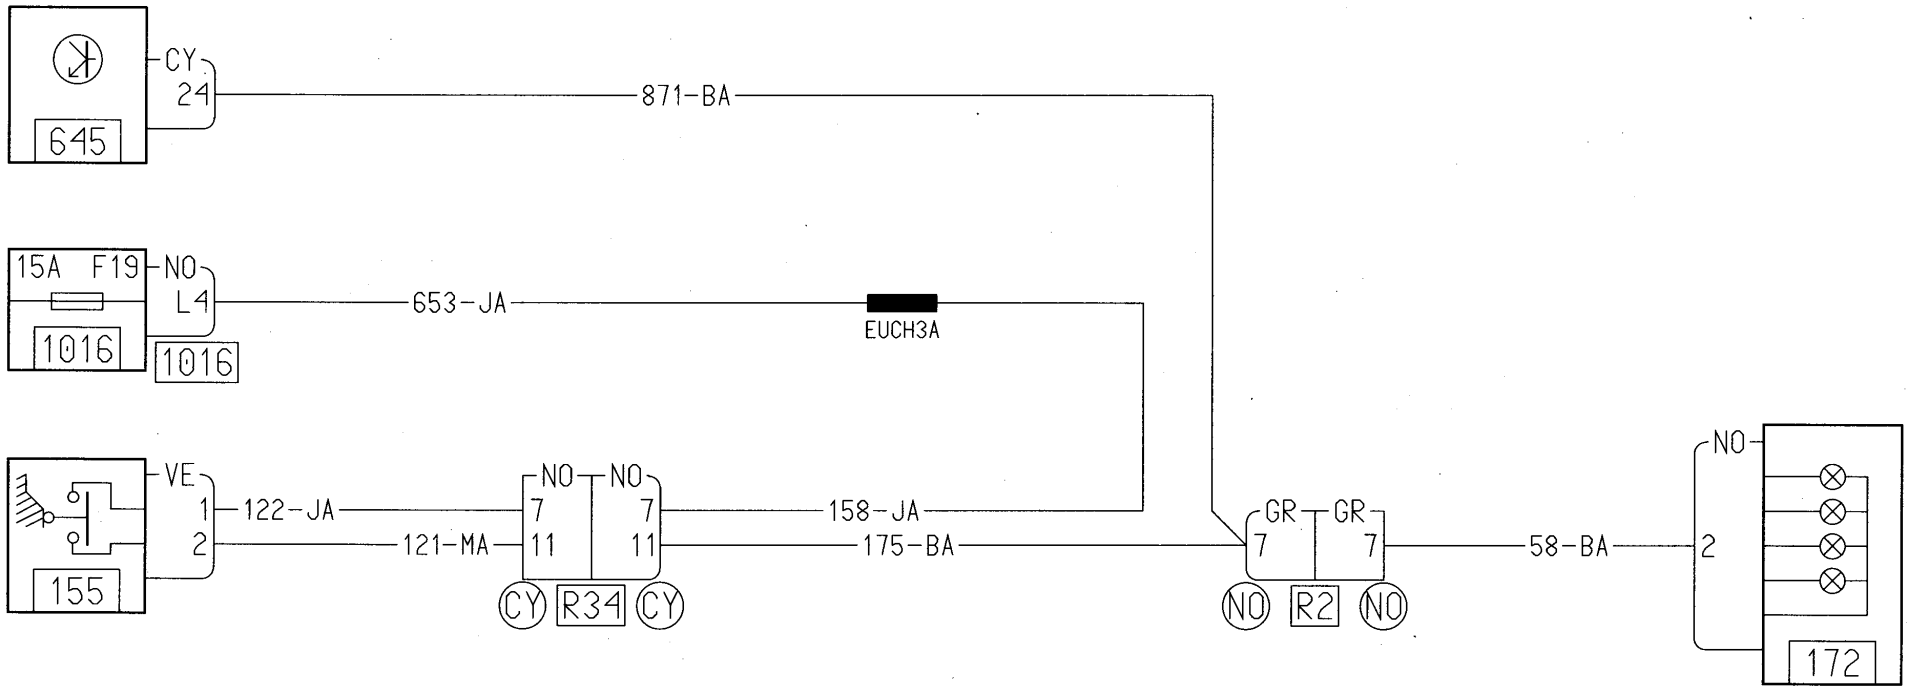

MANUAL OR AUTOMATIC GEARBOX REVERSING LIGHTS

E64/E2/BVA4

X64
00

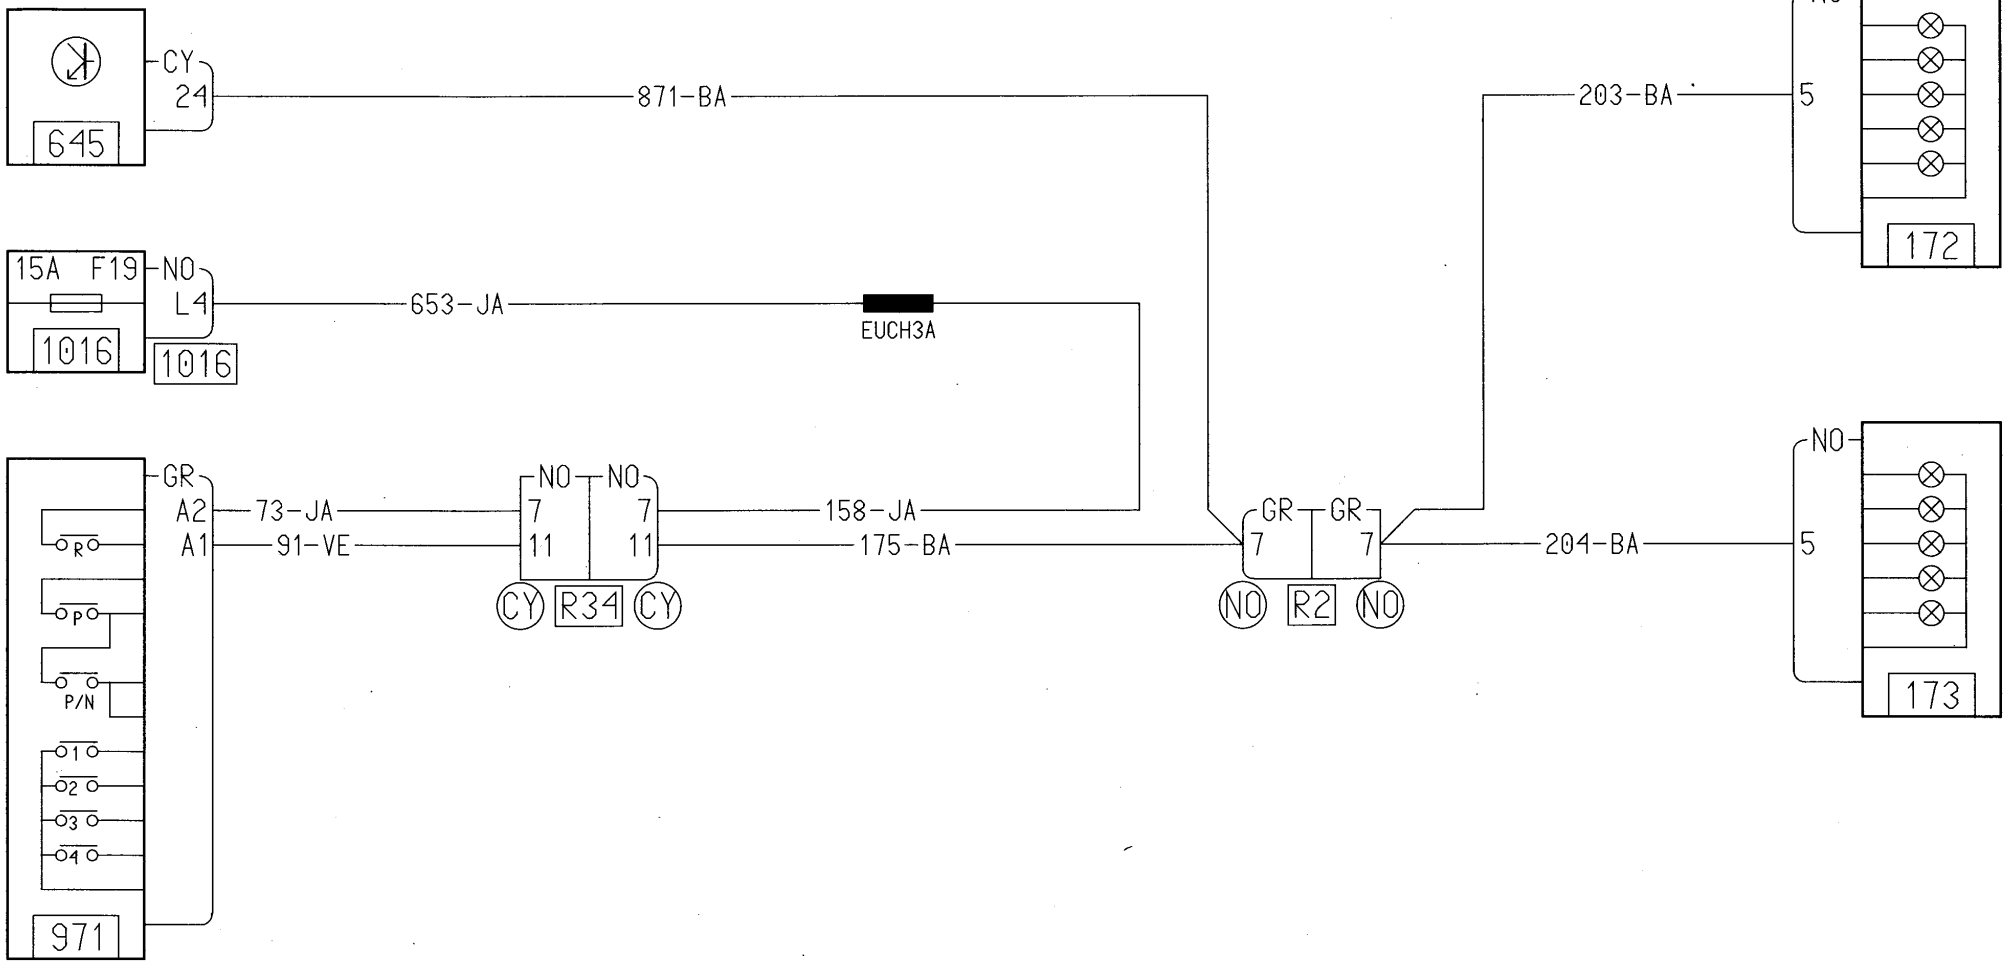

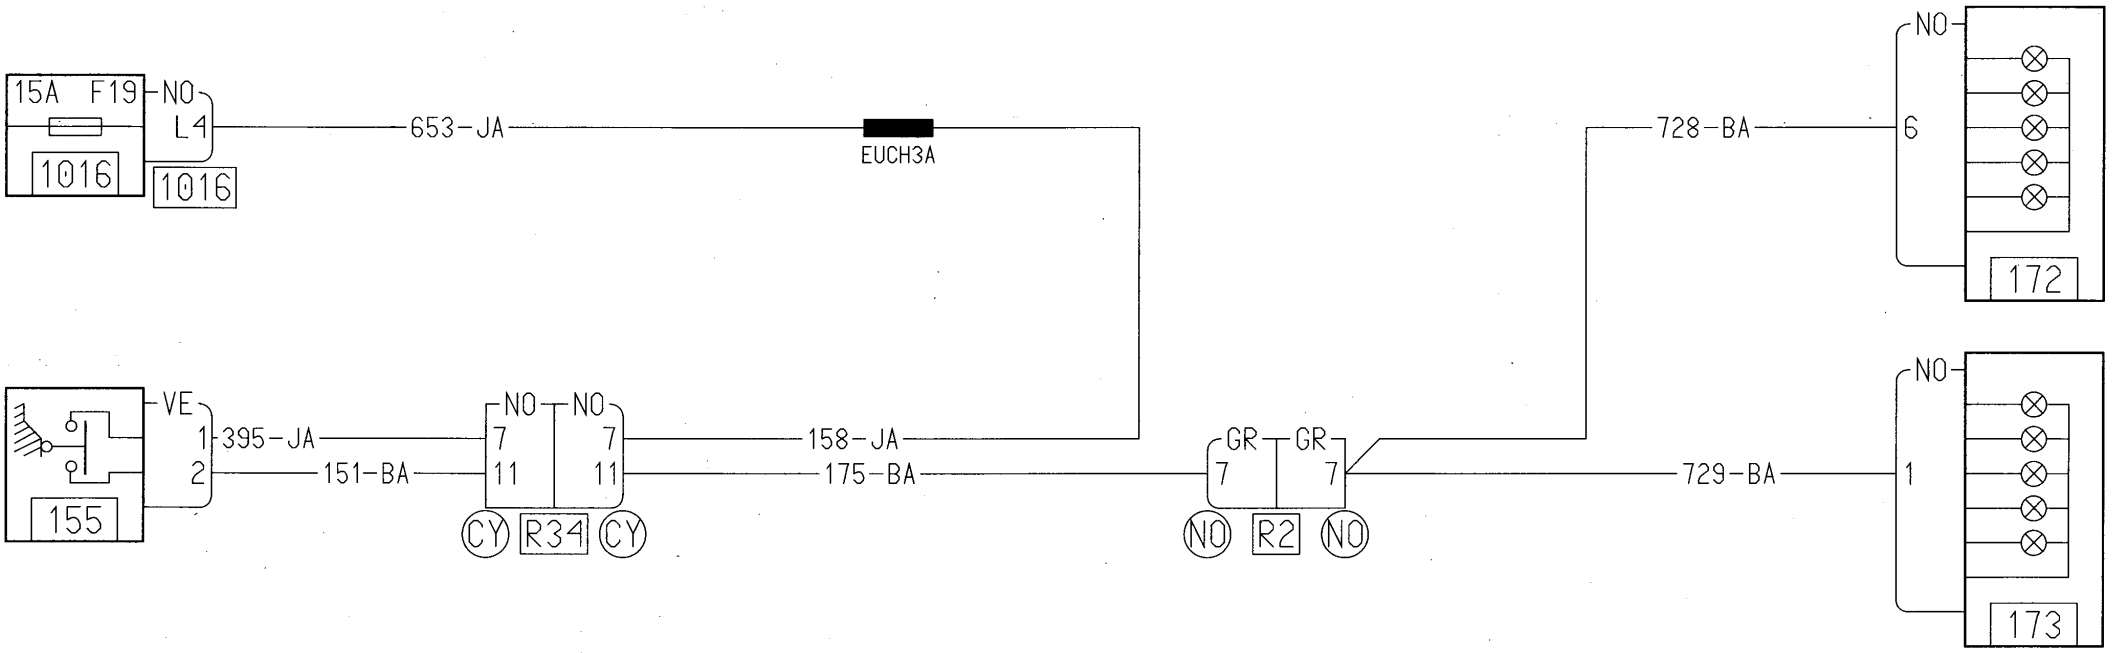
15A F19
1016
NO
L4
1016
653-JA
EUCH3A
728-BA
NO
6
172
VE
1
2
155
395-JA
151-BA
NO
7
11
CY
R34
CY
NO
7
11
158-JA
175-BA
GR
7
NO
GR
7
NO
R2
729-BA
NO
1
173

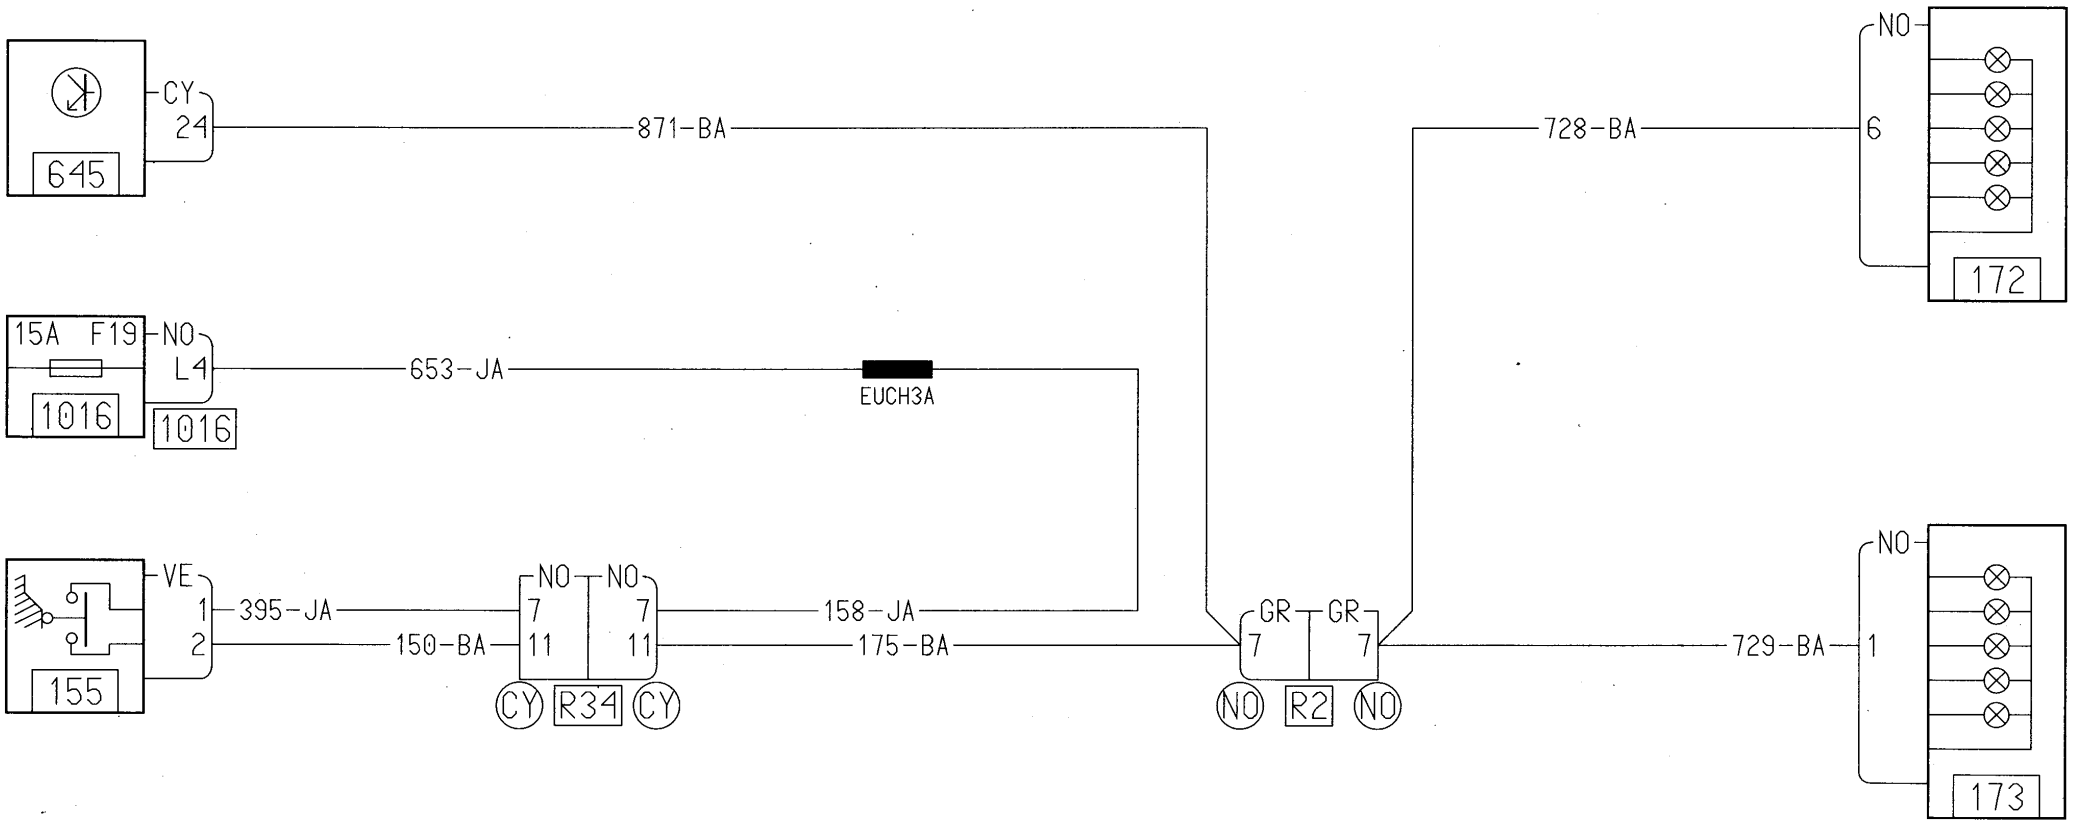
645
CY
24
871-BA
728-BA
NO
6
172
15A F19
NO
L4
653-JA
EUCH3A
1016
1016
VE
1
2
395-JA
150-BA
NO
7
11
NO
7
11
158-JA
175-BA
CY
R34
CY
155
GR
7
GR
7
NO
R2
NO
729-BA
NO
1
173

MANUAL OR AUTOMATIC GEARBOX REVERSING LIGHTS

V25/E1/DG

X64

00

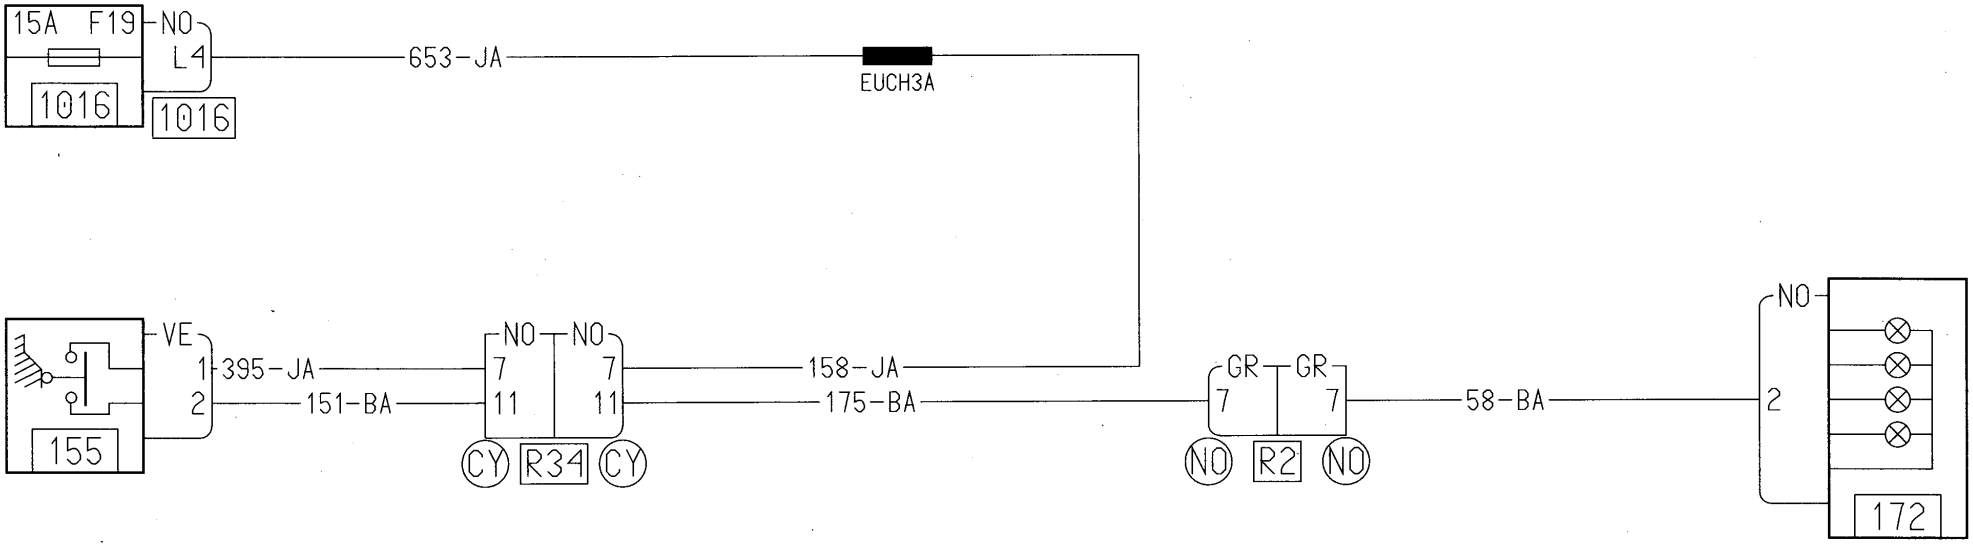

MANUAL OR AUTOMATIC GEARBOX REVERSING LIGHTS

(B64,L64/F3R798,F9Q736,K4M706/CA/MERCOS),(L64/F3R796,F9Q736/TURKEY)

X64
00

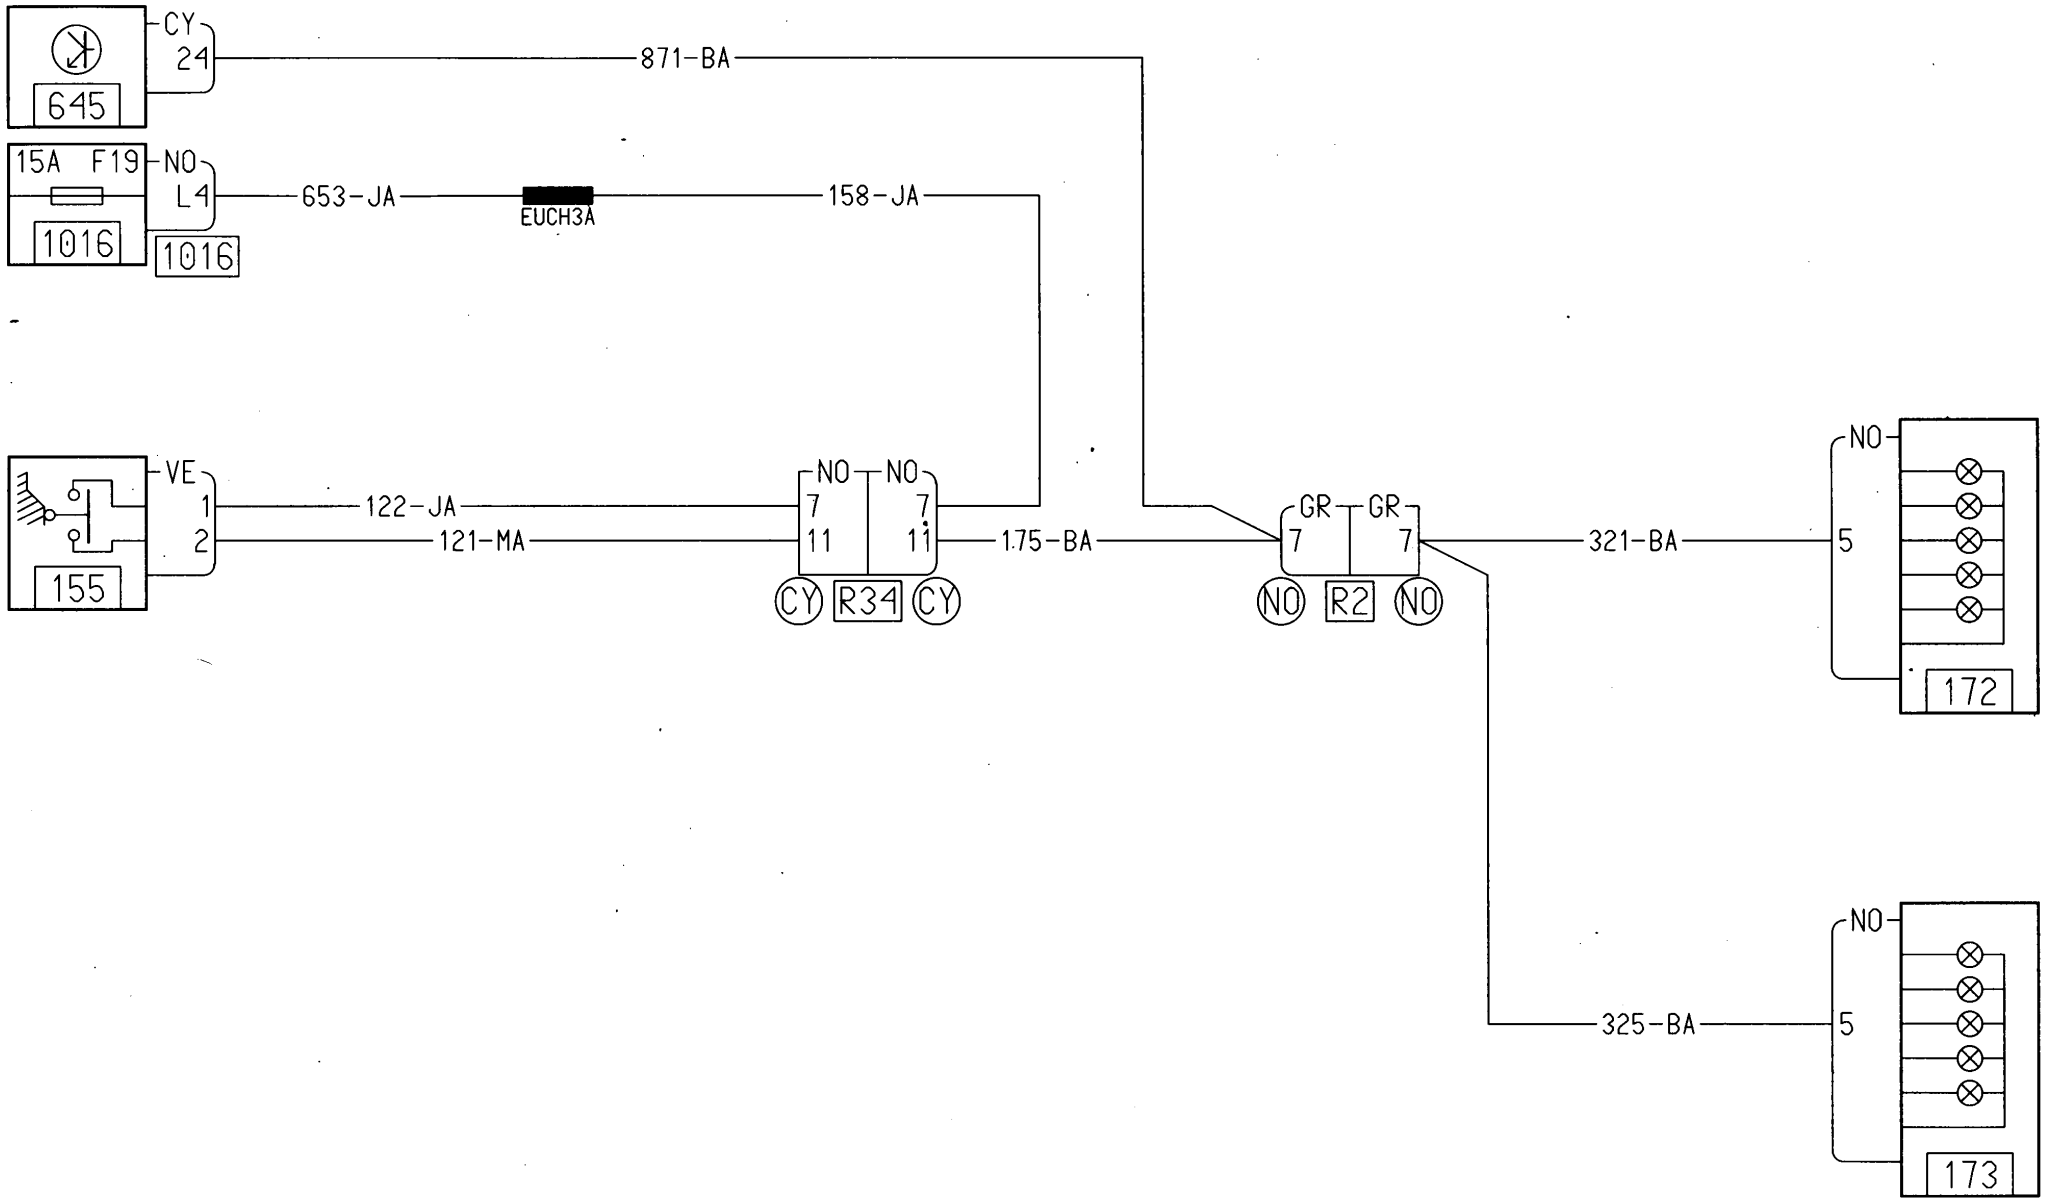

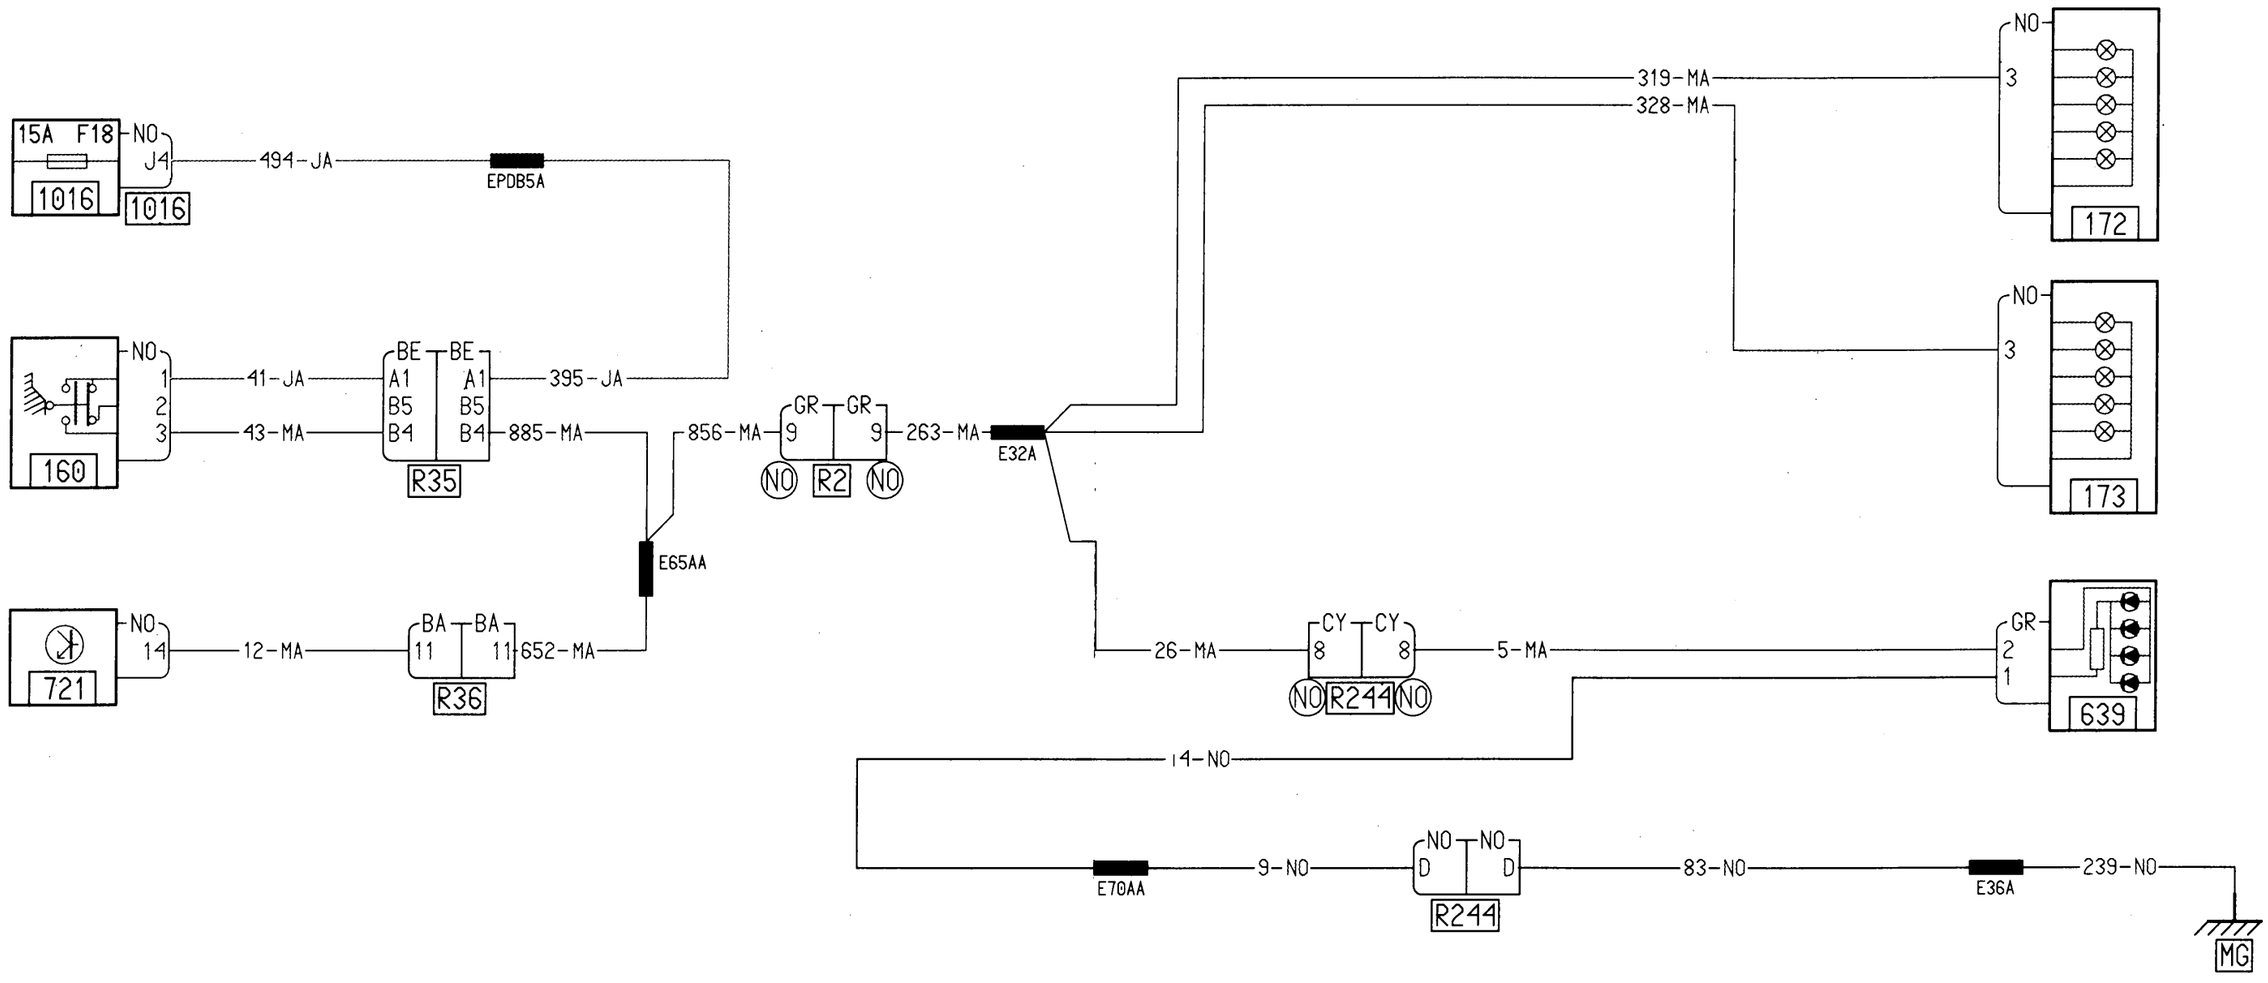
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
NO
1
2
3
160
41-JA
43-MA
BE
A1
B5
B4
BE
A1
B5
B4
R35
395-JA
885-MA
856-MA
GR
9
GR
9
NO
R2
NO
263-MA
E32A
319-MA
328-MA
NO
3
172
NO
3
173
E65AA
NO
14
721
12-MA
BA
11
BA
11
R36
652-MA
26-MA
CY
8
CY
8
NO
R244
NO
5-MA
GR
2
1
639
14-NO
E70AA
9-NO
NO
D
NO
D
R244
83-NO
E36A
239-NO
MG

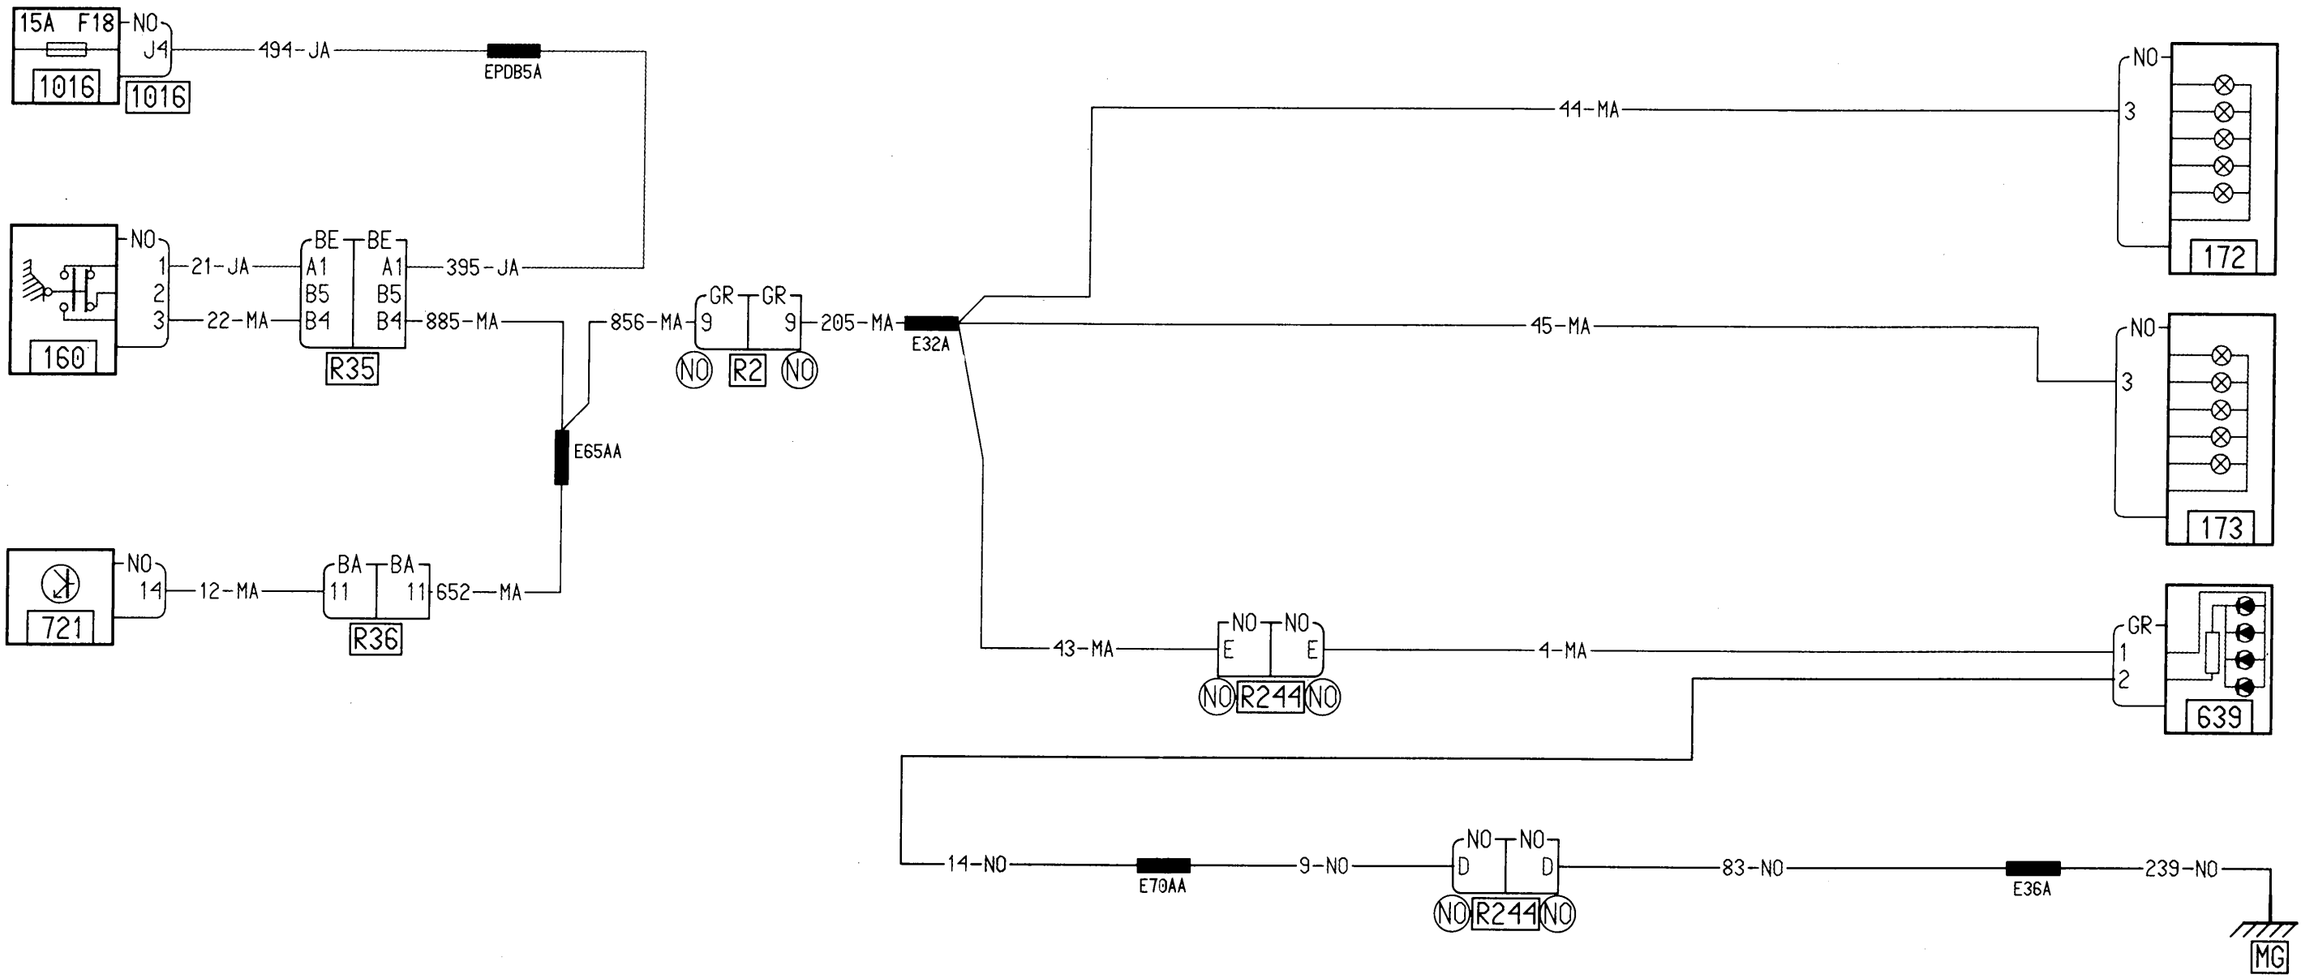
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
NO
1
2
3
160
21-JA
22-MA
BE
A1
B5
B4
BE
A1
B5
B4
R35
395-JA
885-MA
856-MA
GR
9
GR
9
NO
R2
NO
205-MA
E32A
44-MA
45-MA
NO
3
172
NO
3
173
NO
14
721
12-MA
BA
11
BA
11
R36
652-MA
E65AA
43-MA
NO
E
NO
E
NO
R244
NO
4-MA
GR
1
2
639
14-NO
E70AA
9-NO
NO
D
NO
D
NO
R244
NO
83-NO
E36A
239-NO
MG

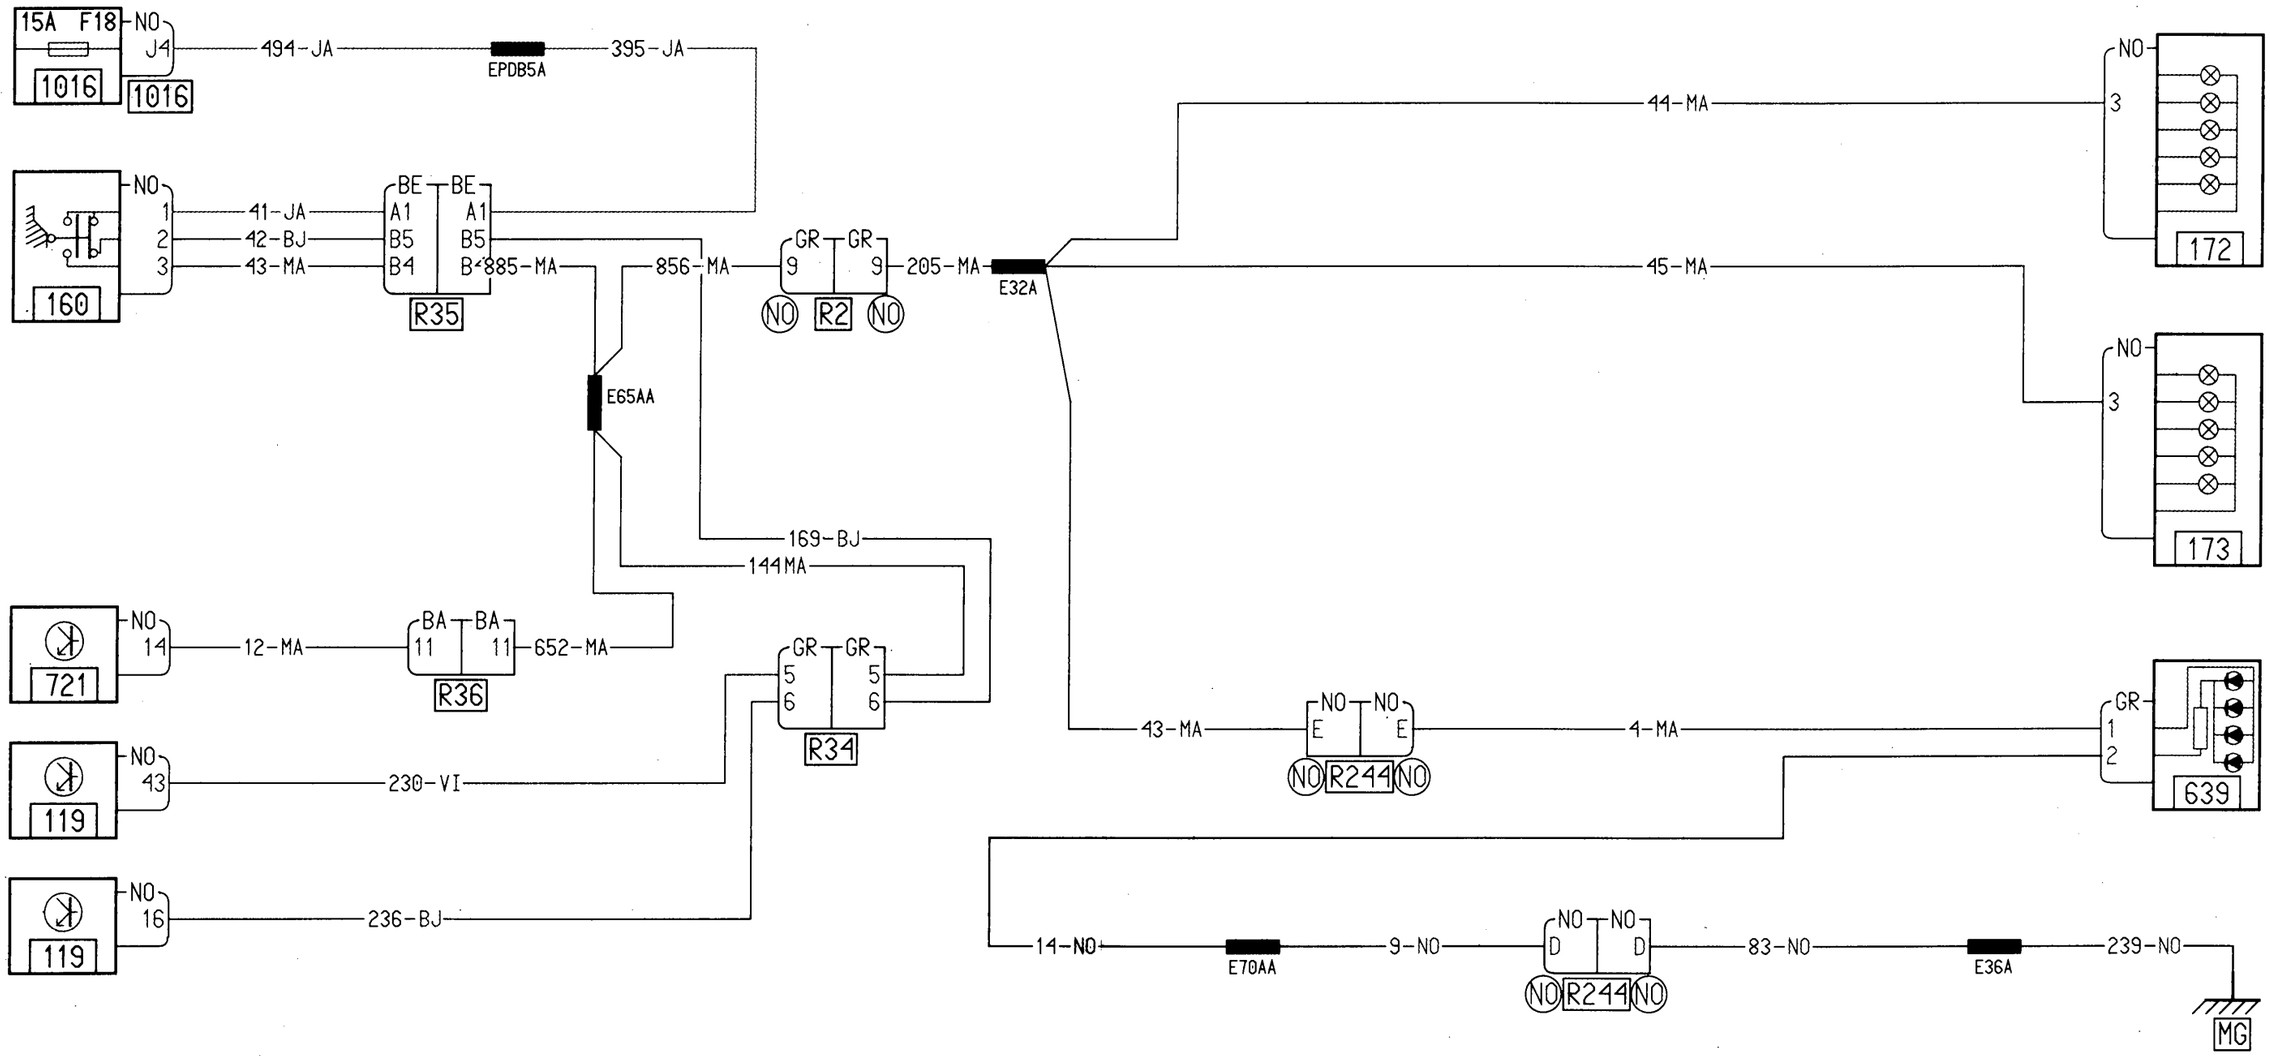
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
395-JA
NO
1
2
3
160
41-JA
42-BJ
43-MA
BE
A1
B5
B4
BE
A1
B5
B
R35
885-MA
856-MA
GR
9
GR
9
NO
R2
NO
205-MA
E32A
44-MA
45-MA
NO
3
172
NO
3
173
E65AA
169-BJ
144MA
NO
14
721
12-MA
BA
11
BA
11
652-MA
R36
GR
5
6
GR
5
6
R34
NO
43
119
230-VI
NO
16
119
236-BJ
43-MA
NO
E
NO
E
NO
R244
NO
4-MA
GR
1
2
639
14-NO
E70AA
9-NO
NO
D
NO
D
NO
R244
NO
83-NO
E36A
239-NO
MG

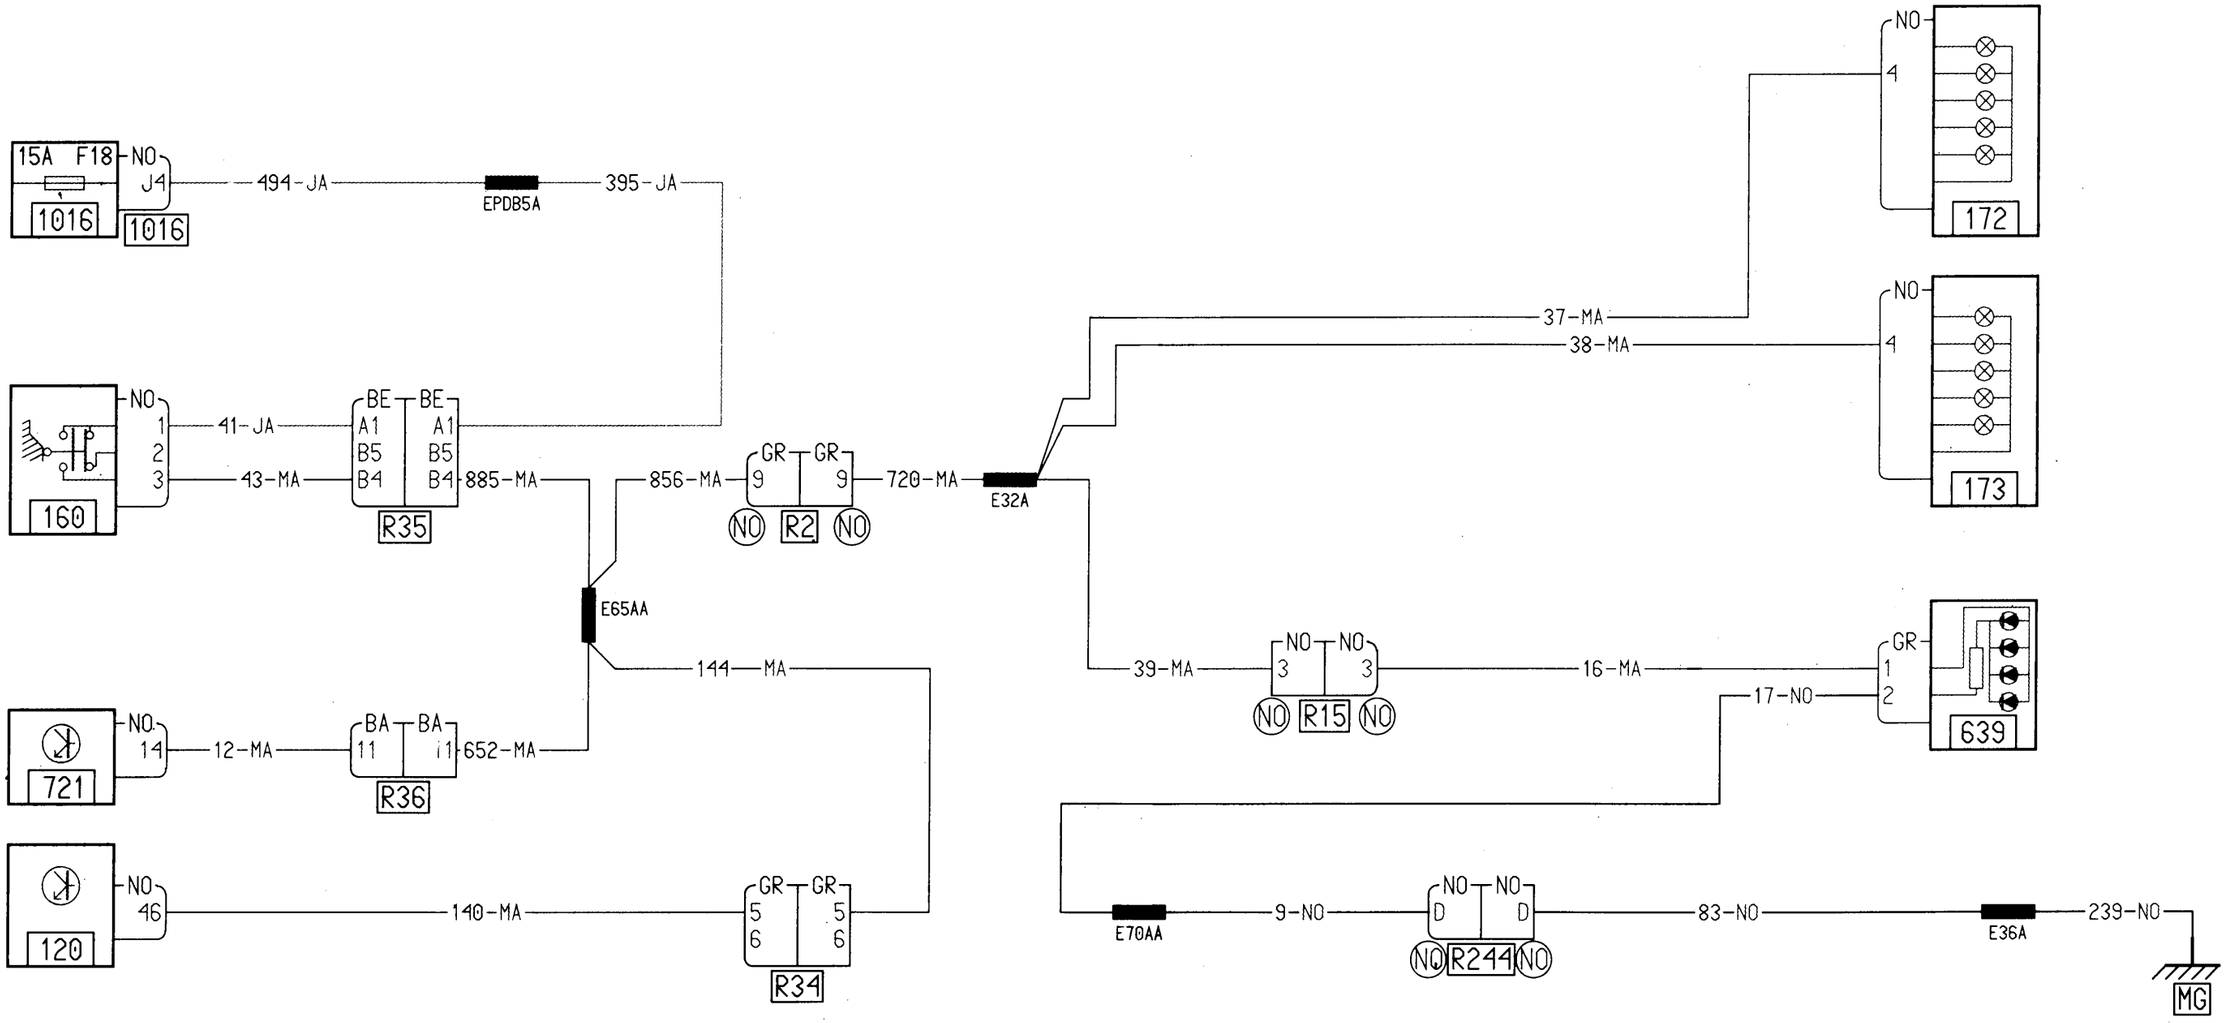
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
395-JA
NO
1
2
3
160
41-JA
43-MA
BE
A1
B5
B4
BE
A1
B5
B4
R35
885-MA
856-MA
GR
9
GR
9
NO
R2
NO
720-MA
E32A
37-MA
38-MA
NO
4
172
NO
4
173
E65AA
144-MA
NO
14
721
12-MA
BA
11
BA
11
652-MA
R36
NO
46
120
140-MA
GR
5
6
GR
5
6
R34
39-MA
NO
3
NO
3
NO
R15
NO
16-MA
GR
1
2
17-NO
639
E70AA
9-NO
NO
D
NO
D
NO
R244
NO
83-NO
E36A
239-NO
MG

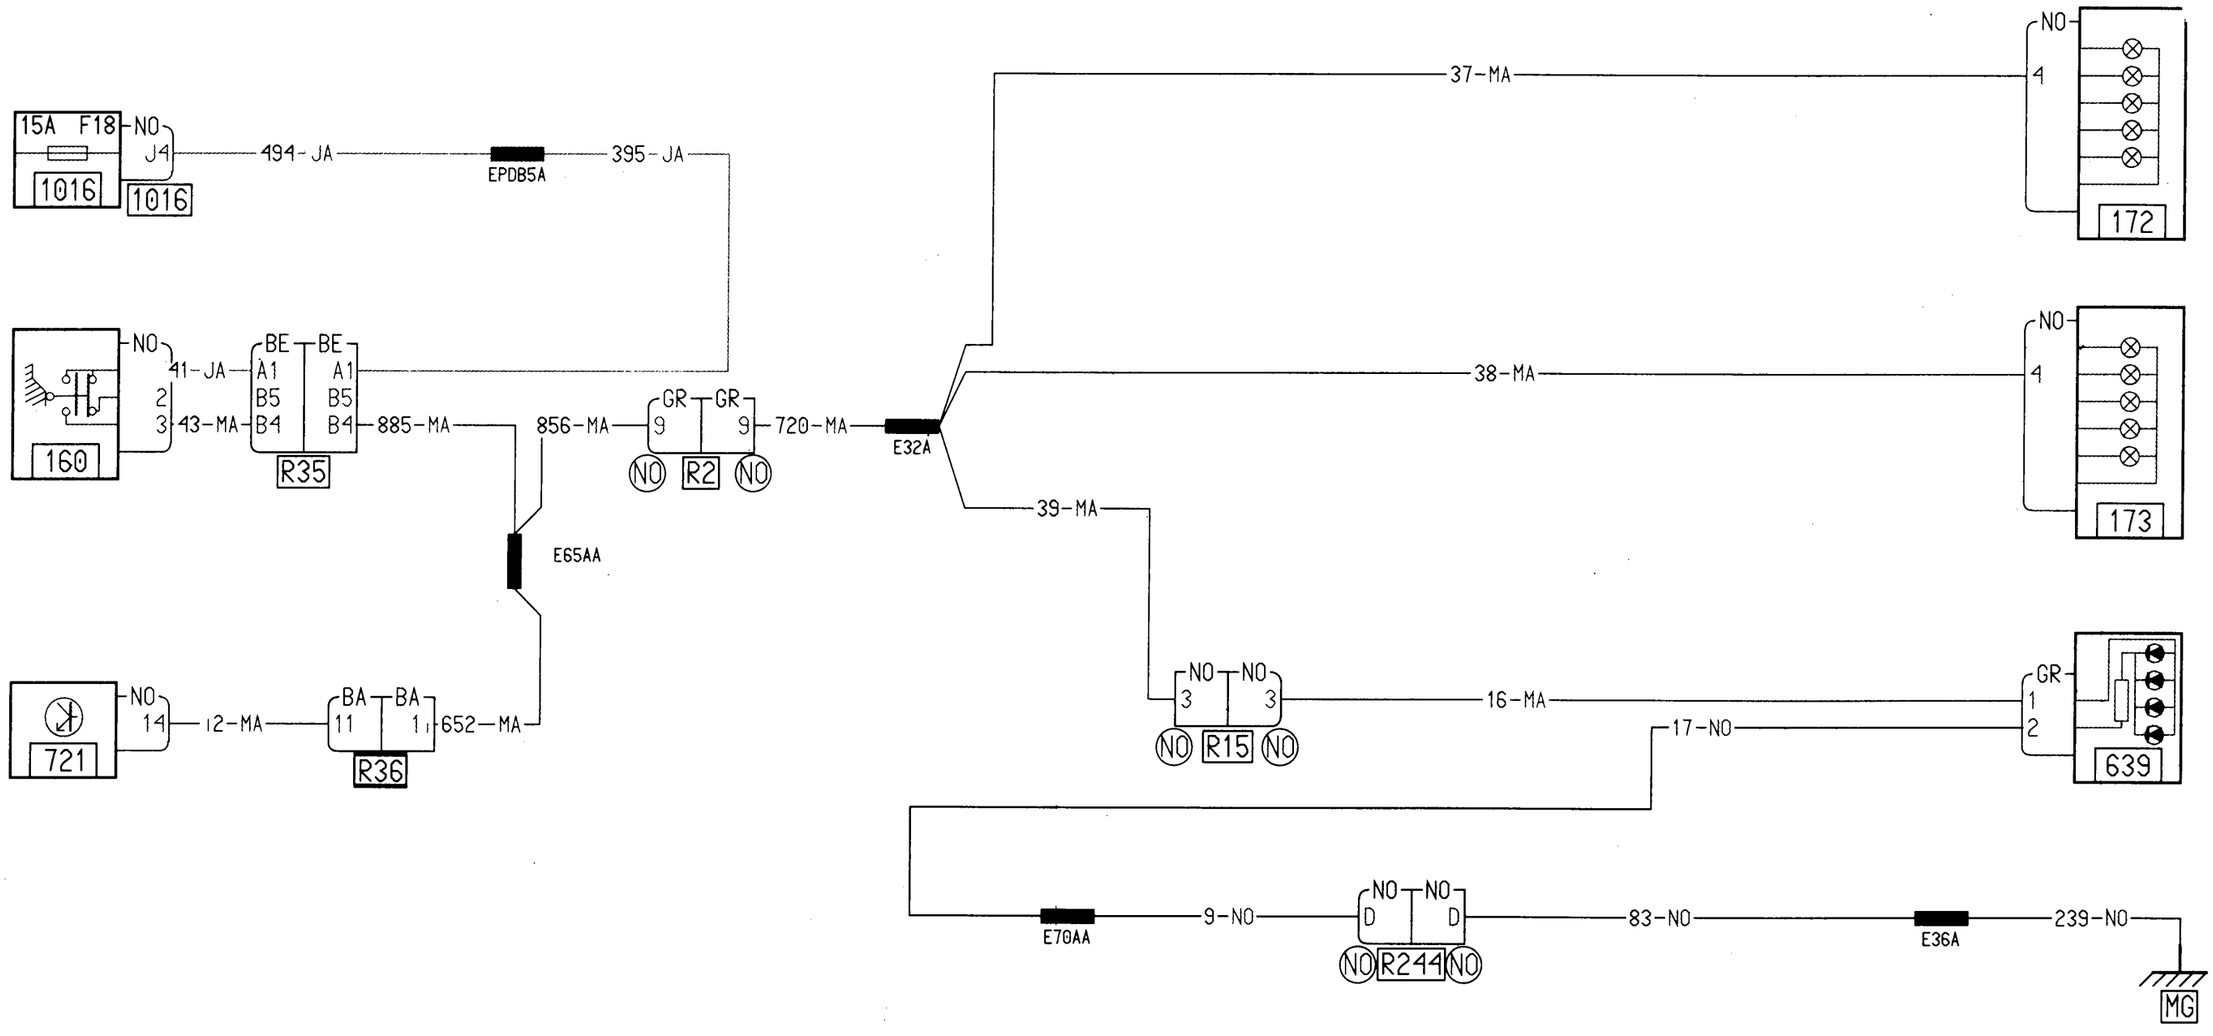
15A F18
1016
NO
J4
1016
494-JA
EPDB5A
395-JA
37-MA
NO
4
172
160
NO
41-JA
2
3
43-MA
BE
A1
B5
B4
BE
A1
B5
B4
R35
885-MA
856-MA
GR
9
GR
9
NO
R2
NO
720-MA
E32A
38-MA
NO
4
173
39-MA
E65AA
721
NO
14
12-MA
BA
11
BA
11
652-MA
R36
NO
3
NO
3
NO
R15
NO
16-MA
GR
1
2
639
17-NO
E70AA
9-NO
NO
D
NO
D
NO
R244
NO
83-NO
E36A
239-NO
MG

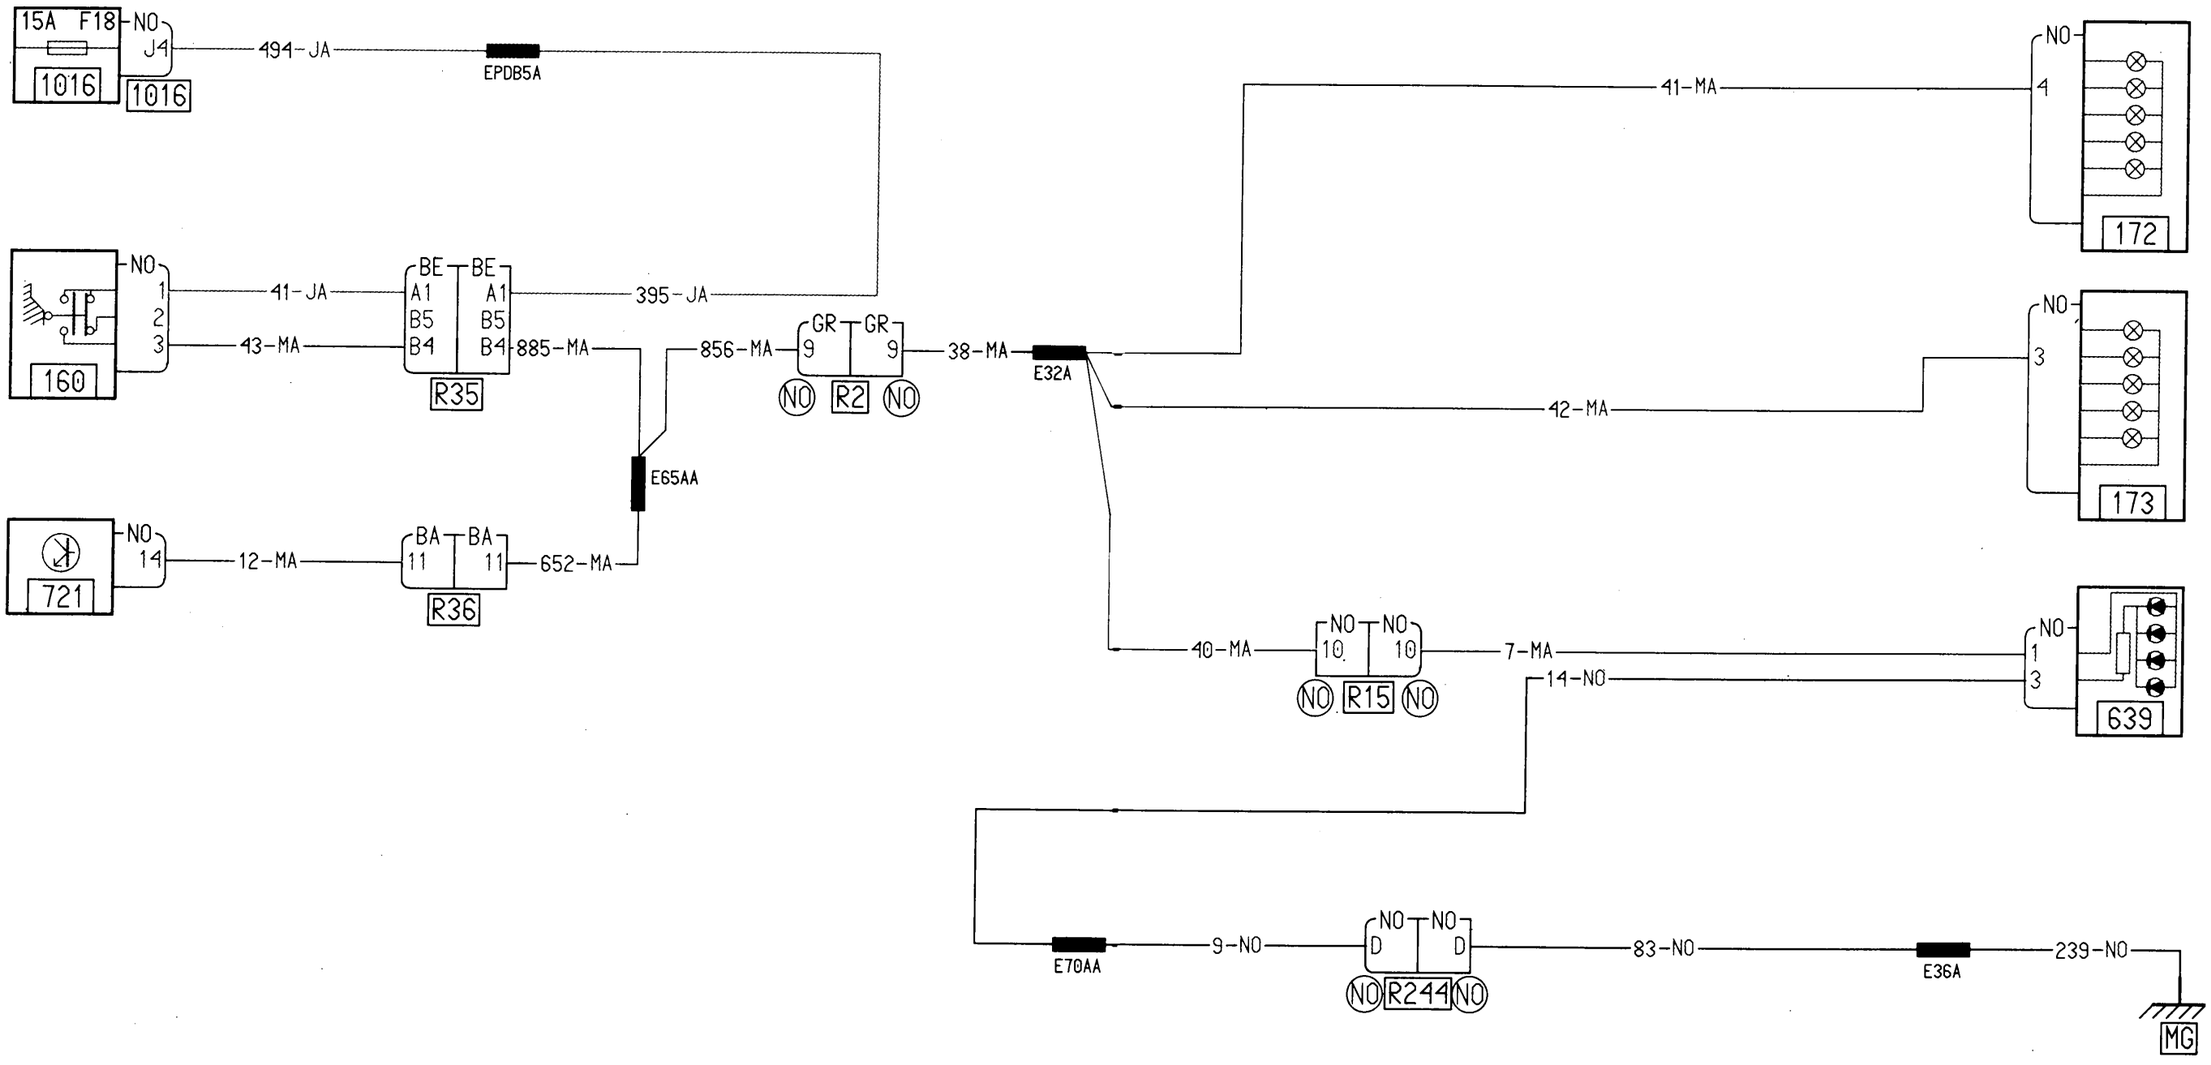
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
NO
1
2
3
160
41-JA
43-MA
BE
A1
B5
B4
BE
A1
B5
B4
R35
395-JA
885-MA
856-MA
GR
9
GR
9
NO
R2
NO
38-MA
E32A
41-MA
NO
4
172
42-MA
NO
3
173
E65AA
NO
14
721
12-MA
BA
11
BA
11
R36
652-MA
40-MA
NO
10
NO
10
NO
R15
NO
7-MA
14-NO
NO
1
3
639
E70AA
9-NO
NO
D
NO
D
NO
R244
NO
83-NO
E36A
239-NO
MG

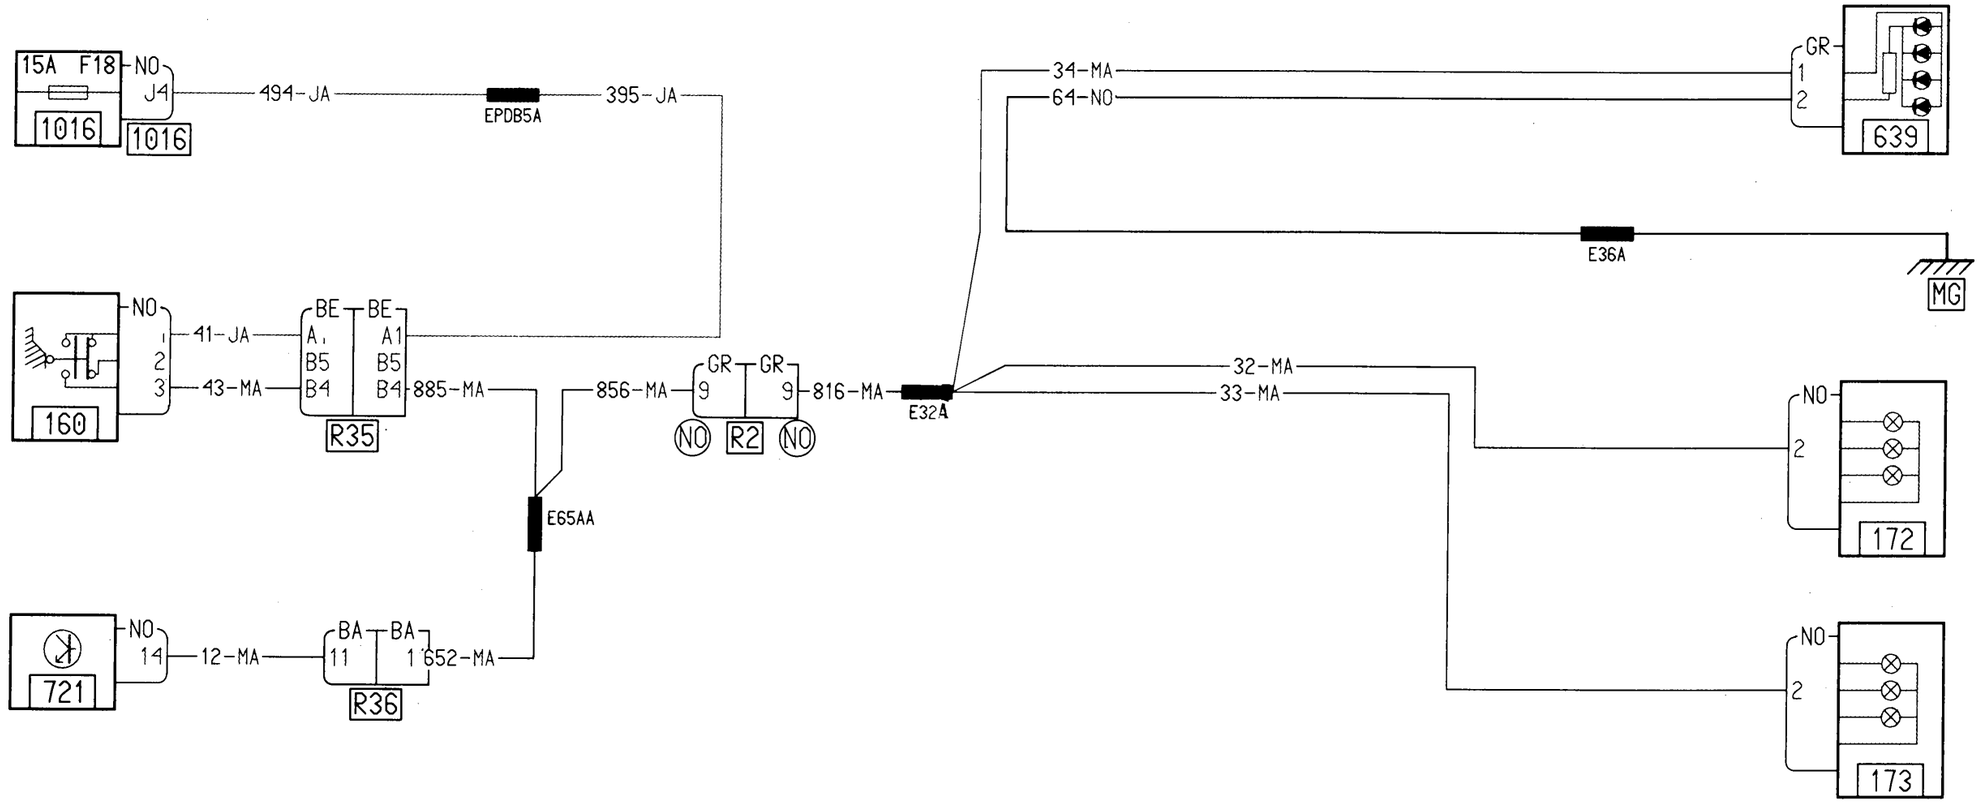
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
395-JA
34-MA
64-NO
GR
1
2
639
E36A
MG
NO
1
2
3
160
41-JA
43-MA
BE
A1
B5
B4
R35
885-MA
856-MA
GR
9
NO
R2
816-MA
E32A
32-MA
33-MA
NO
2
172
NO
2
173
E65AA
NO
14
721
12-MA
BA
11
1652-MA
R36

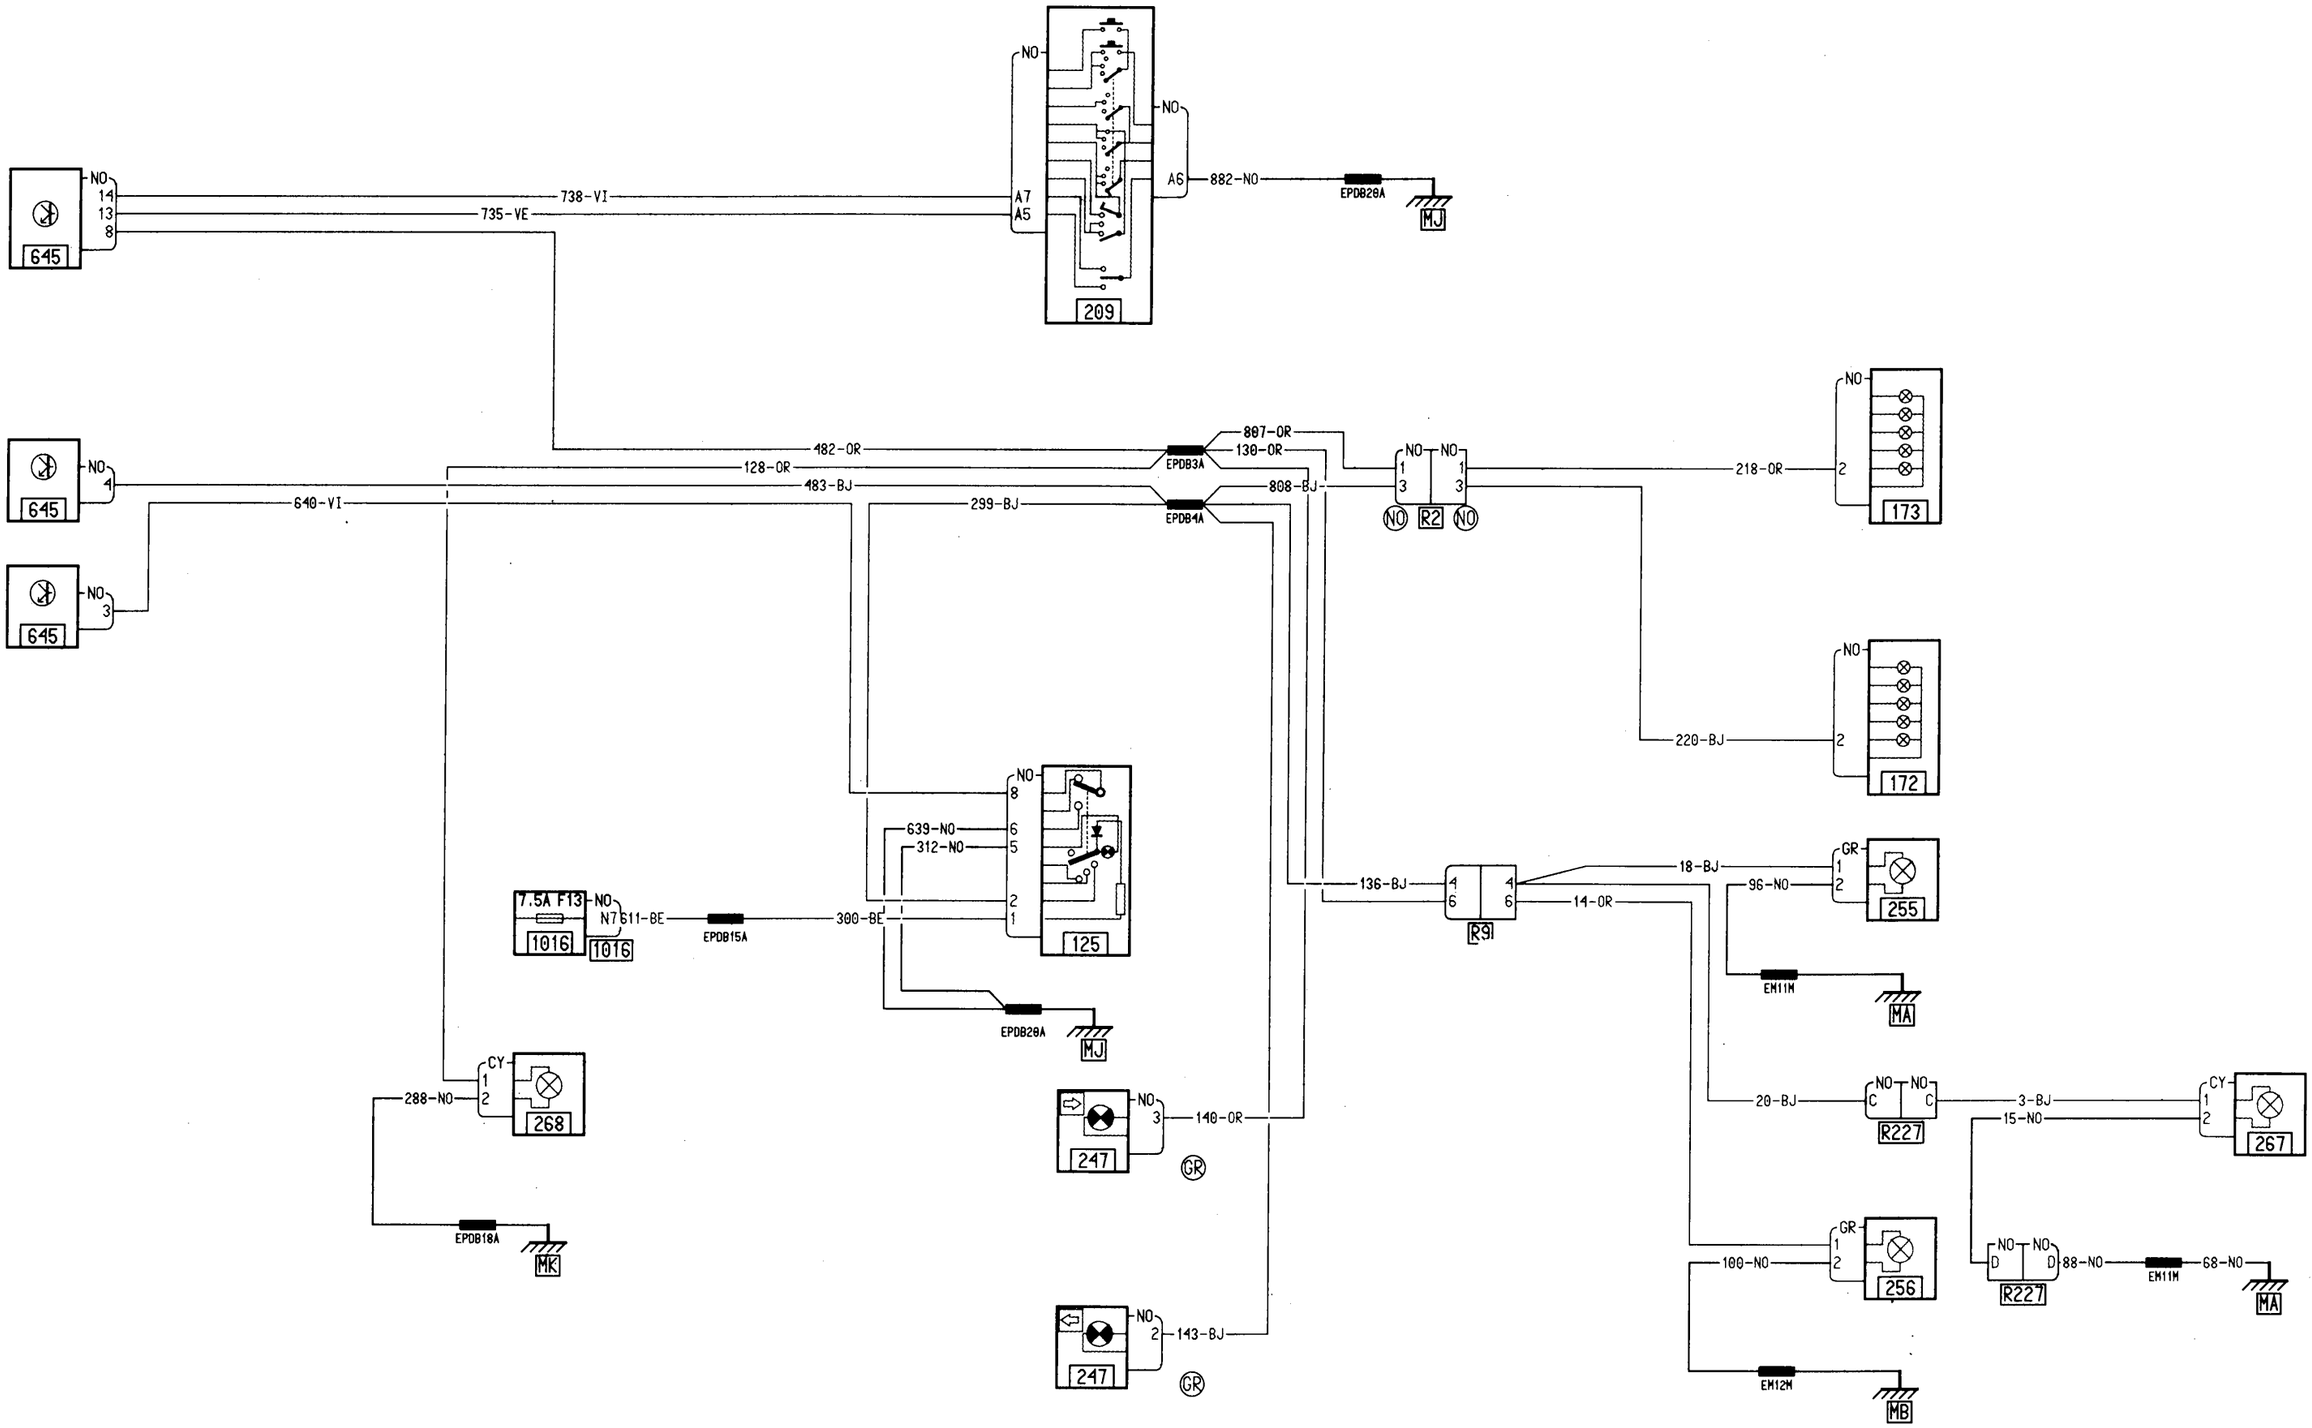
645
NO
14
13
8
738-VI
735-VE
209
A7
A5
A6
882-NO
EPDB28A
MJ
482-OR
128-OR
483-BJ
640-VI
299-BJ
EPDB3A
EPDB4A
807-OR
130-OR
808-BJ
R2
218-OR
173
220-BJ
172
7.5A F13
1016
N7611-BE
EPDB15A
300-BE
639-NO
312-NO
125
EPDB20A
136-BJ
R9
18-BJ
96-NO
GR
255
EM11M
MA
CY
288-NO
268
EPDB18A
MK
247
140-OR
143-BJ
20-BJ
R227
3-BJ
15-NO
267
100-NO
256
EM12M
MB
88-NO
68-NO

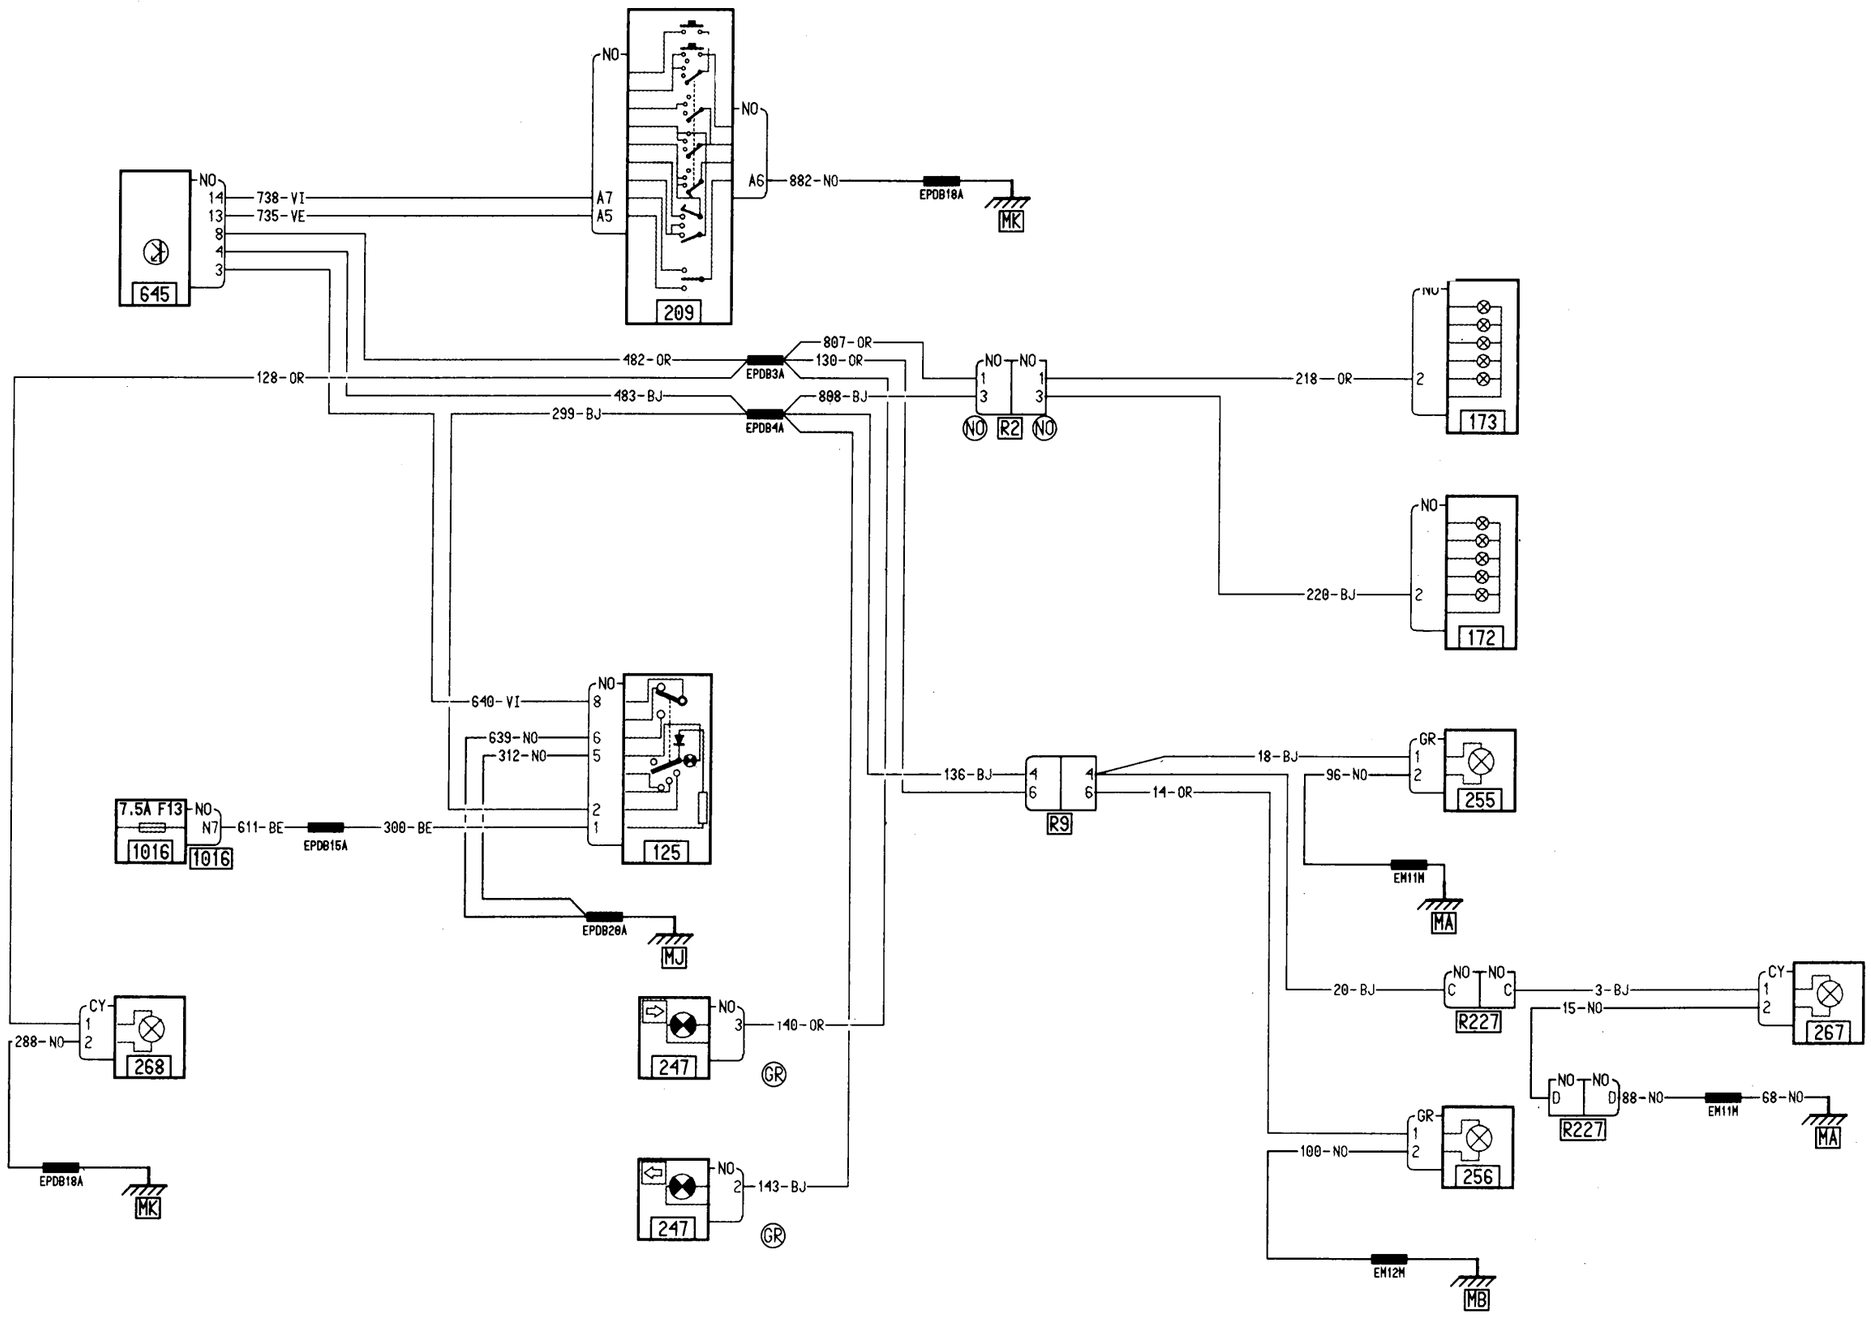
645
738-VI
735-VE
209
882-NO
EPDB18A
MK
482-OR
807-OR
130-OR
128-OR
483-BJ
898-BJ
299-BJ
EPDB3A
EPDB4A
R2
218-OR
173
220-BJ
172
640-VI
639-NO
312-NO
7.5A F13
1016
611-BE
300-BE
EPDB15A
125
EPDB20A
MJ
136-BJ
R9
18-BJ
96-NO
255
EM11M
MA
20-BJ
R227
3-BJ
15-NO
267
88-NO
68-NO
100-NO
256
EM12M
MB
288-NO
268
247
140-OR
143-BJ
GR

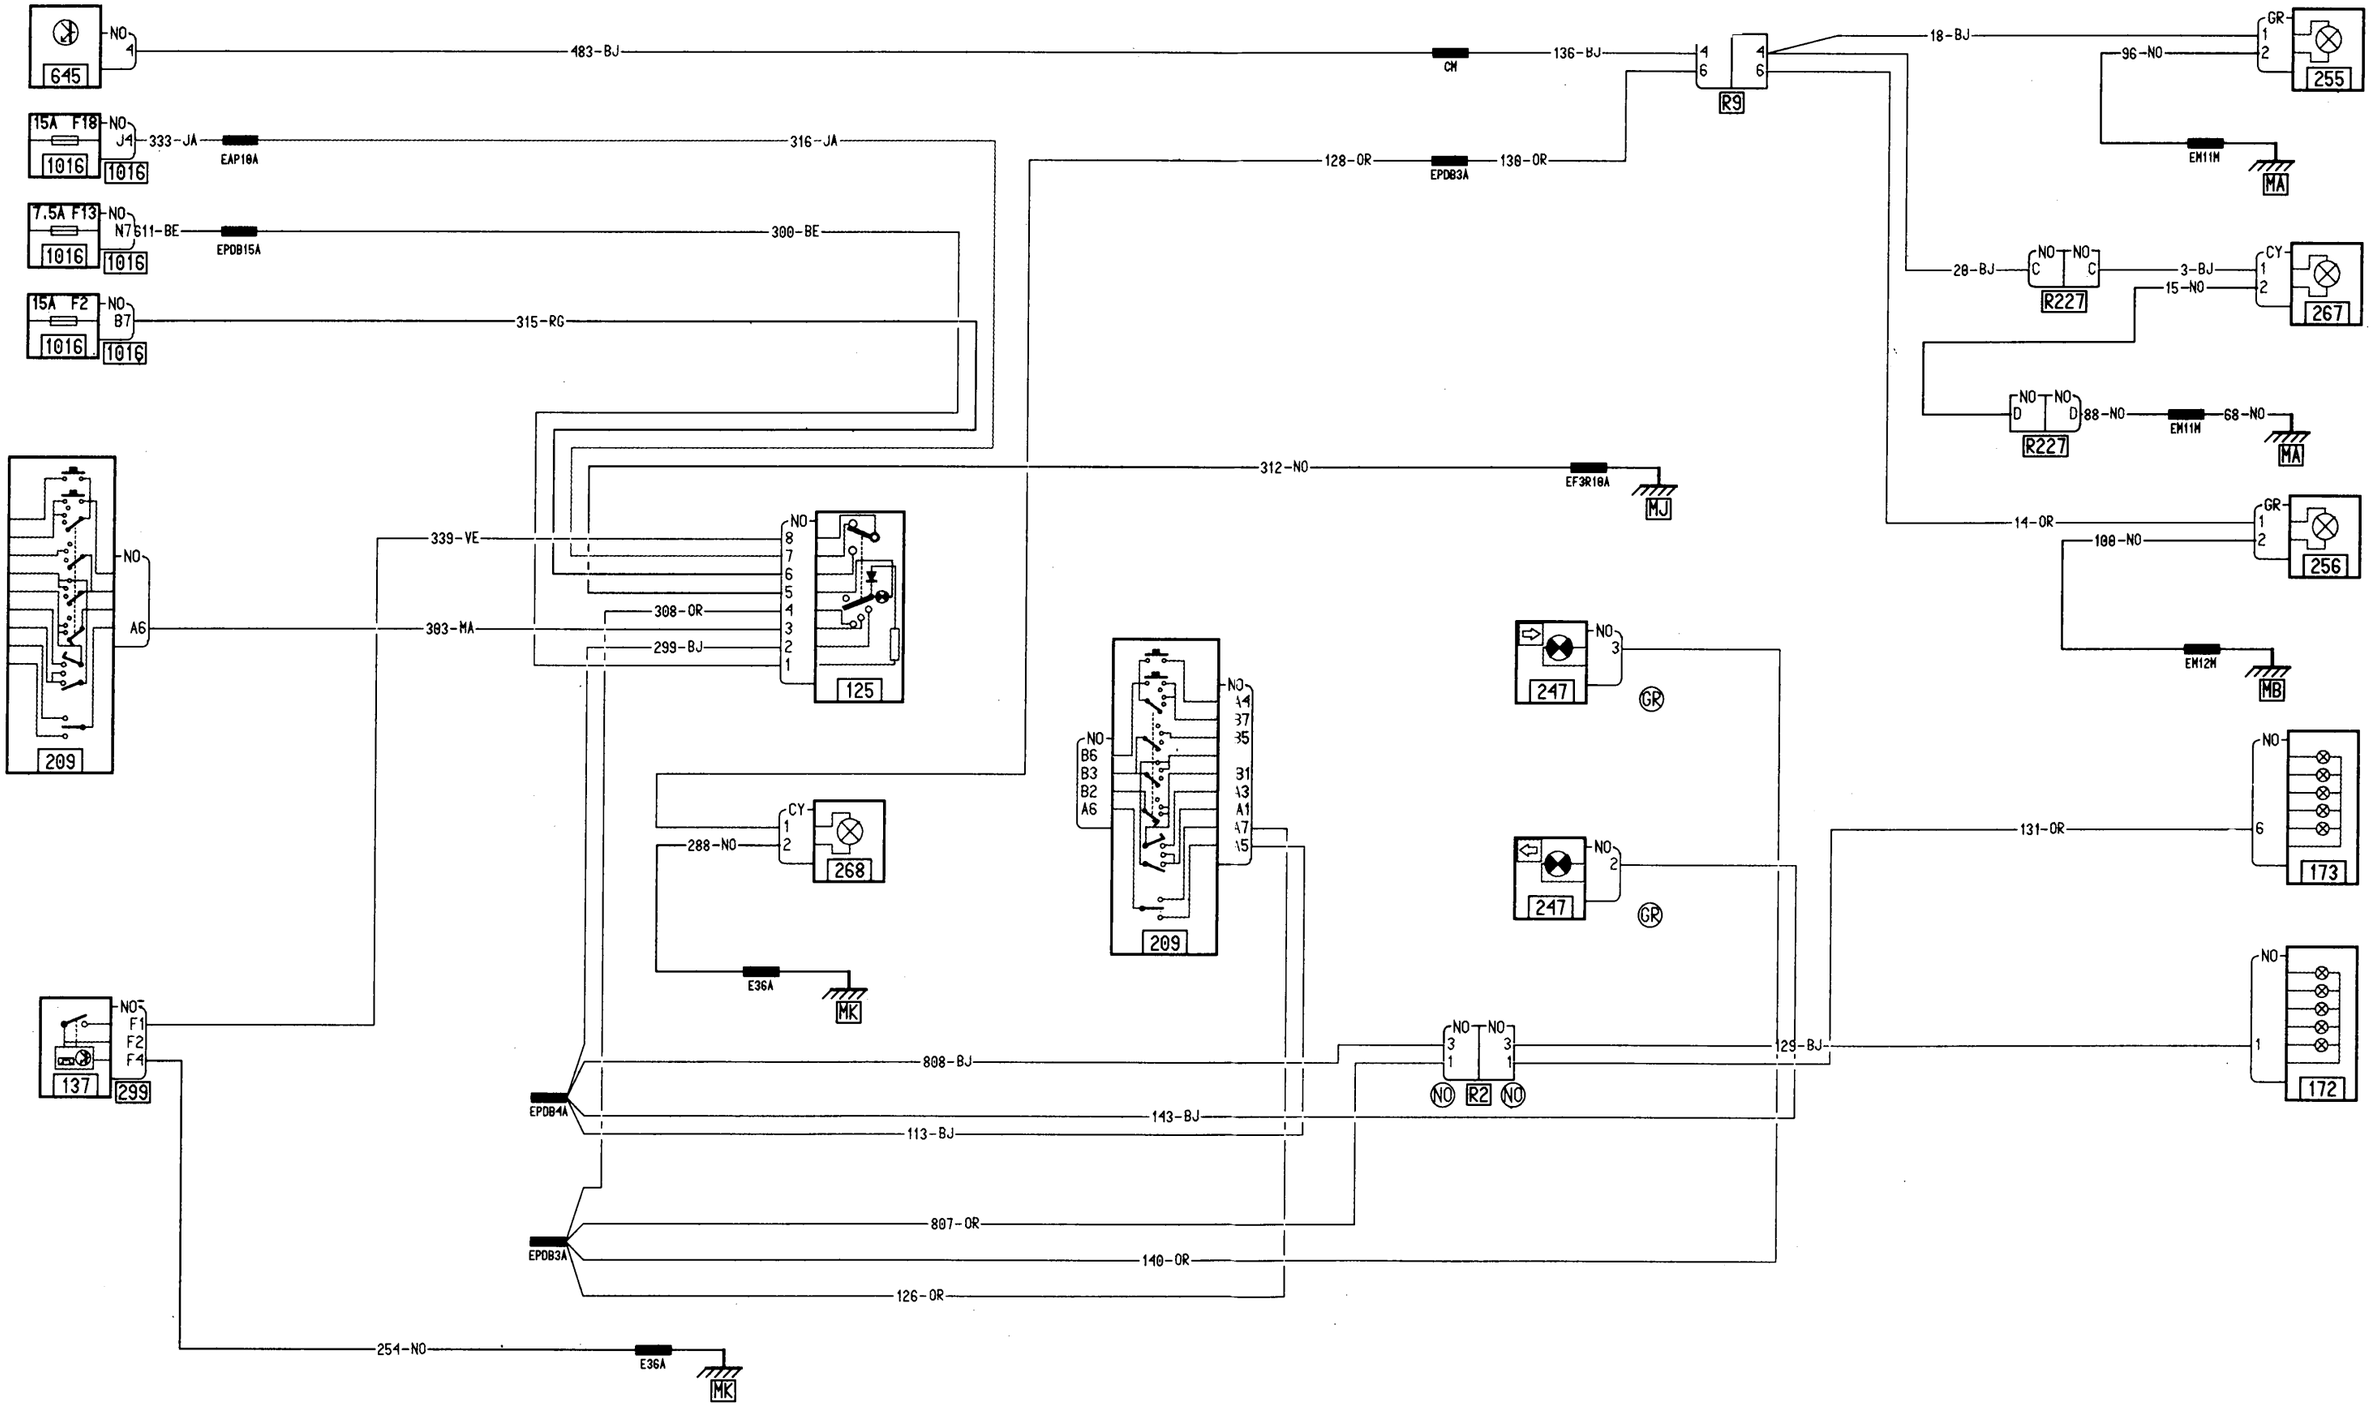
645
NO 4
483-BJ
CM
136-BJ
R9
18-BJ
96-NO
GR 1 2
255
EM11M
MA
15A F18
1016
NO J4
333-JA
EAP10A
316-JA
1016
128-OR
EPDB3A
130-OR
7.5A F13
NO N7
611-BE
EPDB15A
300-BE
15A F2
NO B7
315-RG
312-NO
EF3R10A
MJ
20-BJ
NO C
R227
3-BJ
CY 1 2
267
15-NO
NO D
88-NO
EM11M
68-NO
MA
14-OR
GR 1 2
256
100-NO
EM12M
MB
NO A6
209
339-VE
303-MA
308-OR
299-BJ
125
288-NO
CY 1 2
268
E36A
MK
NO B6 B3 B2 A6
209
247
GR
131-OR
NO 6
173
NO 1
172
137
NO F1 F2 F4
299
808-BJ
EPDB4A
113-BJ
143-BJ
807-OR
EPDB3A
140-OR
126-OR
NO 3 1
NO 3 1
NO R2 NO
129-BJ
254-NO
E36A
MK

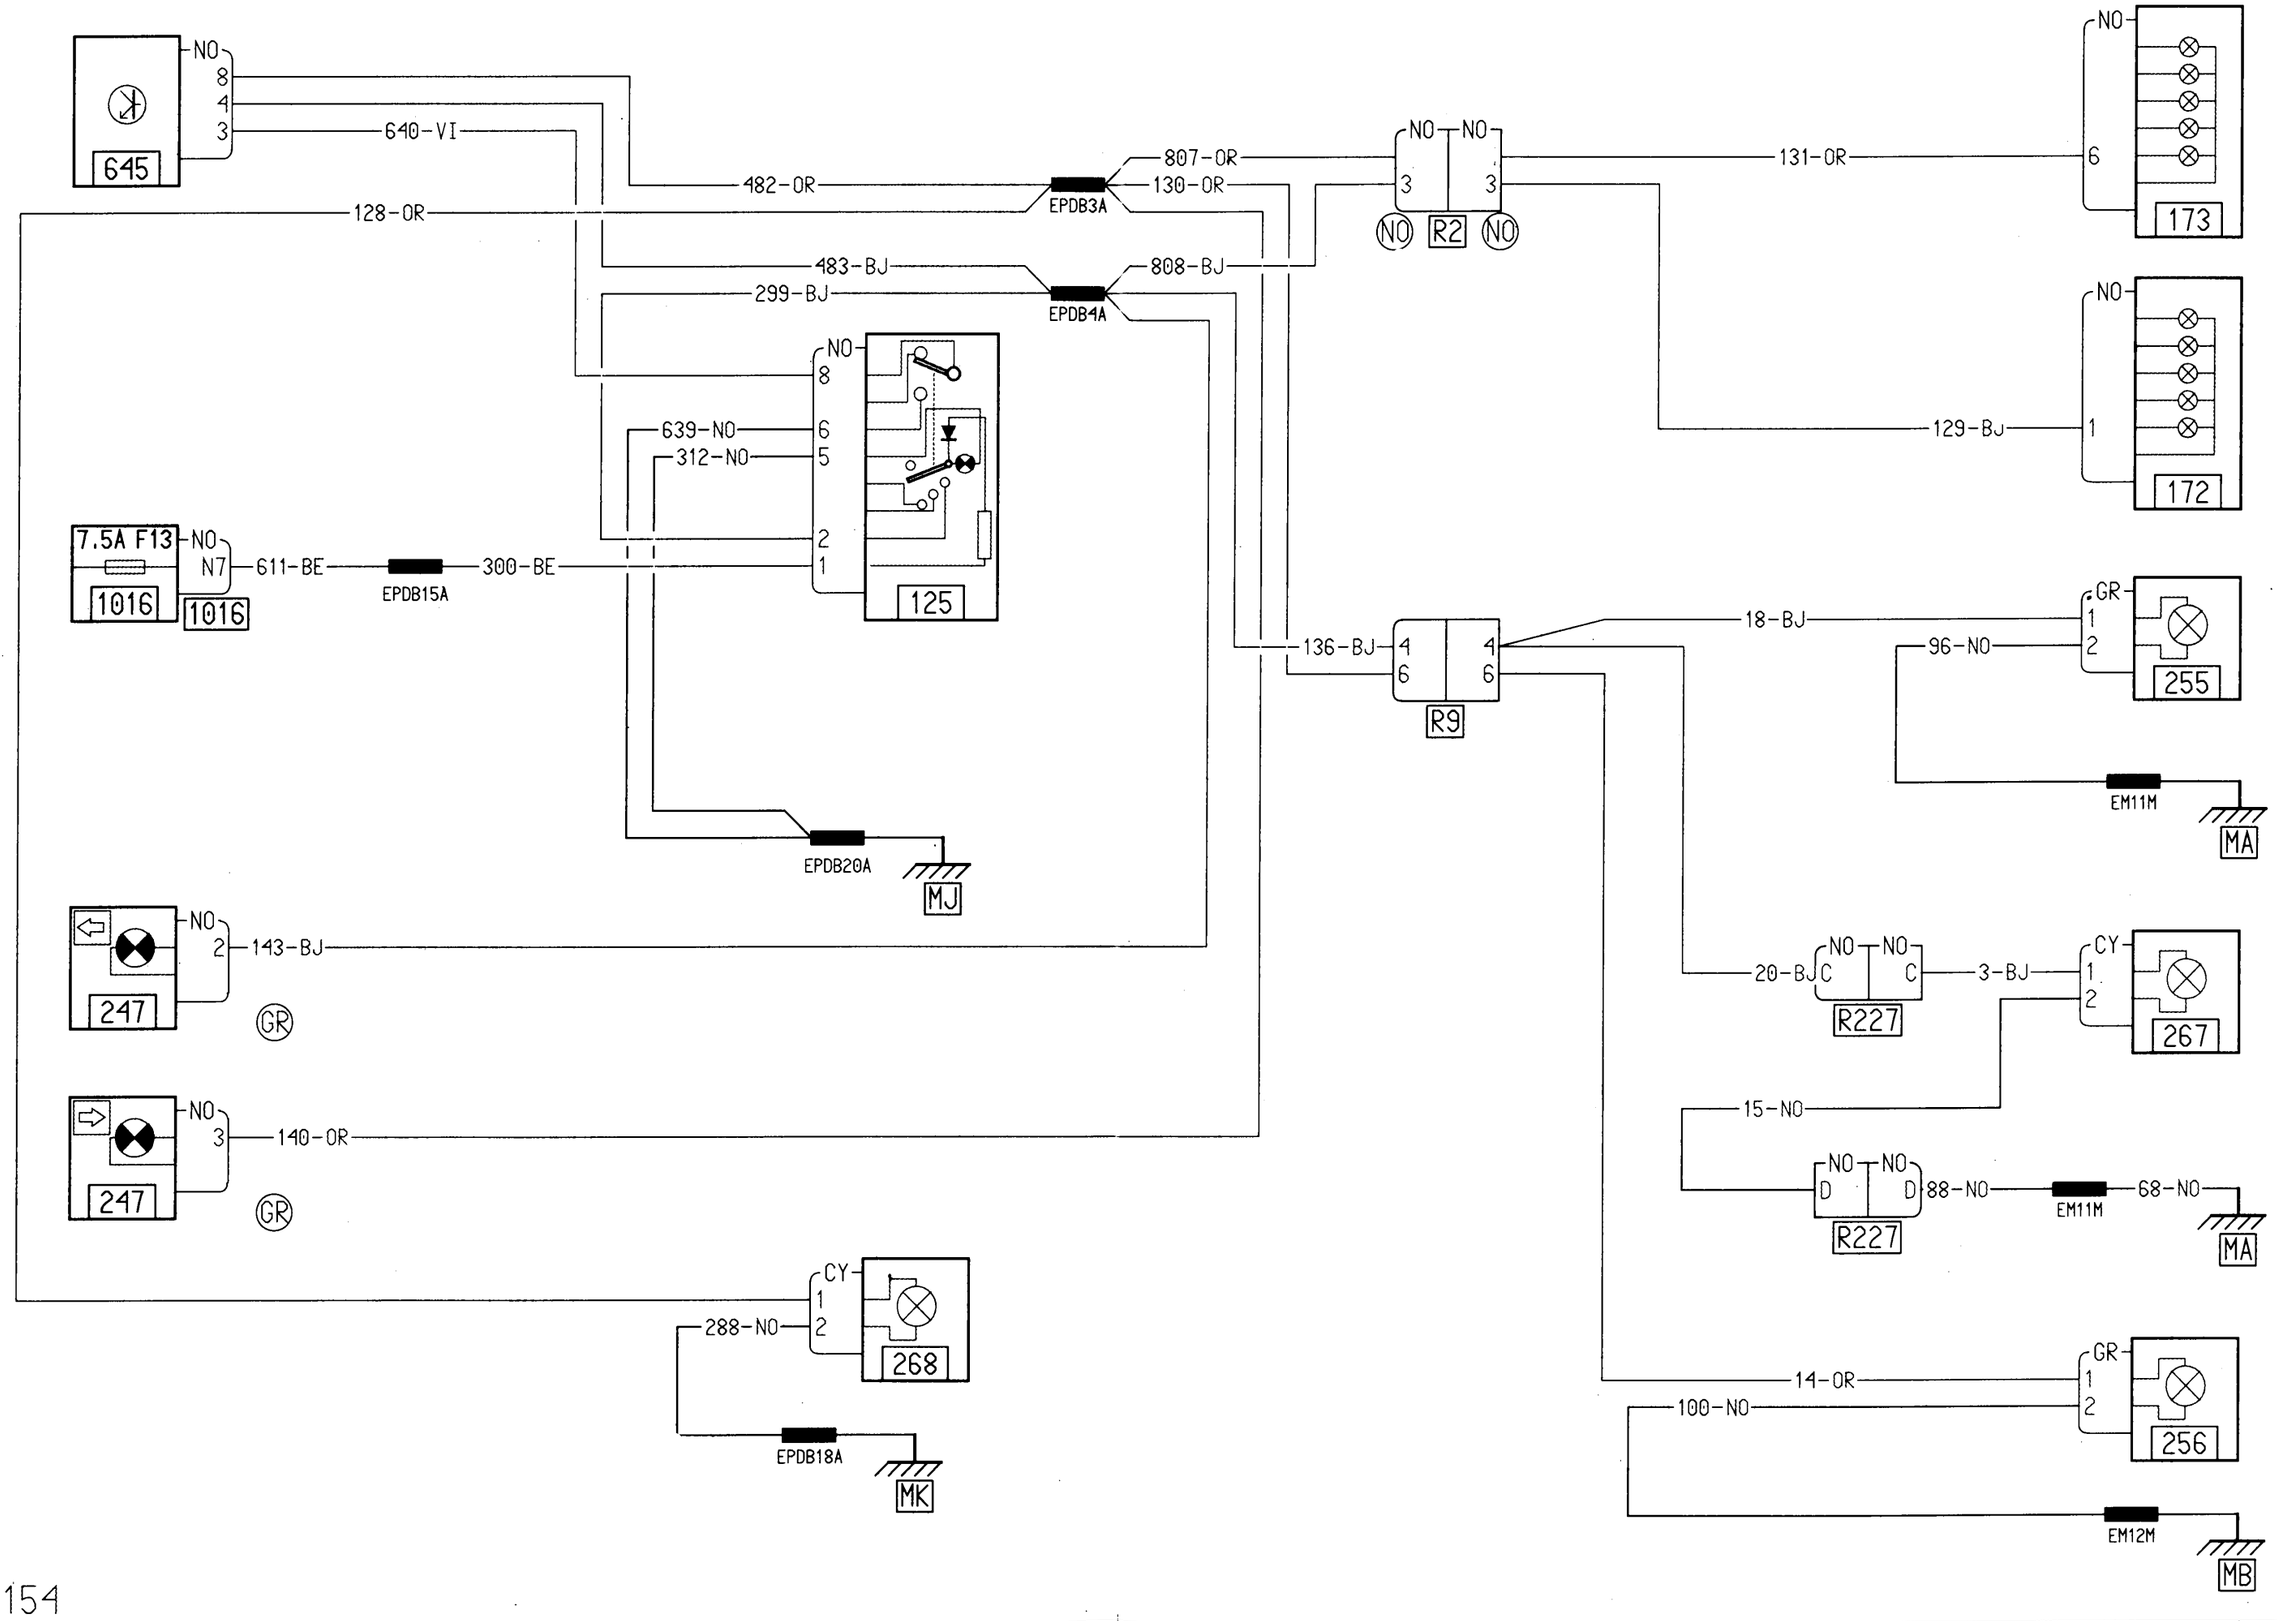
645
NO
8
4
3
640-VI
482-OR
128-OR
EPDB3A
807-OR
130-OR
NO NO
3 3
NO R2 NO
131-OR
NO
6
173
483-BJ
299-BJ
EPDB4A
808-BJ
NO
8
639-NO
6
312-NO
5
2
1
125
129-BJ
NO
1
172
7.5A F13
NO
N7
611-BE
EPDB15A
300-BE
1016
1016
136-BJ
4
6
4
6
R9
18-BJ
GR
1
2
255
96-NO
EM11M
MA
EPDB20A
MJ
NO
2
143-BJ
247
GR
20-BJ
NO NO
C C
R227
3-BJ
CY
1
2
267
15-NO
NO
3
140-OR
247
GR
NO NO
D D
R227
88-NO
EM11M
68-NO
MA
CY
1
2
288-NO
268
EPDB18A
MK
14-OR
100-NO
GR
1
2
256
EM12M
MB

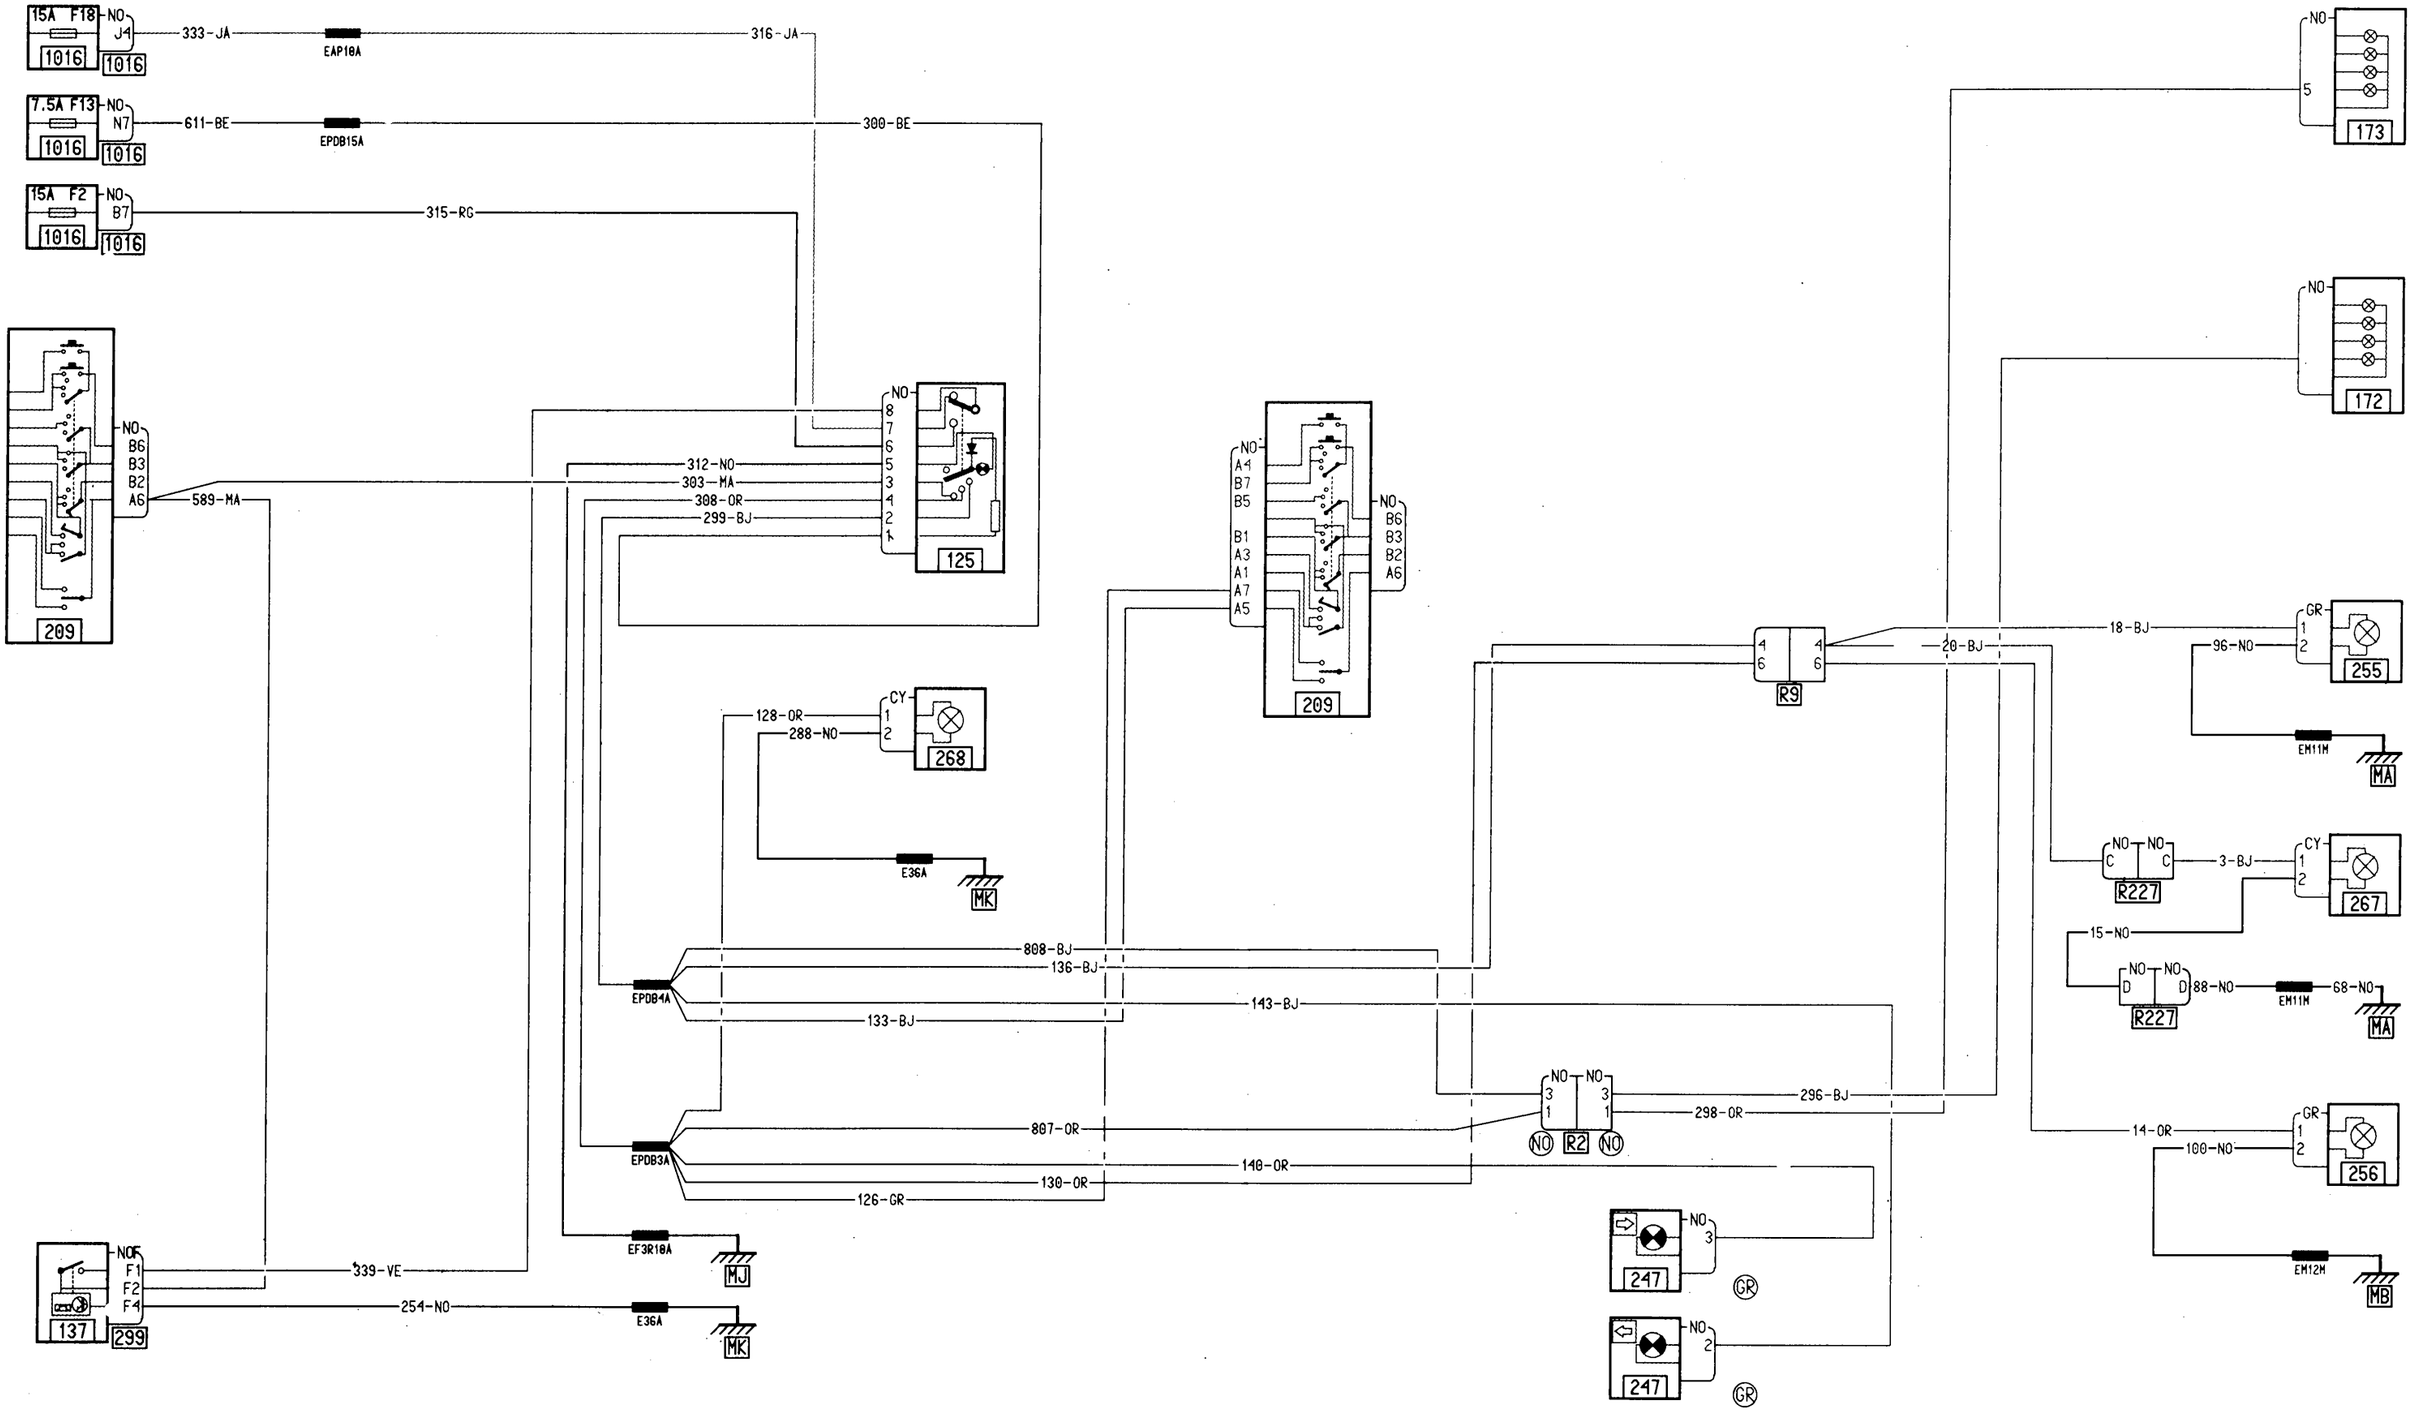
15A F18
NO
J4
1016
1016
333-JA
EAP10A
316-JA
7.5A F13
NO
N7
1016
1016
611-BE
EPDB15A
300-BE
15A F2
NO
B7
1016
1016
315-RG
NO
B6
B3
B2
A6
209
589-MA
NO
8
7
6
5
3
4
2
1
125
312-NO
303-MA
308-OR
299-BJ
CY
1
2
268
128-OR
288-NO
E36A
MK
NO
A4
B7
B5
B1
A3
A1
A7
A5
209
NO
B6
B3
B2
A6
NO
5
173
NO
172
4
6
R9
18-BJ
20-BJ
GR
1
2
255
96-NO
EM11M
MA
NO
C
NO
C
R227
3-BJ
CY
1
2
267
15-NO
NO
D
NO
D
R227
88-NO
EM11M
68-NO
MA
808-BJ
136-BJ
143-BJ
133-BJ
EPDB4A
NO
3
1
NO
3
1
NO
R2
NO
296-BJ
298-OR
807-OR
EPDB3A
140-OR
130-OR
126-GR
14-OR
GR
1
2
256
100-NO
EM12M
MB
EF3R10A
MJ
NO
F1
F2
F1
137
299
339-VE
254-NO
E36A
MK
NO
3
247
GR
NO
2
247
GR

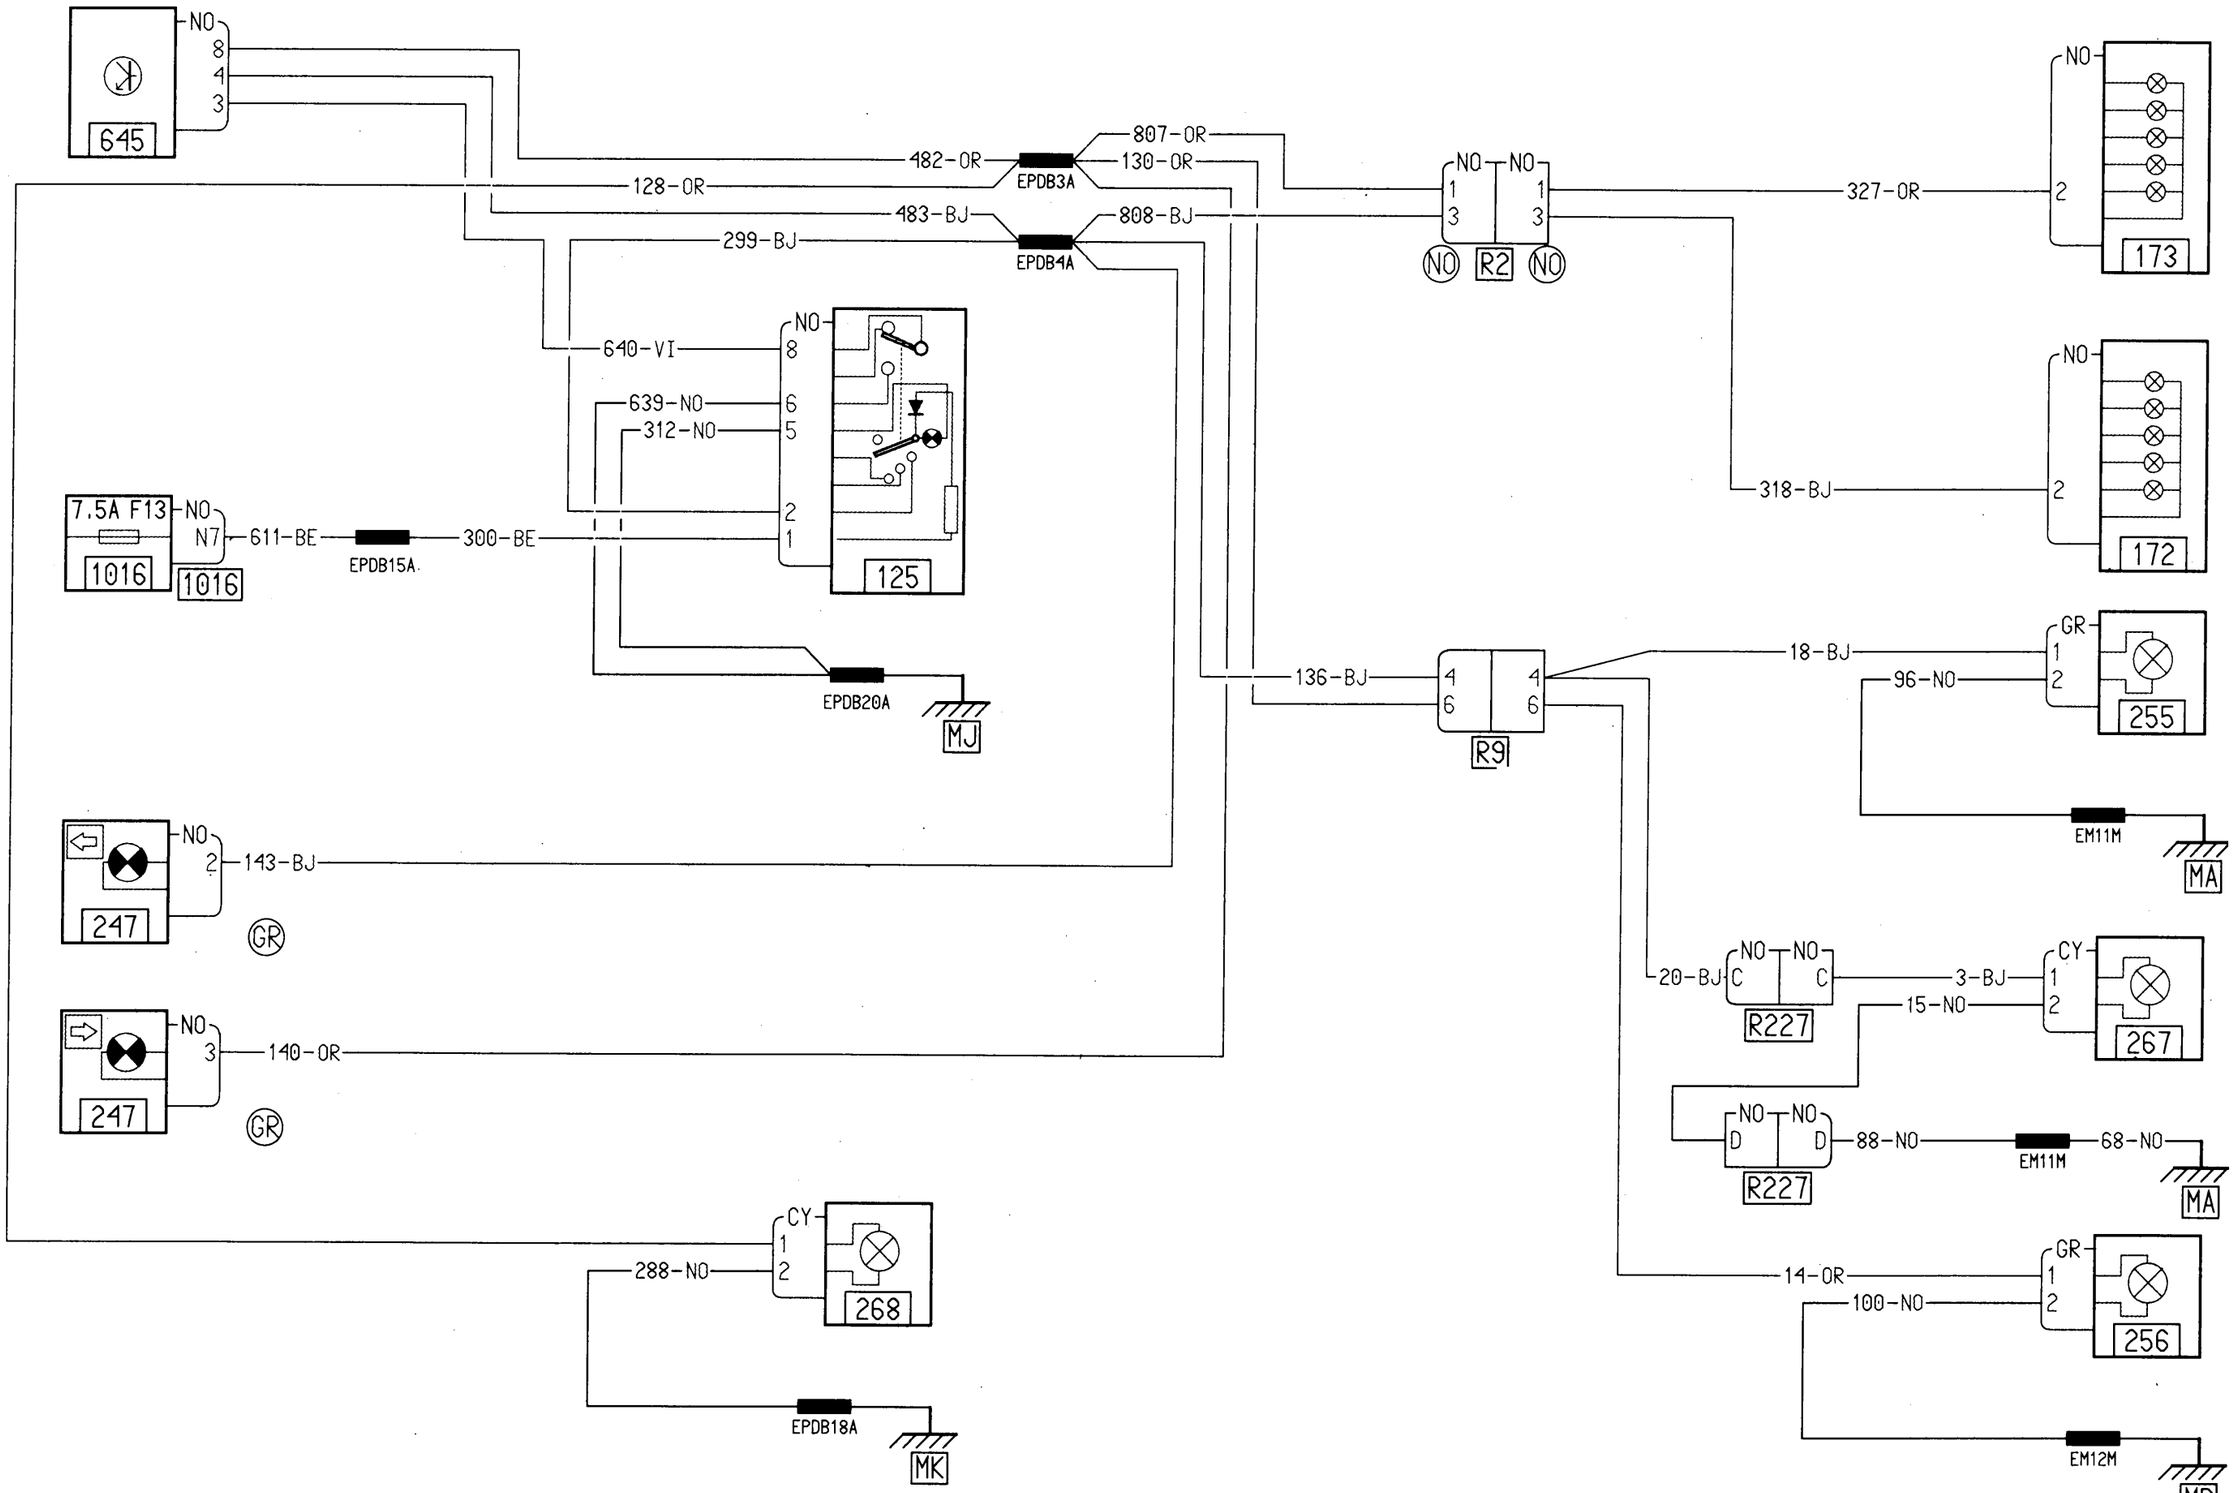
645
NO
8
4
3
482-OR
128-OR
483-BJ
299-BJ
EPDB3A
EPDB4A
807-OR
130-OR
808-BJ
NO
1
3
R2
327-OR
173
318-BJ
172
640-VI
639-NO
312-NO
125
7.5A F13
N7
1016
611-BE
EPDB15A
300-BE
EPDB20A
MJ
136-BJ
R9
18-BJ
96-NO
GR
255
EM11M
MA
247
143-BJ
140-OR
20-BJ
R227
3-BJ
15-NO
CY
267
88-NO
68-NO
288-NO
268
14-OR
100-NO
256
EM12M
MB

INDICATOR AND HAZARD WARNING LIGHT

K25/E2/DG

X64
00

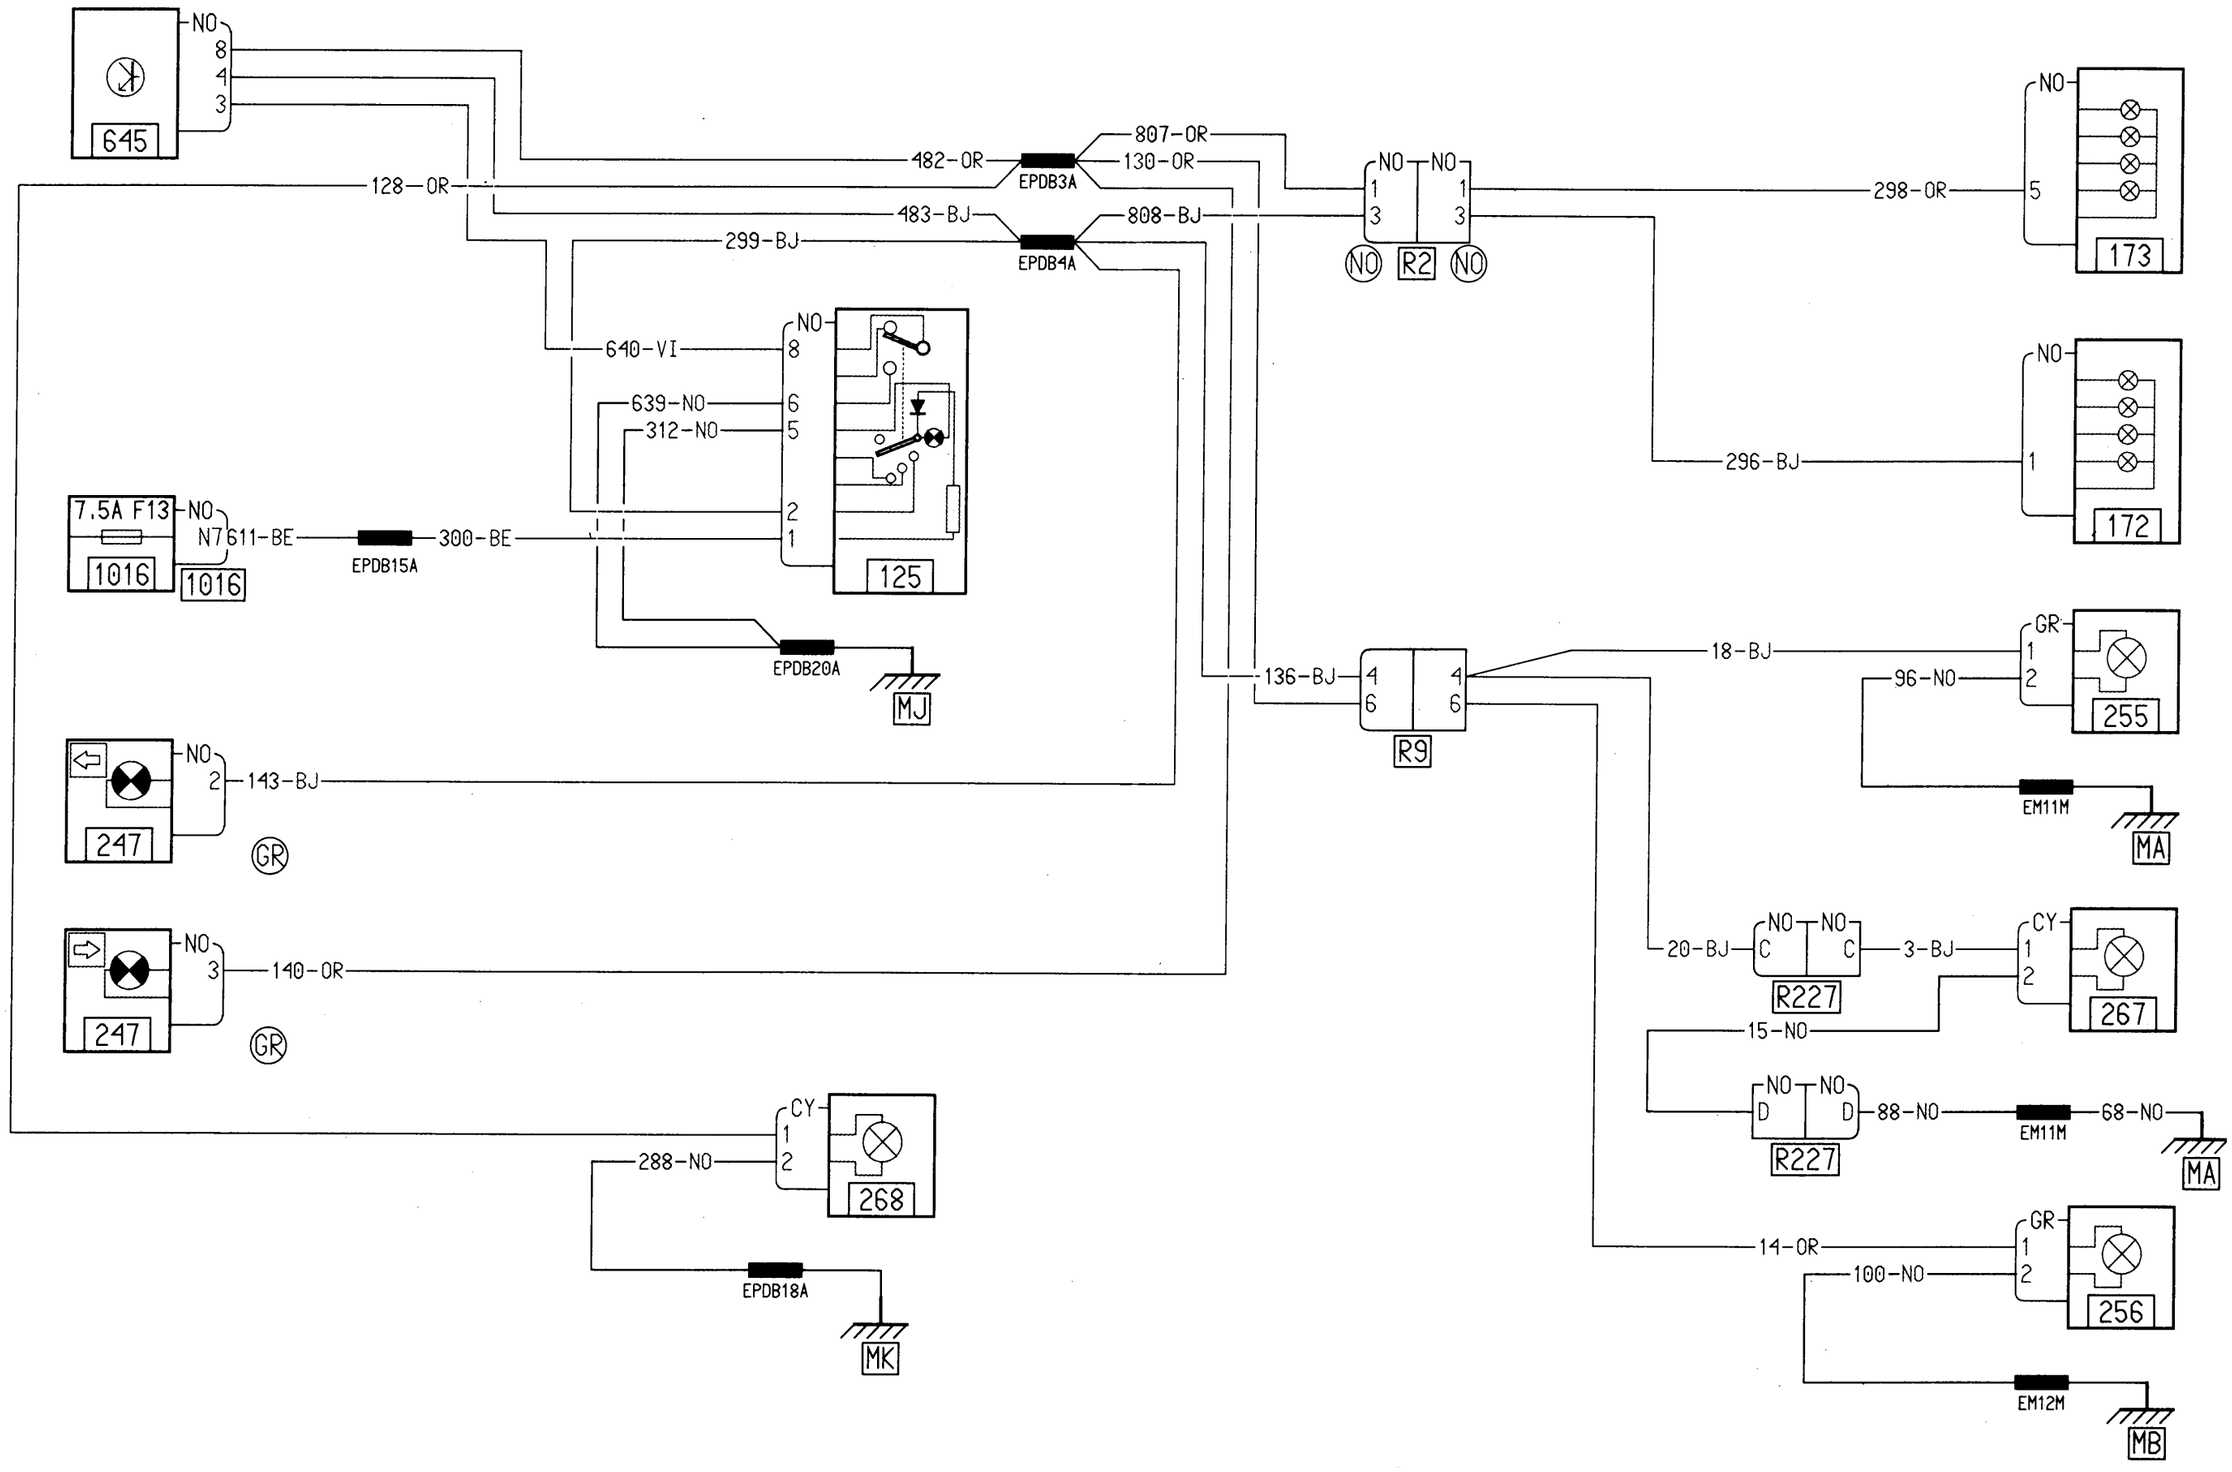

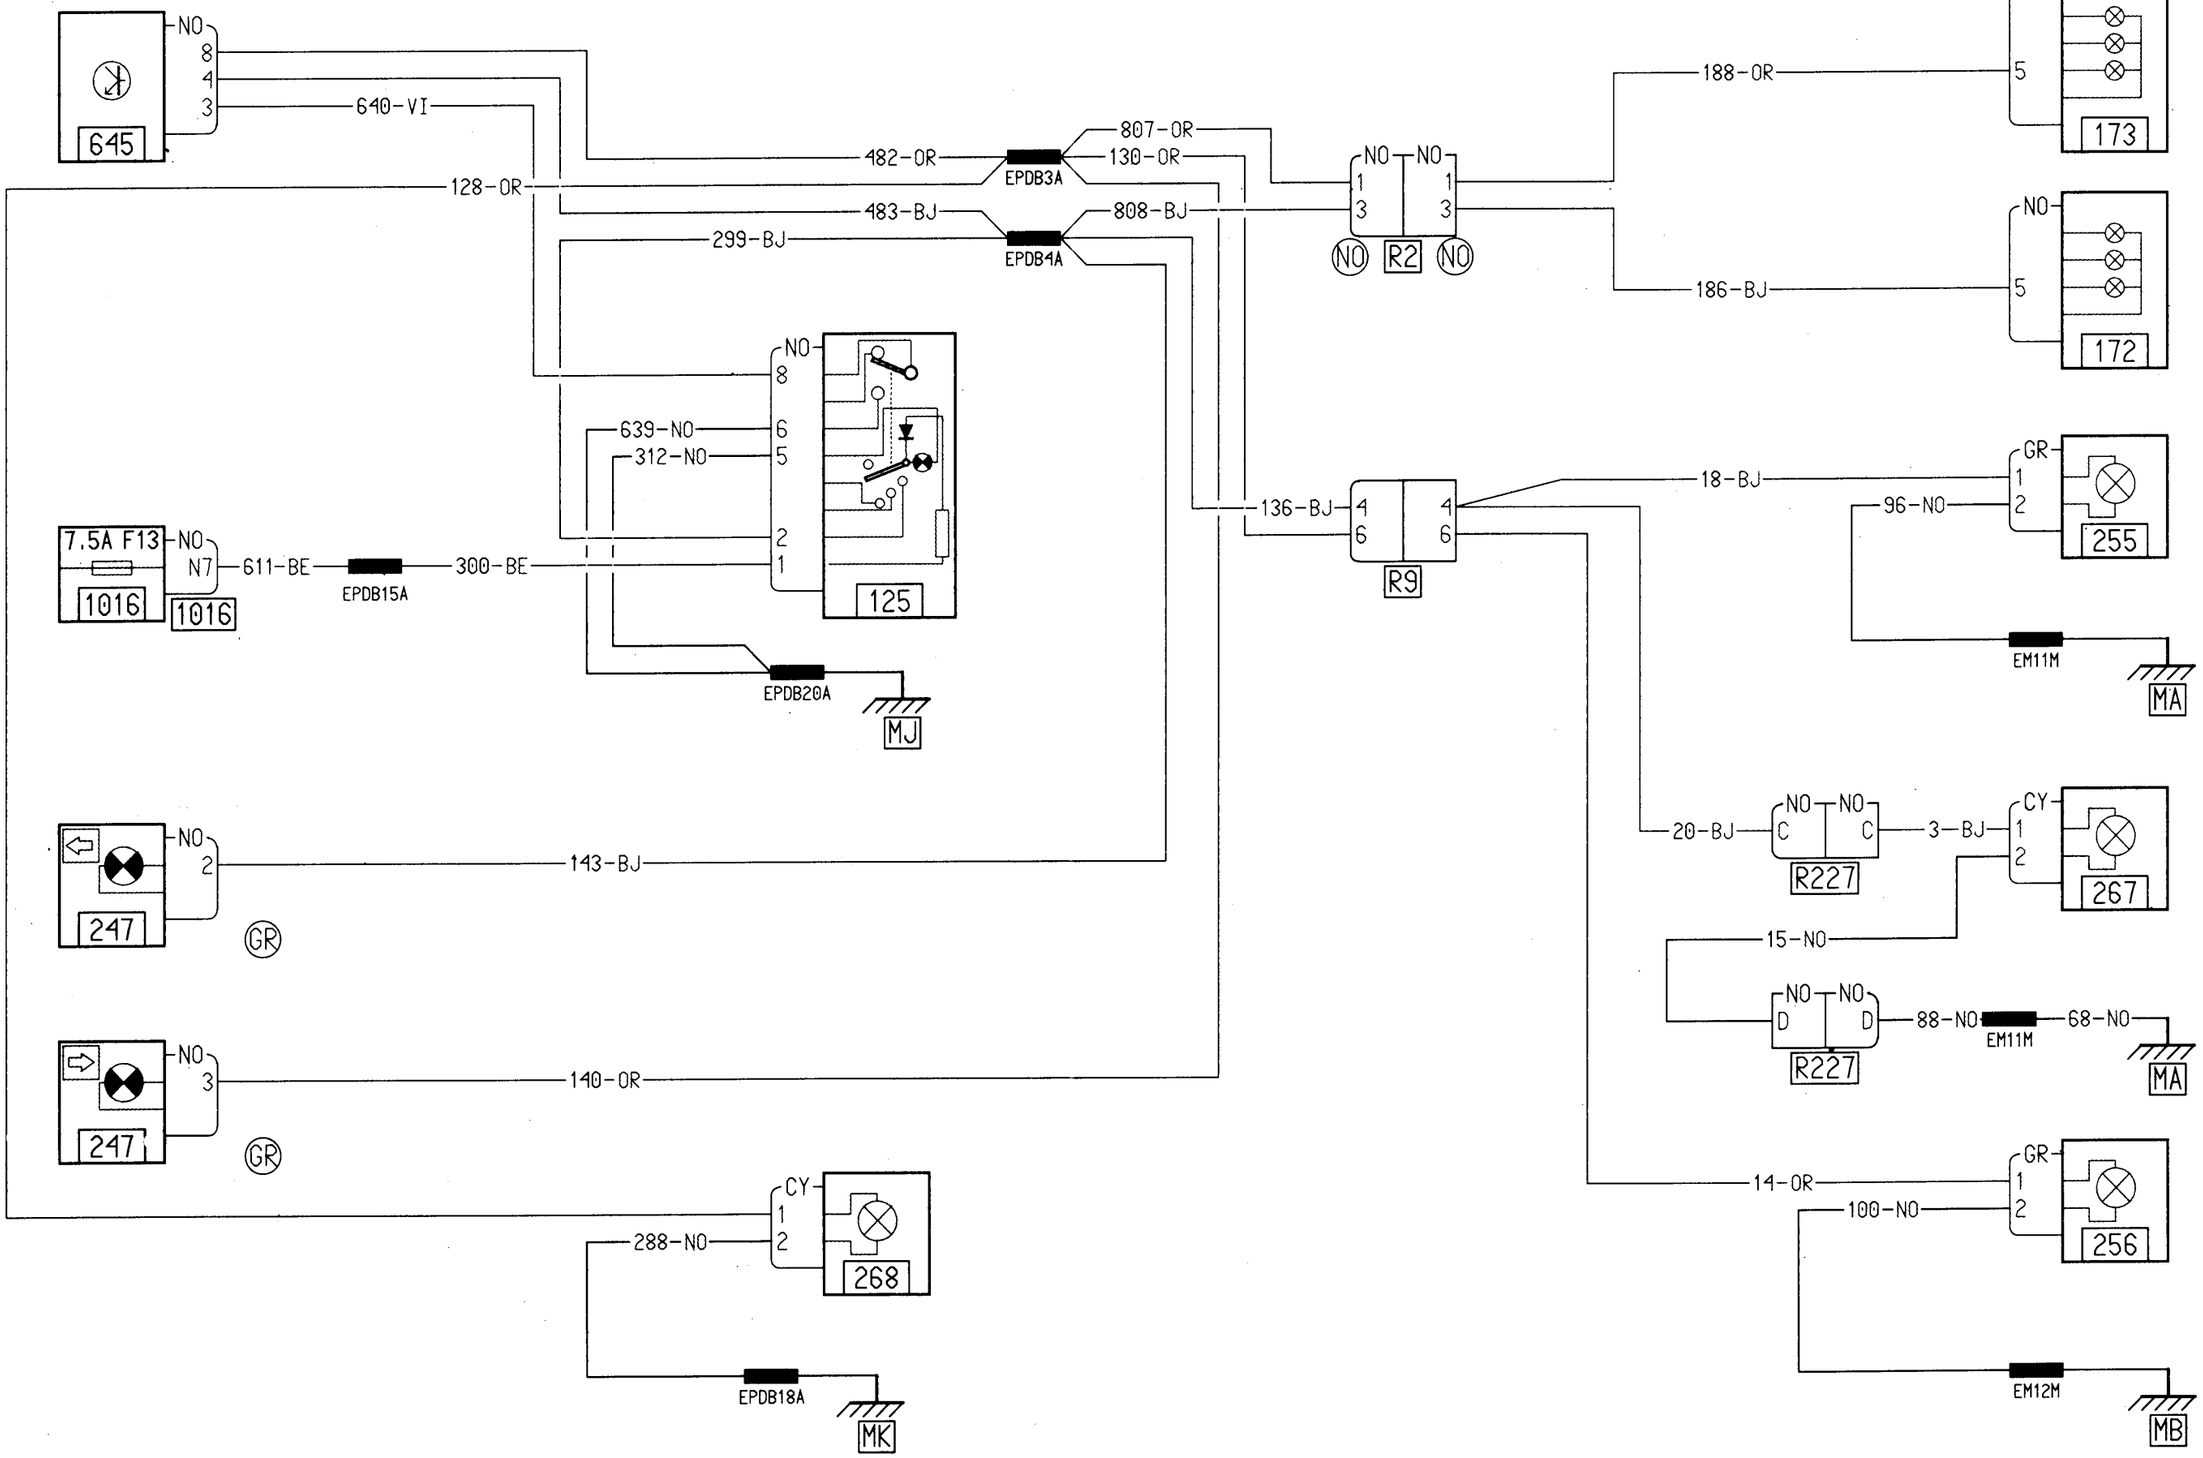
645
NO
8
4
3
640-VI
128-OR
482-OR
483-BJ
299-BJ
EPDB3A
EPDB4A
807-OR
130-OR
808-BJ
NO
1
3
R2
188-OR
186-BJ
173
172
5
639-NO
312-NO
6
5
2
1
125
EPDB20A
MJ
7.5A F13
1016
N7
611-BE
EPDB15A
300-BE
136-BJ
4
6
R9
18-BJ
96-NO
GR
255
EM11M
MA
247
143-BJ
140-OR
20-BJ
C
R227
3-BJ
CY
267
15-NO
D
88-NO
68-NO
14-OR
100-NO
256
EM12M
MB
288-NO
268
EPDB18A
MK

FUEL LEVEL INDICATION

(D64/K4J750),(L64/K4M700),(E64/E2/K4M700),(B64/E7J626)

X64
00

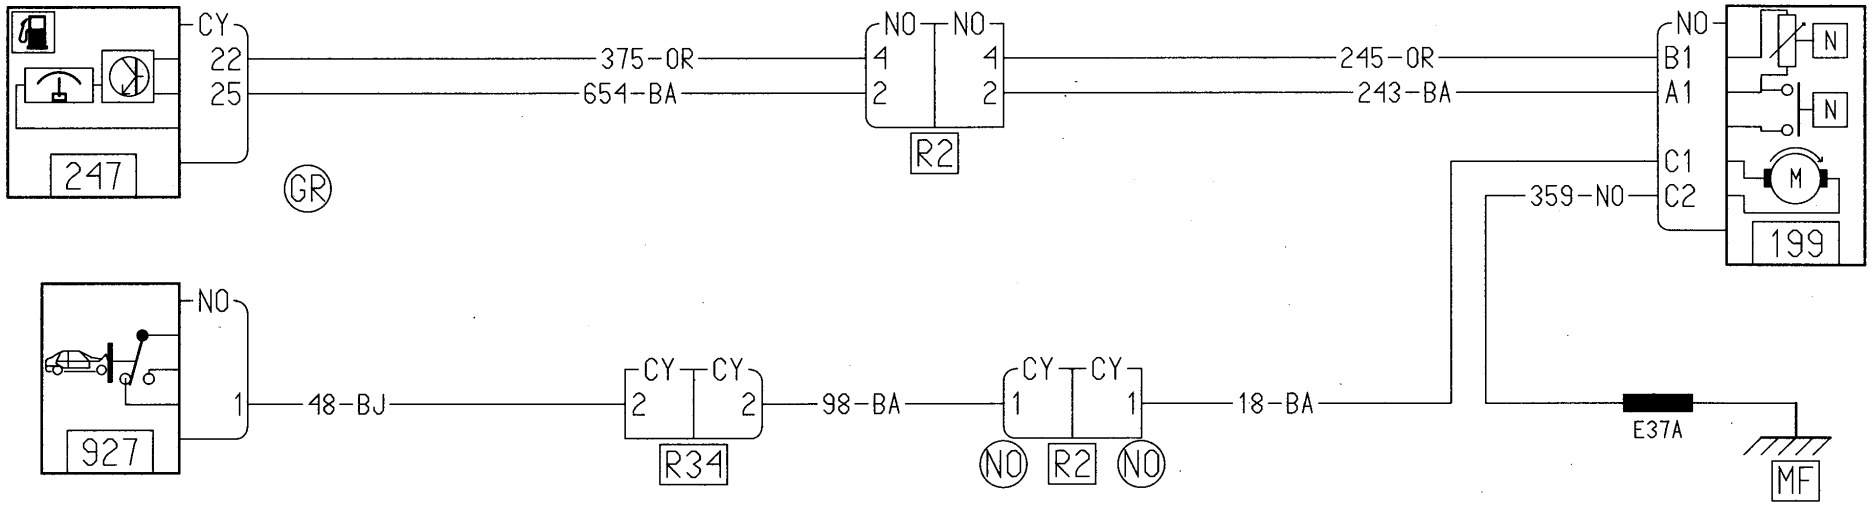

FUEL LEVEL INDICATION

(S64/E1/F8Q622/DG),(F8Q790)

X64

00

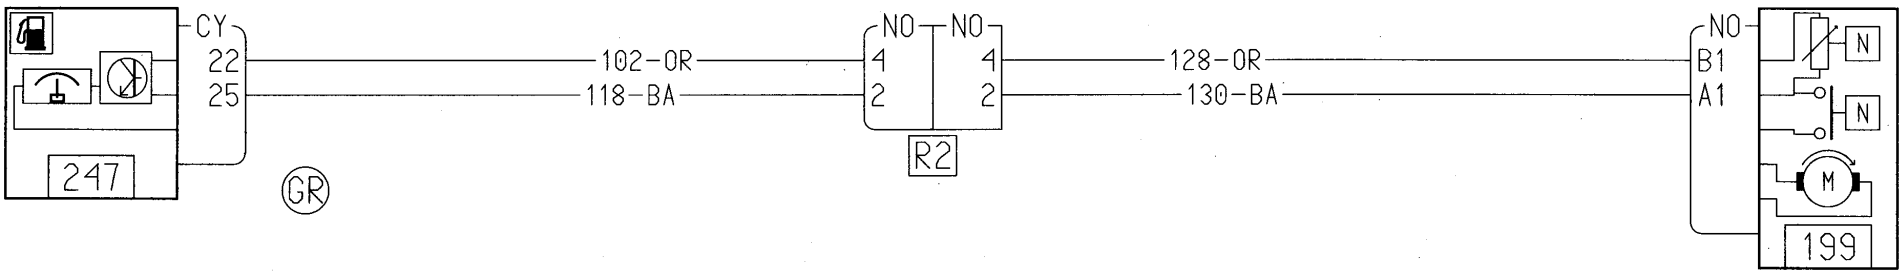

OIL LEVEL INDICATOR

X64
00

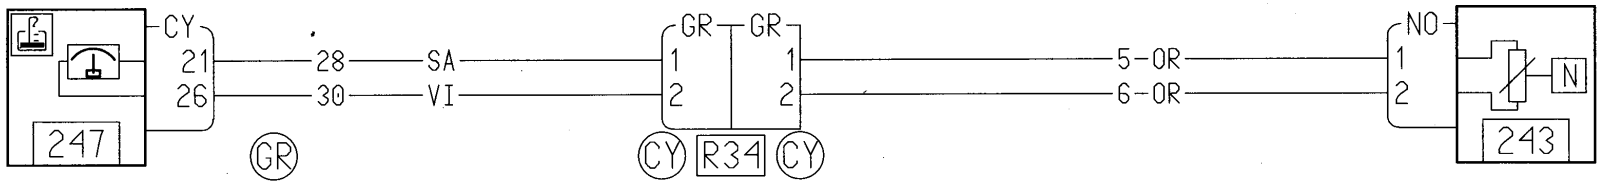

OIL PRESSURE INDICATOR

SAUF MERCOS, TURKEY

X64
00

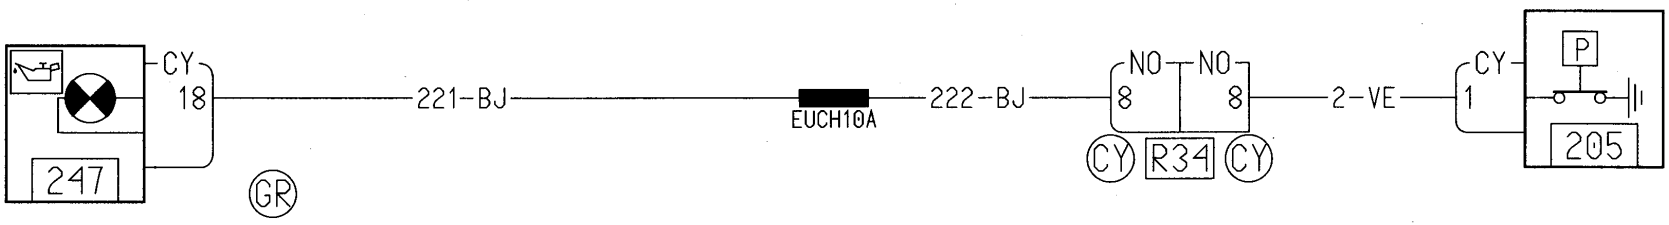

OIL PRESSURE INDICATOR

(B64,L64/F3R798,K4M706/CA/MERCOS/BVM5),(L64/F3R796/CA/TURKEY/BVM5)

X64
00

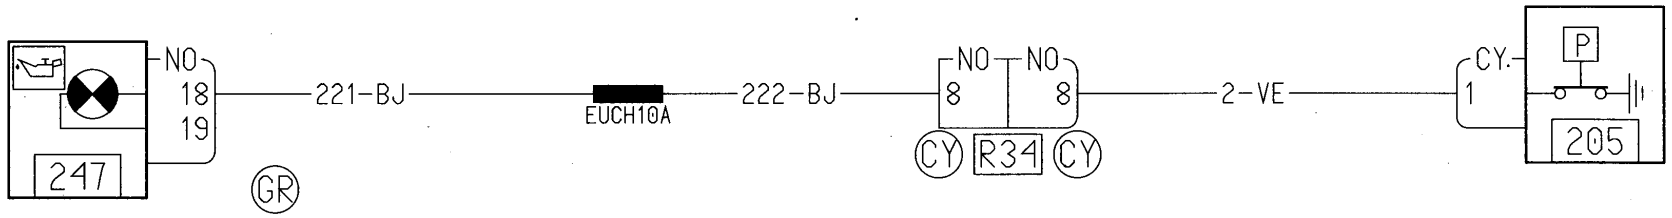

OIL PRESSURE INDICATOR

(L64/F9Q736/SSABS/CA/STHPLG/TURKEY/BVM5),(B64,L64/F9Q736/CA/MERCOS)

X64
00

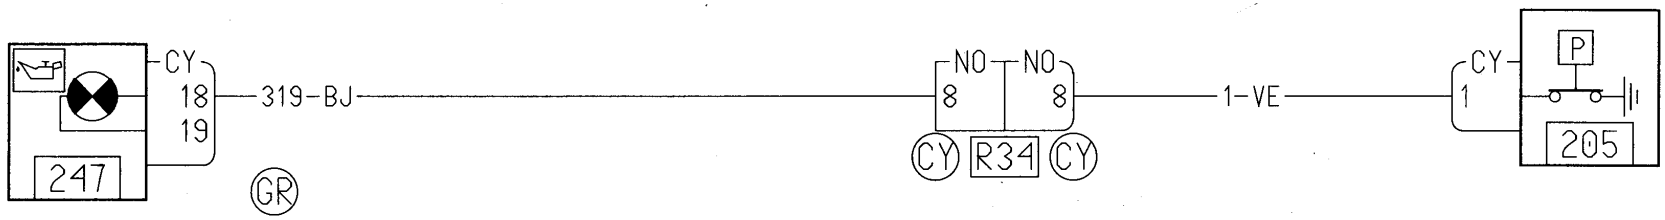

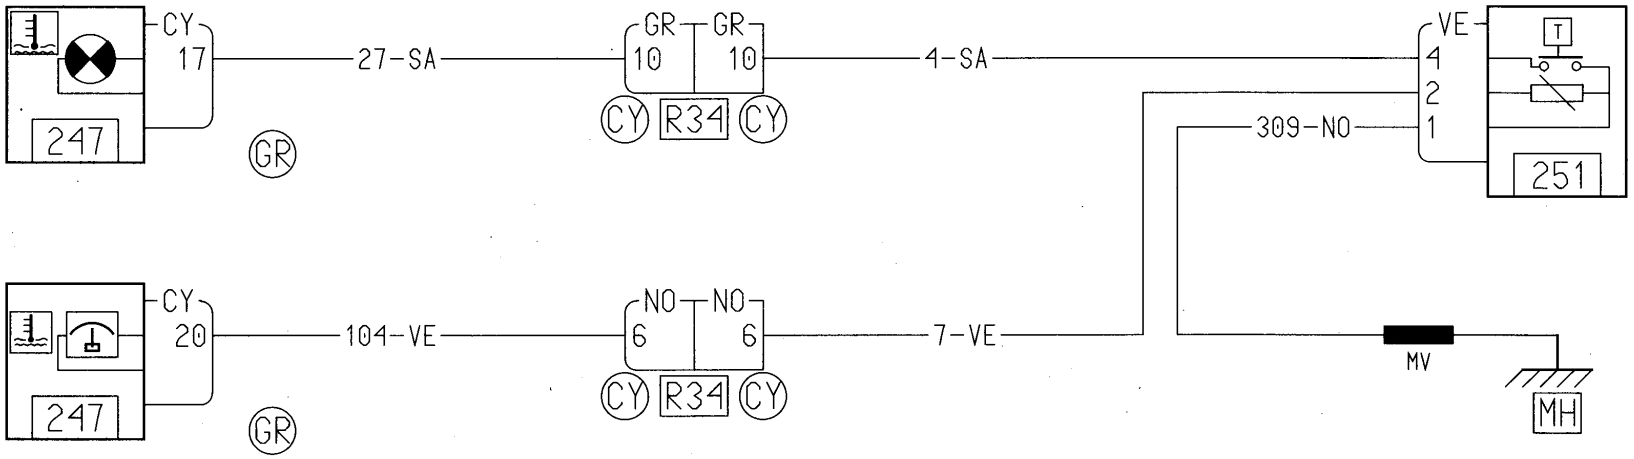
CY
17
247
27-SA
GR
10
GR
10
CY
R34
CY
4-SA
VE
4
2
1
T
309-NO
251
MV
MH
CY
20
247
104-VE
GR
NO
6
NO
6
CY
R34
CY
7-VE

WATER TEMPERATURE INDICATION

(L64/F3R796/CA,CHAUFO/TURKEY/BVM5),(B64,L64/F3R798/CA/MERCOS)

X64
00

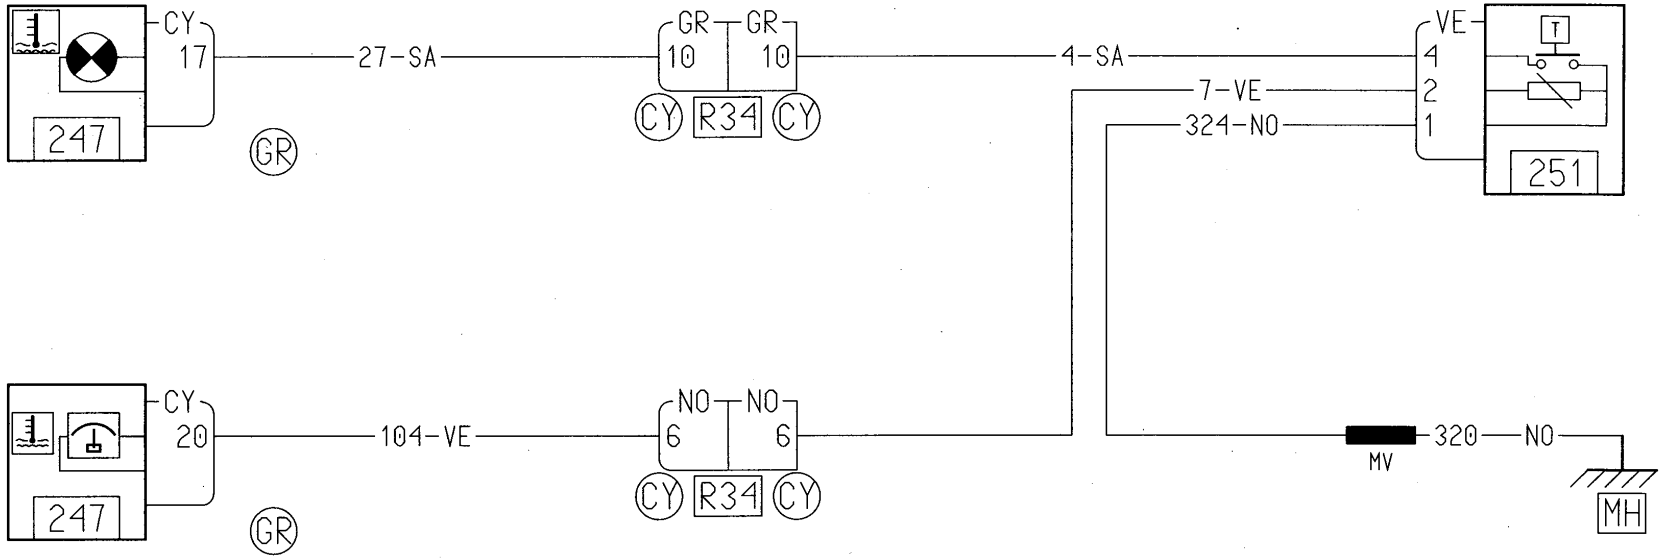

EXTERNAL TEMPERATURE INDICATOR

(E2/DG/RETROE/TETA/2X8KI),(E2/DG/RETROE/TETA/2X8KI),(E2/DD/RETROE/TETA/4X15KI)

X64

00

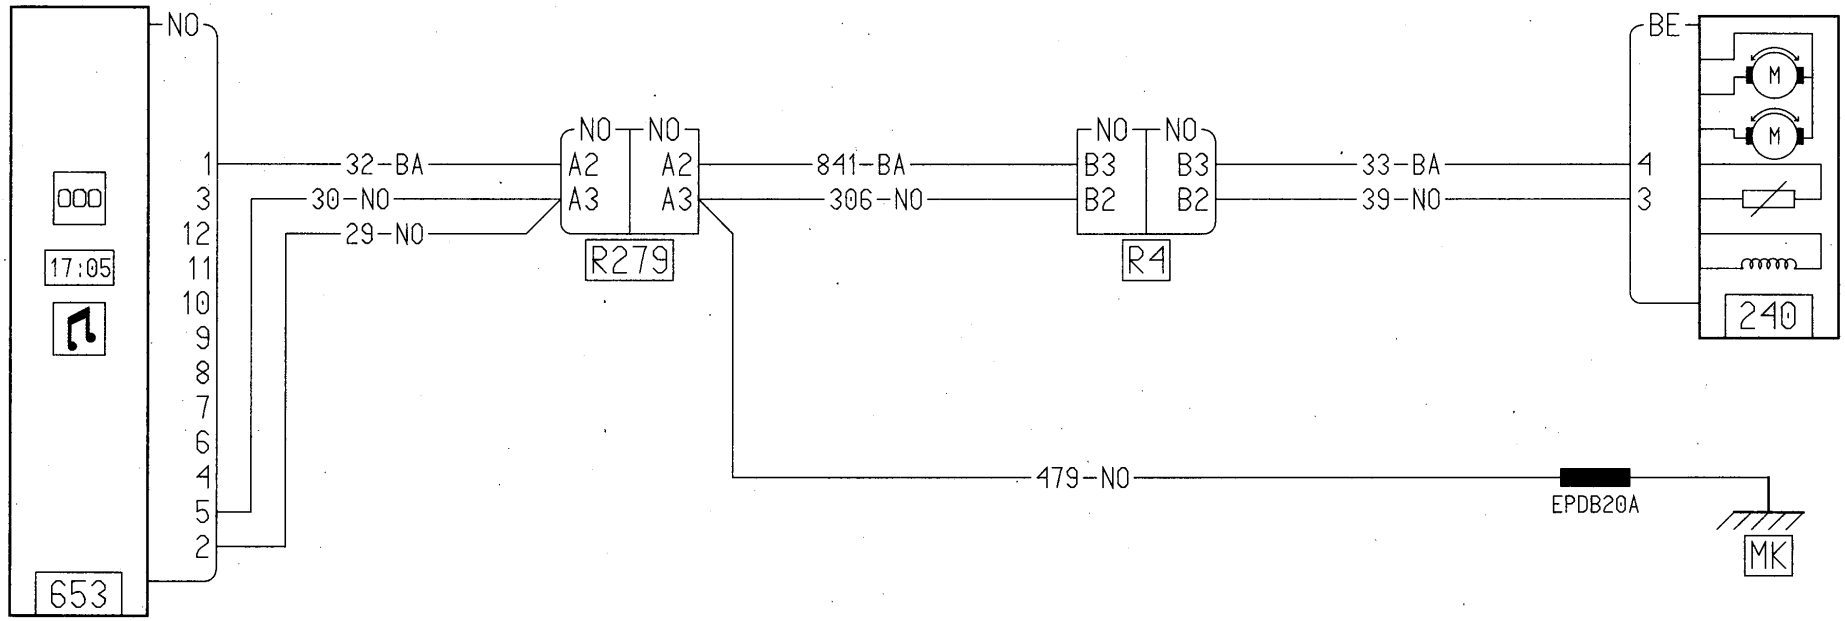

EXTERNAL TEMPERATURE INDICATOR

RETROE/TETA/SRADIO

X64

00

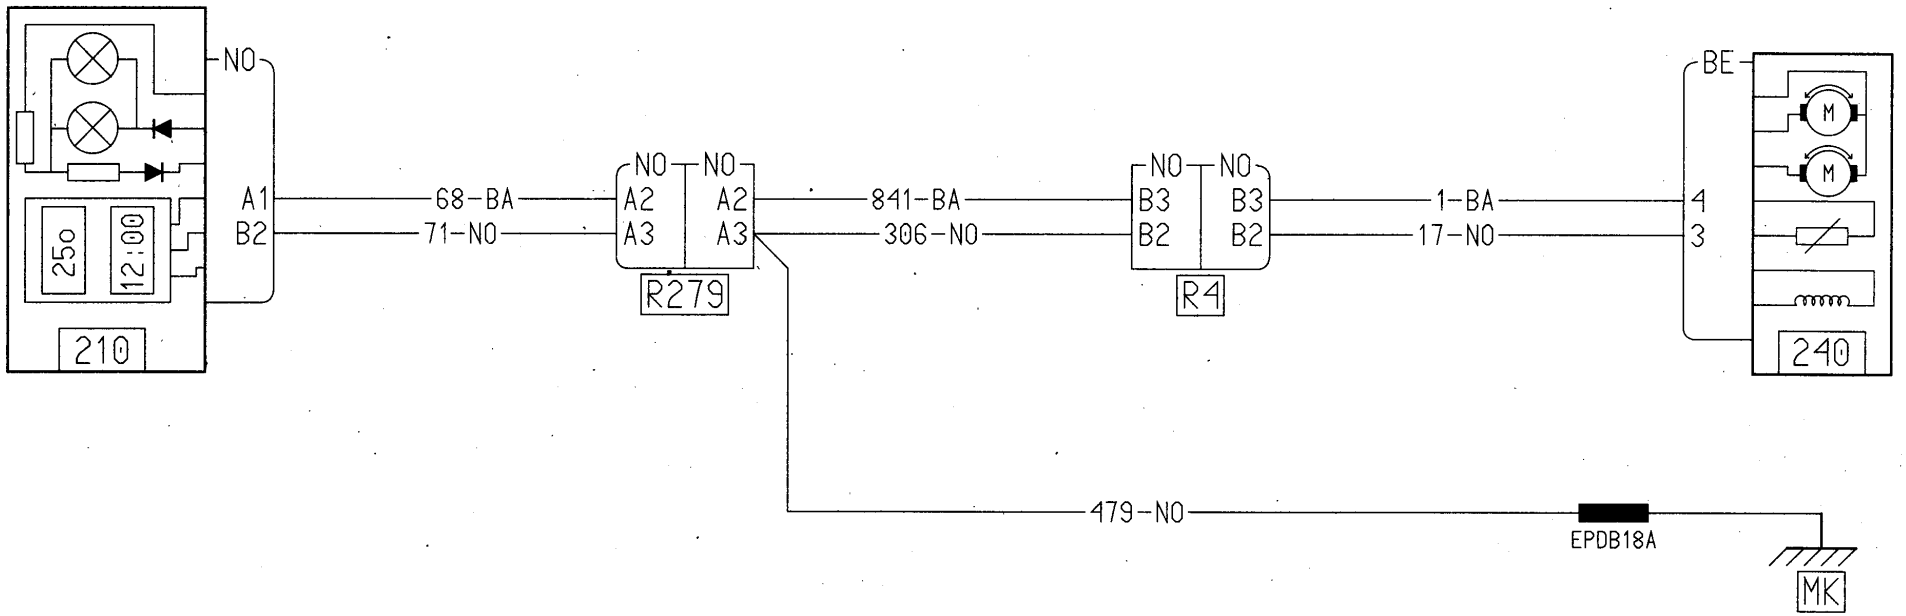

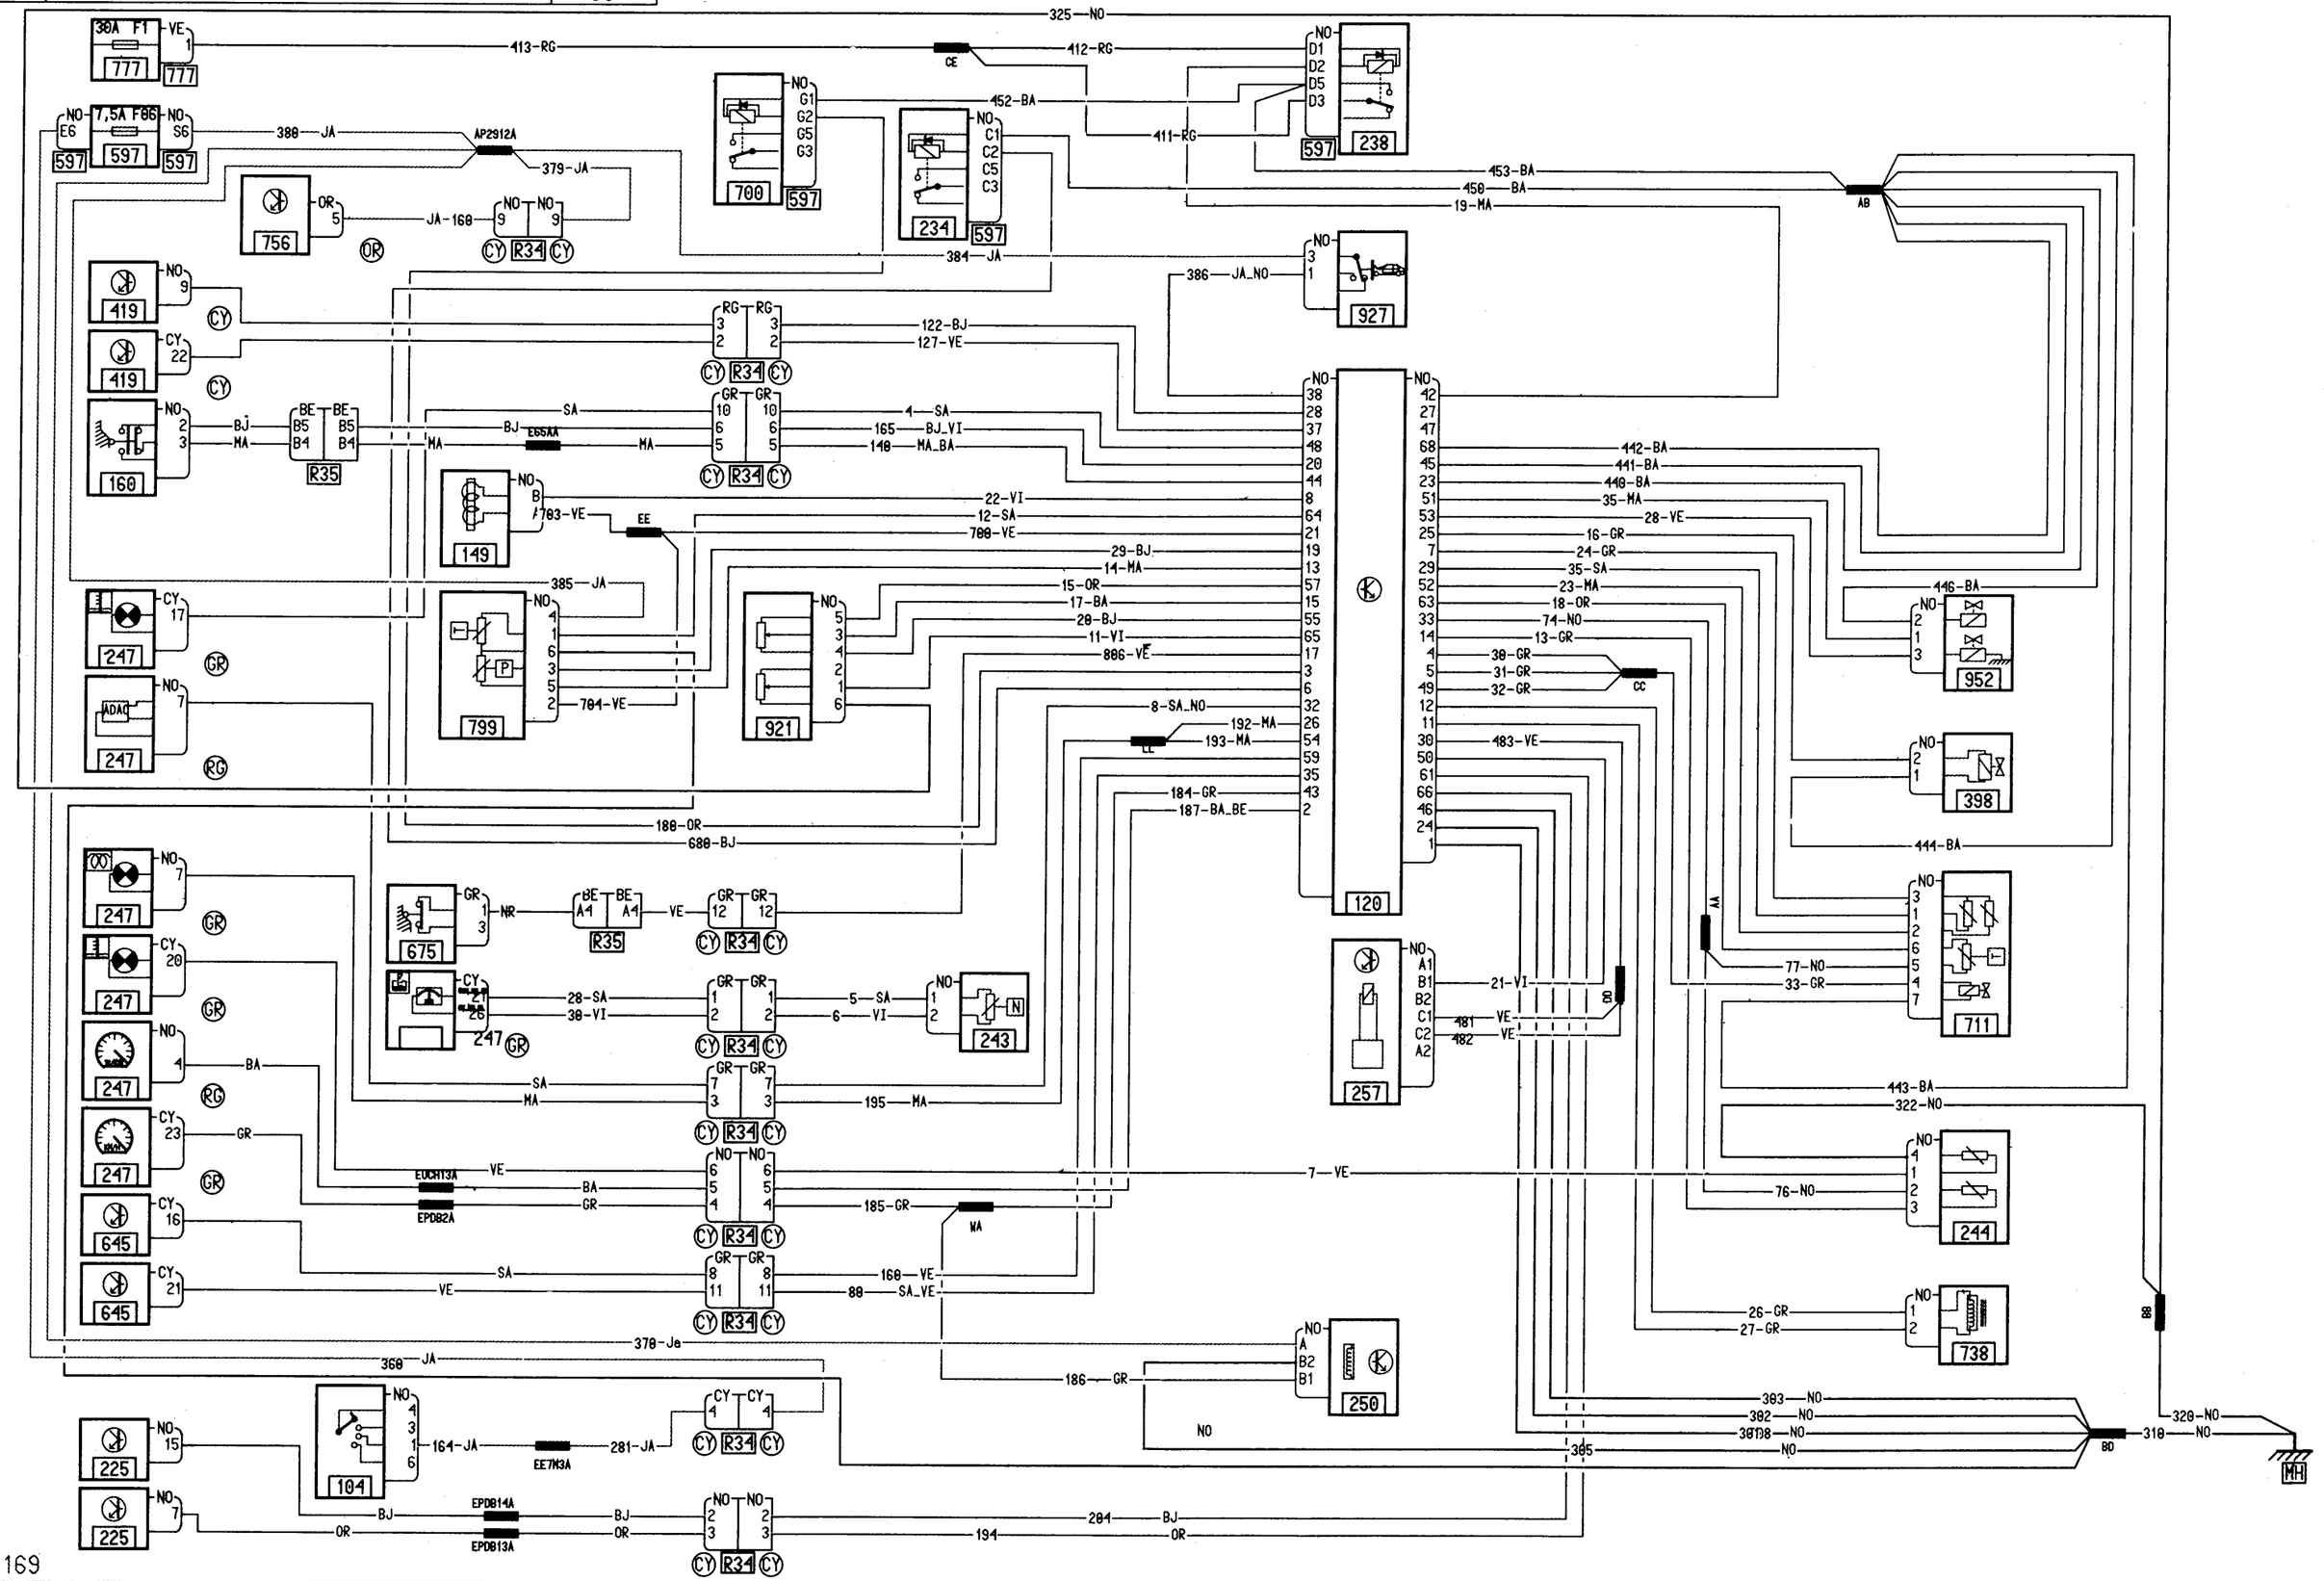
325-NO
413-RG
412-RG
CE
452-BA
411-RG
453-BA
450-BA
19-MA
384-JA
386-JA_NO
388-JA
379-JA
AP2912A
OR
JA-168
122-BJ
127-VE
SA
BJ
MA
EG5AA
22-VI
12-SA
703-VE
EE
708-VE
29-BJ
14-MA
385-JA
15-OR
17-BA
20-BJ
11-VI
806-VE
704-VE
8-SA_NO
192-MA
193-MA
LL
184-GR
187-BA_BE
188-OR
680-BJ
28-SA
30-VI
5-SA
6-VI
195-MA
EUCH13A
EPD82A
185-GR
168-VE
88-SA_VE
370-JA
360-JA
186-GR
NO
EE7M3A
281-JA
164-JA
EPD814A
EPD813A
204-BJ
194-OR
442-BA
441-BA
440-BA
35-MA
28-VE
16-GR
24-GR
35-SA
23-MA
18-OR
74-NO
13-GR
30-GR
31-GR
32-GR
CC
483-VE
446-BA
444-BA
77-NO
33-GR
443-BA
322-NO
76-NO
26-GR
27-GR
383-NO
382-NO
3838-NO
385-NO
320-NO
310-NO
AB
BD
MH
597
238
700
234
756
419
160
R35
149
799
921
927
952
398
711
257
244
738
120
250
104
225
675
243
247
645
R34

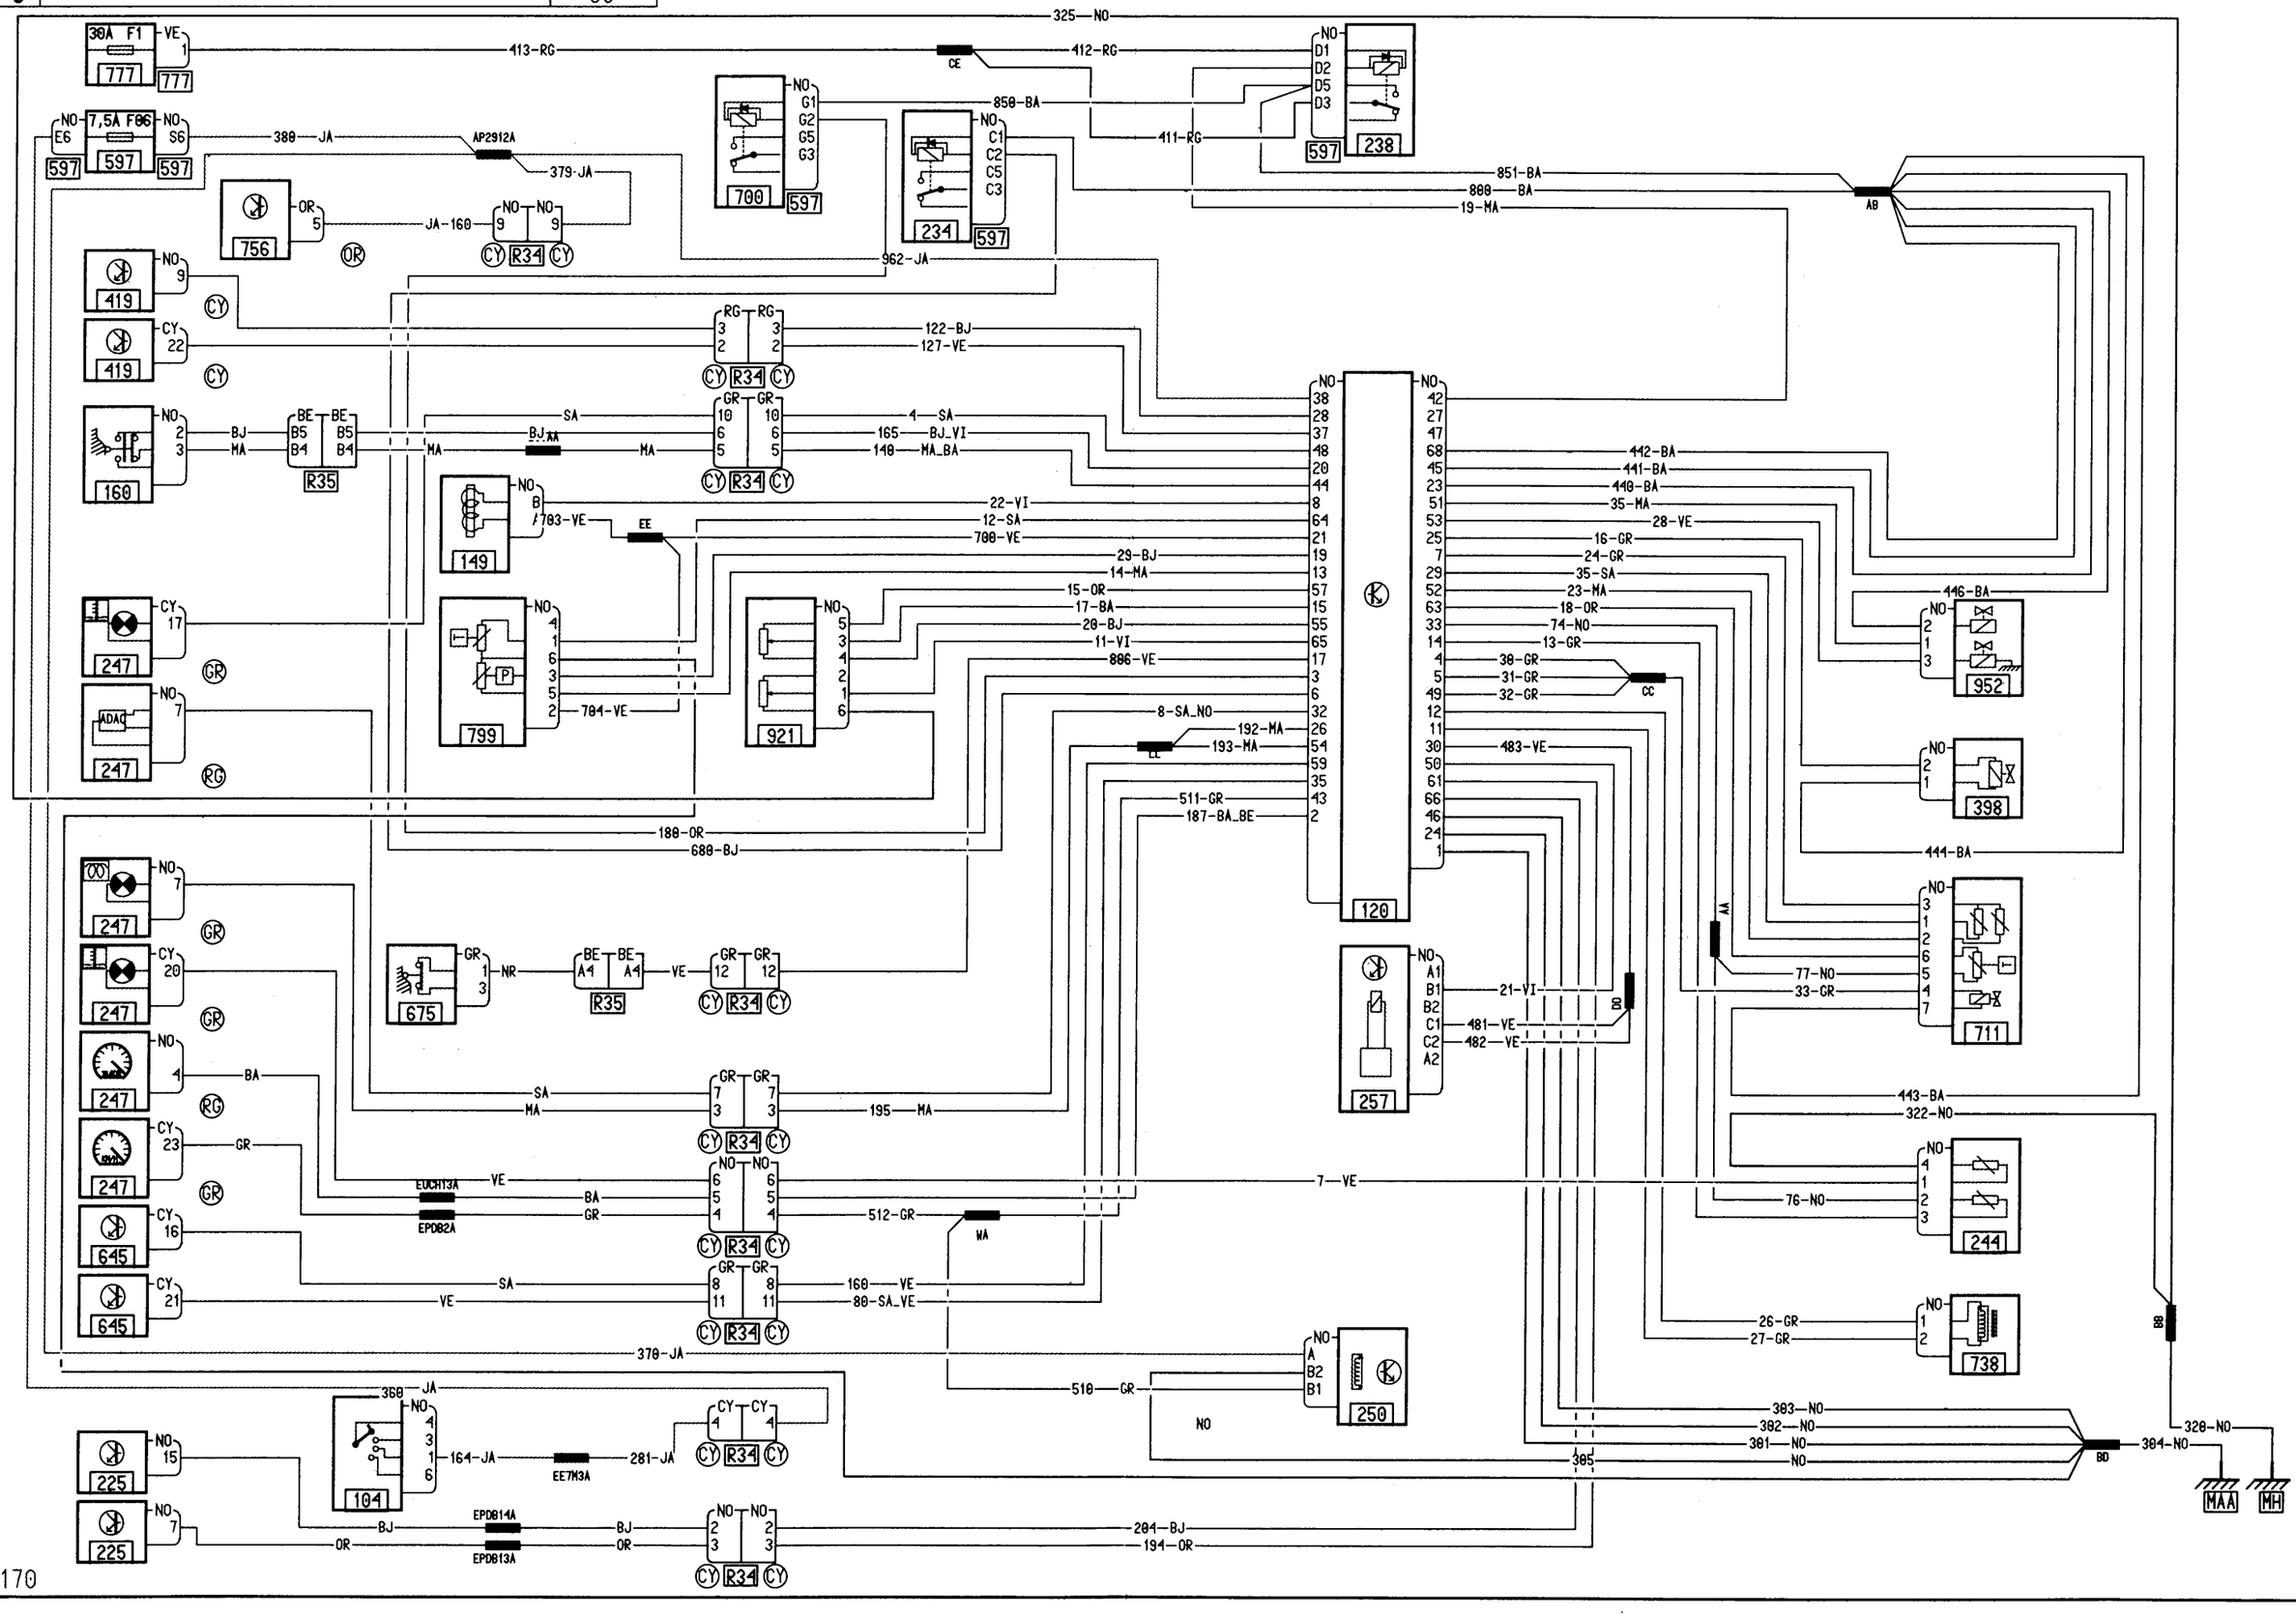
325-NO
30A F1
777
413-RG
CE
412-RG
7,5A F86
380-JA
AP2912A
379-JA
700
850-BA
234
411-RG
597
238
851-BA
880-BA
19-MA
AB
756
OR
JA-160
962-JA
419
CY
122-BJ
127-VE
R34
R35
160
BJ
MA
SA
BJ_VI
MA_BA
149
703-VE
EE
22-VI
12-SA
700-VE
29-BJ
14-MA
15-OR
17-BA
20-BJ
11-VI
886-VE
247
GR
RG
ADAC
799
784-VE
921
8-SA_NO
192-MA
193-MA
LL
511-GR
187-BA_BE
120
188-OR
680-BJ
675
NR
257
21-VI
481-VE
482-VE
BB
195-MA
EUCR13A
EPD82A
7-VE
512-GR
WA
645
160-VE
80-SA_VE
370-JA
360-JA
104
164-JA
281-JA
EE7M3A
510-GR
250
225
EPD814A
EPD813A
204-BJ
194-OR
112-BA
441-BA
440-BA
35-MA
28-VE
16-GR
24-GR
35-SA
23-MA
18-OR
74-NO
13-GR
30-GR
31-GR
32-GR
CC
483-VE
952
398
444-BA
77-NO
33-GR
711
443-BA
322-NO
76-NO
244
26-GR
27-GR
738
383-NO
382-NO
381-NO
385-NO
BD
384-NO
320-NO
MAA
MH

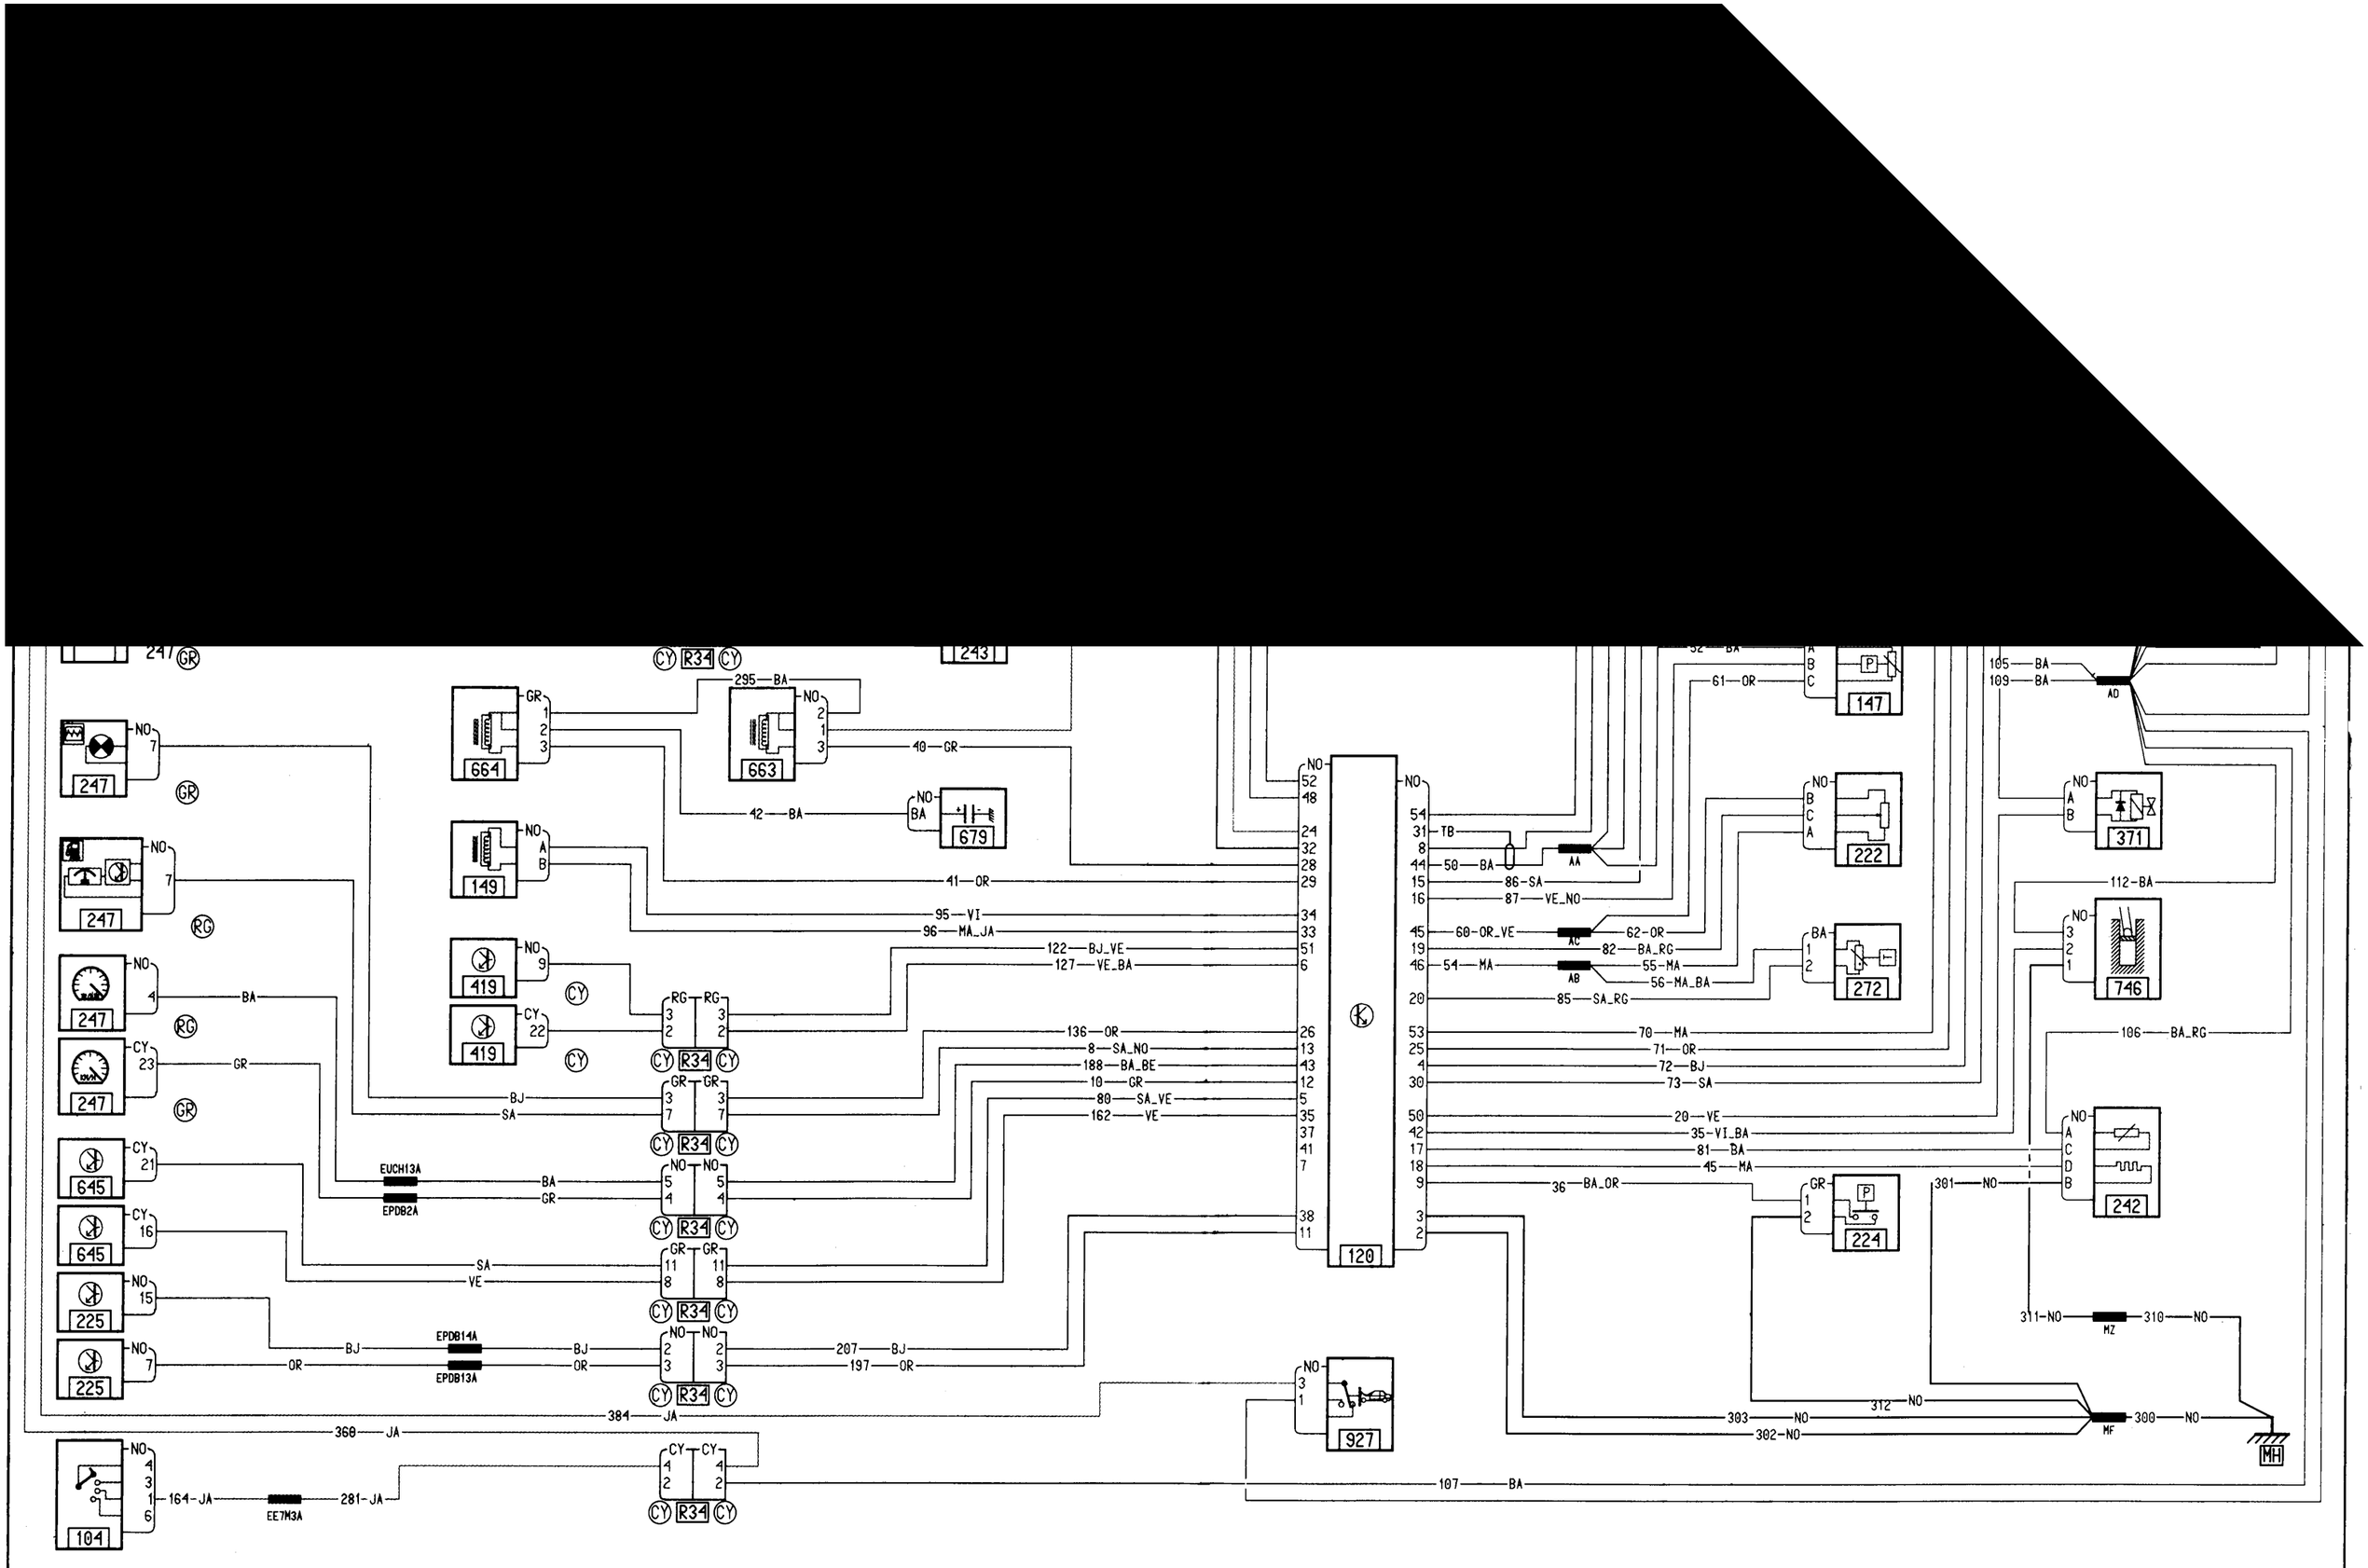
247
GR
NO
7
247
GR
247
NO
7
RG
247
NO
4
BA
RG
247
CY
23
GR
GR
645
CY
21
645
CY
16
225
NO
15
225
NO
7
104
NO
4
3
1
6
164-JA
EE7M3A
281-JA
CY R34 CY
664
GR
1
2
3
295-BA
663
NO
2
1
3
40-GR
42-BA
679
NO
BA
149
NO
A
B
41-OR
95-VI
96-MA_JA
419
NO
9
419
CY
22
122-BJ_VE
127-VE_BA
RG-RG
3-3
2-2
CY R34 CY
136-OR
8-SA_NO
188-BA_BE
10-GR
80-SA_VE
162-VE
GR-GR
3-3
7-7
CY R34 CY
EUCH13A
EPDB2A
BA
GR
NO-NO
5-5
4-4
CY R34 CY
GR-GR
11-11
8-8
CY R34 CY
EPDB14A
EPDB13A
BJ
OR
NO-NO
2-2
3-3
CY R34 CY
207-BJ
197-OR
384-JA
360-JA
CY-CY
4-4
2-2
CY R34 CY
243
NO
52
48
24
32
28
29
34
33
51
6
26
13
43
12
5
35
37
41
7
38
11
120
54
31-TB
8
44-50-BA
15-86-SA
16-87-VE_NO
45-60-OR_VE
19-82-BA_RG
46-54-MA
55-MA
56-MA_BA
20-85-SA_RG
53-70-MA
25-71-OR
4-72-BJ
30-73-SA
50-20-VE
42-35-VI_BA
17-81-BA
18-45-MA
9-36-BA_OR
3
2
AA
AB
AC
147
A
B
C
P
222
B
C
A
272
BA
1
2
224
GR
1
2
P
927
NO
3
1
105-BA
109-BA
AD
371
A
B
112-BA
746
3
2
1
106-BA_RG
242
A
C
D
B
301-NO
311-NO
MZ
310-NO
312-NO
303-NO
302-NO
MF
300-NO
MH

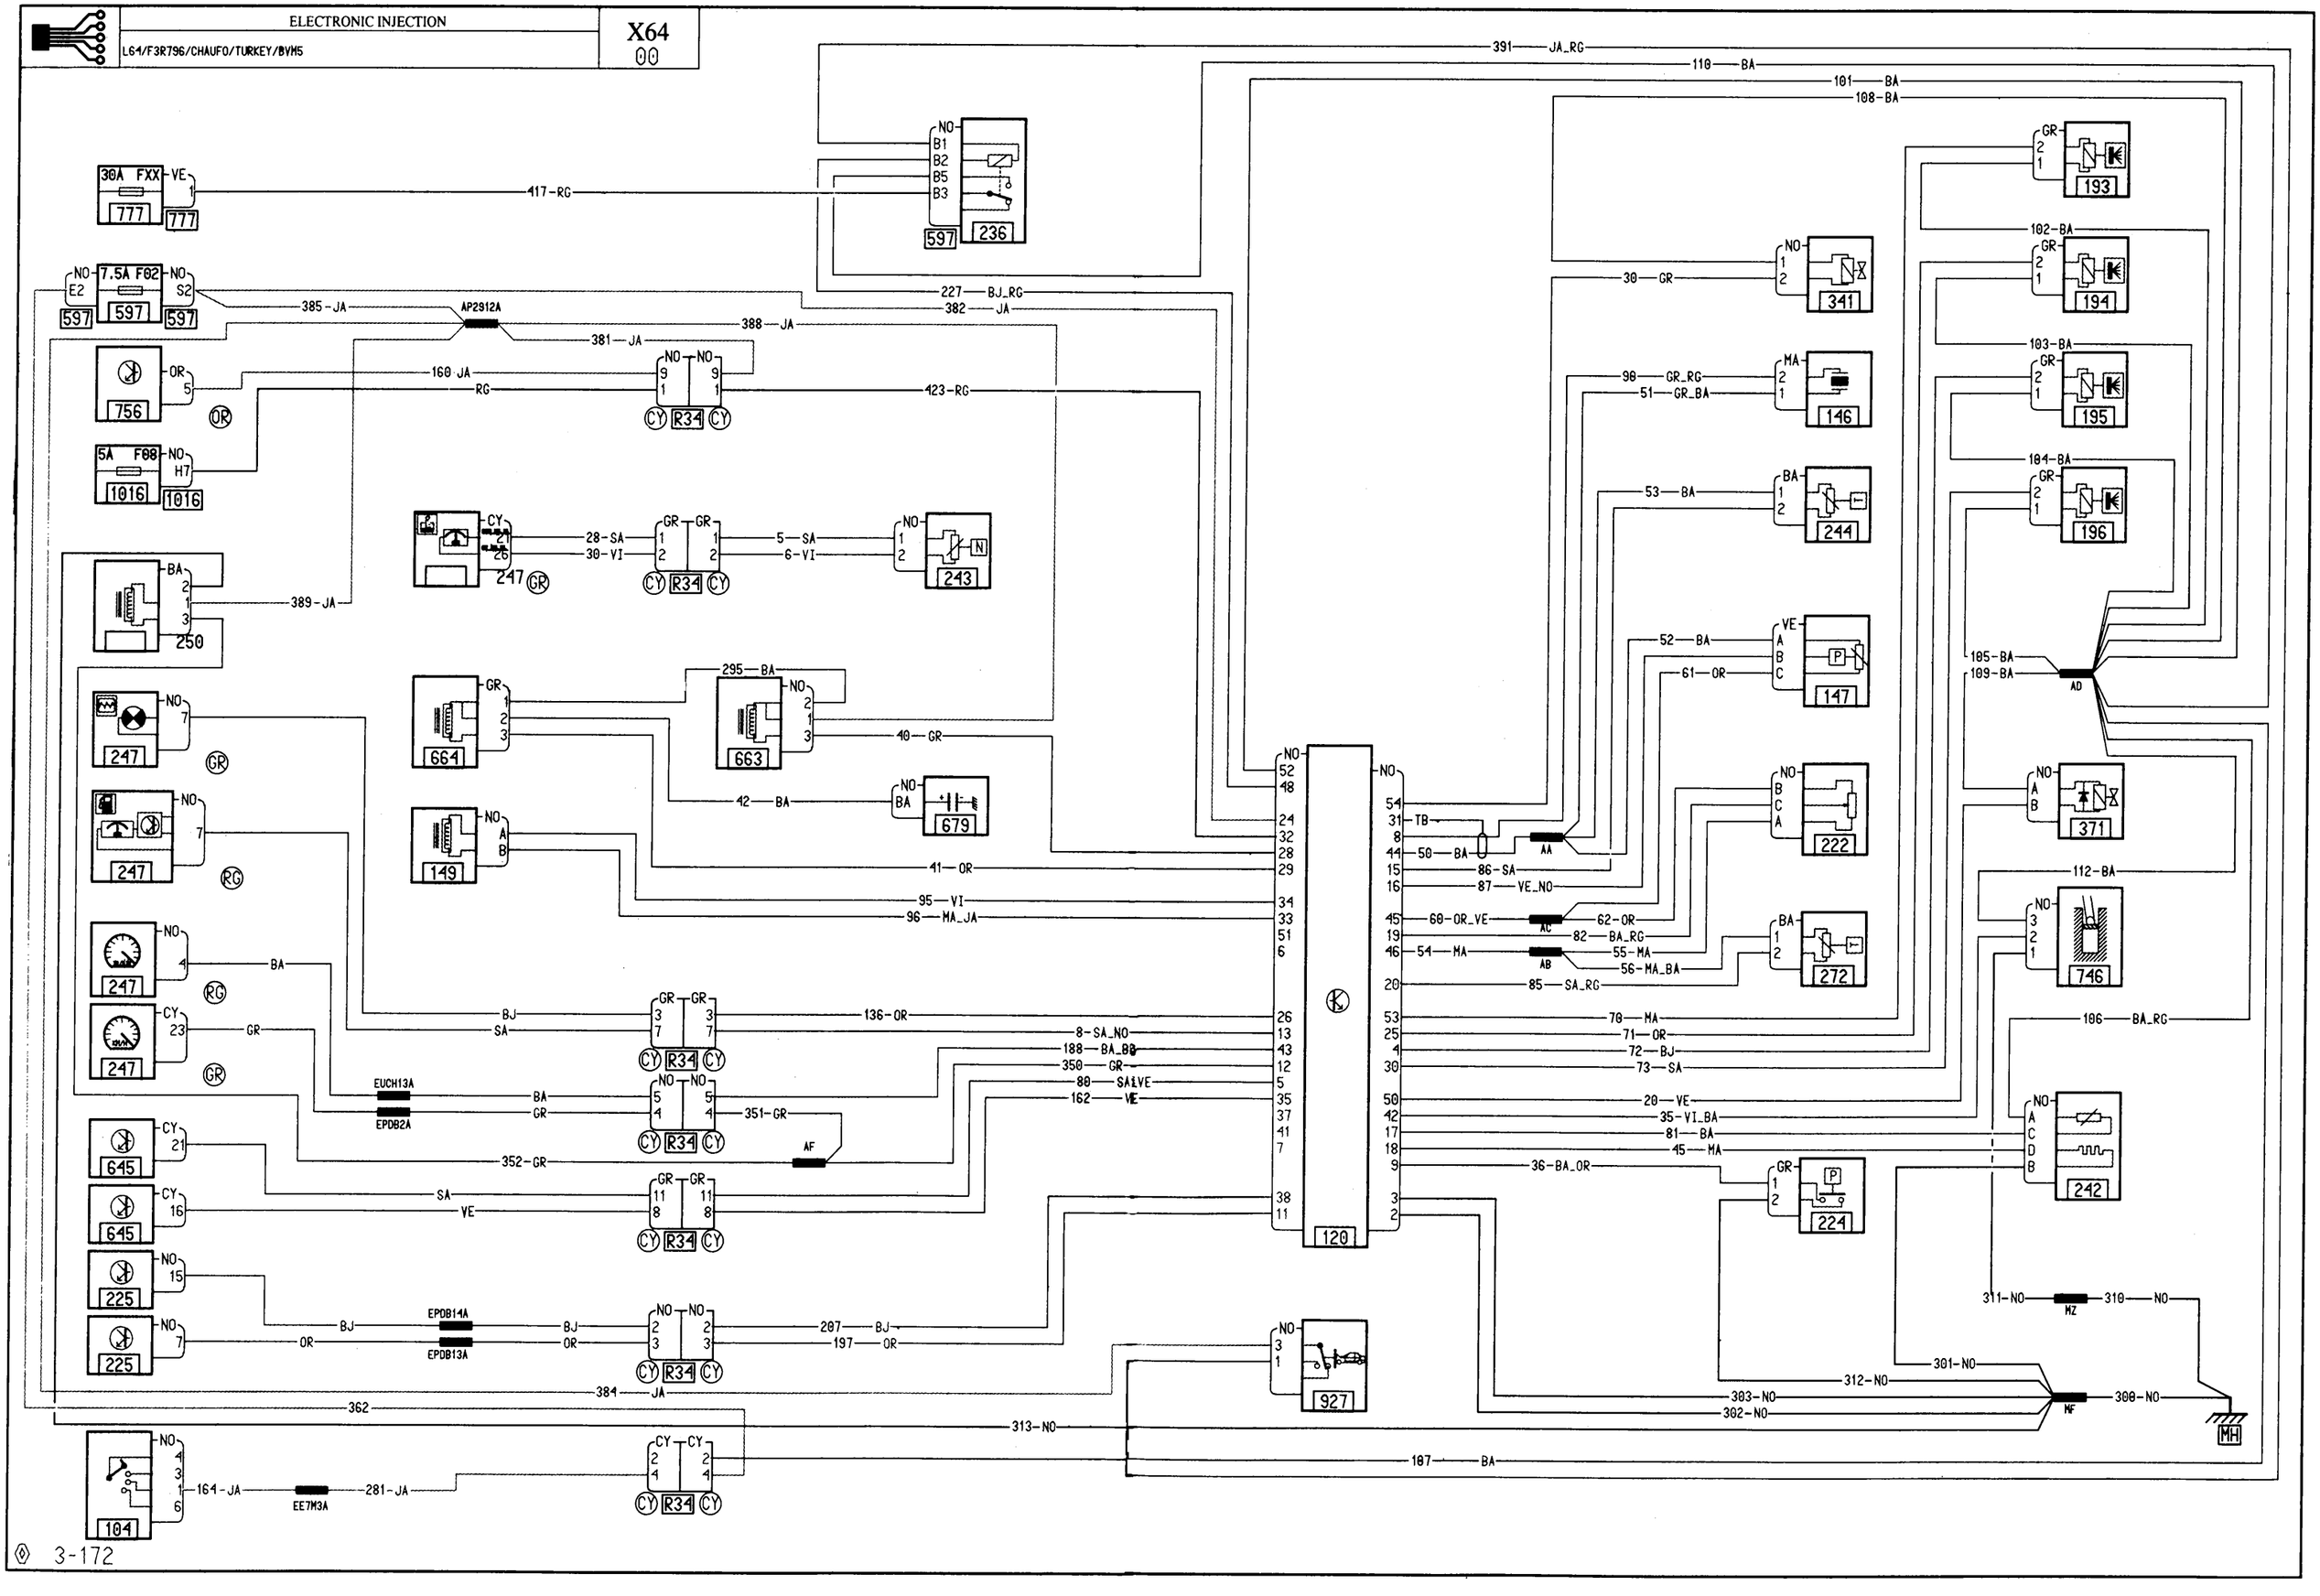
30A FXX
777
777
417-RG
597
236
NO
B1
B2
B5
B3
391-JA_RG
110-BA
101-BA
108-BA
7.5A F62
597
597
597
385-JA
AP2912A
227-BJ_RG
382-JA
388-JA
381-JA
756
160-JA
RG
423-RG
R34
5A F08
1016
1016
247
28-SA
30-VI
5-SA
6-VI
243
250
389-JA
664
663
295-BA
40-GR
42-BA
679
149
41-OR
95-VI
96-MA_JA
193
102-BA
194
103-BA
195
104-BA
196
30-GR
341
98-GR_RG
51-GR_BA
146
53-BA
244
52-BA
61-OR
147
105-BA
109-BA
AD
371
222
112-BA
746
272
106-BA_RG
242
224
120
54
31-TB
8
44
50-BA
15
86-SA
16
87-VE_NO
45
60-OR_VE
62-OR
19
82-BA_RG
46
54-MA
55-MA
56-MA_BA
20
85-SA_RG
53
70-MA
25
71-OR
4
72-BJ
30
73-SA
50
20-VE
42
35-VI_BA
17
81-BA
18
45-MA
9
36-BA_OR
3
2
AA
AC
AB
EUCH13A
EPDB2A
AF
8-SA_NO
188-BA_BB
350-GR
80-SAIVE
162-VE
351-GR
352-GR
645
645
225
225
EPDB14A
EPDB13A
207-BJ
197-OR
384-JA
927
362
313-NO
187-BA
104
164-JA
EE7M3A
281-JA
311-NO
MZ
310-NO
301-NO
312-NO
303-NO
302-NO
MF
300-NO
MH

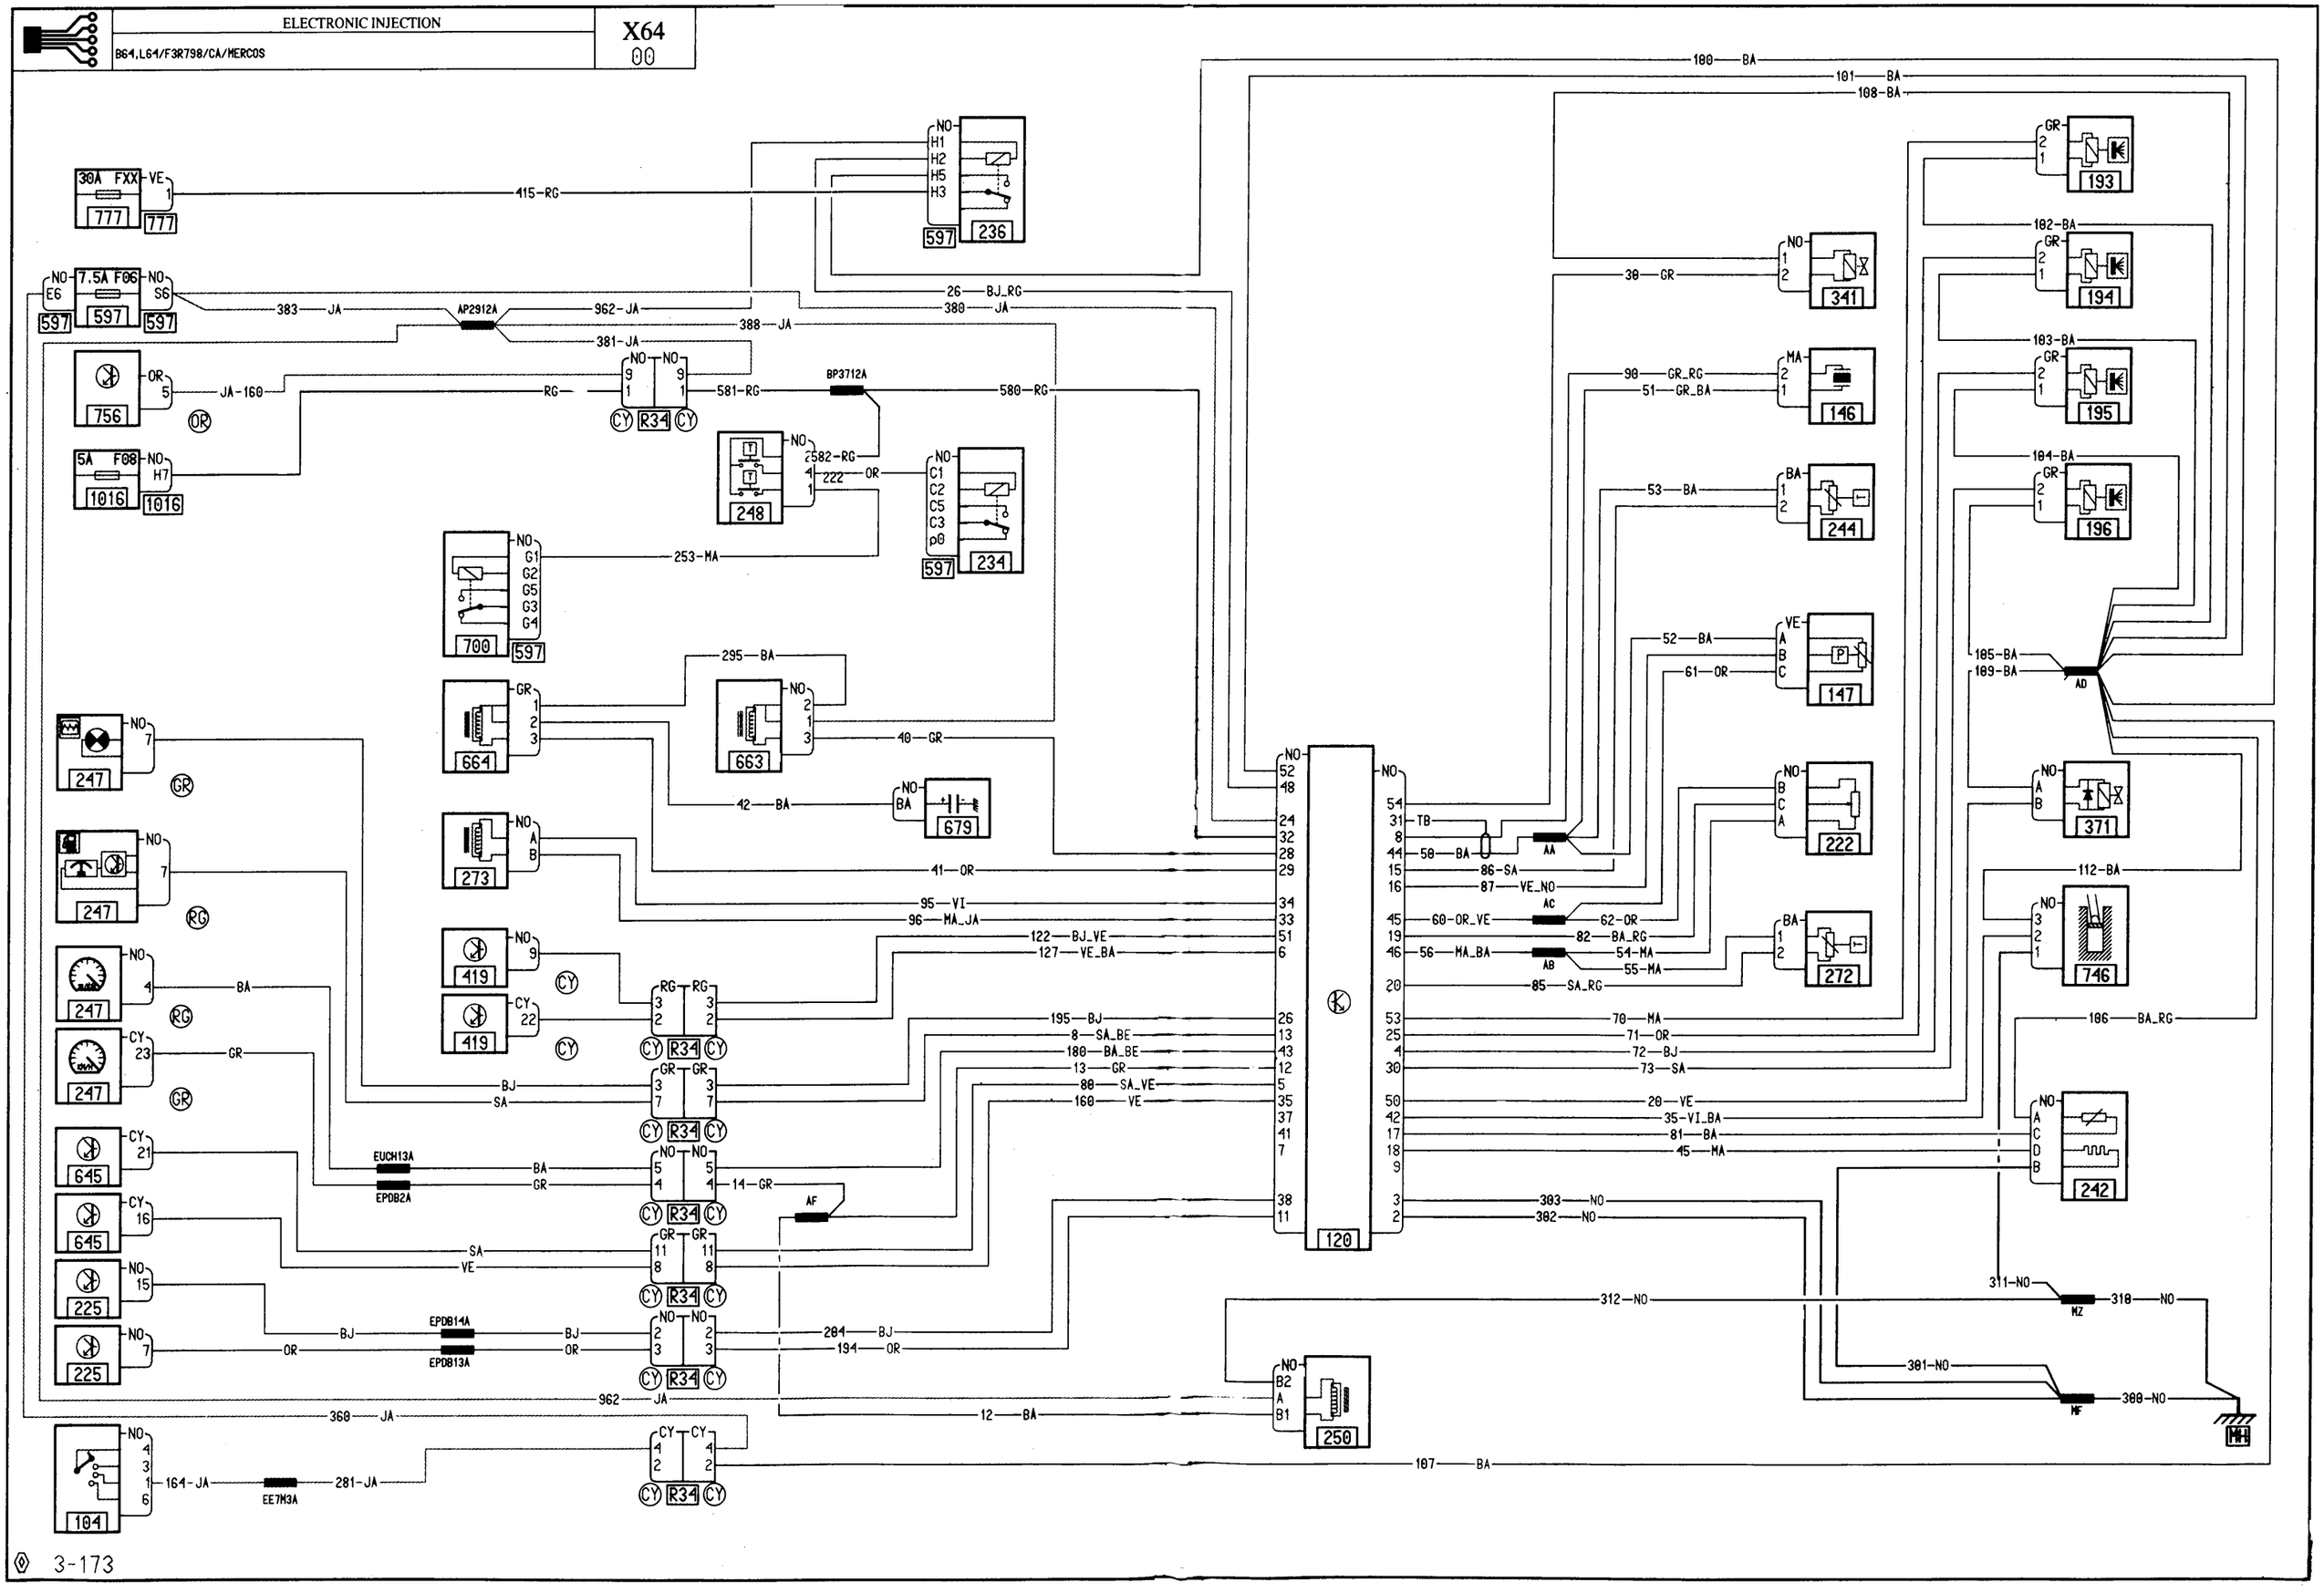
30A FXX
VE
777
415-RG
597
236
NO
H1
H2
H5
H3
7.5A F06
E6
S6
383-JA
AP2912A
962-JA
381-JA
388-JA
26-BJ_RG
380-JA
100-BA
101-BA
108-BA
OR
5
JA-160
RG
756
581-RG
BP3712A
580-RG
R34
5A F08
H7
1016
2582-RG
222-OR
248
C1
C2
C5
C3
253-MA
700
234
295-BA
GR
664
663
40-GR
42-BA
679
273
41-OR
95-VI
96-MA_JA
247
419
122-BJ_VE
127-VE_BA
BA
BJ
SA
GR
195-BJ
8-SA_BE
180-BA_BE
13-GR
80-SA_VE
160-VE
645
225
EUCH13A
EPDB2A
EPDB14A
EPDB13A
AF
14-GR
204-BJ
194-OR
962-JA
360-JA
164-JA
281-JA
EE7M3A
104
107-BA
120
52
48
24
32
28
29
34
33
51
6
26
13
43
12
5
35
37
41
7
38
11
54
31-TB
8
44
50-BA
15
86-SA
16
87-VE_NO
45
60-OR_VE
62-OR
19
82-BA_RG
46
56-MA_BA
54-MA
55-MA
20
85-SA_RG
53
70-MA
25
71-OR
4
72-BJ
30
73-SA
50
20-VE
42
35-VI_BA
17
81-BA
18
45-MA
9
3
303-NO
2
302-NO
AA
AB
AC
341
30-GR
146
90-GR_RG
51-GR_BA
244
53-BA
147
52-BA
61-OR
222
272
193
194
195
196
102-BA
103-BA
104-BA
105-BA
109-BA
AD
371
112-BA
746
106-BA_RG
242
311-NO
MZ
318-NO
312-NO
301-NO
MF
308-NO
250
B2
A
B1

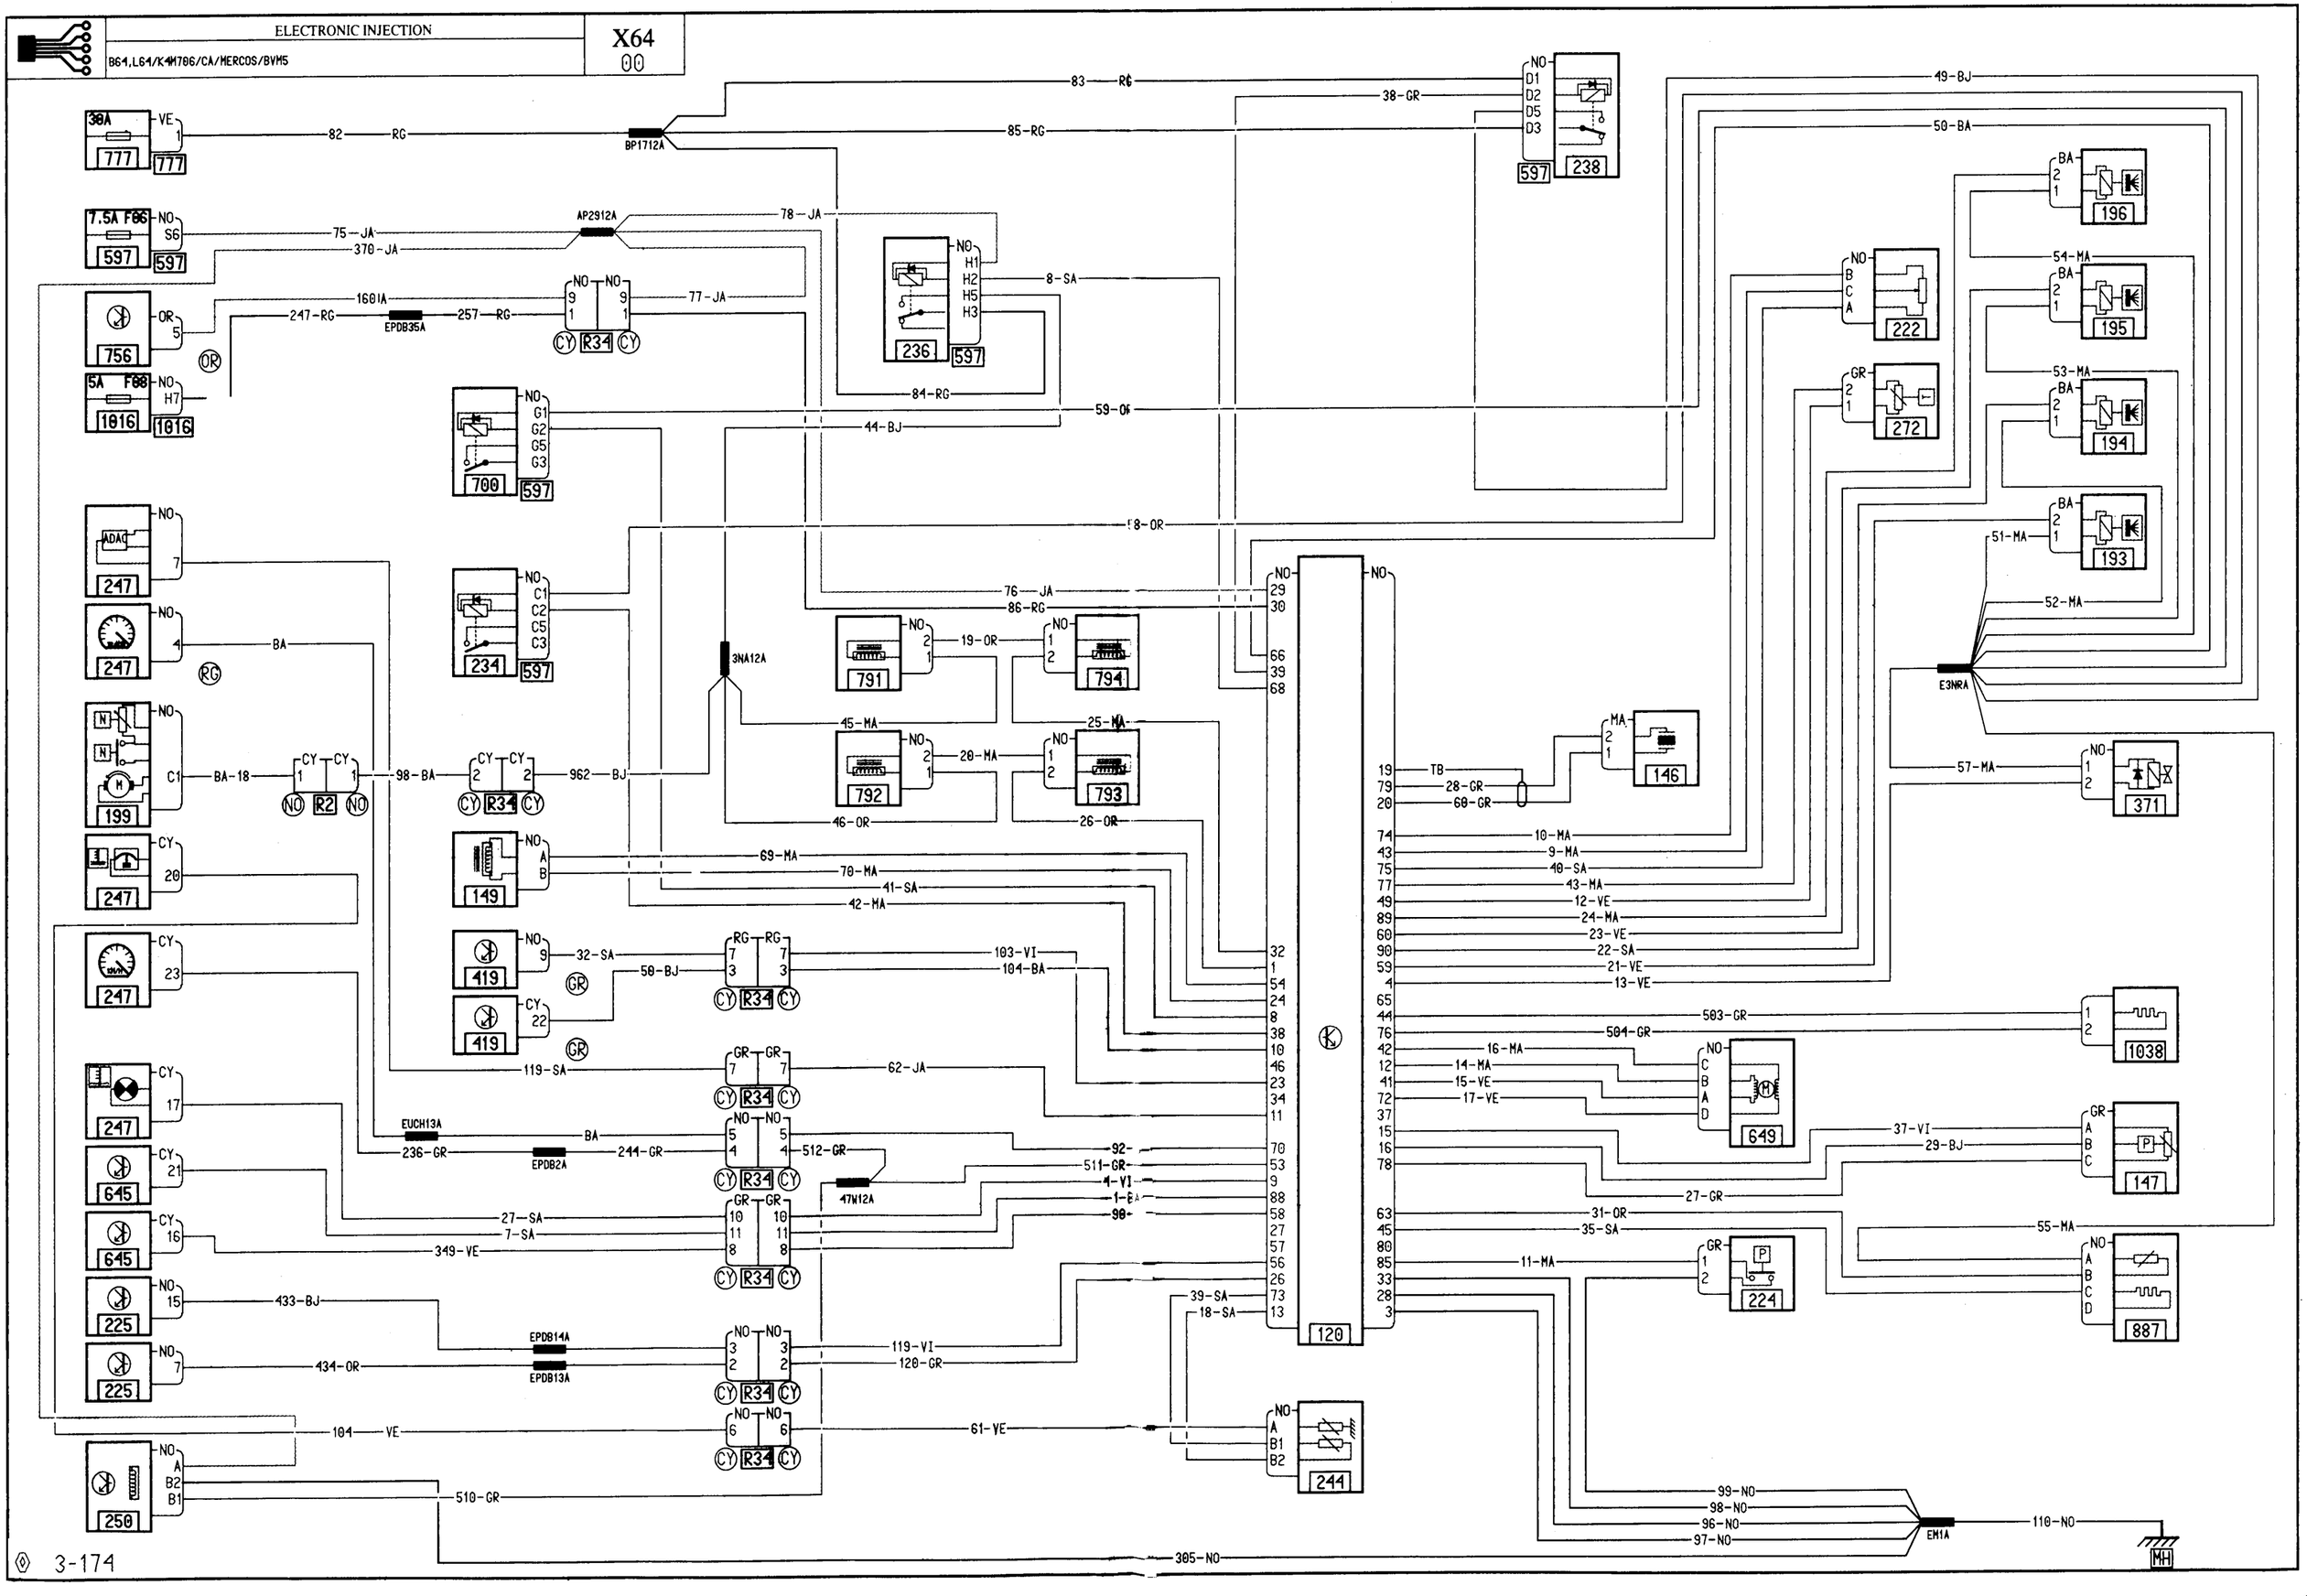
30A F1 777
7.5A F86 597
5A F88 1016
ADAC 247
199
247
247
247
247
645
645
225
225
250
700 597
234 597
791
792
793
794
3NA12A
EPDB35A
EPDB2A
EPDB14A
EPDB13A
47M12A
EUCH13A
BP1712A
AP2912A
236 597
238 597
222
272
196
195
194
193
E3NRA
371
146
149
419
419
1038
649
224
147
887
244
120
EM1A
MH
R34
R2

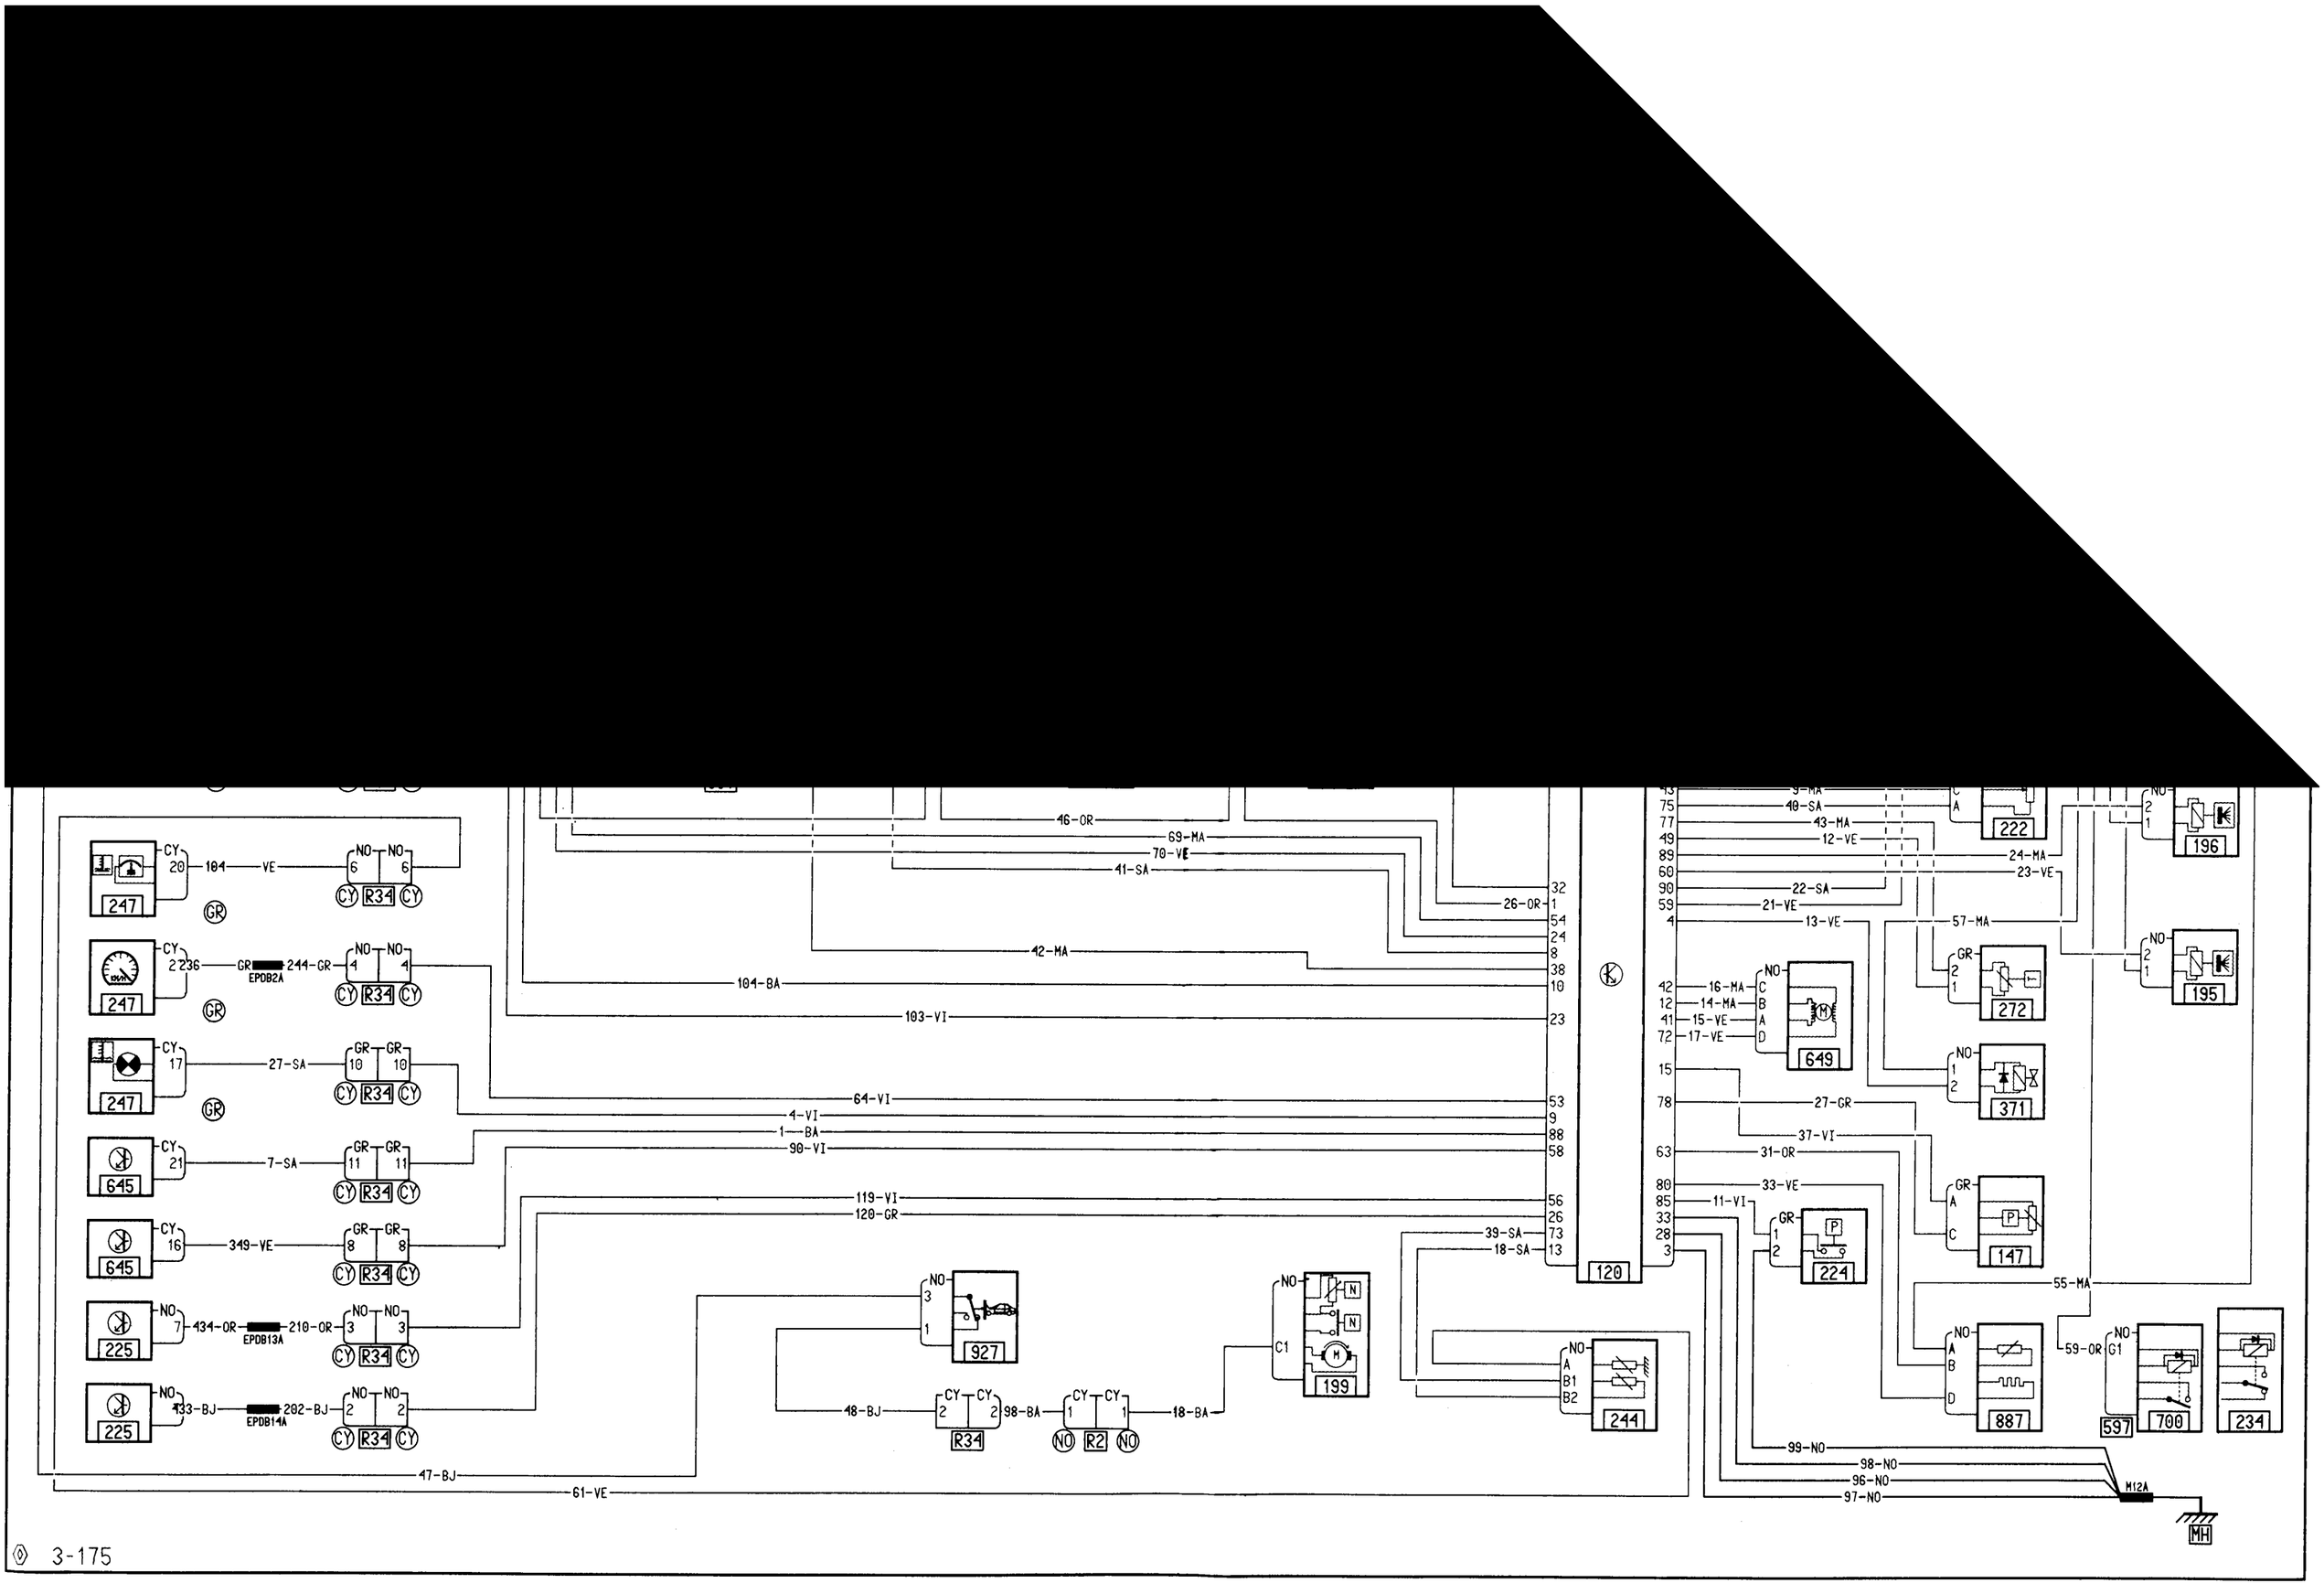
247
CY 20 104 VE NO 6 NO 6 CY R34 CY
GR
247
CY 2236 GR EPDB2A 244-GR NO 4 NO 4 CY R34 CY
GR
247
CY 17 27-SA GR 10 GR 10 CY R34 CY
GR
645
CY 21 7-SA GR 11 GR 11 CY R34 CY
645
CY 16 349-VE GR 8 GR 8 CY R34 CY
225
NO 7 434-OR EPDB13A 210-OR NO 3 NO 3 CY R34 CY
225
NO 133-BJ EPDB14A 202-BJ NO 2 NO 2 CY R34 CY
47-BJ
61-VE
16-OR
69-MA
70-VE
41-SA
26-OR
42-MA
104-BA
103-VI
64-VI
4-VI
1-BA
90-VI
119-VI
120-GR
39-SA
18-SA
32
1
54
24
8
38
10
23
53
9
88
58
56
26
73
13
120
NO 3 1 927
48-BJ CY 2 2 R34 98-BA CY 1 1 NO R2 NO 18-BA
NO C1 N N M 199
NO A B1 B2 244
43 9-MA
75 40-SA
77 43-MA
49 12-VE
89 24-MA
60 23-VE
90 22-SA
59 21-VE
4 13-VE
57-MA
42 16-MA
12 14-MA
41 15-VE
72 17-VE
NO C B A D M 649
15
78 27-GR
37-VI
63 31-OR
80 33-VE
85 11-VI
33
28
3
GR 1 2 P 224
99-NO
98-NO
96-NO
97-NO
M12A
MH
NO A 222
NO 2 1 196
NO 2 1 195
GR 2 1 272
NO 1 2 371
GR A C P 147
55-MA
NO A B D 887
59-OR NO G1 597 700
234

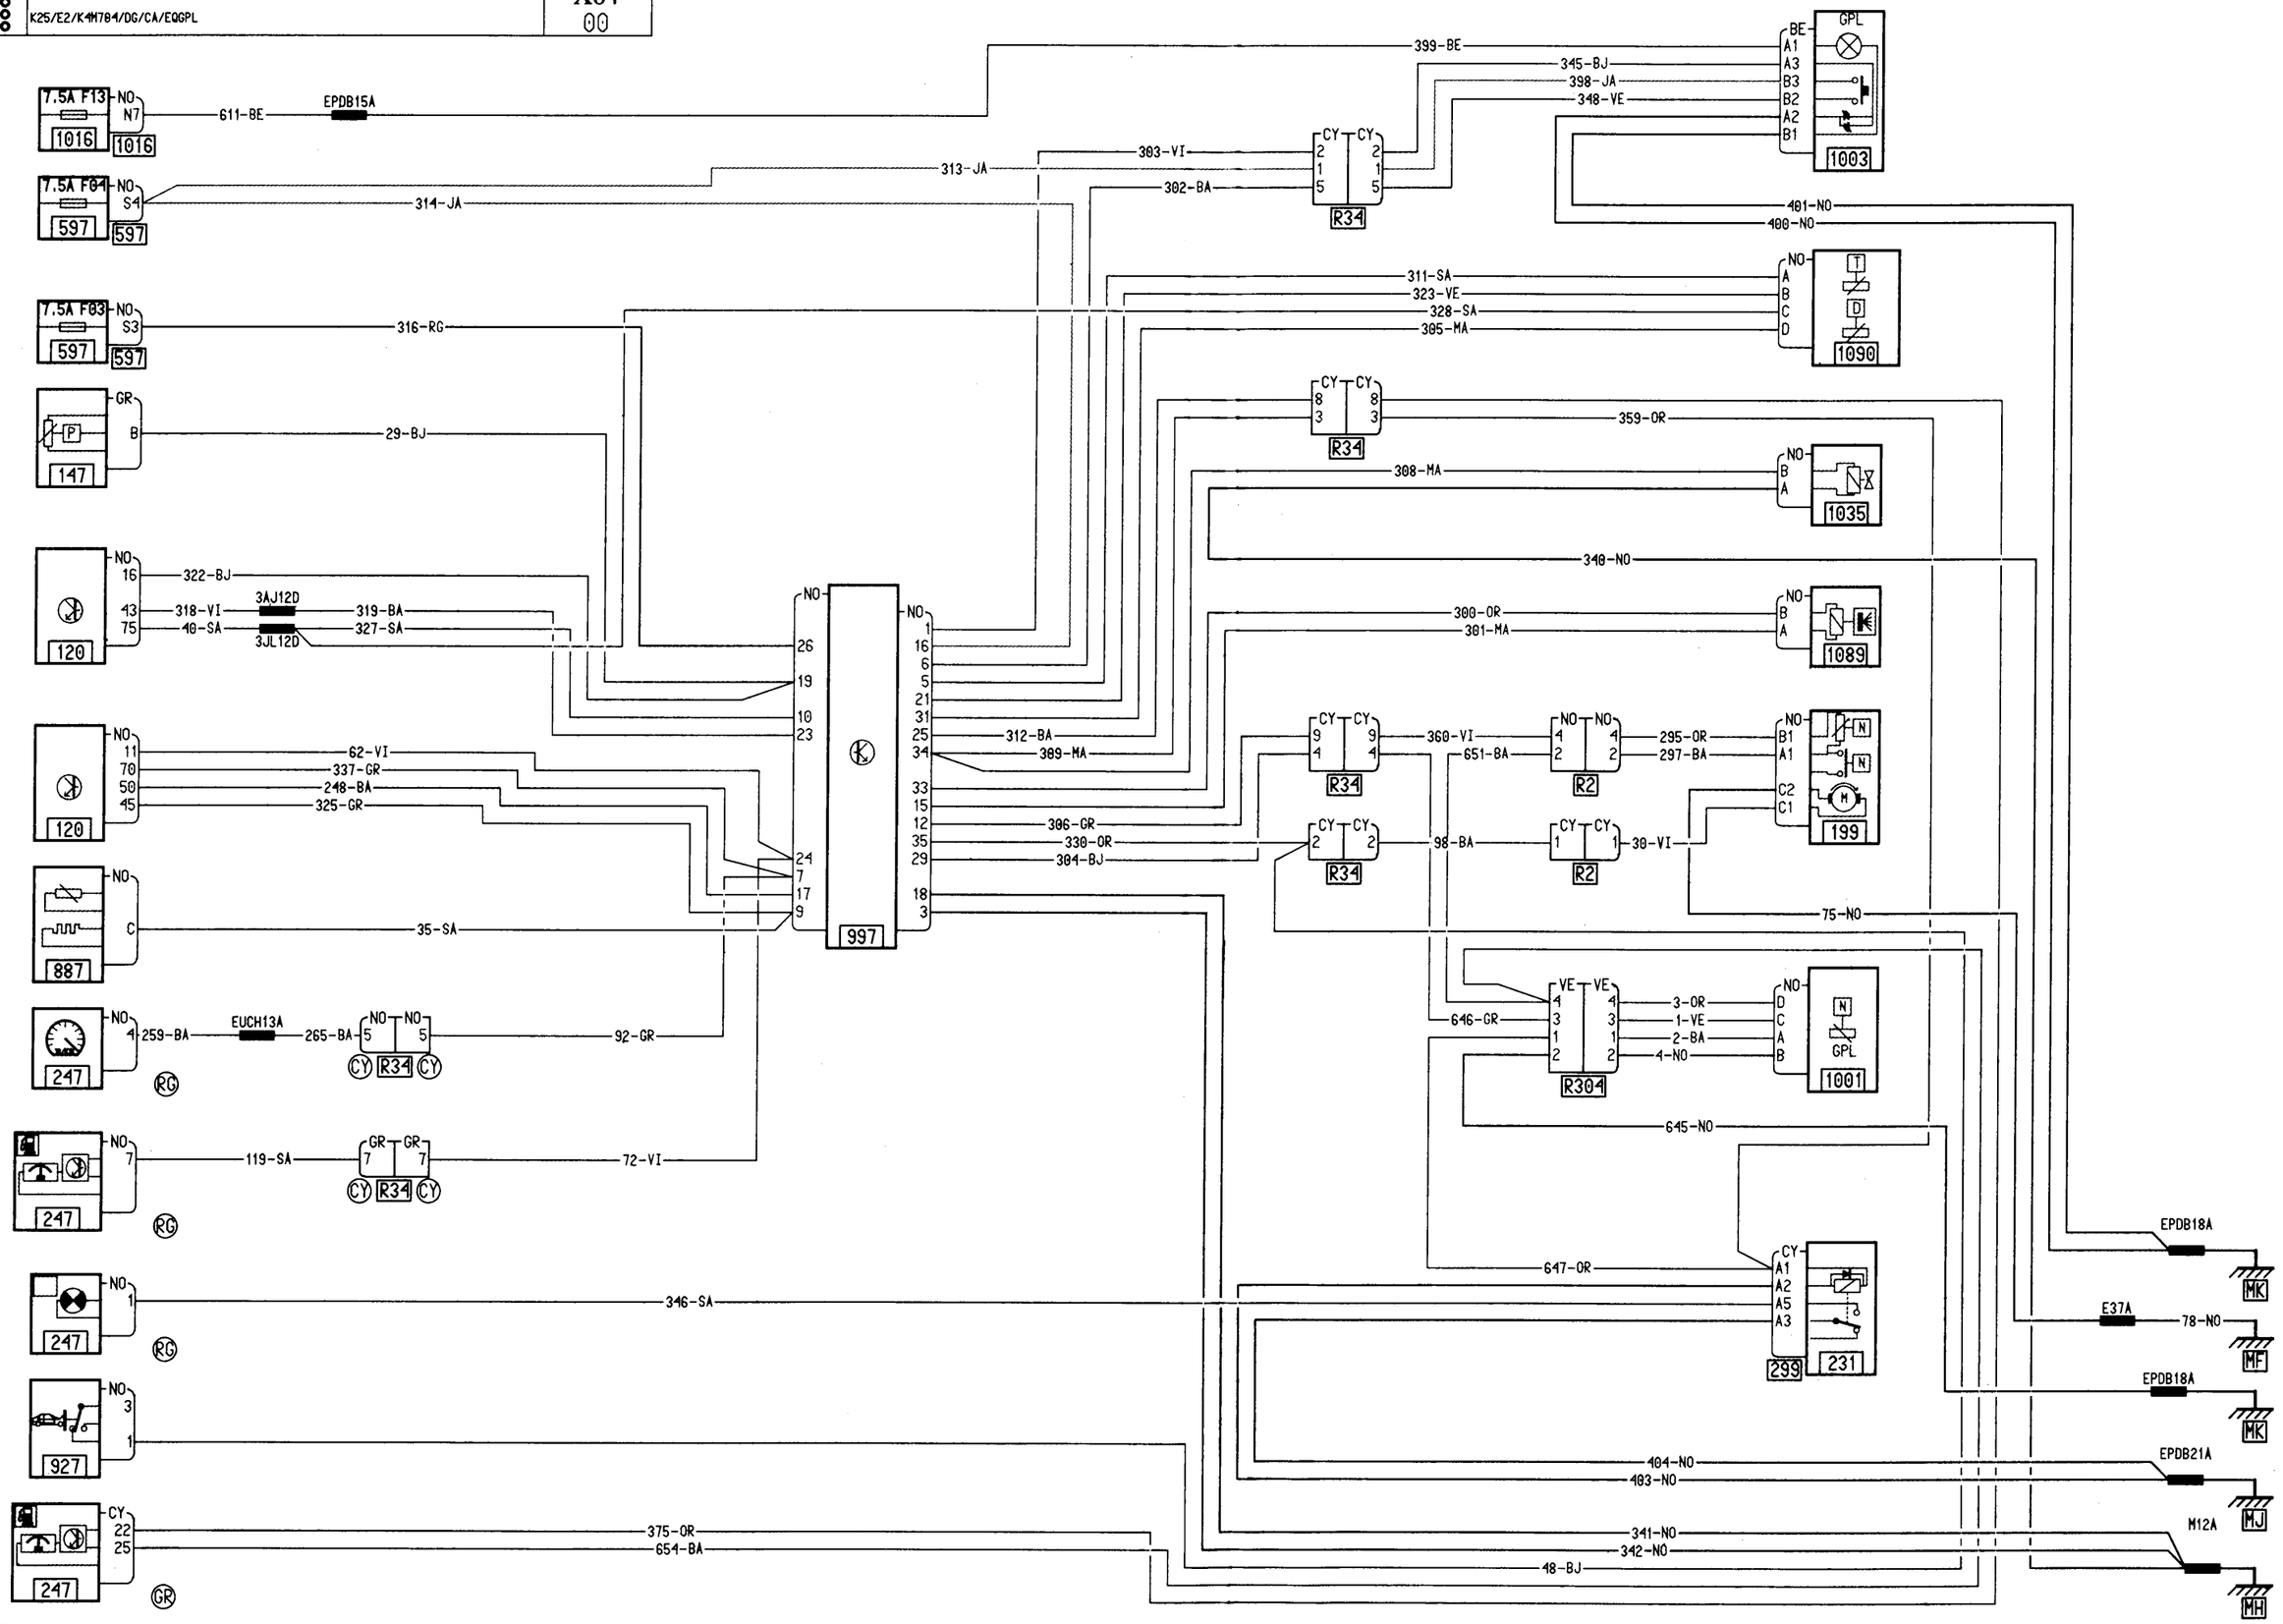
7.5A F13
1016
611-BE
EPDB15A
7.5A F04
597
313-JA
314-JA
7.5A F03
316-RG
29-BJ
147
120
322-BJ
3AJ12D
318-VI
319-BA
40-SA
327-SA
3JL12D
62-VI
337-GR
248-BA
325-GR
887
35-SA
247
259-BA
EUCH13A
265-BA
92-GR
119-SA
72-VI
346-SA
927
375-OR
654-BA
997
399-BE
345-BJ
398-JA
348-VE
303-VI
302-BA
R34
1003
GPL
401-NO
400-NO
311-SA
323-VE
328-SA
305-MA
1090
359-OR
308-MA
1035
340-NO
300-OR
301-MA
1089
312-BA
309-MA
306-GR
330-OR
304-BJ
360-VI
651-BA
R2
295-OR
297-BA
199
98-BA
30-VI
75-NO
646-GR
R304
3-OR
1-VE
2-BA
4-NO
1001
645-NO
647-OR
299
231
EPDB18A
MK
E37A
78-NO
MF
EPDB18A
MK
404-NO
403-NO
EPDB21A
MJ
341-NO
342-NO
48-BJ
M12A
MH

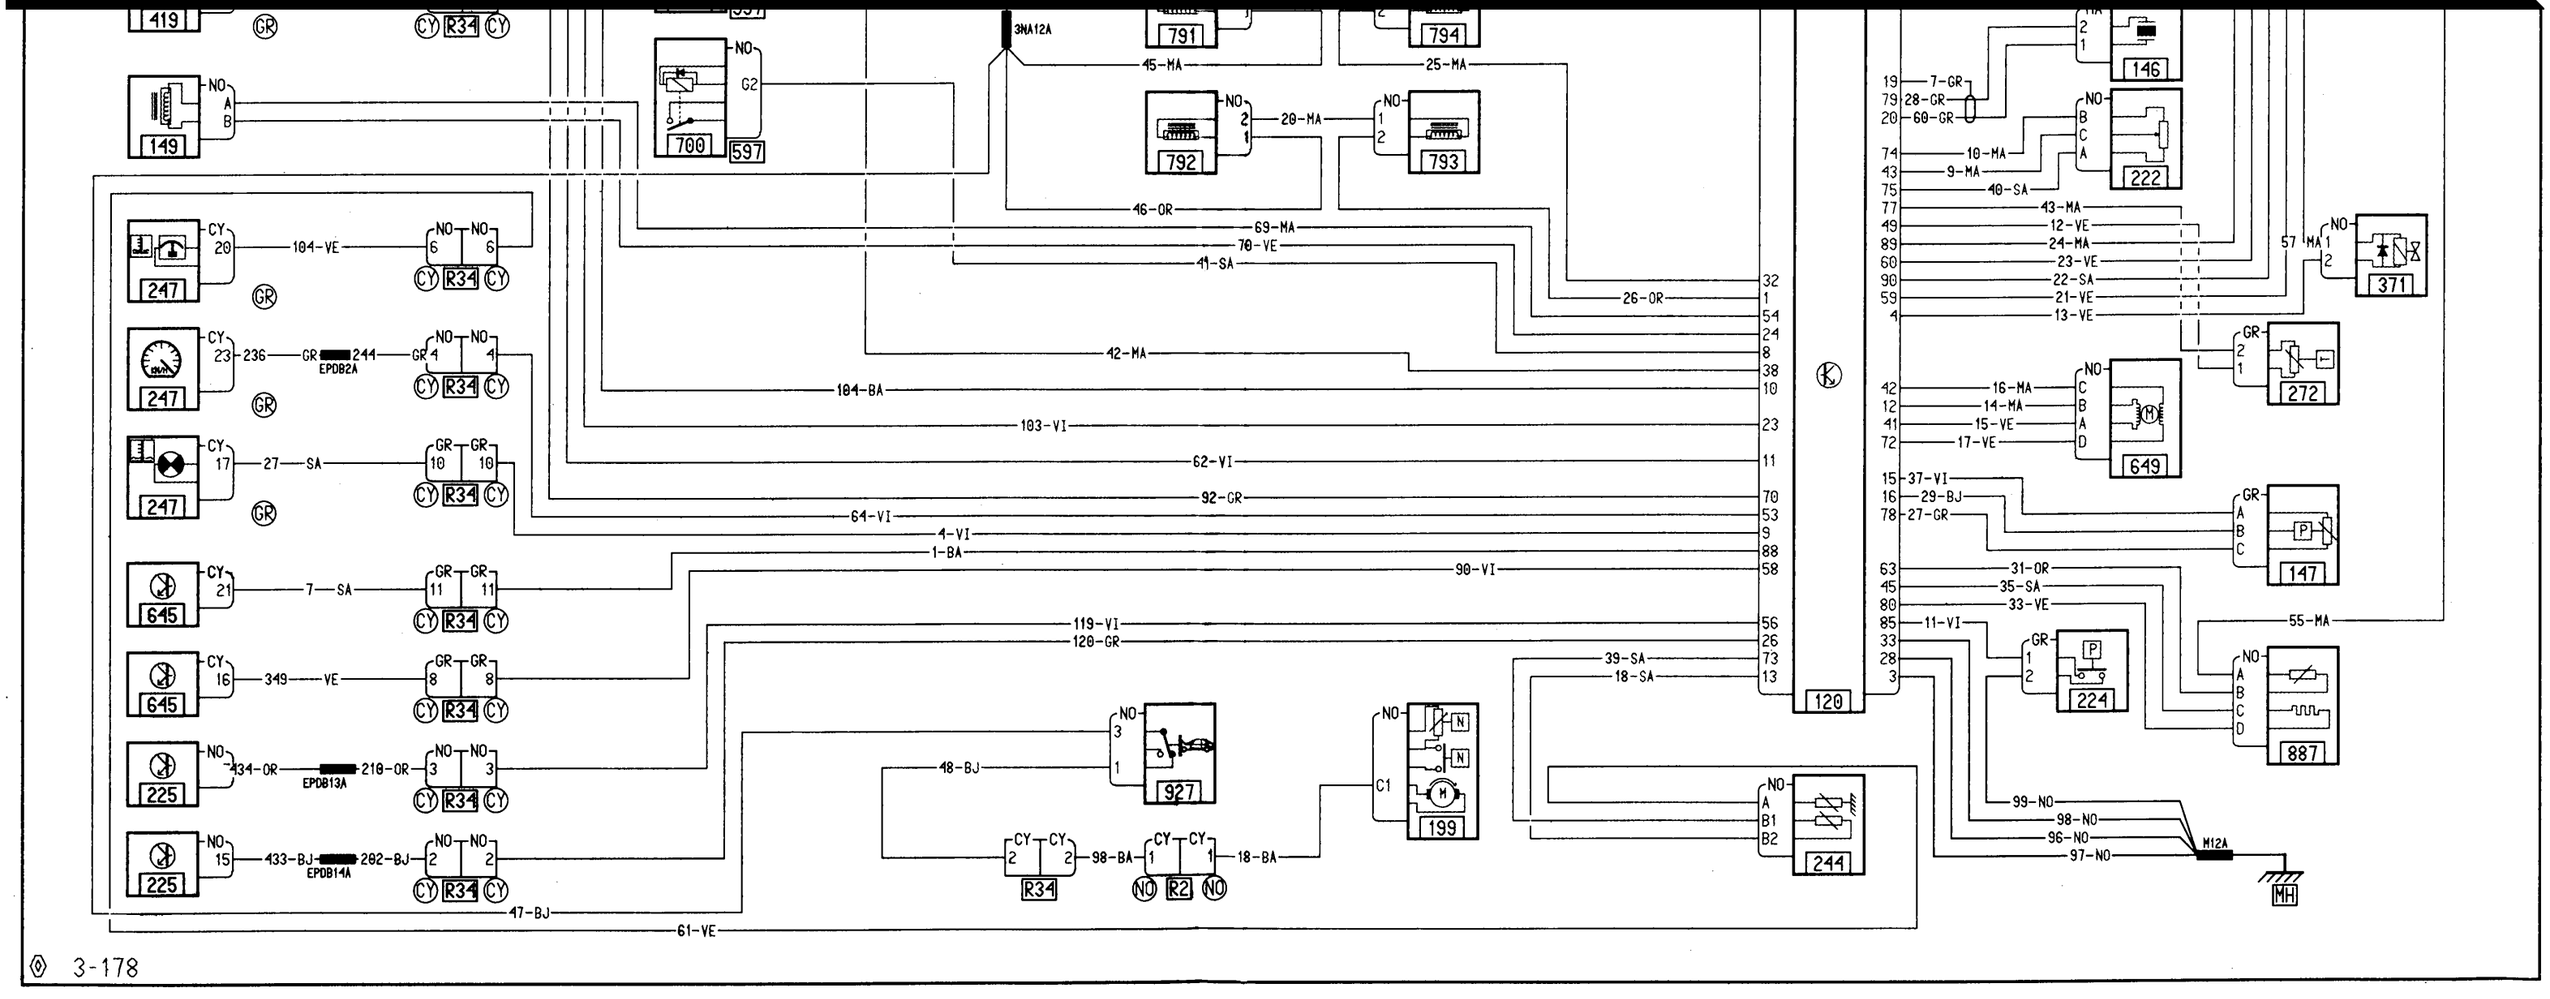
419
GR
CY R34 CY
149
NO A B
700
597
NO G2
3NA12A
791
794
45-MA
25-MA
792
793
NO 2 1 20-MA
NO 1 2
46-OR
69-MA
70-VE
11-SA
42-MA
104-BA
103-VI
62-VI
92-GR
64-VI
1-VI
1-BA
90-VI
119-VI
120-GR
39-SA
18-SA
247
CY 20 104-VE
NO 6 NO 6
CY 23 236 GR 241 GR
EPDB2A
NO 4 NO 4
CY 17 27 SA
GR 10 GR 10
645
CY 21 7 SA
GR 11 GR 11
CY 16 349 VE
GR 8 GR 8
225
NO 434-OR 210-OR
NO 3 NO 3
NO 15 433-BJ 202-BJ
EPDB14A
NO 2 NO 2
47-BJ
61-VE
927
48-BJ
NO 3 1
CY 2 CY 2 98-BA CY 1 CY 1 18-BA
R34
NO R2 NO
199
C1 N N M
120
32 1 54 24 8 38 10 23 11 70 53 9 88 58 56 26 73 13
NO A B1 B2
244
19 7-GR
79 28-GR
20 60-GR
74 10-MA
43 9-MA
75 40-SA
77 43-MA
49 12-VE
89 24-MA
60 23-VE
90 22-SA
59 21-VE
4 13-VE
146
NO B C A
222
57 MA
NO 1 2
371
GR 2 1
272
42 16-MA
12 14-MA
41 15-VE
72 17-VE
NO C B A D
649
15 37-VI
16 29-BJ
78 27-GR
GR A B C
147
63 31-OR
45 35-SA
80 33-VE
85 11-VI
33
28
3
55-MA
GR 1 2
224
NO A B C D
887
99-NO
98-NO
96-NO
97-NO
M12A
MH

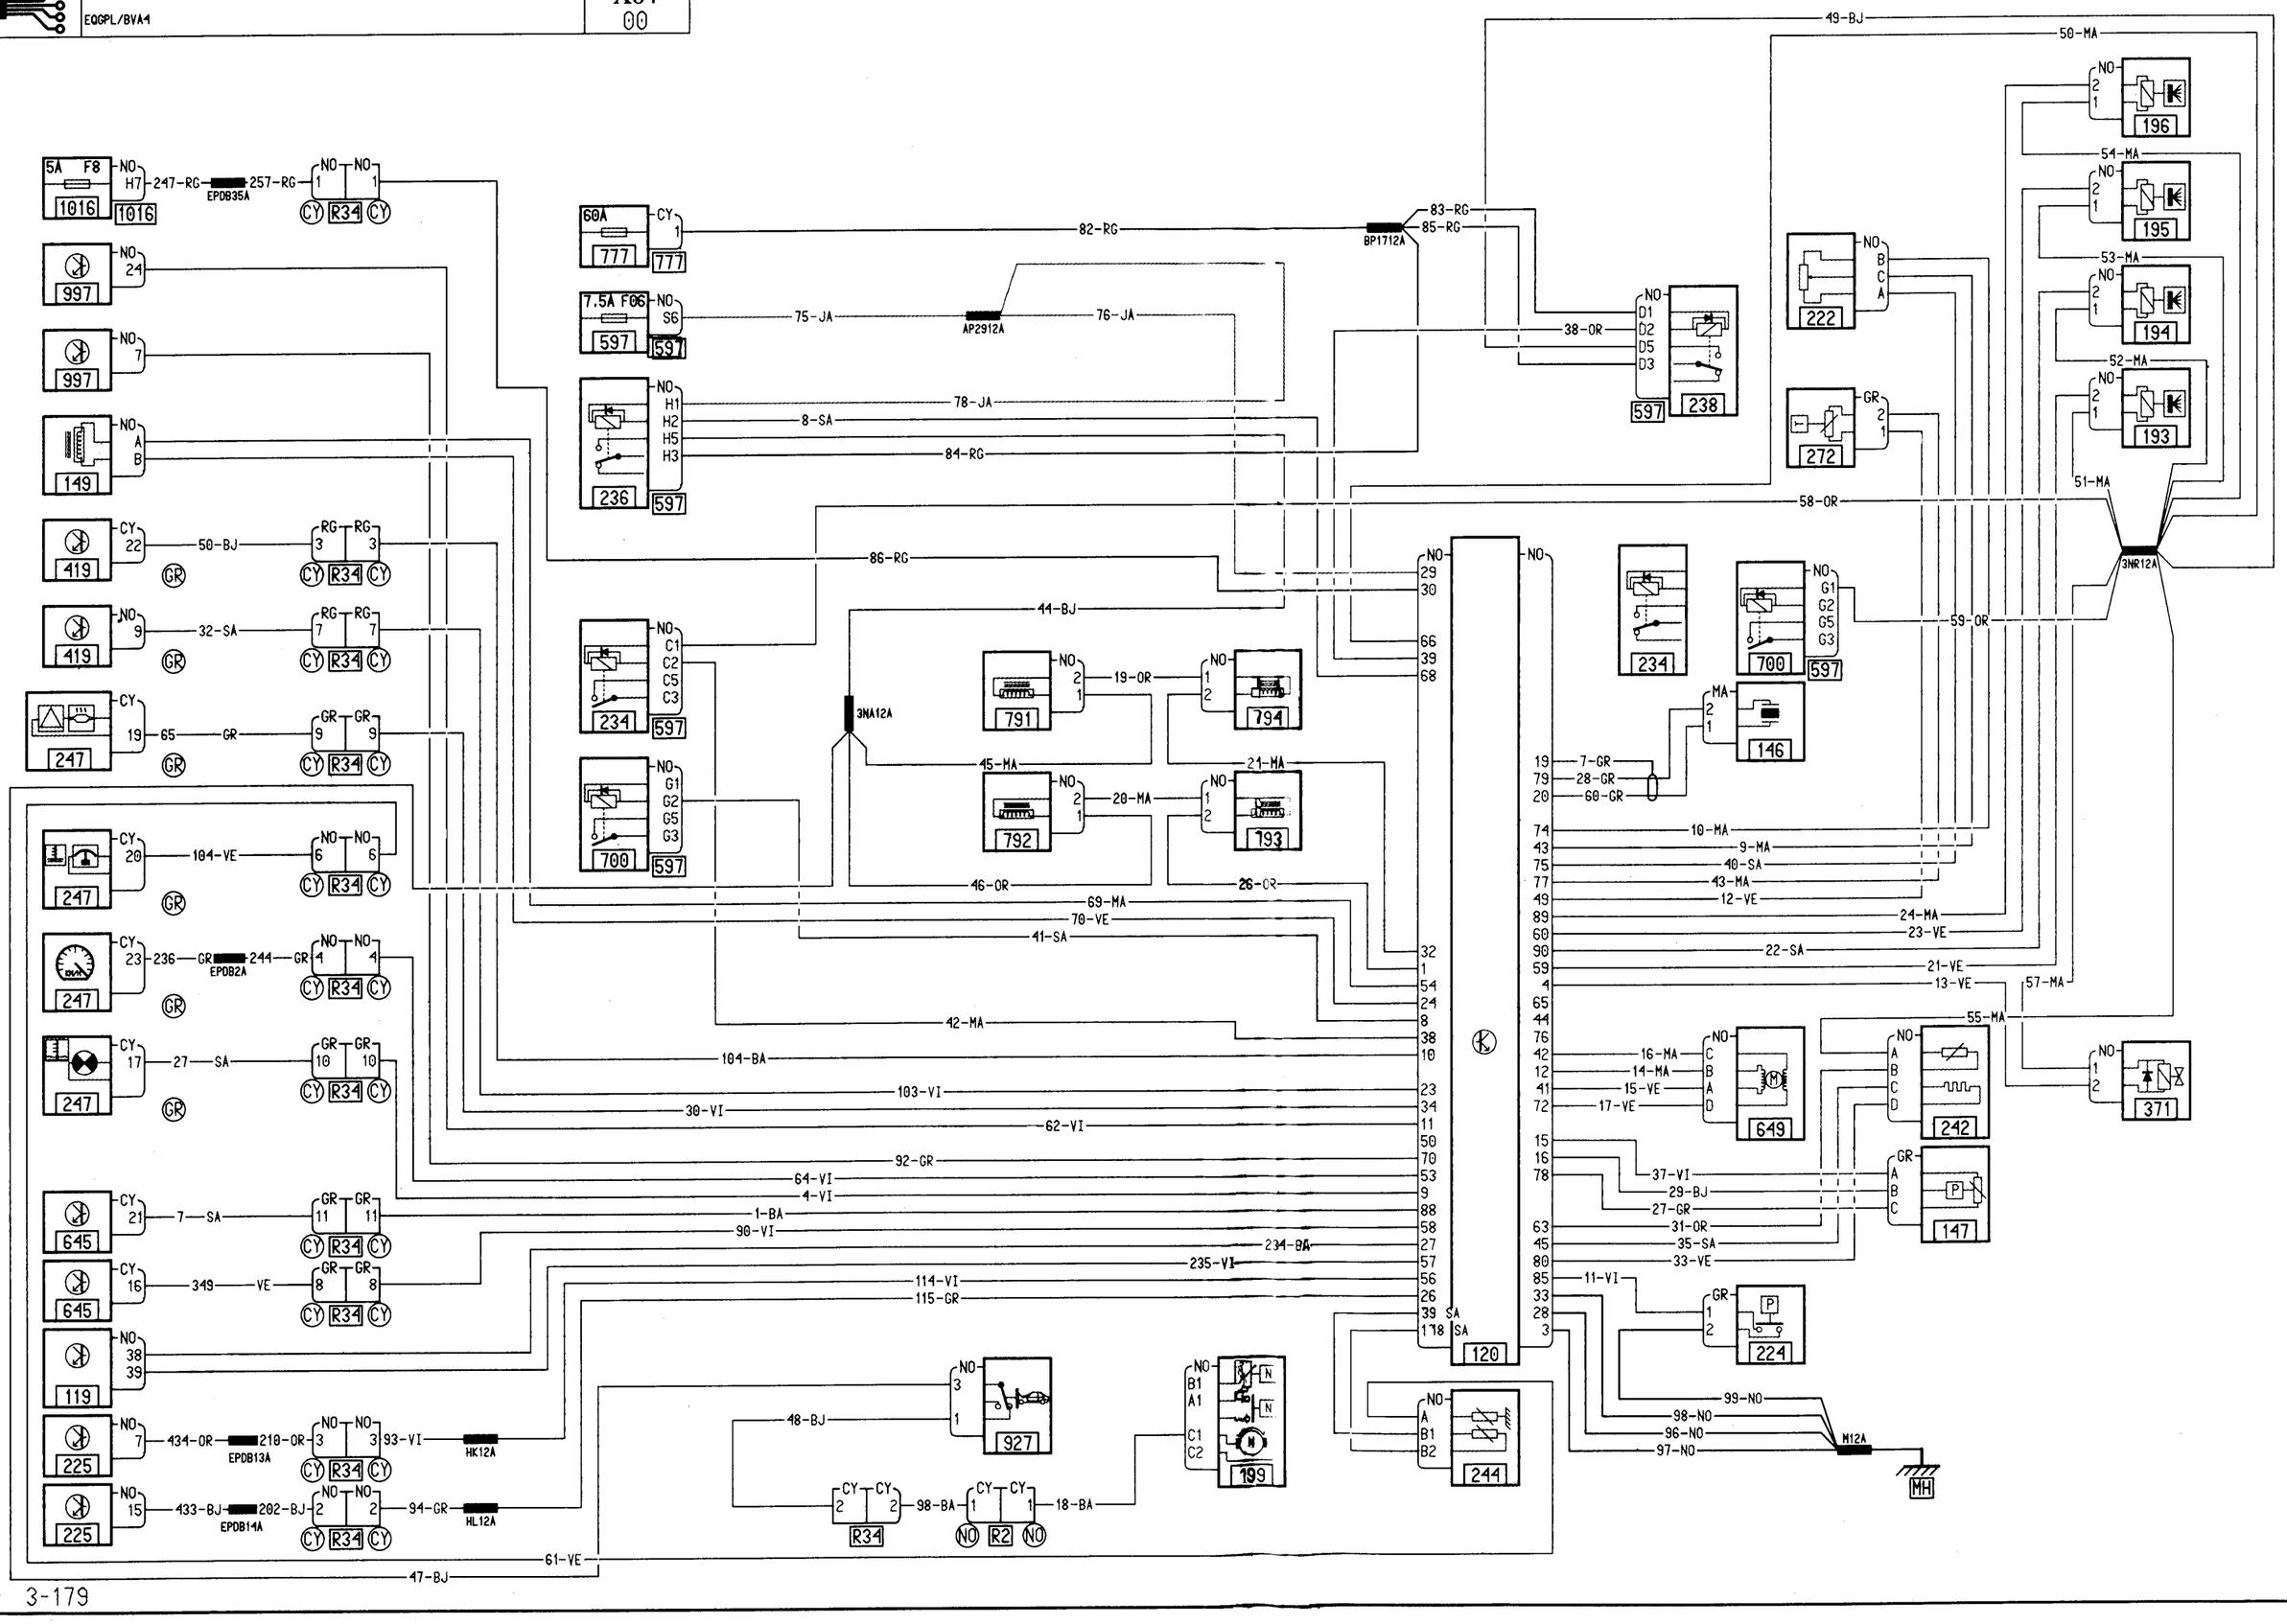
5A F8
1016
247-RG
EPDB35A
257-RG
R34
997
997
149
419
419
247
247
247
247
645
645
119
225
225
60A
777
7.5A F06
597
AP2912A
75-JA
76-JA
82-RG
83-RG
85-RG
BP1712A
78-JA
8-SA
84-RG
236
38-OR
238
222
272
196
195
194
193
49-BJ
50-MA
54-MA
53-MA
52-MA
51-MA
58-OR
3NR12A
86-RG
44-BJ
234
3NA12A
791
19-OR
794
45-MA
21-MA
792
20-MA
793
700
59-OR
146
10-MA
9-MA
40-SA
43-MA
12-VE
24-MA
23-VE
22-SA
21-VE
13-VE
57-MA
55-MA
371
16-MA
14-MA
15-VE
17-VE
649
242
37-VI
29-BJ
27-GR
147
31-OR
35-SA
33-VE
11-VI
224
99-NO
98-NO
96-NO
97-NO
M12A
MH
46-OR
26-OR
69-MA
70-VE
41-SA
42-MA
104-BA
103-VI
30-VI
62-VI
92-GR
64-VI
4-VI
1-BA
90-VI
234-BA
235-VI
114-VI
115-GR
61-VE
47-BJ
104-VE
236-GR
244-GR
27-SA
349-VE
434-OR
210-OR
93-VI
HK12A
433-BJ
202-BJ
94-GR
HL12A
48-BJ
927
199
98-BA
18-BA
R2
120
244

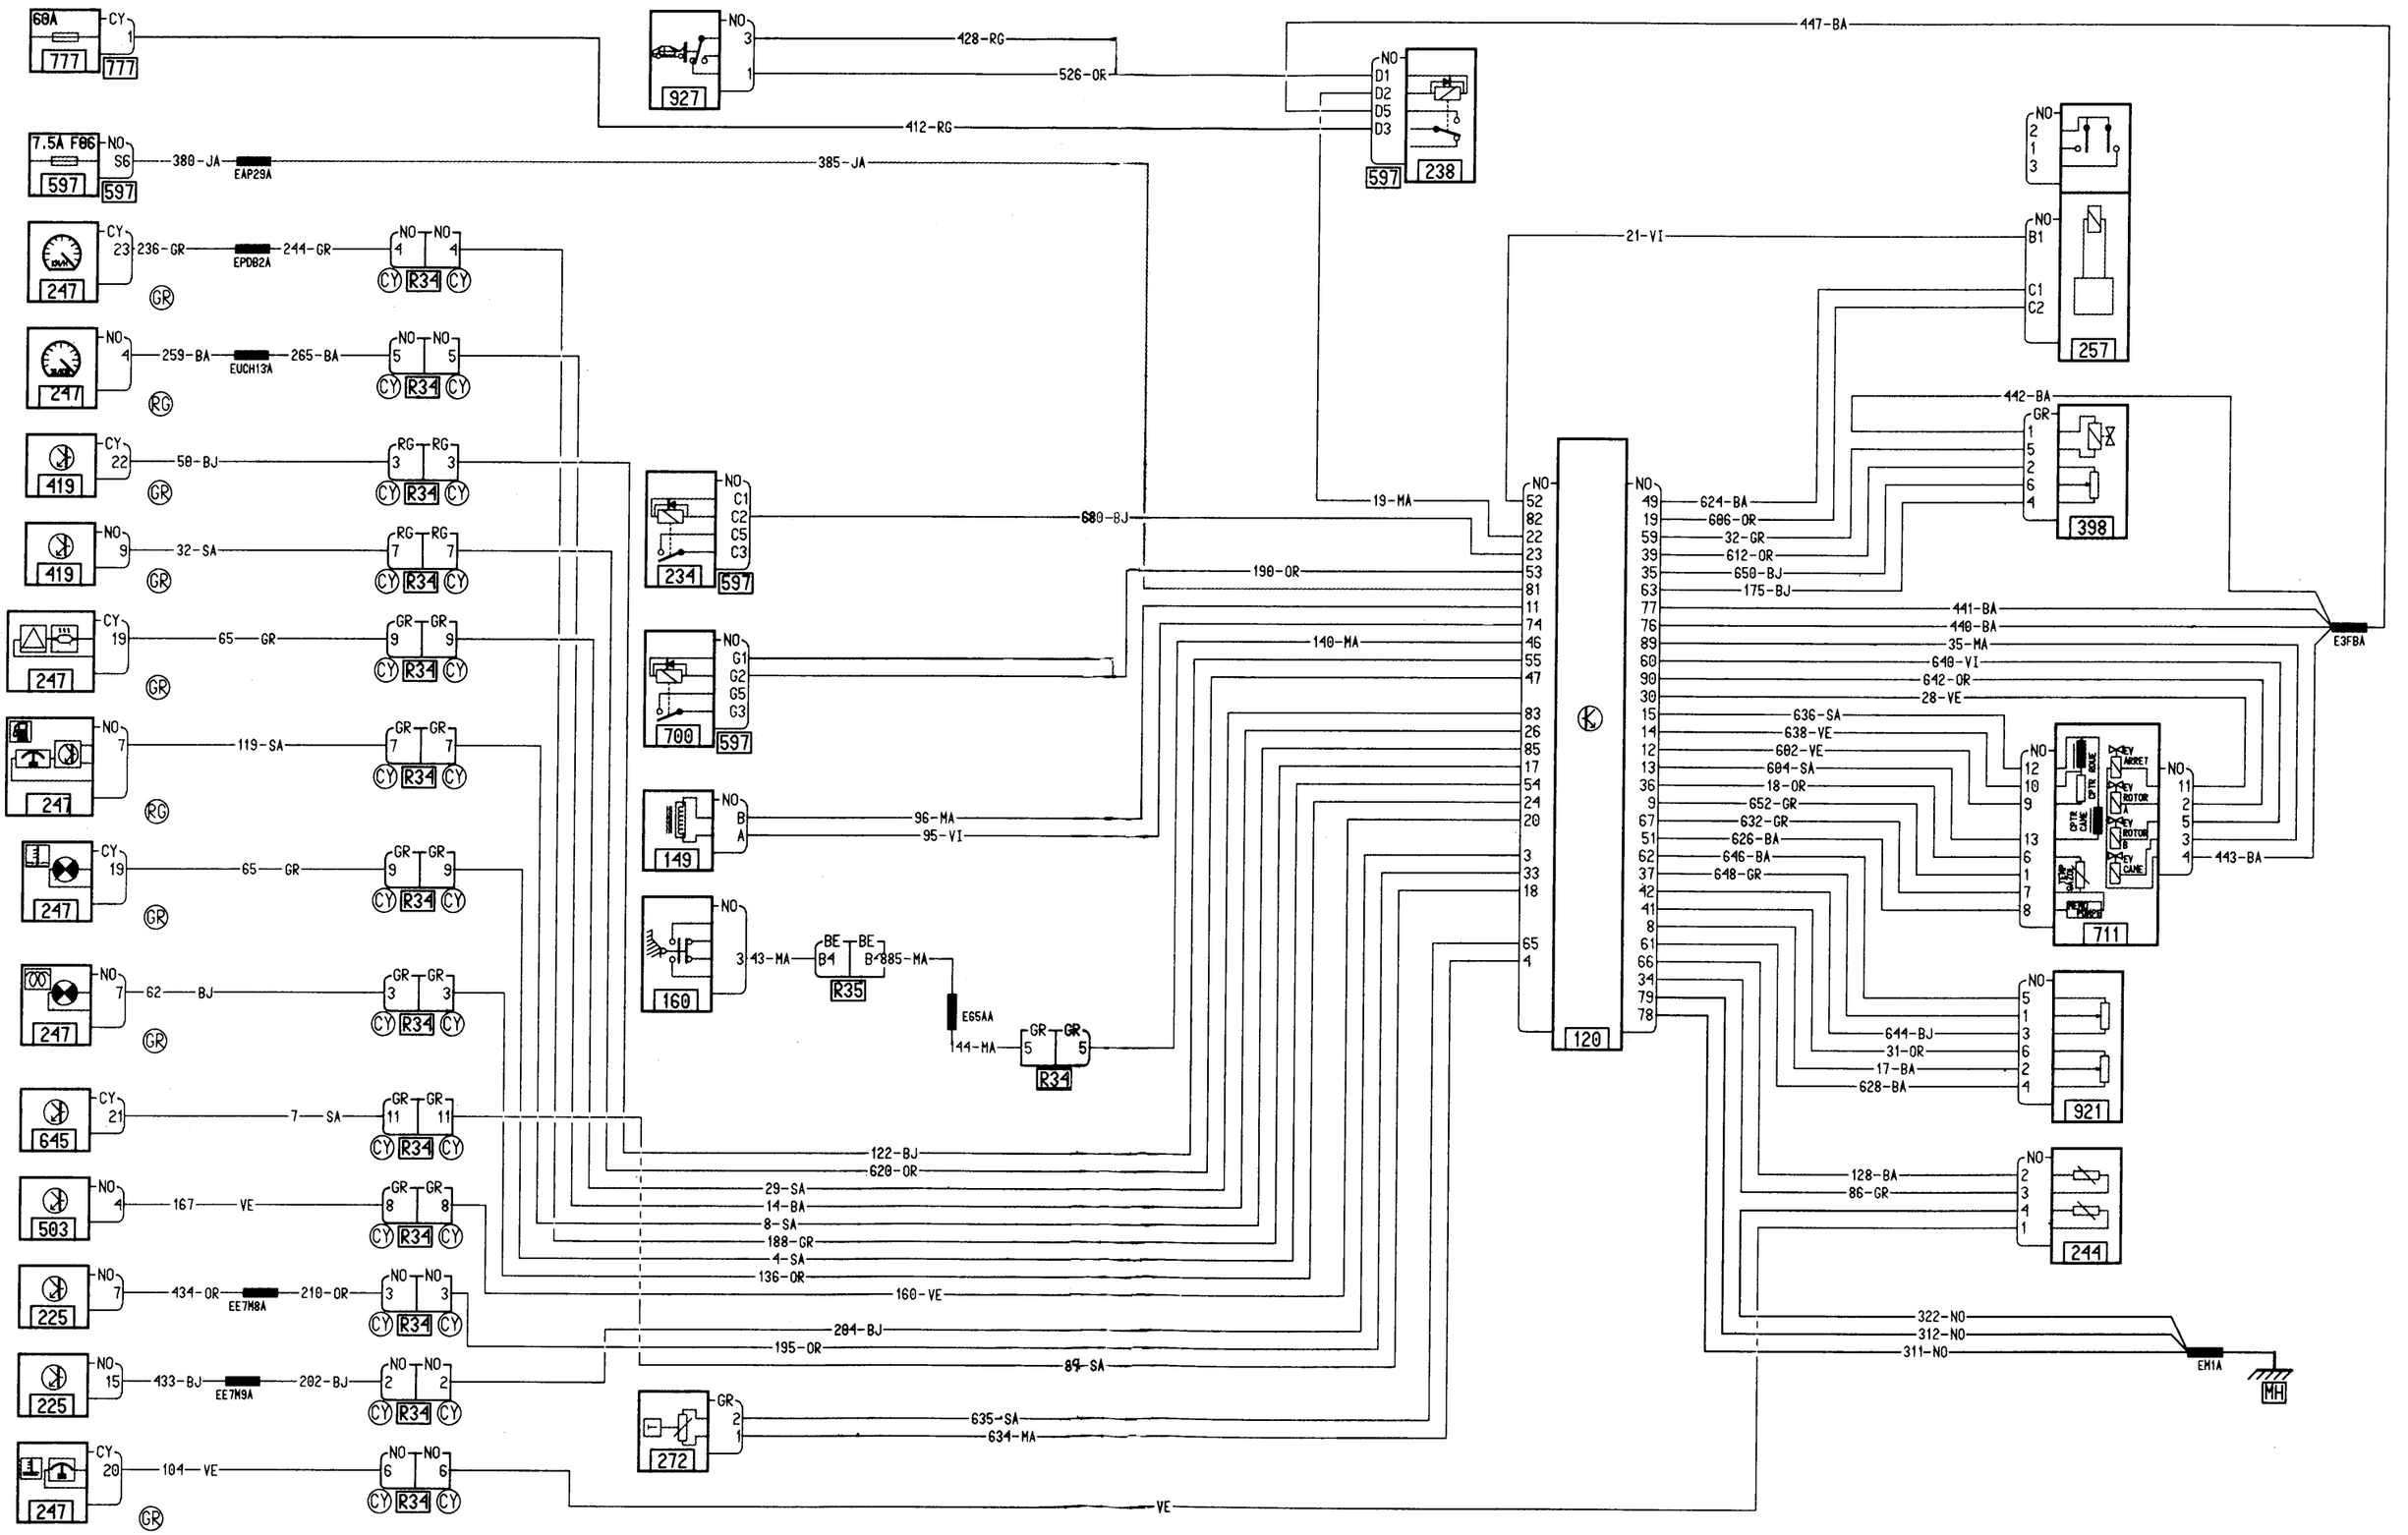
60A
777
CY
1
777
927
NO
3
1
428-RG
526-OR
412-RG
447-BA
D1
D2
D5
D3
597
238
7.5A F86
S6
380-JA
EAP29A
385-JA
247
23
236-GR
EPD82A
244-GR
4
CY
R34
GR
21-VI
B1
C1
C2
257
259-BA
EUCH13A
265-BA
5
RG
442-BA
398
419
22
50-BJ
3
32-SA
9
7
65-GR
19
680-BJ
234
700
G1
G2
G5
G3
19-MA
190-OR
140-MA
52
82
22
23
53
81
11
74
46
55
47
83
26
85
17
54
24
20
3
33
18
65
4
120
49
624-BA
19
686-OR
59
32-GR
39
612-OR
35
650-BJ
63
175-BJ
77
441-BA
76
440-BA
89
35-MA
60
648-VI
90
642-OR
30
28-VE
15
636-SA
14
638-VE
12
602-VE
13
604-SA
36
18-OR
9
652-GR
67
632-GR
51
626-BA
62
646-BA
37
648-GR
42
41
8
61
66
34
79
78
E3FBA
119-SA
149
96-MA
95-VI
160
3
13-MA
BE
B4
B885-MA
R35
E65AA
14-MA
5
644-BJ
31-OR
17-BA
628-BA
921
122-BJ
620-OR
29-SA
14-BA
8-SA
188-GR
4-SA
136-OR
160-VE
128-BA
86-GR
244
503
167
VE
8
645
21
7
SA
11
434-OR
EE7M8A
210-OR
225
433-BJ
EE7M9A
202-BJ
204-BJ
195-OR
89-SA
322-NO
312-NO
311-NO
EM1A
MH
272
635-SA
634-MA
104
20
6
VE
711
DEV ARRET
DEV ROTOR I
DEV ROTOR B
DEV CAME
DPTR ROUE
DPTR CAME
NO
12
10
9
13
6
1
7
8
11
2
5
3
4
443-BA

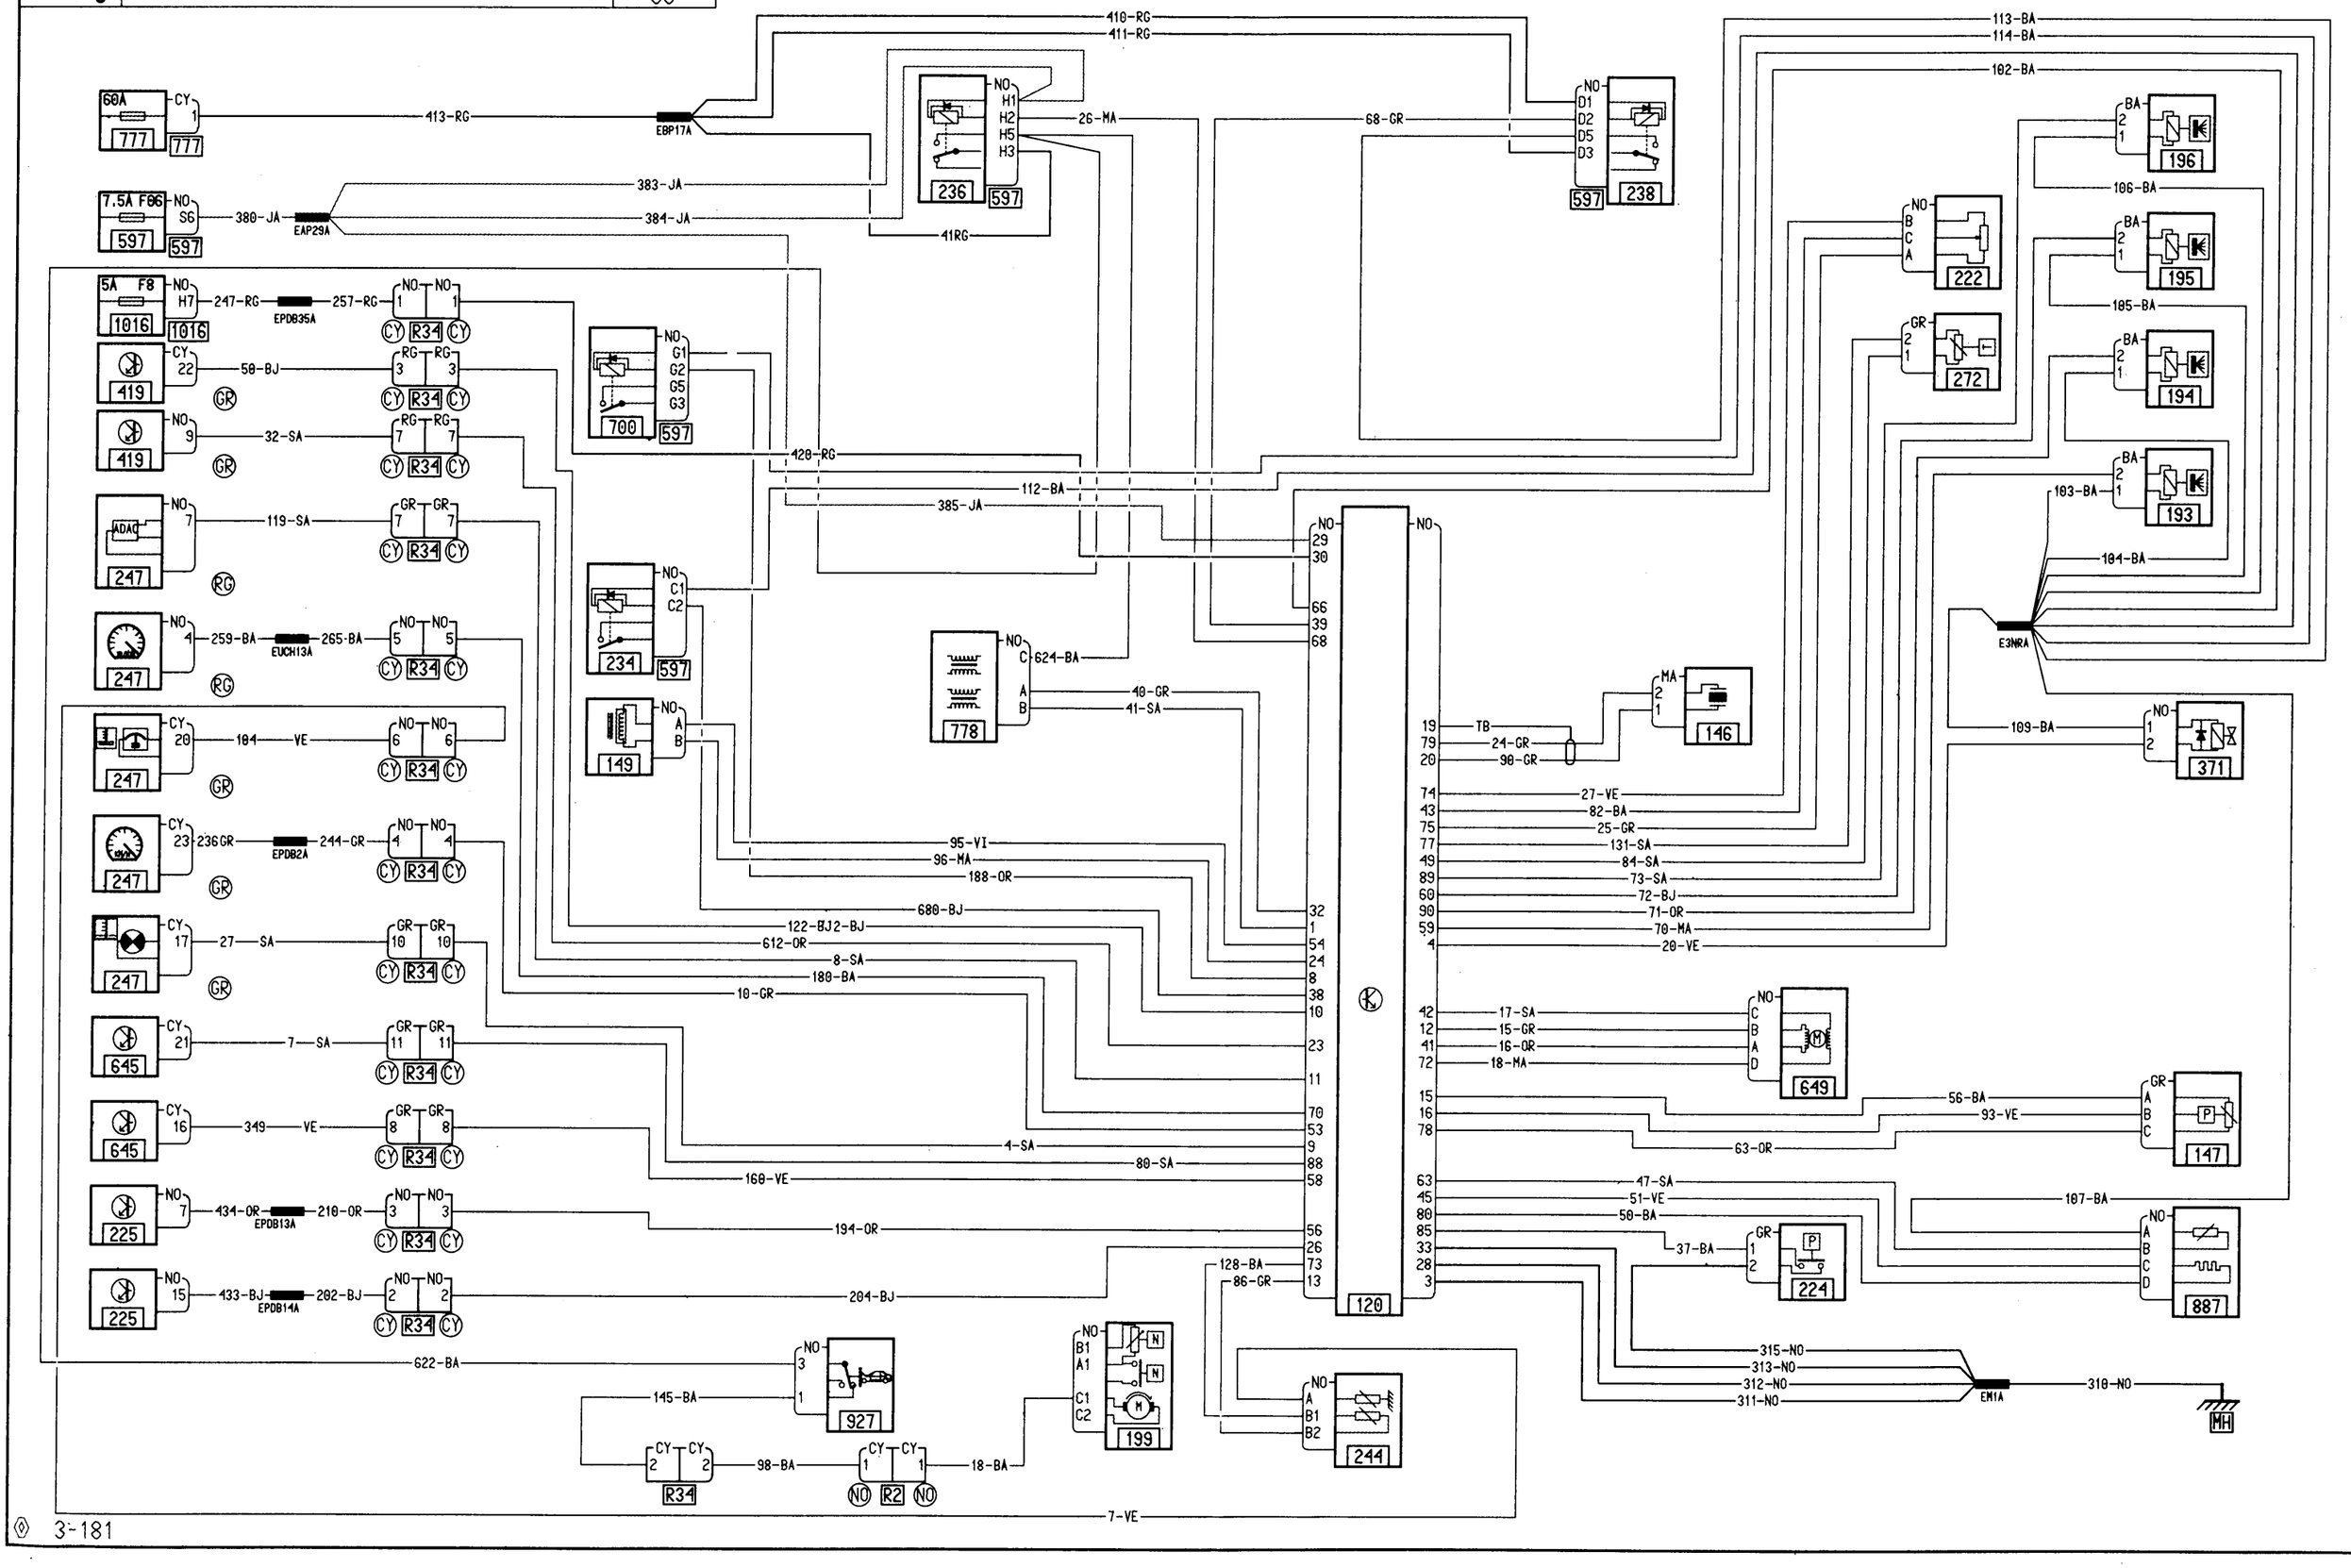
60A
777
413-RG
EBP17A
410-RG
411-RG
236
597
26-MA
68-GR
238
7.5A F66
380-JA
EAP29A
383-JA
384-JA
41RG
5A F8
1016
247-RG
EPD835A
257-RG
R34
419
50-BJ
32-SA
700
420-RG
ADAC
247
119-SA
112-BA
385-JA
234
259-BA
EUCH13A
265-BA
149
778
624-BA
40-GR
41-SA
120
222
272
196
195
194
193
E3NRA
146
371
104-VE
236GR
EPDB2A
244-GR
95-VI
96-MA
188-OR
680-BJ
122-BJ2-BJ
612-OR
8-SA
180-BA
10-GR
27-SA
645
7-SA
349-VE
1-SA
80-SA
168-VE
434-OR
EPDB13A
210-OR
194-OR
225
433-BJ
EPDB14A
202-BJ
204-BJ
128-BA
86-GR
649
147
224
887
315-NO
313-NO
312-NO
311-NO
EM1A
310-NO
MH
622-BA
927
145-BA
199
98-BA
18-BA
R2
244
7-VE
102-BA
113-BA
114-BA
106-BA
105-BA
103-BA
104-BA
109-BA
107-BA

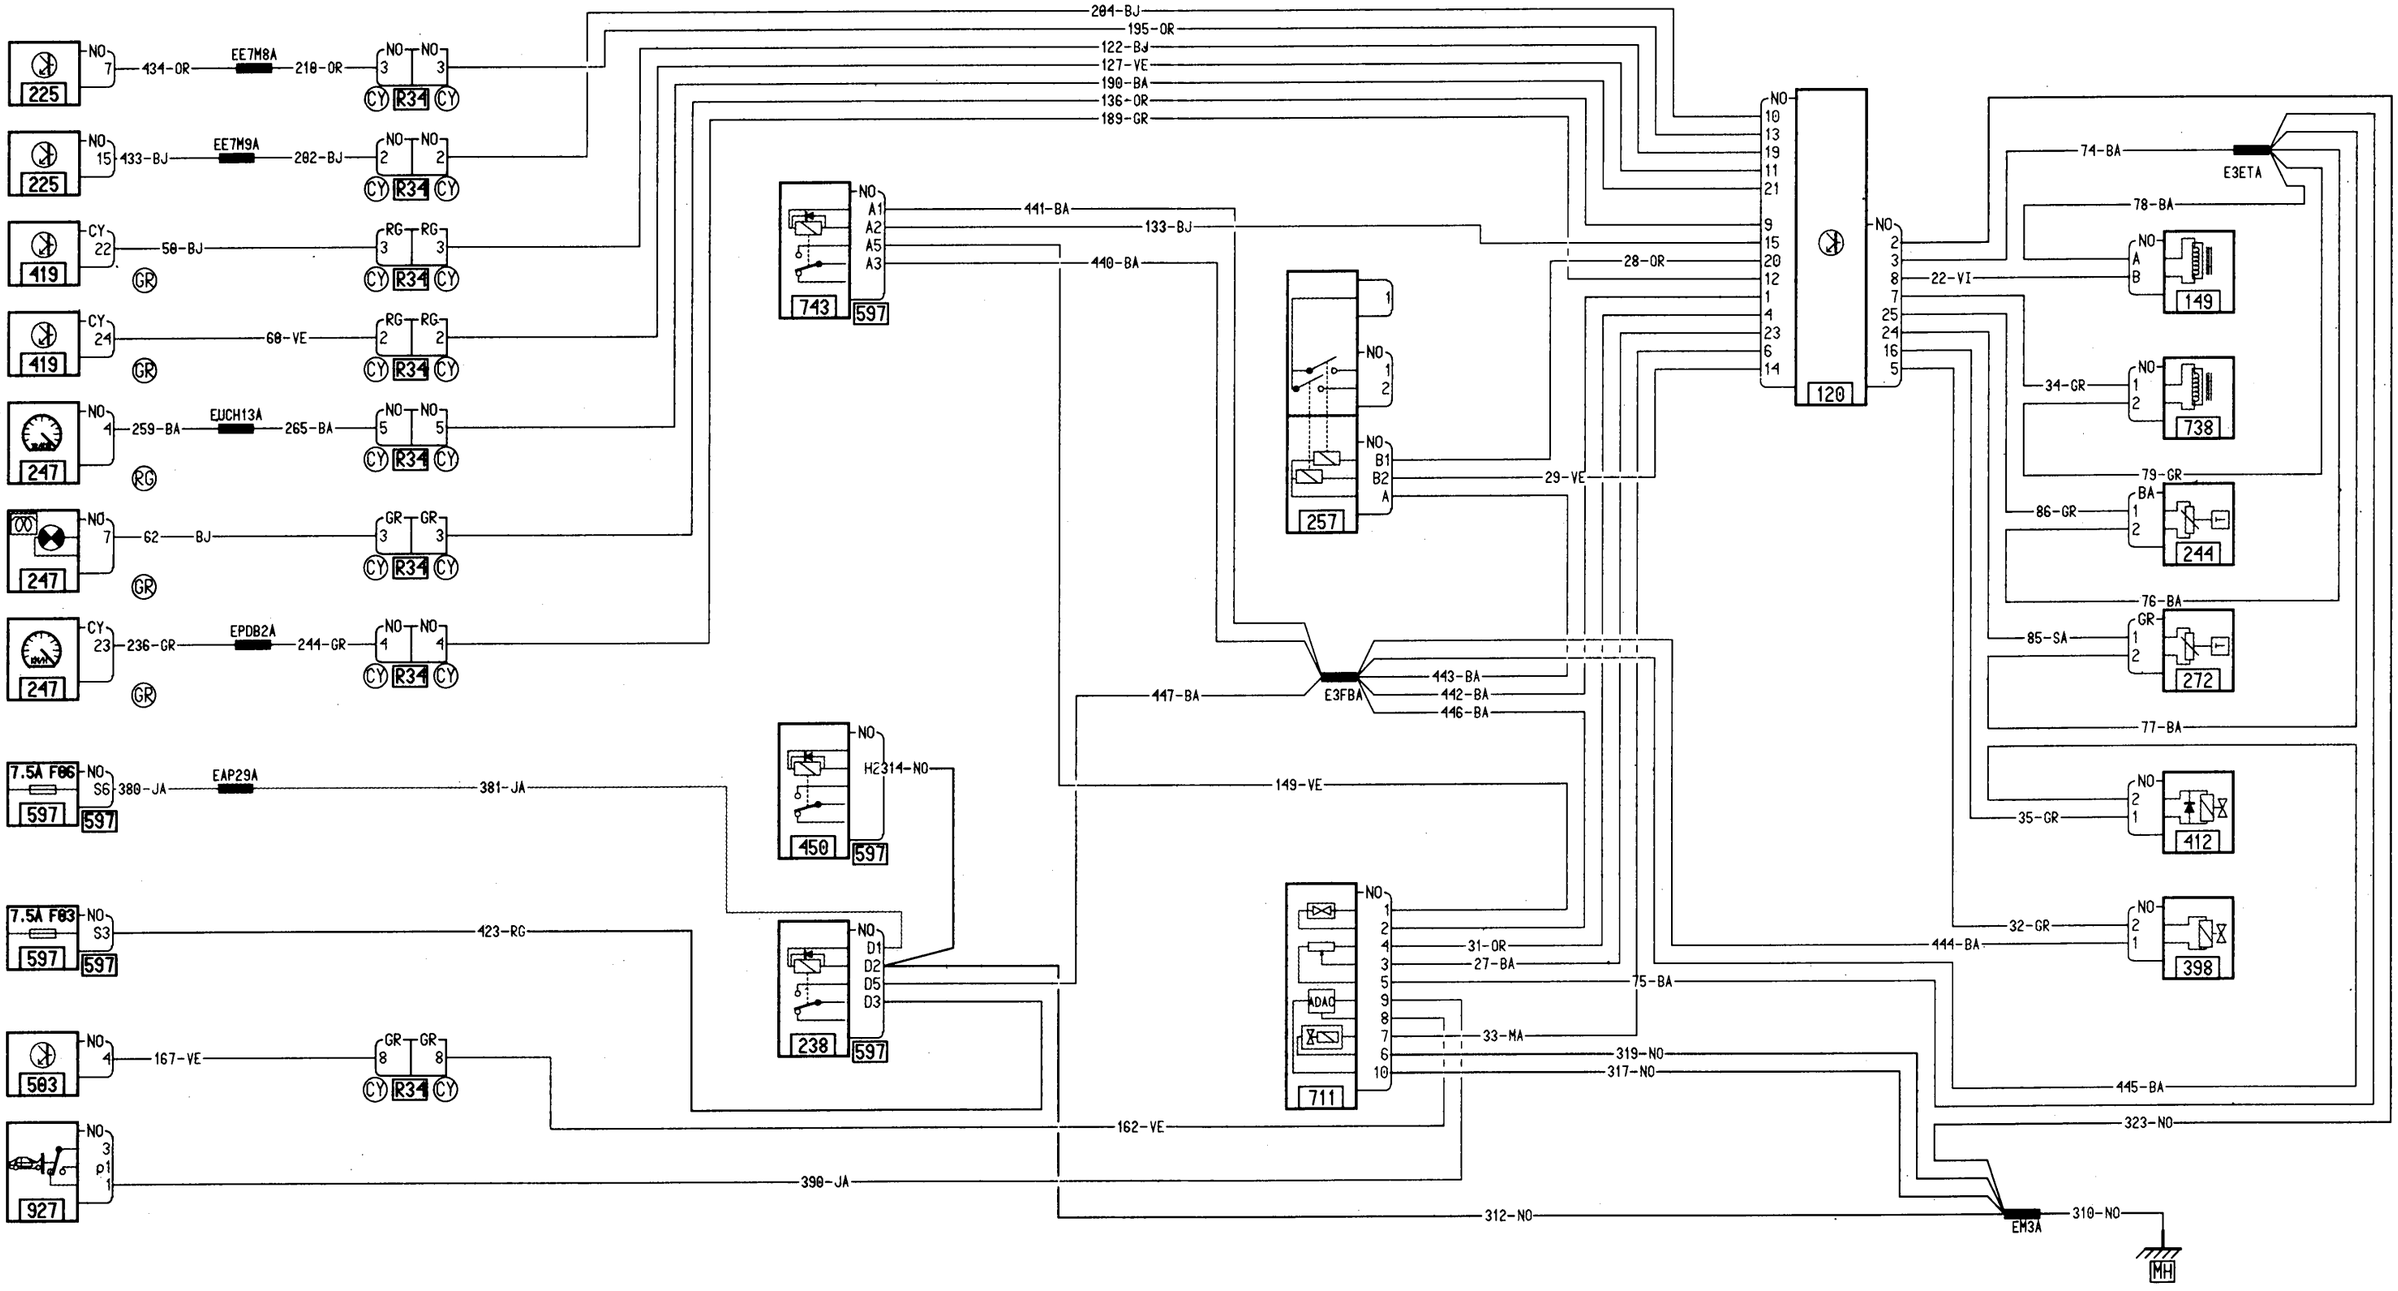
225
NO 7
434-OR
EE7M8A
210-OR
NO 3
NO 3
CY R34 CY
225
NO 15
433-BJ
EE7M9A
282-BJ
NO 2
NO 2
CY R34 CY
419
CY 22
58-BJ
GR
RG 3
RG 3
CY R34 CY
419
CY 24
68-VE
GR
RG 2
RG 2
CY R34 CY
247
NO 4
259-BA
EJCH13A
265-BA
NO 5
NO 5
CY R34 CY
RG
247
NO 7
62
BJ
GR 3
GR 3
CY R34 CY
GR
247
CY 23
236-GR
EPDB2A
241-GR
NO 4
NO 4
CY R34 CY
GR
7.5A F66
597
NO S6
380-JA
EAP29A
381-JA
597
7.5A F63
597
NO S3
423-RG
597
503
NO 4
167-VE
GR 8
GR 8
CY R34 CY
927
NO 3
P1
1
398-JA
204-BJ
195-OR
122-BJ
127-VE
190-BA
136-OR
189-GR
743
NO A1
A2
A5
A3
597
441-BA
133-BJ
440-BA
257
1
NO 1
2
NO B1
B2
A
29-VE
120
NO 10
13
19
11
21
9
15
20
12
1
4
23
6
14
28-OR
22-VI
NO 2
3
8
7
25
24
16
5
74-BA
E3ETA
78-BA
NO A
B
149
34-GR
NO 1
2
738
79-GR
86-GR
BA 1
2
244
76-BA
85-SA
GR 1
2
272
77-BA
35-GR
NO 2
1
412
32-GR
NO 2
1
398
E3FBA
443-BA
442-BA
446-BA
447-BA
450
NO
H2314-NO
597
149-VE
238
NO D1
D2
D5
D3
597
711
NO 1
2
4
3
5
9
8
7
6
10
ADAC
31-OR
27-BA
33-MA
75-BA
444-BA
319-NO
317-NO
445-BA
323-NO
162-VE
312-NO
E3MA
310-NO
MH

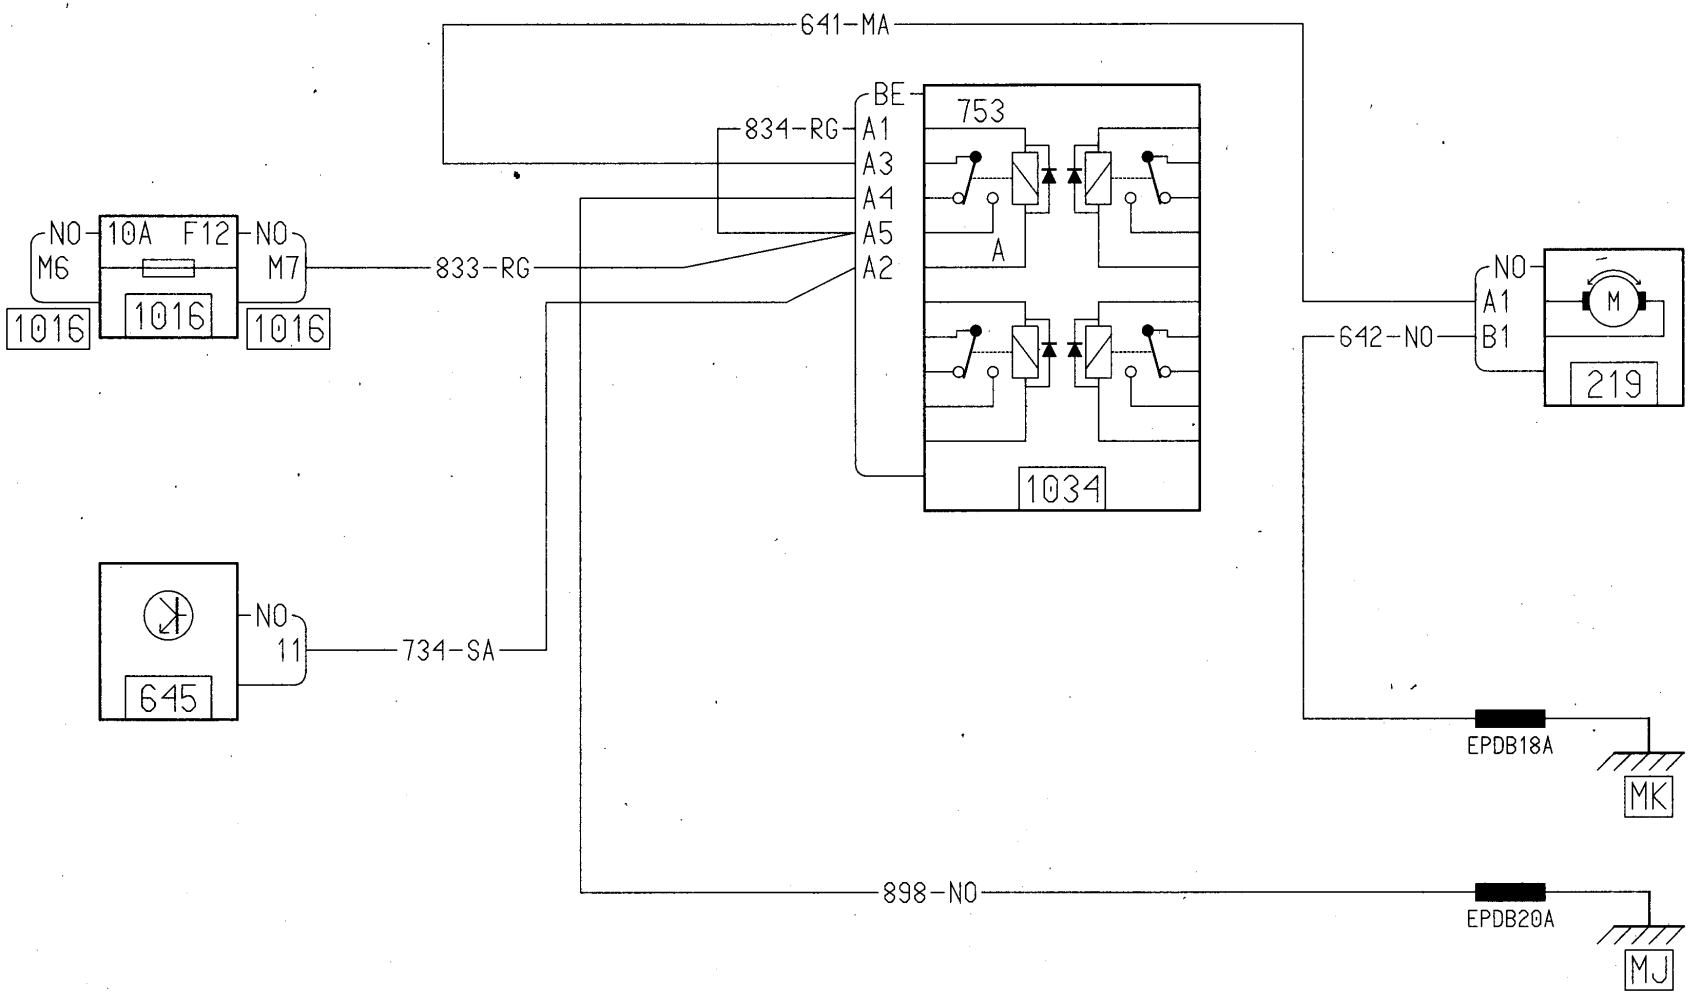
641-MA
BE
753
834-RG
A1
A3
A4
A5
A2
A
NO
10A F12
NO
M6
M7
833-RG
1016
1016
1016
1034
NO
A1
B1
M
642-NO
219
NO
11
734-SA
645
EPDB18A
MK
898-NO
EPDB20A
MJ

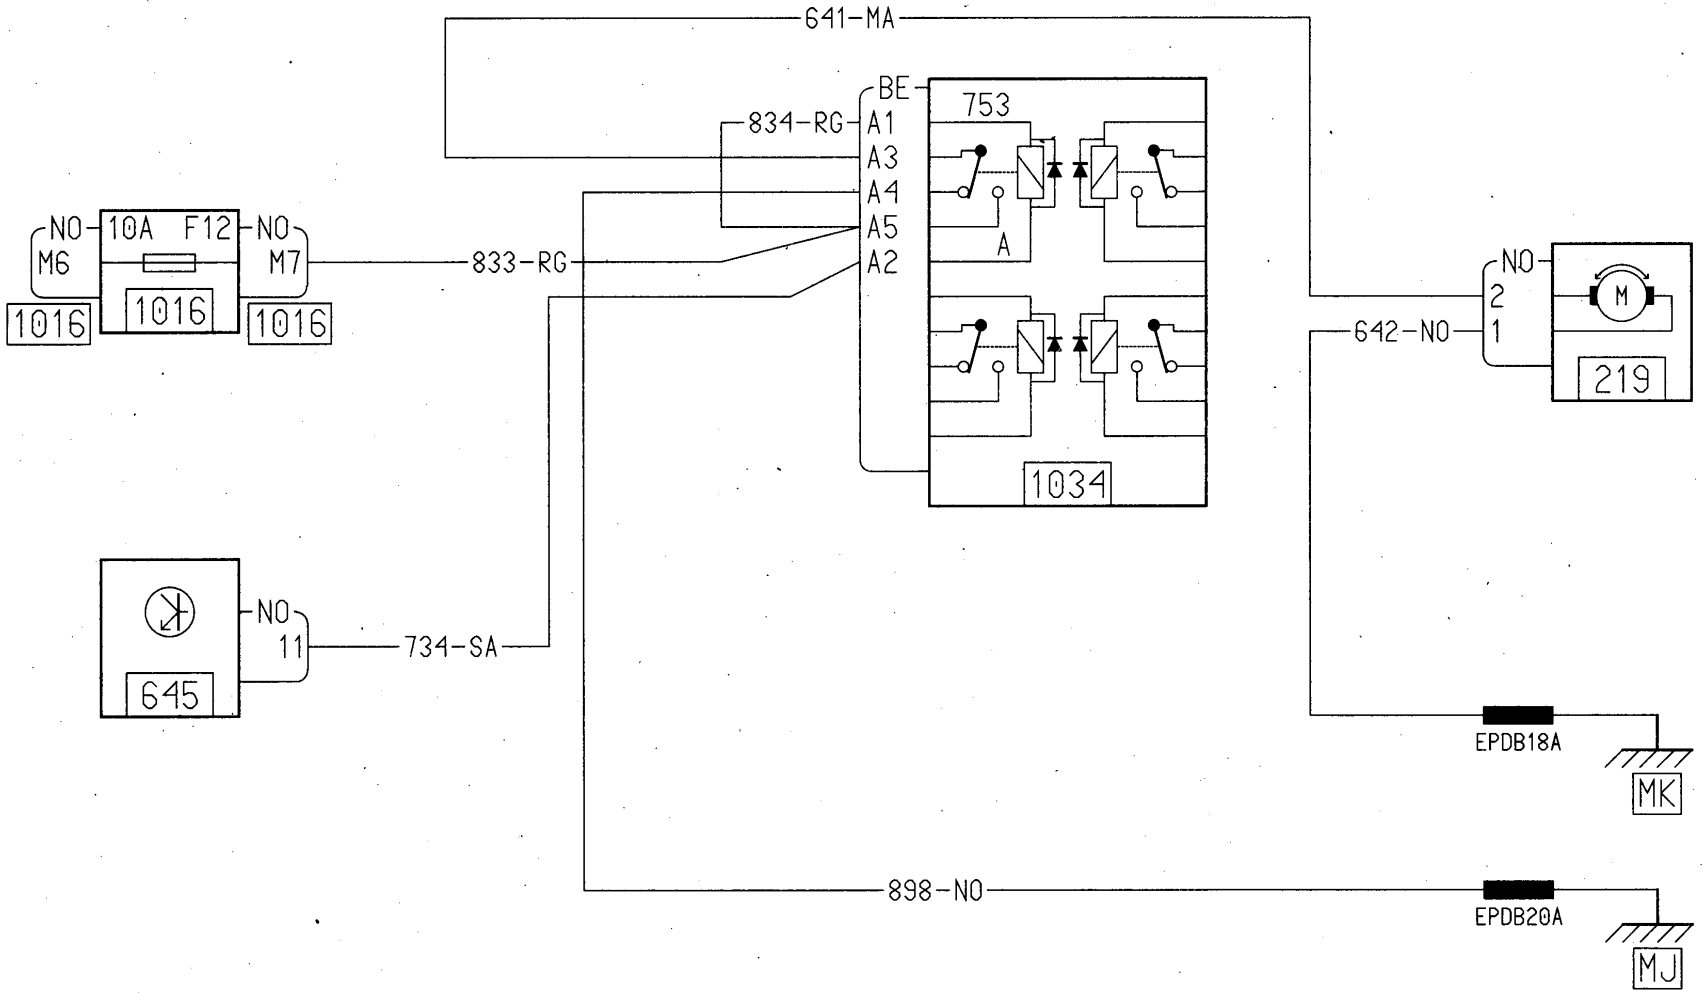
641-MA
BE
753
834-RG
A1
A3
A4
A5
A2
A
NO
M6
10A F12
NO
M7
833-RG
1016
1016
1016
1034
NO
2
1
M
642-NO
219
645
NO
11
734-SA
EPDB18A
MK
898-NO
EPDB20A
MJ

REAR WINDOW RISER WITH LOCKING

E2/DG/LVAREL/SGSCHA

X64
00

131 VE 3 4 5 1 2
33-NO
130 GR 3 4 5 1 2
31-NO
135 CY B2 B1 B3 A1
34-NO
23-BE
10-JA
21-BE
22-BE
7.5A F13 NO N7 1016 1016
611-BE
EPDB15A
260-BE
CY 1 CY 20 NO R108 NO
LPDA
NO C8 25A F3 C7 1016 1016 1016
NO A8 25A F1 A7 1016 1016 1016
NO F3 25A C8 C7 1016 1016 1016
15-JA
14-JA
4-BA
3-VI
2-BJ
1-GR
5-MA
NO 2 1 6 5 4 3 7 NO R108 NO
509-JA
508-JA
59-BA
58-VI
57-BJ
56-GR
BE 1 2 3 4 NO R2 NO
306-BA
305-VI
NO 4 1 NO 4 1 R13
7-BA
5-VI
NO 1 2 M 202
304-BJ
303-GR
NO 4 1 NO 4 1 R243
7-BA
5-VI
NO 1 2 M 201
473-MA
943-JA
NO 1 2 5 3 471
946-RG
EPDB9A
211-RG
GR 1 NO A1 R254
14-RG
OR A 60A 777 777
964-NO
EPDB18A
MK
27-NO
CY 7 CY 7 NO R108 NO
739-NO
42-BA
NO 8 NO 8 NO R108 NO
794-NO
EPDB21A
329-NO
MJ
CY 5 CY 5 NO R108 NO
168-JA
EPDB5A
494-JA
NO J4 15A F18 1016 1016
E70AA

REAR WINDOW RISER WITH LOCKING

K25/E2/DG/LVAREL/SGSCHA

X64
00

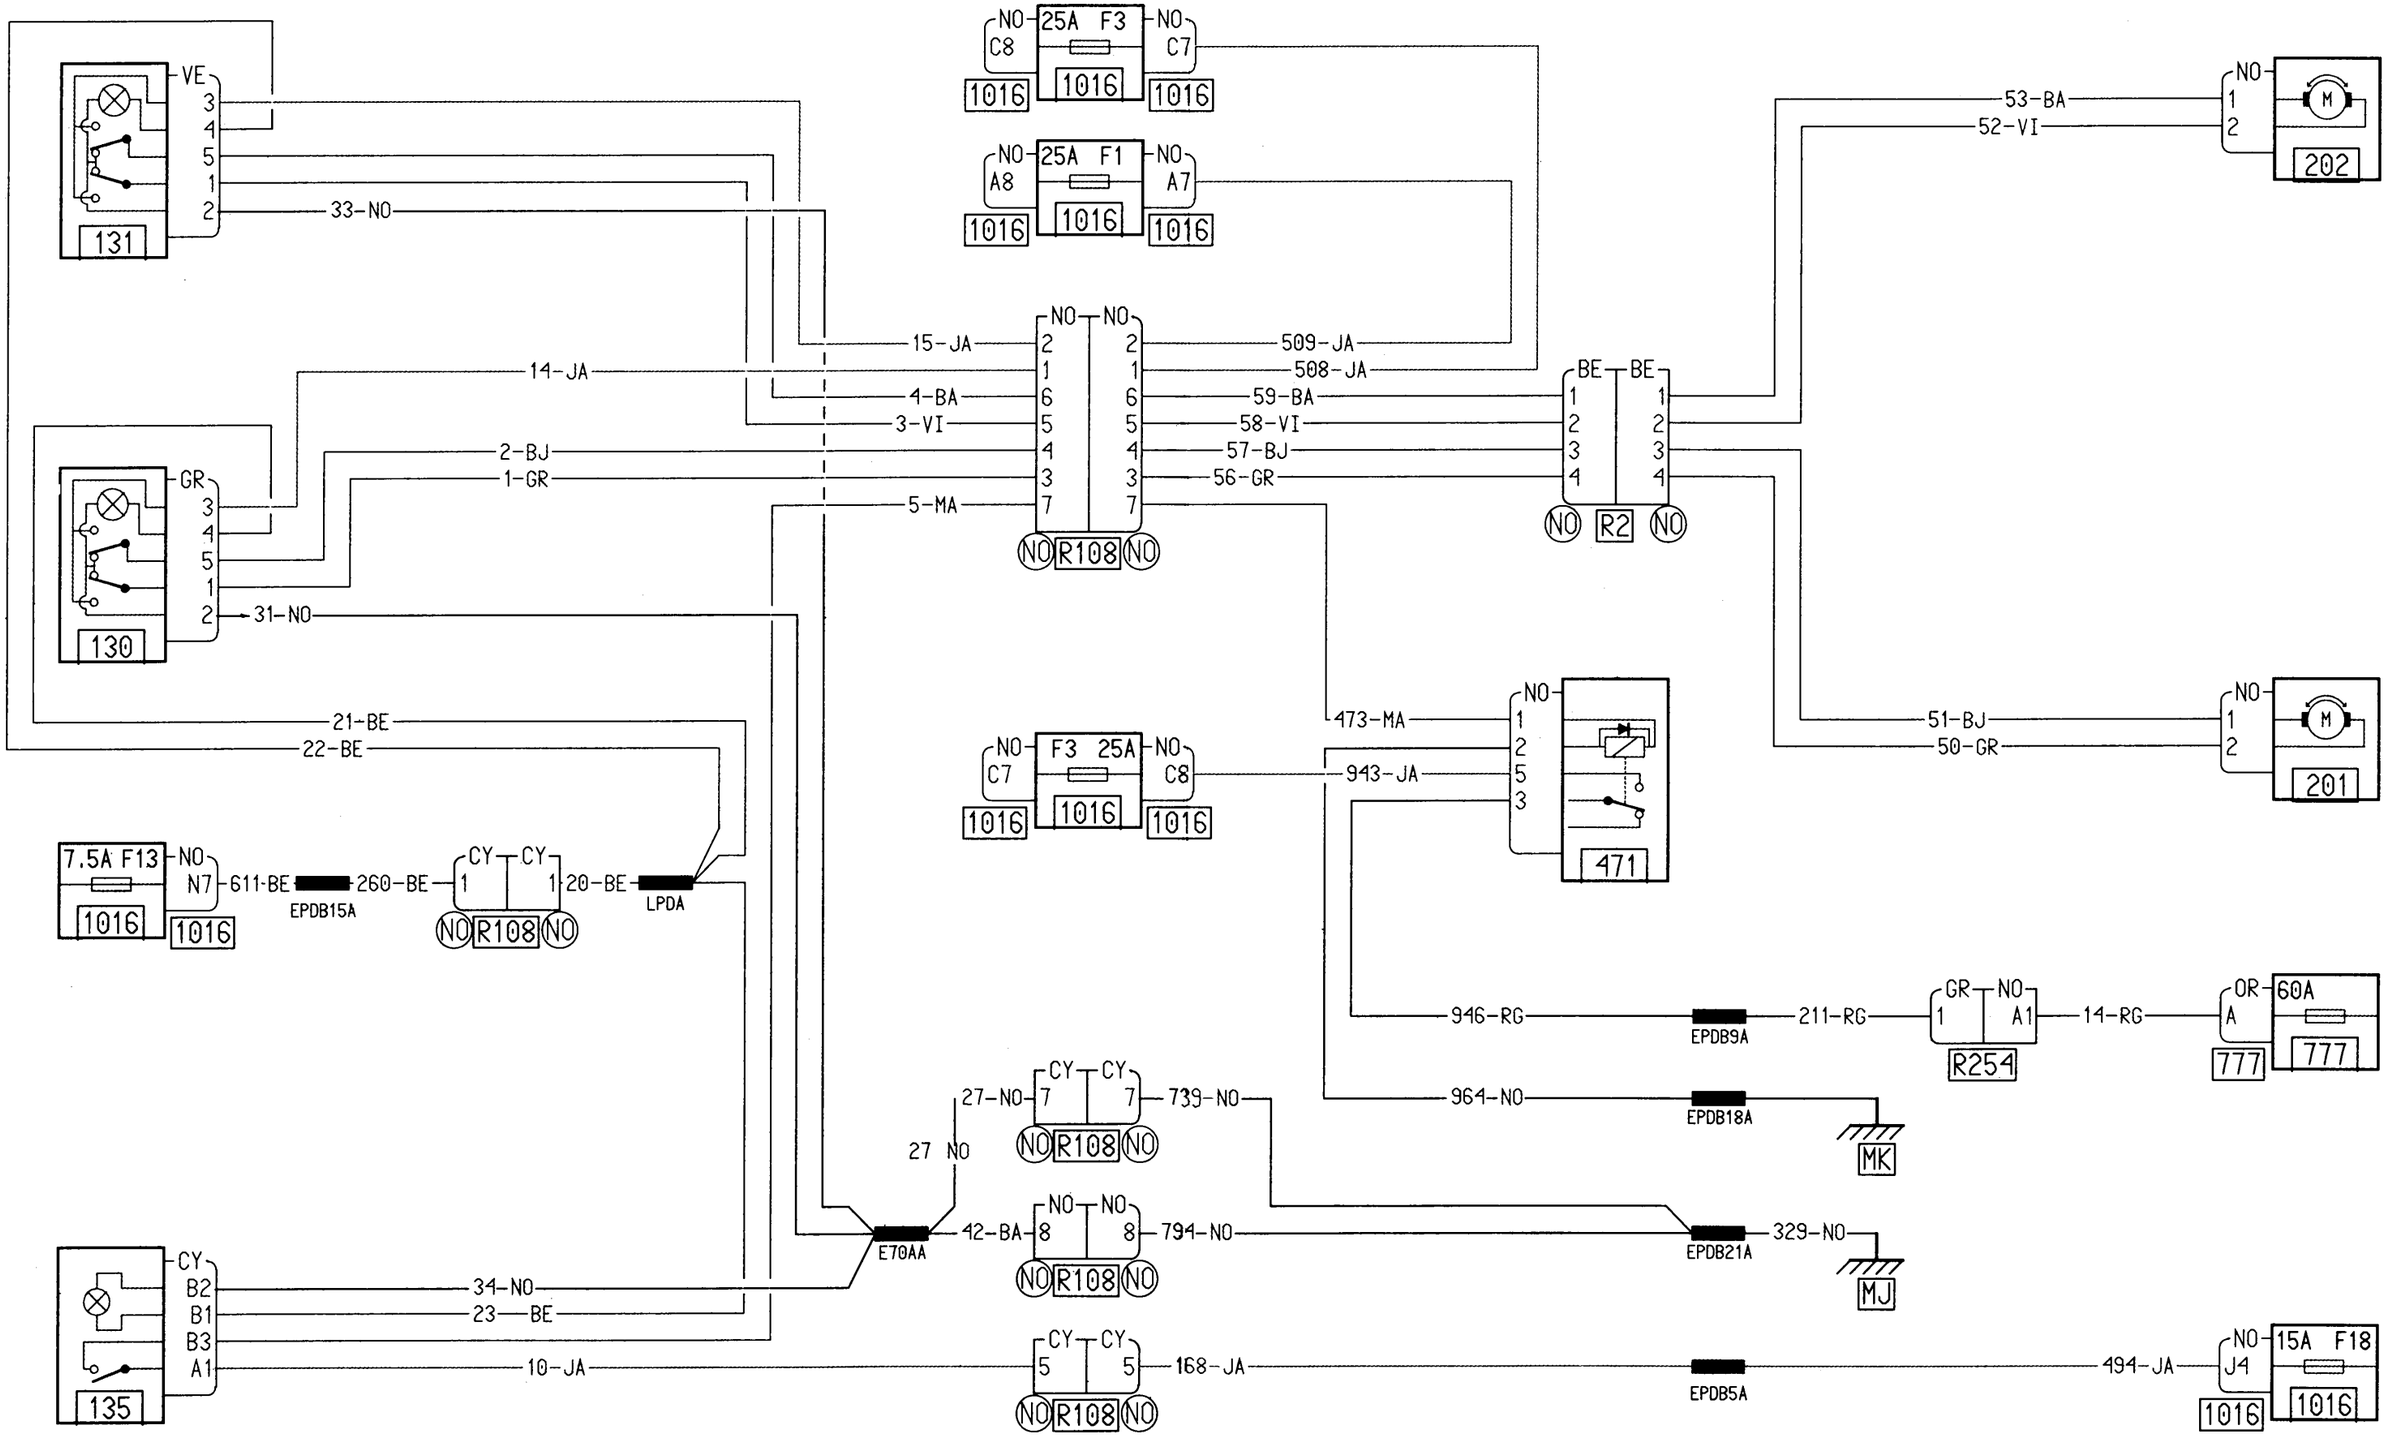

REAR WINDOW RISER WITH LOCKING

E64/E2/DD/LVAREL

X64
00

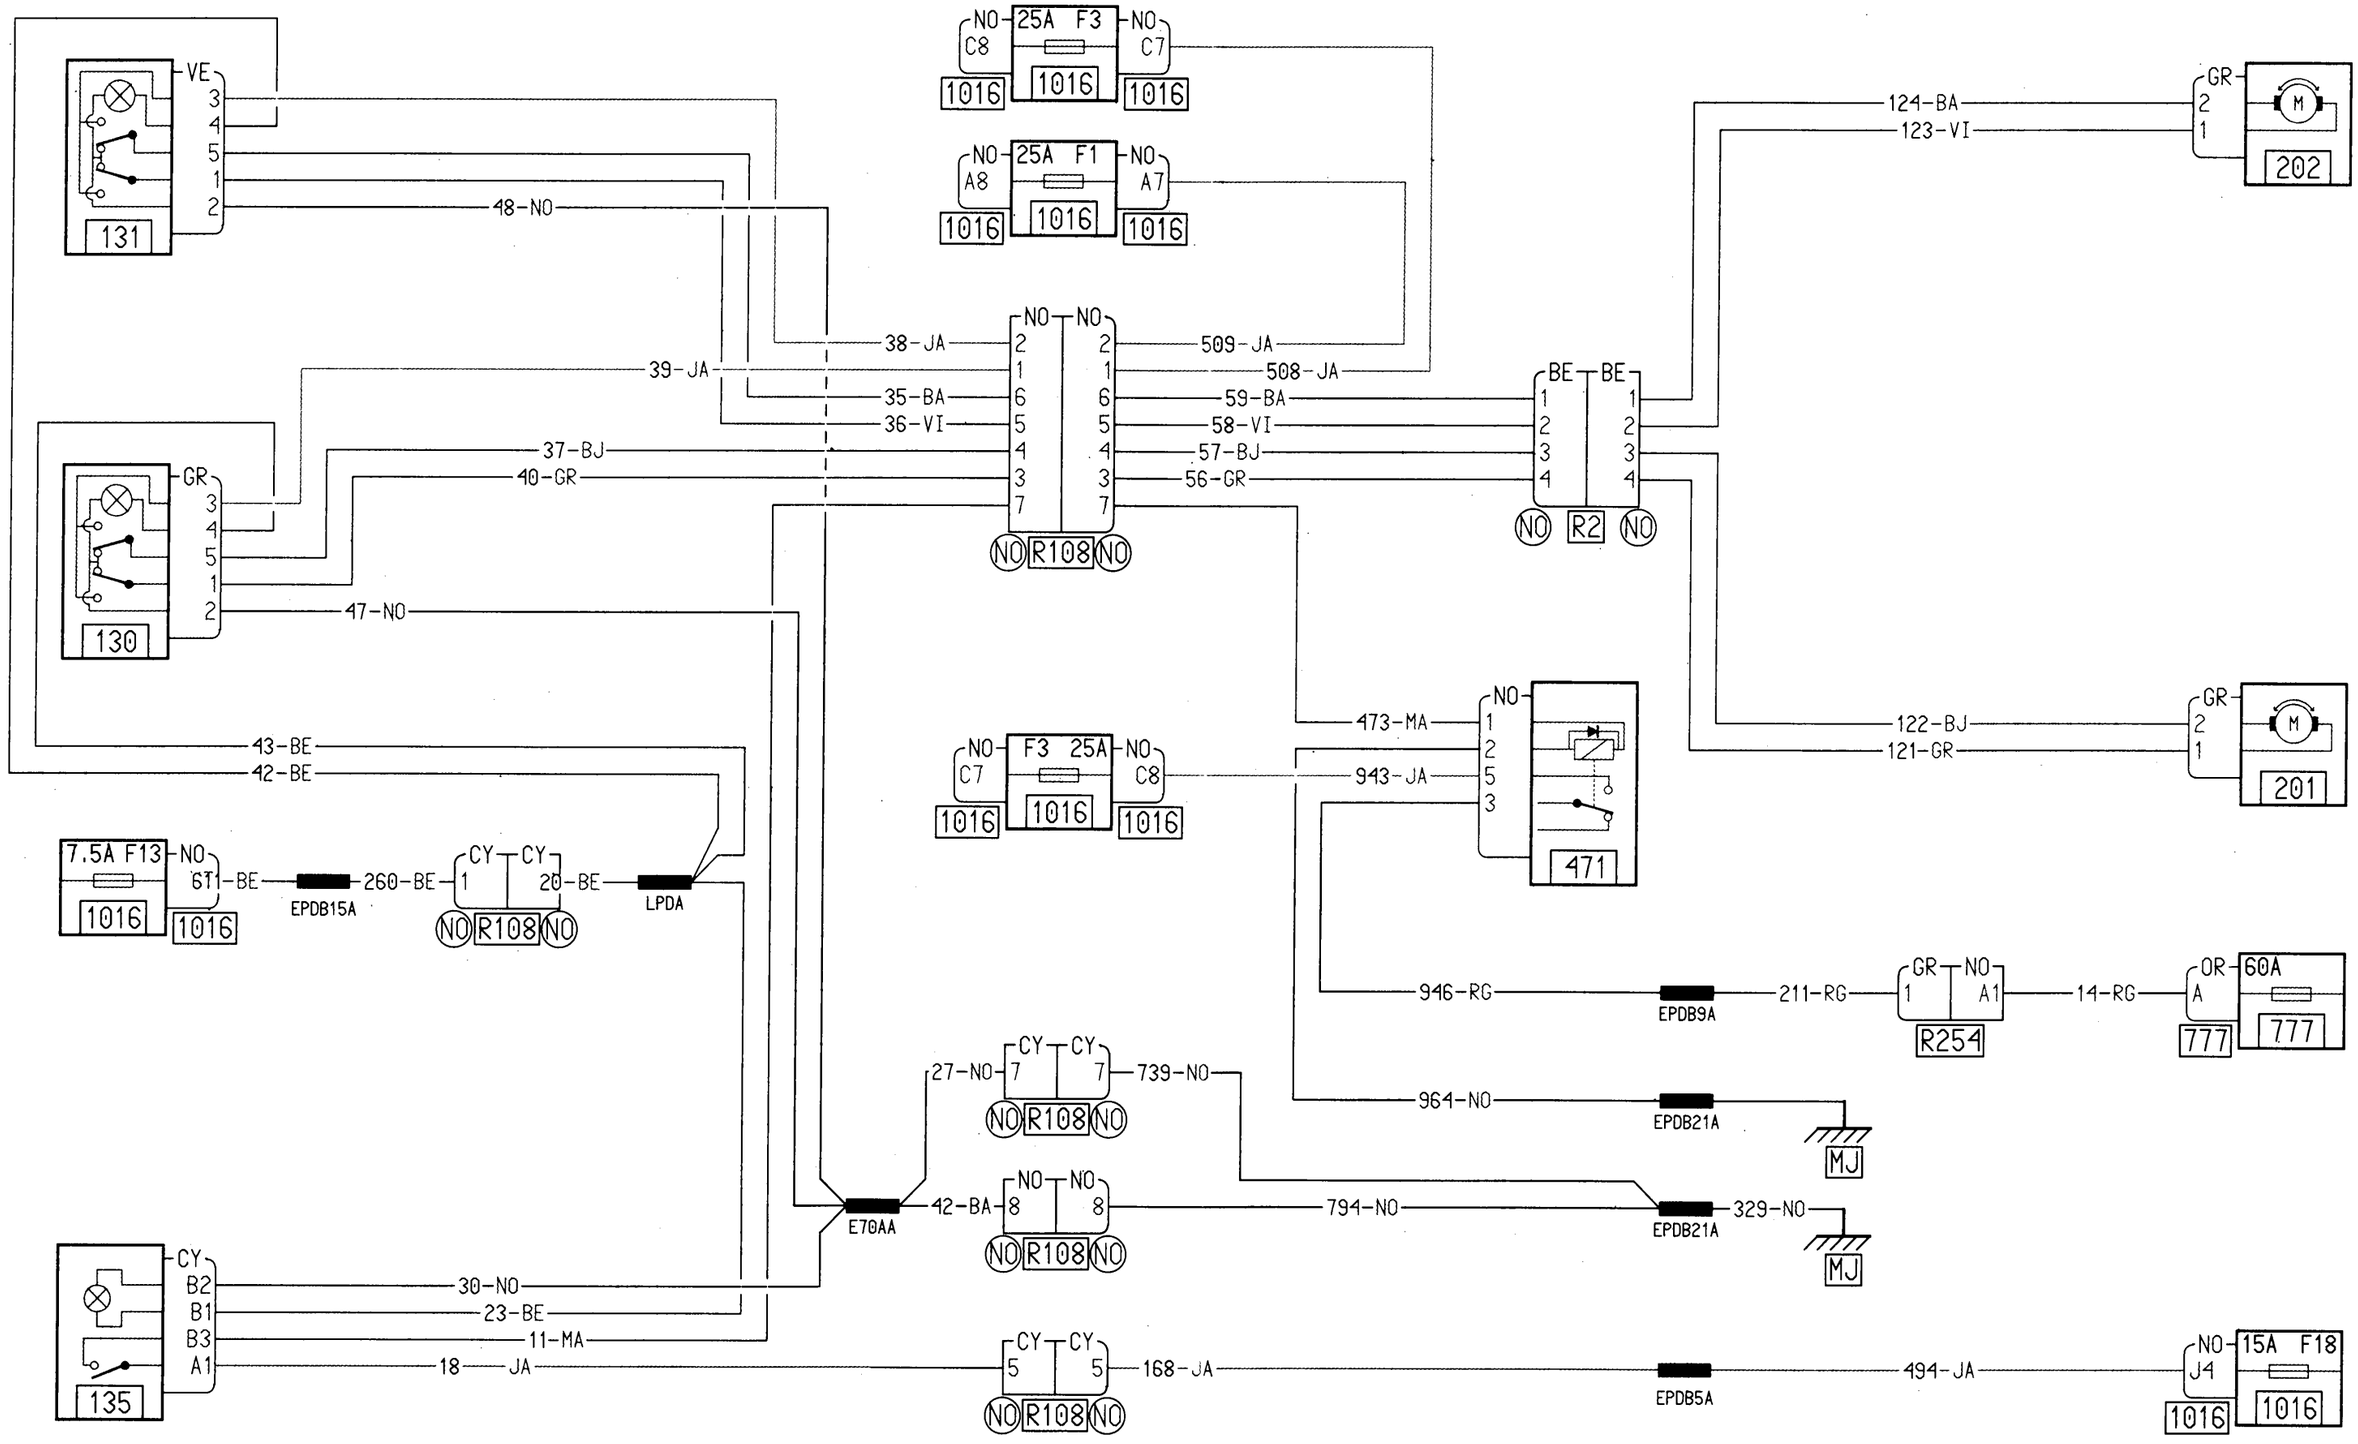

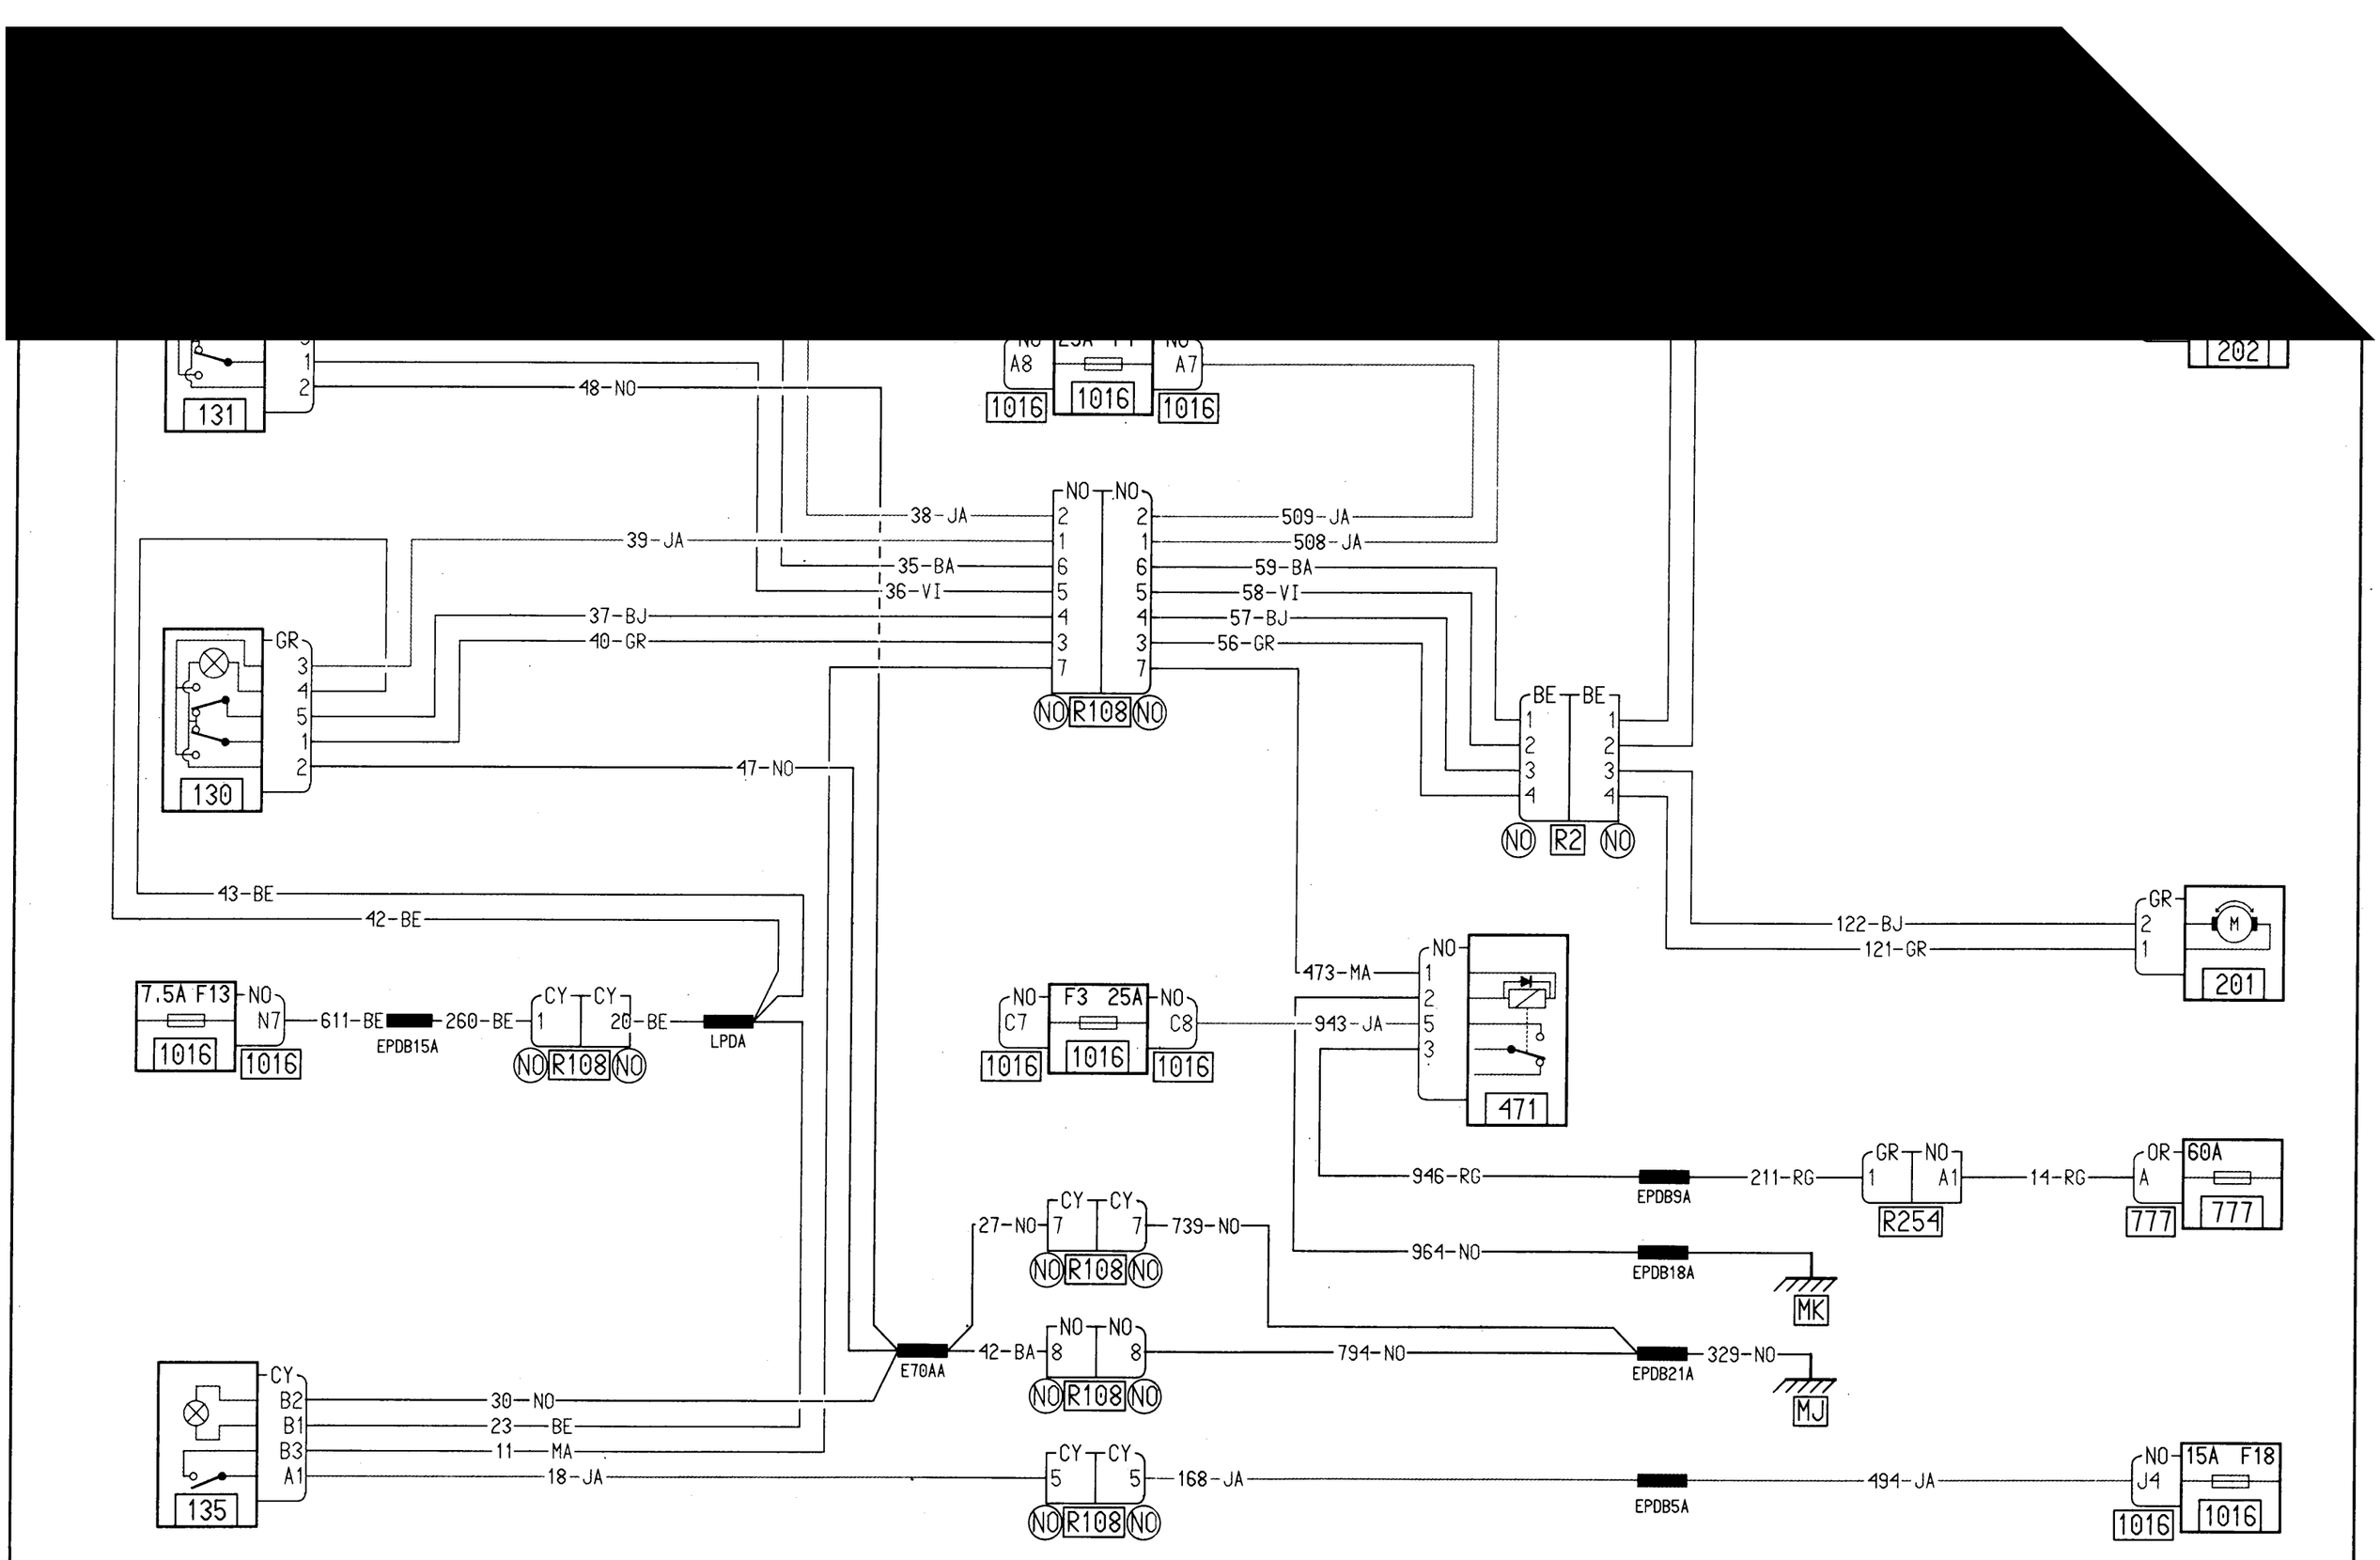
131
48-NO
A8
1016
A7
1016
1016
202
38-JA
39-JA
35-BA
36-VI
37-BJ
40-GR
NO
2
1
6
5
4
3
7
NO R108 NO
509-JA
508-JA
59-BA
58-VI
57-BJ
56-GR
BE
1
2
3
4
NO R2 NO
GR
3
4
5
1
2
130
47-NO
43-BE
42-BE
122-BJ
121-GR
GR
2
1
M
201
7.5A F13
NO
N7
1016
1016
611-BE
EPDB15A
260-BE
CY
1
20-BE
LPDA
NO R108 NO
NO
C7
F3 25A
C8
1016
1016
1016
473-MA
943-JA
NO
1
2
5
3
471
946-RG
EPDB9A
211-RG
GR
NO
1
A1
R254
14-RG
OR
A
60A
777
777
964-NO
EPDB18A
MK
27-NO
739-NO
42-BA
794-NO
EPDB21A
329-NO
MJ
E70AA
CY
B2
B1
B3
A1
135
30-NO
23-BE
11-MA
18-JA
5
168-JA
EPDB5A
494-JA
NO
J4
15A F18
1016
1016

REAR WINDOW RISER WITH LOCKING

B64/E2/DG/LVAREL/SGSCHA

X64
00

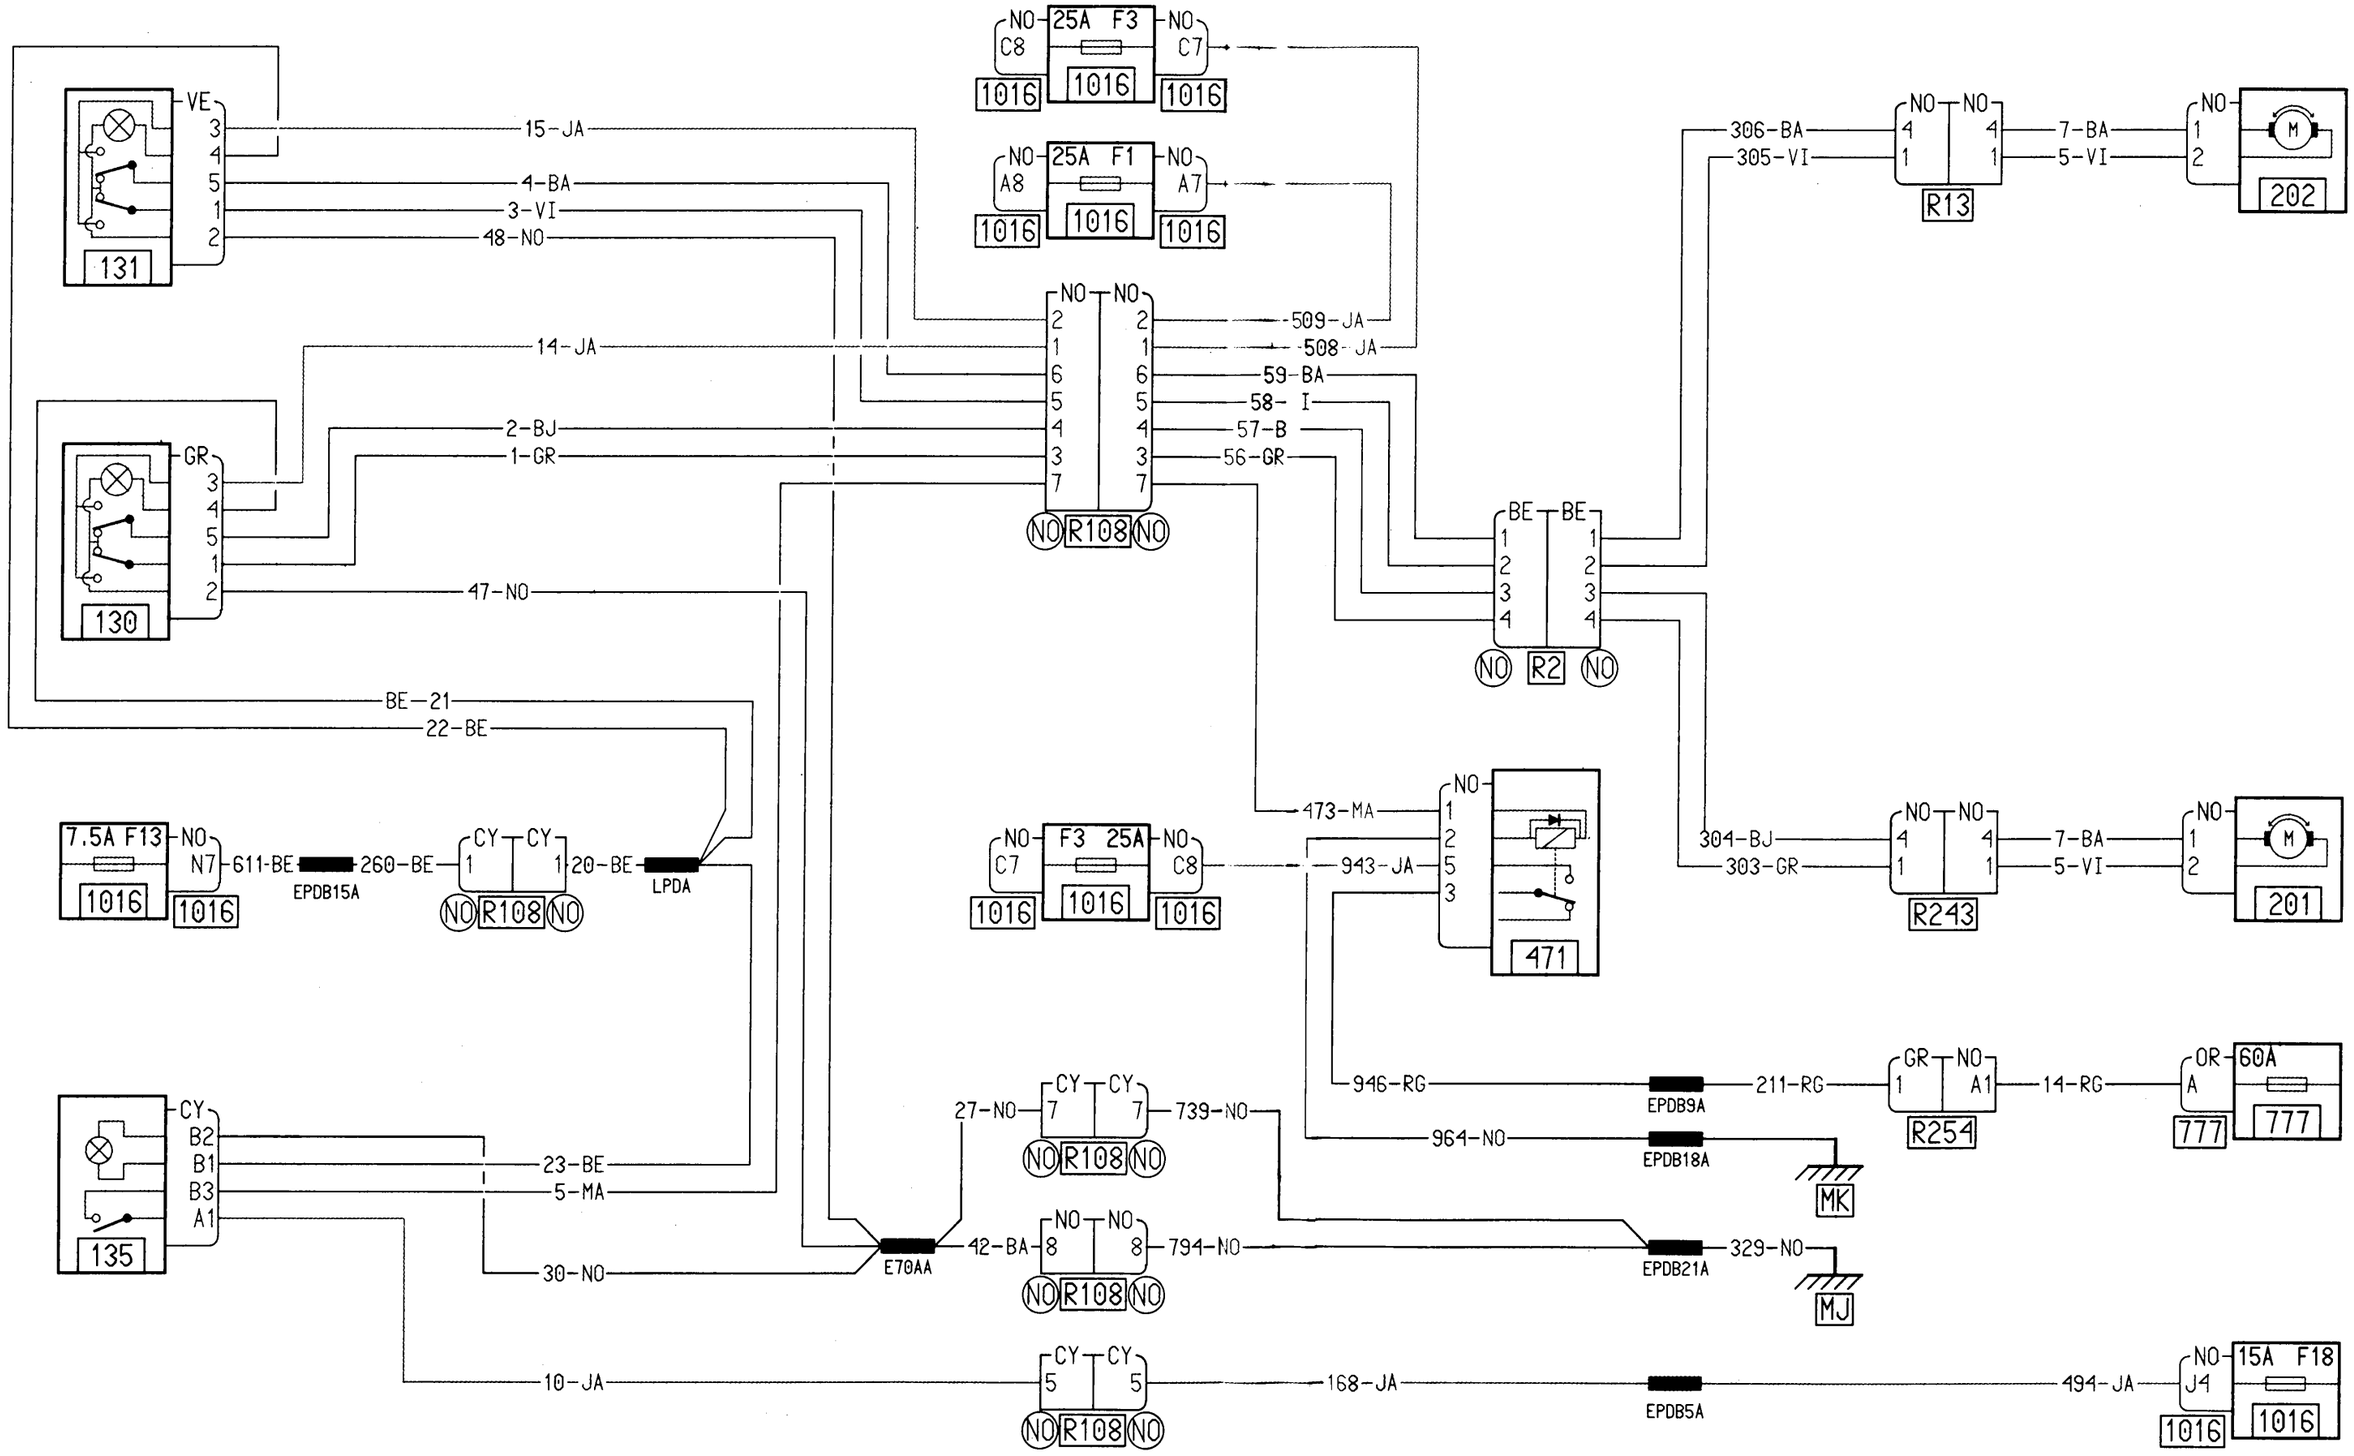

REAR WINDOW RISER WITH LOCKING

(D64,K25/E2/DG/LVAVEL/VHECOL),(D64,L64/E2/DG/LVAVEL)

X64
00

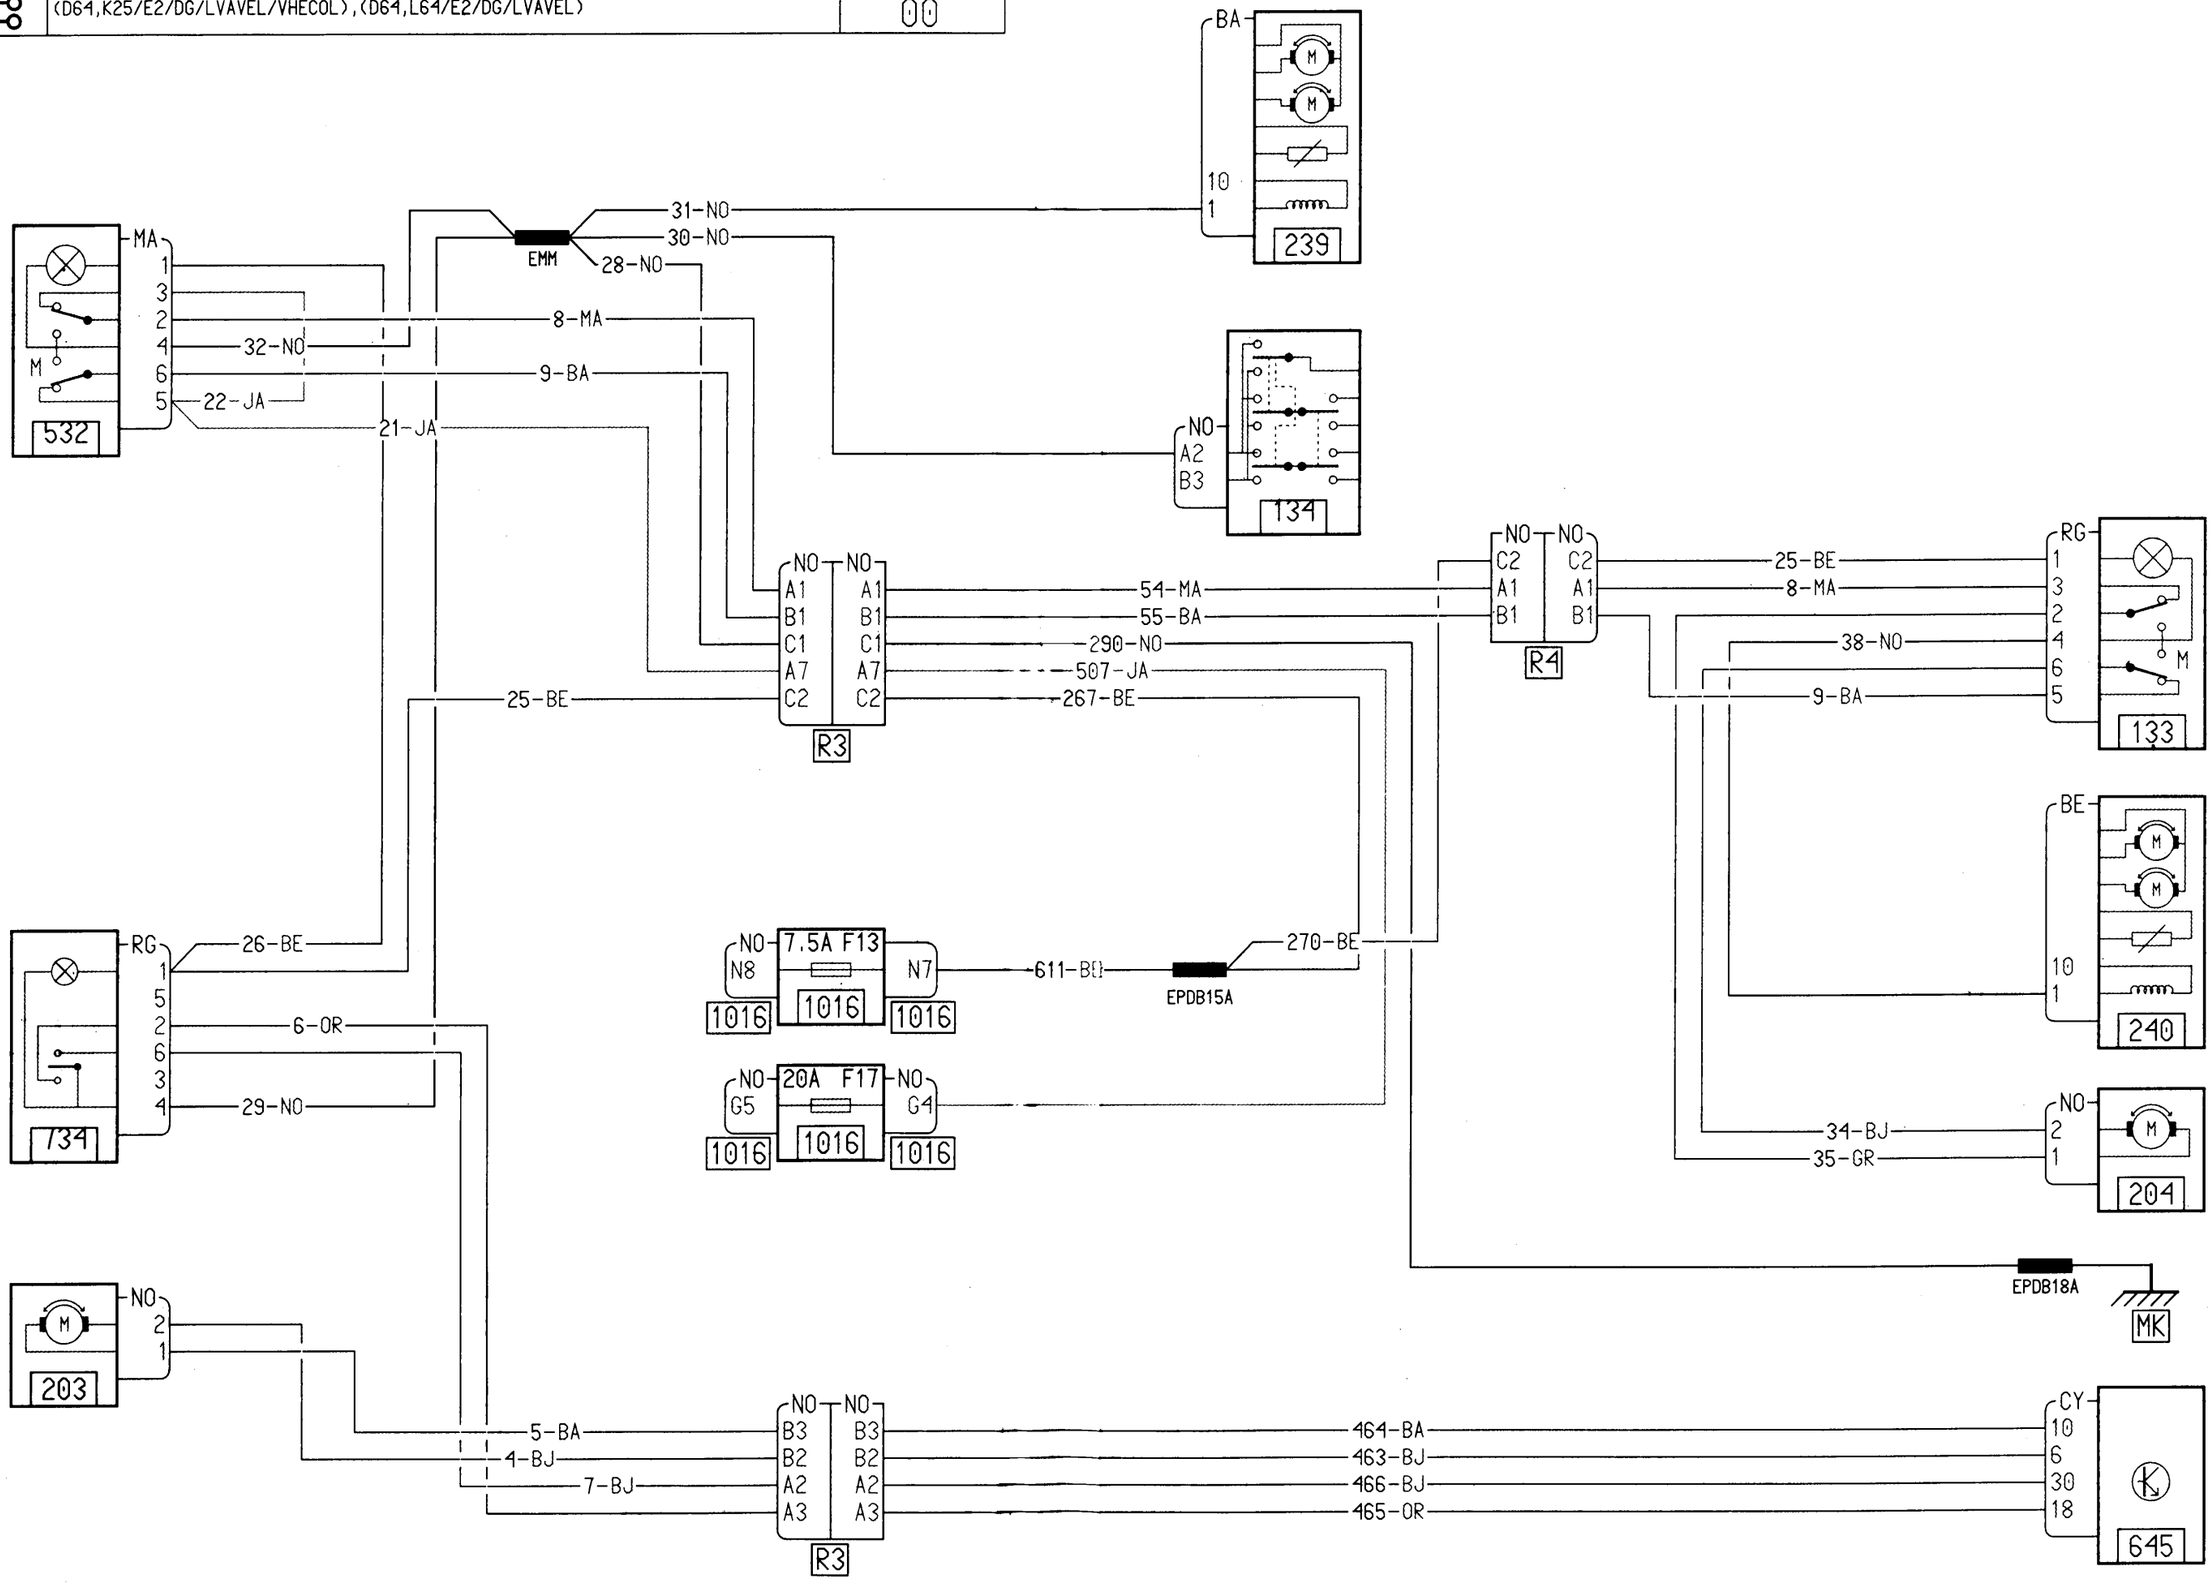

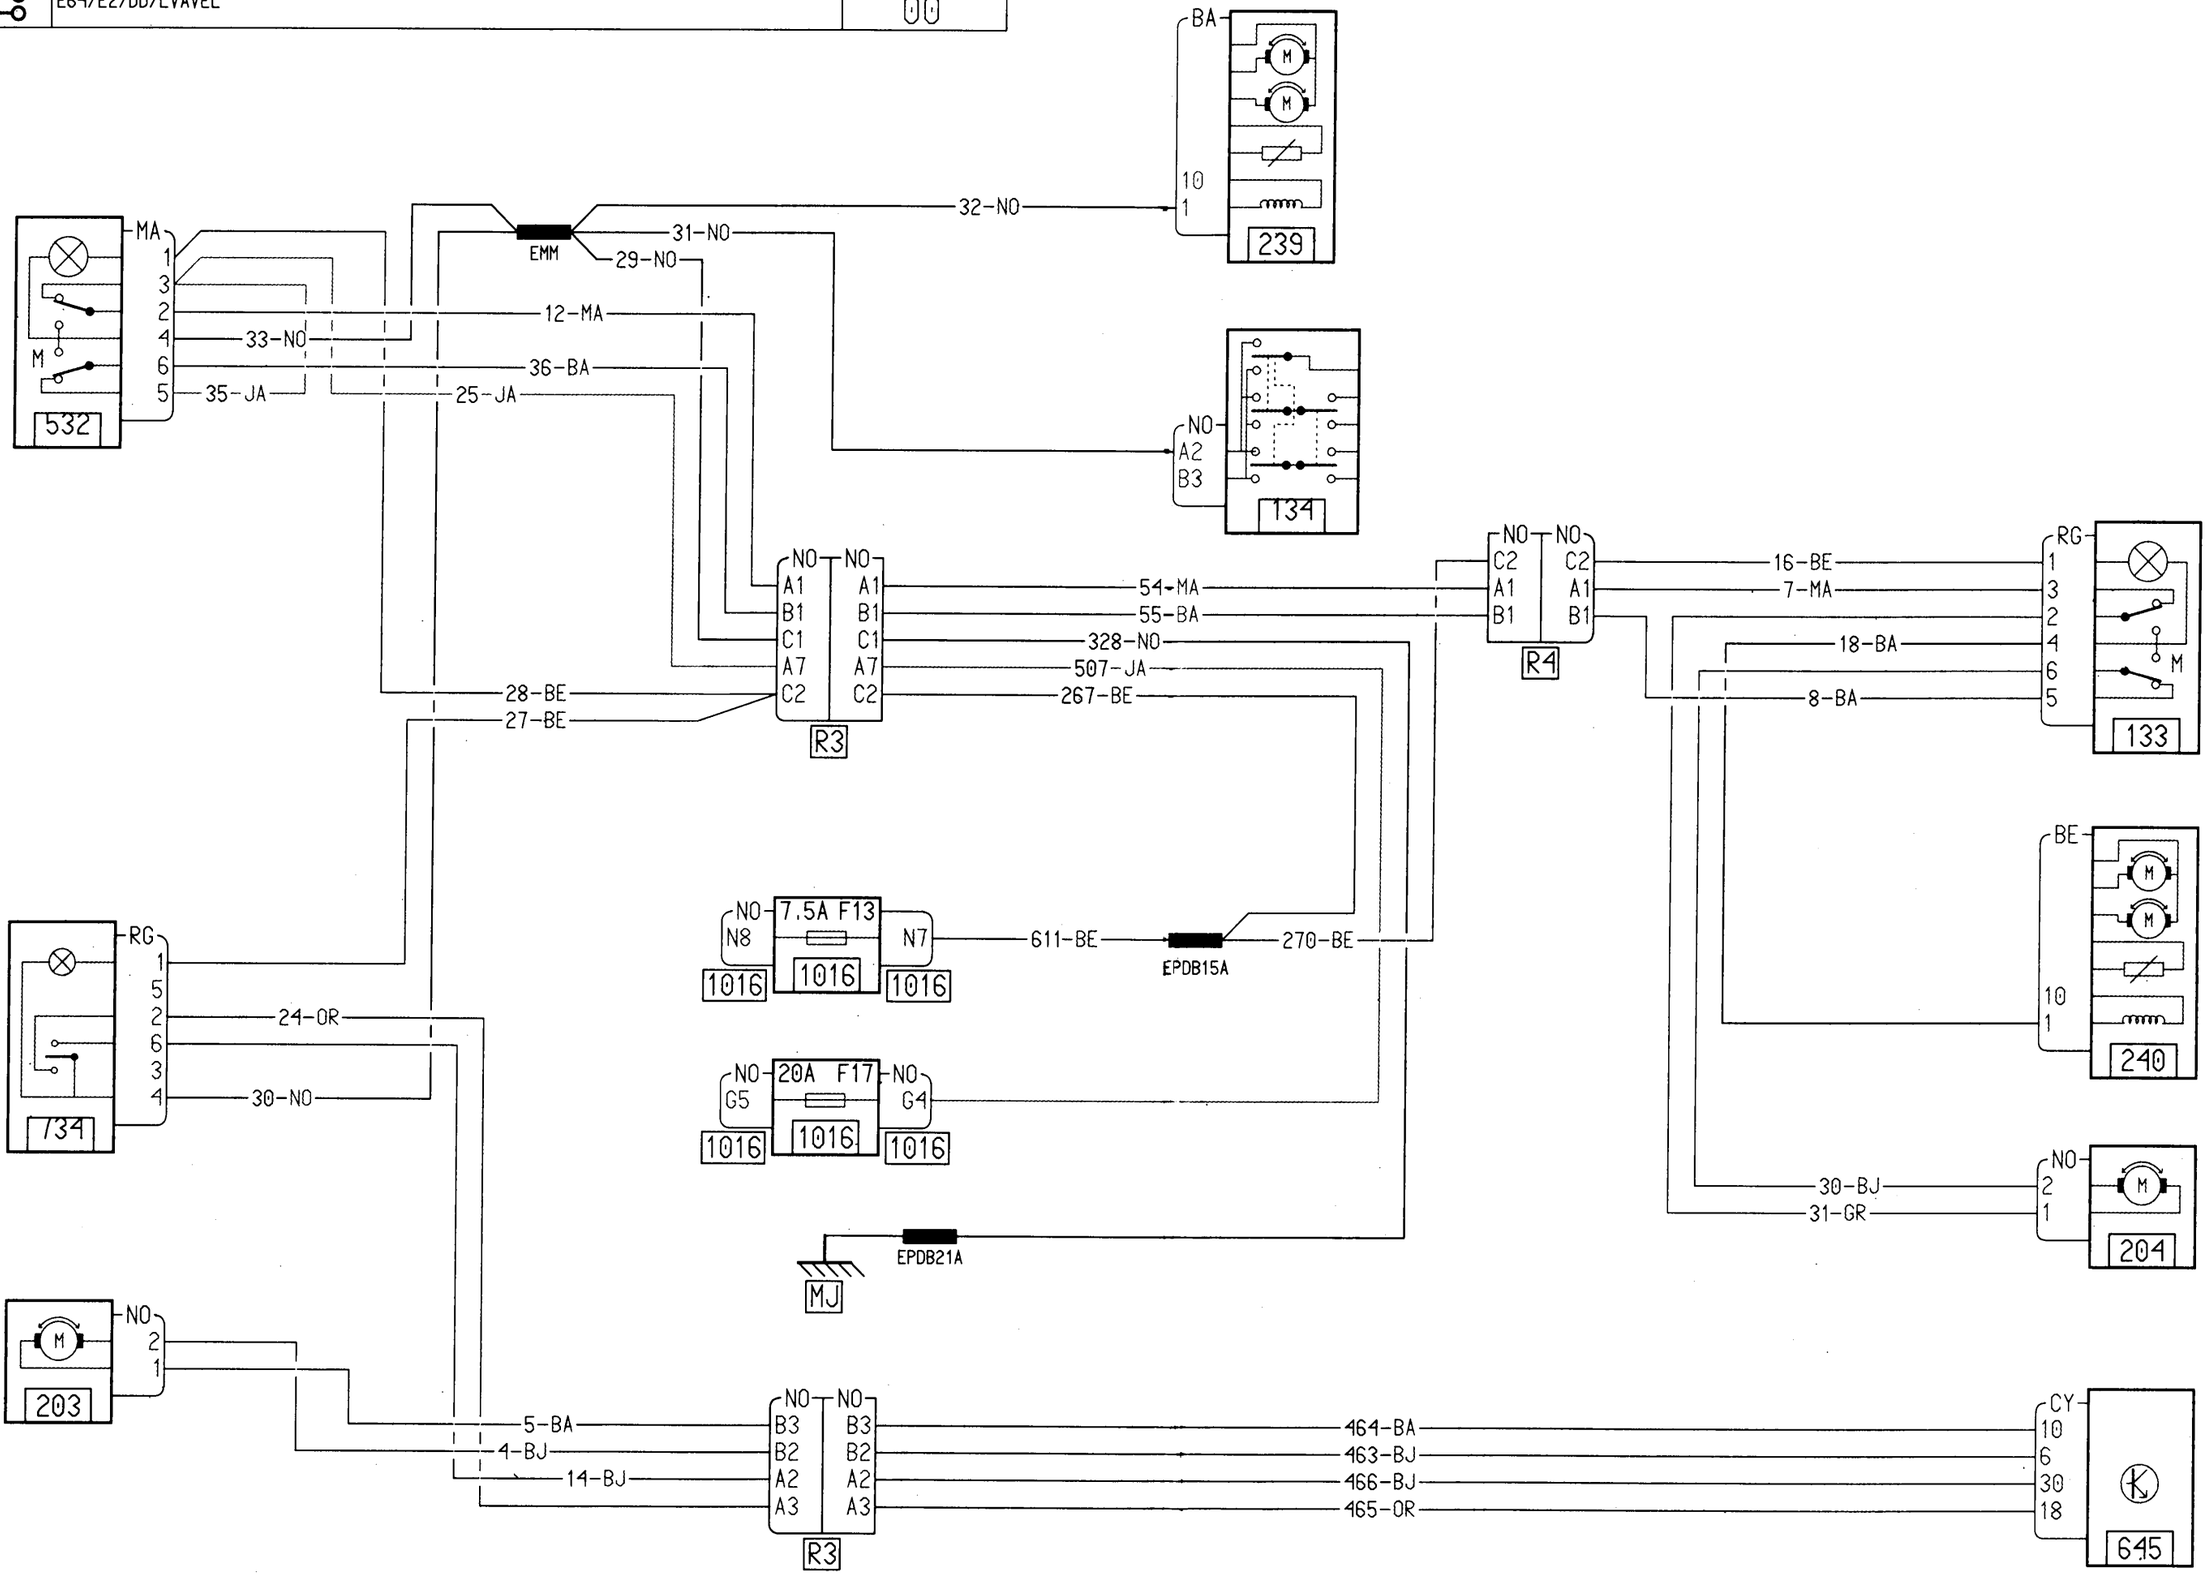
BA
10
1
239
MA
1
3
2
4
6
5
M
532
EMM
32-NO
31-NO
29-NO
12-MA
33-NO
36-BA
35-JA
25-JA
NO
A2
B3
134
NO
A1
B1
C1
A7
C2
R3
54-MA
55-BA
328-NO
507-JA
267-BE
28-BE
27-BE
NO
C2
A1
B1
R4
RG
16-BE
7-MA
18-BA
8-BA
133
BE
240
30-BJ
31-GR
204
RG
1
5
2
6
3
4
734
24-OR
30-NO
NO
N8
7,5A F13
N7
1016
611-BE
EPDB15A
270-BE
NO
G5
20A F17
G4
EPDB21A
MJ
NO
2
1
203
5-BA
4-BJ
14-BJ
NO
B3
B2
A2
A3
R3
464-BA
463-BJ
466-BJ
465-OR
CY
10
6
30
18
645

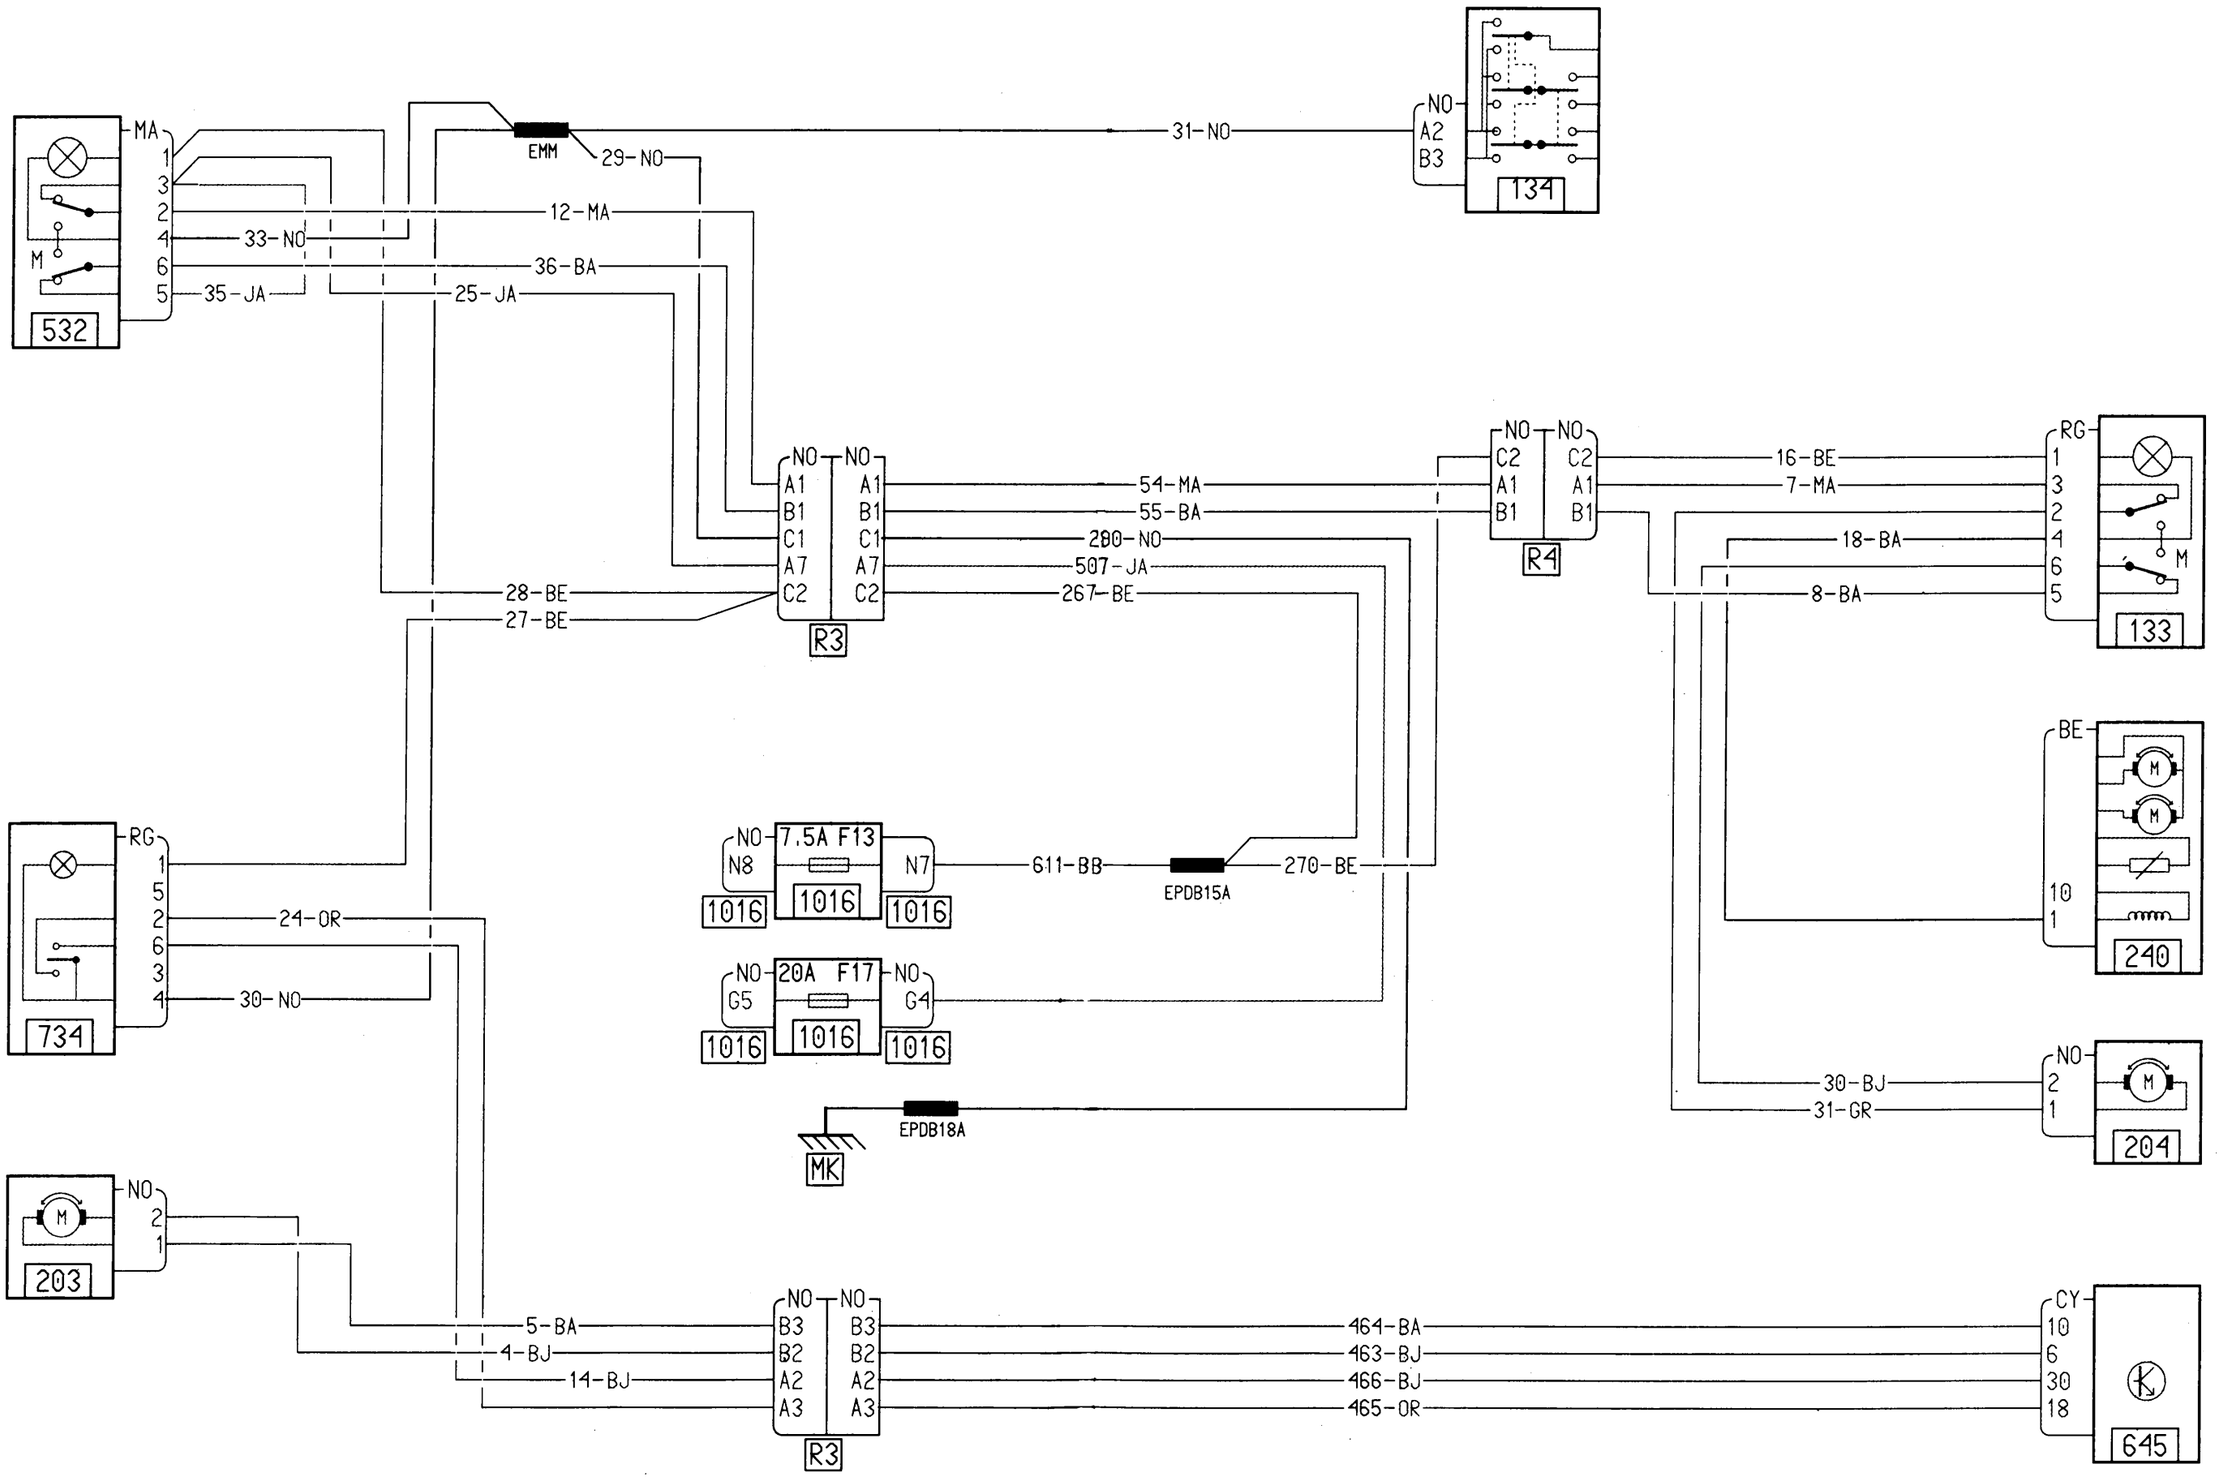
MA
1
3
2
4
6
5
M
532
EMM
29-NO
31-NO
NO
A2
B3
134
12-MA
33-NO
36-BA
35-JA
25-JA
28-BE
27-BE
NO
A1
B1
C1
A7
C2
R3
54-MA
55-BA
280-NO
507-JA
267-BE
NO
C2
A1
B1
R4
16-BE
7-MA
18-BA
8-BA
RG
1
3
2
4
6
5
M
133
BE
M
M
10
1
240
NO
2
1
204
30-BJ
31-GR
RG
1
5
2
6
3
4
734
24-OR
30-NO
NO
7.5A F13
N8
N7
1016
1016
1016
611-BB
EPDB15A
270-BE
NO
20A F17
NO
G5
G4
1016
1016
1016
EPDB18A
MK
NO
2
1
203
5-BA
4-BJ
14-BJ
NO
B3
B2
A2
A3
R3
464-BA
463-BJ
466-BJ
465-OR
CY
10
6
30
18
645

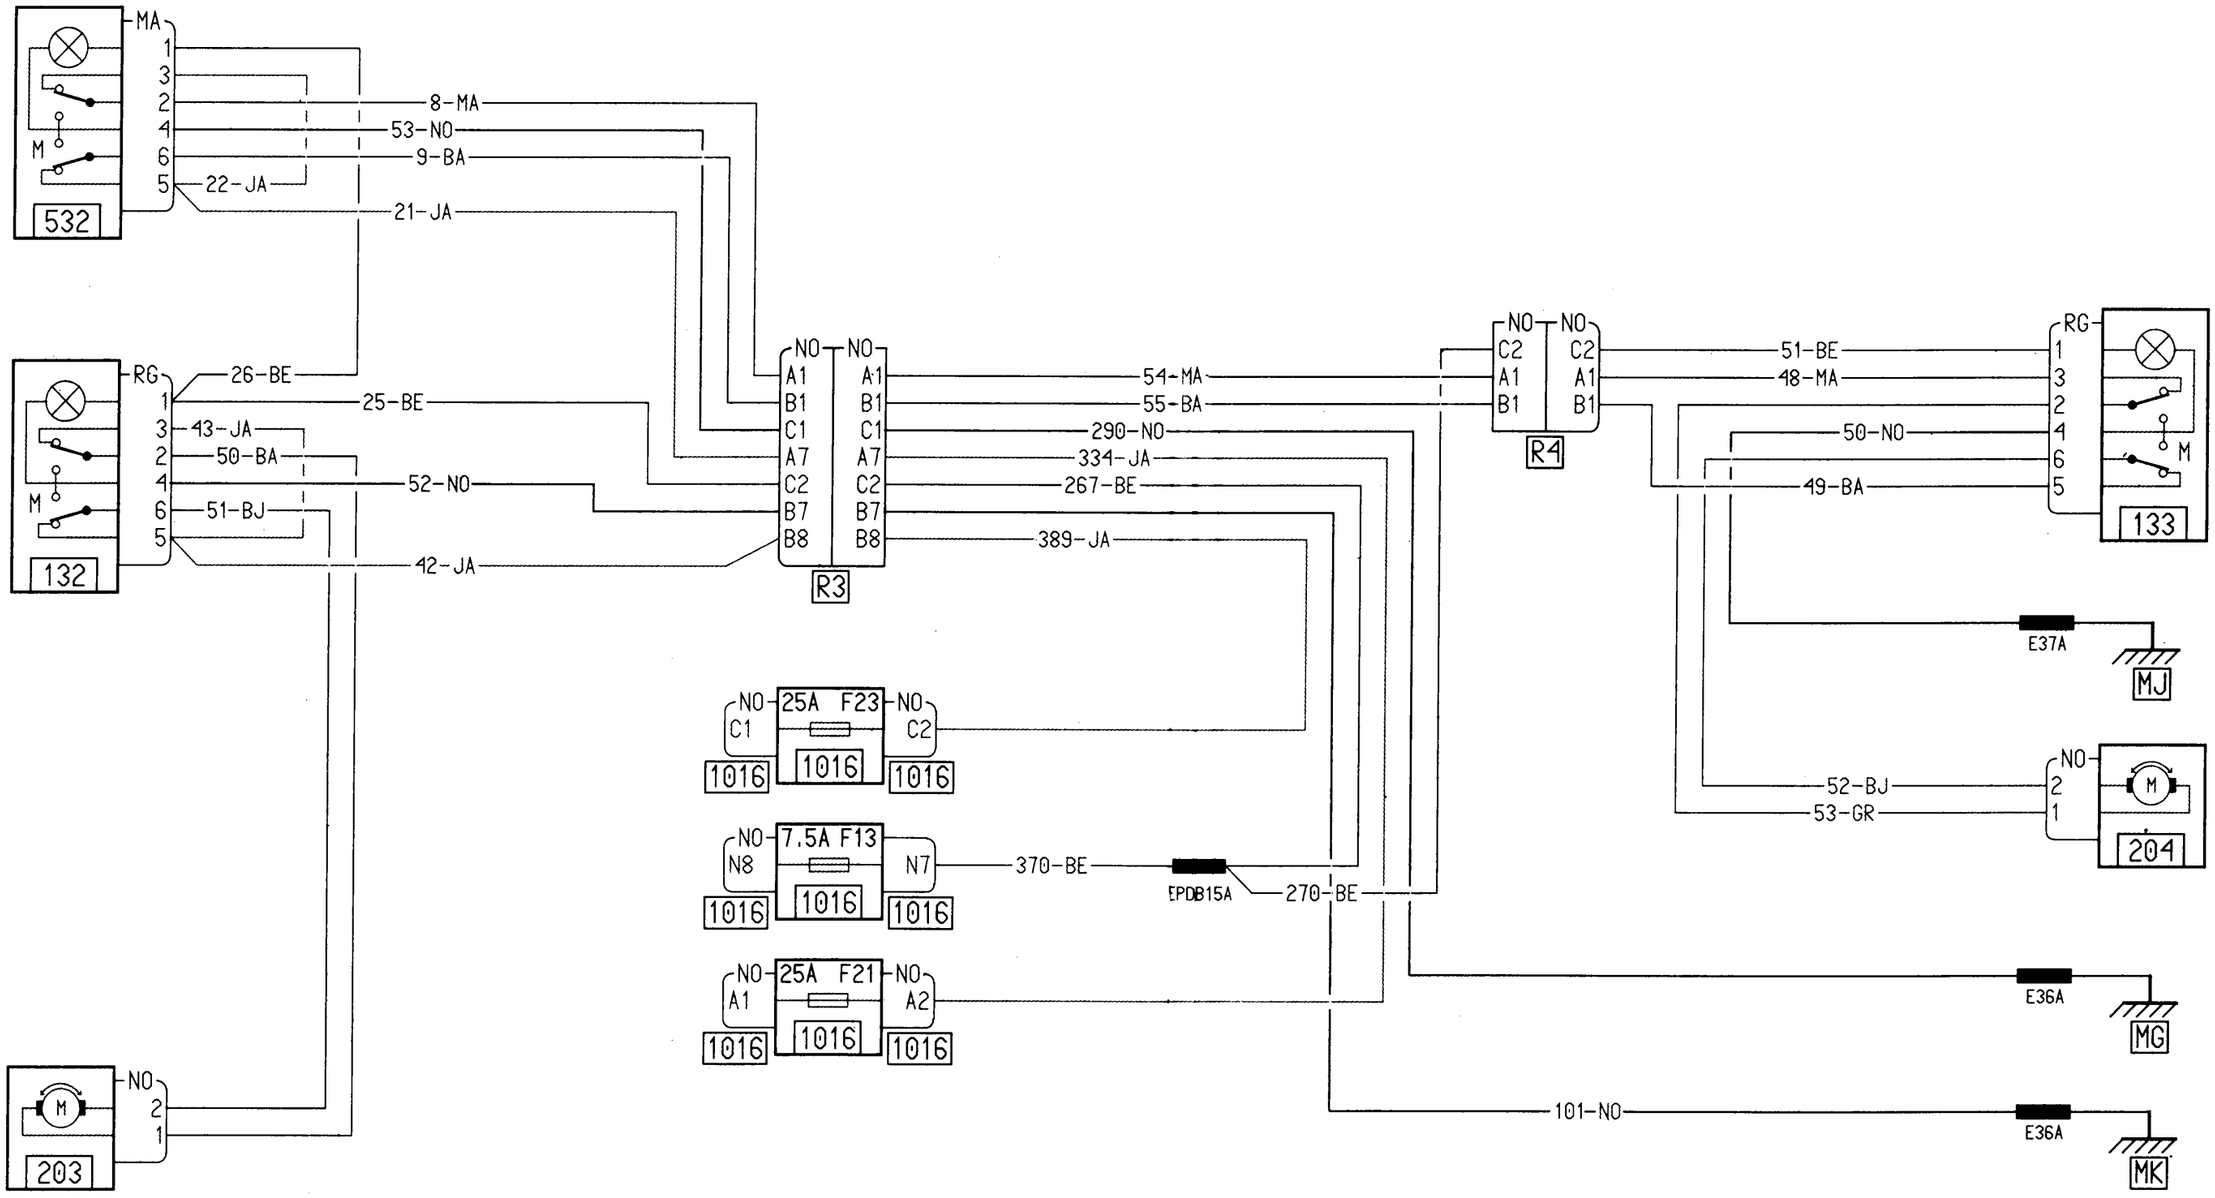
MA
1
3
2
4
6
5
M
532
8-MA
53-NO
9-BA
22-JA
21-JA
RG
1
3
2
4
6
5
M
132
26-BE
25-BE
43-JA
50-BA
52-NO
51-BJ
42-JA
NO
2
1
M
203
NO
A1
B1
C1
A7
C2
B7
B8
R3
54-MA
55-BA
290-NO
334-JA
267-BE
389-JA
NO
C1
25A F23
C2
1016
1016
1016
NO
N8
7.5A F13
N7
1016
1016
1016
370-BE
EPDB15A
270-BE
NO
A1
25A F21
A2
1016
1016
1016
NO
C2
A1
B1
R4
NO
C2
A1
B1
51-BE
48-MA
50-NO
49-BA
RG
1
3
2
4
6
5
M
133
E37A
MJ
52-BJ
53-GR
NO
2
1
M
204
E36A
MG
101-NO
E36A
MK

[redacted]

HOOD MODULE

E64/E2/DD/CATOEL

X64
00

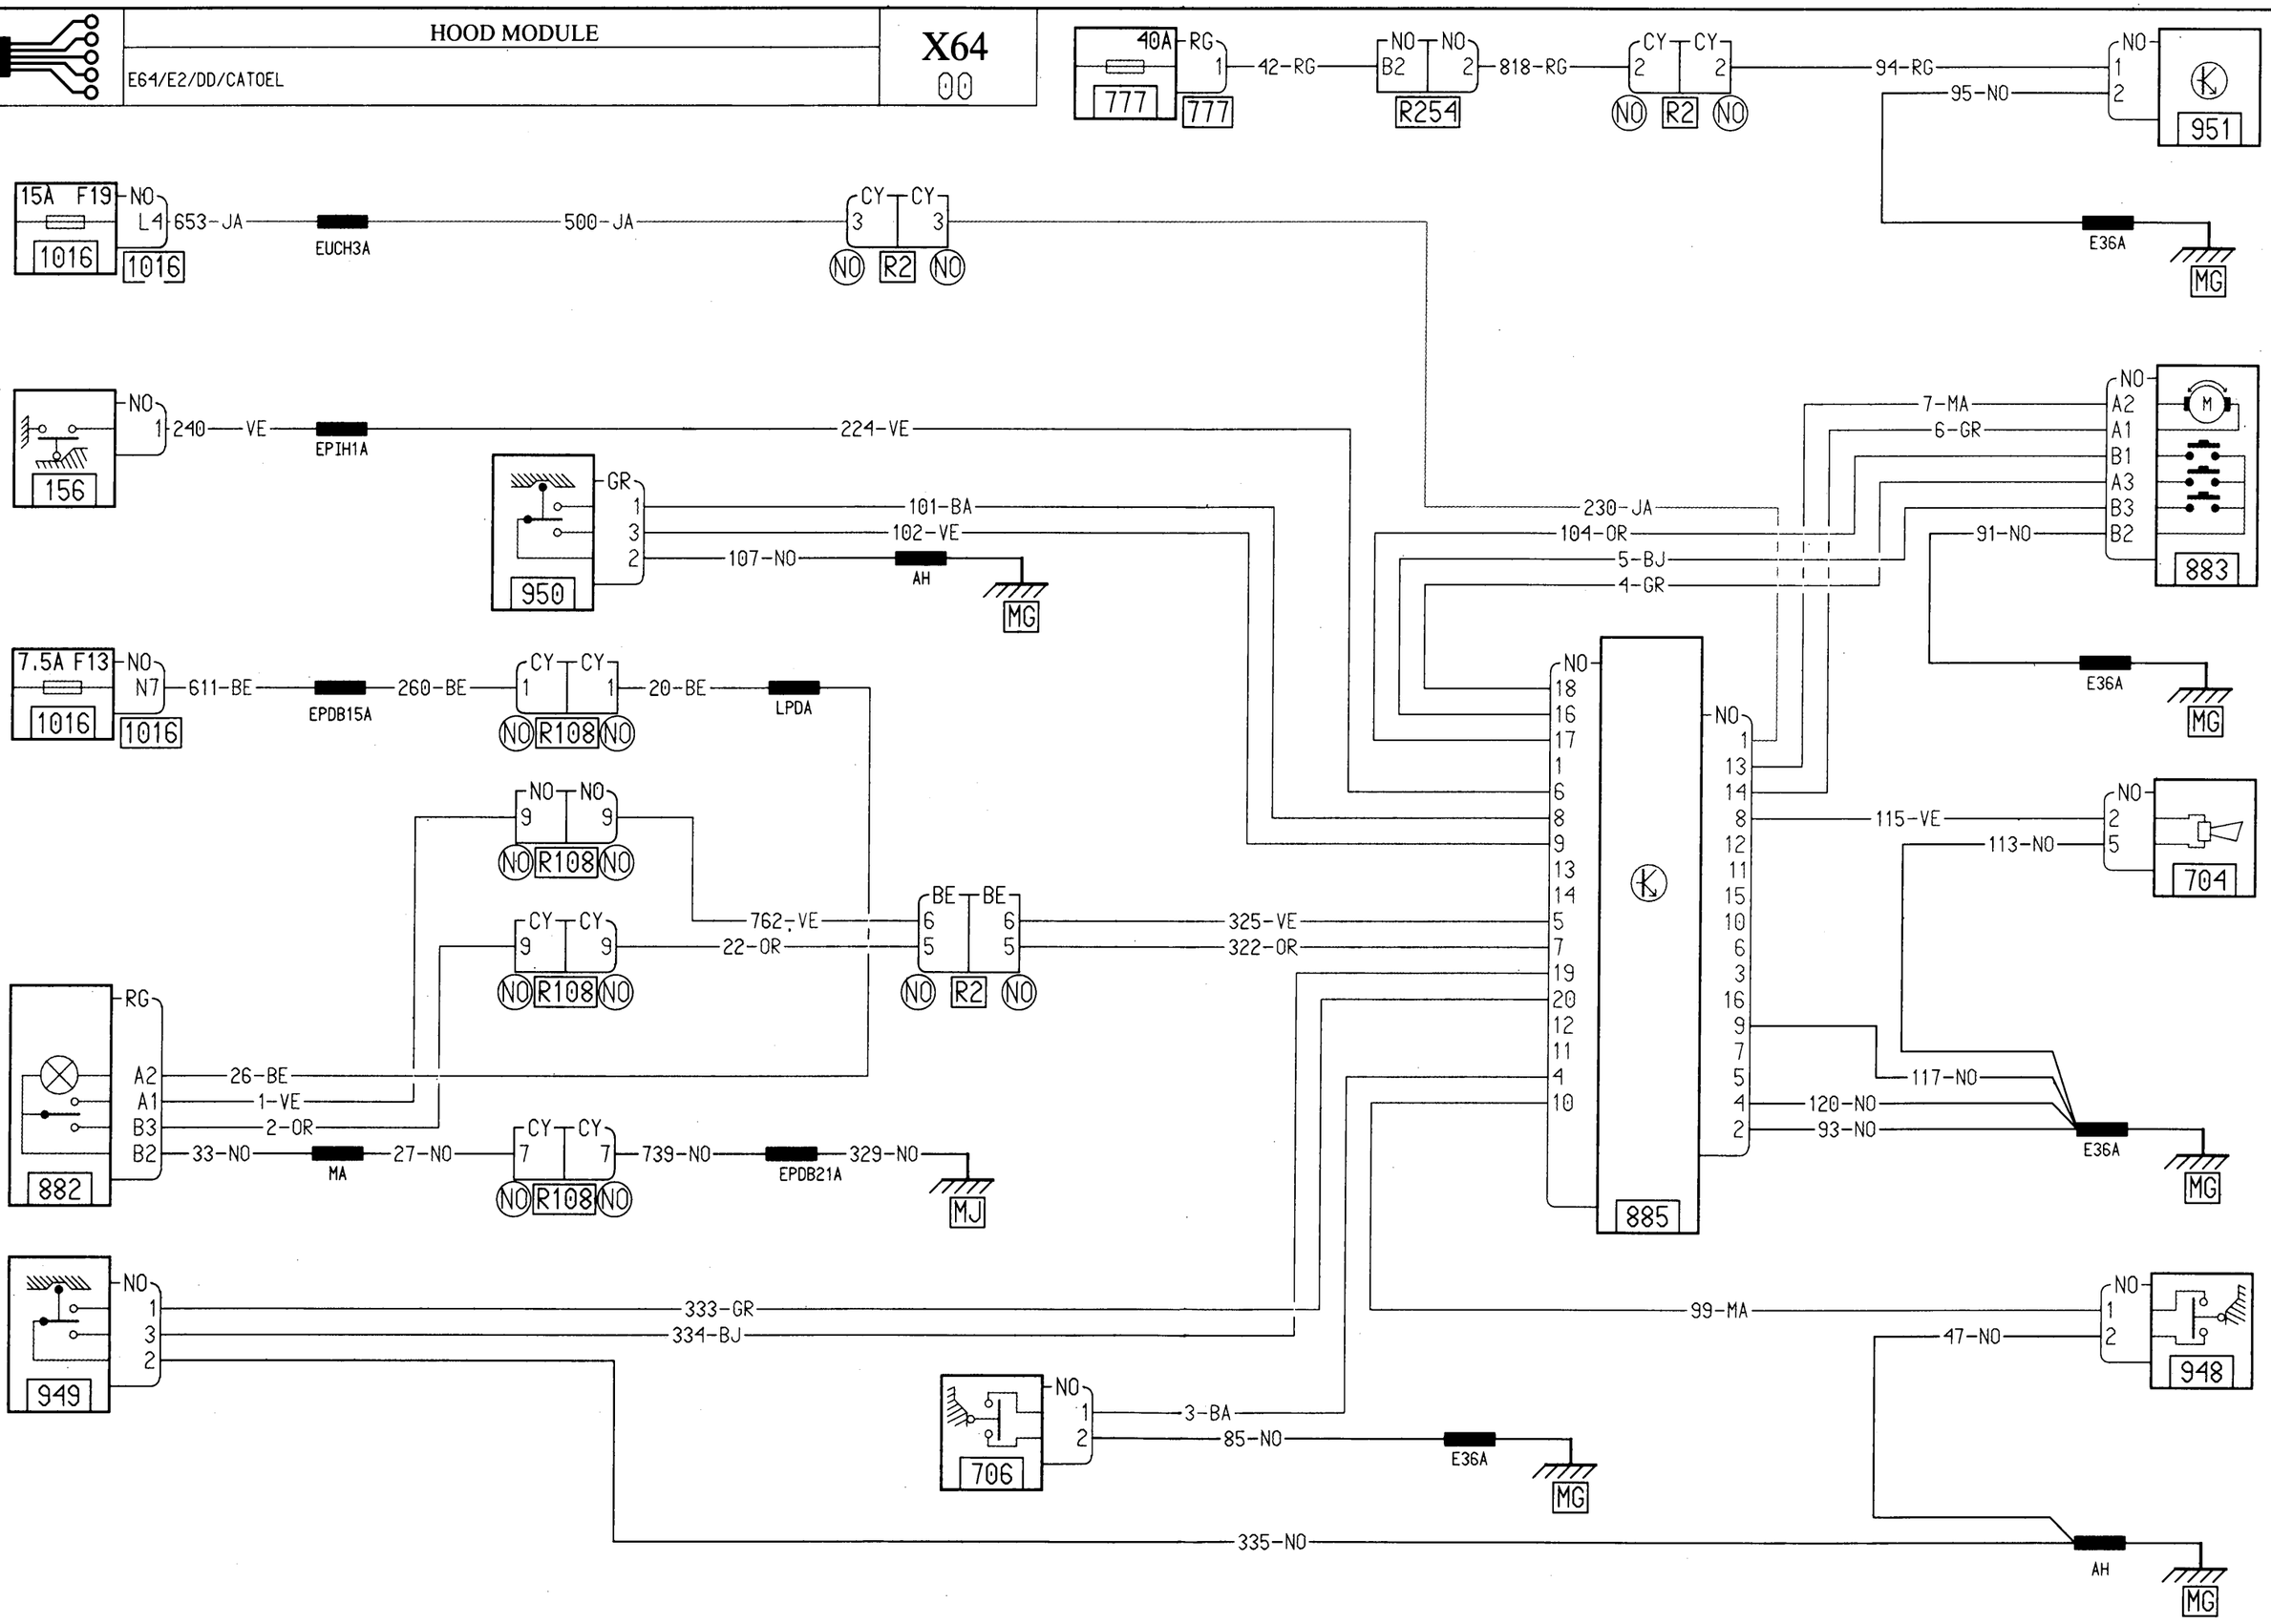

HOOD MODULE

E64/E2/DG/CATOMA

X64
00

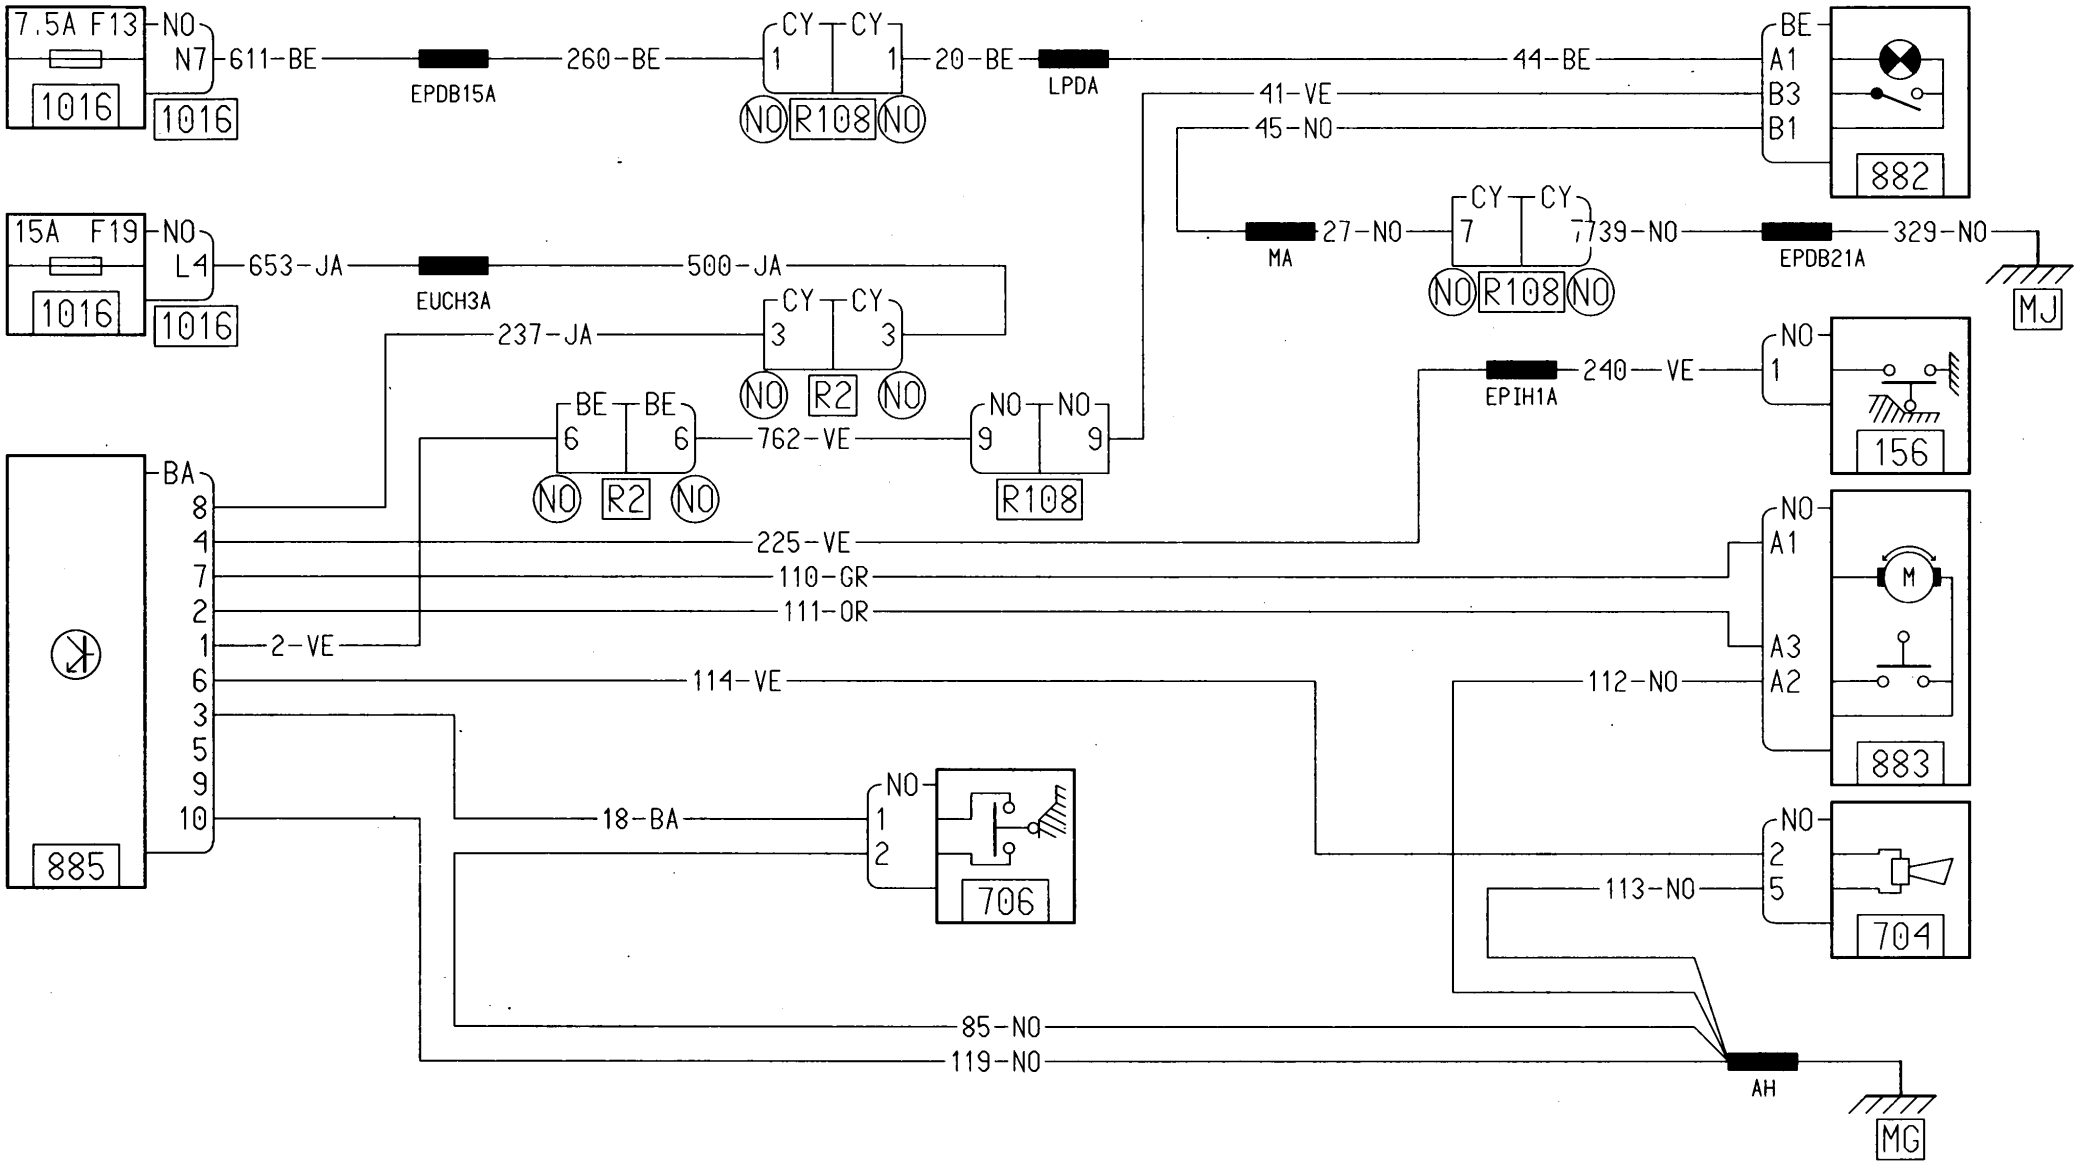

DIGITAL OR MECHANICAL CLOCK

SRADIO

X64

00

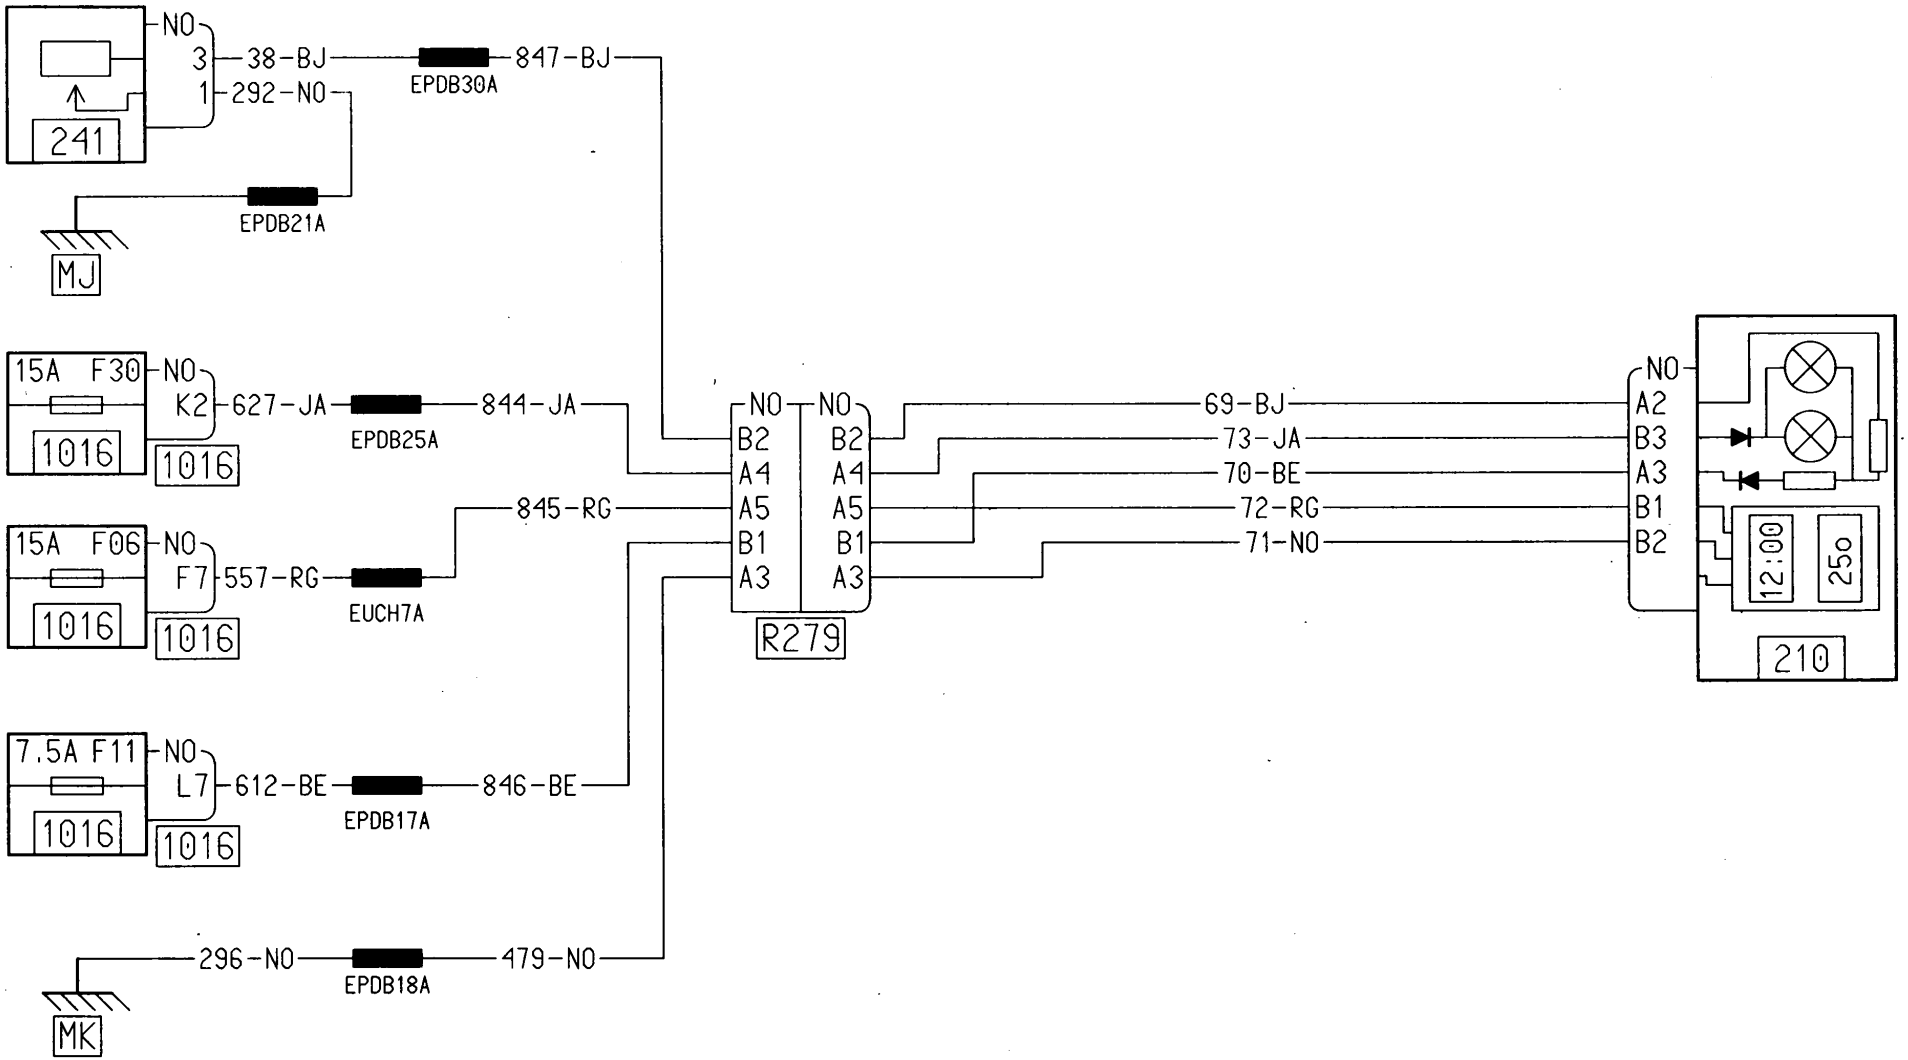

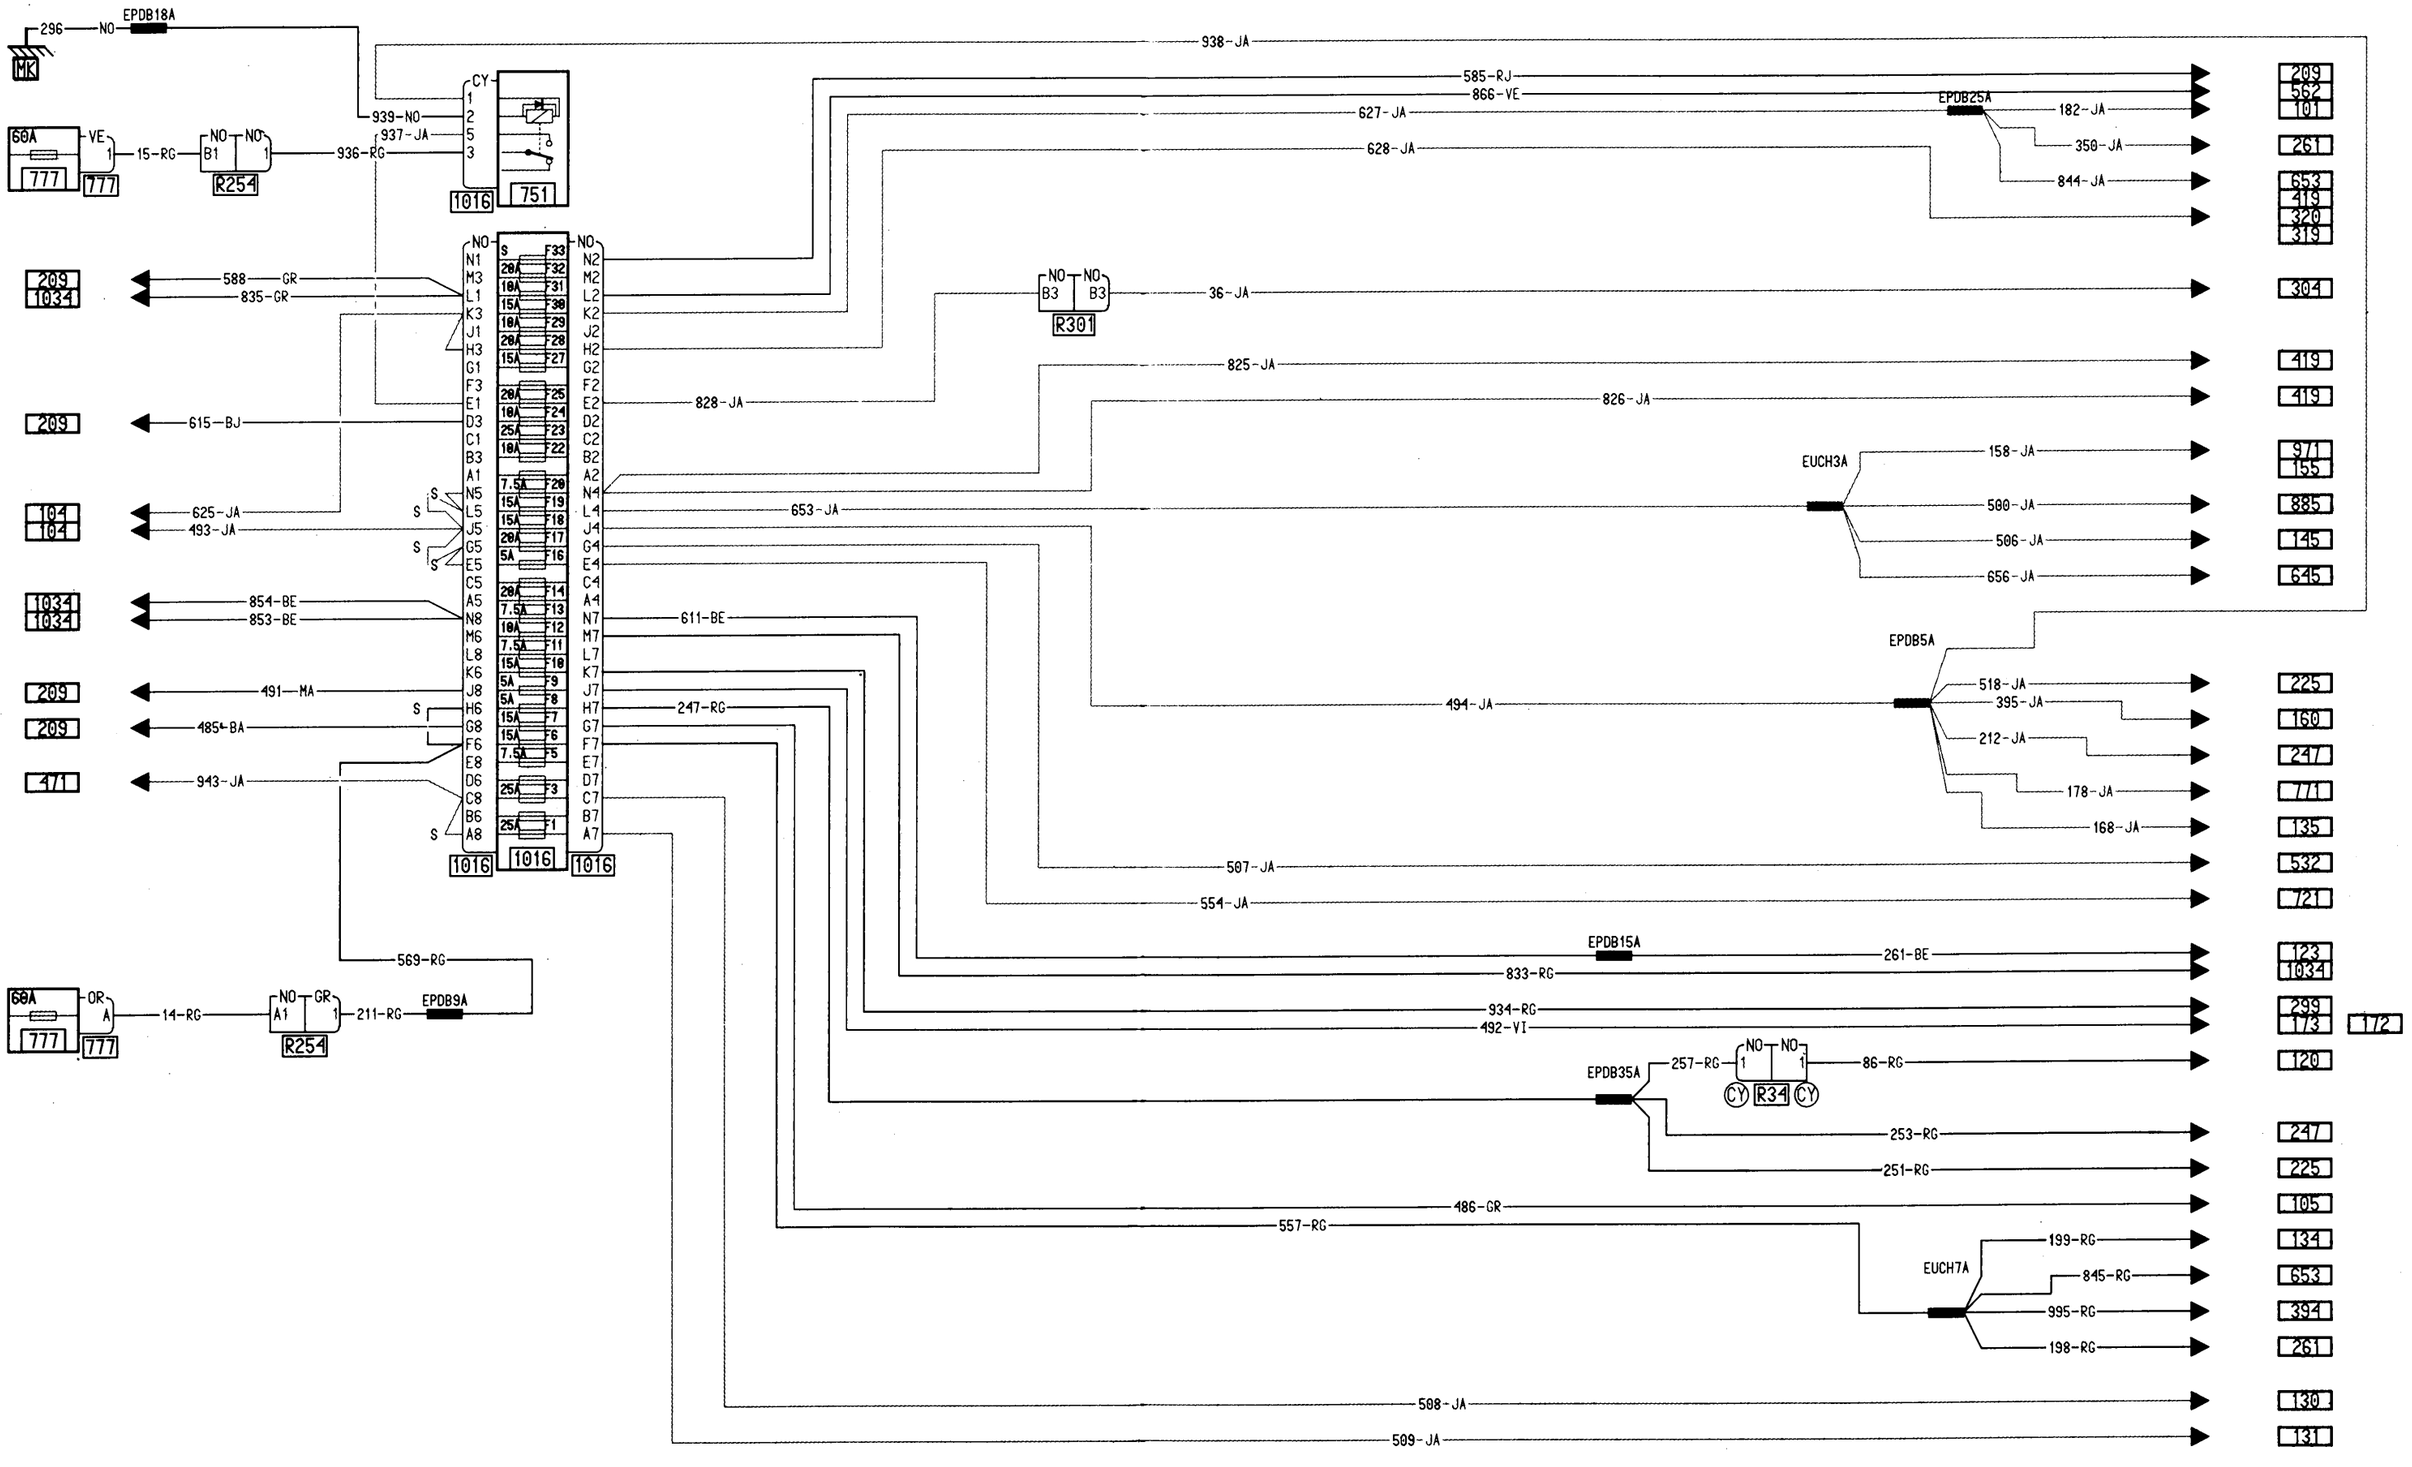
EPDB18A
296
NO
MK
938-JA
939-NO
937-JA
936-RG
60A
VE
1
15-RG
777
NO
B1
NO
1
R254
CY
1
2
5
3
1016
751
585-RJ
866-VE
627-JA
628-JA
EPDB25A
182-JA
350-JA
844-JA
209
562
101
261
653
419
320
319
209
1034
588-GR
835-GR
NO
B3
NO
B3
R301
36-JA
304
825-JA
826-JA
419
419
209
615-BJ
828-JA
EUCH3A
158-JA
500-JA
506-JA
656-JA
971
155
885
145
645
104
104
625-JA
493-JA
653-JA
1034
1034
854-BE
853-BE
611-BE
EPDB5A
209
491-MA
494-JA
518-JA
395-JA
212-JA
178-JA
168-JA
225
160
247
771
135
209
485-BA
247-RG
471
943-JA
507-JA
554-JA
532
721
EPDB15A
261-BE
833-RG
123
1034
569-RG
934-RG
492-VI
299
173
172
60A
OR
A
777
14-RG
NO
A1
GR
1
211-RG
EPDB9A
R254
EPDB35A
257-RG
NO
1
NO
1
CY
R34
CY
86-RG
120
253-RG
251-RG
247
225
486-GR
557-RG
105
134
EUCH7A
199-RG
845-RG
995-RG
198-RG
653
394
261
508-JA
509-JA
130
131

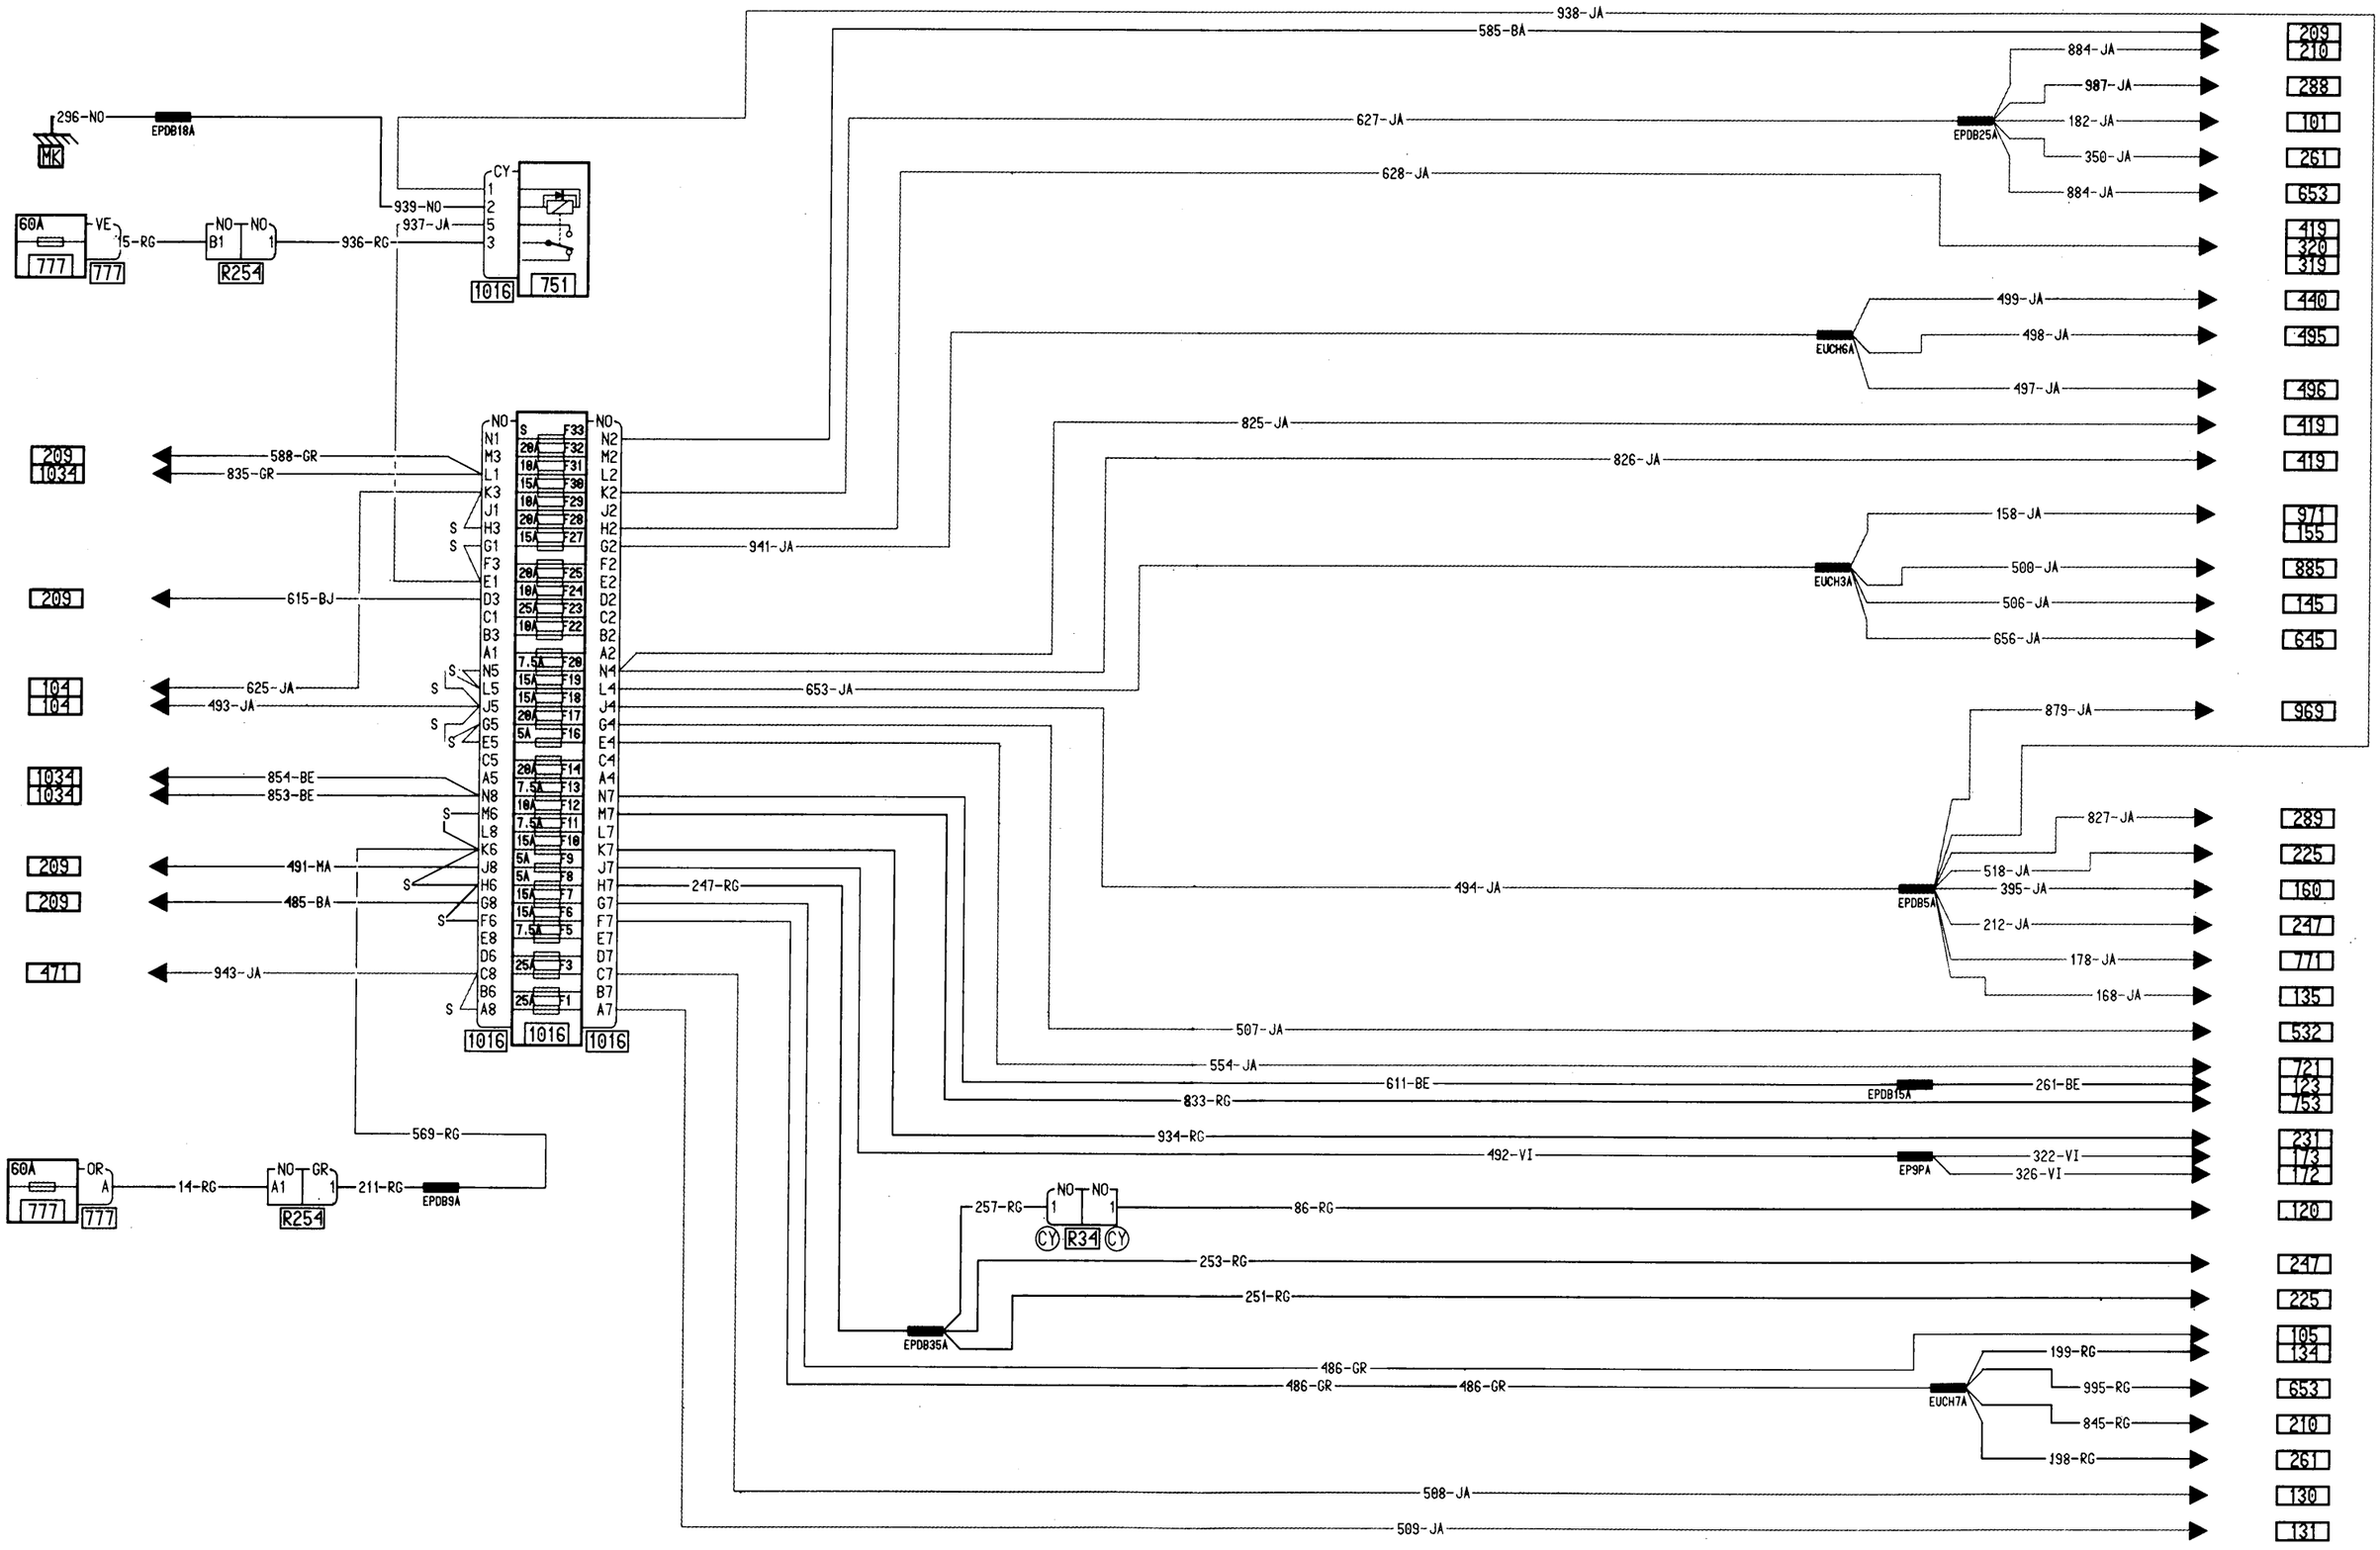
296-NO
EPDB18A
MK
60A
VE
777
777
15-RG
NO
B1
NO
1
R254
936-RG
937-JA
939-NO
CY
1
2
5
3
1016
751
938-JA
585-BA
627-JA
628-JA
884-JA
987-JA
182-JA
350-JA
884-JA
EPDB25A
209
210
288
101
261
653
419
320
319
499-JA
498-JA
497-JA
EUCH6A
440
495
496
825-JA
826-JA
419
419
158-JA
500-JA
506-JA
656-JA
EUCH3A
971
155
885
145
645
879-JA
969
209
1034
588-GR
835-GR
209
615-BJ
104
104
625-JA
493-JA
1034
1034
854-BE
853-BE
209
491-MA
209
485-BA
471
943-JA
941-JA
653-JA
494-JA
827-JA
518-JA
395-JA
212-JA
178-JA
168-JA
EPDB5A
289
225
160
247
771
135
507-JA
532
554-JA
611-BE
833-RG
247-RG
EPDB15A
261-BE
721
123
753
934-RG
492-VI
EP9PA
322-VI
326-VI
231
173
172
569-RG
60A
OR
A
777
777
14-RG
NO
A1
GR
1
R254
211-RG
EPDB9A
257-RG
NO
1
CY
R34
CY
NO
1
86-RG
120
253-RG
251-RG
247
225
EPDB835A
105
134
199-RG
995-RG
845-RG
198-RG
EUCH7A
653
210
261
508-JA
130
509-JA
131
1016
1016
1016

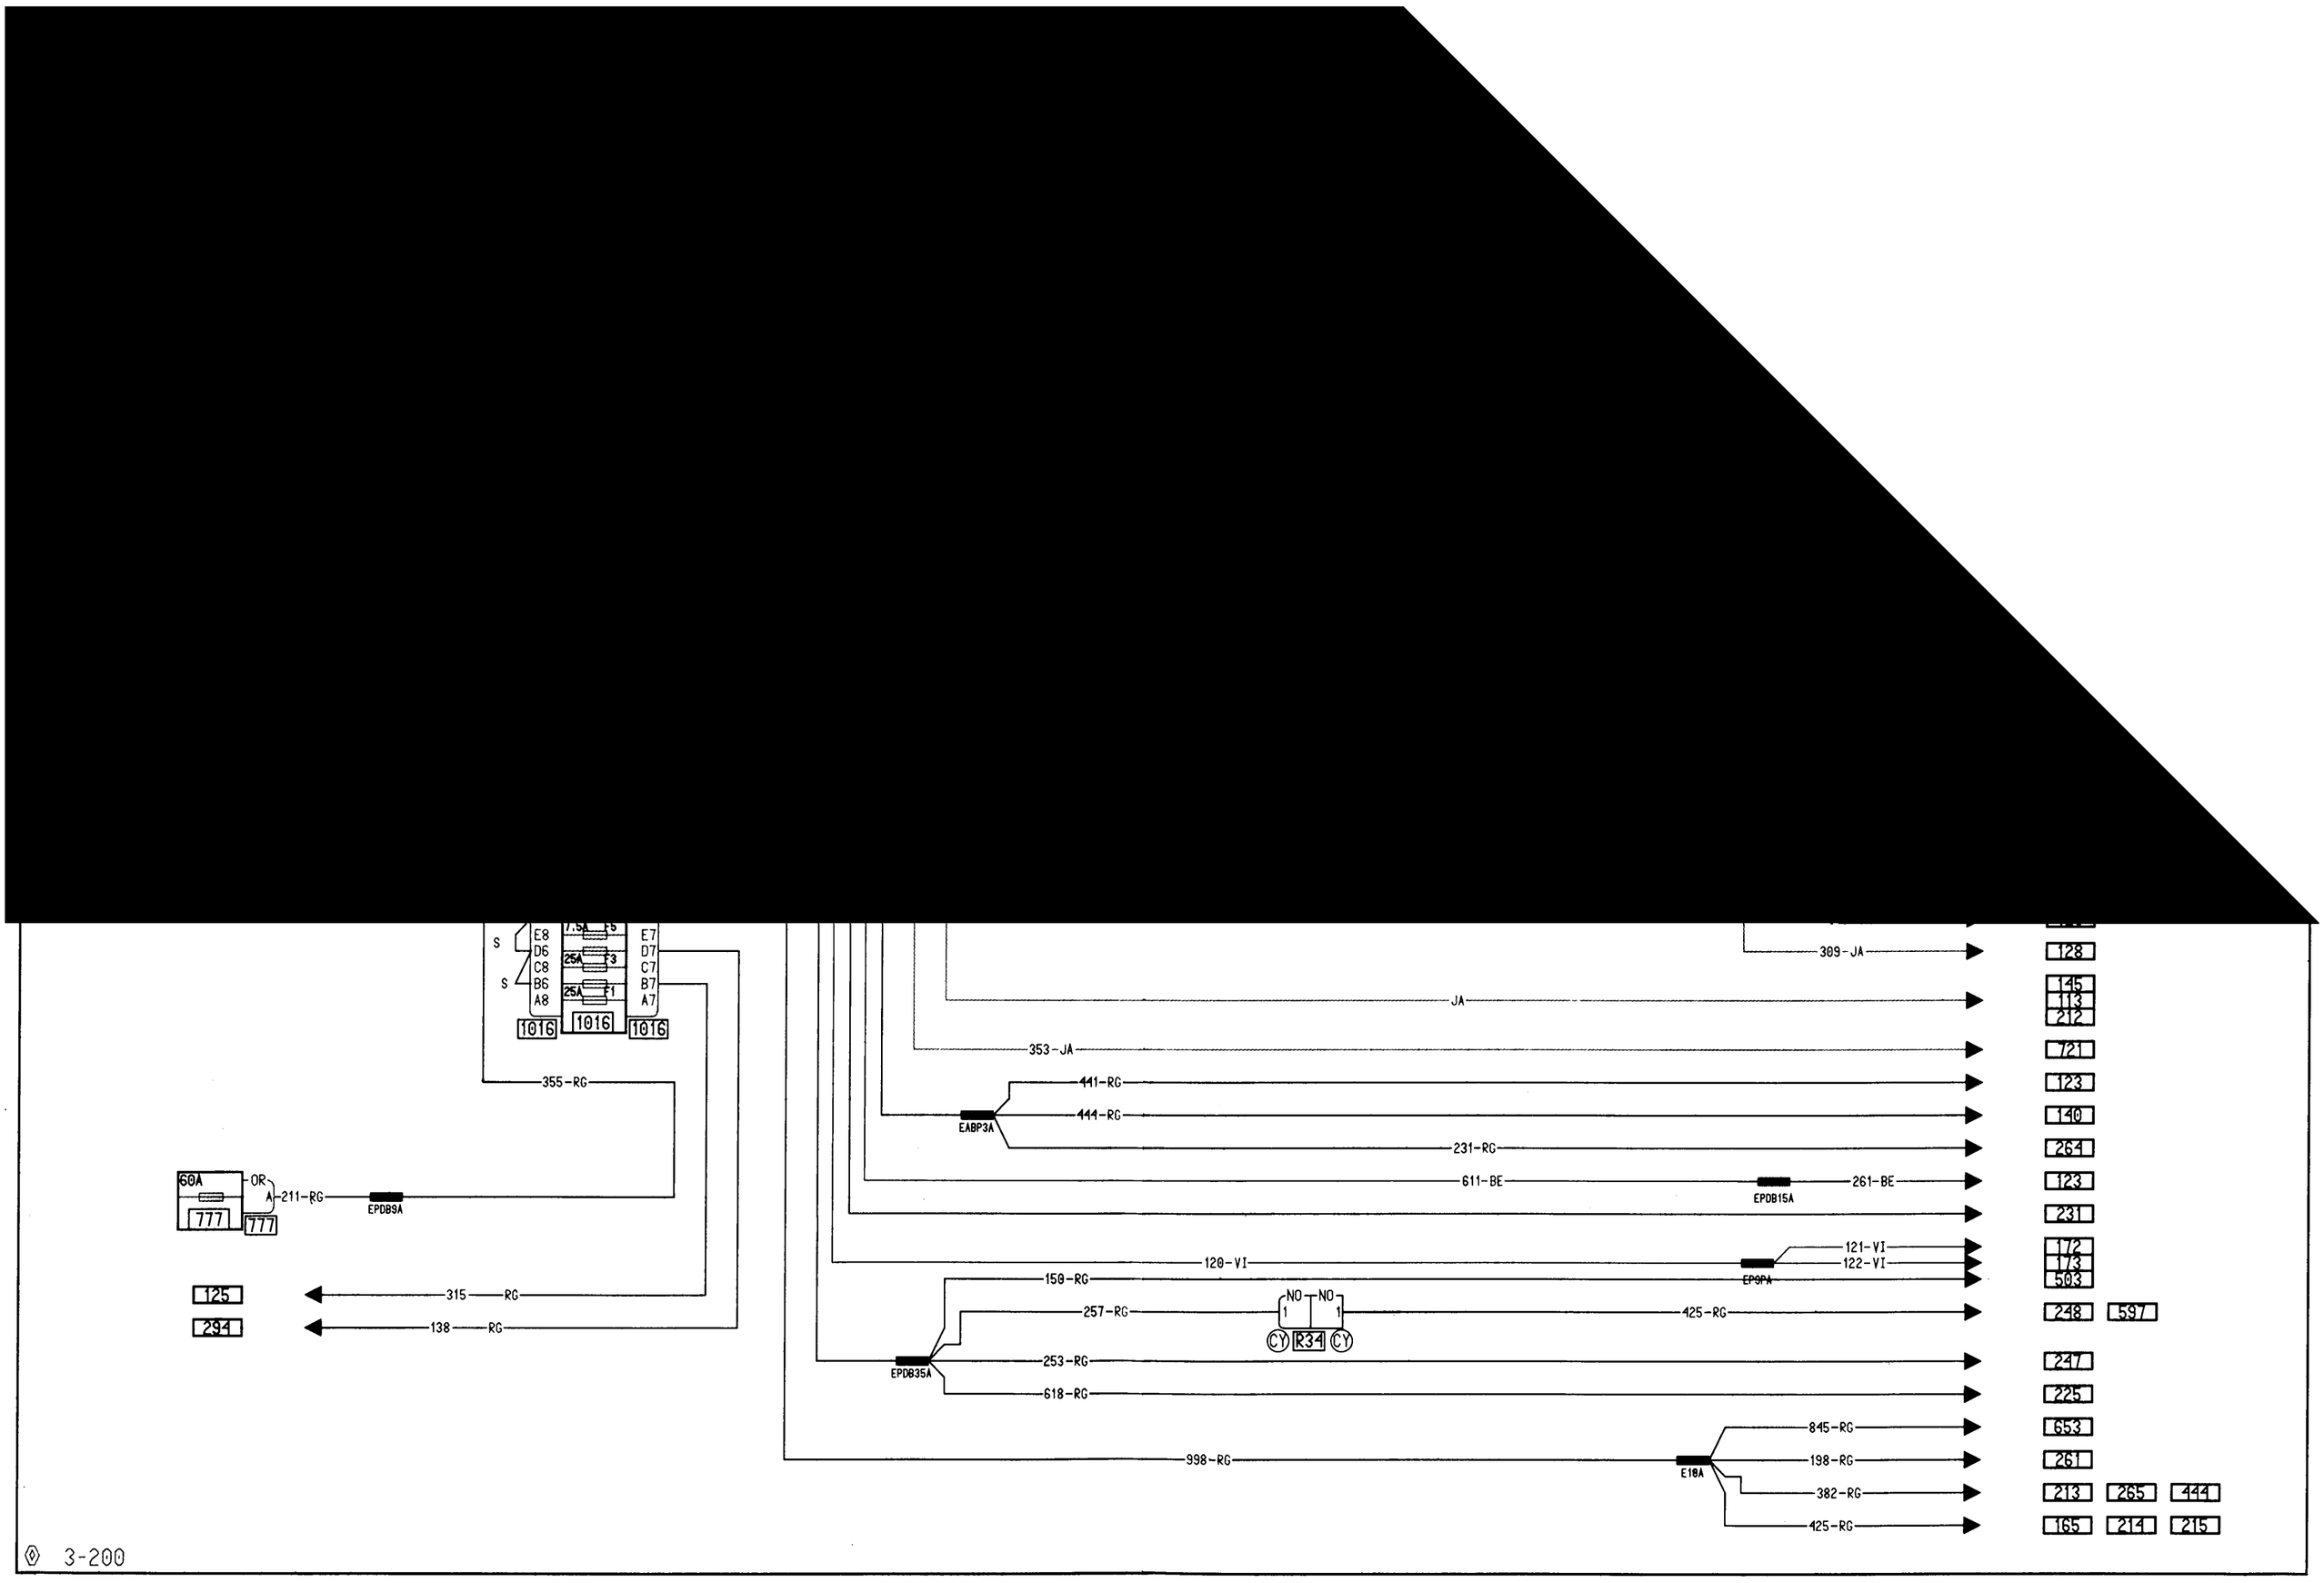
S
E8
D6
C8
B6
A8
7.5A F5
25A F3
25A F1
E7
D7
C7
B7
A7
1016
1016
1016
355-RG
60A
OR
A
211-RG
EPDB9A
777
777
125
294
315-RG
138-RG
309-JA
JA
353-JA
441-RG
444-RG
EABP3A
231-RG
611-BE
261-BE
EPDB15A
120-VI
121-VI
122-VI
EP9PA
150-RG
257-RG
NO
NO
1
1
CY
R34
CY
425-RG
EPDB35A
253-RG
618-RG
998-RG
E18A
845-RG
198-RG
382-RG
425-RG
128
145
113
212
721
123
140
264
123
231
172
173
503
248
597
247
225
653
261
213
265
444
165
214
215

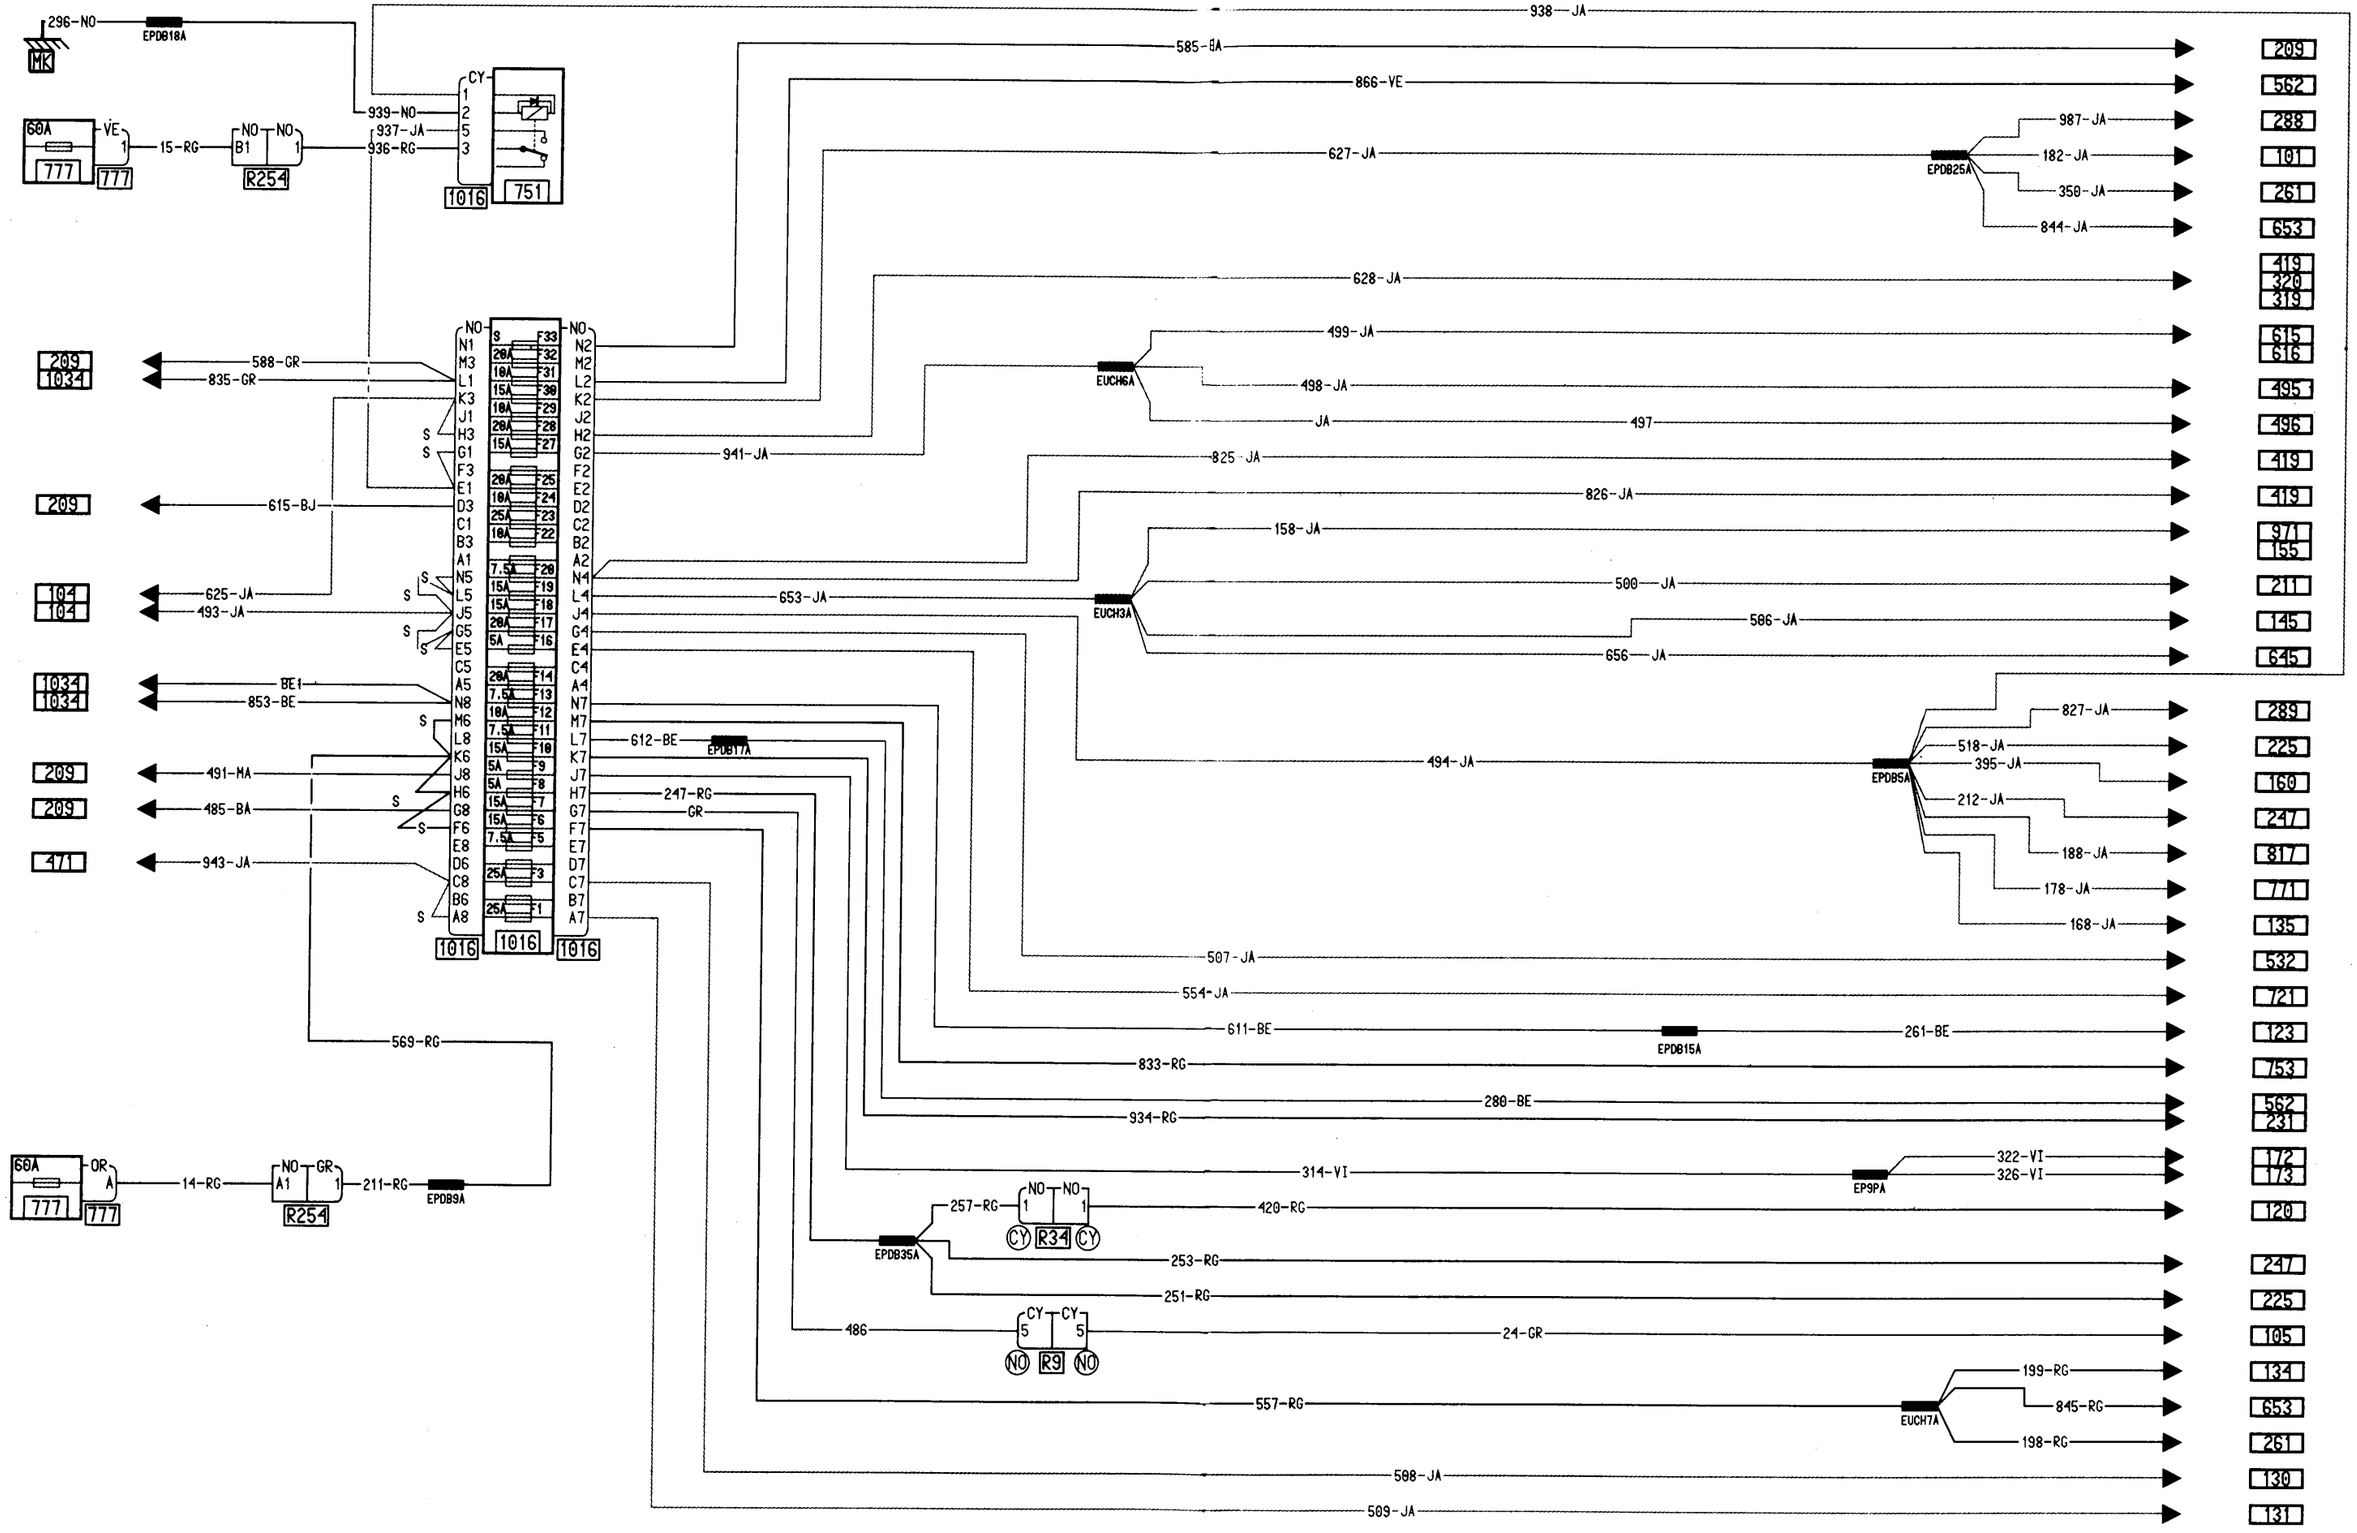
296-NO
EPDB18A
MK
60A
VE
777
777
15-RG
NO
B1
NO
1
R254
939-NO
937-JA
936-RG
CY
1
2
5
3
1016
751
938-JA
585-BA
866-VE
627-JA
628-JA
499-JA
498-JA
JA
497
941-JA
825-JA
826-JA
158-JA
500-JA
506-JA
656-JA
653-JA
494-JA
612-BE
247-RG
GR
507-JA
554-JA
611-BE
261-BE
833-RG
280-BE
934-RG
314-VI
257-RG
420-RG
253-RG
251-RG
486
24-GR
557-RG
508-JA
509-JA
569-RG
14-RG
211-RG
EPDB9A
EPDB35A
EPDB17A
EPDB15A
EUCH6A
EUCH3A
EPDB25A
EPDB5A
EP9PA
EUCH7A
209
1034
588-GR
835-GR
615-BJ
104
625-JA
493-JA
853-BE
491-MA
485-BA
943-JA
987-JA
182-JA
350-JA
844-JA
322-VI
326-VI
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
168-JA
199-RG
845-RG
198-RG
209
562
288
101
261
653
419
320
319
615
616
495
496
419
419
971
155
211
145
645
289
225
160
247
817
771
135
532
721
123
753
562
231
172
173
120
247
225
105
134
653
261
130
131

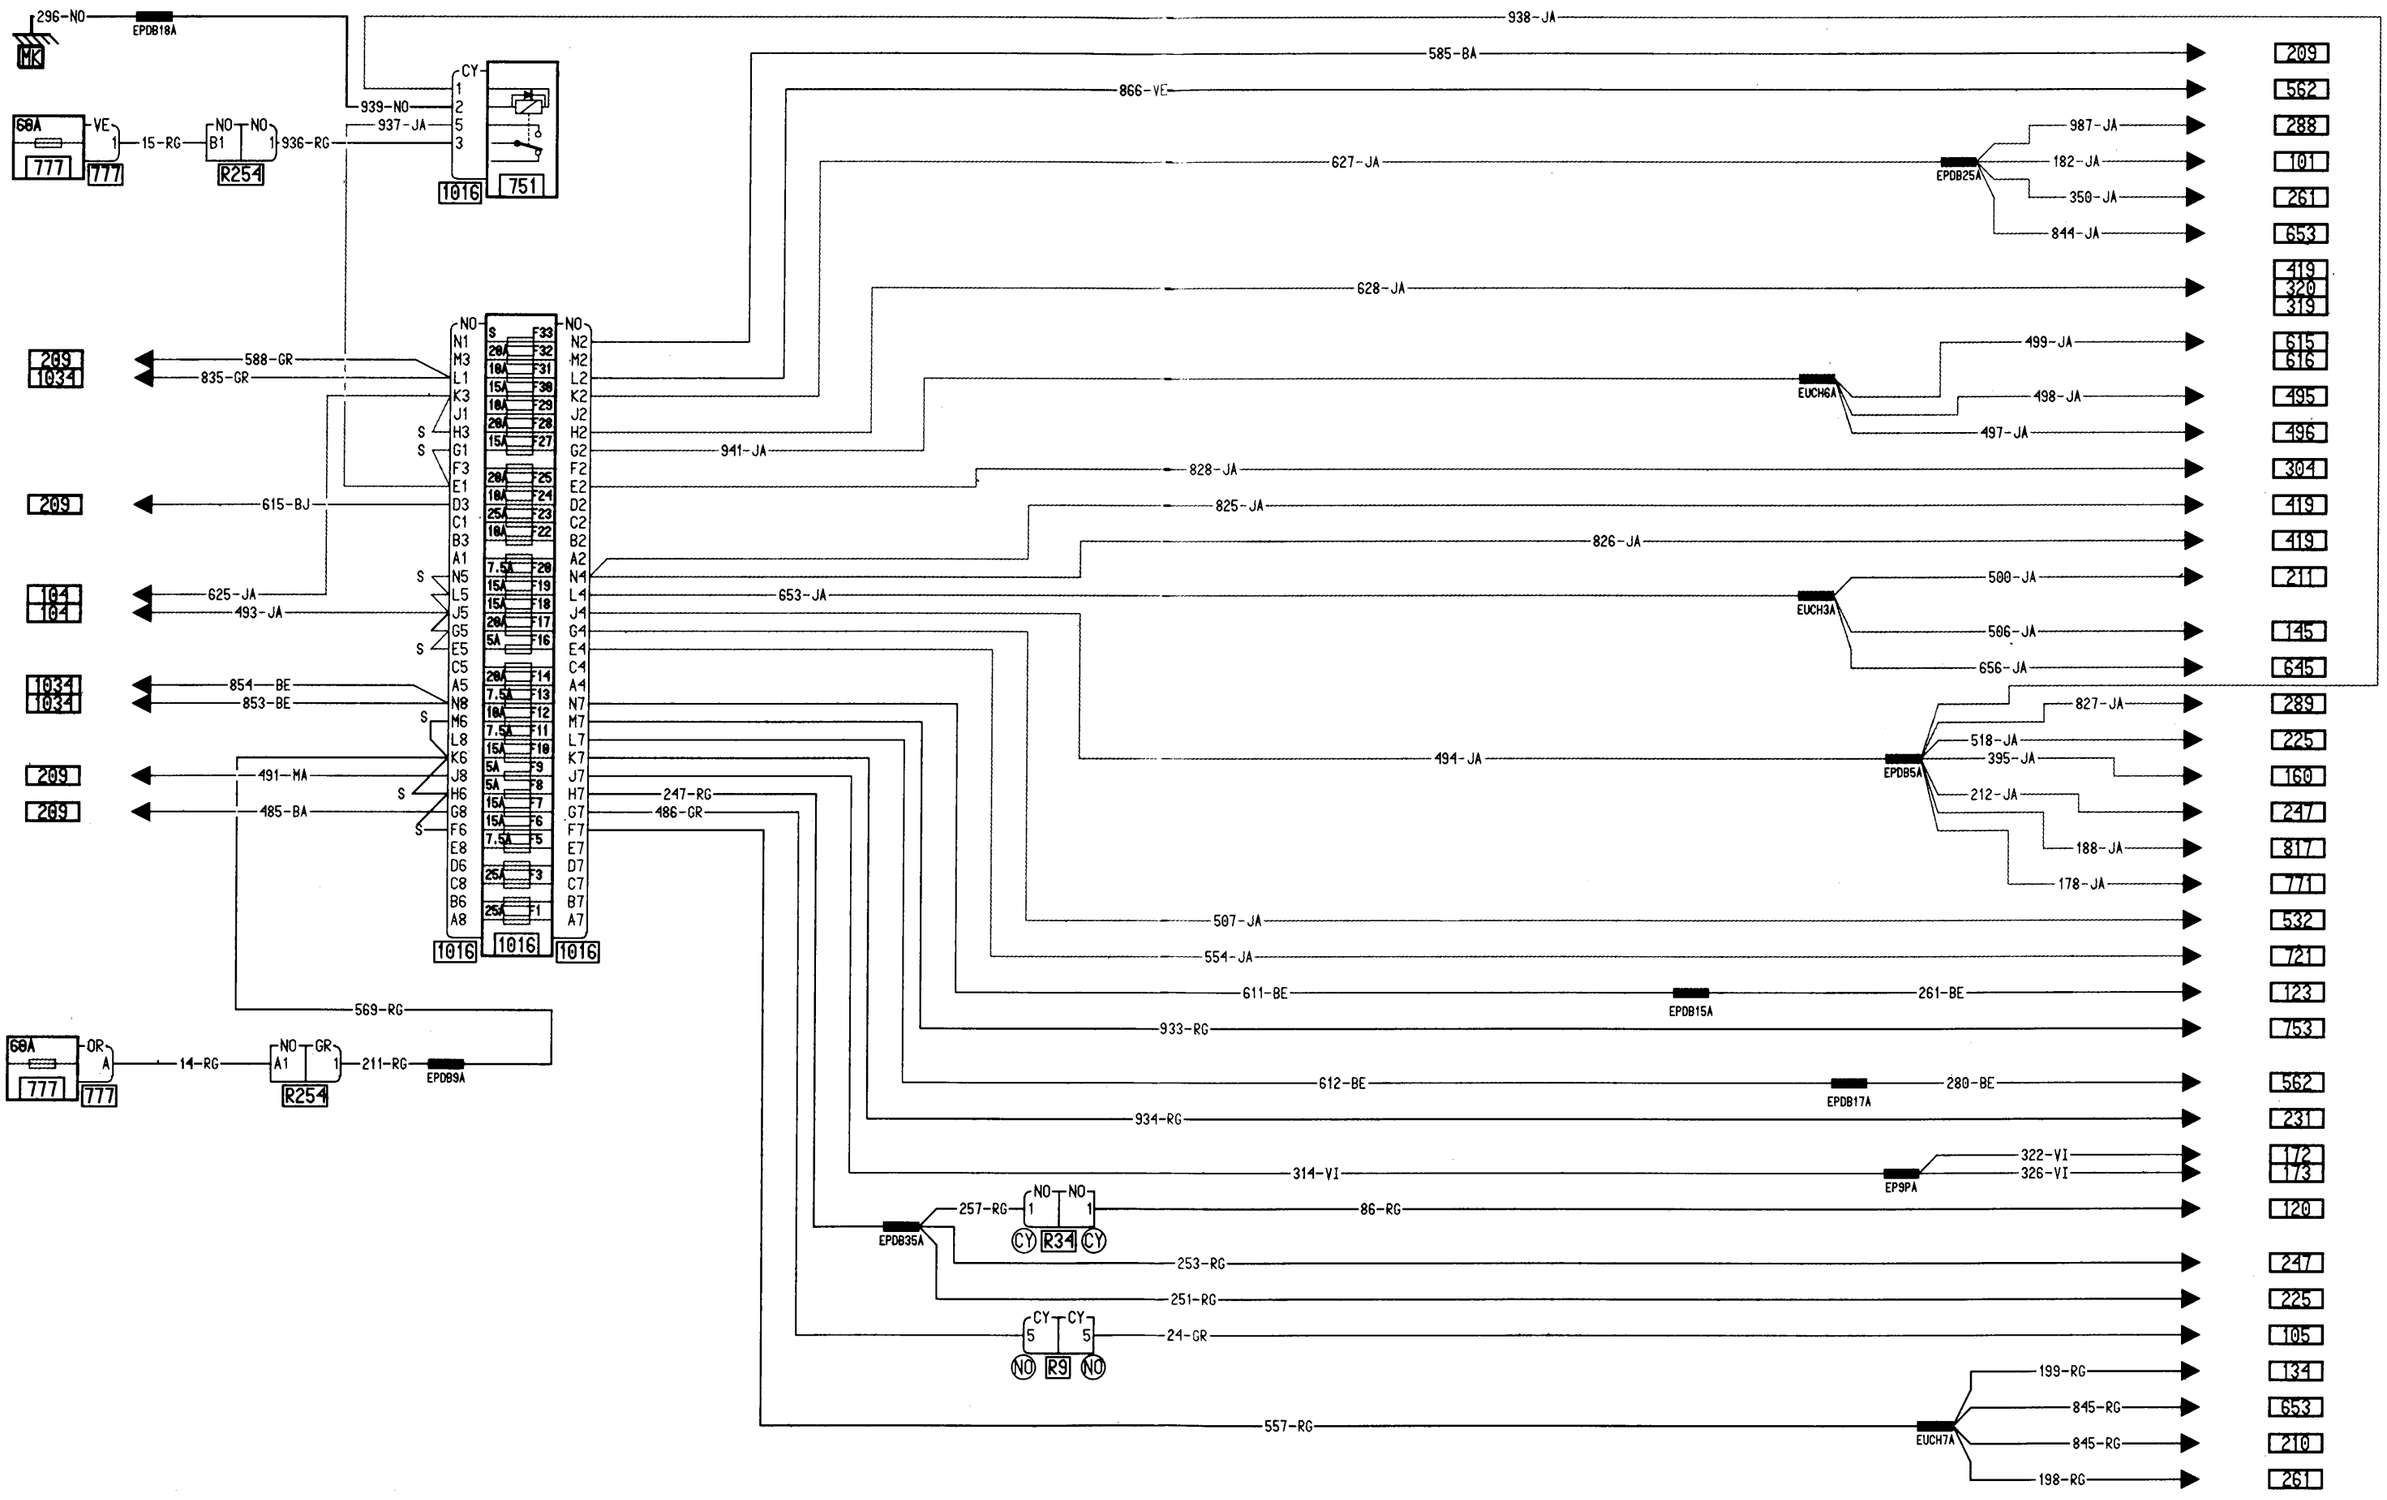
296-NO
EPDB18A
MK
60A
777
VE
15-RG
NO
B1
R254
936-RG
939-NO
937-JA
CY
1016
751
938-JA
585-BA
866-VE
627-JA
628-JA
941-JA
987-JA
182-JA
350-JA
844-JA
EPDB25A
499-JA
498-JA
497-JA
EUCH6A
828-JA
825-JA
826-JA
653-JA
500-JA
506-JA
656-JA
EUCH3A
494-JA
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
EPDB5A
507-JA
554-JA
611-BE
261-BE
EPDB15A
933-RG
612-BE
280-BE
EPDB17A
934-RG
314-VI
322-VI
326-VI
EP9PA
257-RG
EPDB35A
86-RG
253-RG
251-RG
24-GR
CY
R34
R9
NO
557-RG
199-RG
845-RG
845-RG
198-RG
EUCH7A
247-RG
486-GR
569-RG
OR
A
14-RG
GR
211-RG
EPDB9A
588-GR
835-GR
615-BJ
625-JA
493-JA
854-BE
853-BE
491-MA
485-BA
209
1031
104
1034
1016
209
562
288
101
261
653
419
320
319
615
616
495
496
304
419
419
211
145
645
289
225
160
247
817
771
532
721
123
753
562
231
172
173
120
247
225
105
134
653
210
261

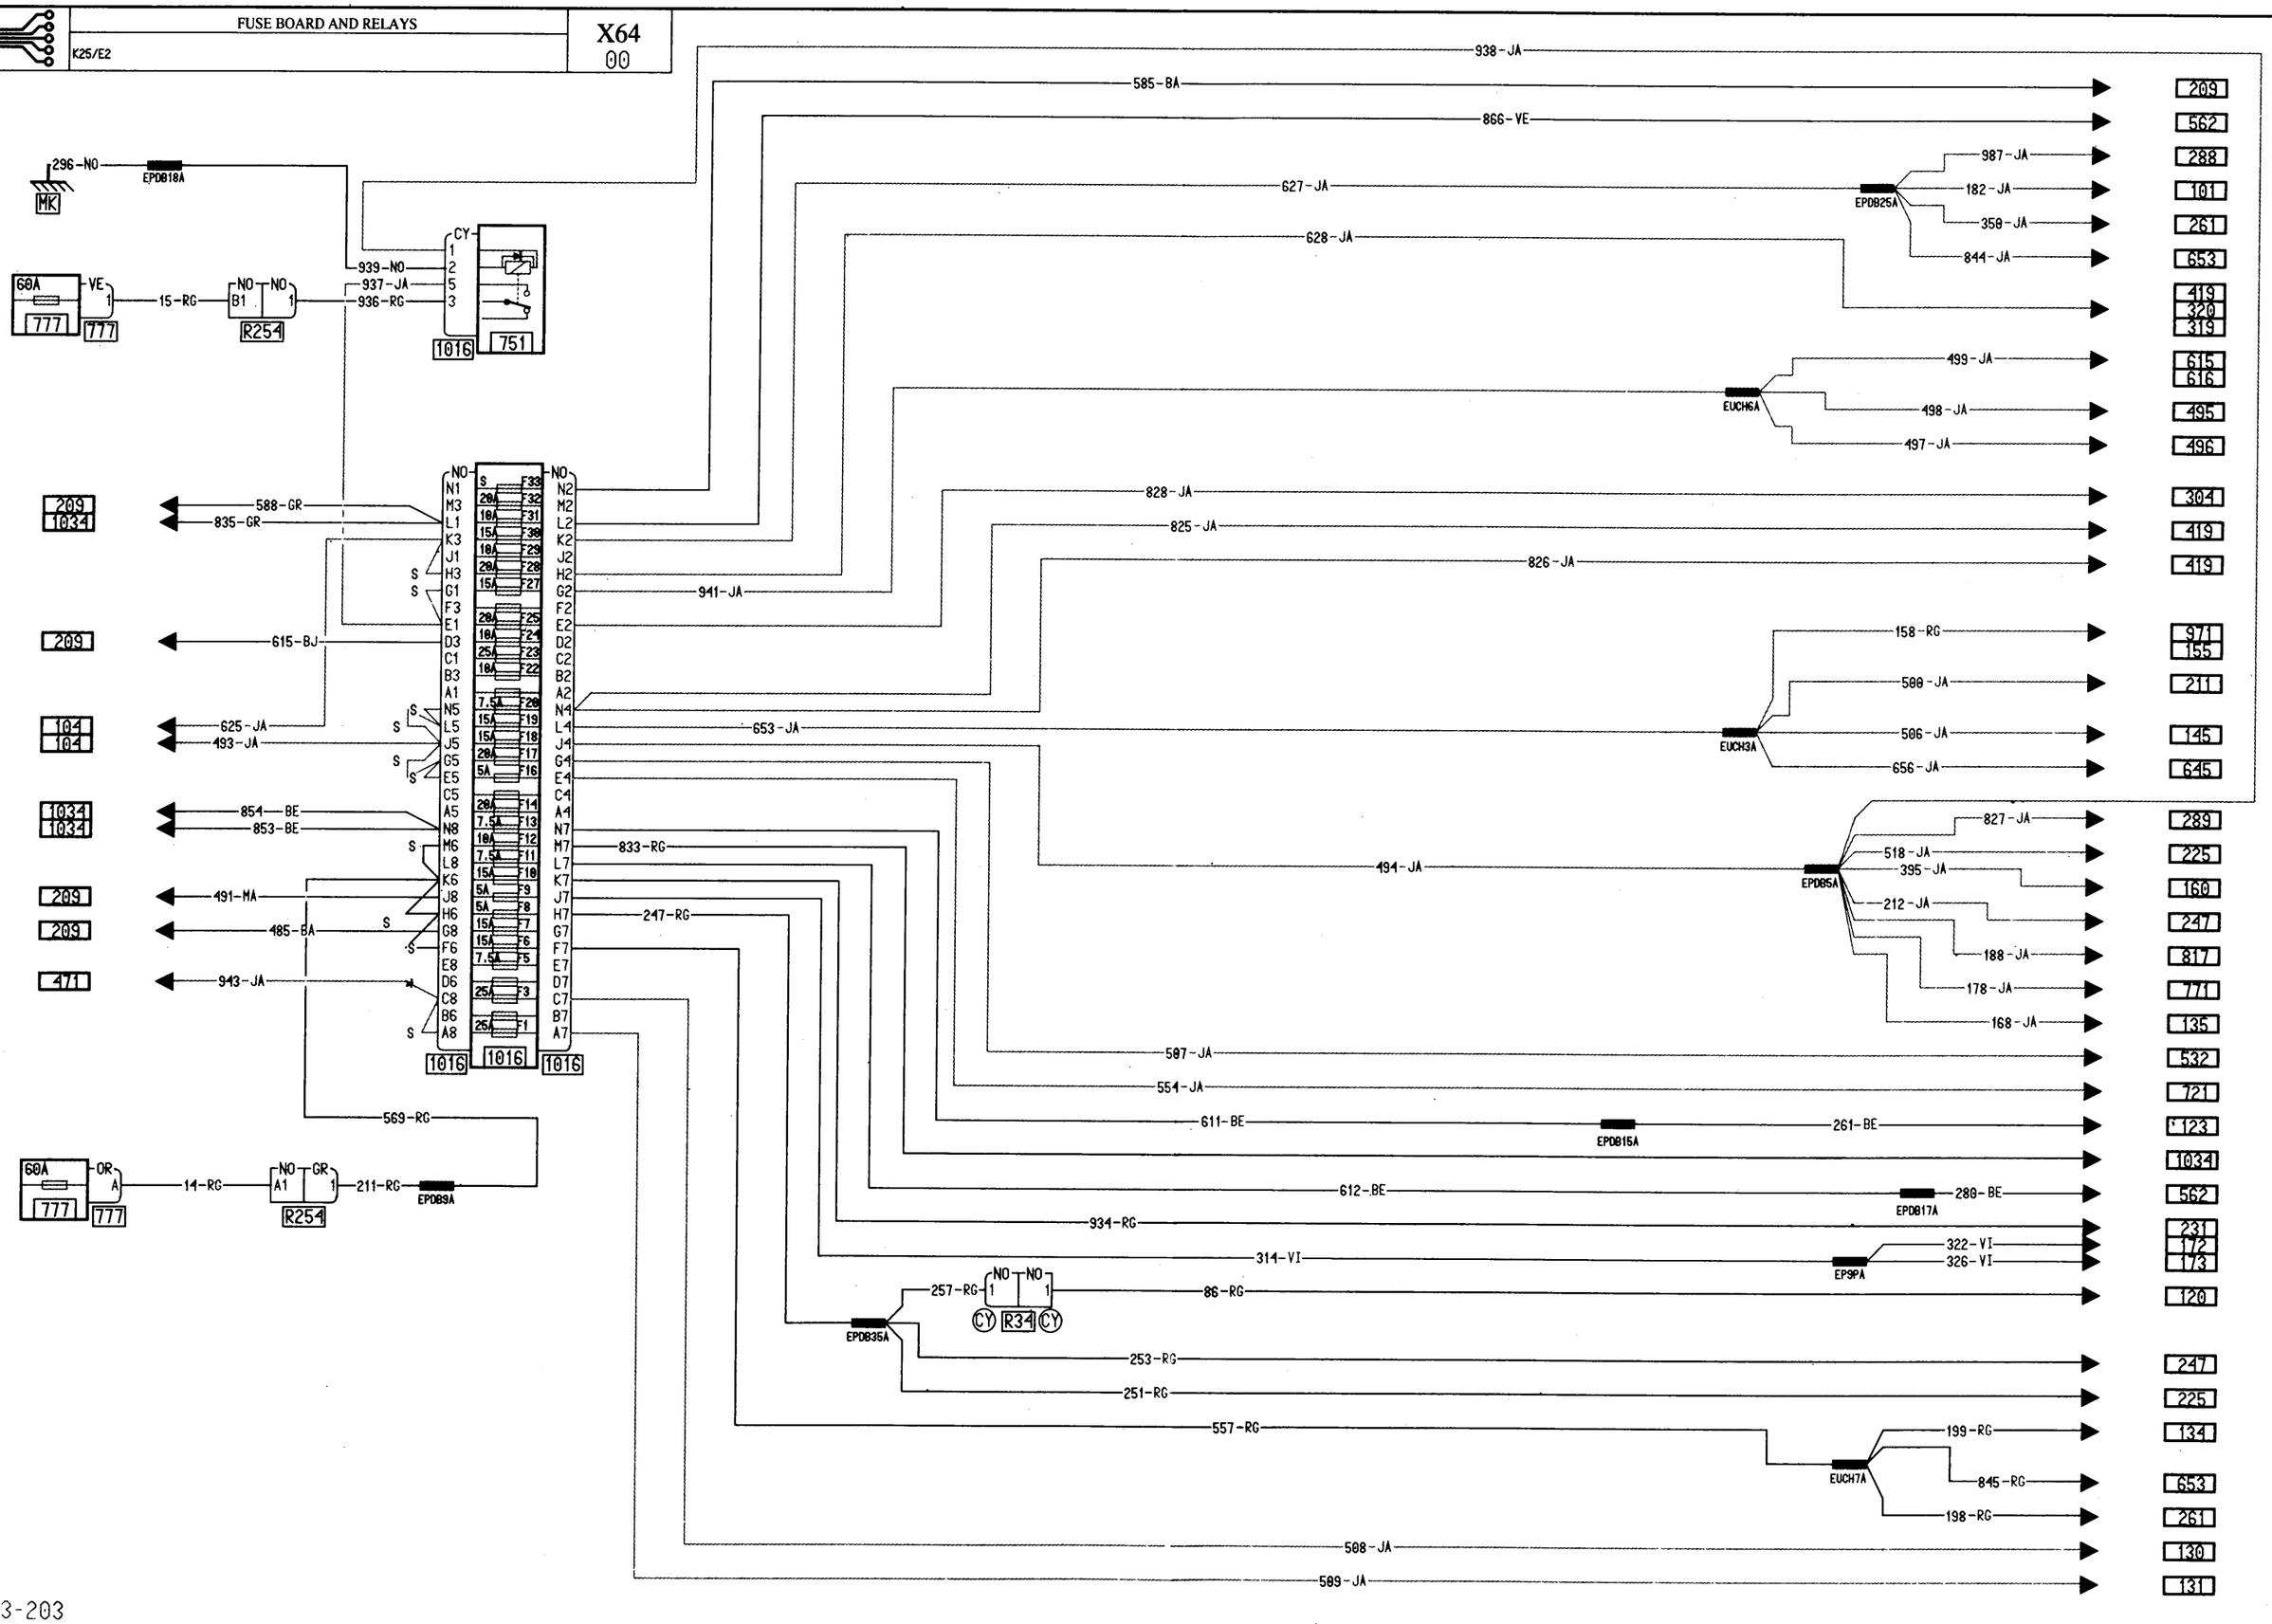
296-NO
EPDB18A
MK
60A
VE
777
777
15-RG
NO
B1
NO
1
R254
939-NO
937-JA
936-RG
CY
1
2
5
3
1016
751
938-JA
585-BA
866-VE
627-JA
628-JA
987-JA
182-JA
358-JA
844-JA
EPDB25A
209
562
288
101
261
653
419
320
319
499-JA
498-JA
497-JA
EUCH6A
615
616
495
496
NO
N1
M3
L1
K3
J1
H3
G1
F3
E1
D3
C1
B3
A1
N5
L5
J5
G5
E5
C5
A5
N8
M6
L8
K6
J8
H6
G8
F6
E8
D6
C8
B6
A8
S
F33
F32
F31
F30
F29
F28
F27
F25
F24
F23
F22
F20
F19
F18
F17
F16
F14
F13
F12
F11
F10
F9
F8
F7
F6
F5
F3
F1
20A
10A
15A
7.5A
25A
5A
1016
N2
M2
L2
K2
J2
H2
G2
F2
E2
D2
C2
B2
A2
N4
L4
J4
G4
E4
C4
A4
N7
M7
L7
K7
J7
H7
G7
F7
E7
D7
C7
B7
A7
588-GR
835-GR
209
1034
615-BJ
209
625-JA
493-JA
104
104
854-BE
853-BE
1034
1034
491-MA
209
485-BA
209
943-JA
471
941-JA
828-JA
825-JA
826-JA
653-JA
833-RG
247-RG
494-JA
158-RG
500-JA
506-JA
656-JA
EUCH3A
971
155
211
145
645
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
168-JA
EPDB5A
289
225
160
247
817
771
135
507-JA
554-JA
611-BE
261-BE
EPDB15A
532
721
123
1034
569-RG
60A
OR
A
777
777
14-RG
NO
A1
GR
1
R254
211-RG
EPDB9A
612-BE
280-BE
EPDB17A
562
934-RG
231
314-VI
322-VI
326-VI
EP9PA
172
173
257-RG
NO
1
NO
1
CY
R34
CY
EPDB35A
86-RG
120
253-RG
251-RG
247
225
557-RG
199-RG
845-RG
198-RG
EUCH7A
134
653
261
508-JA
509-JA
130
131

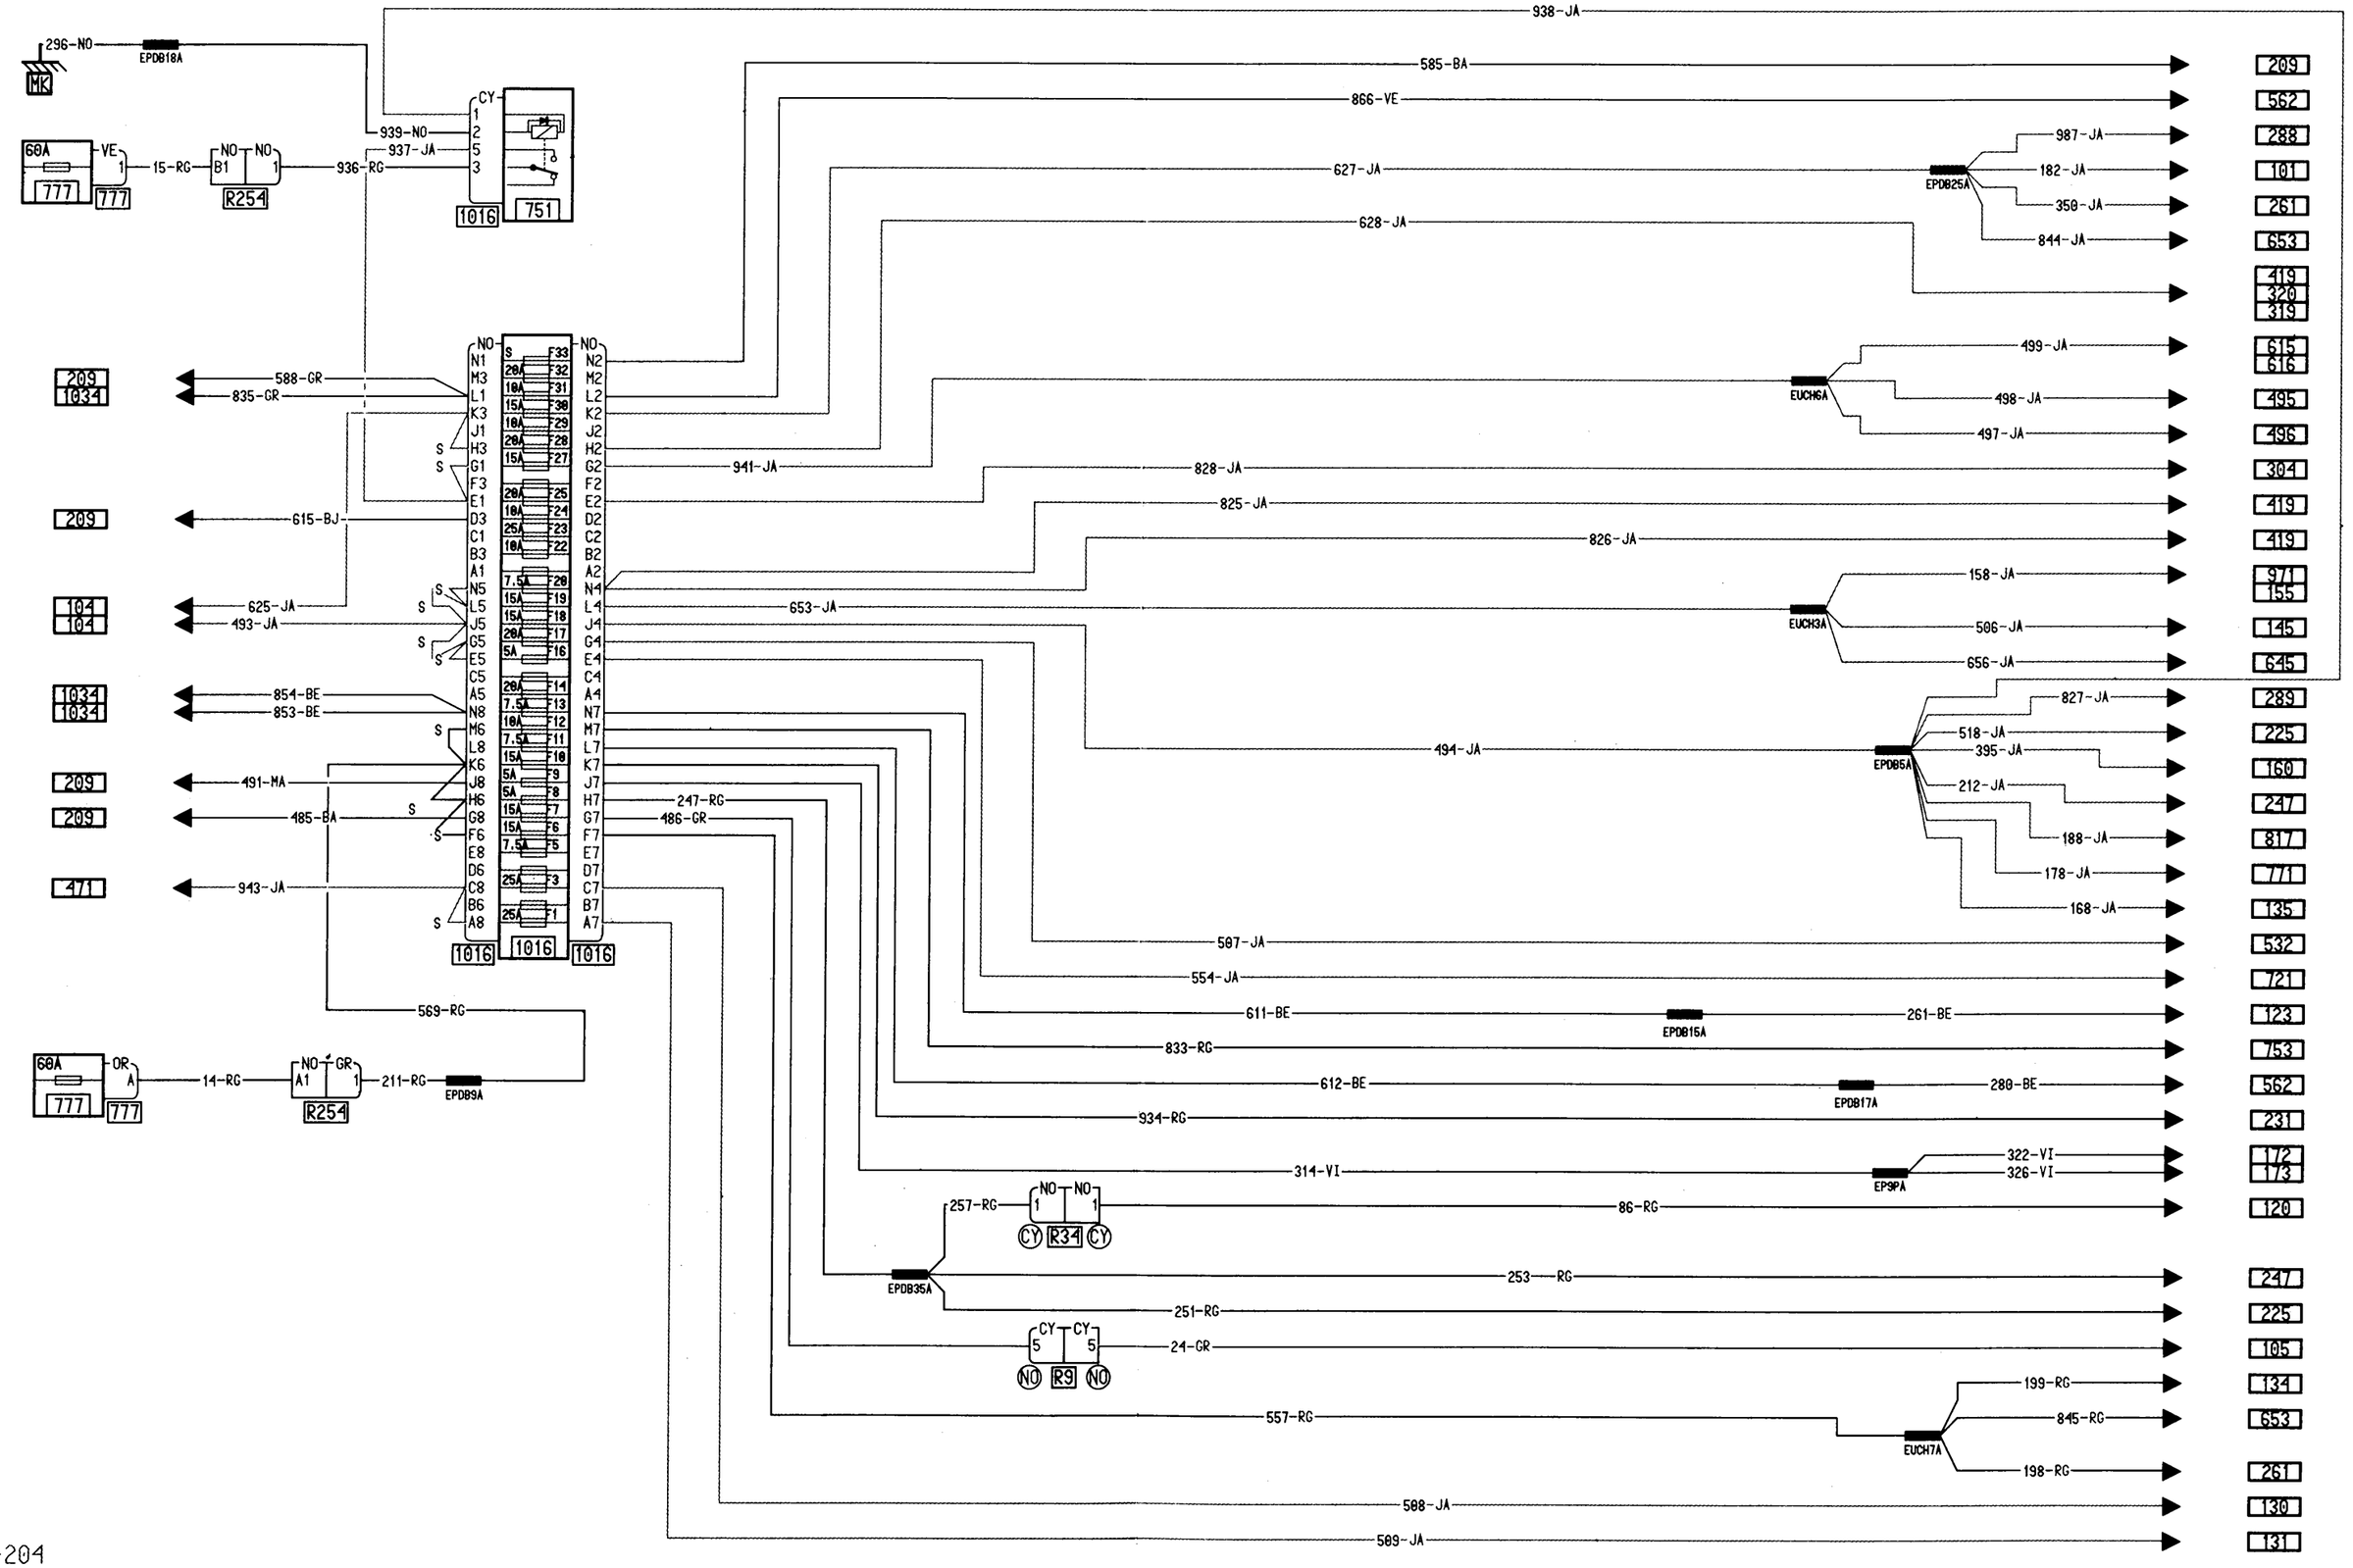
296-NO
EPDB18A
MK
60A
777
VE
15-RG
NO
B1
R254
936-RG
939-NO
937-JA
CY
1016
751
938-JA
585-BA
866-VE
627-JA
628-JA
987-JA
182-JA
350-JA
844-JA
EPDB25A
209
562
288
101
261
653
419
320
319
209
1034
588-GR
835-GR
615-BJ
625-JA
493-JA
854-BE
853-BE
491-MA
485-BA
943-JA
941-JA
828-JA
825-JA
826-JA
653-JA
499-JA
498-JA
497-JA
EUCH6A
615
616
495
496
304
419
419
158-JA
506-JA
656-JA
EUCH3A
971
155
145
645
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
168-JA
EPDB6A
289
225
160
247
817
771
135
494-JA
587-JA
554-JA
611-BE
261-BE
EPDB15A
833-RG
612-BE
280-BE
EPDB17A
934-RG
314-VI
322-VI
326-VI
EP9PA
532
721
123
753
562
231
172
173
569-RG
60A
OR
A
777
14-RG
NO
GR
A1
R254
211-RG
EPDB9A
257-RG
NO
R34
CY
86-RG
120
EPDB35A
253-RG
251-RG
247
225
CY
5
R9
NO
24-GR
105
199-RG
845-RG
198-RG
EUCH7A
134
653
261
557-RG
508-JA
509-JA
130
131
1016

DIESEL CHAMBER PRE AND POSTHEATING

(L64/F9Q736/SSABS/CA/STHPLG/TURKEY/BVM5),(B64,L64/F9Q736/CA/MERCOS)

X64

00

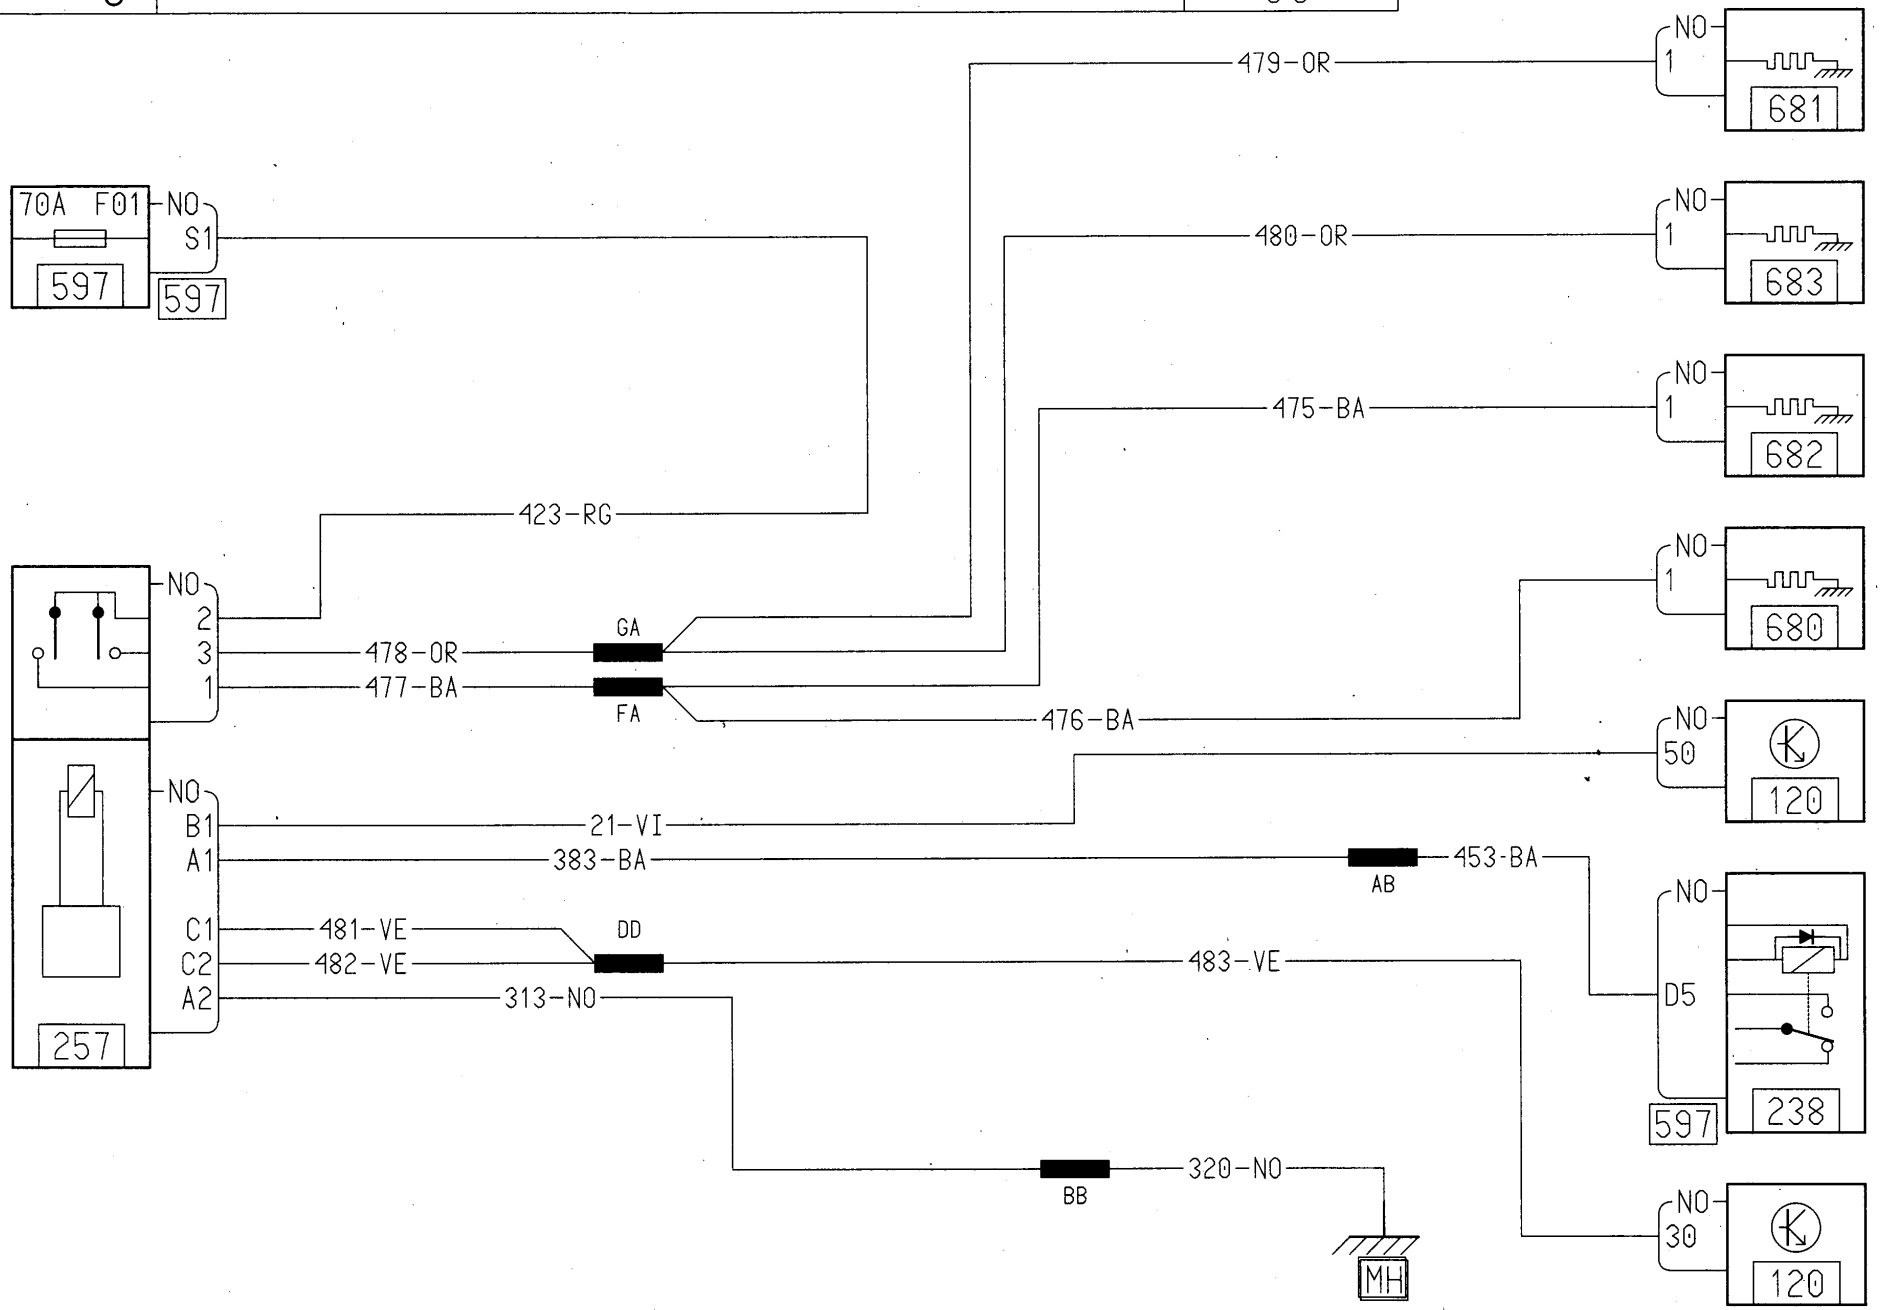

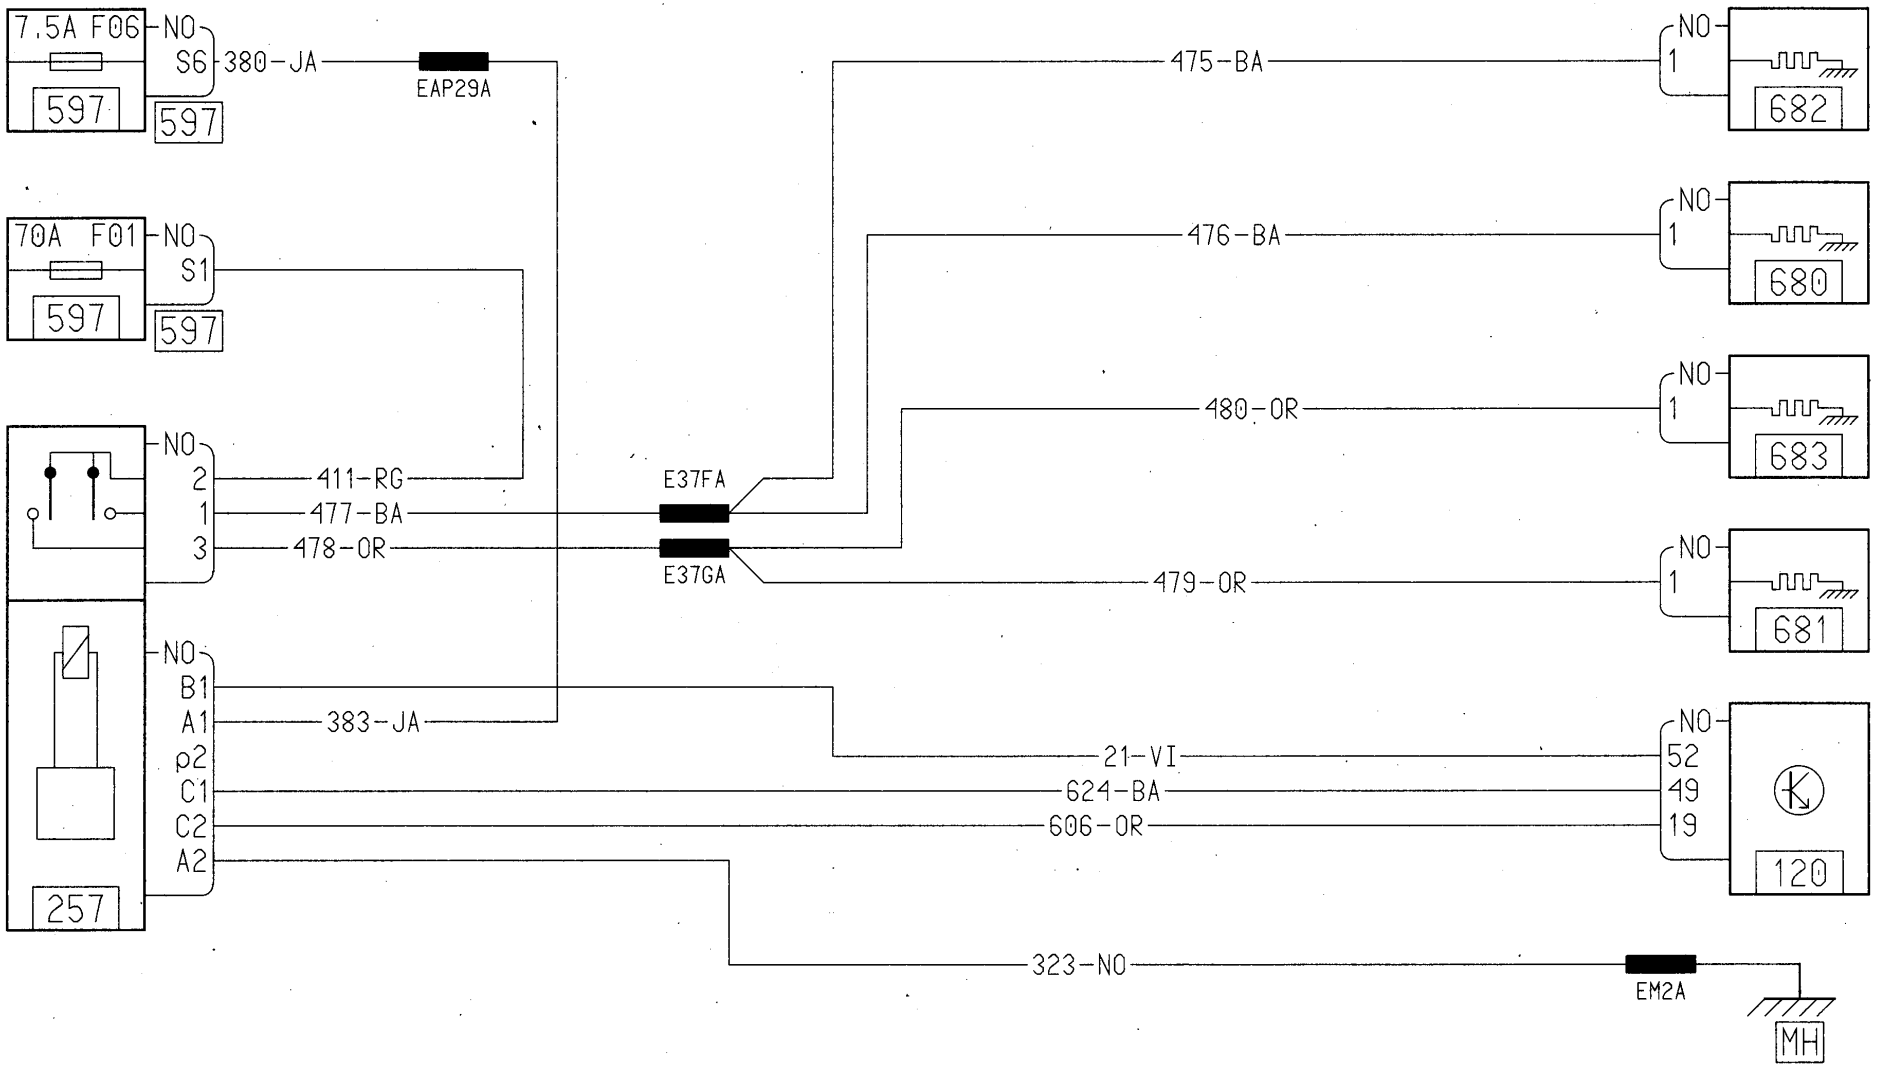
7.5A F06
NO
S6
380-JA
EAP29A
597
597
70A F01
NO
S1
597
597
NO
2
1
3
411-RG
477-BA
478-OR
E37FA
E37GA
NO
B1
A1
p2
C1
C2
A2
383-JA
257
475-BA
476-BA
480-OR
479-OR
21-VI
624-BA
606-OR
323-NO
NO
1
682
NO
1
680
NO
1
683
NO
1
681
NO
52
49
19
120
EM2A
MH

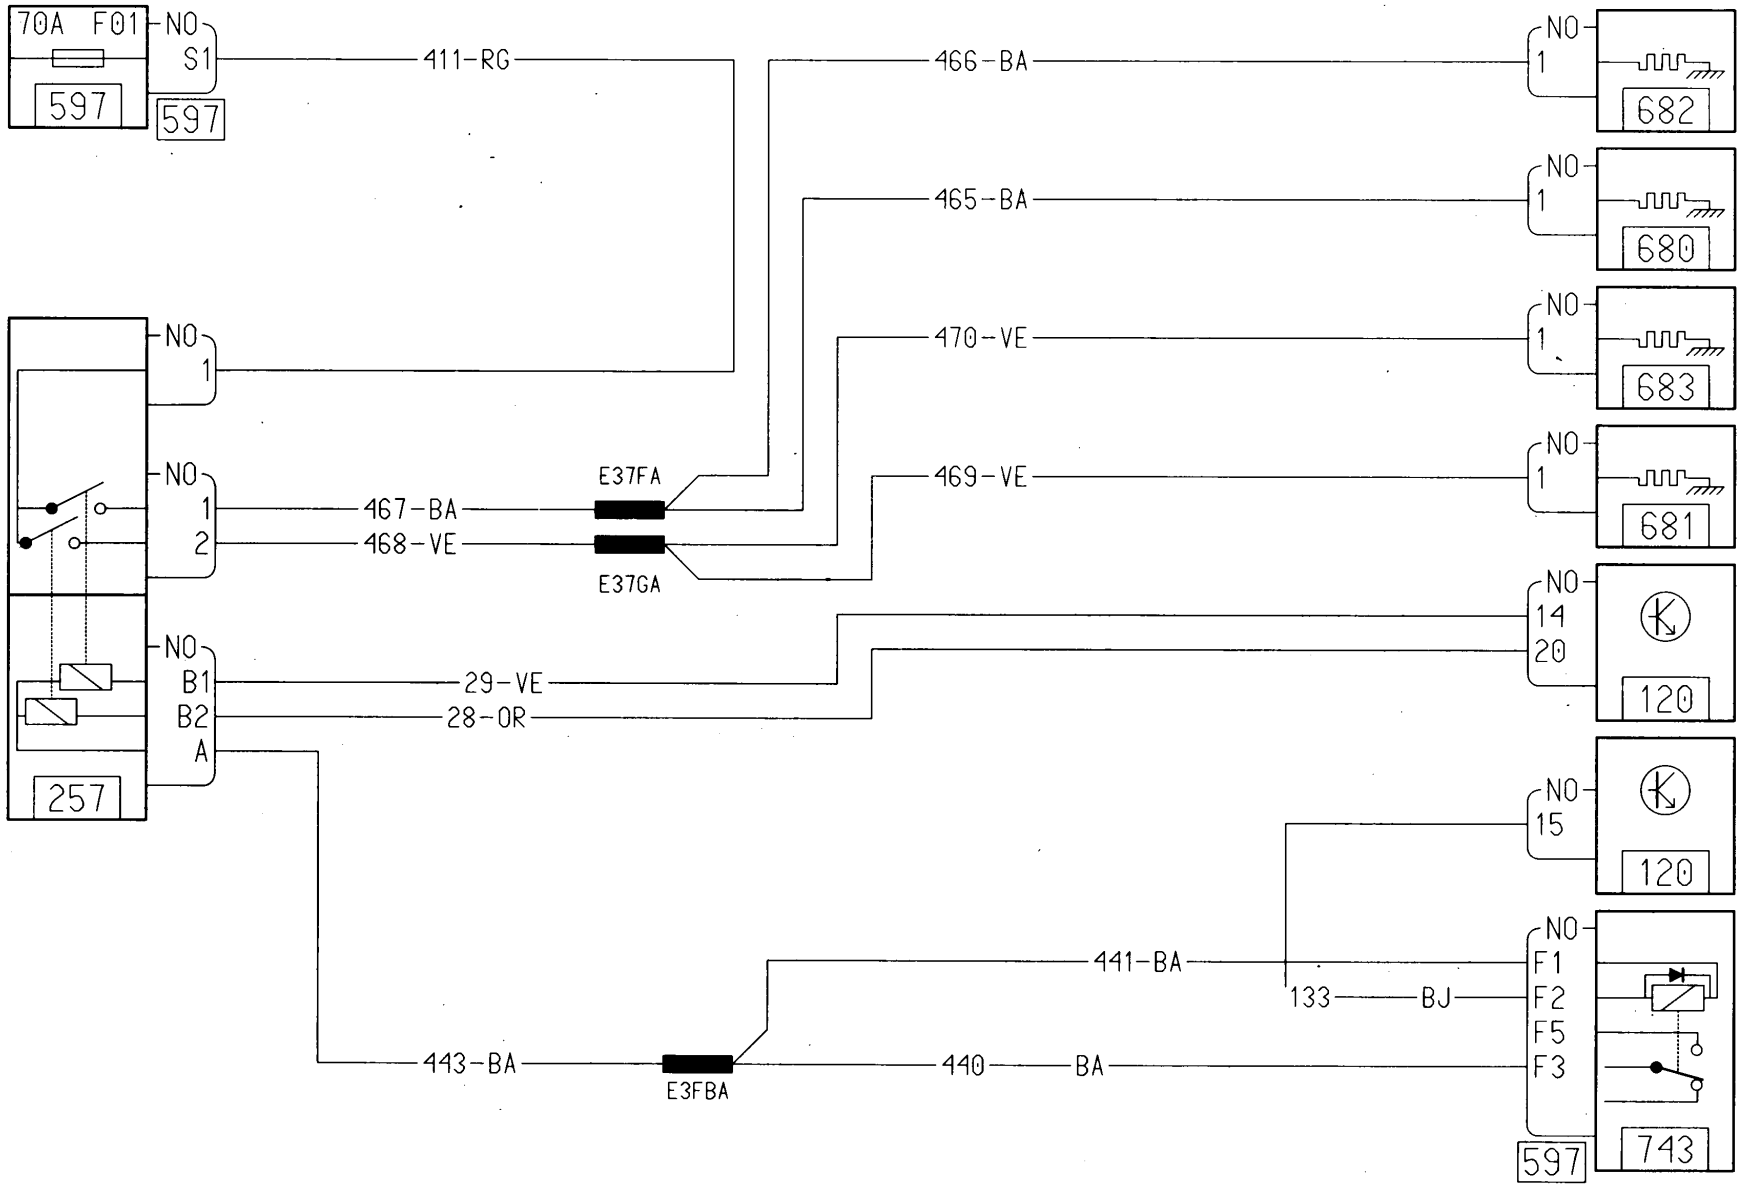
70A F01
NO
S1
597
597
411-RG
NO
1
682
466-BA
NO
1
680
465-BA
NO
1
683
470-VE
NO
1
681
469-VE
NO
1
2
467-BA
468-VE
E37FA
E37GA
NO
B1
B2
A
257
29-VE
28-OR
NO
14
20
120
NO
15
120
441-BA
133
BJ
443-BA
E3FBA
440
BA
NO
F1
F2
F5
F3
597
743

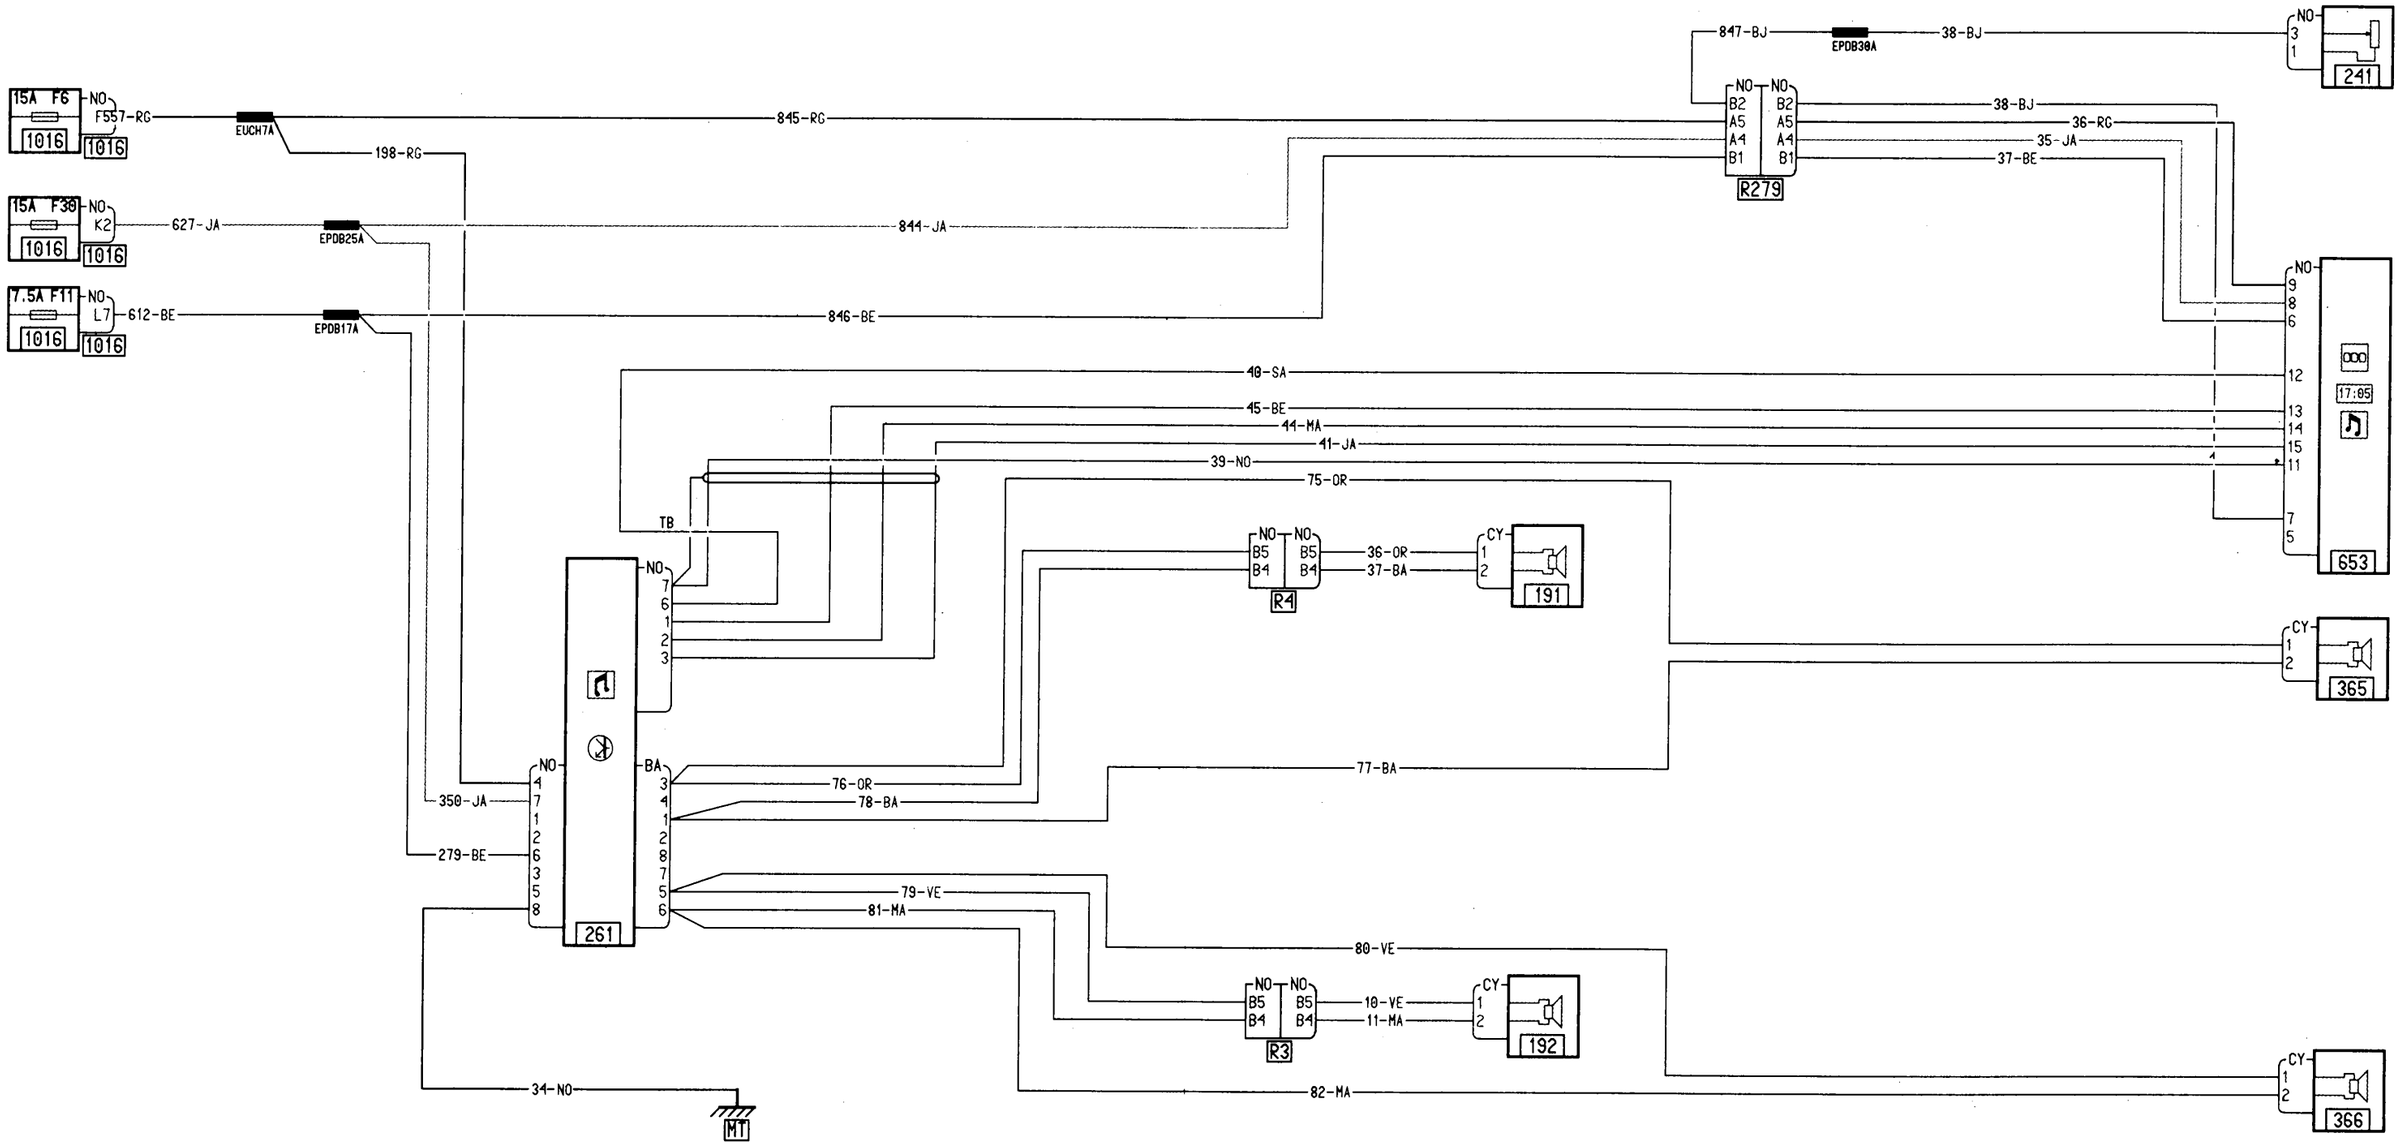
15A F6
1016
NO
F55
7-RG
1016
EUCH7A
198-RG
845-RG
15A F36
NO
K2
627-JA
EPDB25A
844-JA
7.5A F11
NO
L7
612-BE
EPDB17A
846-BE
847-BJ
EPDB30A
38-BJ
241
R279
36-RG
35-JA
37-BE
653
17:05
40-SA
45-BE
44-MA
41-JA
39-NO
75-OR
TB
261
R4
36-OR
37-BA
191
365
350-JA
279-BE
76-OR
78-BA
77-BA
79-VE
81-MA
80-VE
R3
10-VE
11-MA
192
34-NO
82-MA
MT
366

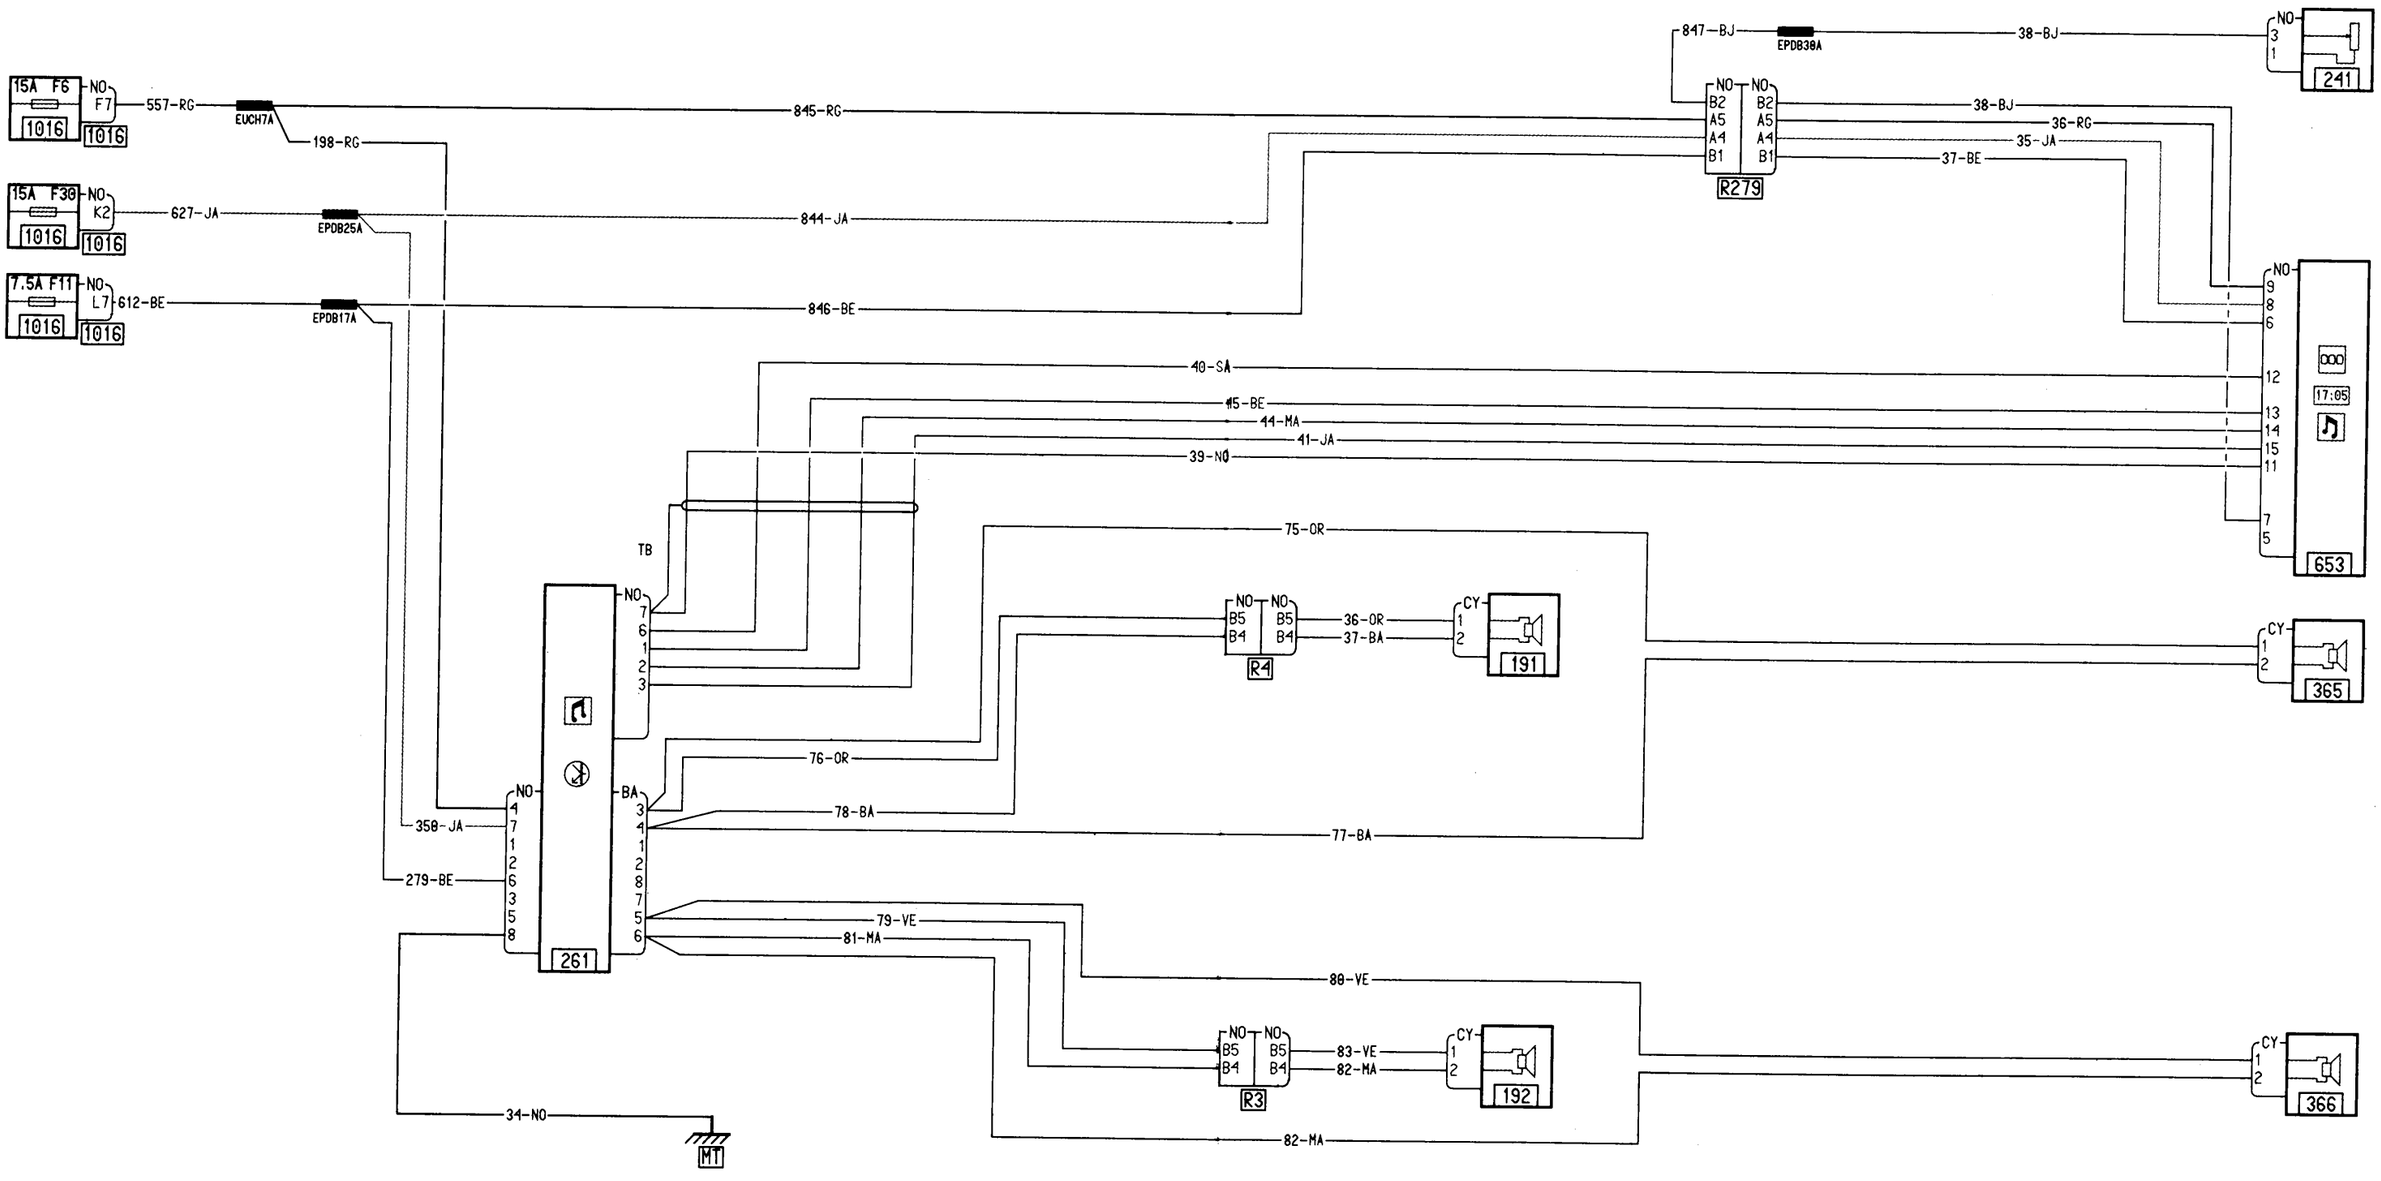
15A F6
1016
1016
NO
F7
557-RG
EUCH7A
198-RG
845-RG
15A F30
1016
1016
NO
K2
627-JA
EPDB25A
844-JA
7.5A F11
1016
1016
NO
L7
612-BE
EPDB17A
846-BE
847-BJ
EPDB38A
38-BJ
NO
3
1
241
NO
B2
A5
A4
B1
R279
NO
B2
A5
A4
B1
38-BJ
36-RG
35-JA
37-BE
NO
9
8
6
12
13
14
15
11
7
5
653
40-SA
15-BE
44-MA
41-JA
39-NO
75-OR
TB
NO
7
6
1
2
3
NO
B5
B4
R4
NO
B5
B4
36-OR
37-BA
CY
1
2
191
CY
1
2
365
76-OR
78-BA
77-BA
NO
4
7
1
2
6
3
5
8
261
BA
3
4
1
2
8
7
5
6
358-JA
279-BE
79-VE
81-MA
80-VE
NO
B5
B4
R3
NO
B5
B4
83-VE
82-MA
CY
1
2
192
CY
1
2
366
34-NO
MT
82-MA

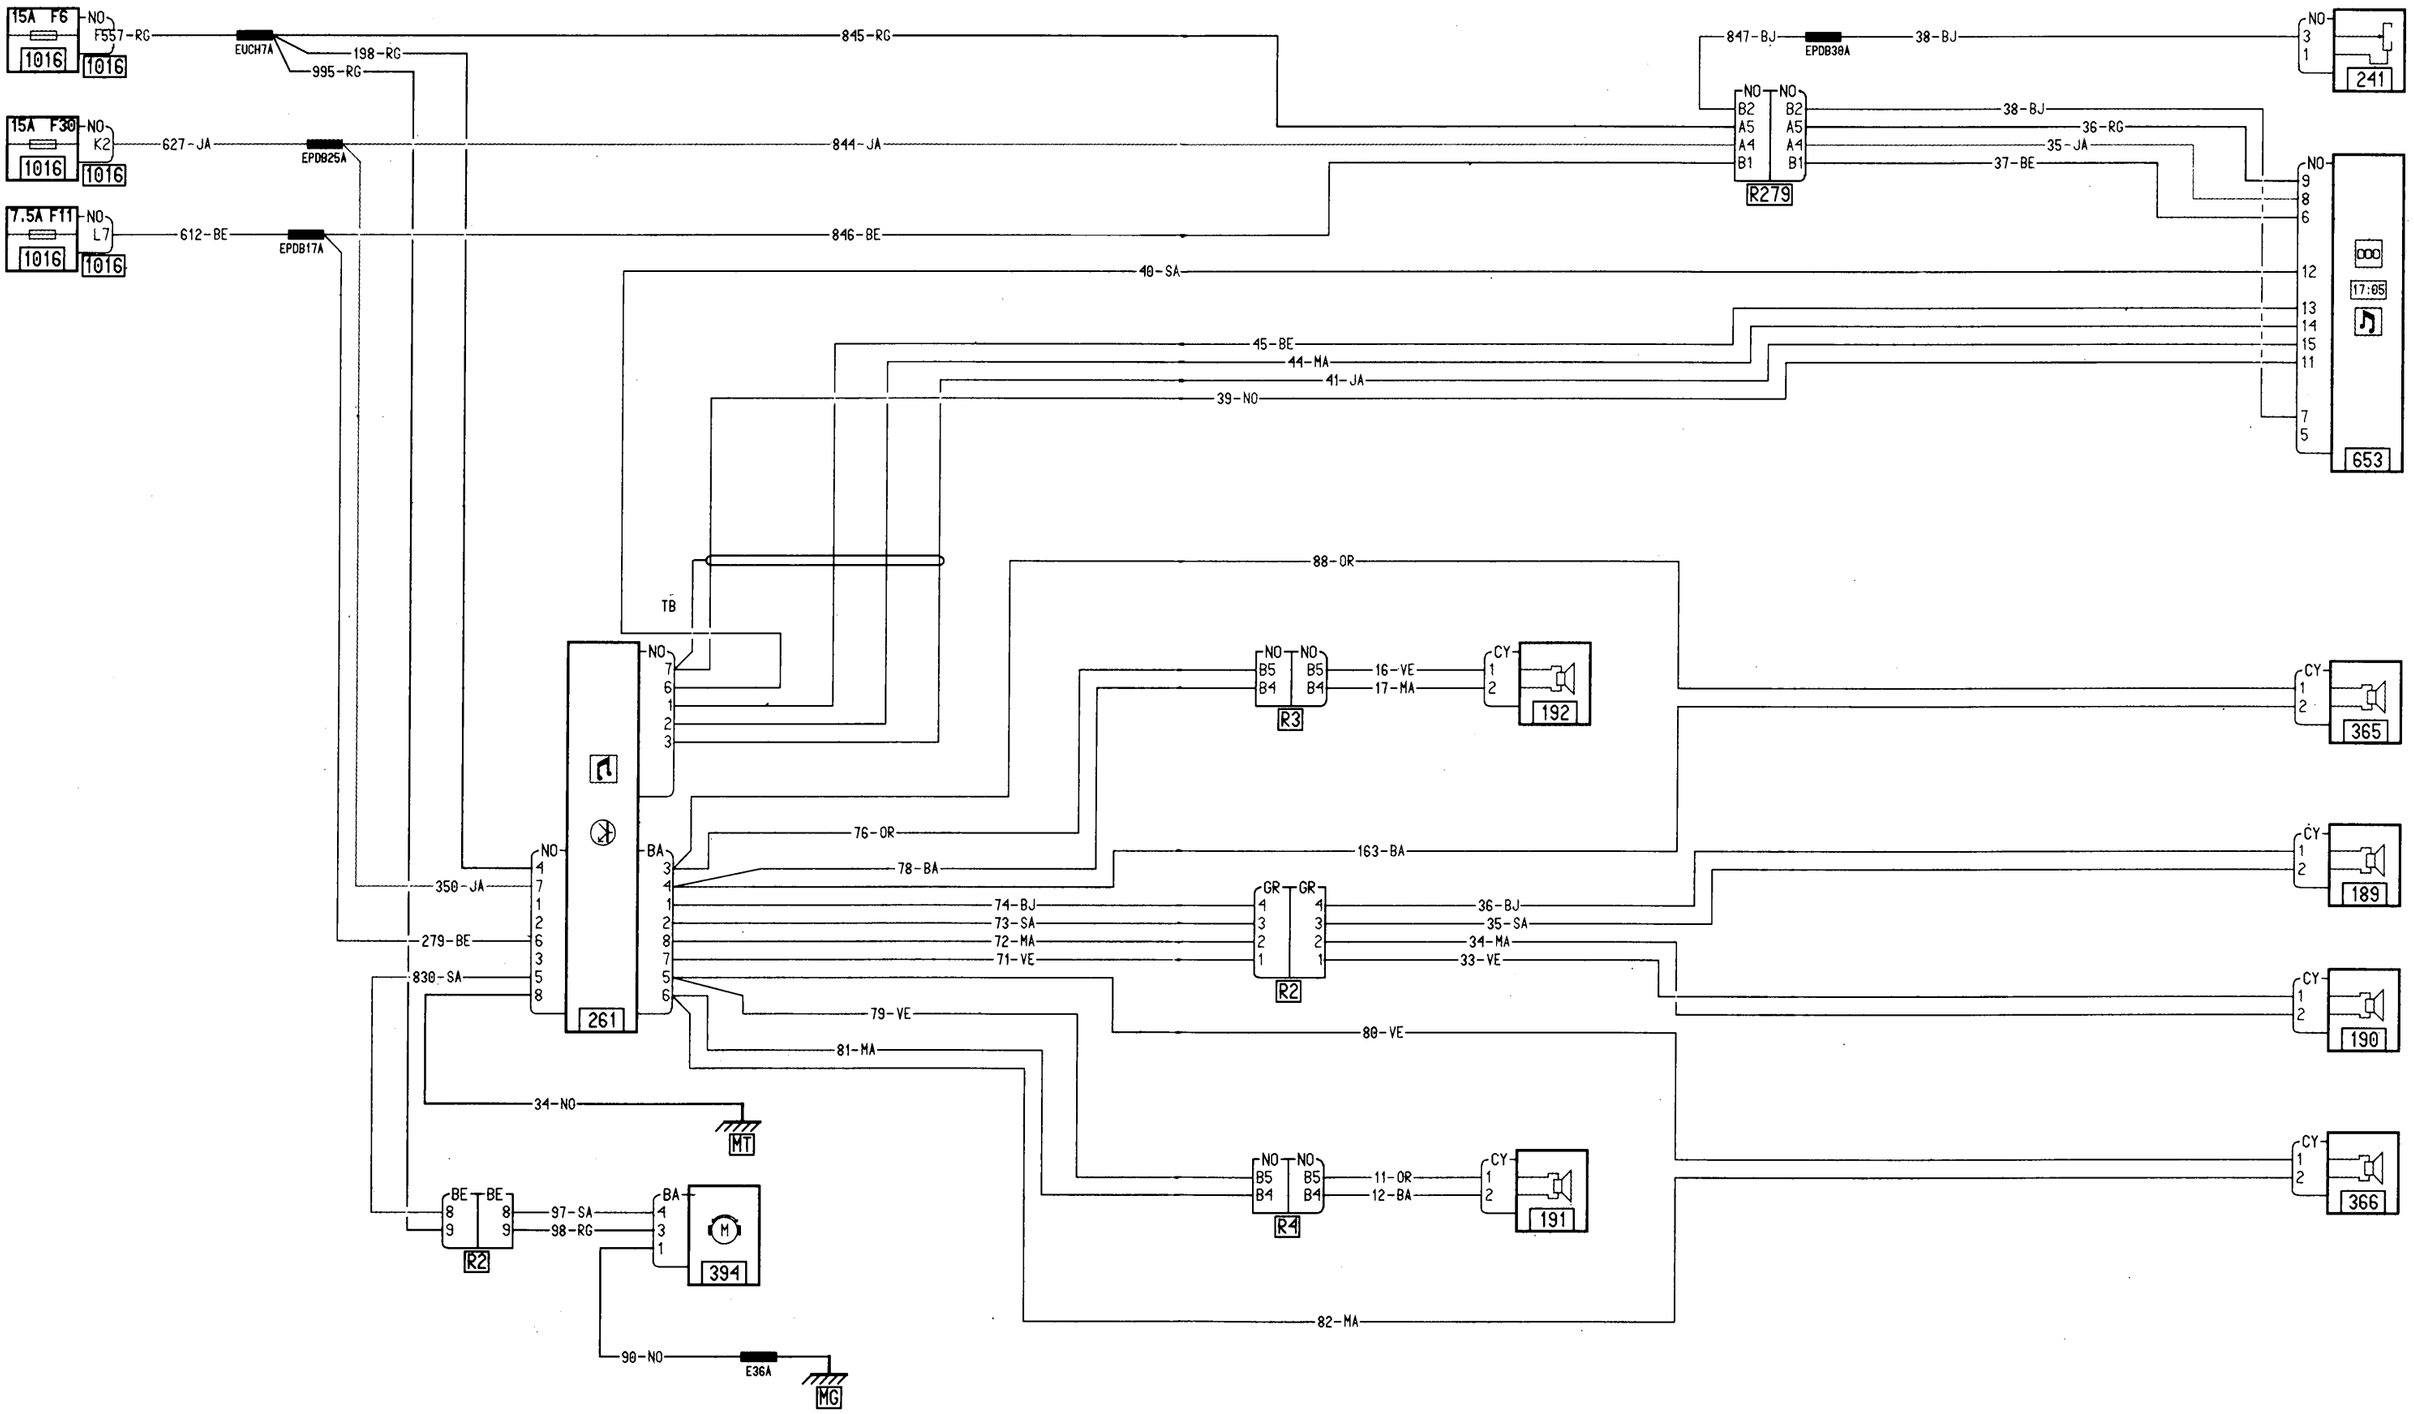
15A F6
1016
1016
NO
F557-RG
EUCH7A
198-RG
995-RG
845-RG
15A F30
1016
1016
NO
K2
627-JA
EPDB25A
844-JA
7.5A F11
1016
1016
NO
L7
612-BE
EPDB17A
846-BE
847-BJ
EPDB38A
38-BJ
NO
3
1
241
NO
B2
A5
A4
B1
NO
B2
A5
A4
B1
R279
38-BJ
36-RG
35-JA
37-BE
NO
9
8
6
12
13
14
15
11
7
5
653
17:05
40-SA
45-BE
44-MA
41-JA
39-NO
88-OR
TB
NO
7
6
1
2
3
NO
B5
B4
NO
B5
B4
R3
16-VE
17-MA
CY
1
2
192
CY
1
2
365
76-OR
163-BA
78-BA
NO
4
7
1
2
6
3
5
8
261
BA
3
4
1
2
8
7
5
6
350-JA
279-BE
830-SA
74-BJ
73-SA
72-MA
71-VE
GR
4
3
2
1
GR
4
3
2
1
R2
36-BJ
35-SA
34-MA
33-VE
CY
1
2
189
79-VE
80-VE
81-MA
CY
1
2
190
34-NO
MT
NO
B5
B4
NO
B5
B4
R4
11-OR
12-BA
CY
1
2
191
CY
1
2
366
BE
8
9
BE
8
9
R2
97-SA
98-RG
BA
4
3
1
M
394
82-MA
90-NO
E36A
MG

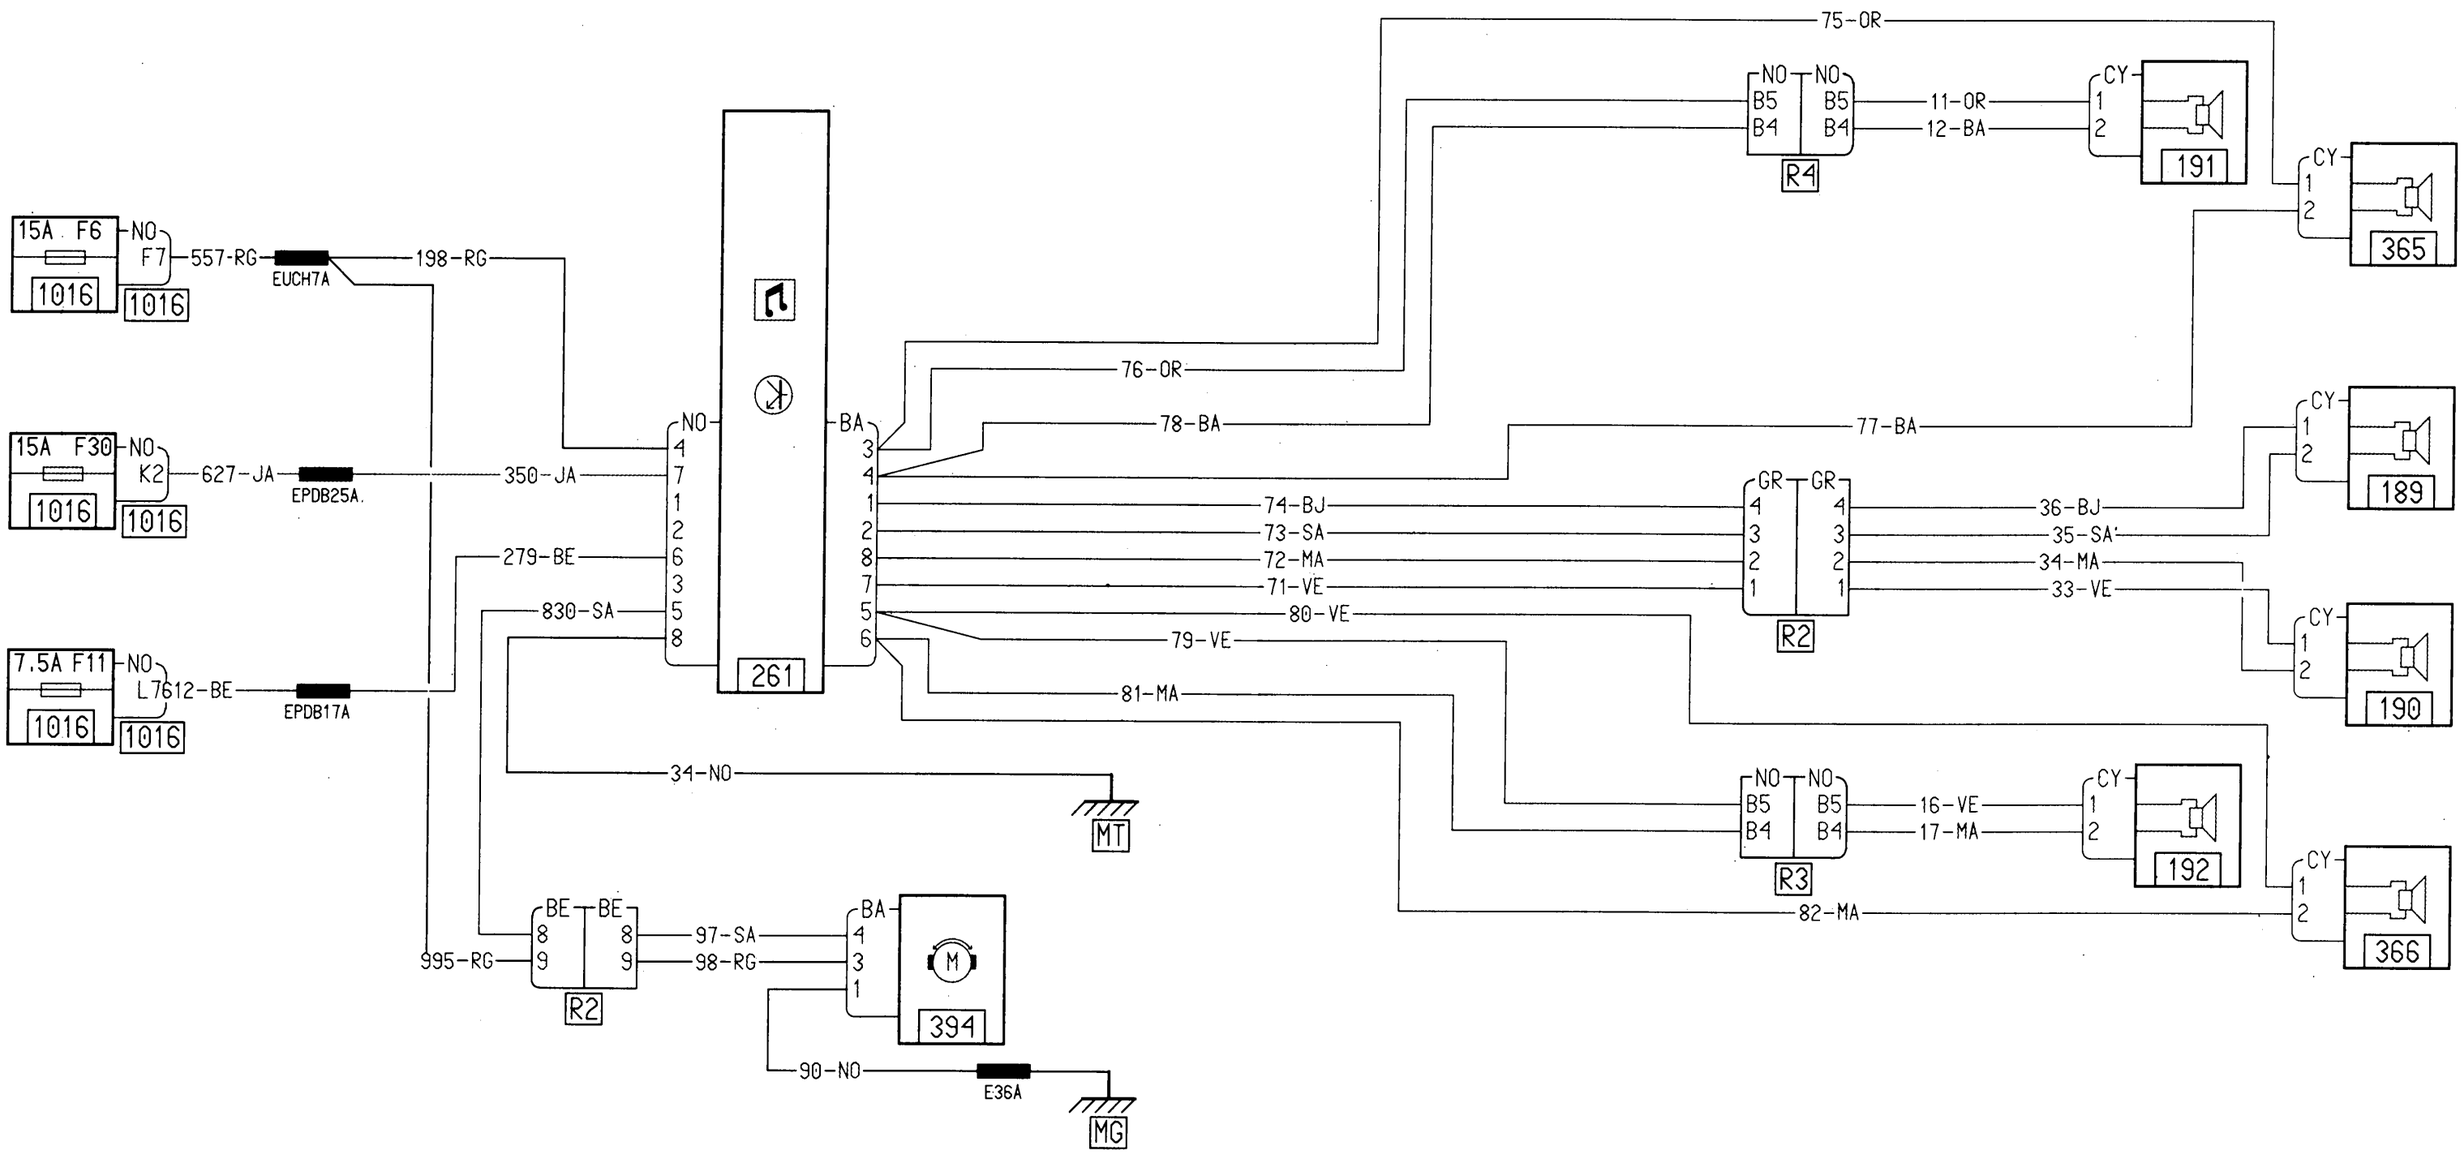
15A F6
1016
NO
F7
1016
557-RG
EUCH7A
198-RG
15A F30
1016
NO
K2
1016
627-JA
EPDB25A
350-JA
279-BE
830-SA
7.5A F11
1016
NO
L7612-BE
1016
EPDB17A
NO
4
7
1
2
6
3
5
8
261
BA
3
4
1
2
8
7
5
6
75-OR
76-OR
78-BA
77-BA
74-BJ
73-SA
72-MA
71-VE
80-VE
79-VE
81-MA
34-NO
MT
NO
B5
B4
R4
11-OR
12-BA
CY
1
2
191
365
189
GR
4
3
2
1
R2
36-BJ
35-SA
34-MA
33-VE
190
NO
B5
B4
R3
16-VE
17-MA
192
82-MA
366
BE
8
9
R2
995-RG
97-SA
98-RG
BA
4
3
1
M
394
90-NO
E36A
MG

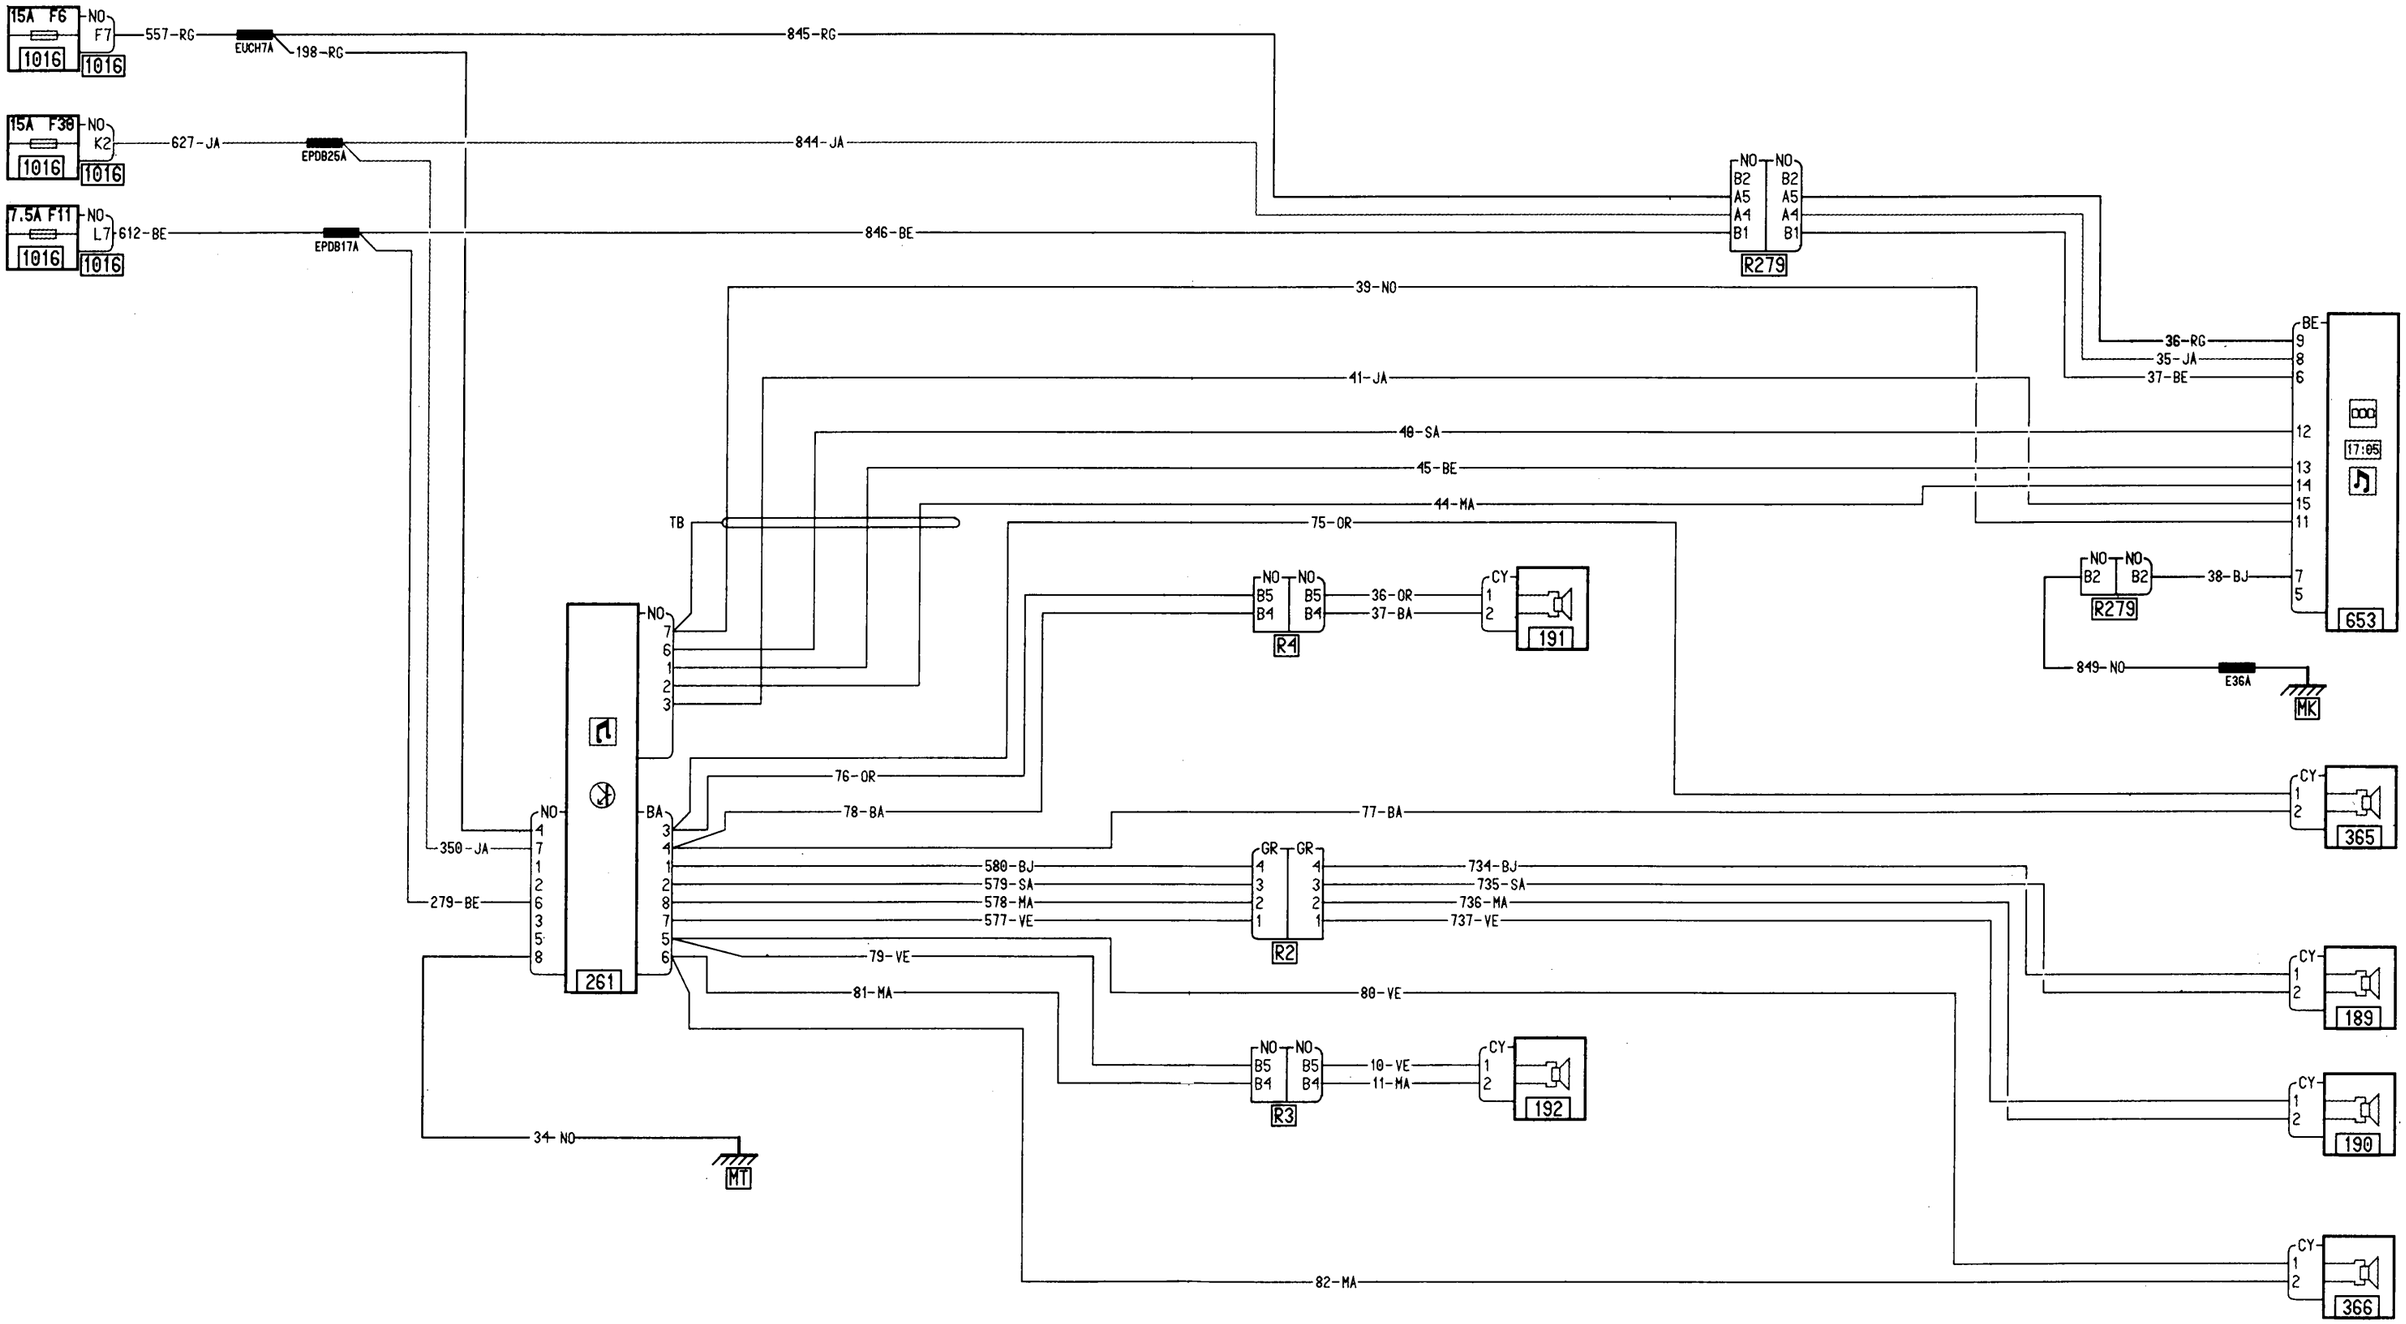
15A F6
1016
NO
F7
1016
557-RG
EUCH7A
198-RG
845-RG
15A F38
1016
NO
K2
1016
627-JA
EPDB25A
841-JA
7.5A F11
1016
NO
L7
1016
612-BE
EPDB17A
846-BE
NO
B2
A5
A1
B1
R279
NO
B2
A5
A1
B1
39-NO
41-JA
40-SA
45-BE
44-MA
36-RG
35-JA
37-BE
BE
9
8
6
12
13
14
15
11
17:05
653
TB
75-OR
NO
7
6
1
2
3
NO
B5
B4
R4
36-OR
37-BA
CY
1
2
191
NO
B2
R279
38-BJ
7
5
849-NO
E36A
MK
76-OR
78-BA
77-BA
CY
1
2
365
NO
4
7
1
2
6
3
5
8
261
BA
3
4
1
2
8
7
5
6
350-JA
279-BE
580-BJ
579-SA
578-MA
577-VE
GR
4
3
2
1
R2
GR
4
3
2
1
734-BJ
735-SA
736-MA
737-VE
79-VE
81-MA
80-VE
CY
1
2
189
NO
B5
B4
R3
10-VE
11-MA
CY
1
2
192
CY
1
2
190
34-NO
MT
82-MA
CY
1
2
366

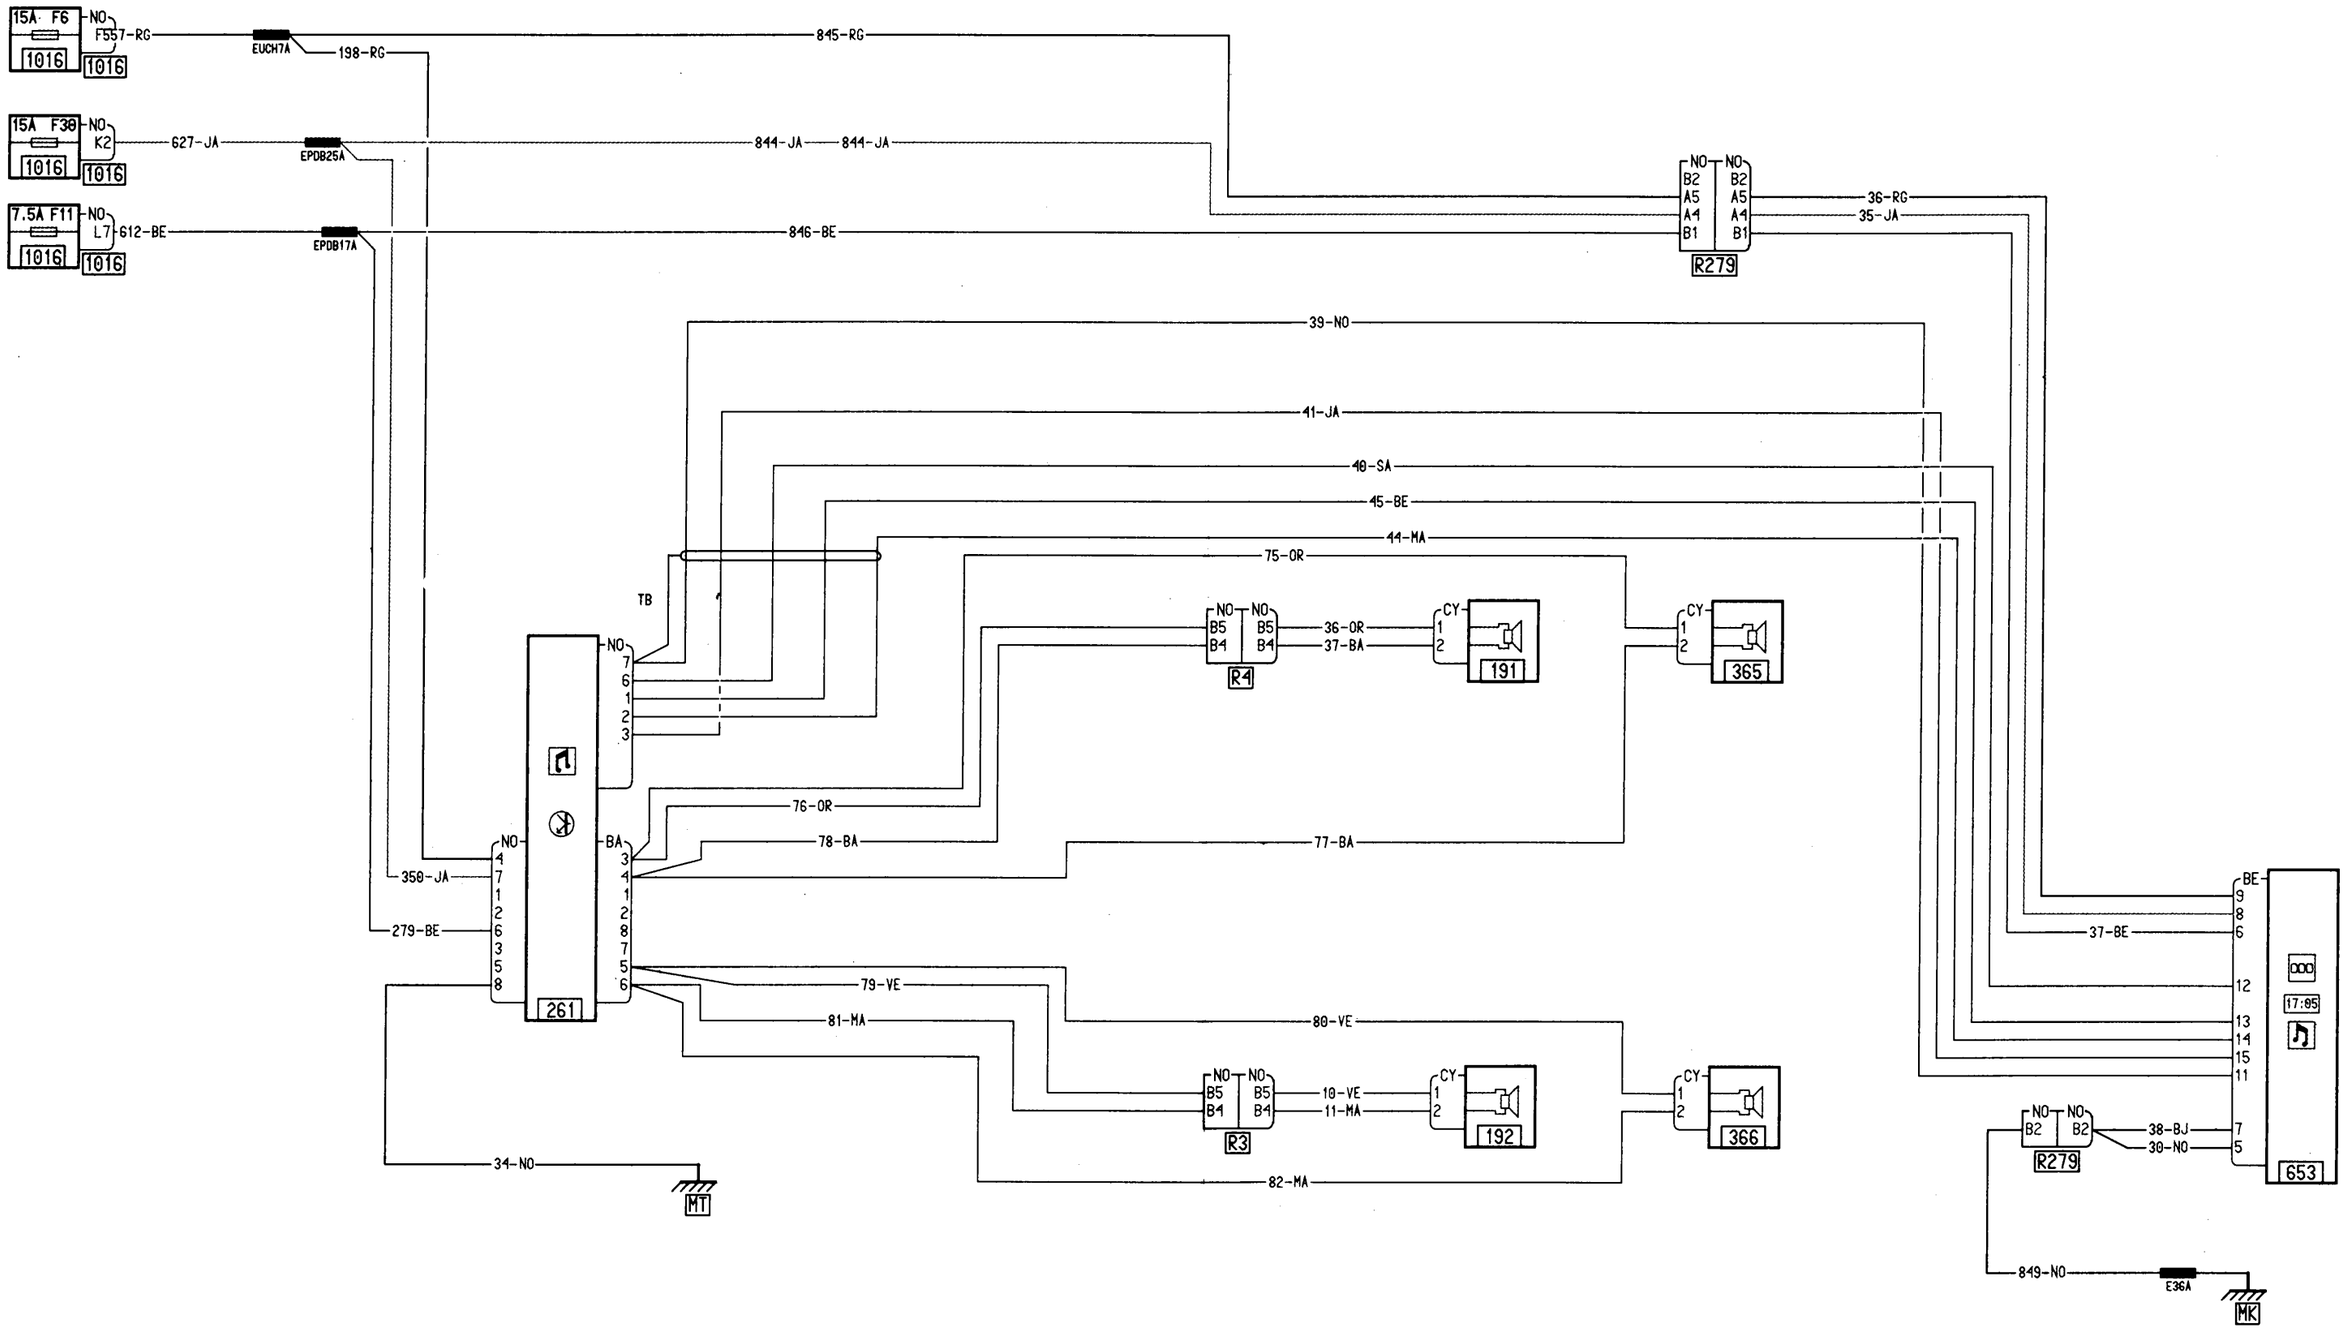
15A F6
1016
NO
F557-RG
1016
EUCH7A
198-RG
845-RG
15A F38
NO
K2
627-JA
1016
EPDB25A
844-JA
844-JA
7.5A F11
NO
L7
612-BE
1016
EPDB17A
846-BE
NO
B2
A5
A1
B1
R279
36-RG
35-JA
39-NO
41-JA
40-SA
45-BE
44-MA
75-OR
TB
NO
7
6
1
2
3
NO
B5
B4
R4
36-OR
37-BA
CY
1
2
191
365
76-OR
78-BA
77-BA
NO
4
7
1
2
6
3
5
8
350-JA
279-BE
BA
3
4
1
2
8
7
5
6
261
79-VE
81-MA
80-VE
10-VE
11-MA
R3
192
366
34-NO
MT
82-MA
BE
9
8
6
12
13
14
15
11
37-BE
17:05
38-BJ
30-NO
653
849-NO
E36A
MK

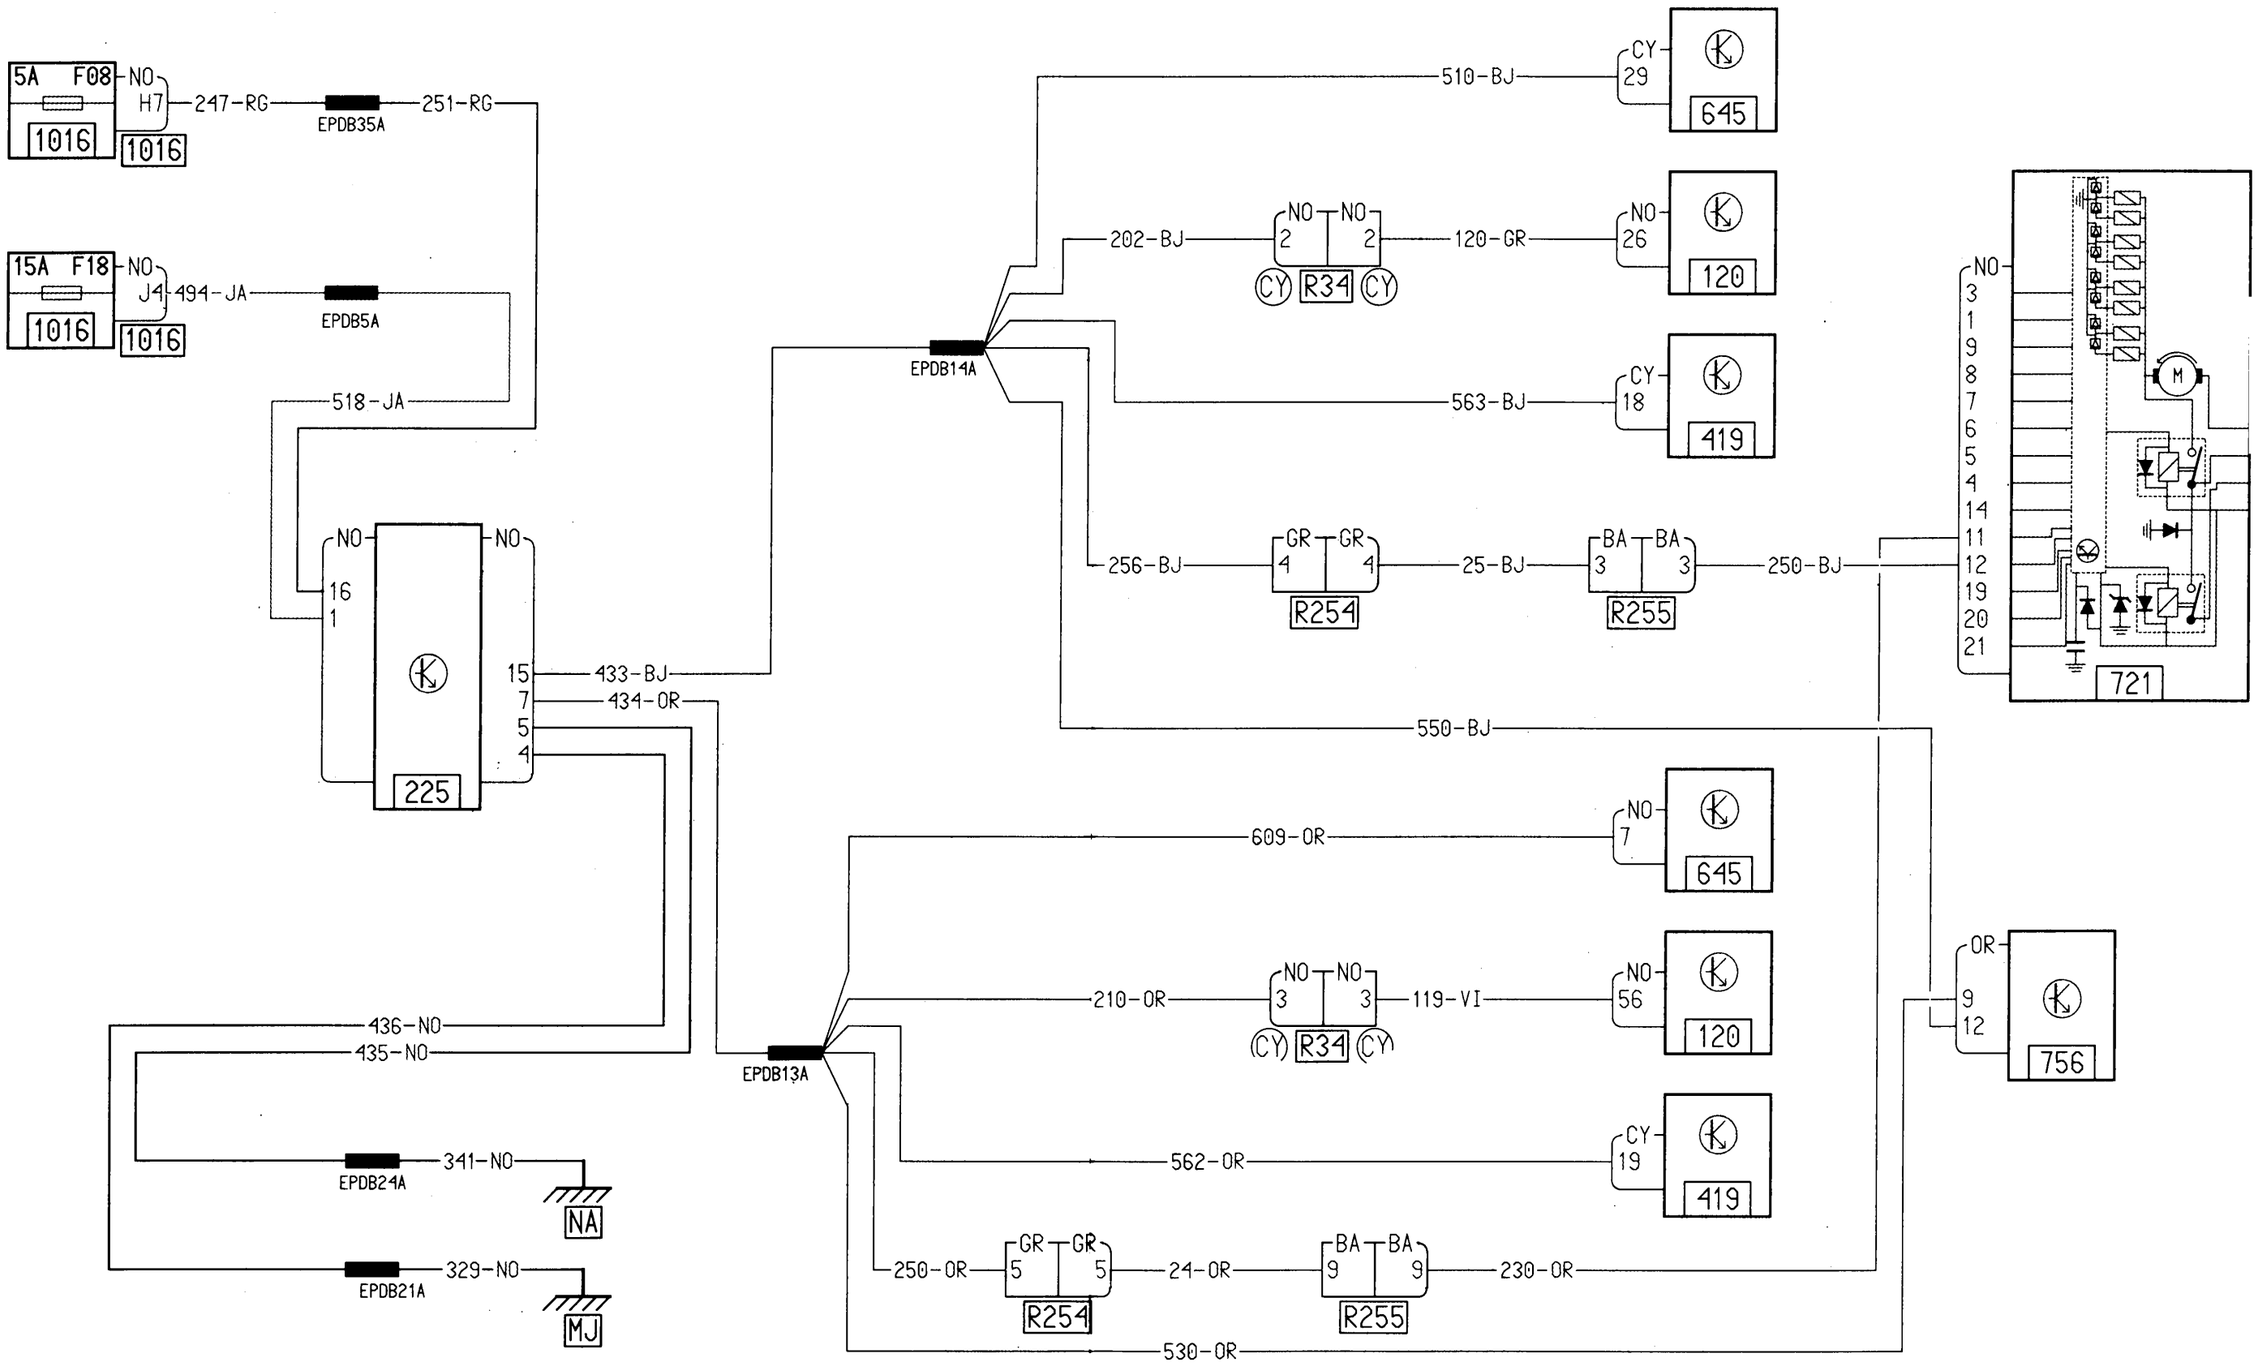
5A F08
NO
H7
1016
1016
247-RG
EPDB35A
251-RG
15A F18
NO
J4
1016
1016
494-JA
EPDB5A
518-JA
NO
NO
16
1
225
15
7
5
4
433-BJ
434-OR
436-NO
435-NO
EPDB24A
341-NO
NA
EPDB21A
329-NO
MJ
EPDB14A
EPDB13A
510-BJ
CY
29
645
202-BJ
NO
2
NO
2
CY
R34
CY
120-GR
NO
26
120
563-BJ
CY
18
419
256-BJ
GR
4
GR
4
R254
25-BJ
BA
3
BA
3
R255
250-BJ
550-BJ
609-OR
NO
7
645
210-OR
NO
3
NO
3
CY
R34
CY
119-VI
NO
56
120
562-OR
CY
19
419
250-OR
GR
5
GR
5
R254
24-OR
BA
9
BA
9
R255
230-OR
530-OR
NO
3
1
9
8
7
6
5
4
14
11
12
19
20
21
721
OR
9
12
756

OBD2 DIAGNOSTICS SOCKET

E64/E2/F8Q622

X64

00

5A F08 NO — H7 — 247-RG — EPDB35A — 251-RG — 1016 — 1016

15A F18 NO — J4 — 494-JA — EPDB5A — 518-JA — 1016 — 1016

NO 16 1 — 225 — NO 15 7 5 4

15 — 433-BJ

7 — 434-OR

5

4

436-NO

435-NO

EPDB24A — 341-NO — NA

EPDB21A — 329-NO — MJ

EPDB14A

610-BJ — CY 29 — 645

202-BJ — NO 2 — NO 2 — CY R34 CY — 94-GR — HL12A — 240-GR — NO 17 — 119

115-GR — NO 26 — 120

563-BJ — CY 18 — 419

256-BJ — BA 3 — BA 3 — R36 — 240-BJ — GR 3 — GR 3 — R314 — 250-BJ

550-BJ

NO 3 1 9 8 7 6 5 4 14 11 12 19 20 21 — M — 721

609-OR — NO — 645

EPDB13A

210-OR — NO 3 — NO 3 — CY R34 CY — 93-VI — HK12A — 239-BA — NO 18 — 119

114-VI — NO 56 — 120

562-OR — CY 19 — 419

530-OR

250-OR — BA 9 — BA 9 — R36 — 220-OR — GR 2 — GR 2 — R314 — 230-OR

OR 9 12 — 756

OBD2 DIAGNOSTICS SOCKET

(S64/E1/DG),(V25/E1/ABS)

X64

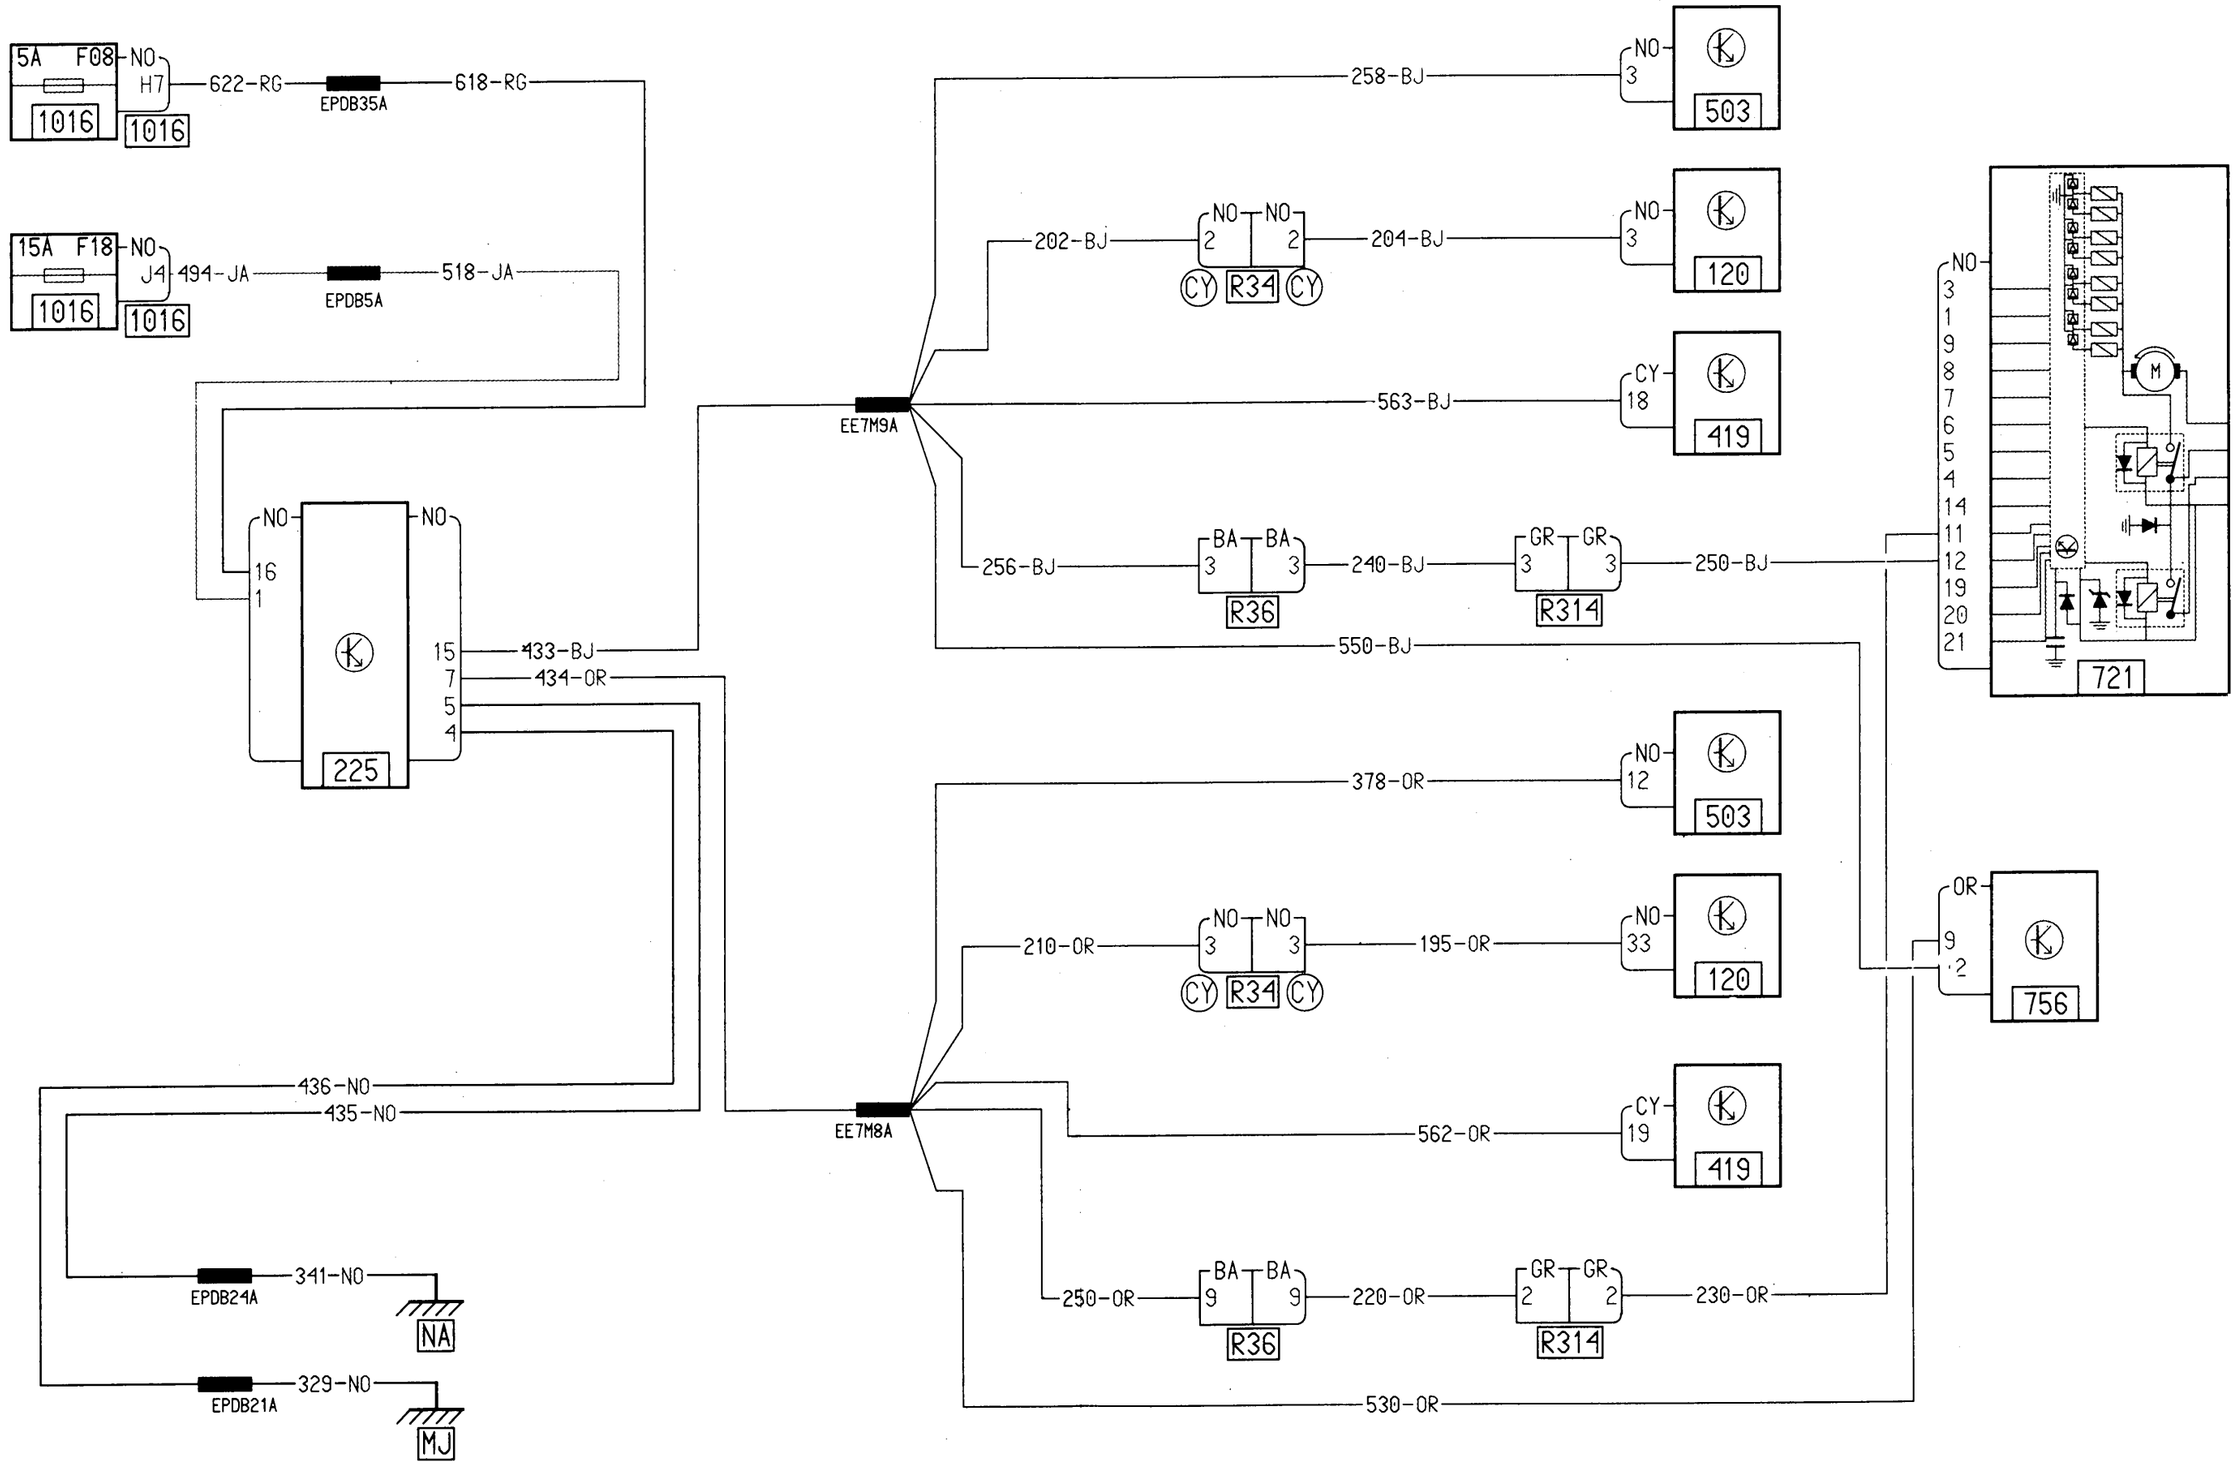

OBD2 DIAGNOSTICS SOCKET

(B64/E2),(K25/E2),(L64/K4M700),(D64/E2)

X64
00

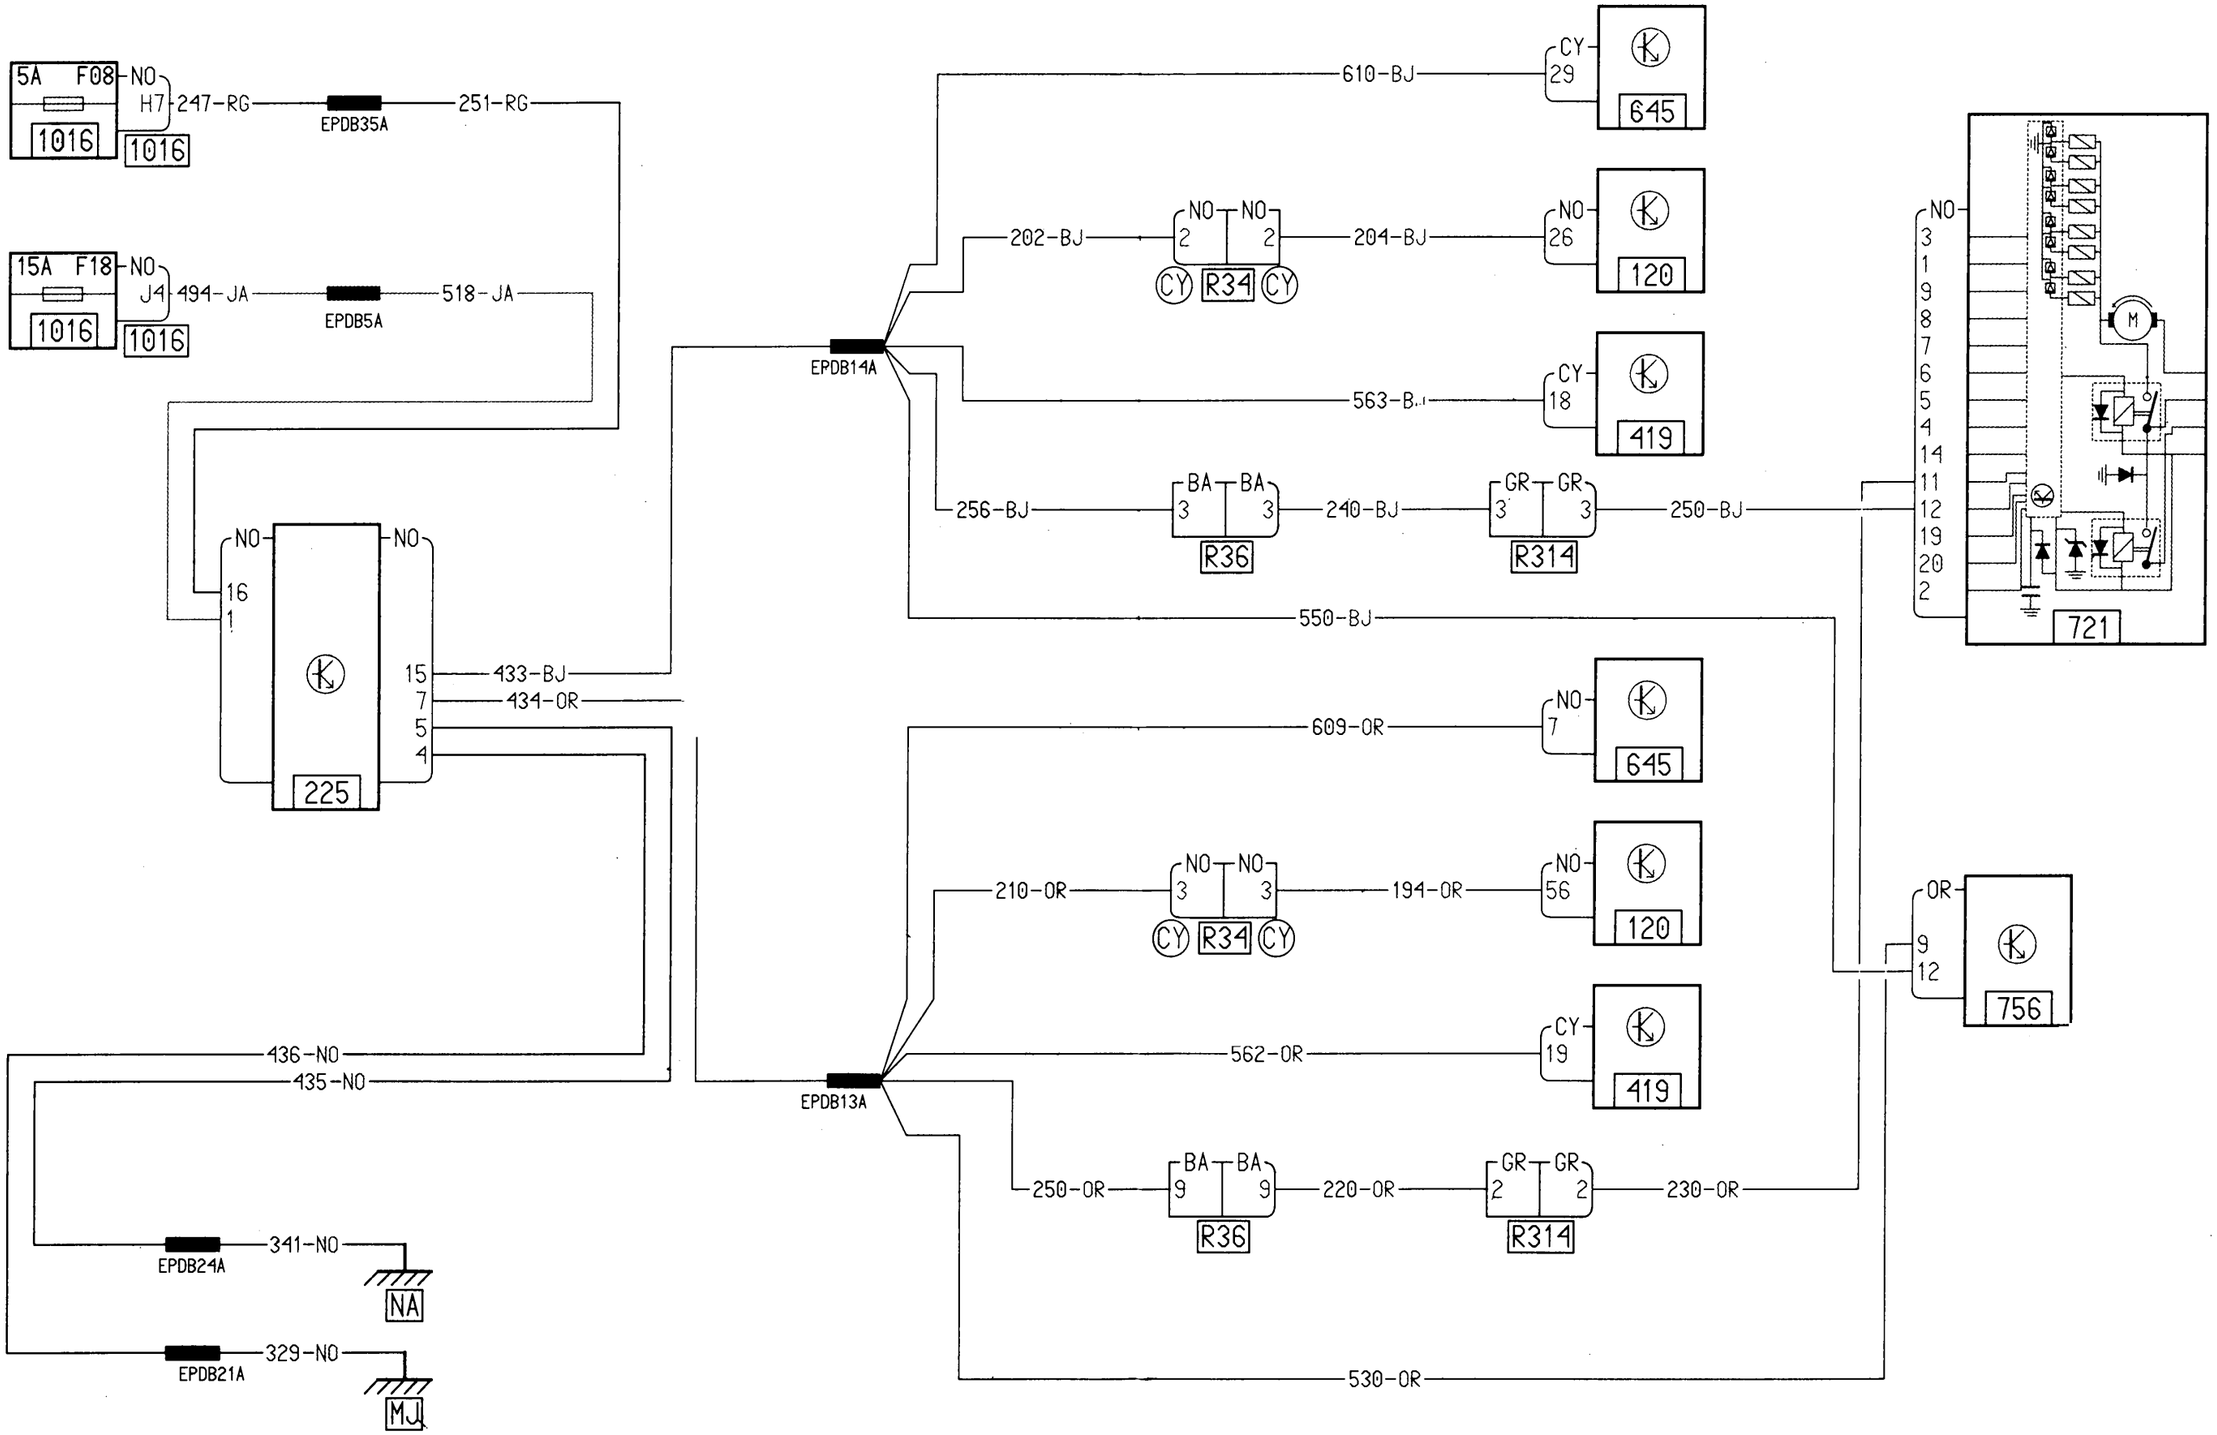

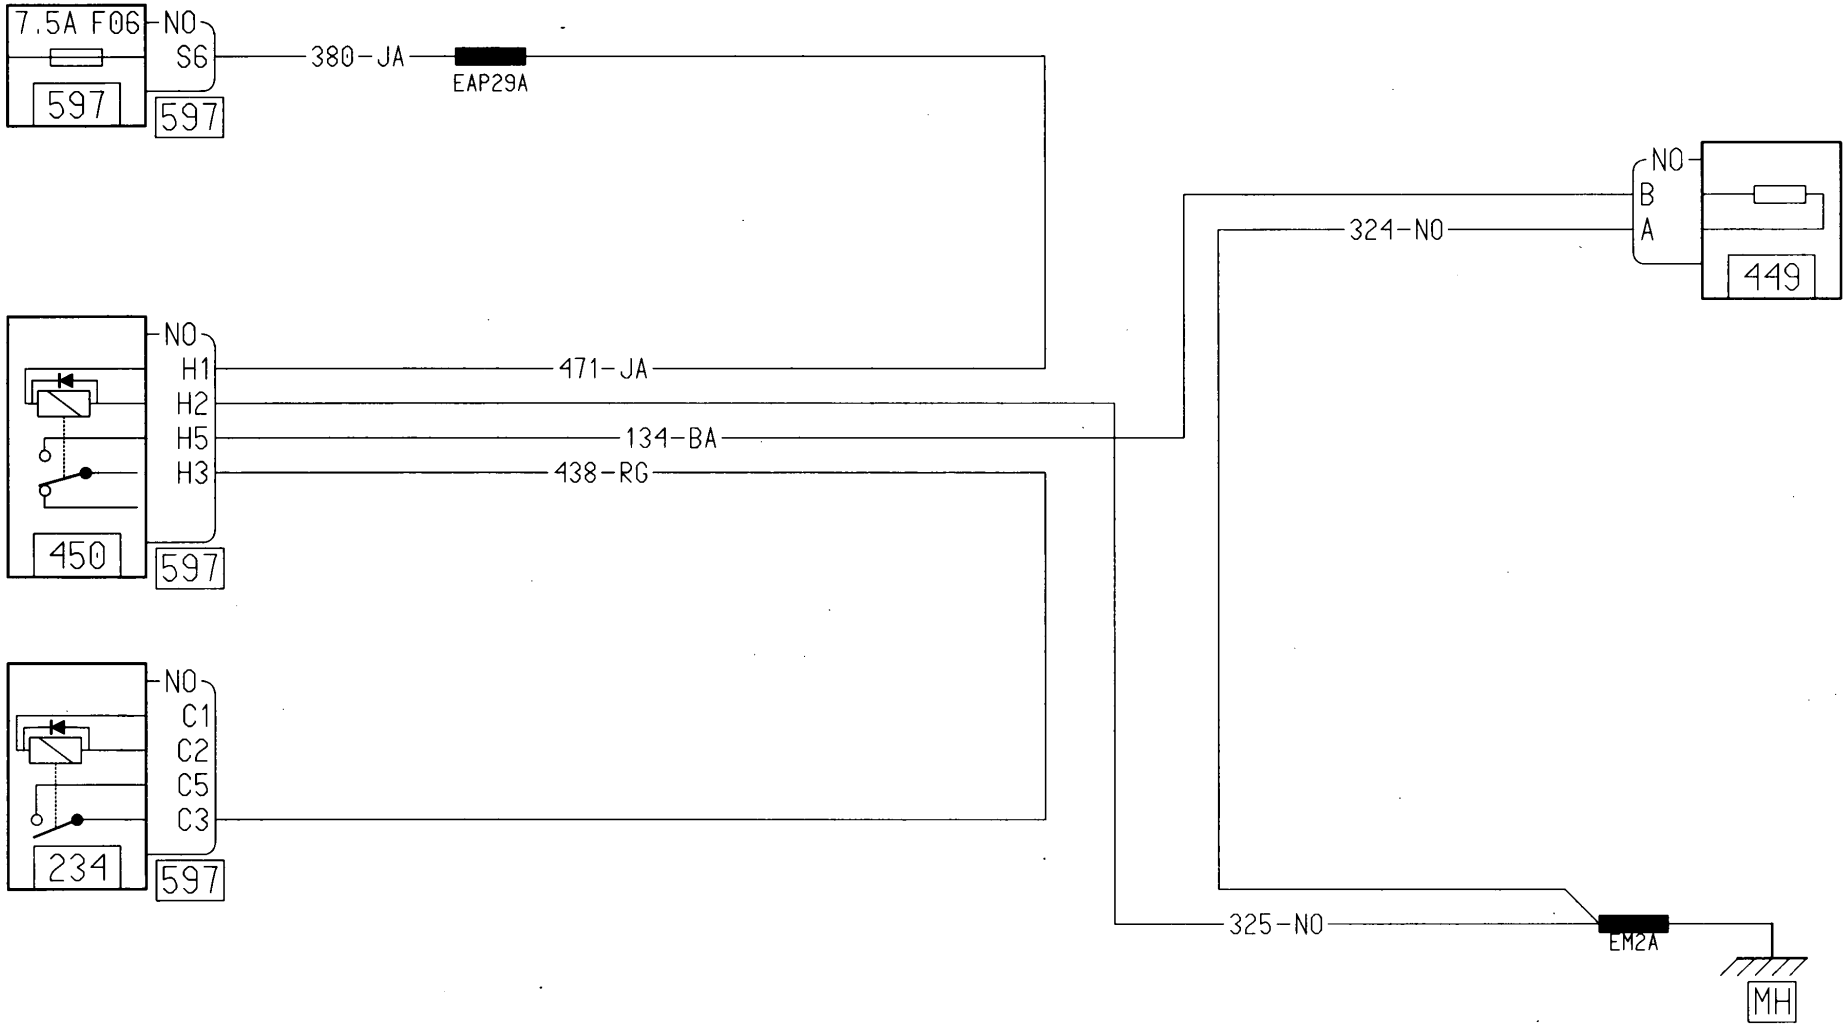
7.5A F06
NO
S6
597
597
380-JA
EAP29A
NO
B
A
324-NO
449
NO
H1
H2
H5
H3
471-JA
134-BA
438-RG
450
597
NO
C1
C2
C5
C3
234
597
325-NO
EM2A
MH

DIESEL FILTER HEATER

V25/E1/F8Q790/CA

X64
00

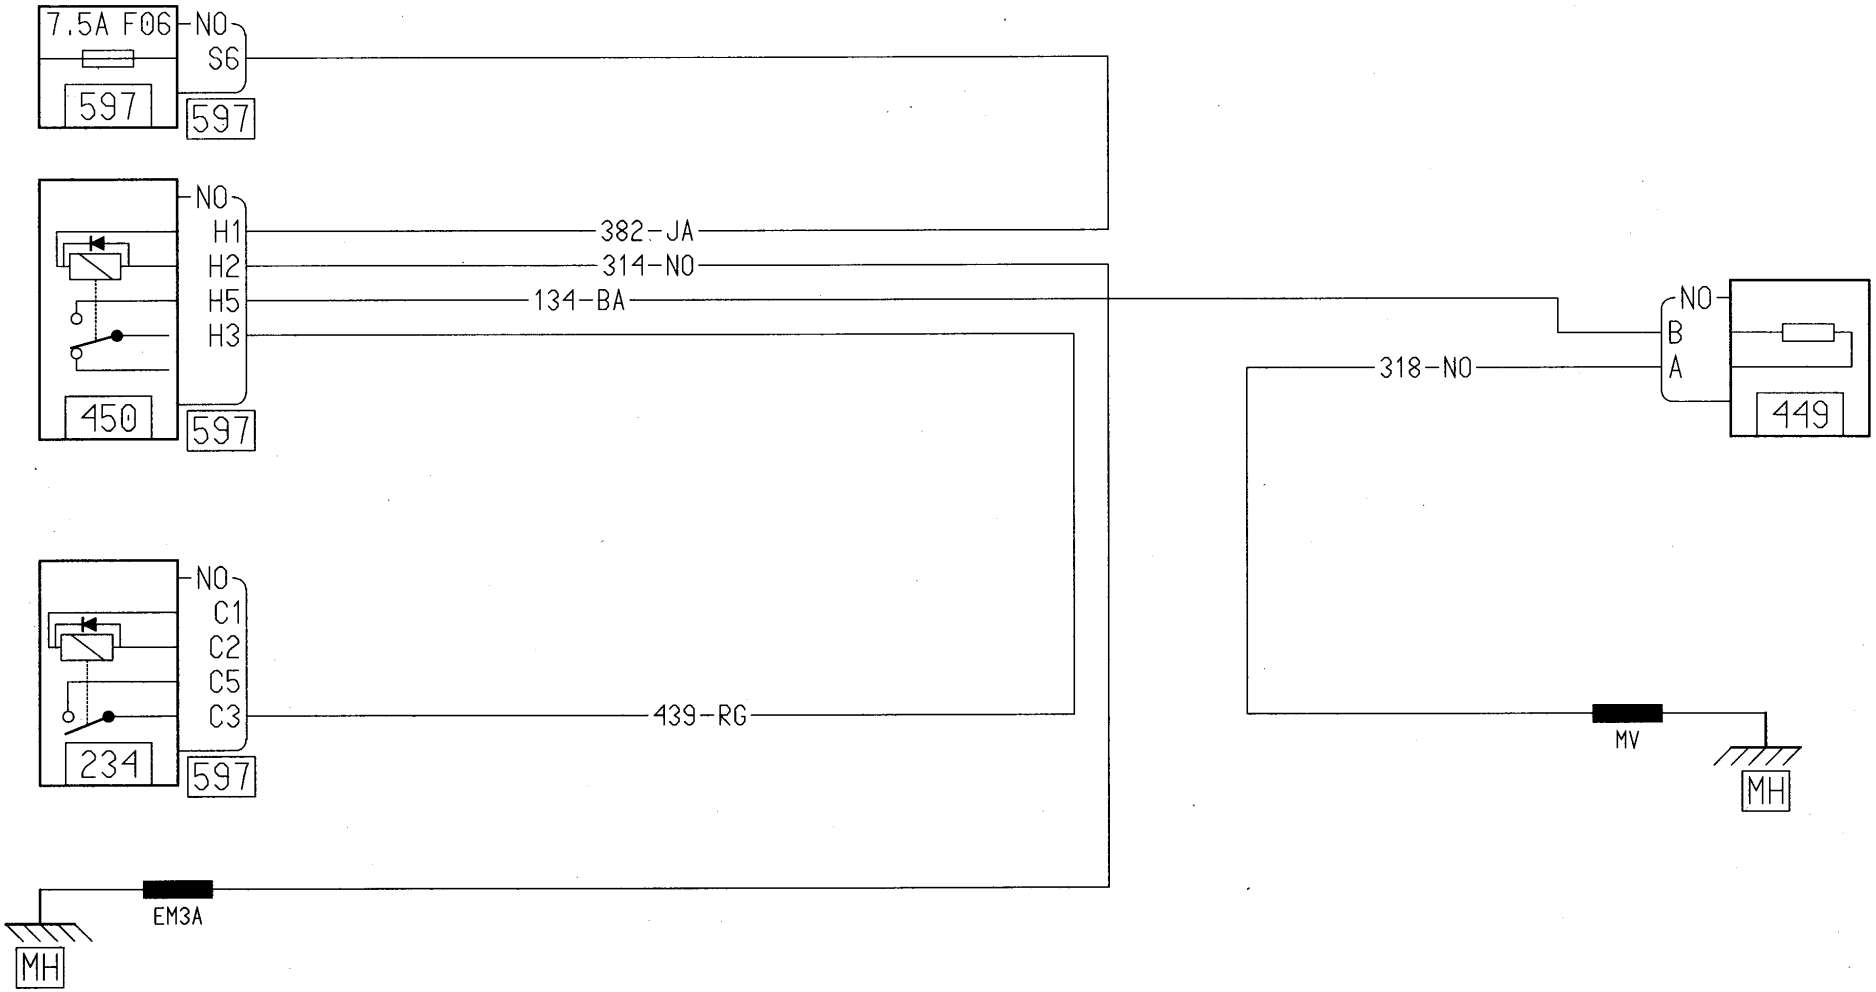

DIESEL FILTER HEATER

B64,L64/F9Q736/CA/MERCOS

X64
00

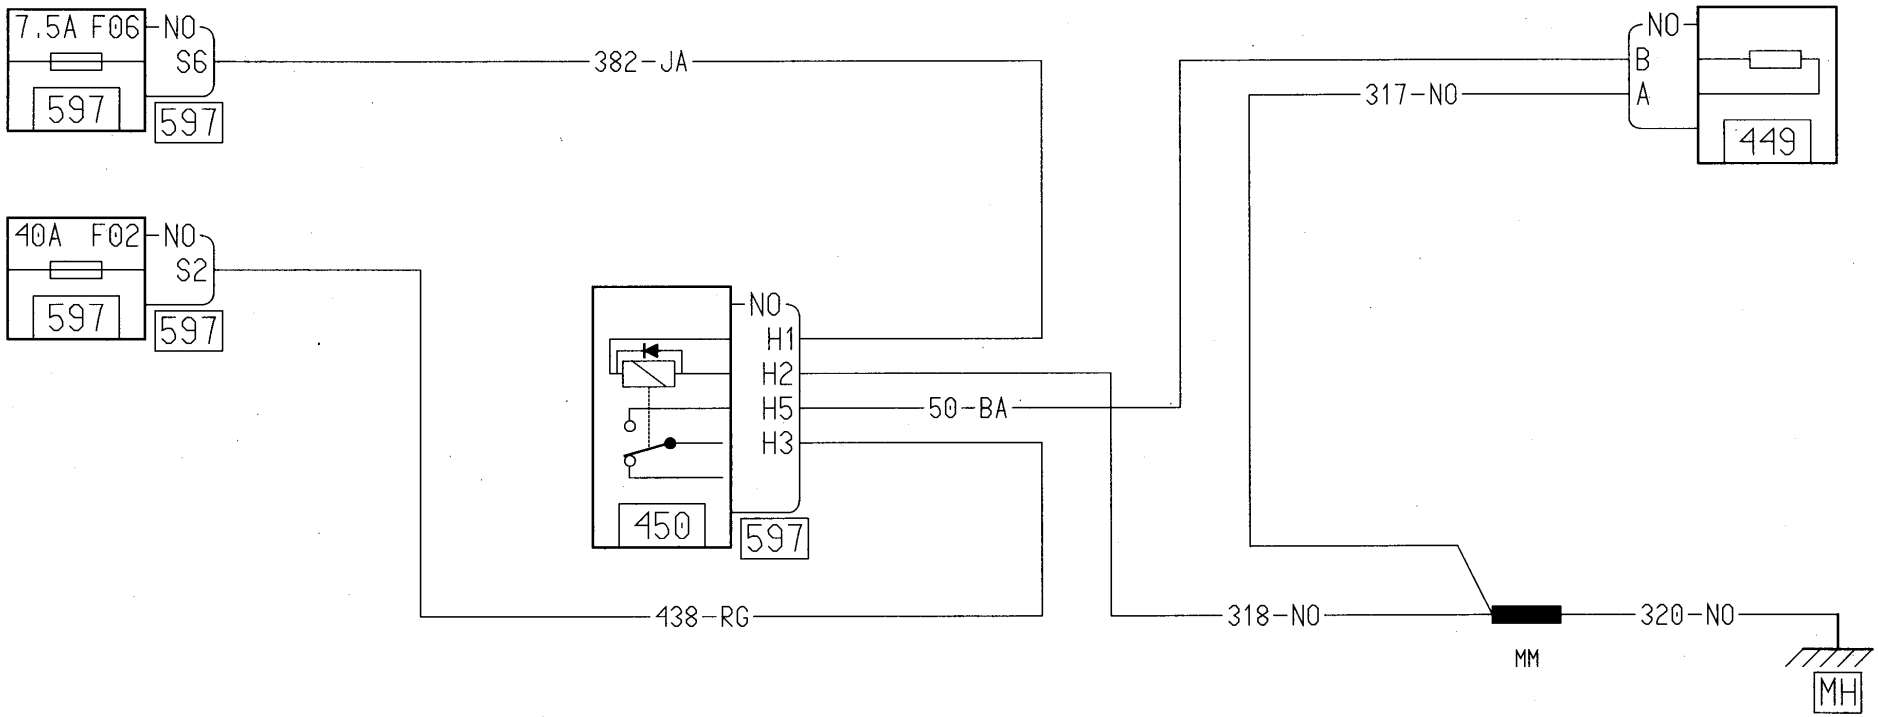

DIESEL FILTER HEATER

L64/F9Q736/SSABS/CA/STHPLG/TURKEY/BVM5

X64
00

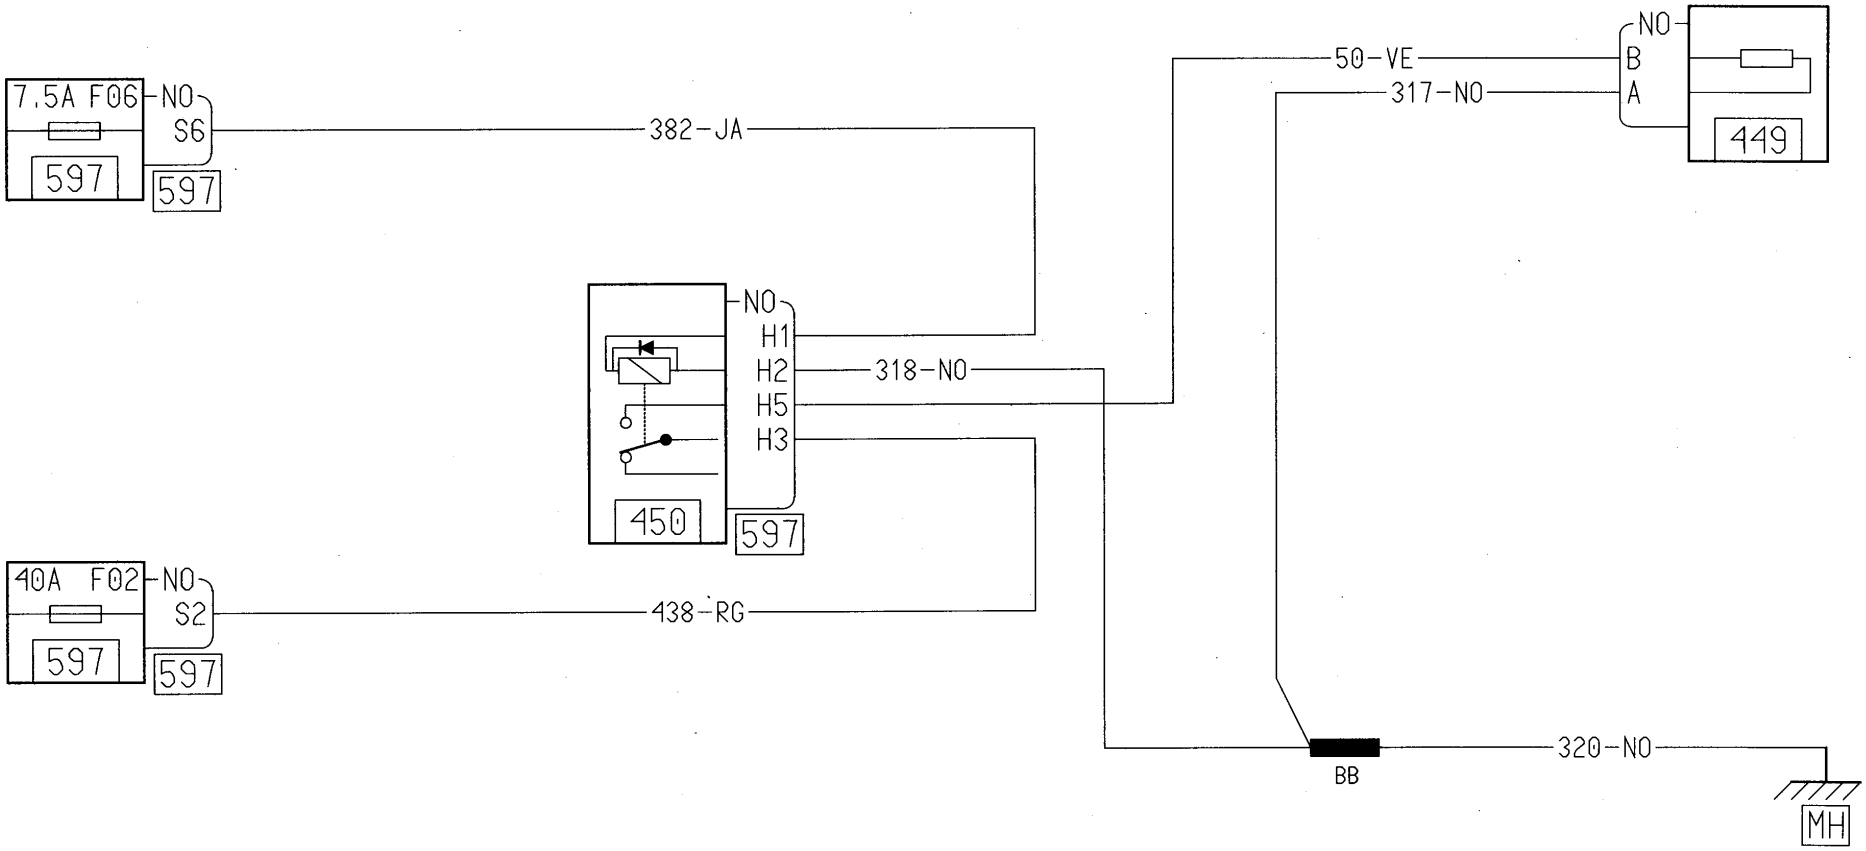

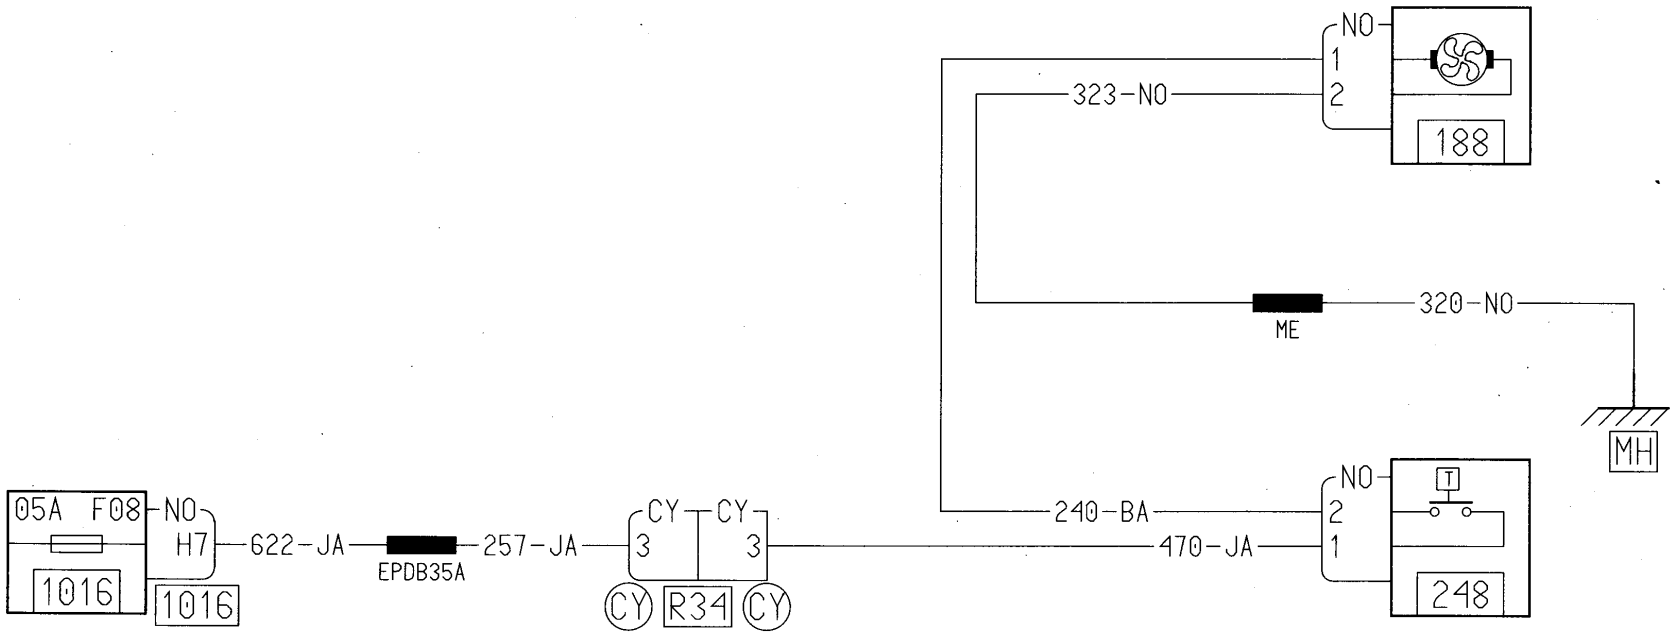
NO
1
2
323-NO
188
ME
320-NO
MH
05A F08
NO
H7
1016
1016
622-JA
EPDB35A
257-JA
CY
3
CY
3
CY
R34
CY
240-BA
470-JA
NO
2
1
T
248

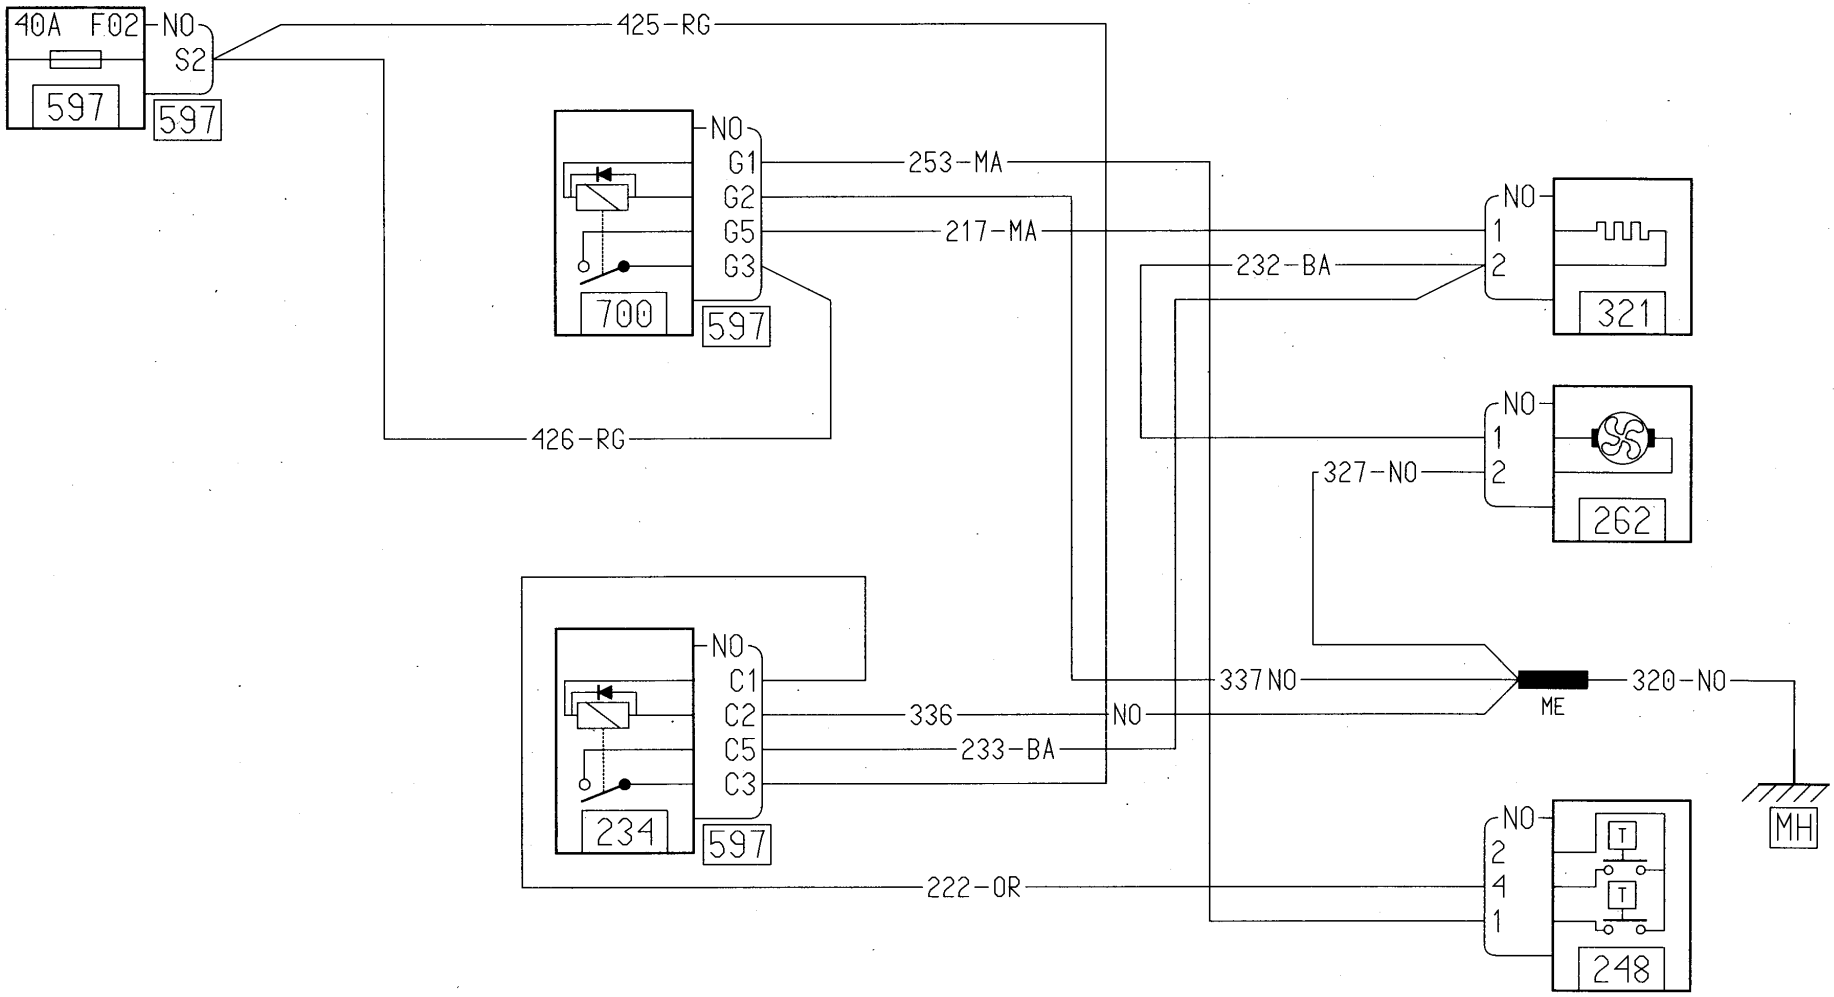
40A F02
NO
S2
597
597
425-RG
NO
G1
G2
G5
G3
700
597
253-MA
217-MA
232-BA
426-RG
NO
1
2
321
NO
1
2
262
327-NO
NO
C1
C2
C5
C3
234
597
336
233-BA
NO
337 NO
ME
320-NO
MH
222-OR
NO
2
4
1
248

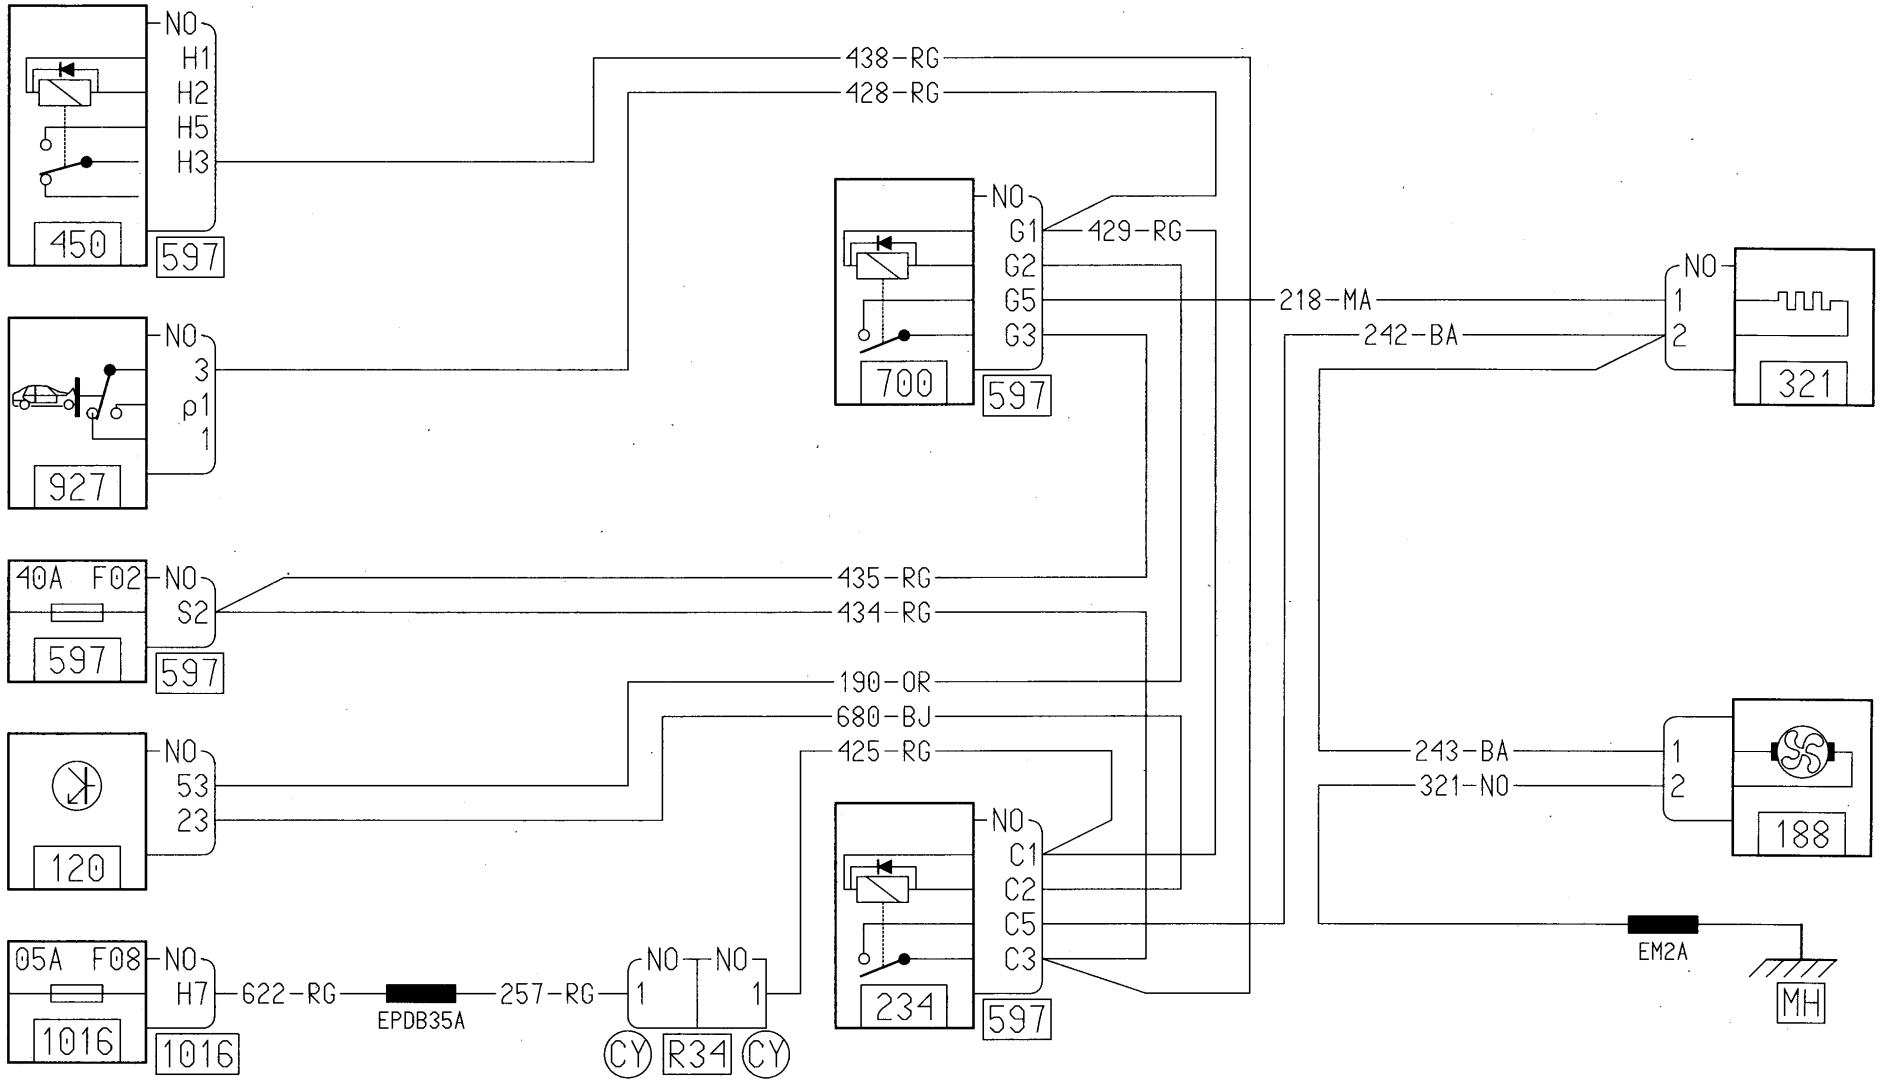
NO
H1
H2
H5
H3
450
597
438-RG
428-RG
NO
3
p1
1
927
NO
G1
G2
G5
G3
700
597
429-RG
218-MA
242-BA
NO
1
2
321
40A F02
NO
S2
597
597
435-RG
434-RG
190-OR
680-BJ
425-RG
NO
53
23
120
NO
C1
C2
C5
C3
234
597
243-BA
321-NO
1
2
188
EM2A
MH
05A F08
NO
H7
1016
1016
622-RG
EPDB35A
257-RG
NO
1
NO
1
CY
R34
CY

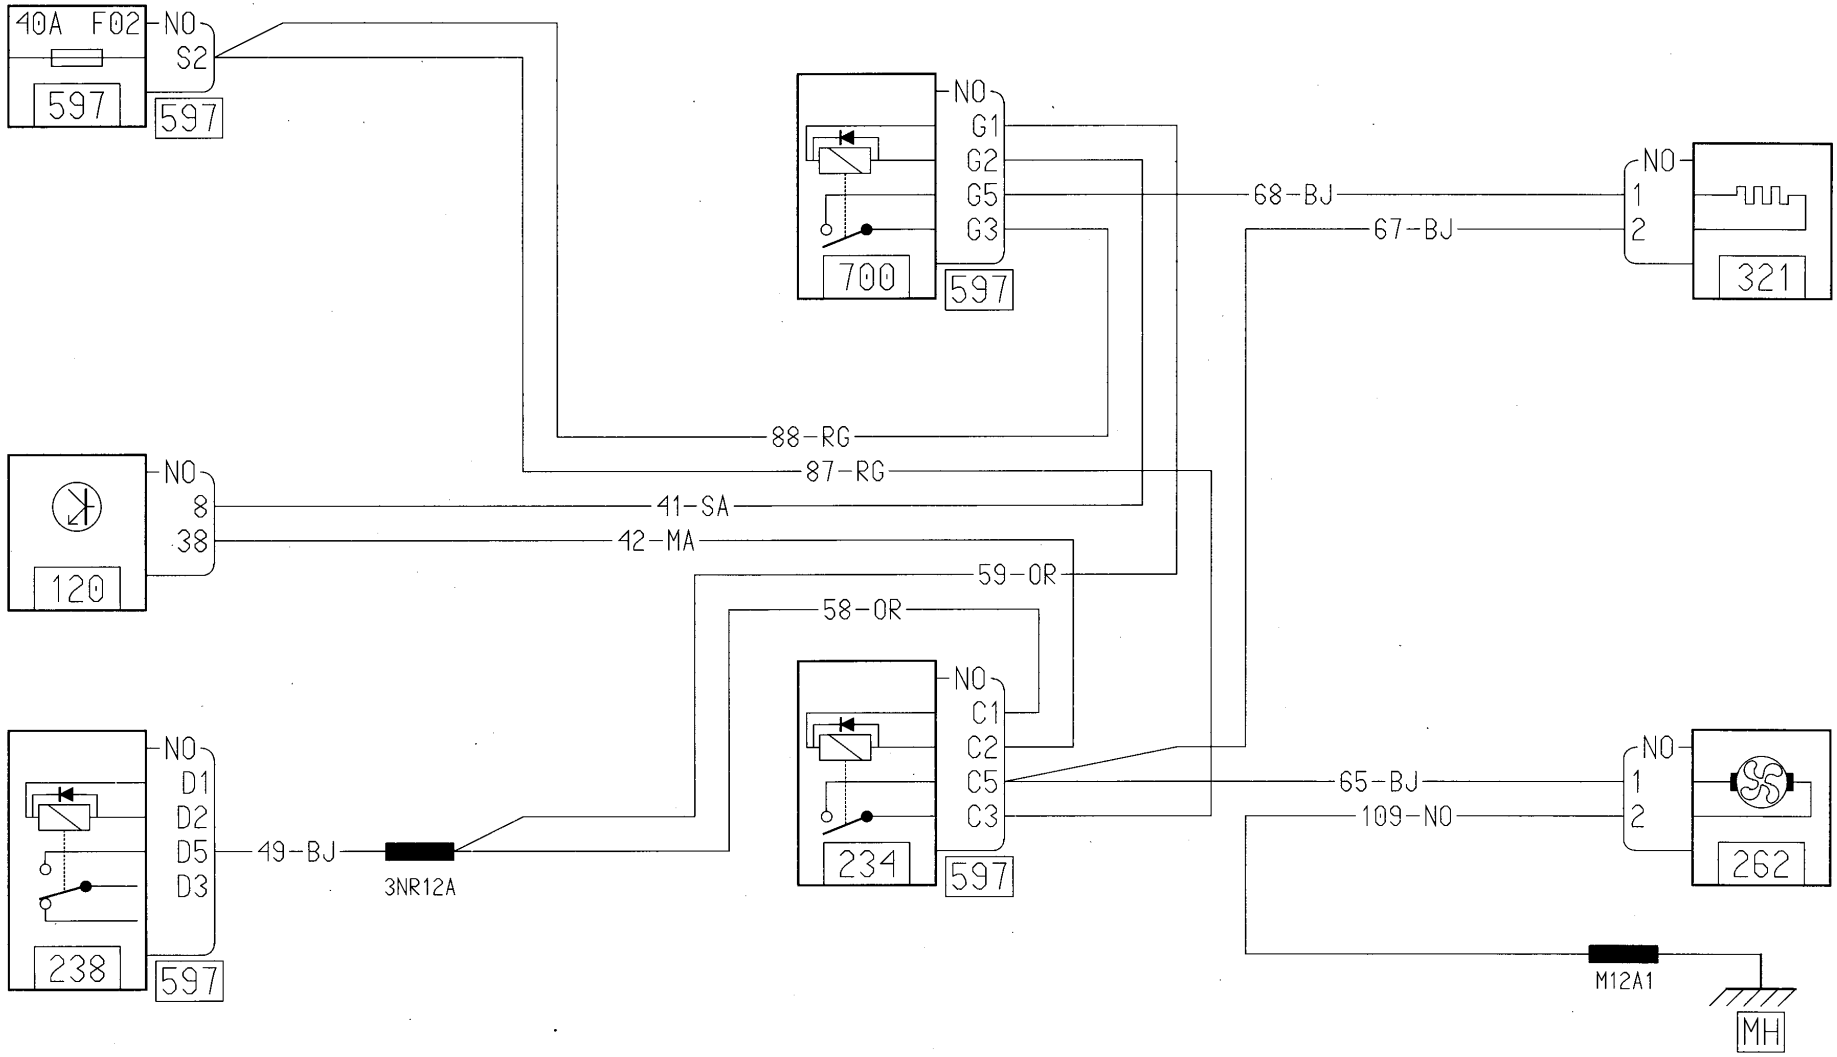
40A F02
NO
S2
597
597
NO
G1
G2
G5
G3
700
597
68-BJ
67-BJ
NO
1
2
321
88-RG
87-RG
NO
8
38
120
41-SA
42-MA
59-OR
58-OR
NO
C1
C2
C5
C3
234
597
NO
D1
D2
D5
D3
238
597
49-BJ
3NR12A
65-BJ
109-NO
NO
1
2
262
M12A1
MH

FAN ENGINE COOLING

(K4J750/CA/SPRGPL),(K4M700/SPRGPL),(K4M700/SPRGPL)

X64
00

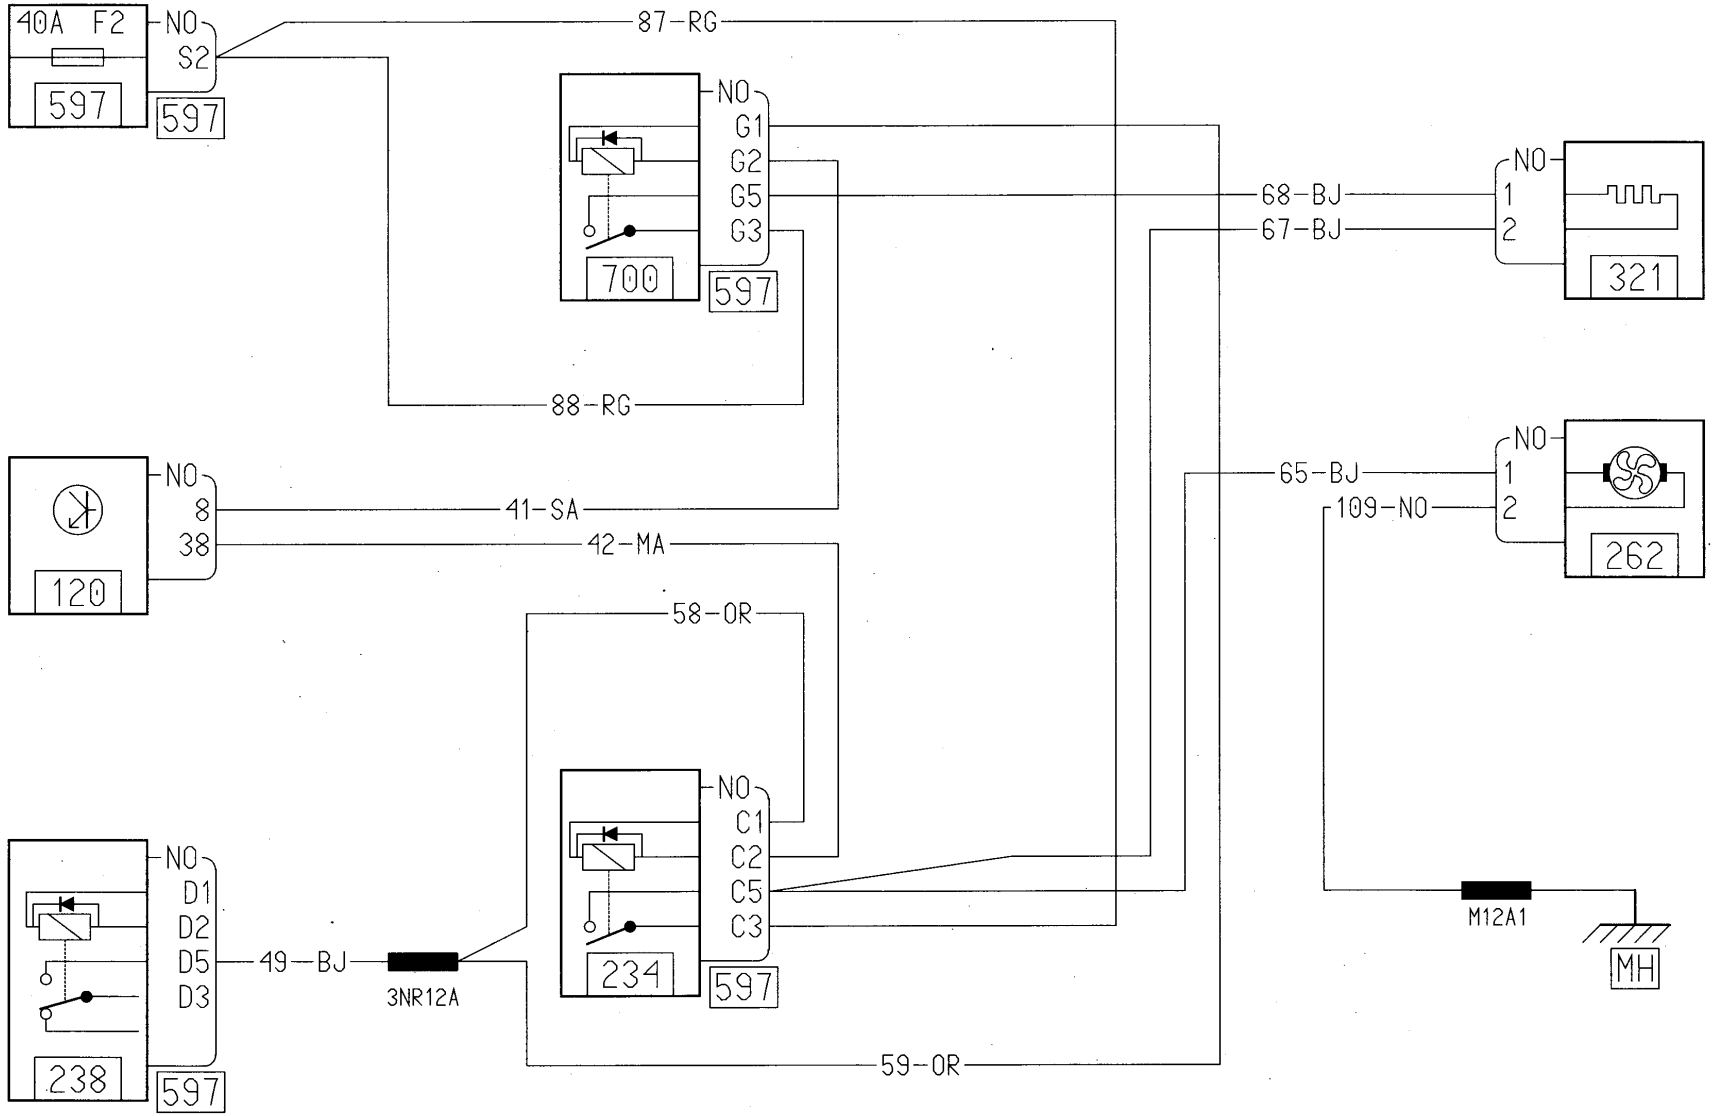

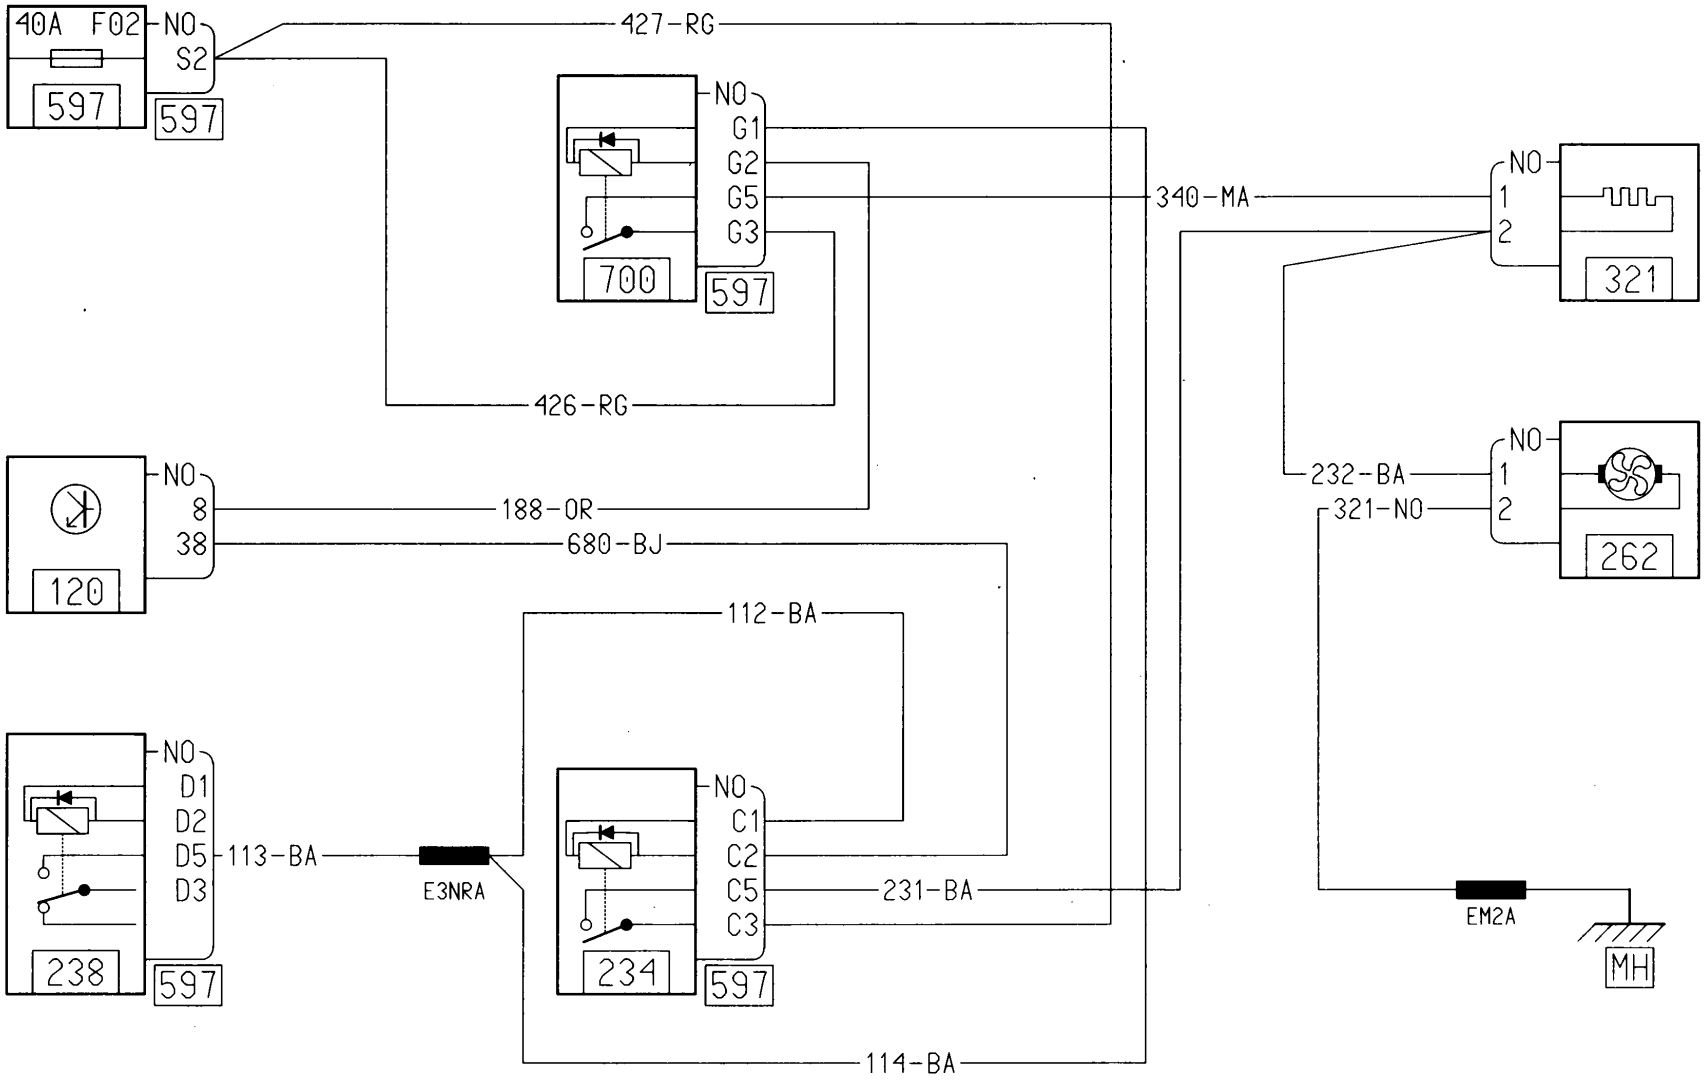
40A F02
NO
S2
597
597
427-RG
NO
G1
G2
G5
G3
700
597
340-MA
NO
1
2
321
426-RG
NO
8
38
120
188-OR
680-BJ
NO
1
2
232-BA
321-NO
262
112-BA
NO
D1
D2
D5
D3
113-BA
E3NRA
238
597
NO
C1
C2
C5
C3
231-BA
234
597
EM2A
MH
114-BA

FAN ENGINE COOLING

V25/E1/F8Q790/CA

X64
00

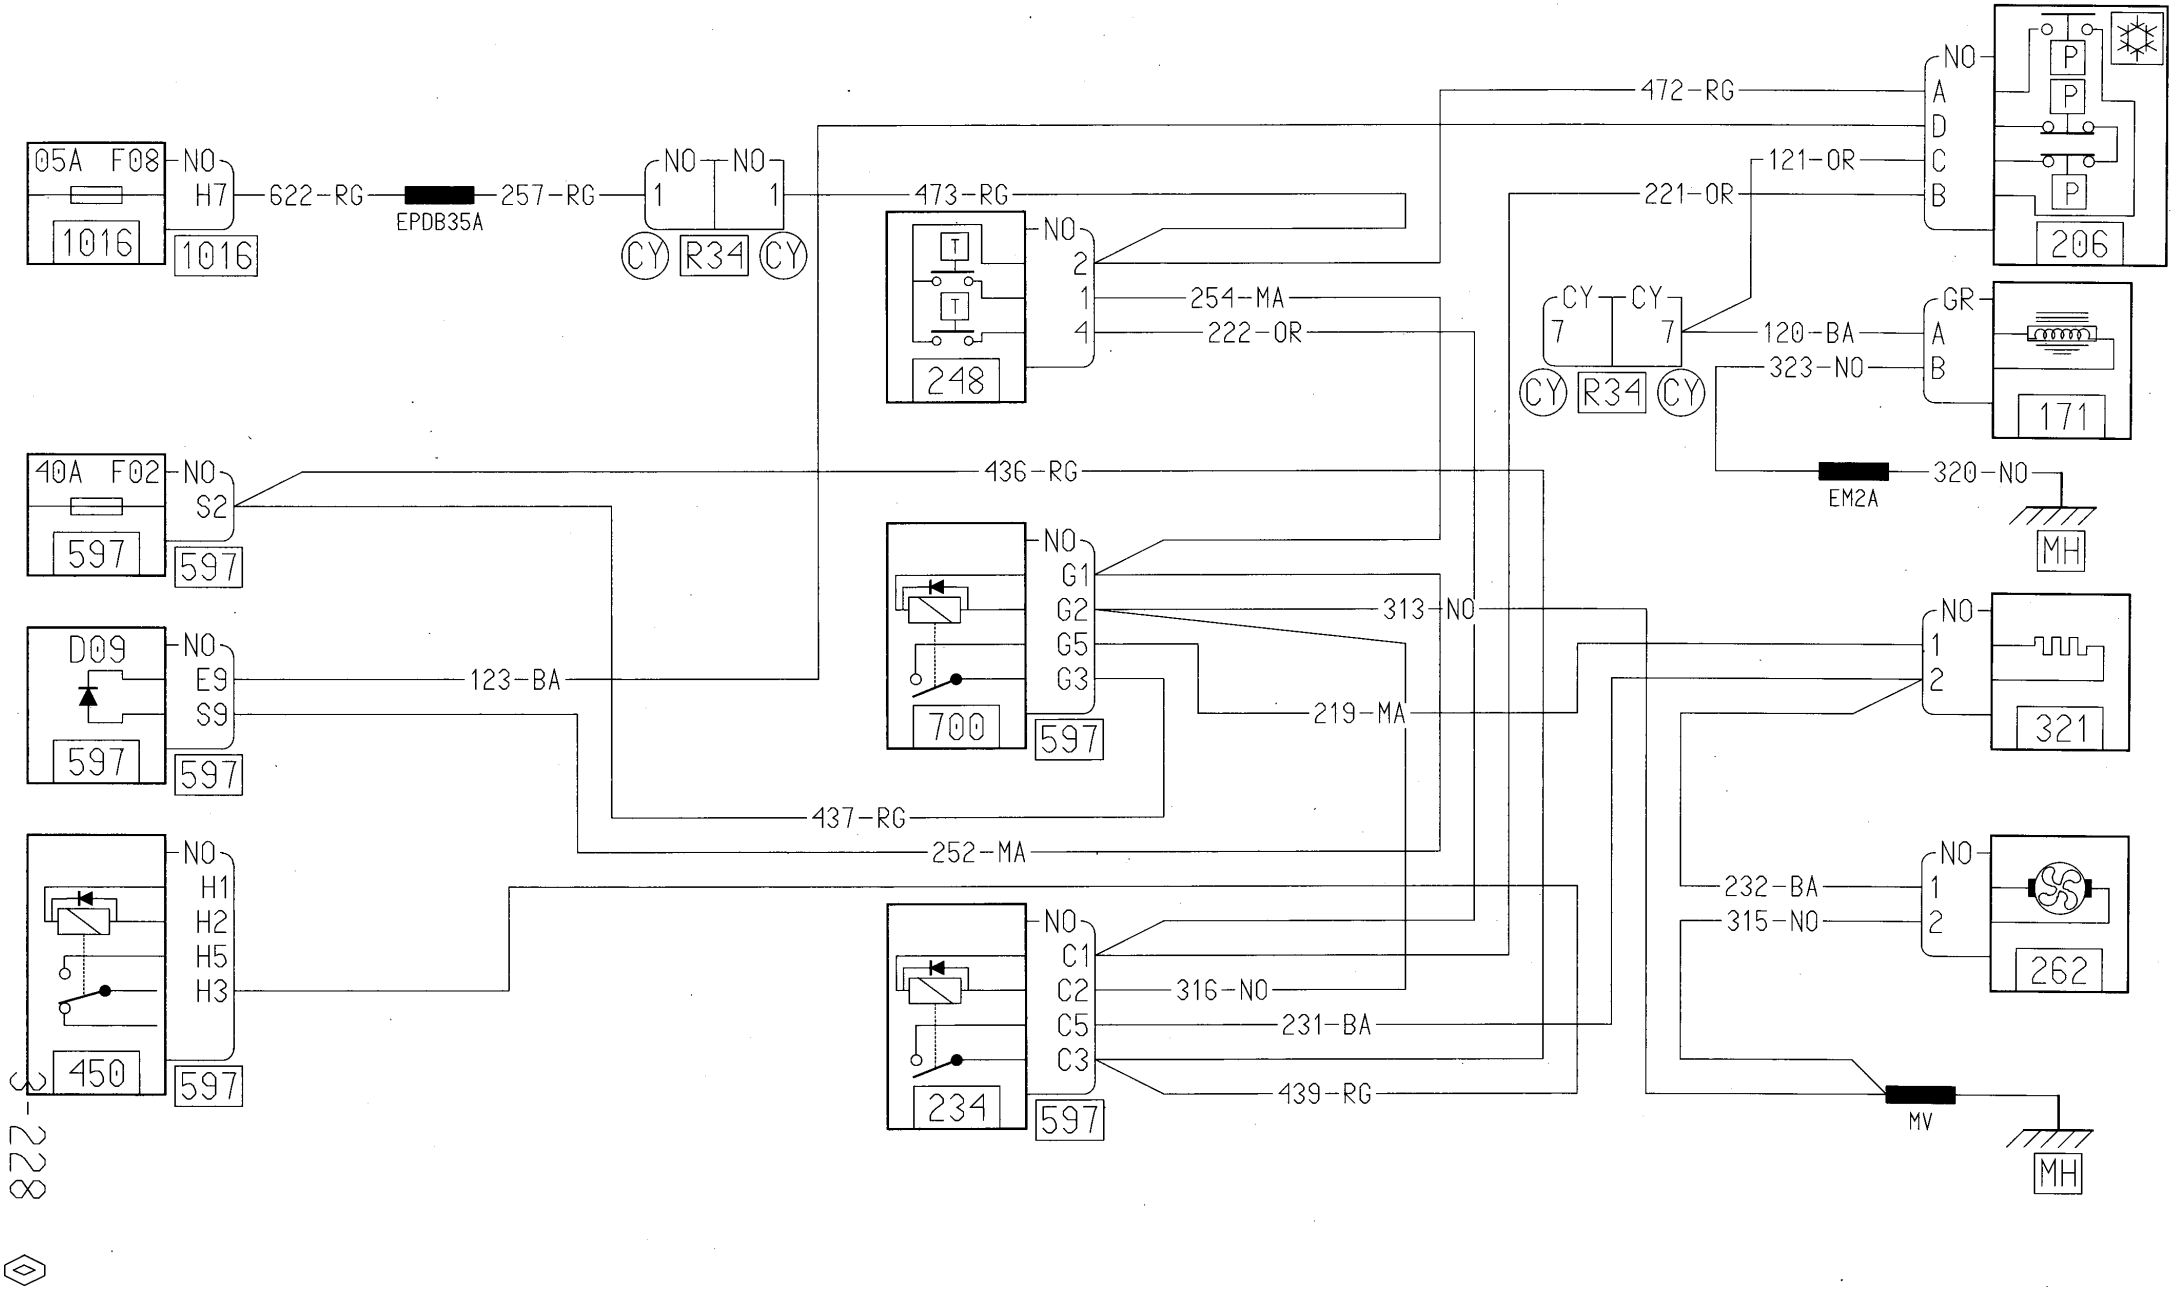

FAN ENGINE COOLING

L64/F9Q736/SSABS/CA/STHPLG/TURKEY/BVM5

X64
00

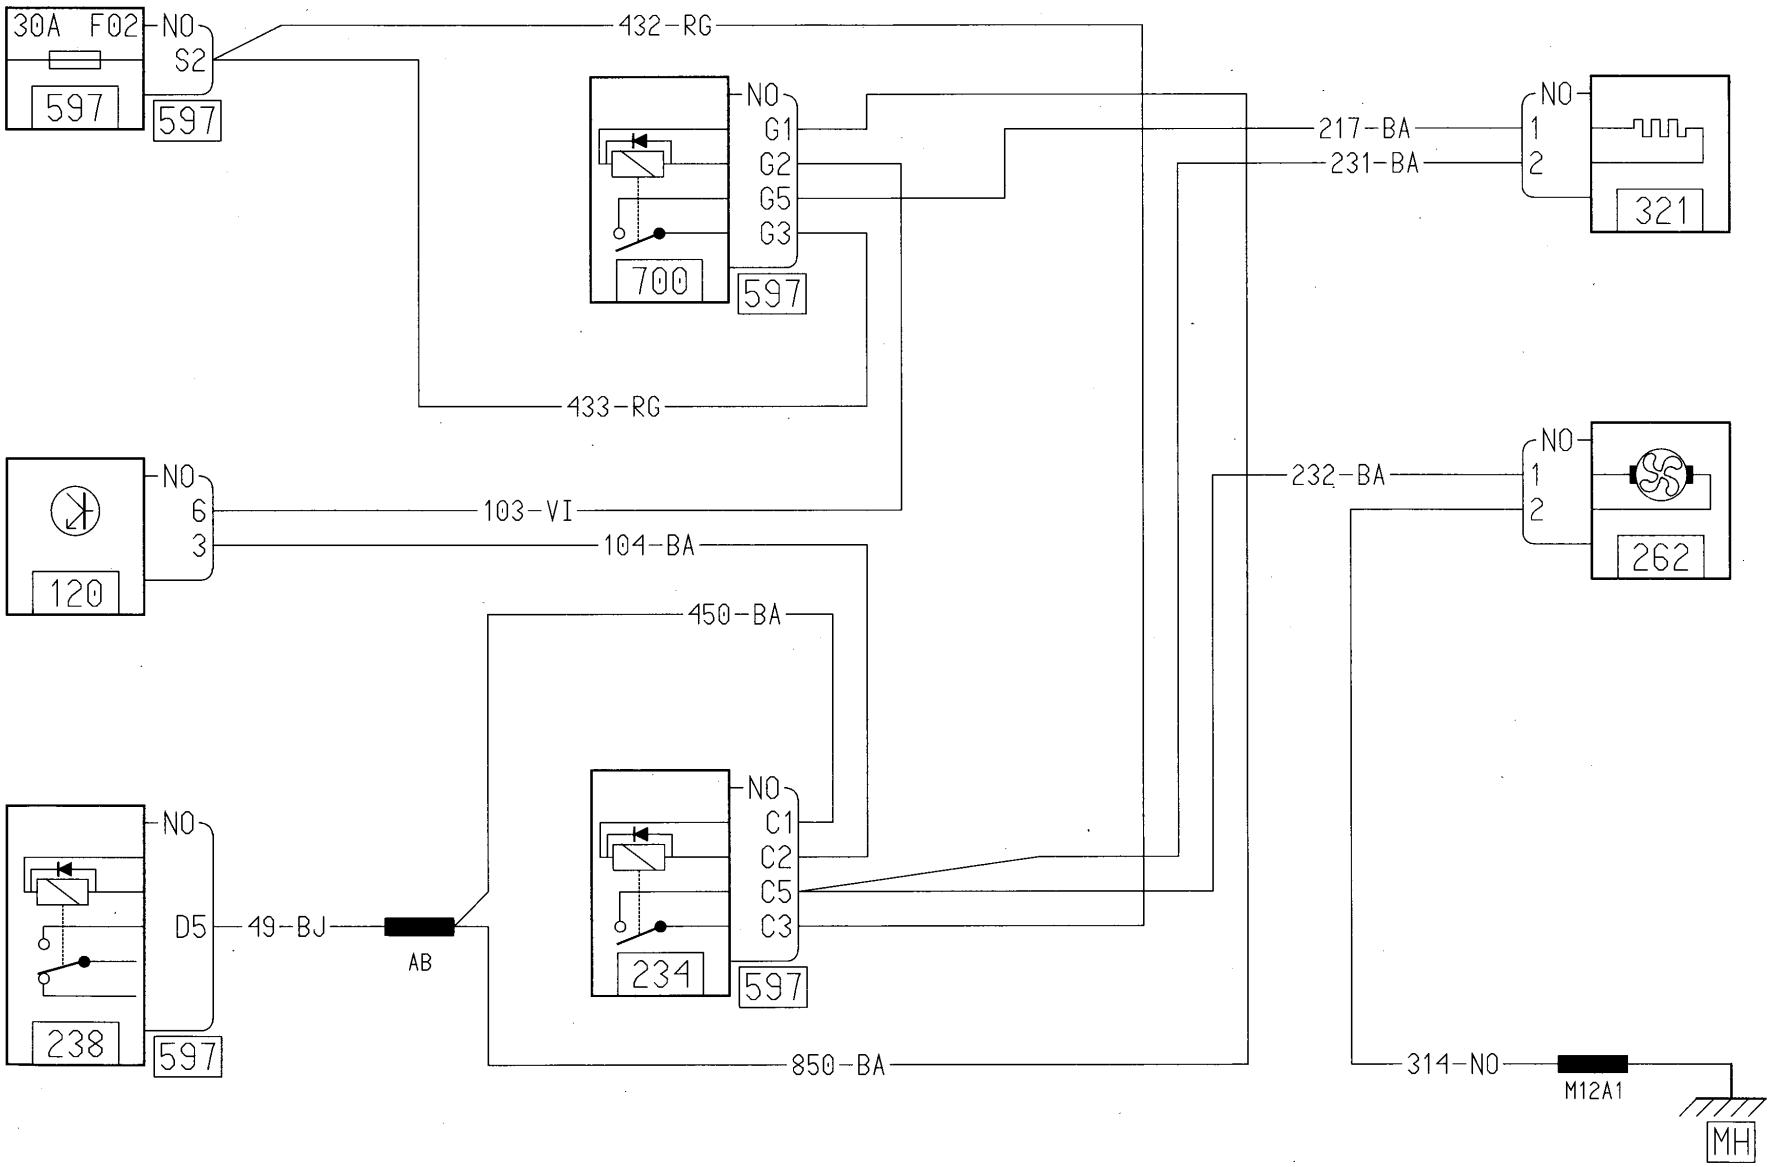

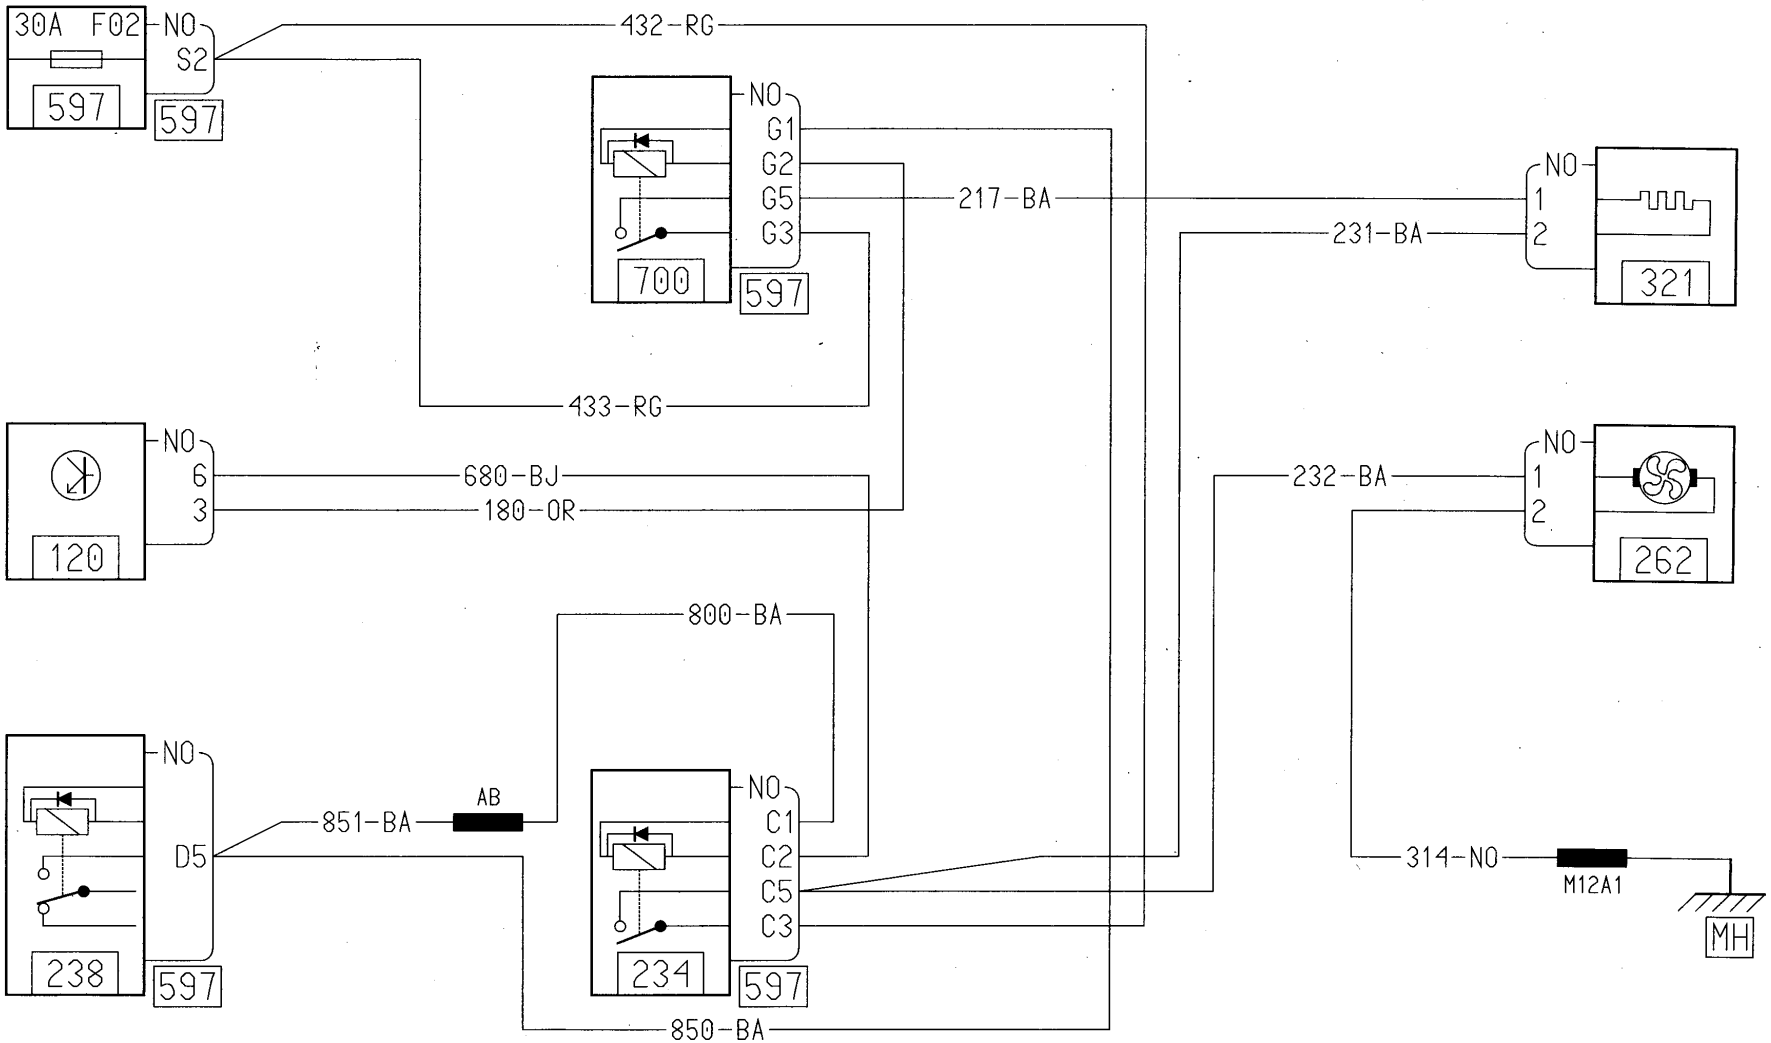
30A F02
597
NO
S2
597
432-RG
433-RG
700
NO
G1
G2
G5
G3
597
217-BA
231-BA
321
120
NO
6
3
680-BJ
180-OR
232-BA
262
800-BA
238
NO
D5
597
851-BA
AB
234
NO
C1
C2
C5
C3
597
850-BA
314-NO
M12A1
MH

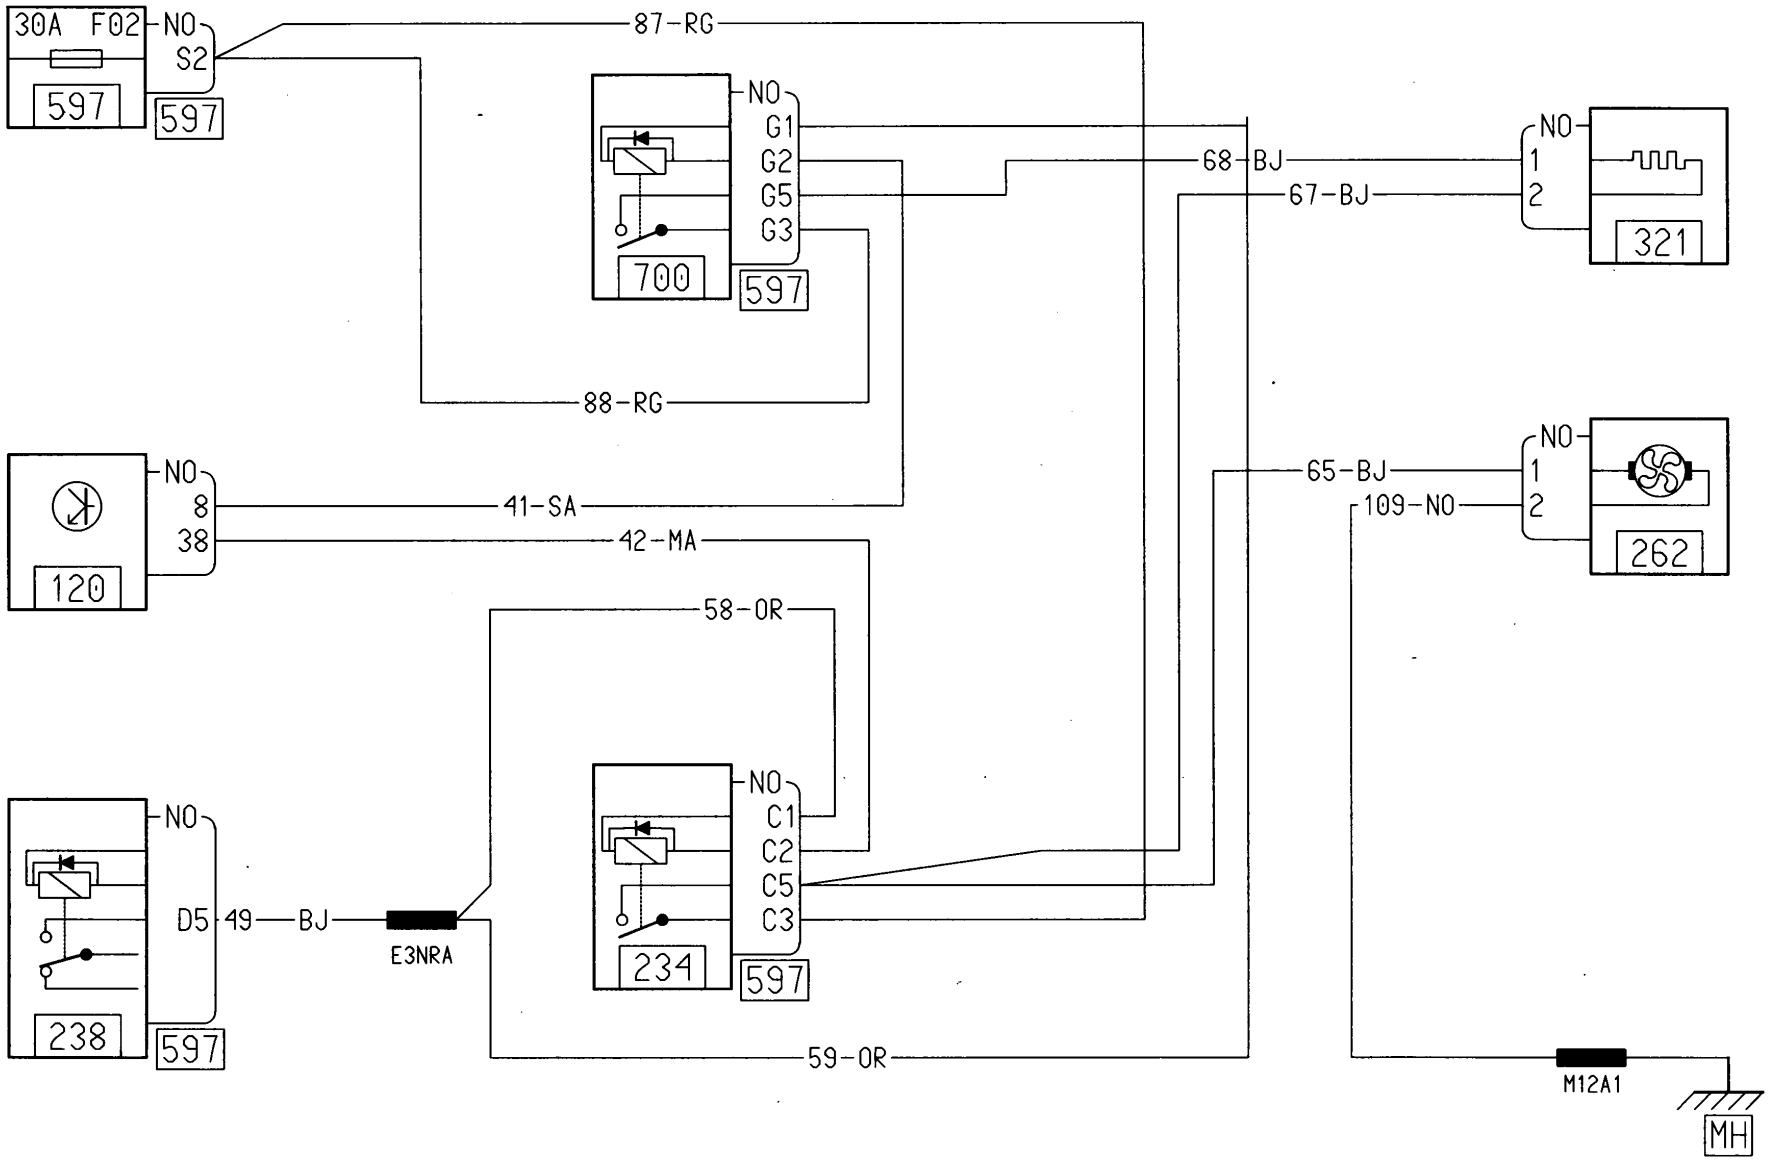
30A F02
NO
S2
597
597
87-RG
NO
G1
G2
G5
G3
700
597
68-BJ
67-BJ
NO
1
2
321
88-RG
NO
8
38
120
41-SA
42-MA
65-BJ
109-NO
NO
1
2
262
58-OR
NO
C1
C2
C5
C3
234
597
NO
D5
238
597
49-BJ
E3NRA
59-OR
M12A1
MH

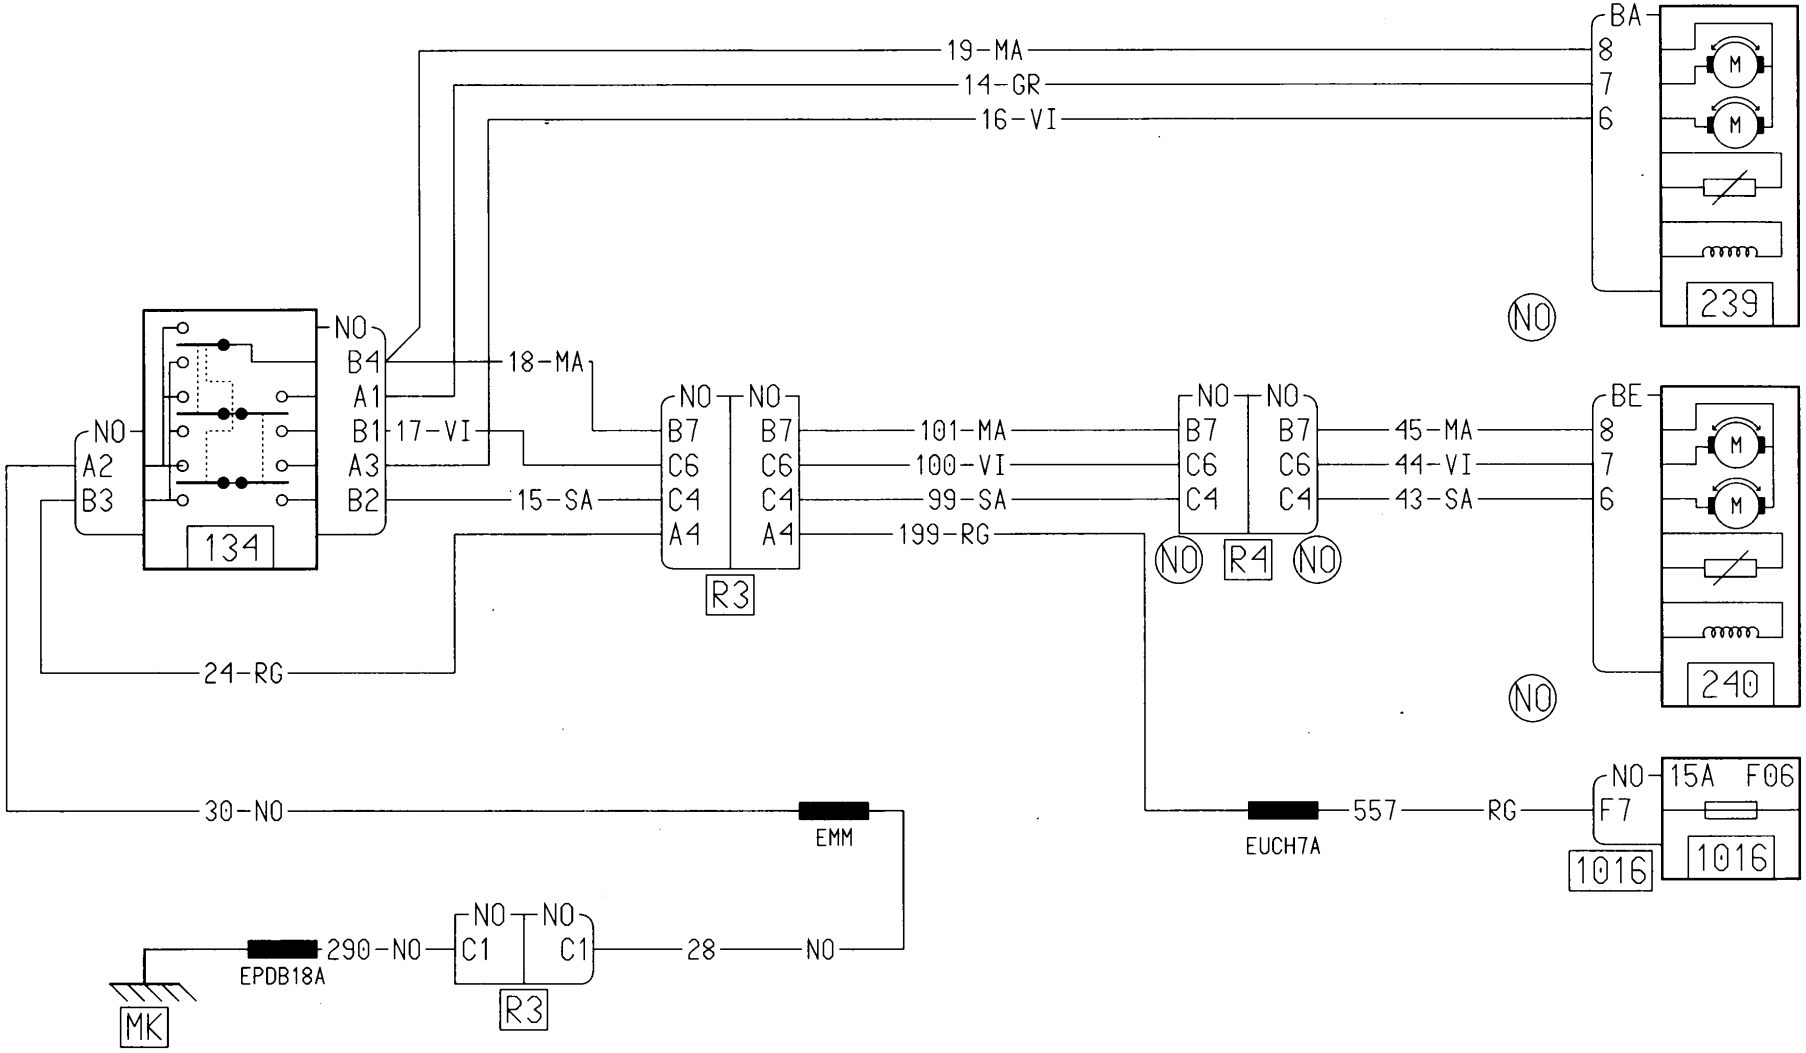
19-MA
14-GR
16-VI
BA
8
7
6
M
M
239
NO
NO
B4
A1
B1
A3
B2
18-MA
17-VI
15-SA
134
NO
A2
B3
24-RG
NO
B7
C6
C4
A4
R3
101-MA
100-VI
99-SA
199-RG
R4
45-MA
44-VI
43-SA
BE
240
30-NO
EMM
EUCH7A
557
RG
15A F06
F7
1016
290-NO
EPDB18A
C1
28
MK

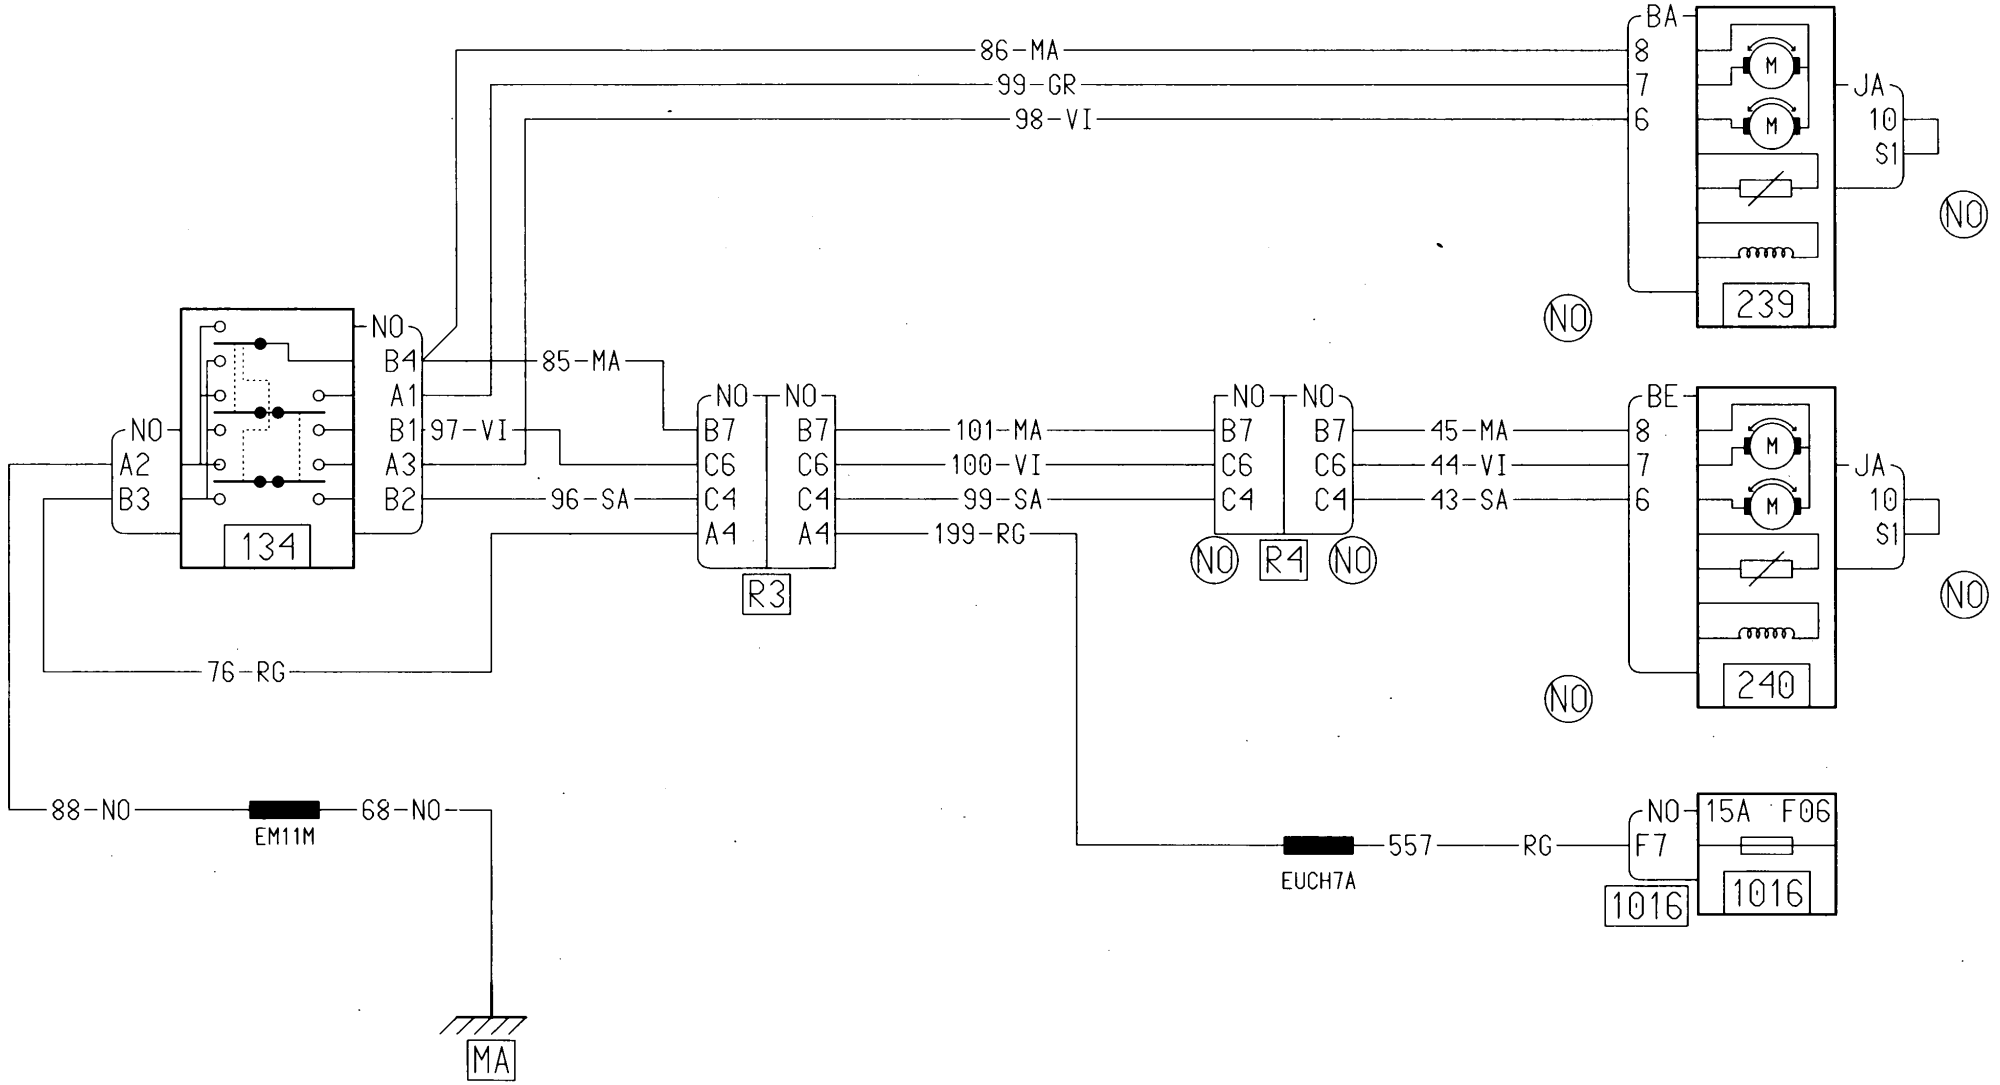
86-MA
99-GR
98-VI
BA
8
7
6
239
JA
10
S1
NO
85-MA
97-VI
96-SA
NO
B4
A1
B1
A3
B2
NO
A2
B3
134
NO
B7
C6
C4
A4
R3
101-MA
100-VI
99-SA
199-RG
R4
45-MA
44-VI
43-SA
BE
240
76-RG
88-NO
68-NO
EM11M
MA
557
RG
EUCH7A
F7
15A F06
1016

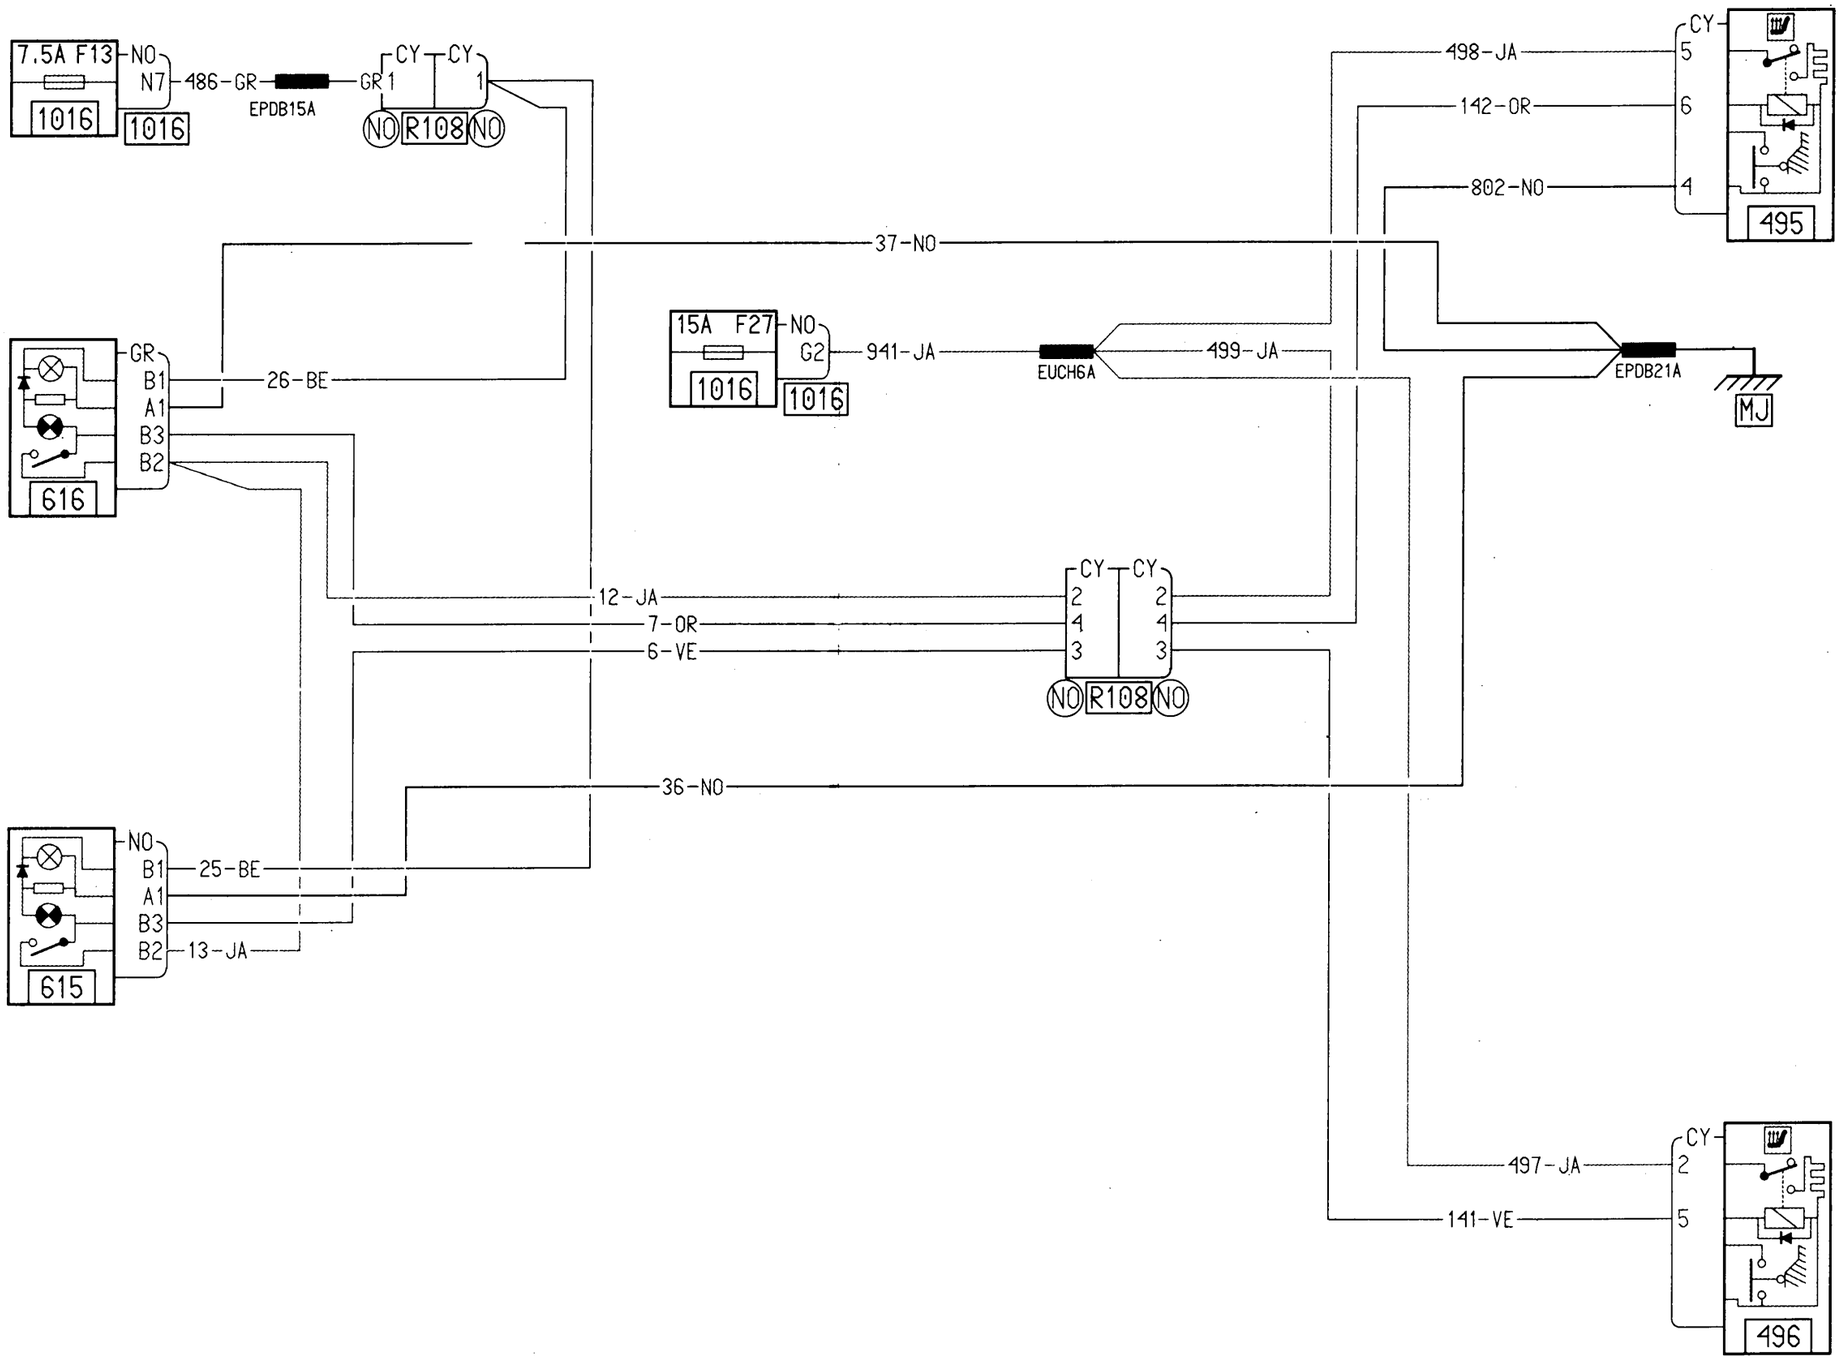
7.5A F13
NO
N7
1016
1016
486-GR
EPDB15A
GR
CY
CY
1
1
NO
R108
NO
37-NO
498-JA
142-OR
802-NO
CY
5
6
4
495
15A F27
NO
G2
1016
1016
941-JA
EUCH6A
499-JA
EPDB21A
MJ
GR
B1
A1
B3
B2
26-BE
616
12-JA
7-OR
6-VE
CY
CY
2
4
3
2
4
3
NO
R108
NO
36-NO
NO
B1
A1
B3
B2
25-BE
13-JA
615
CY
2
5
497-JA
141-VE
496

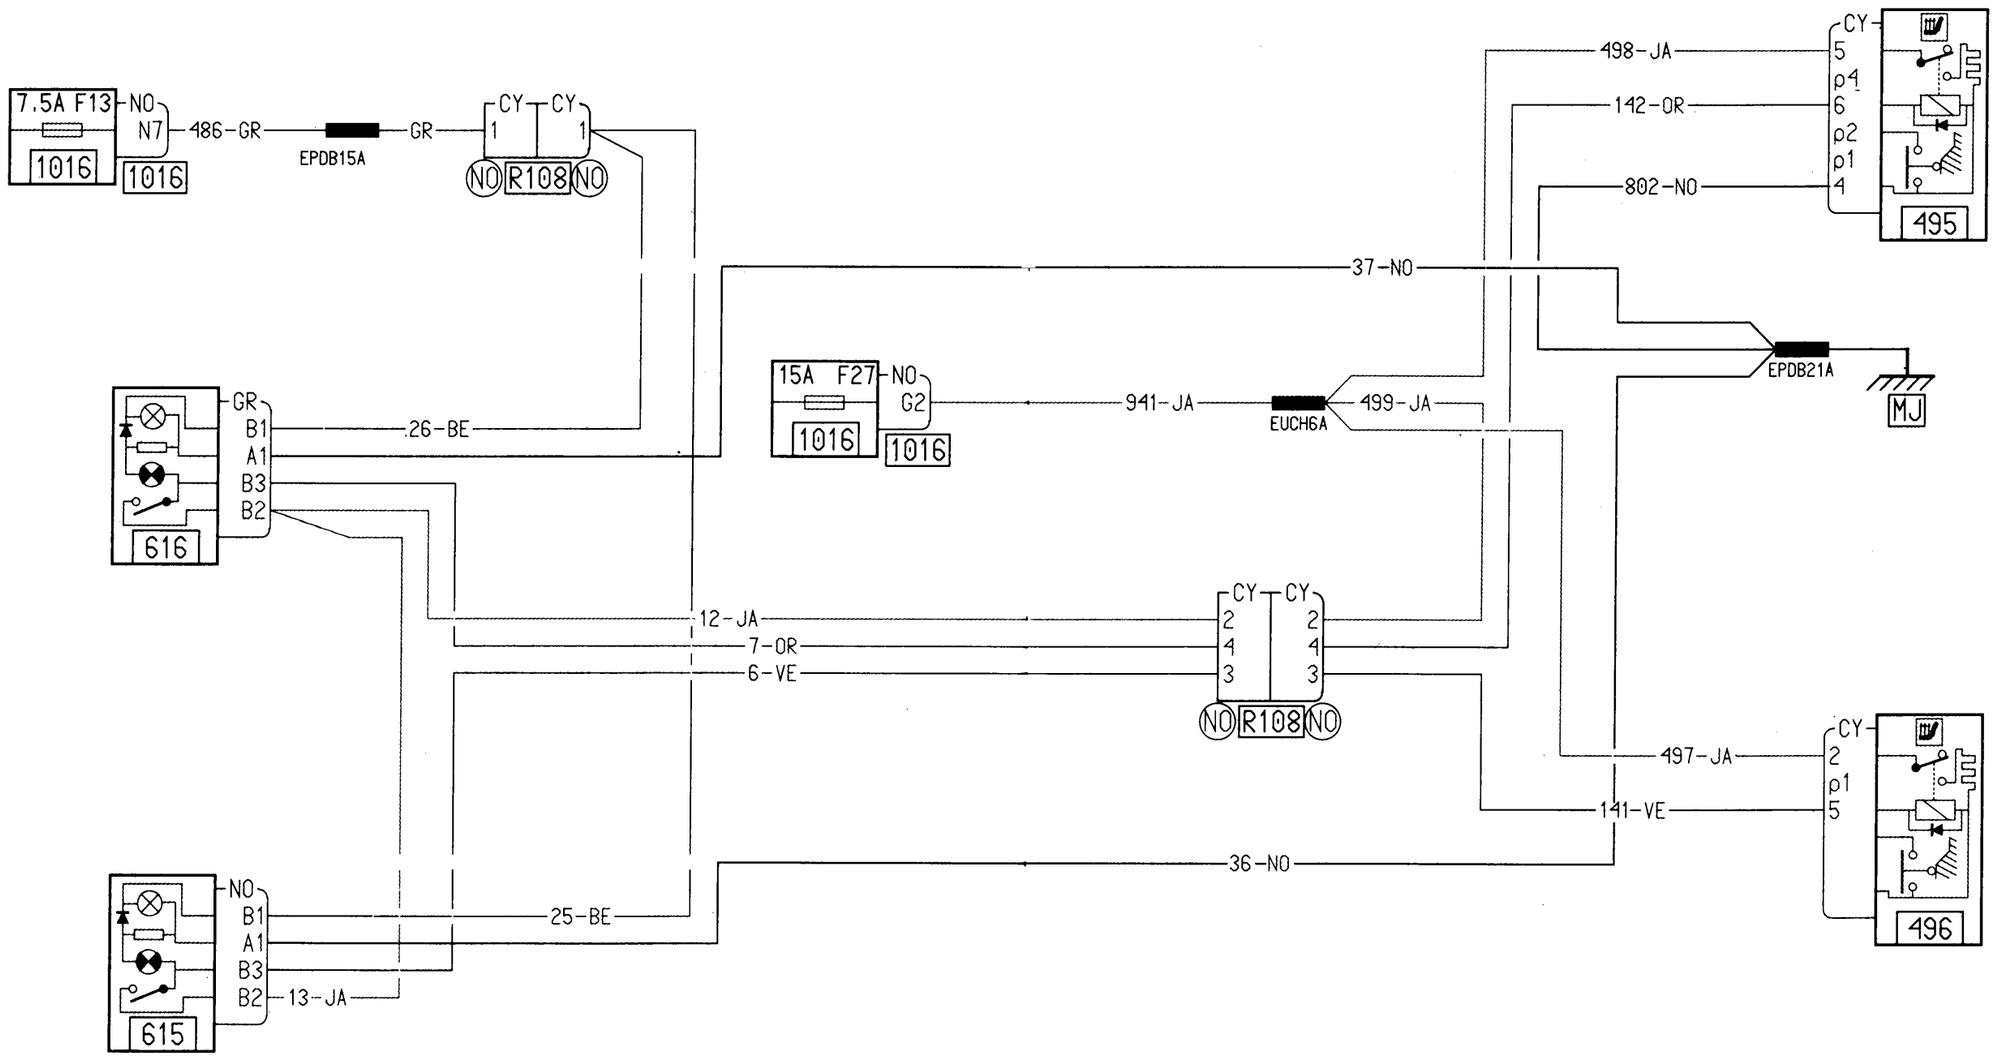
7.5A F13
NO
N7
1016
1016
486-GR
GR
EPDB15A
CY
CY
1
1
NO R108 NO
498-JA
142-OR
802-NO
CY
5
p4
6
p2
p1
4
495
37-NO
EPDB21A
MJ
15A F27
NO
G2
1016
1016
941-JA
EUCH6A
499-JA
GR
B1
A1
B3
B2
26-BE
616
12-JA
7-OR
6-VE
CY
CY
2
4
3
2
4
3
NO R108 NO
497-JA
141-VE
CY
2
p1
5
496
36-NO
NO
B1
A1
B3
B2
25-BE
13-JA
615

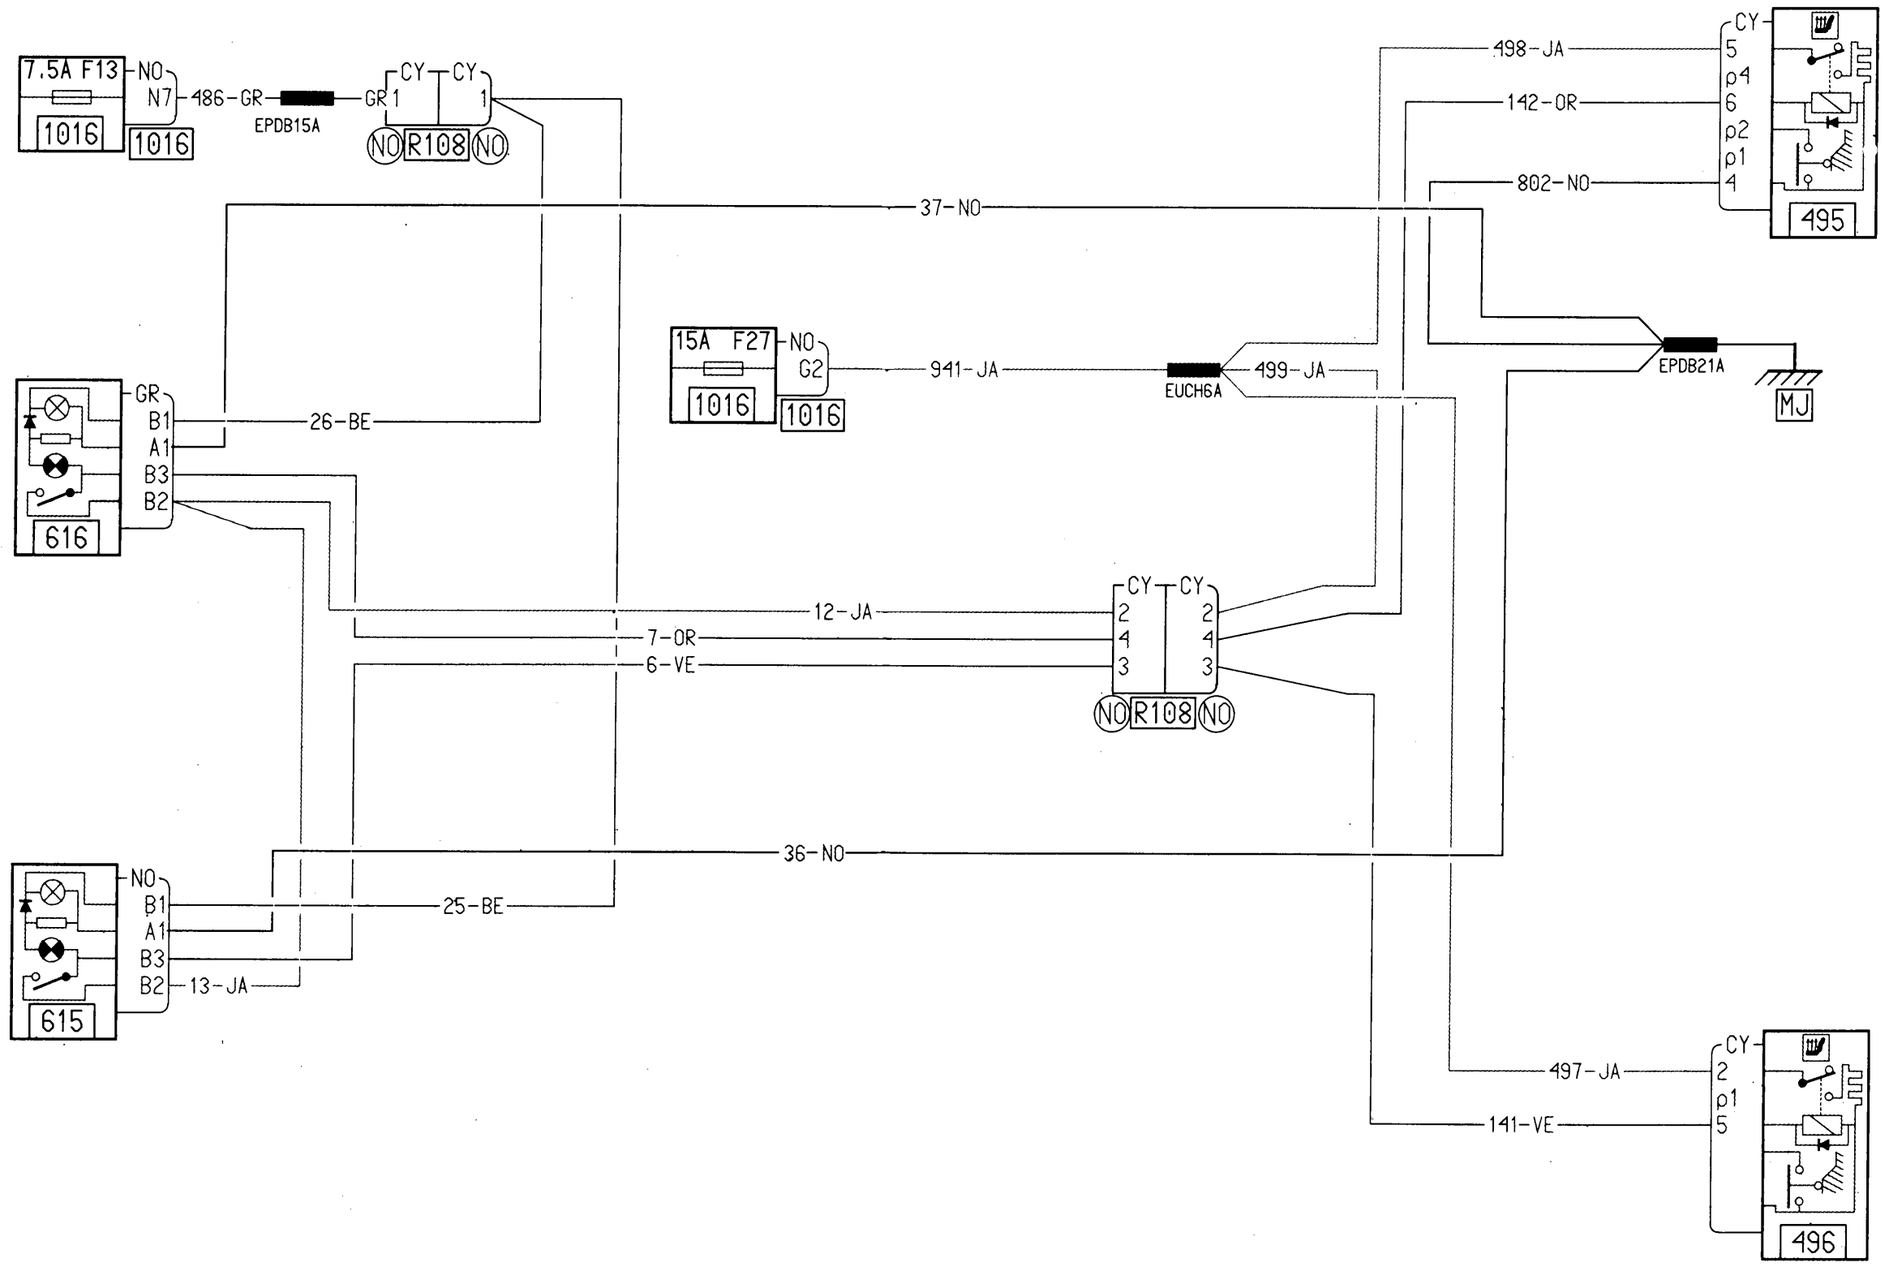
7.5A F13
NO
N7
1016
1016
486-GR
EPDB15A
CY
GR 1
CY
1
NO R108 NO
37-NO
498-JA
142-OR
802-NO
CY
5
p4
6
p2
p1
4
495
15A F27
NO
G2
1016
1016
941-JA
EUCH6A
499-JA
EPDB21A
MJ
GR
B1
A1
B3
B2
616
26-BE
CY CY
2 2
4 4
3 3
NO R108 NO
12-JA
7-OR
6-VE
36-NO
NO
B1
A1
B3
B2
615
25-BE
13-JA
CY
2
p1
5
497-JA
141-VE
496

HEATED SEATS

E64/E2/DG/SGACHA

X64
00

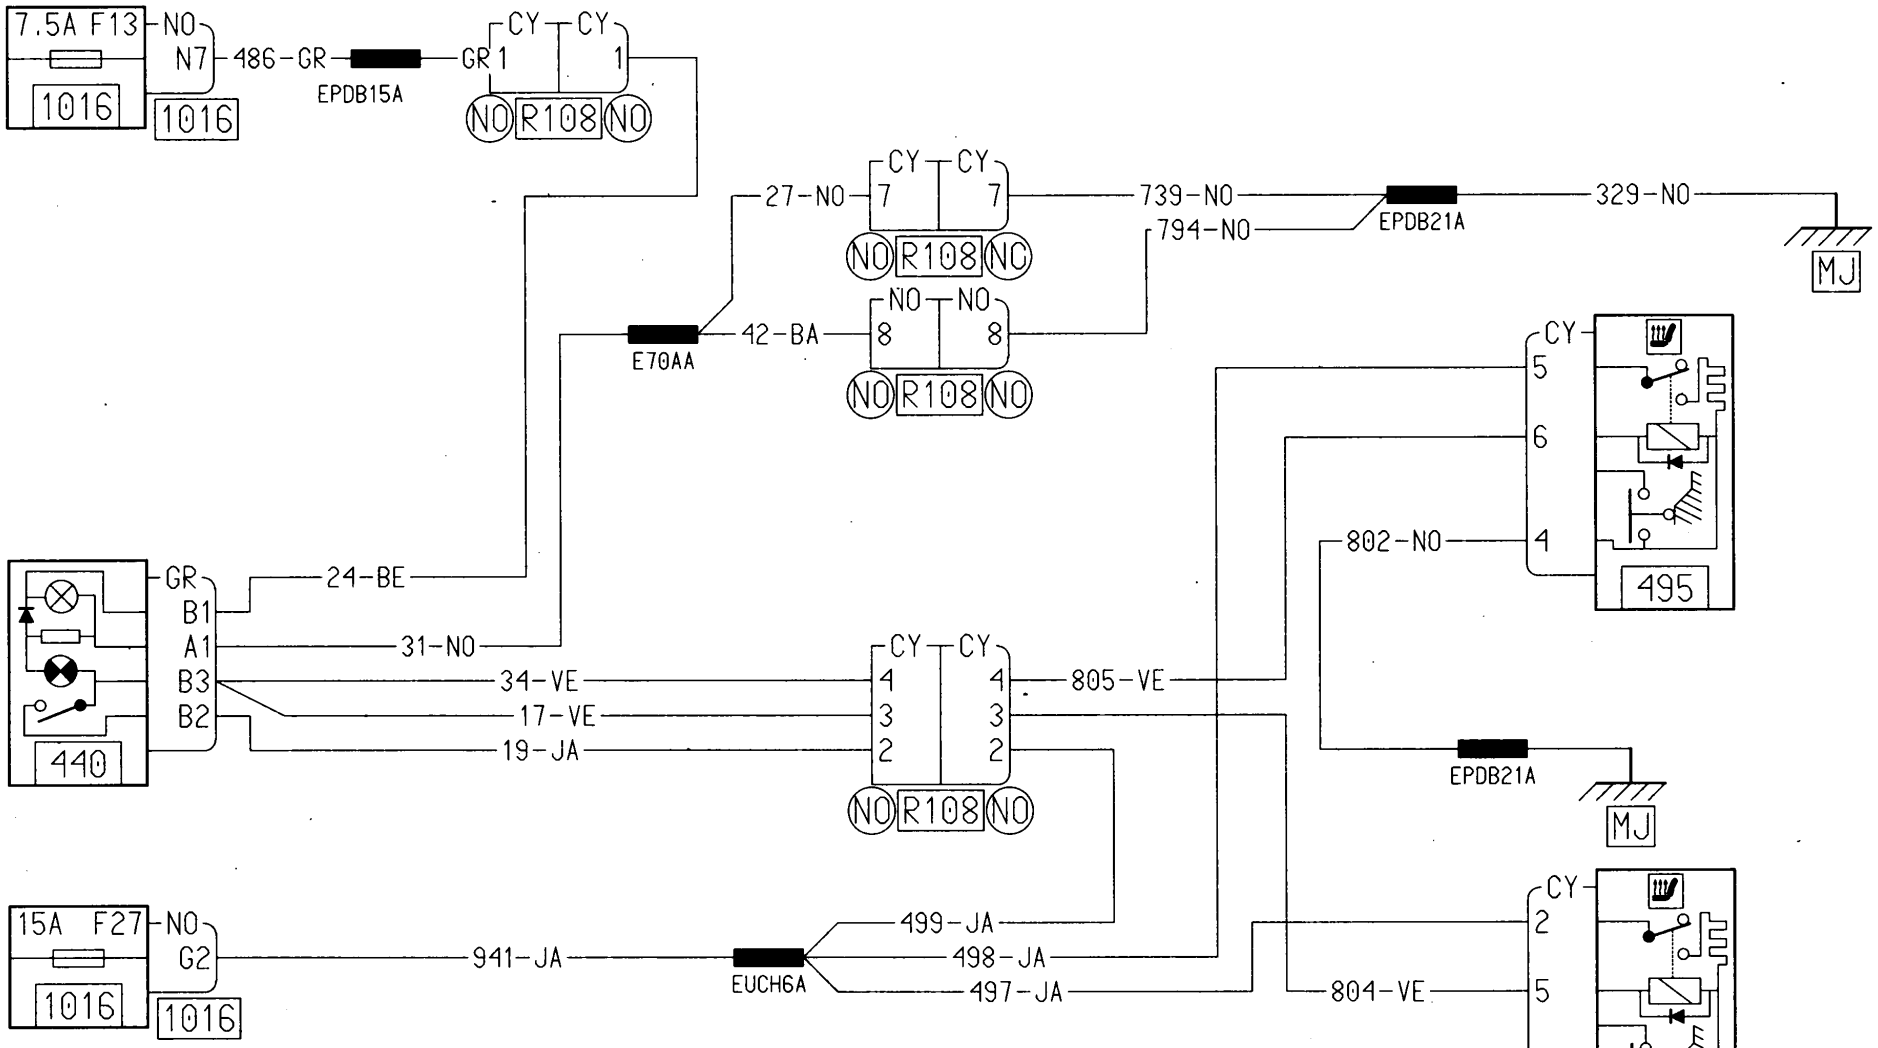

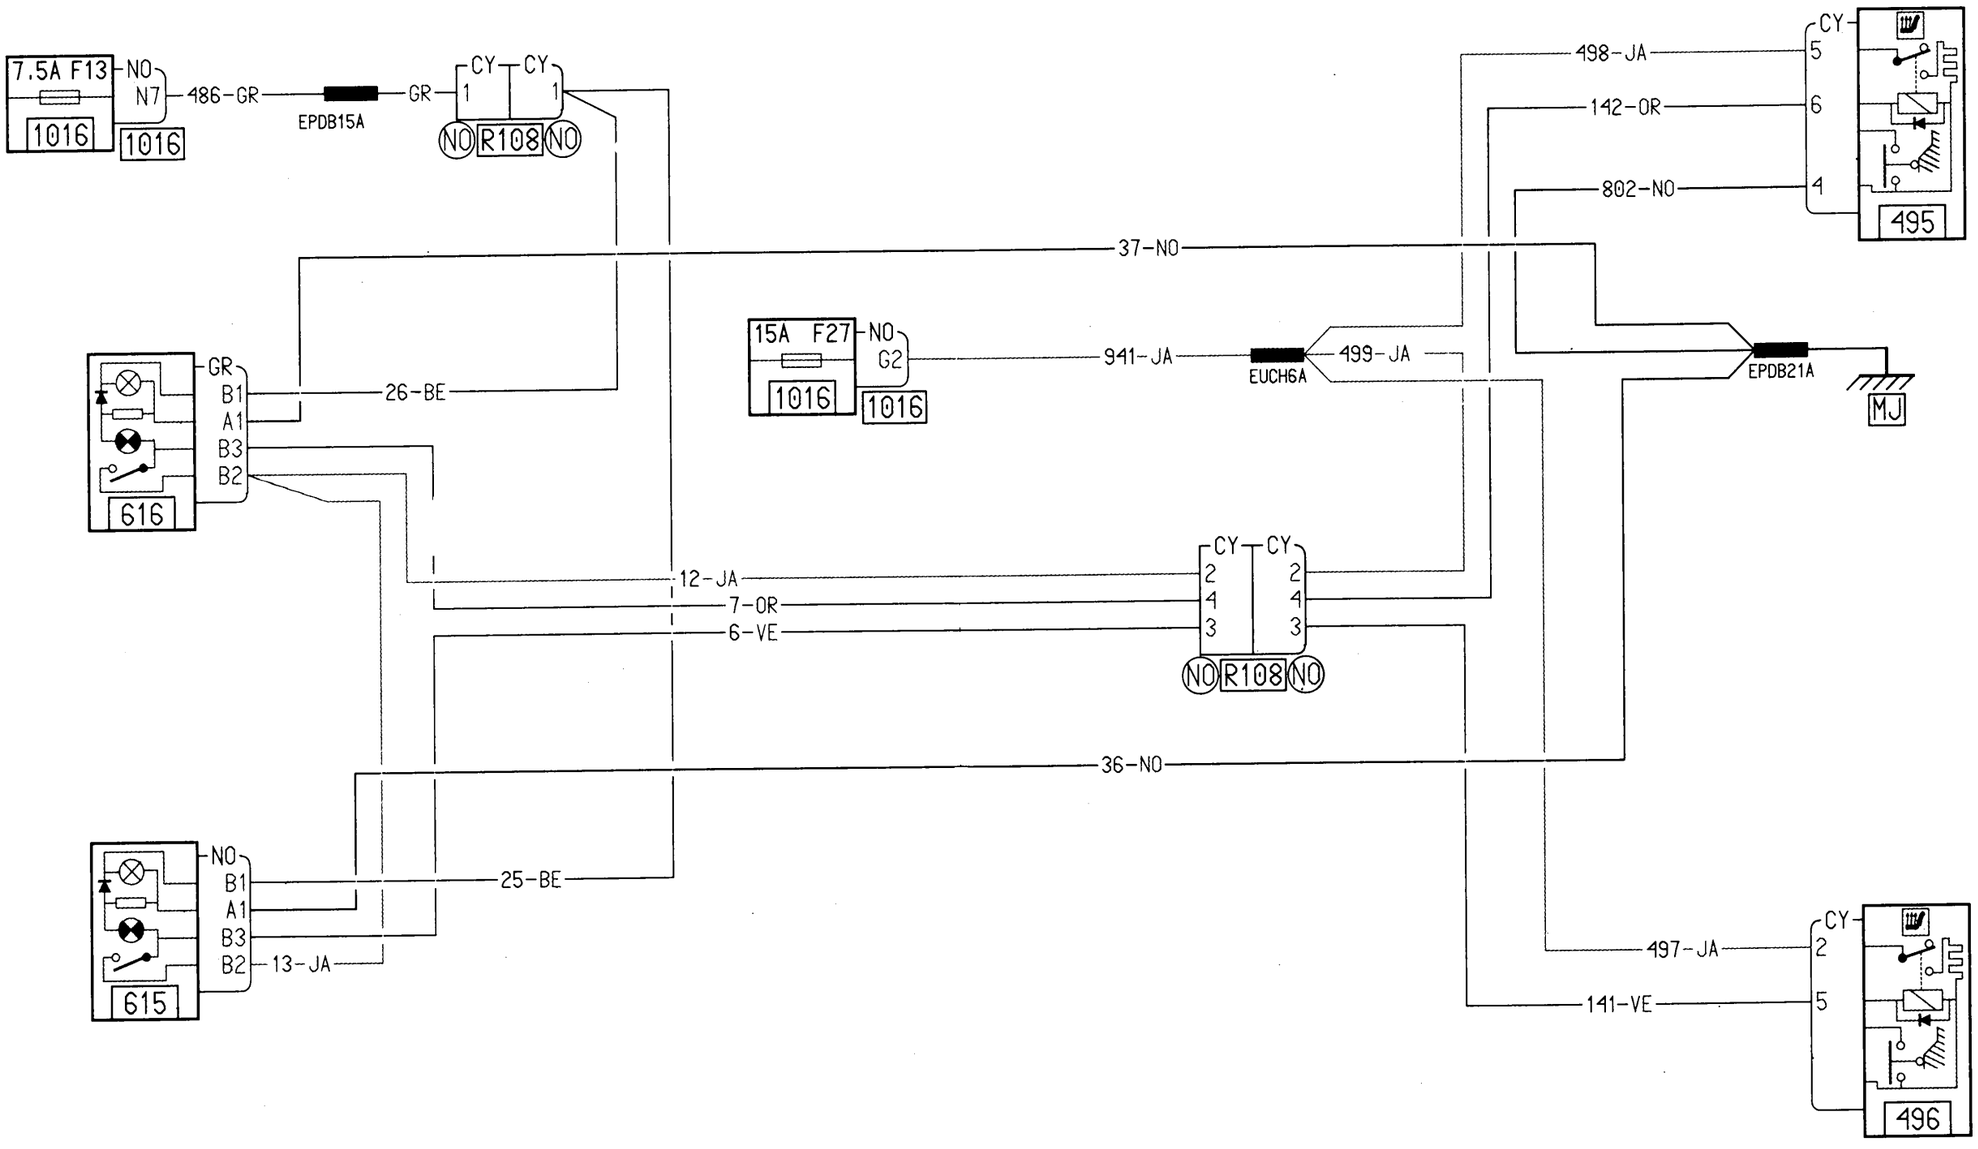
7.5A F13
NO
N7
1016
1016
486-GR
EPDB15A
GR
CY
1
CY
1
NO
R108
NO
37-NO
498-JA
142-OR
802-NO
CY
5
6
4
495
15A F27
NO
G2
1016
1016
941-JA
EUCH6A
499-JA
EPDB21A
MJ
GR
B1
A1
B3
B2
616
26-BE
12-JA
7-OR
6-VE
CY
2
4
3
CY
2
4
3
NO
R108
NO
36-NO
NO
B1
A1
B3
B2
615
25-BE
13-JA
497-JA
141-VE
CY
2
5
496

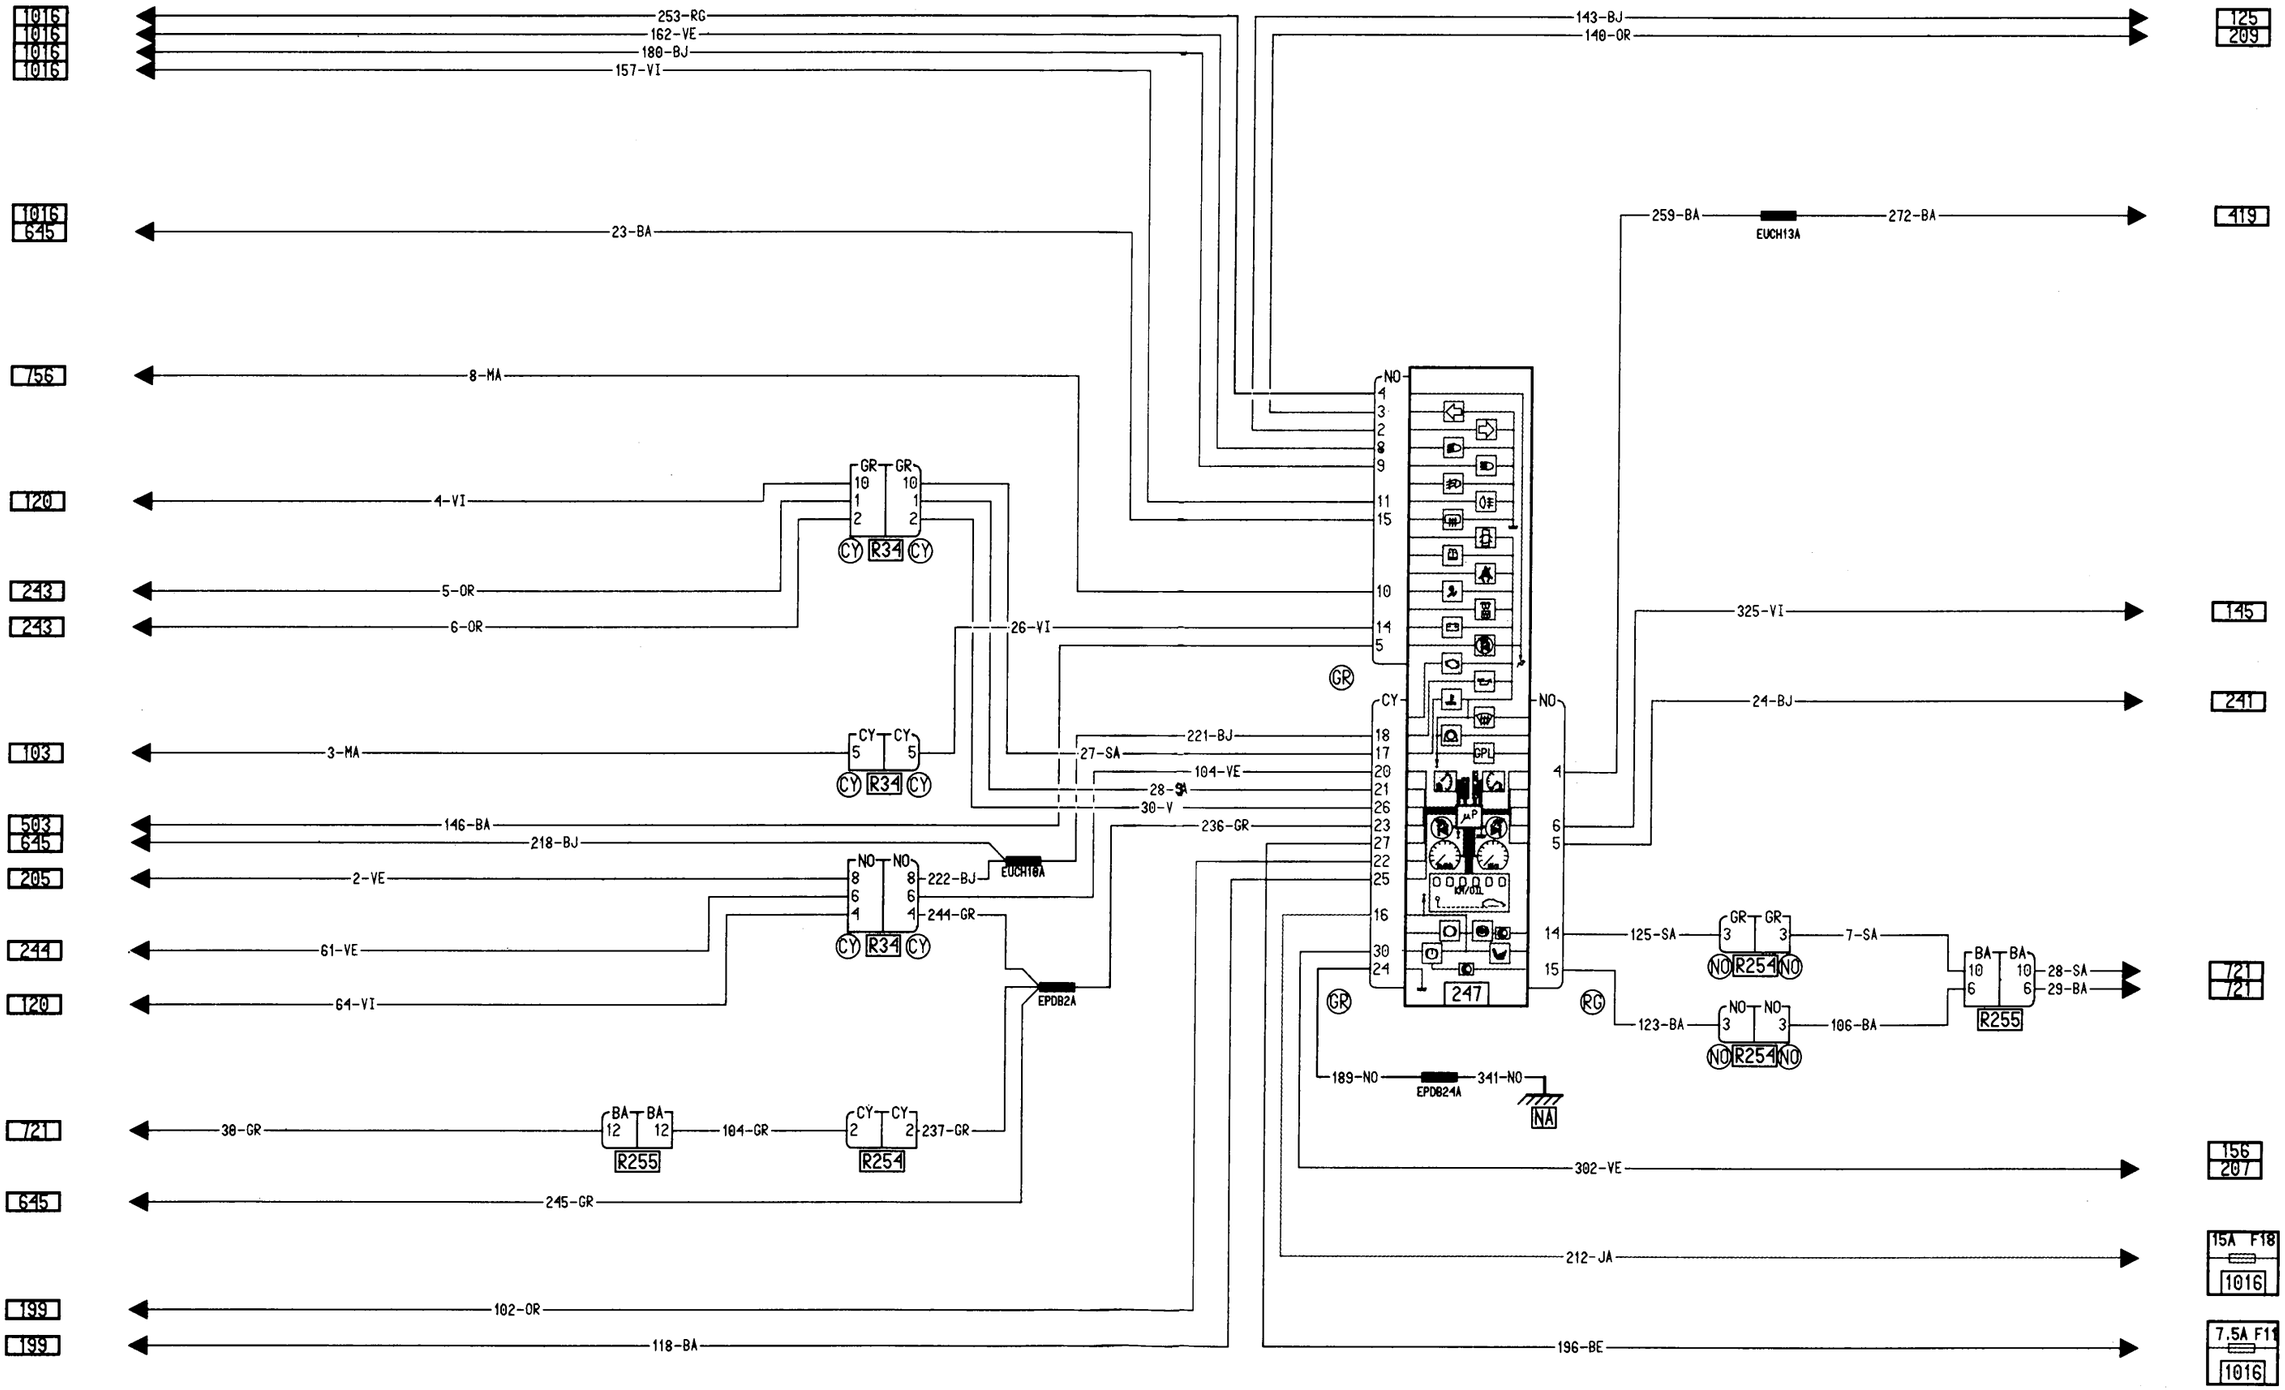
1016
1016
1016
1016
253-RG
162-VE
180-BJ
157-VI
143-BJ
140-OR
125
209
1016
645
23-BA
259-BA
EUCH13A
272-BA
419
755
8-MA
NO
1
3
2
8
9
11
15
10
14
5
GR
CY
18
17
20
21
26
23
27
22
25
16
30
24
247
NO
4
6
5
14
15
GPL
AP
RV/OIL
120
4-VI
GR
10
1
2
R34
CY
26-VI
325-VI
145
243
5-OR
243
6-OR
24-BJ
241
103
3-MA
CY
5
R34
221-BJ
27-SA
104-VE
28-SA
30-V
236-GR
503
645
146-BA
218-BJ
205
2-VE
NO
8
6
4
222-BJ
EUCH18A
244-GR
244
61-VE
120
64-VI
EPDB2A
125-SA
GR
3
R254
NO
7-SA
BA
10
6
R255
28-SA
29-BA
721
721
123-BA
106-BA
189-NO
EPDB24A
341-NO
NA
721
38-GR
BA
12
R255
104-GR
CY
2
R254
237-GR
302-VE
156
207
645
245-GR
212-JA
15A F18
1016
199
102-OR
199
118-BA
196-BE
7.5A F11
1016

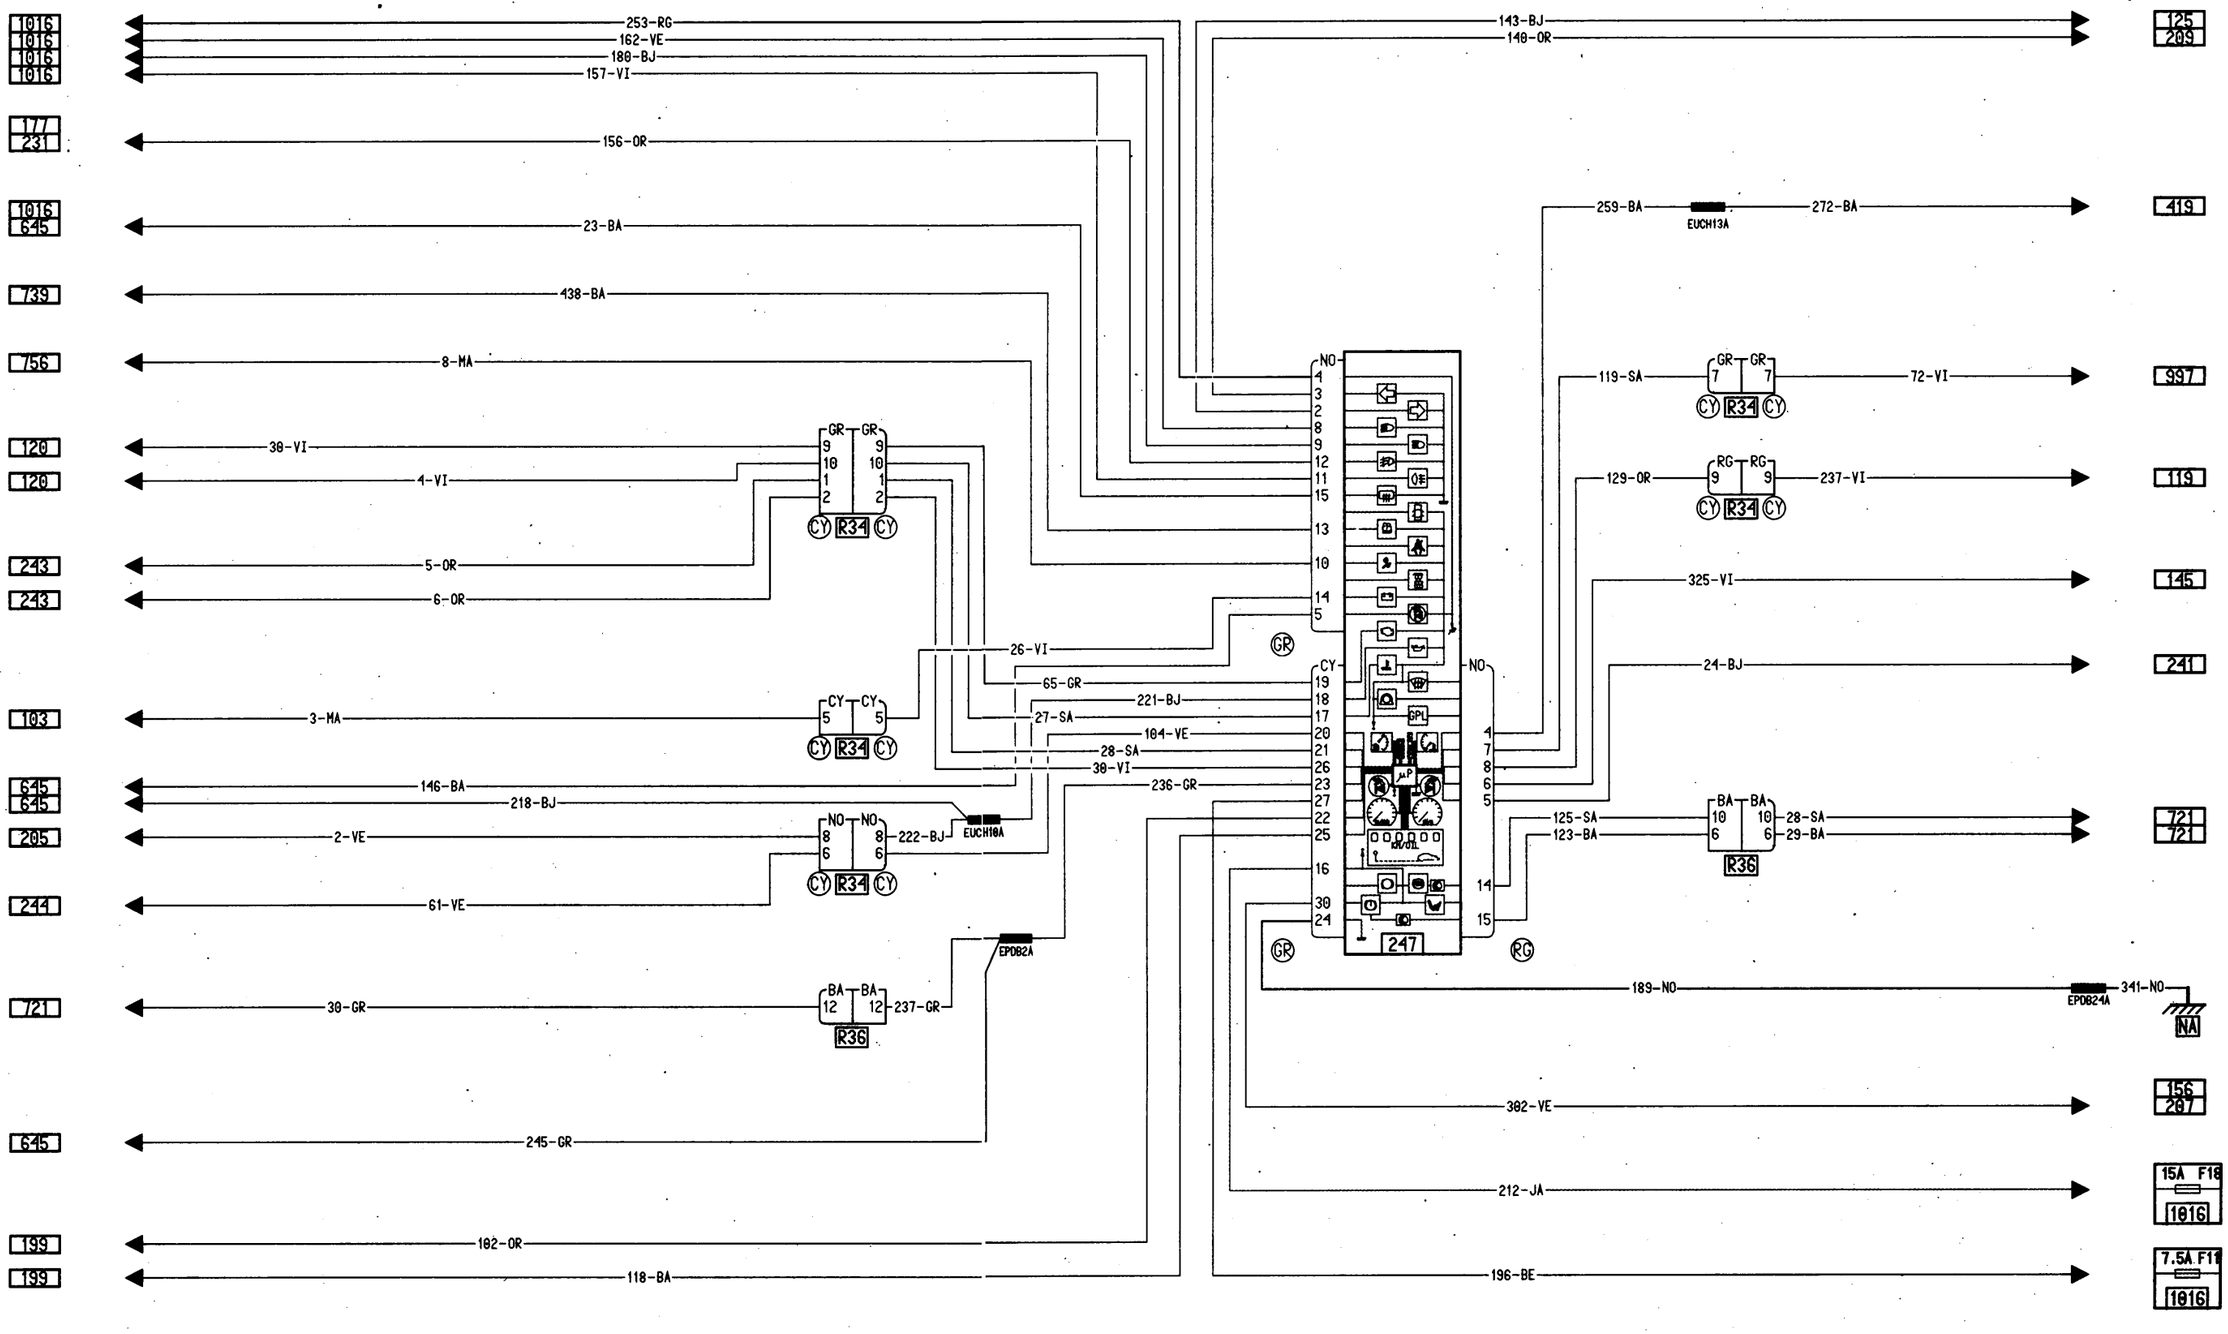
1016
1016
1016
1016
253-RG
162-VE
180-BJ
157-VI
143-BJ
140-OR
125
209
177
231
156-OR
1016
645
23-BA
259-BA
EUCH13A
272-BA
419
739
138-BA
756
8-MA
119-SA
GR
7
7
72-VI
997
CY
R34
120
120
30-VI
4-VI
129-OR
RG
9
9
237-VI
119
243
243
5-OR
6-OR
325-VI
145
NO
1
3
2
8
9
12
11
15
13
10
14
5
CY
19
18
17
20
21
26
23
27
22
25
16
30
24
247
GR
RG
26-VI
65-GR
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
24-BJ
241
103
3-MA
125-SA
123-BA
BA
10
6
28-SA
29-BA
721
721
R36
645
645
146-BA
218-BJ
205
2-VE
222-BJ
EUCH10A
244
61-VE
EPDB24A
189-NO
341-NO
NA
721
30-GR
237-GR
EPDB2A
156
297
302-VE
645
245-GR
15A F18
1016
212-JA
199
199
192-OR
118-BA
196-BE
7.5A F11
1016

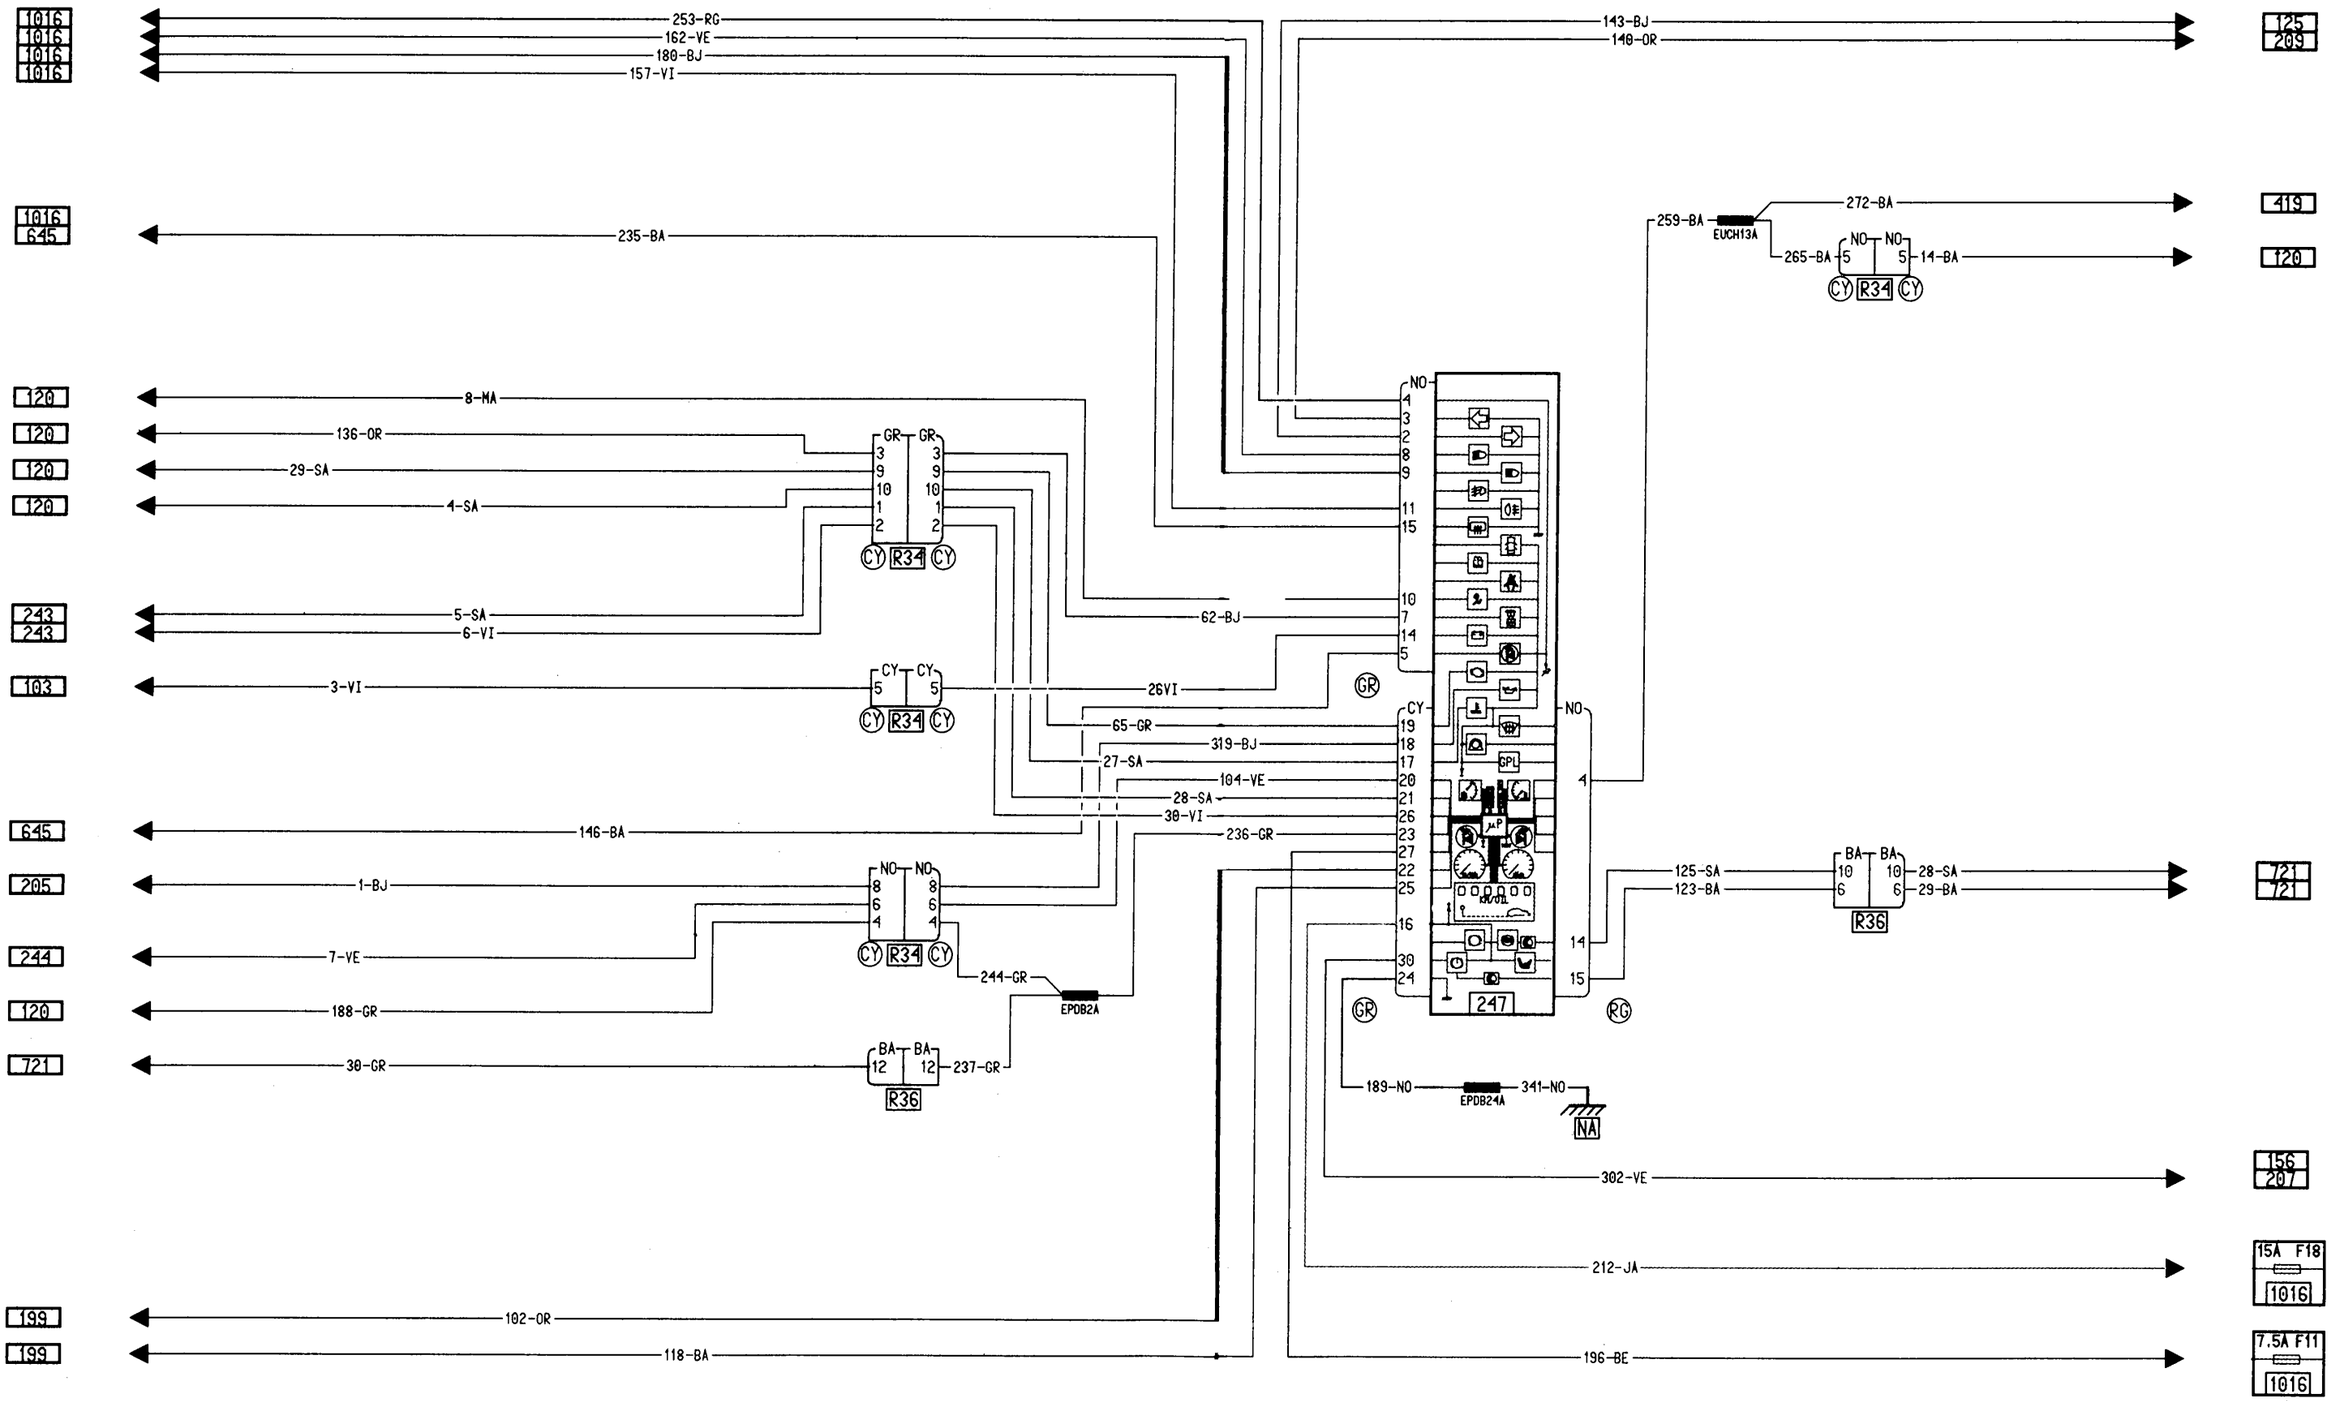
1016
1016
1016
1016
253-RG
162-VE
180-BJ
157-VI
143-BJ
140-OR
125
209
1016
645
235-BA
259-BA
EUCH13A
272-BA
265-BA
NO
5
14-BA
CY
R34
419
120
120
120
120
120
8-MA
136-OR
29-SA
4-SA
GR
3
9
10
1
2
NO
1
3
2
8
9
11
15
243
243
5-SA
6-VI
62-BJ
10
7
14
5
103
3-VI
CY
5
26VI
GR
65-GR
319-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
CY
19
18
17
20
21
26
23
27
22
25
16
30
24
NO
4
14
15
645
146-BA
205
1-BJ
NO
8
6
4
244
7-VE
244-GR
EPDB2A
120
188-GR
721
30-GR
BA
12
237-GR
R36
247
GPL
μP
125-SA
123-BA
BA
10
6
28-SA
29-BA
R36
721
721
GR
RG
189-NO
EPDB24A
341-NO
NA
156
207
302-VE
15A F18
1016
212-JA
199
199
102-OR
118-BA
196-BE
7.5A F11
1016

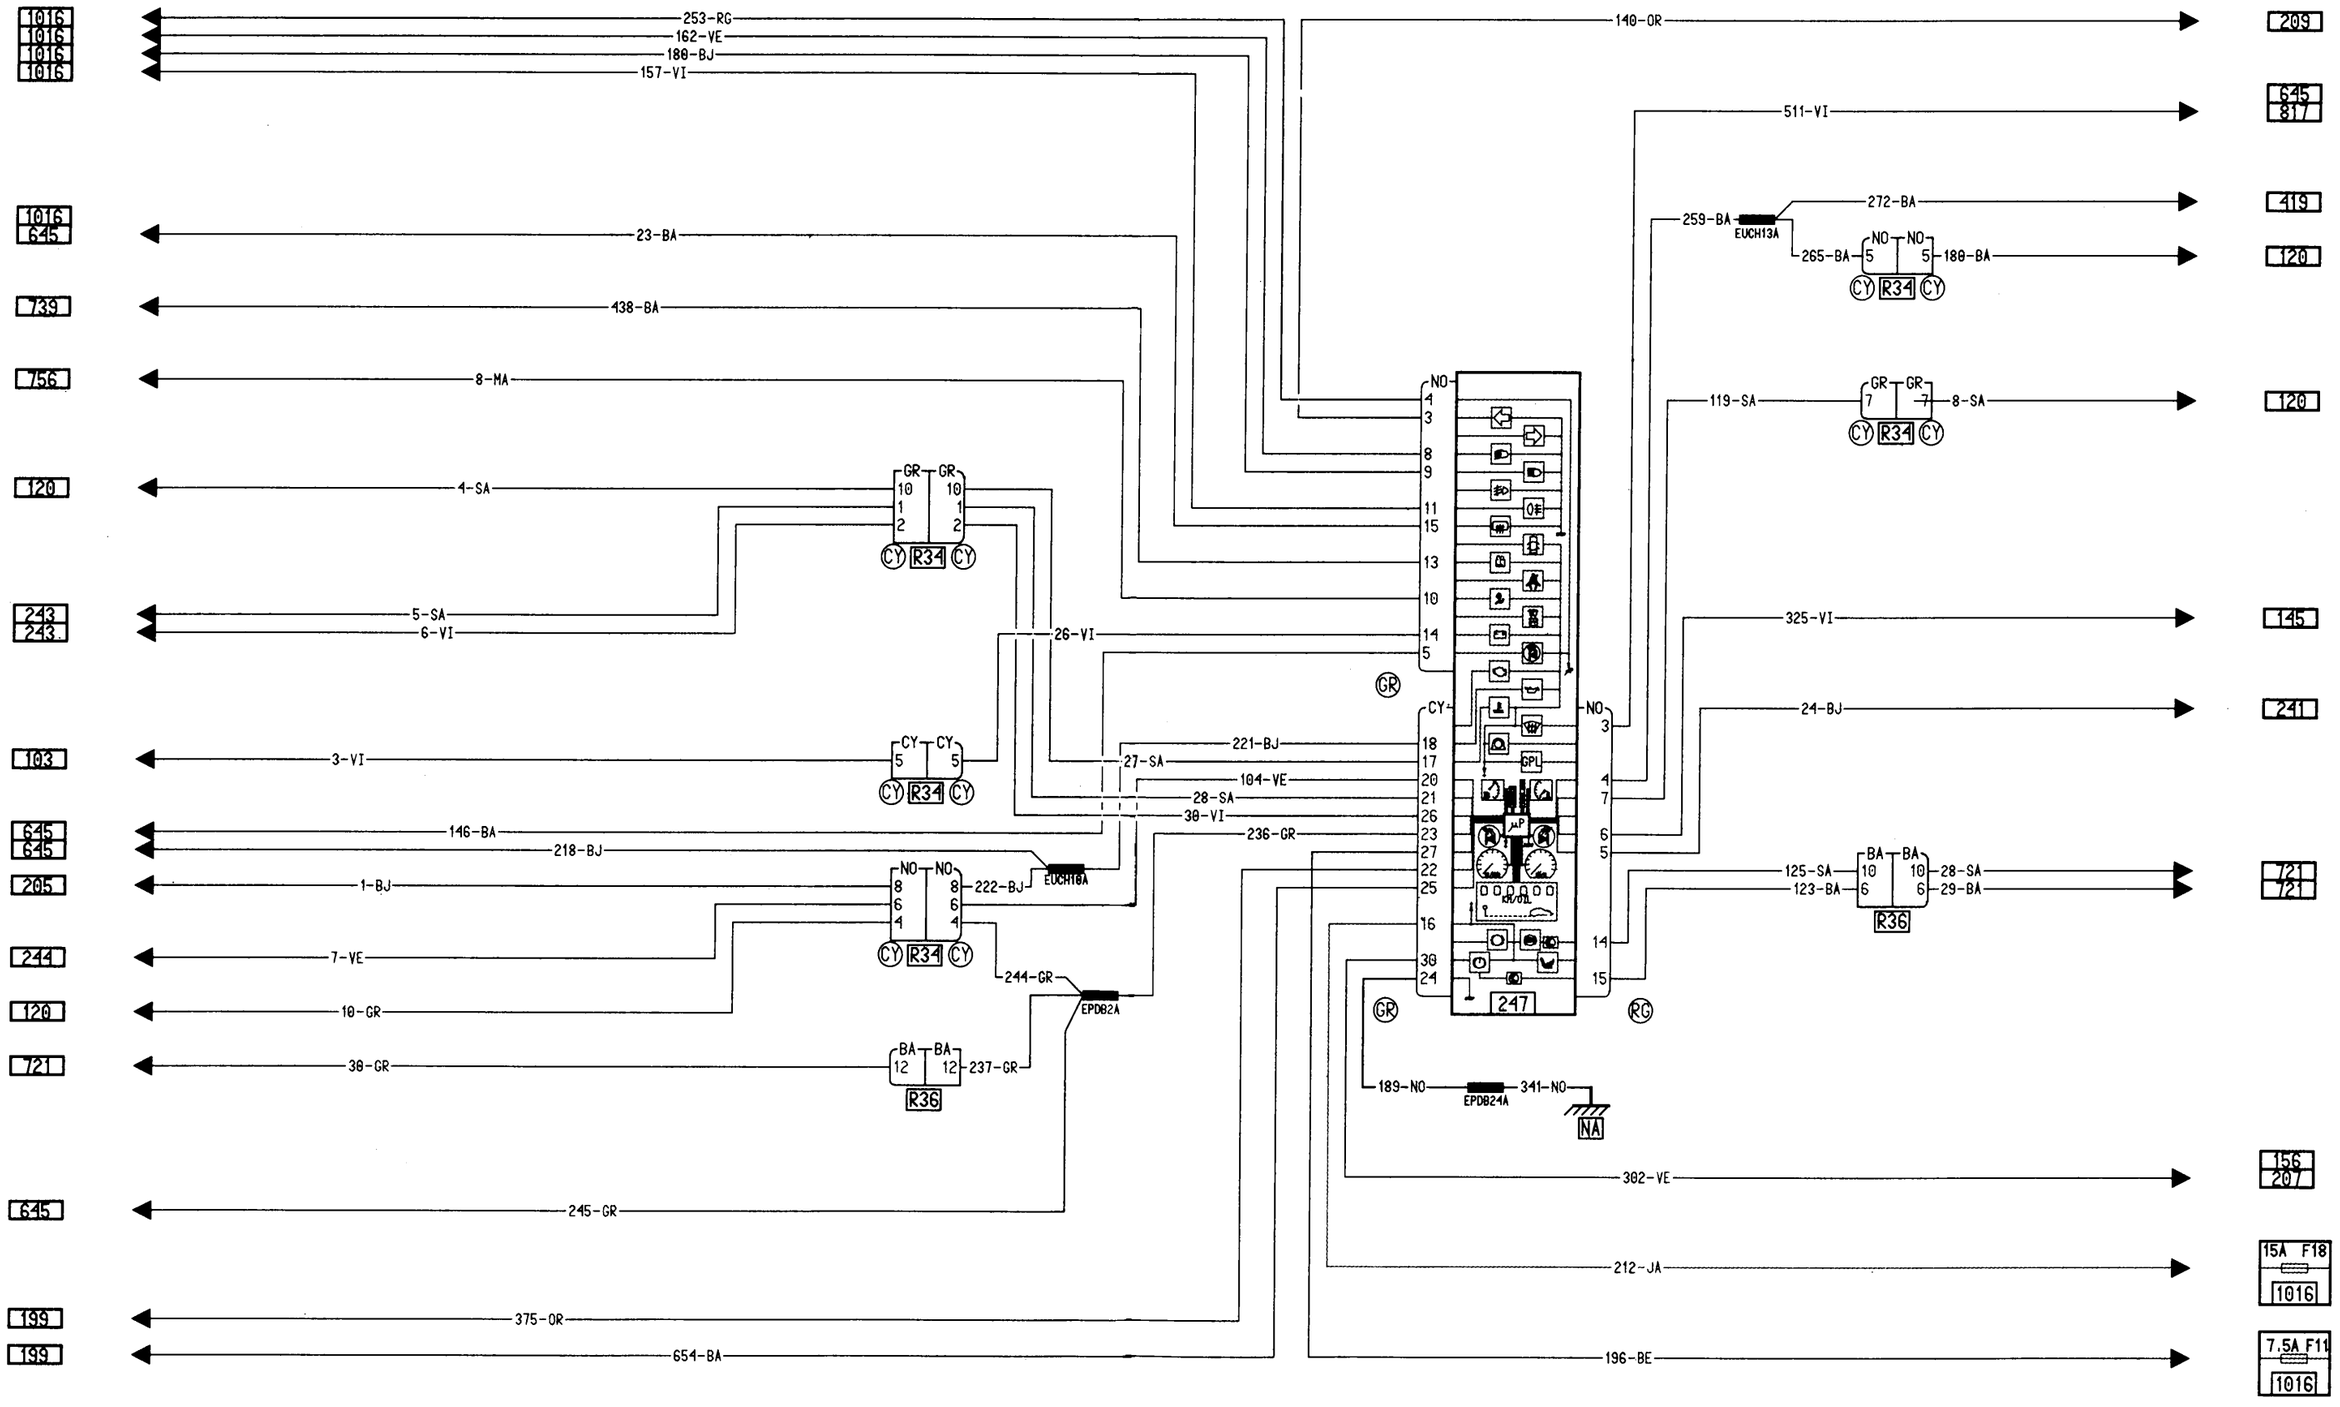
1016
1016
1016
1016
253-RG
162-VE
180-BJ
157-VI
140-OR
209
511-VI
645
817
1016
645
23-BA
272-BA
419
259-BA
EUCH13A
265-BA
180-BA
120
739
438-BA
756
8-MA
119-SA
8-SA
120
120
4-SA
325-VI
145
243
243
5-SA
6-VI
26-VI
24-BJ
241
103
3-VI
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
645
645
146-BA
218-BJ
205
1-BJ
222-BJ
EUCH18A
125-SA
123-BA
28-SA
29-BA
721
721
244
7-VE
244-GR
EPD82A
120
10-GR
721
38-GR
237-GR
189-NO
EPD82A
341-NO
NA
382-VE
156
207
645
245-GR
212-JA
15A F18
1016
199
375-OR
199
654-BA
196-BE
7.5A F11
1016
R34
R36
247
GR
CY
NO
BA
RC

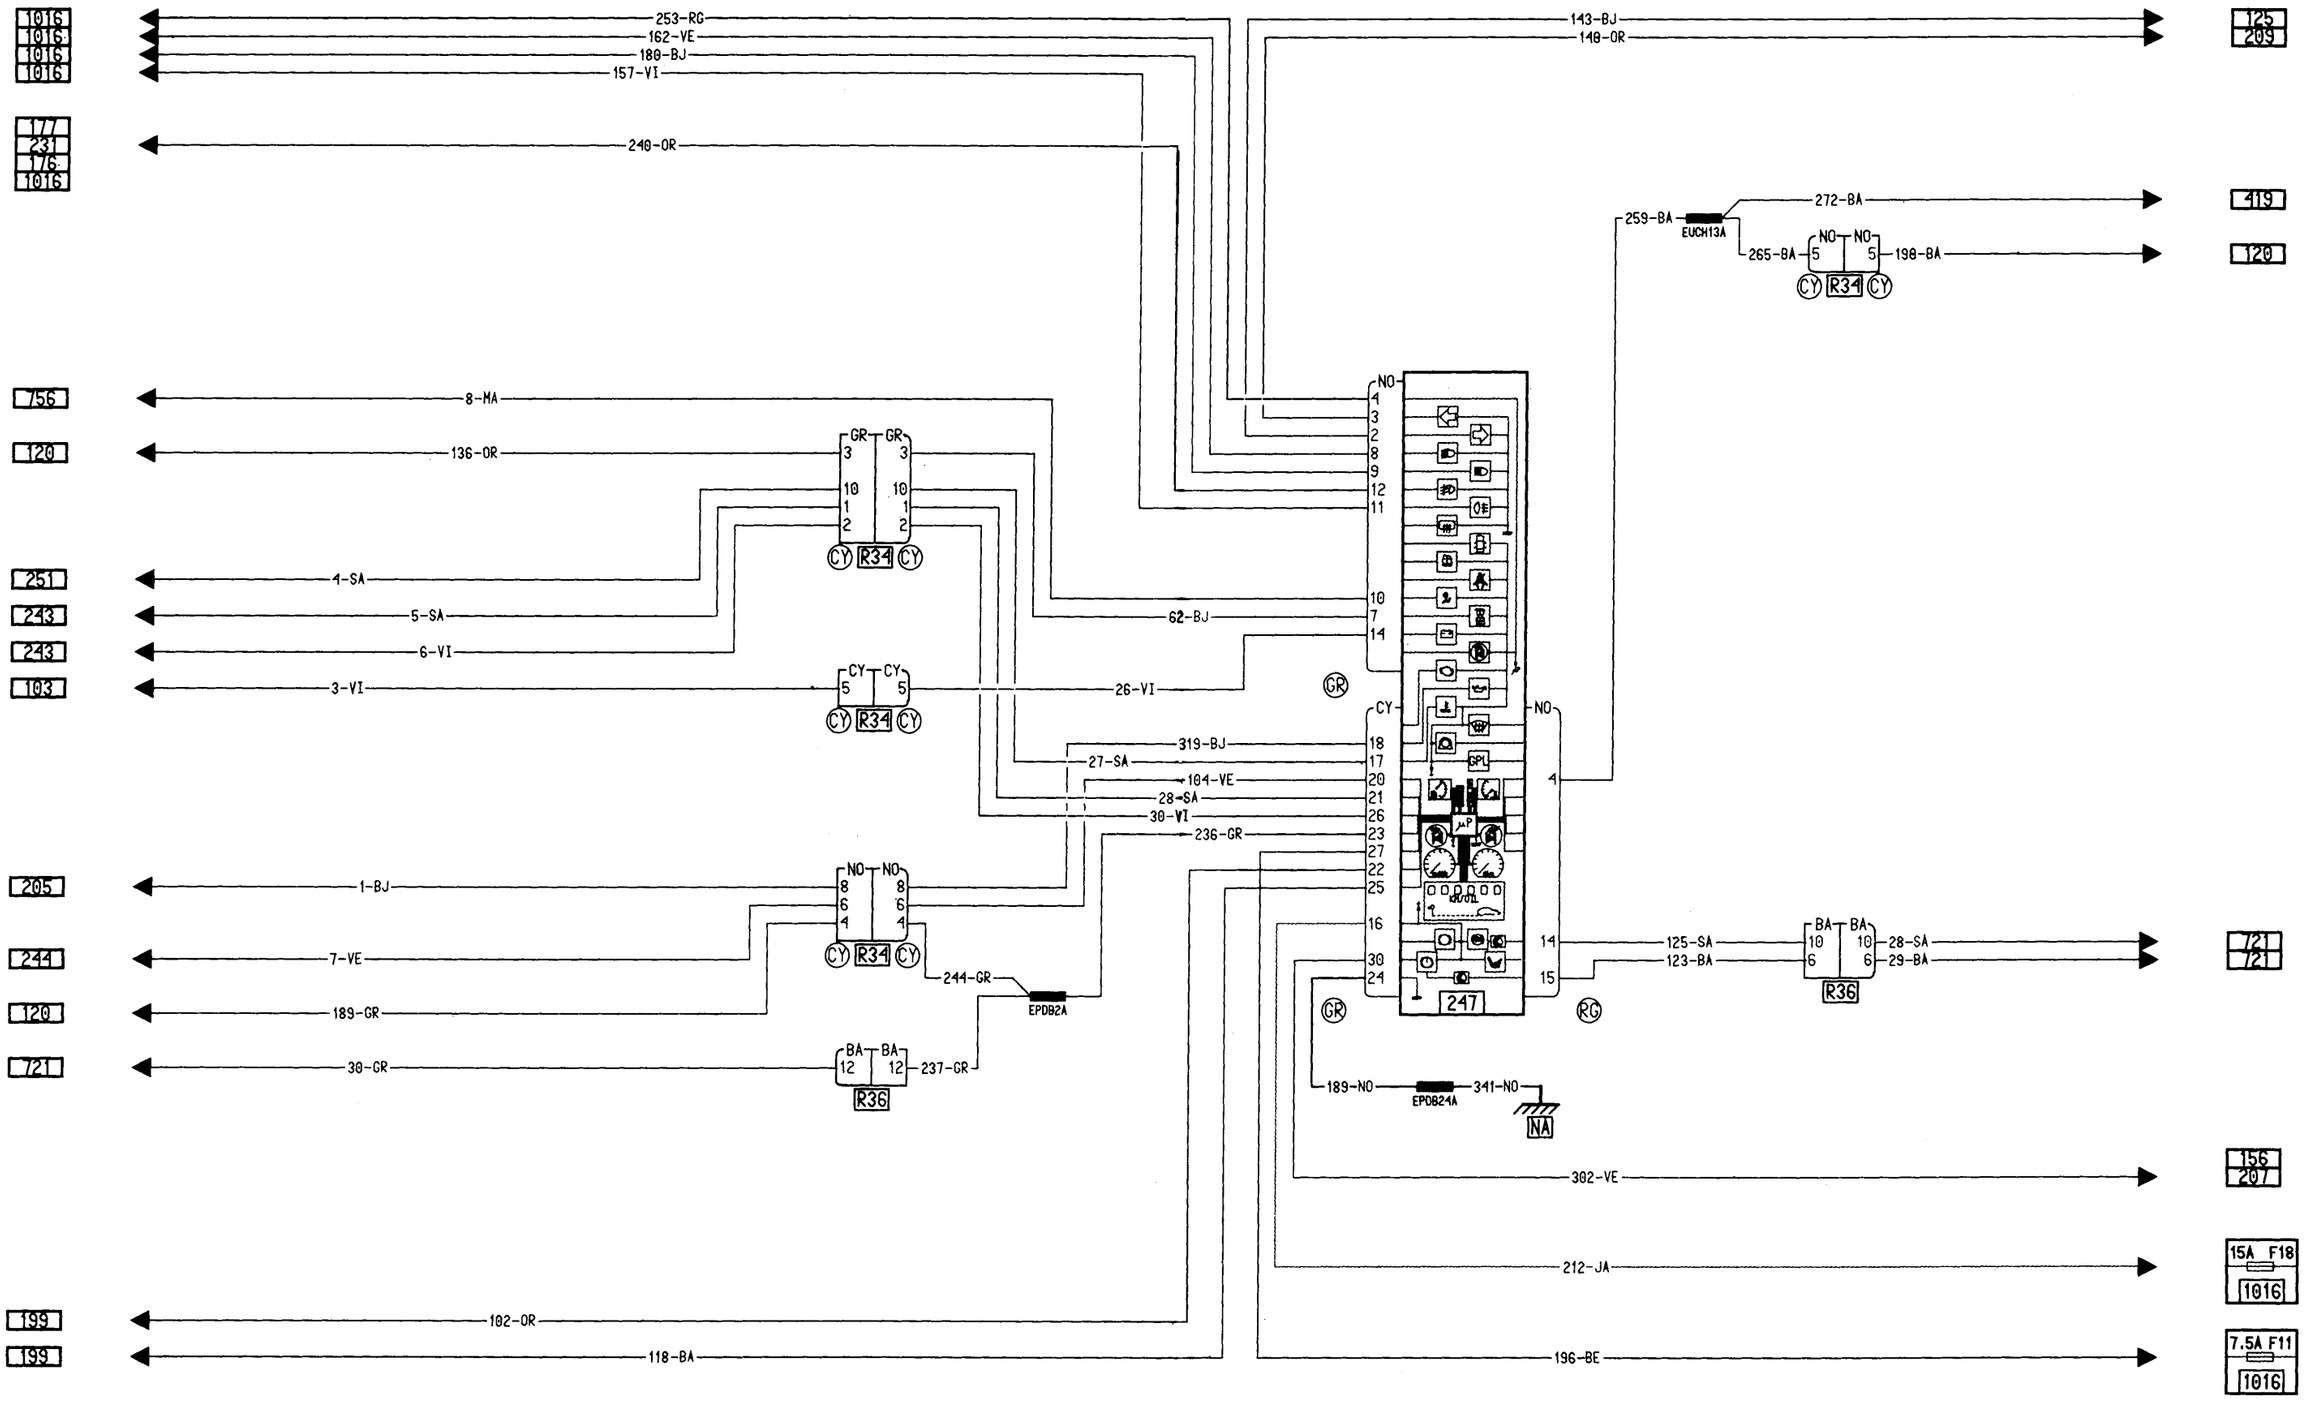
1016
1016
1016
1016
253-RG
162-VE
180-BJ
157-VI
143-BJ
140-OR
125
209
177
231
176
1016
240-OR
272-BA
259-BA
EUCH13A
265-BA
198-BA
419
120
NO
NO
CY
R34
756
8-MA
120
136-OR
GR
GR
251
1-SA
243
5-SA
243
6-VI
103
3-VI
26-VI
62-BJ
319-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
205
1-BJ
244
7-VE
120
189-GR
721
30-GR
244-GR
EPD82A
237-GR
BA
R36
247
125-SA
123-BA
28-SA
29-BA
721
189-NO
EPD824A
341-NO
NA
302-VE
156
207
212-JA
15A F18
1016
199
102-OR
199
118-BA
196-BE
7.5A F11
1016

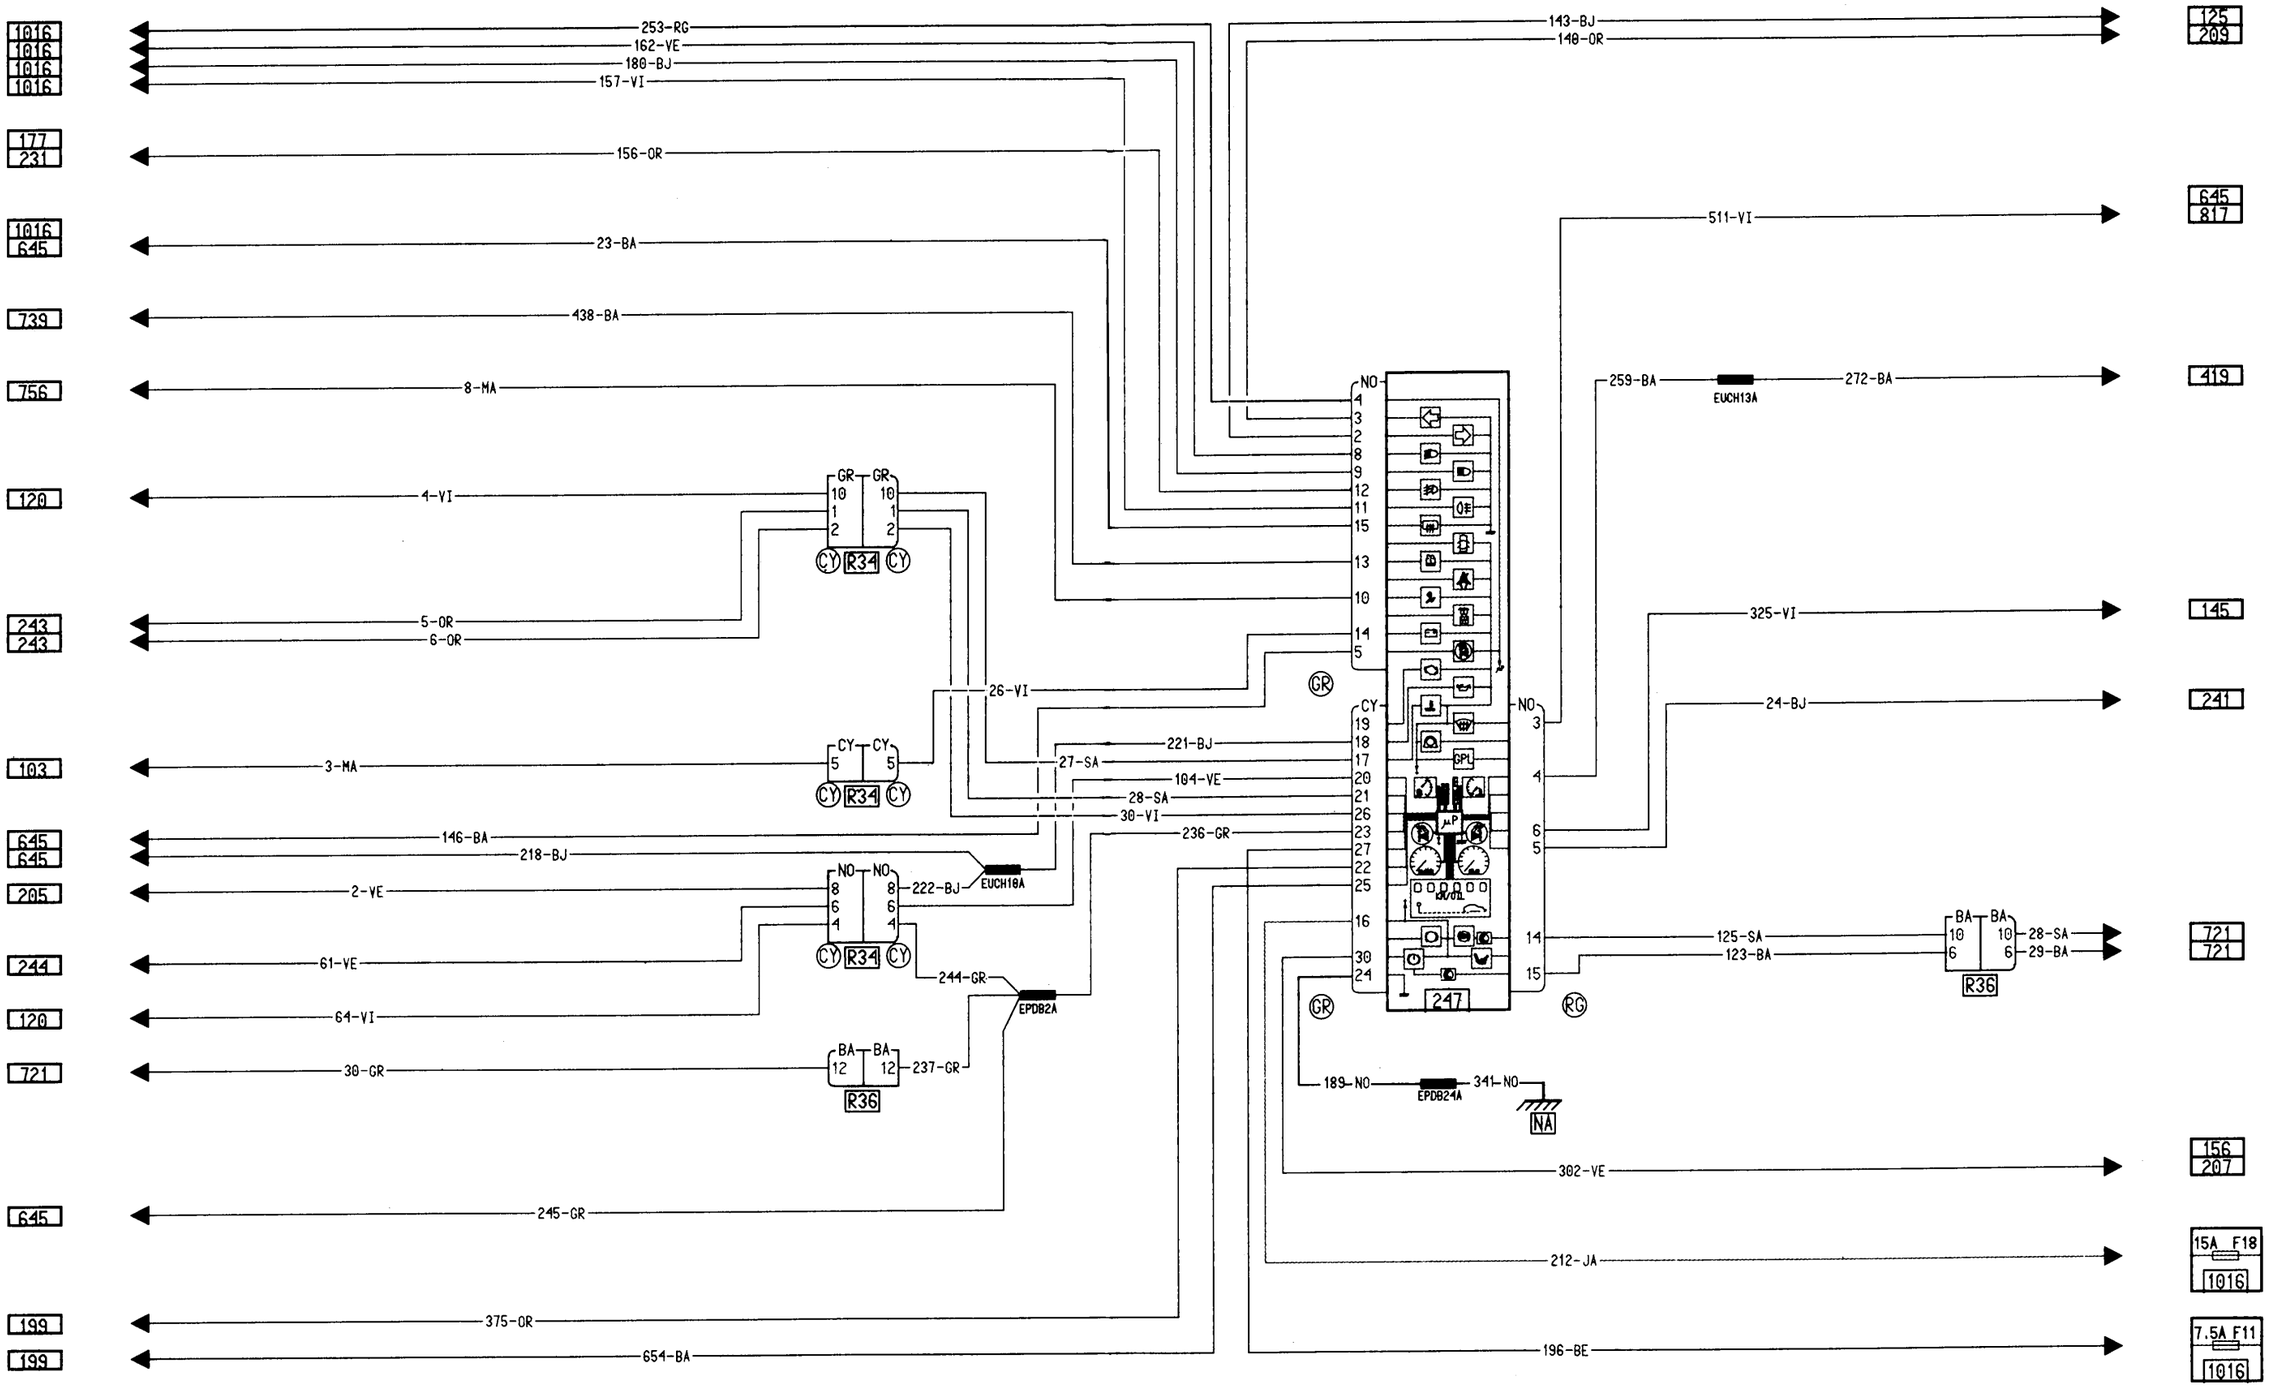
1016
1016
1016
1016
253-RG
162-VE
180-BJ
157-VI
143-BJ
140-OR
125
209
177
231
156-OR
645
817
1016
645
23-BA
511-VI
739
438-BA
259-BA
EUCH13A
272-BA
419
756
8-MA
NO
120
4-VI
GR
GR
10
1
2
CY
R34
CY
243
243
5-OR
6-OR
325-VI
145
26-VI
CY
19
18
17
20
21
26
23
27
22
25
16
30
24
NO
3
4
6
5
14
15
241
24-BJ
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
103
3-MA
CY
CY
5
5
645
645
146-BA
218-BJ
205
2-VE
NO
NO
8
6
4
222-BJ
EUCH10A
244
61-VE
244-GR
120
64-VI
EPDB2A
721
30-GR
BA
BA
12
12
237-GR
R36
247
GR
RG
125-SA
123-BA
BA
BA
10
6
10
6
28-SA
29-BA
R36
721
721
189-NO
EPDB24A
341-NO
NA
302-VE
156
207
645
245-GR
212-JA
15A F18
1016
199
375-OR
199
654-BA
196-BE
7.5A F11
1016

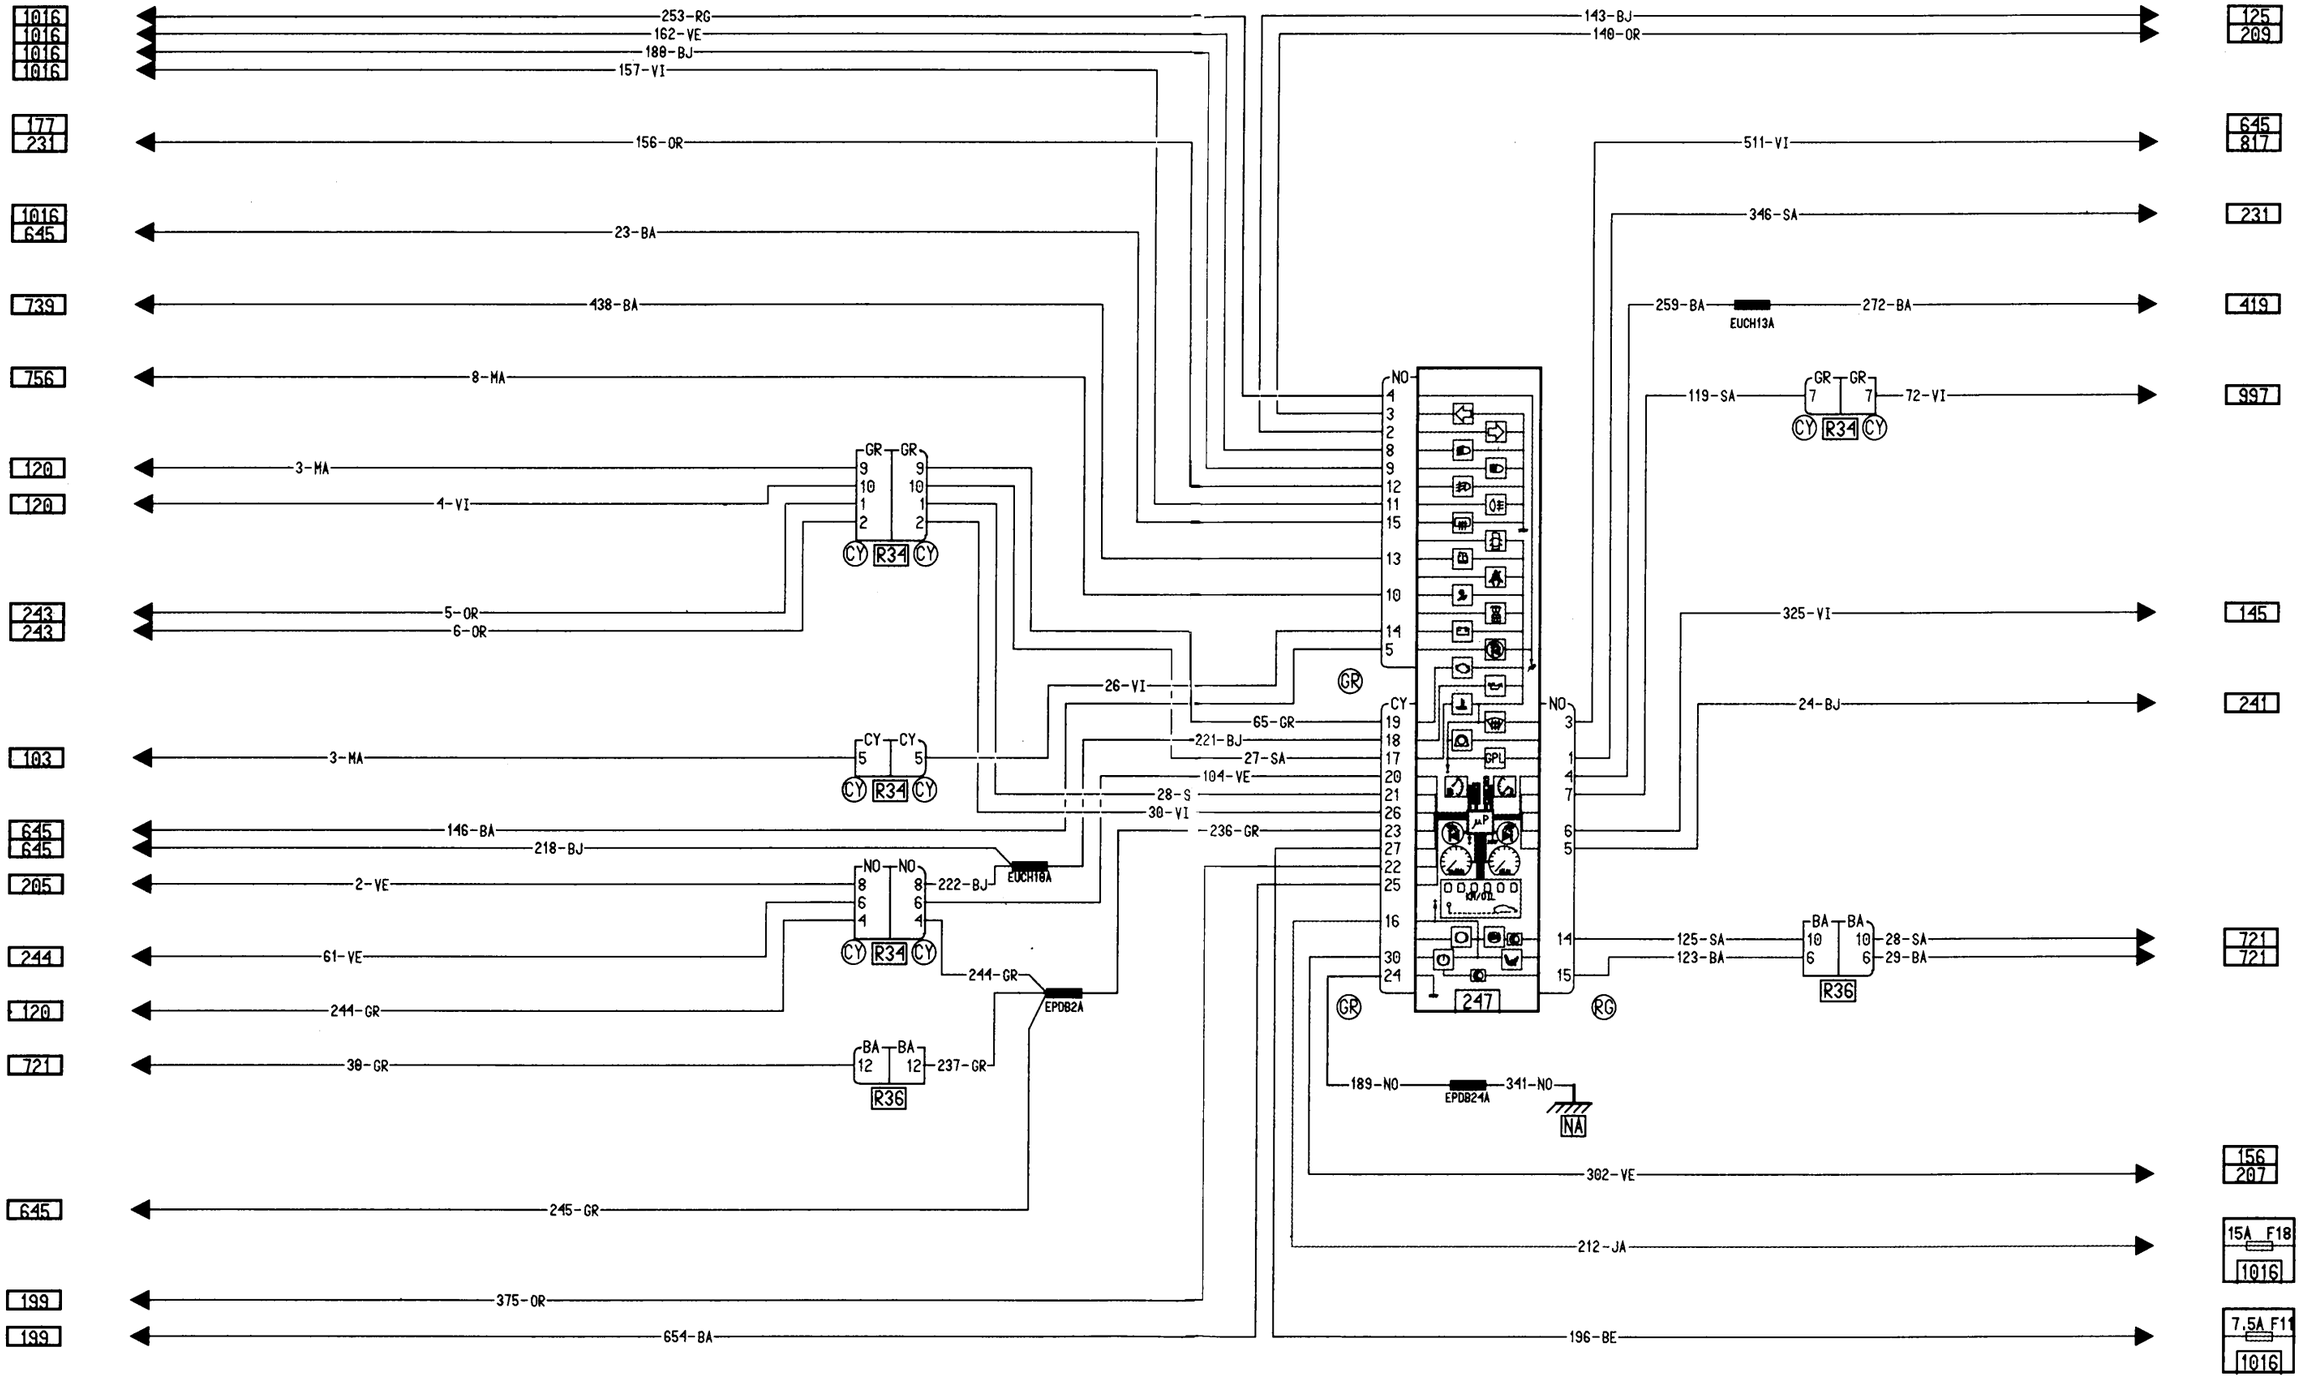
1016
1016
1016
1016
253-RG
162-VE
188-BJ
157-VI
143-BJ
140-OR
125
209
177
231
156-OR
511-VI
645
817
1016
645
23-BA
346-SA
231
739
438-BA
259-BA
EUCH13A
272-BA
419
756
8-MA
119-SA
GR
7
7
72-VI
997
CY
R34
120
3-MA
120
1-VI
NO
4
3
2
8
9
12
11
15
13
10
14
5
GR
9
10
1
2
9
10
1
2
243
243
5-OR
6-OR
145
26-VI
241
24-BJ
65-GR
221-BJ
27-SA
104-VE
28-S
30-VI
236-GR
CY
19
18
17
20
21
26
23
27
22
25
16
30
24
NO
3
1
4
7
6
5
14
15
GPL
μP
KM/01L
247
103
3-MA
645
645
146-BA
218-BJ
205
2-VE
222-BJ
EUCH18A
244
61-VE
244-GR
120
244-GR
EPDB2A
721
30-GR
237-GR
BA
12
12
R36
125-SA
123-BA
BA
10
6
10
6
28-SA
29-BA
721
721
189-NO
EPDB24A
341-NO
NA
156
207
302-VE
645
245-GR
15A F18
1016
212-JA
199
375-OR
7.5A F11
1016
199
654-BA
196-BE

SEATBELT LIGHT

(B64,D64,E64,K25,L64/E2/DG),(E64/E2/DD)

X64
00

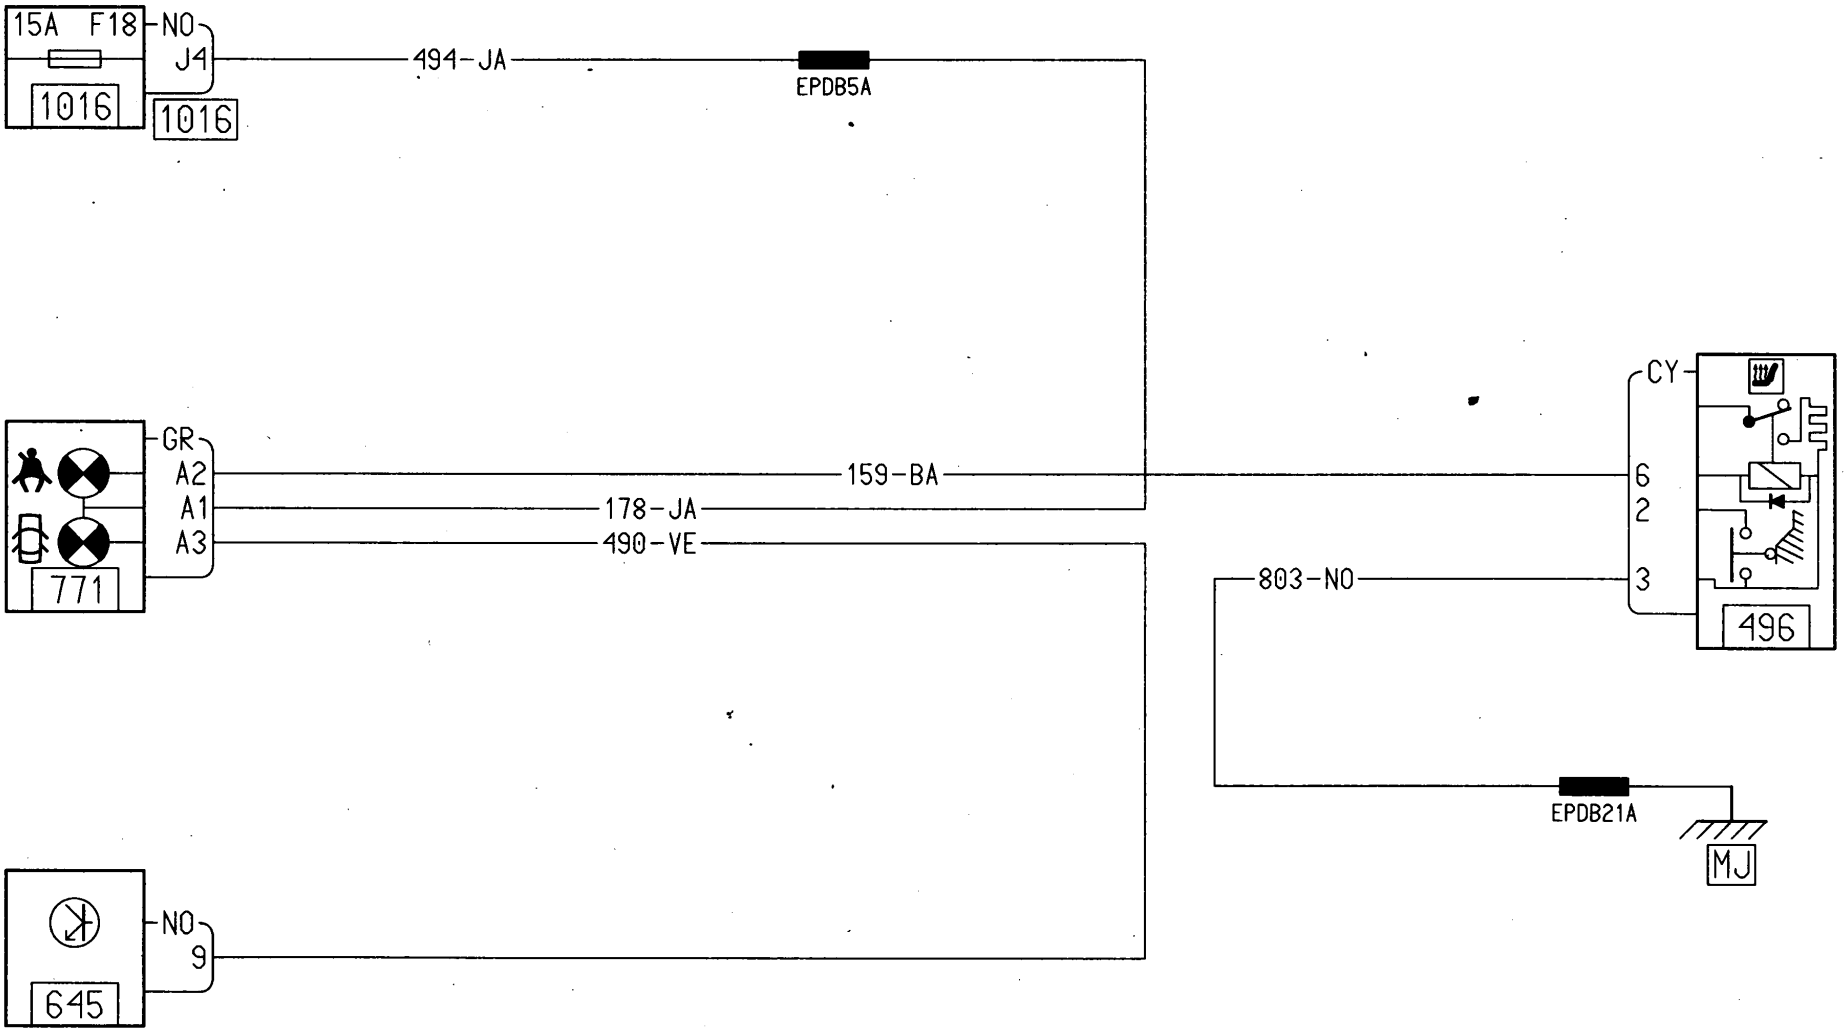

SEATBELT LIGHT

S64/E1/DG

X64

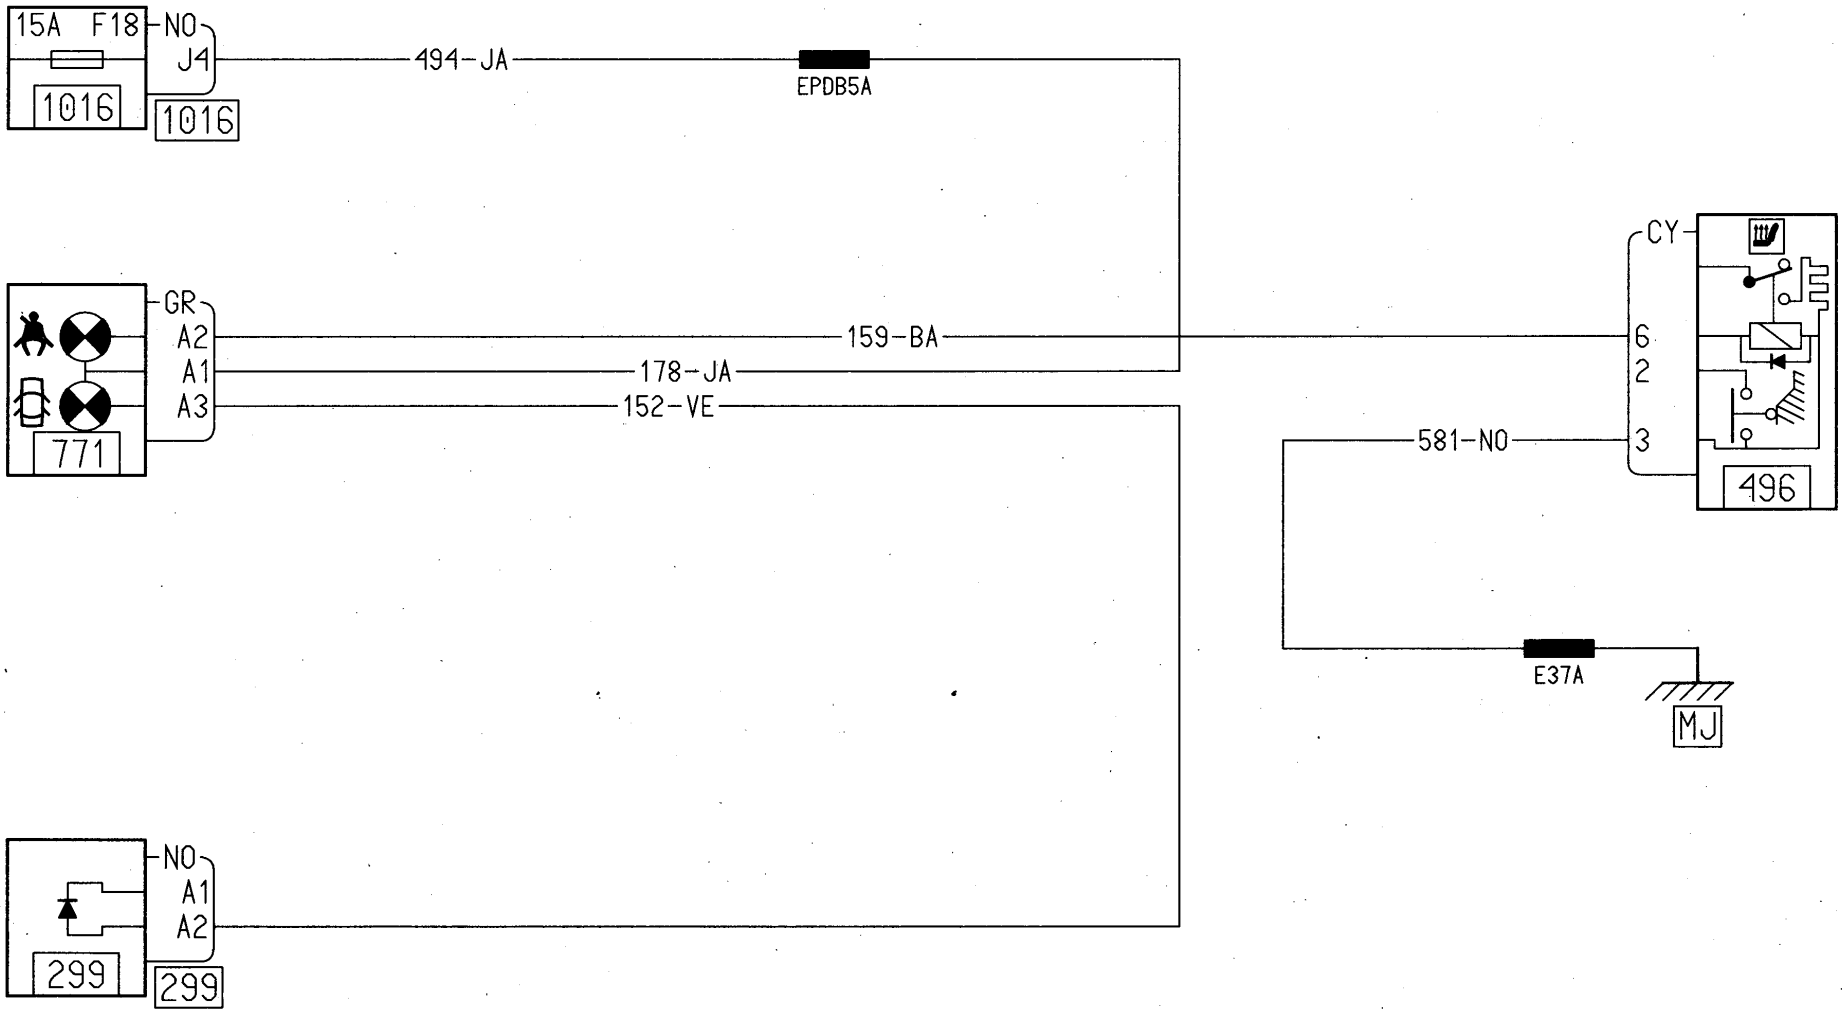

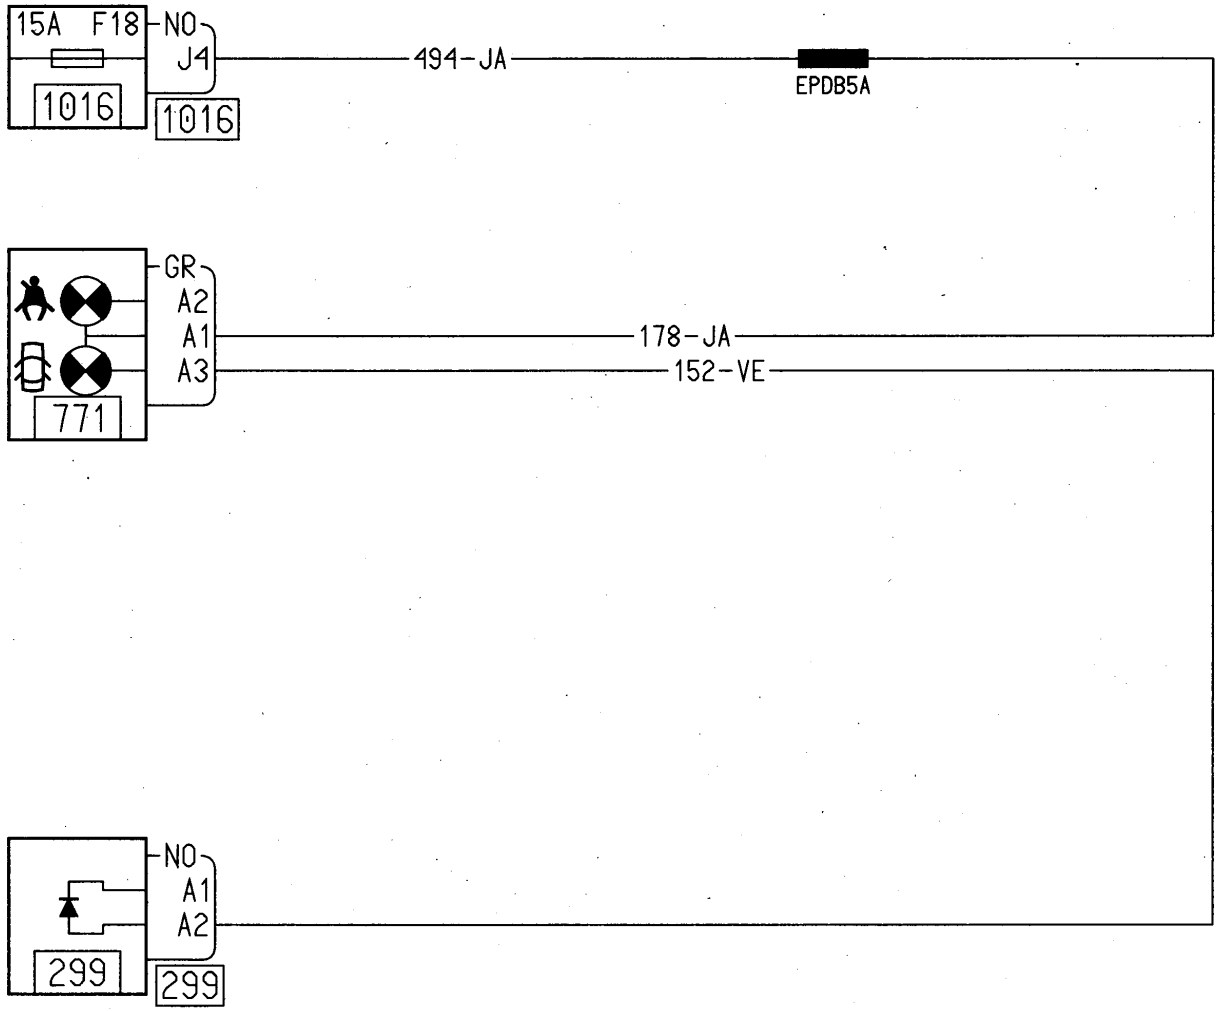
15A F18
1016
NO
J4
1016
494-JA
EPDB5A
GR
A2
A1
A3
771
178-JA
152-VE
NO
A1
A2
299
299

HANDBRAKE LIGHT

E2/DG

X64

00

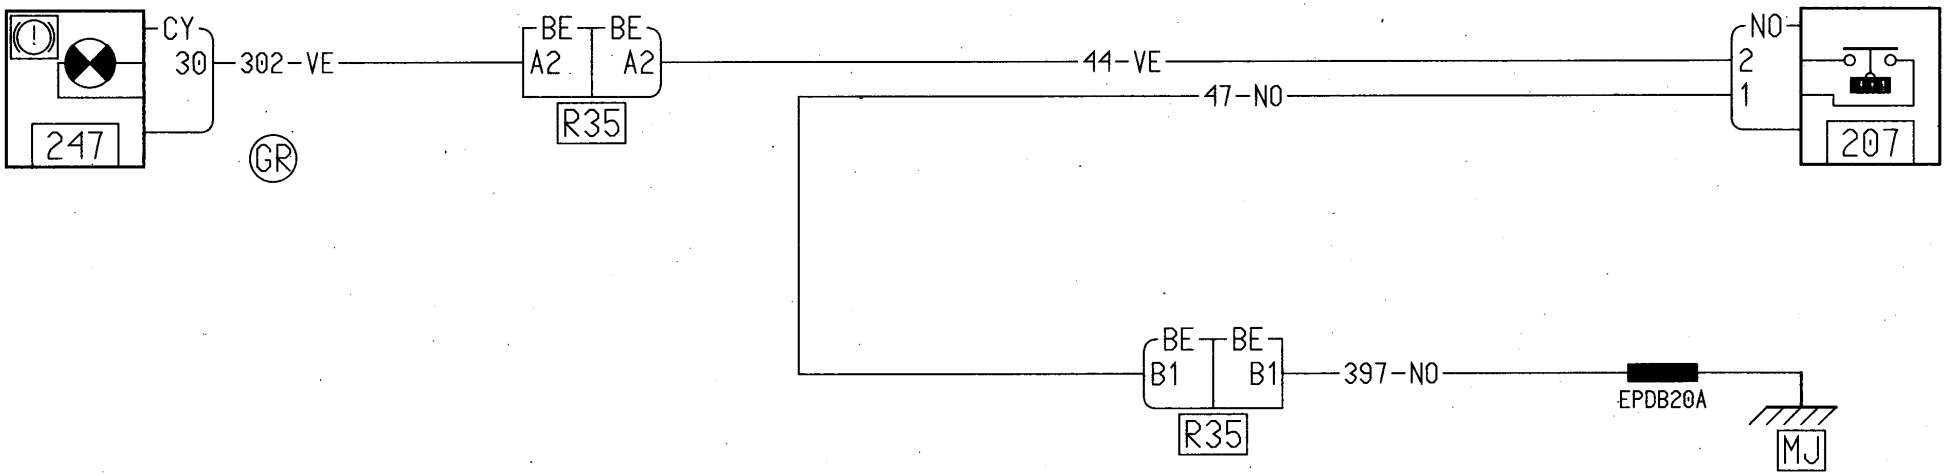

HANDBRAKE LIGHT

(K25/E2/DG),(S64,V25/E1/DG)

X64

00

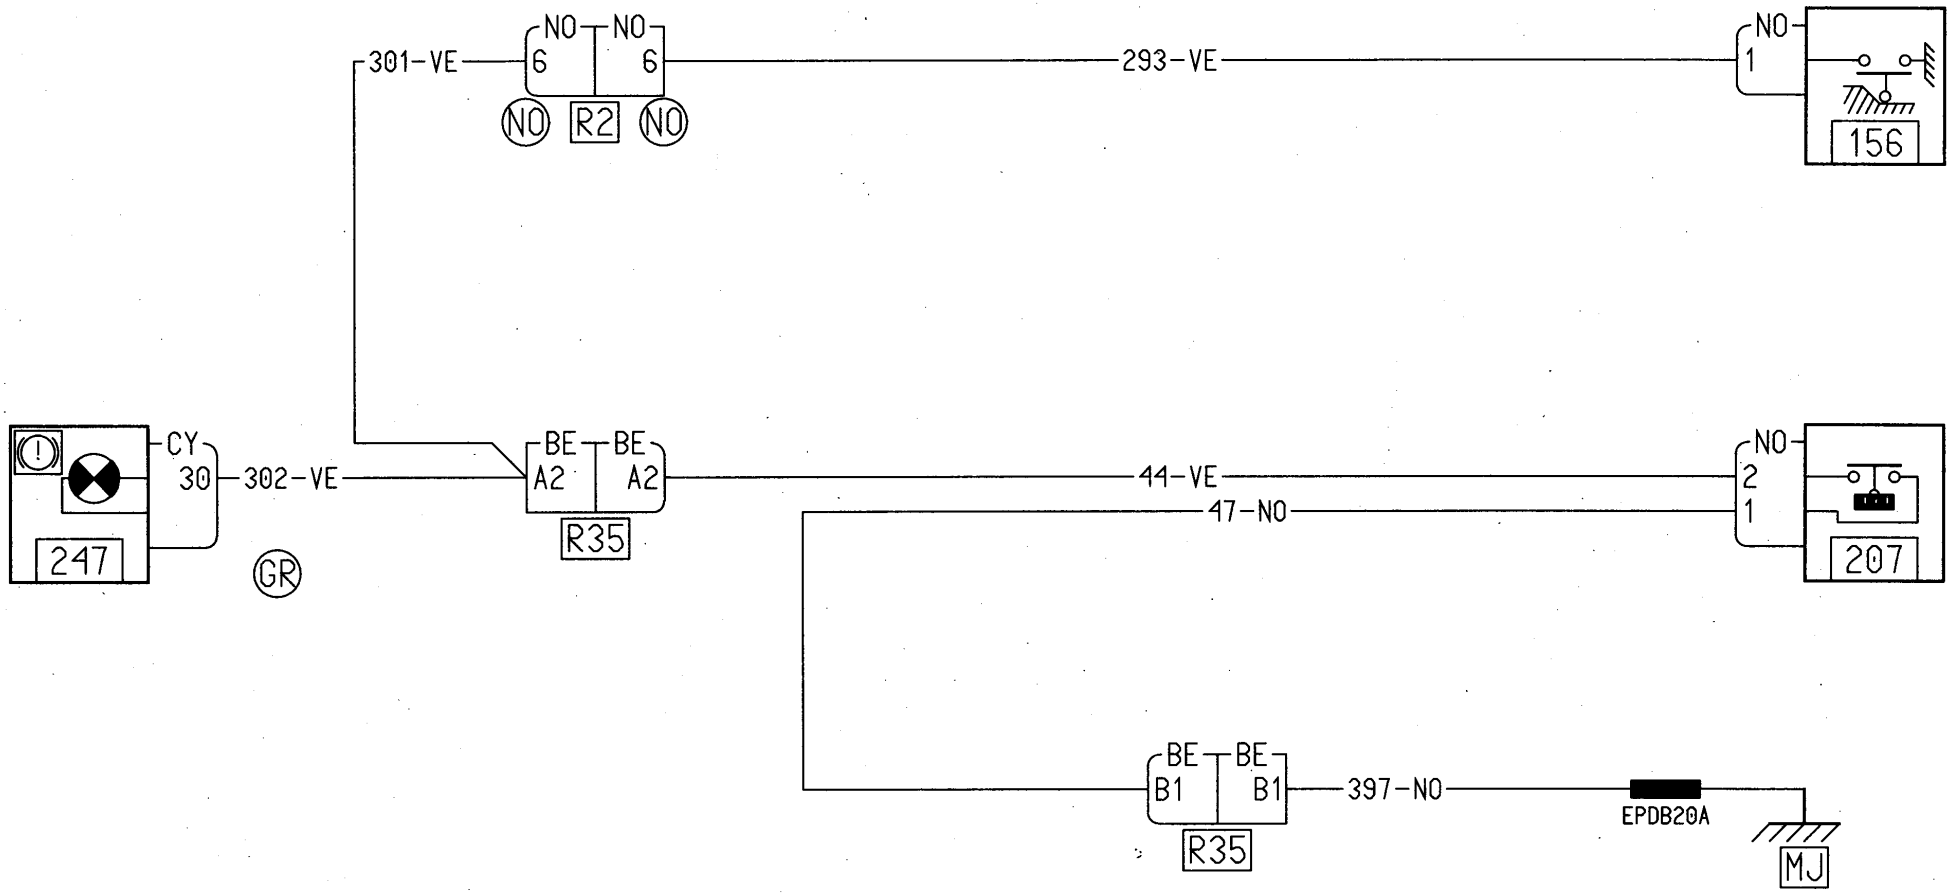

HANDBRAKE LIGHT

E64/E2/DD/CATOEL

X64
00

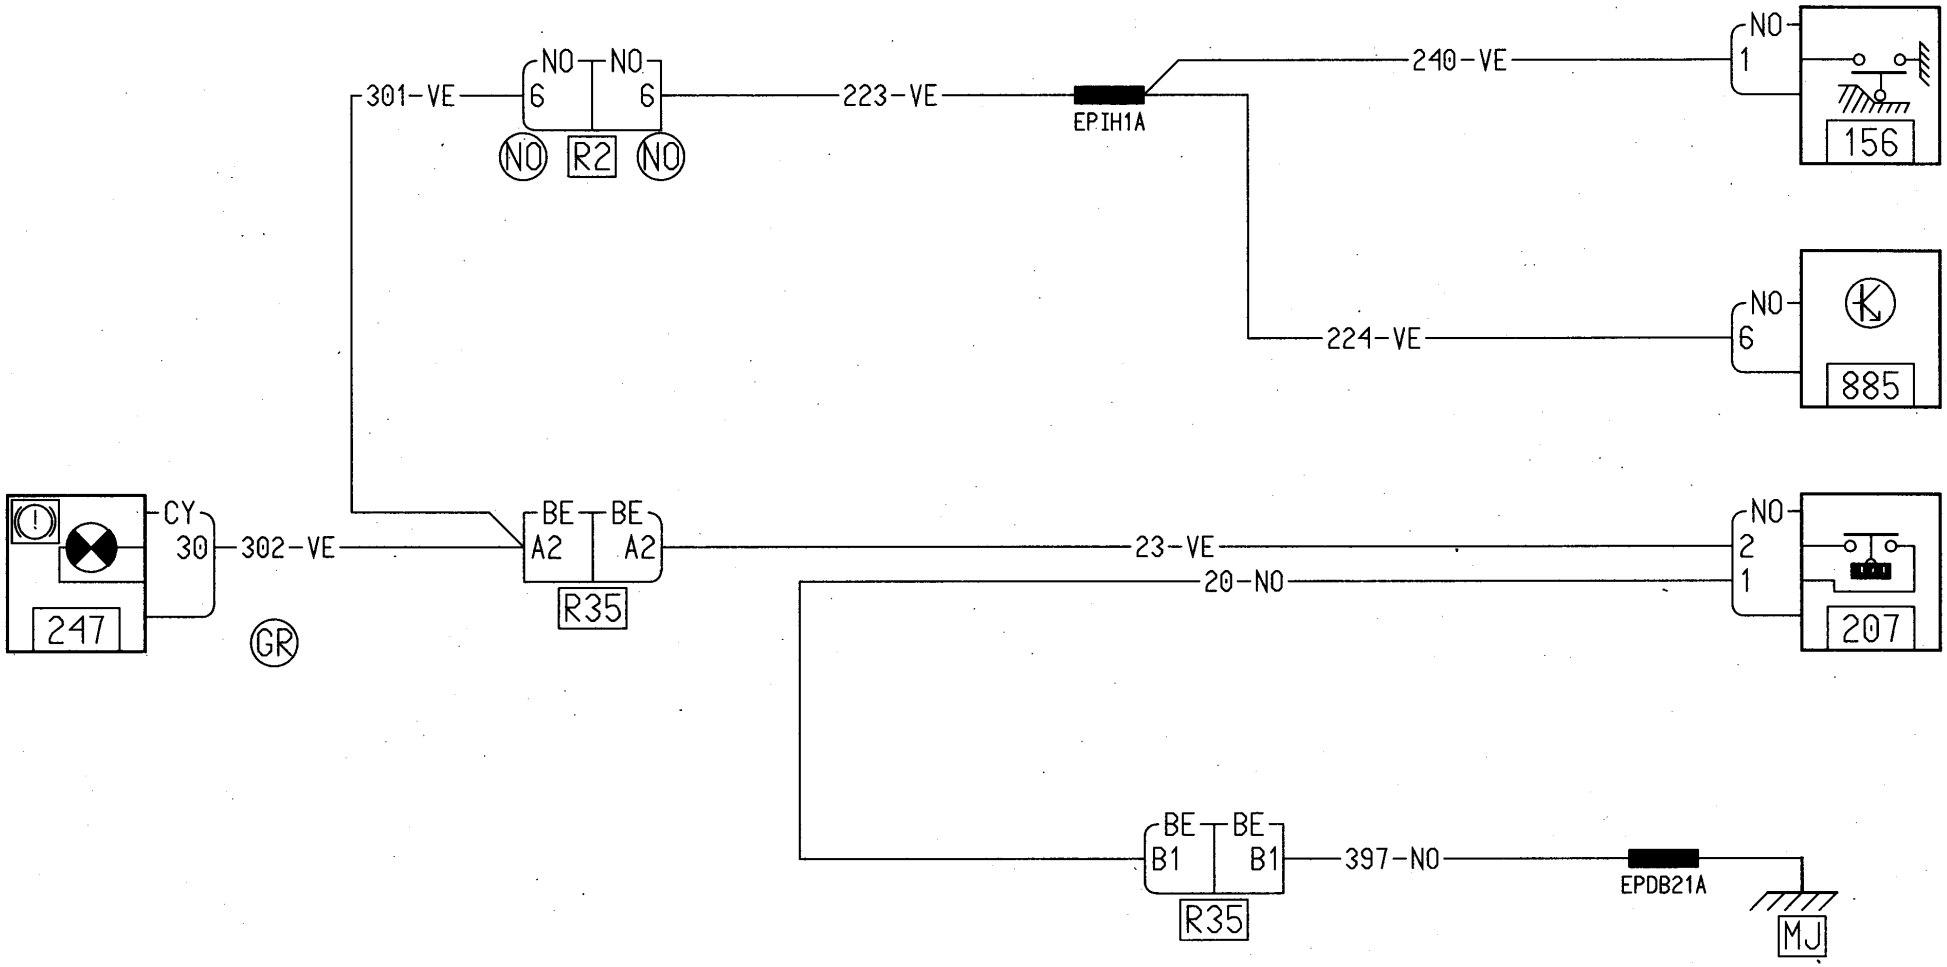

HANDBRAKE LIGHT

E64/E2/DG/CATOMA

X64
00

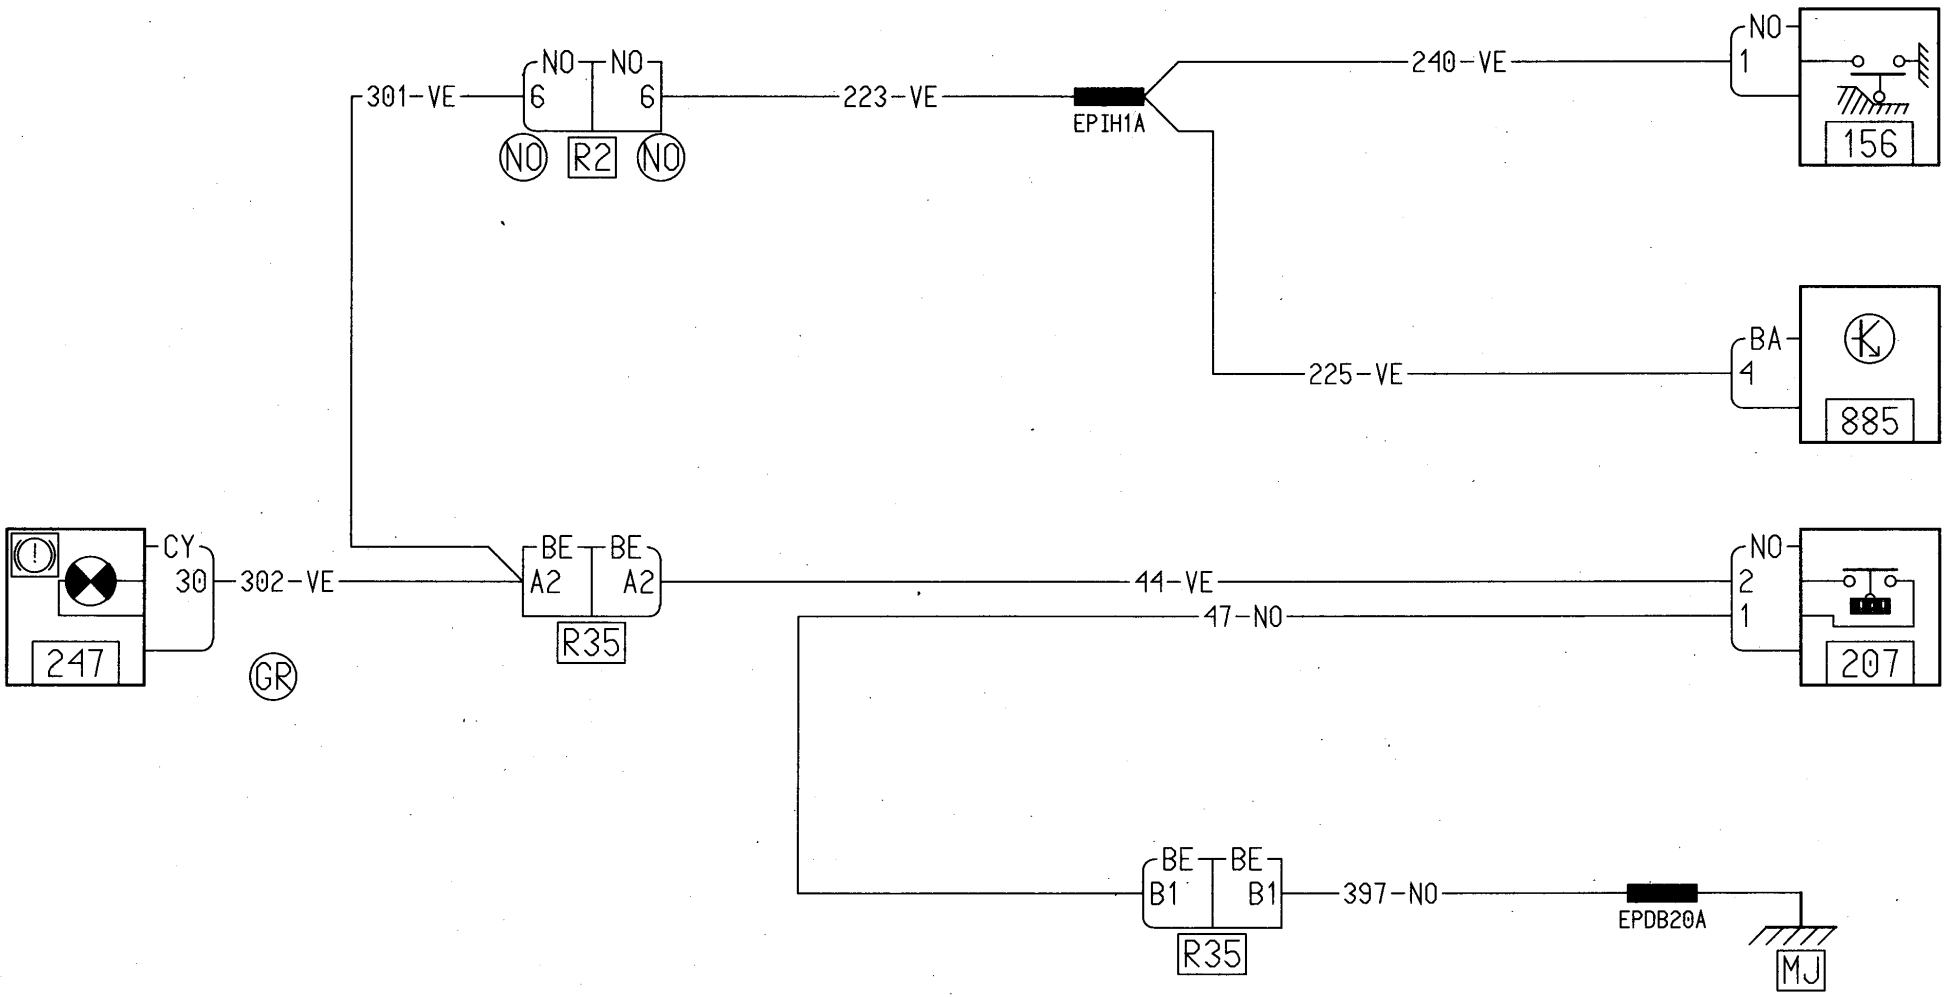

	MIN WASHER LIQUID WARNING LIGHT E2/DG/RUNLI	X64 00

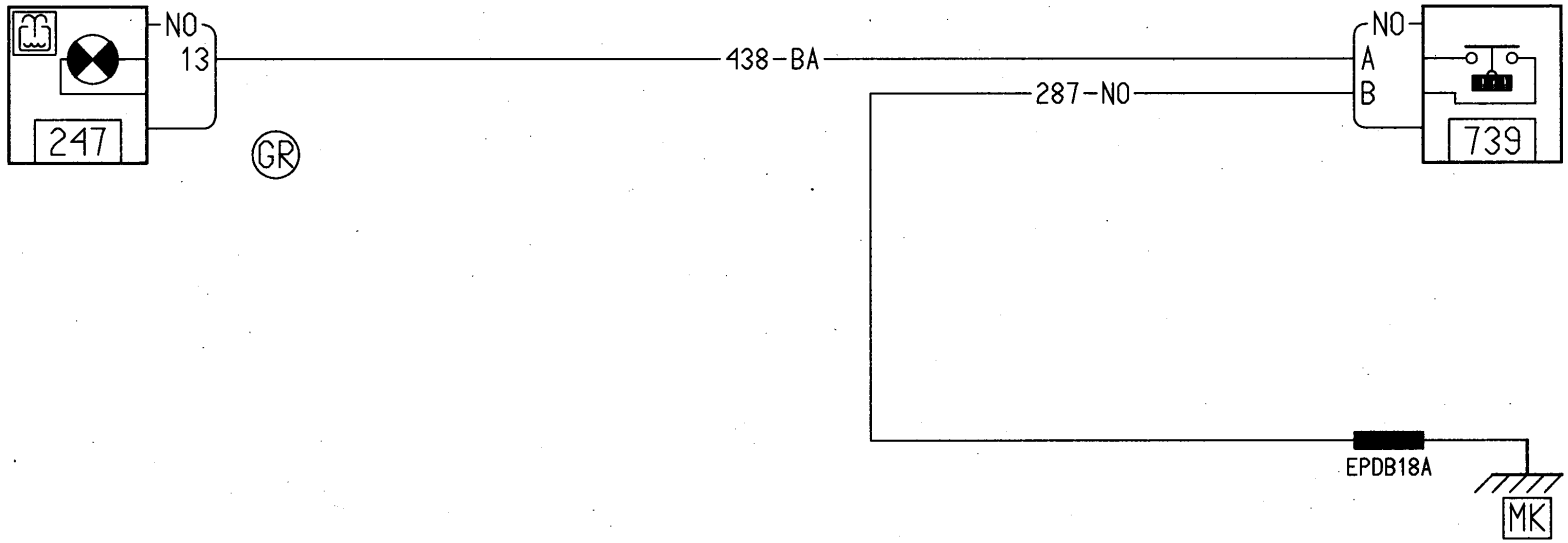

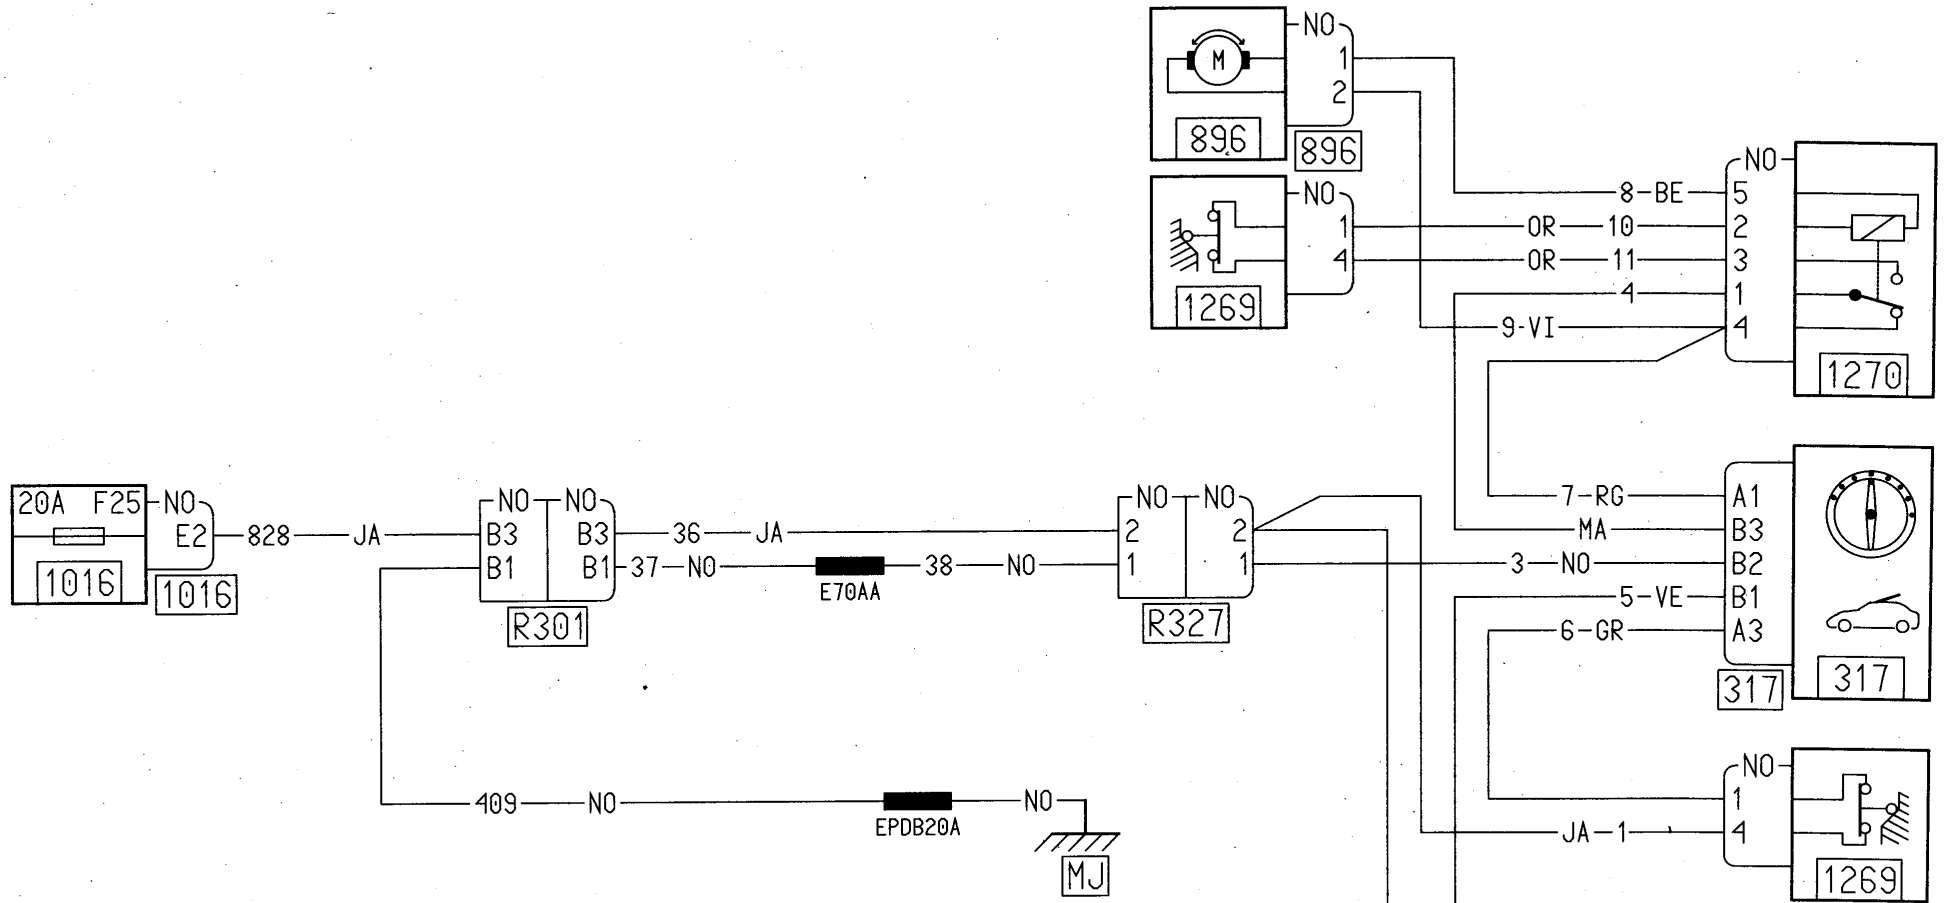
M
NO
1
2
896
896
NO
1
4
1269
8-BE
OR
10
OR
11
4
9-VI
NO
5
2
3
1
4
1270
20A F25
NO
E2
1016
1016
828
JA
NO
B3
B1
NO
B3
B1
R301
36
JA
37
NO
E70AA
38
NO
NO
2
1
NO
2
1
R327
7-RG
MA
3
NO
5-VE
6-GR
A1
B3
B2
B1
A3
317
317
NO
1
4
1269
JA
1
NO
1
4
1269
JA
2
409
NO
EPDB20A
NO
MJ

,-./ !012.3045671-18 6 01-1 9 :4-.51 **(1016)**
(,4;.9<8 =0.915> /.?!-1/74@66 **)**

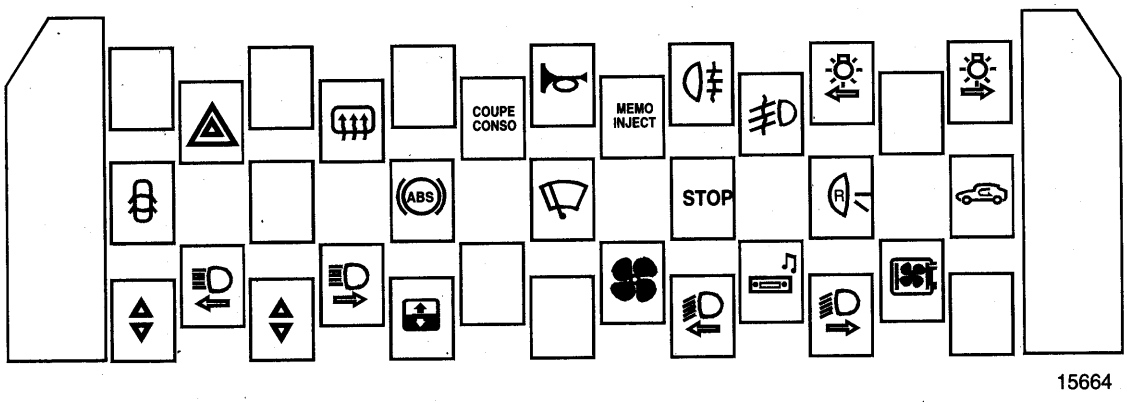

15664

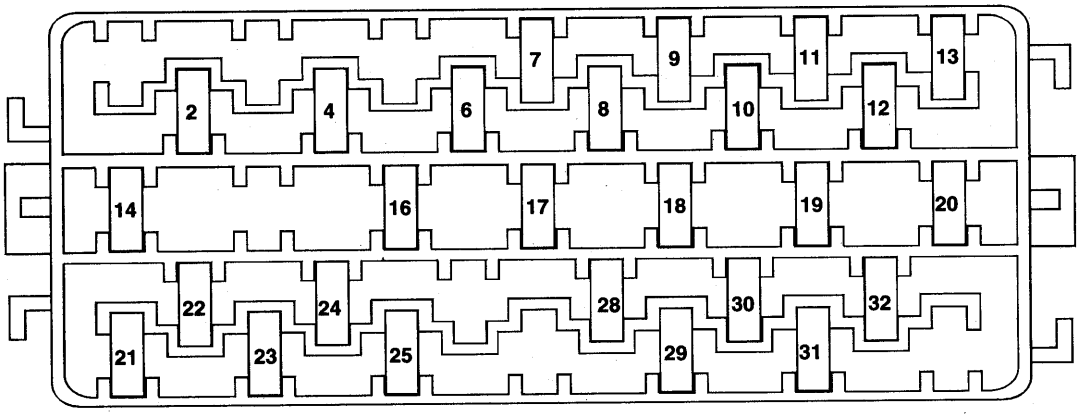

15665

, ( )

A	:)BC%+	:)+' *%D'	5'E('F#()#
F1		—	
F2		15 A	
F3		—	
F4		25	
F5		—	
F6	**COUPE CONSO**	15 A	: — — — —
F7		15 A	

A	:)BC%+	:)+' *%D'	5'E('F#()#
F8	MEMO INJECT	5	— — —
F9		5	
F10		15 A	
F11		7,5	
F12		—	
F13		7,5	
F14		20	
F15		—	
F16	ABS	5	
F17		20	
F18	STOP	15 A	— — — - — — — — — «+» —
F19		15 A	—
F20		7,5	
F21		25	
F22		10	
F23		25	
F24		10	
F25		20	
F26		—	
F27		—	
F28		20	
F29		10	
F30		15 A	— — —
F31		10	
F32		20	100

,-./ !012.3045671-18 6 01-1 9 :4-.51 **(299)**
(,4;.9<8 =0.915> /.?!-1/74@66 **)**

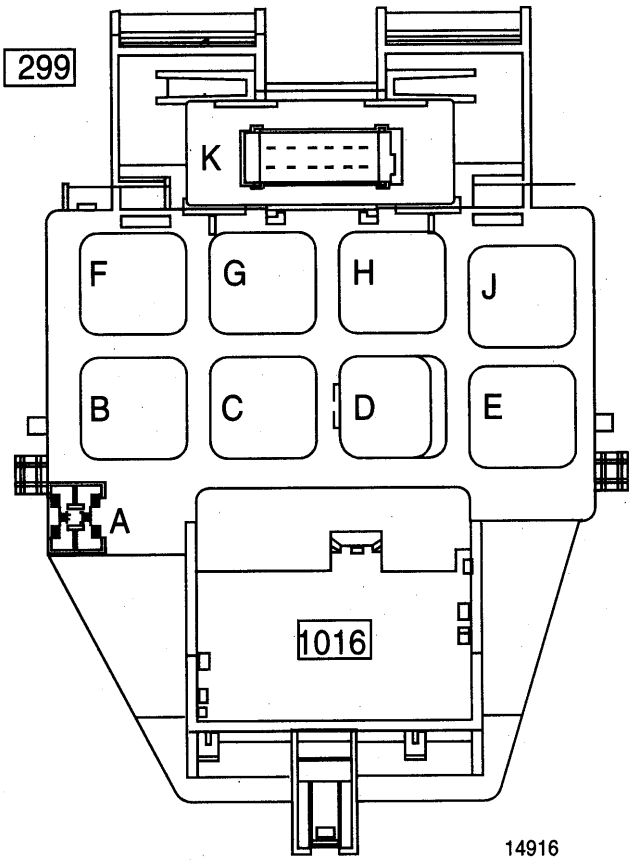

( )

	5'E('F#()#
A	/
B	0#+# C"#B#() (117)
C	0#+# C"#B#() (294)
D	0#+#-G"#"HC'*#+I (113)
E	«+» , G)*'()# (853)
F	- (137)
G	0#+#-G"#"HC'*#+I (112)
H	0#+# (264)
J	0#+# (231)
K	,+%D $#D%$#"' ( ) (503)

,-./ !012.3045671-18 9 :4-.51 **(1016)**

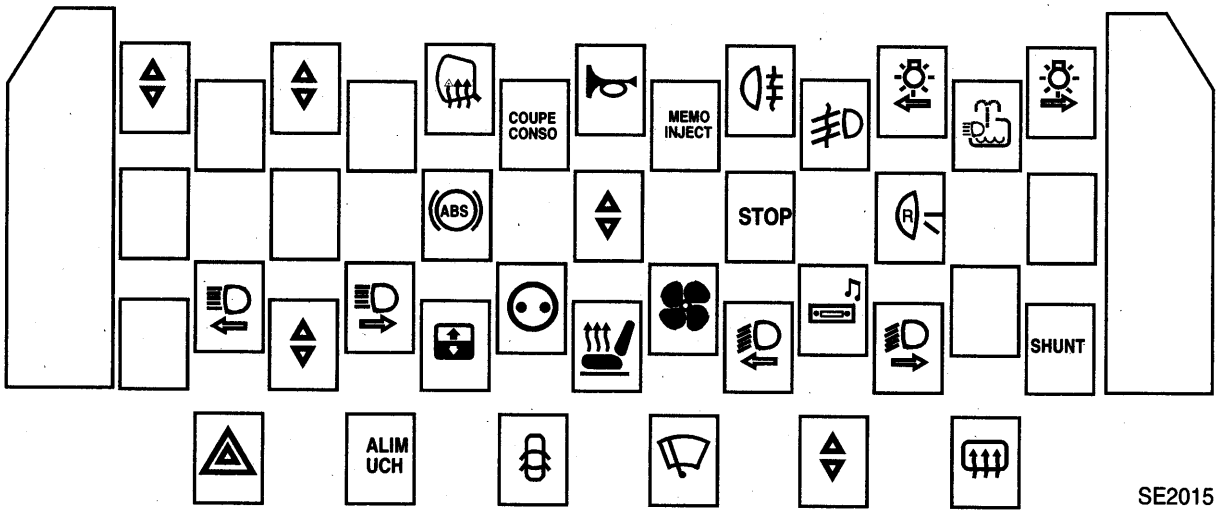

SE2015

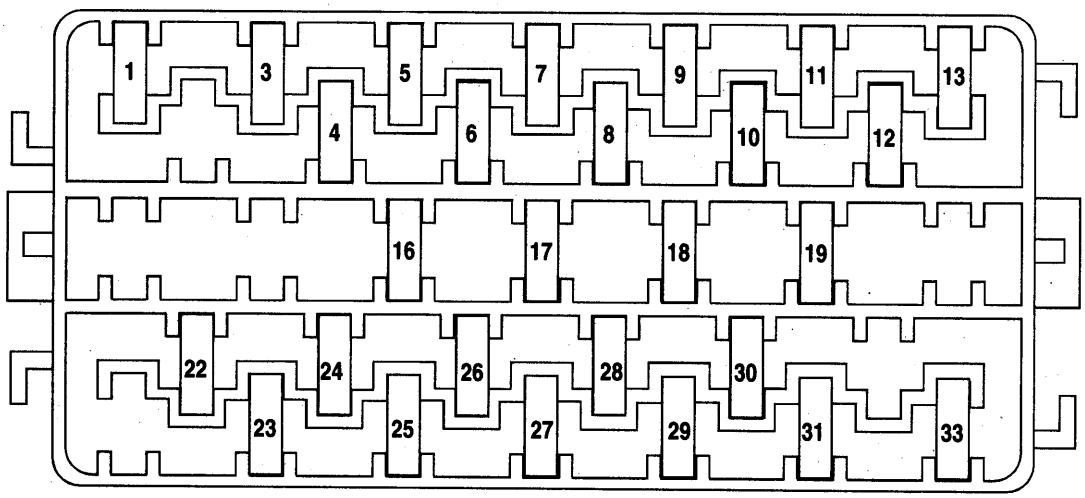

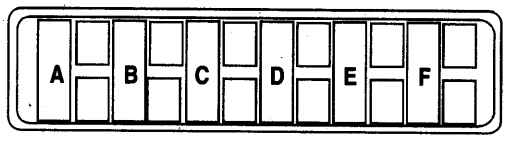

SE2016

, ( )

A	:)BC%+	:)+' *%D'	5'E('F#()#
F1		25	
F2		—	
F3		25	
F4		—	
F5		7,5	
F6	COUPE CONSO	15 A	— — — — — — (E64)
F7		15 A	
F8	MEMO INJECT	5	— — — —
F9		5	
F10		15 A	
F11		7,5	
F12		10	
F13		7,5	
F14		—	
F15		—	
F16		5	
F17		25	
F18	STOP	15 A	- — — — — — — — «+» — — — —
F19		15 A	(«+» , ,) — — (E64)
F20		—	
F21		—	
F22		10	
F23		25	(1)

A	:)BC%+	:)+' *%D'	5'E('F#()#
F24		10	
F25		20	
F26		—	
F27		15 A	
F28		20	
F29		10	
F30		15 A	— — – —
F31		10	
F32		—	
F33	**SHUNT**		(BDE64)
FA		15 A	
FB	**ALIM UCH**	5	
FC		20	
FD		20	
FE		25	(2)
FF		30	—

,-./ 01-1 9 :4-.51 **(1016)**

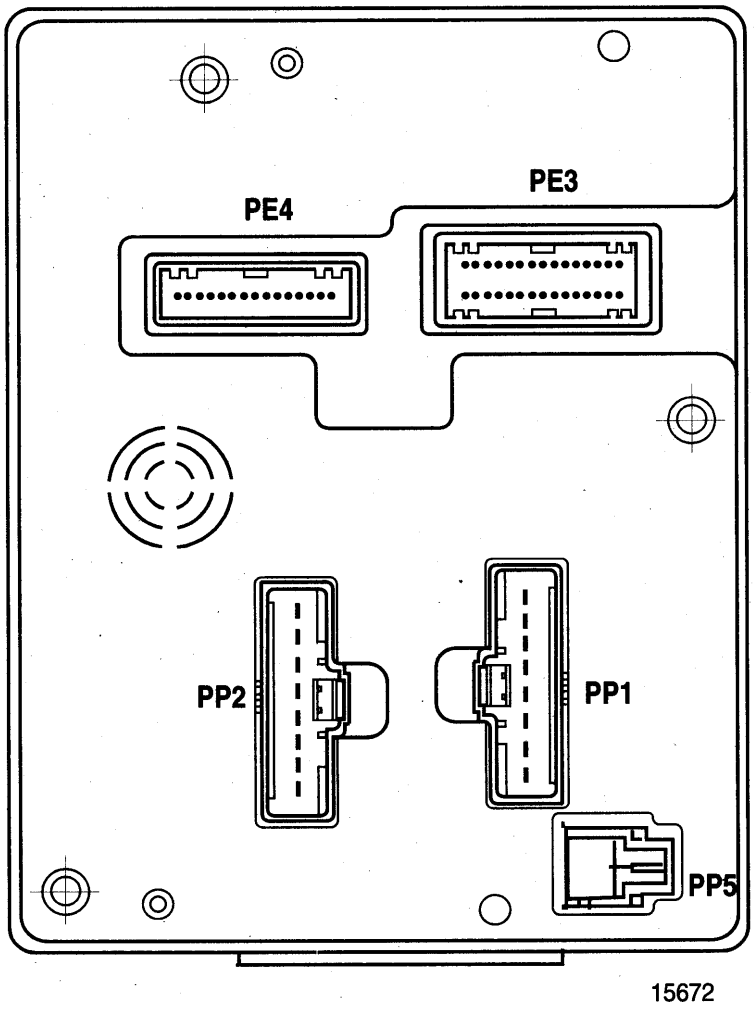

( )

PP1 (8-D%(*'D*(HJ "'EK#B **)**

A D%(*'D*'	5'E('F#()#
1	« »
2	
3	«+» «+»
4	« »
5	
6	
7	
8	

PP2 (12-D%(*'D*(HJ "'EK#B **)**

A D%(*'D*'	5'E('F#()#
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	

PE3 (30-D%(*'D*(HJ "'EK#B **)**

A D%(*'D*'	5'E('F#()#
1	-
2	( )
3	( )
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	( )
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	« " ( )
27	( )
28	
29	L
30	

PE4 (15-D%(*'D*(HJ "'EK#B **)**

A D%(*'D*'	5'E('F#()#
1	(«+»)
2	( )
3	
4	( )
5	
6	
7	K
8	
9	
10	
11	
12	
13	
14	
15	

PP5 (1-D%(*'D*(HJ "'EK#B **)**

A D%(*'D*'	5'E('F#()#
1	

,-./ 01-1 6 !012.3045671-18 9 :4-.51	**(1016) (299)**

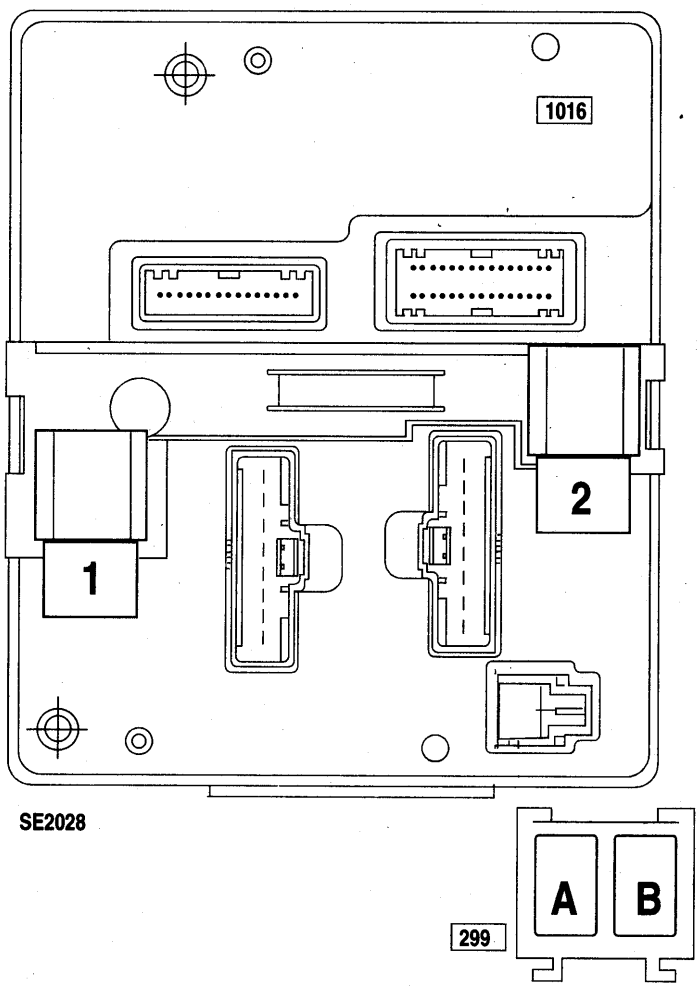

( )

A D%(*'D*'	5'E('F#()#
1	0#+# «+» (751) ( )
2	0#+# (471)
A	0#+# (231)
B	0#+# (1061)

(1034)

1034

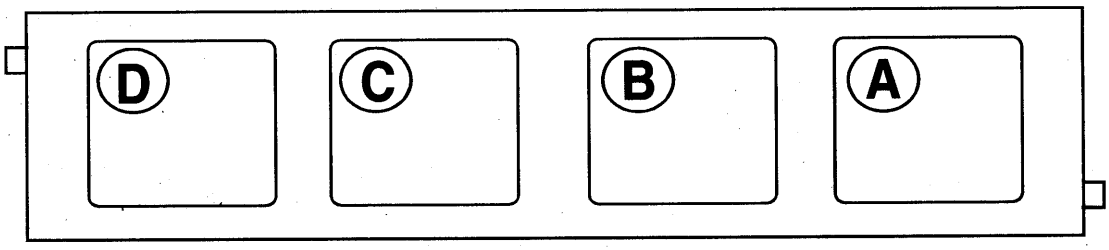

15711

( )

?#L*% "'LG%+%M#()N	5'E('F#()#
A	0#+# (753)
B	0#+# (290)
C	0#+# (289)
D	O+'C(%# "#+# (288)

,-./ 01-1 6 !012.3045671-18 9 ?.7.05.? .7:1/1 **(597)**

( )

597

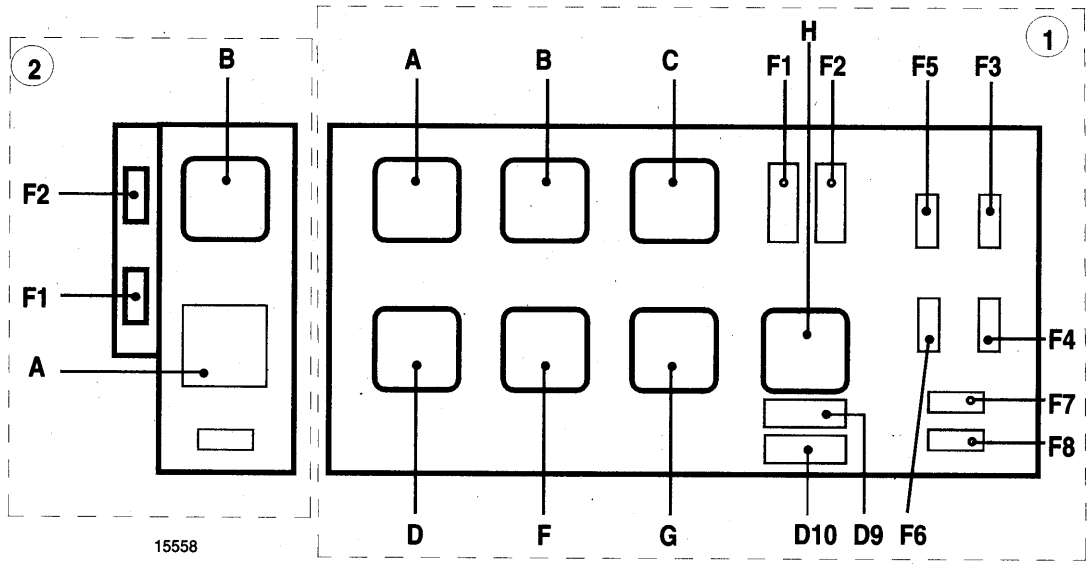

( ) !451-> **1**

?#L*% '"LG%+%M#()N	:)+' *%D'	5'E('F#()#
A		0#+# (584) 1 (1049)
B		°2 (049)
C		0#+# 180 (234) 340/550
D		(1047)
F		0#+# (232) (743)
G		0#+# 180 (234) 340/550 (335)
H		0#+# (236) (450)
F1	**70 A**	!"#$%&"'()*#+I
F2	**40-50 A**	!"#$%&"'()*#+I (340-550)
F3	**7,5 A**	/
F4	**—**	
F5	**7,5-30 A**	!"#$%&"'()*#+I (100-180) 30 7,5
F6	**7,5 A**	!"#$%&"'()*#+I («+» ,)
F7		G"#$%&"'()*#+I
F8		G"#$%&"'()*#+I
D9		$)%$ F8Q 790
D10		2)%$

( ) !451-> **2**

?#L*% '"LG%+%M# ()N	:)+' *%D'	5'E('F#()#
A		0#+# 2 (F9Q/)
B		0#+# (236) °1 (F9Q/)
F1	**—**	
F2	**7,5 A**	(«+» ,) (F3R K7M)

,-./ !012.3045671-18 9 ?.7.05.? .7:1/1 **(777)**

( )

C ()P# C%E$Q&%E'R%"', L% L*%"%(H 'DDQBQ+N*%"(%J R'*""#) .

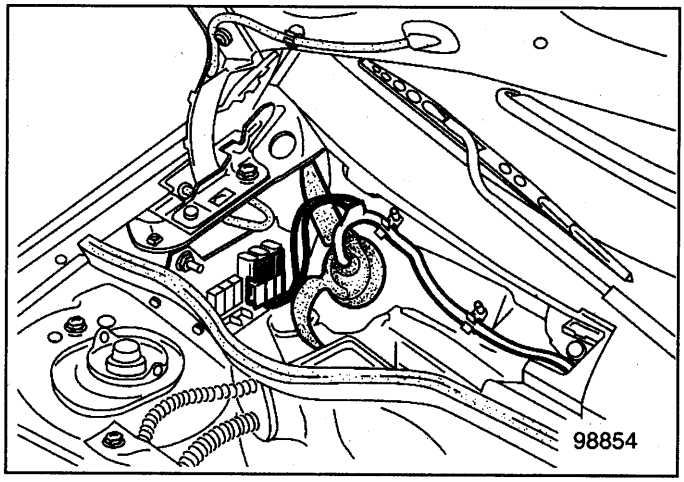

( )

@C#* $#"M'*#+N	:)+' *%D'	5'E('F#()#
	30 A	( )
	60 A	!"#$%&"'()*#+I («+» ,)
	60 A	!"#$%&"'()*#+I
	60 A	!"#$%&"'()*#+I
	60 A-40 A	!"#$%&"'()*#+I (60 A) (E64) (40 A)
	60 A	

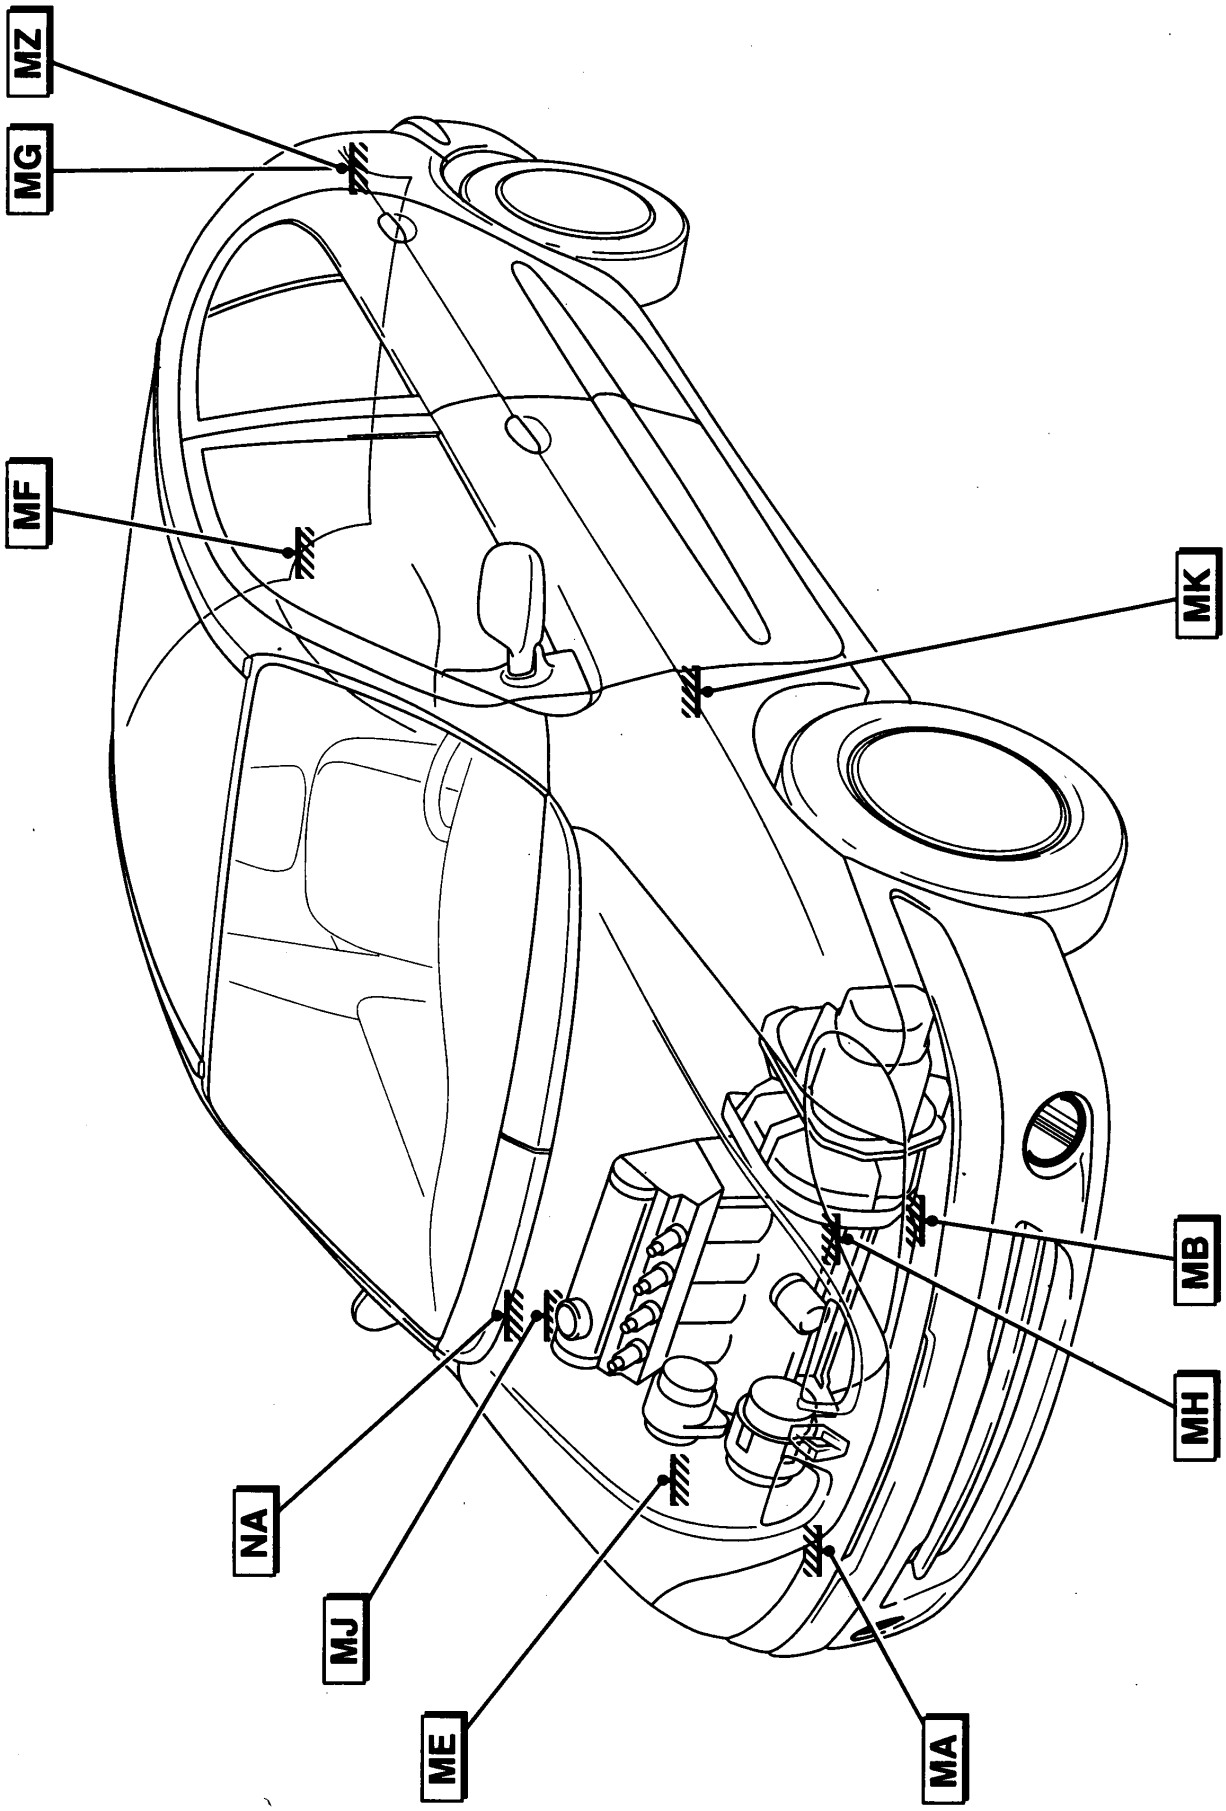

K4M / K4J / F5R / F8Q

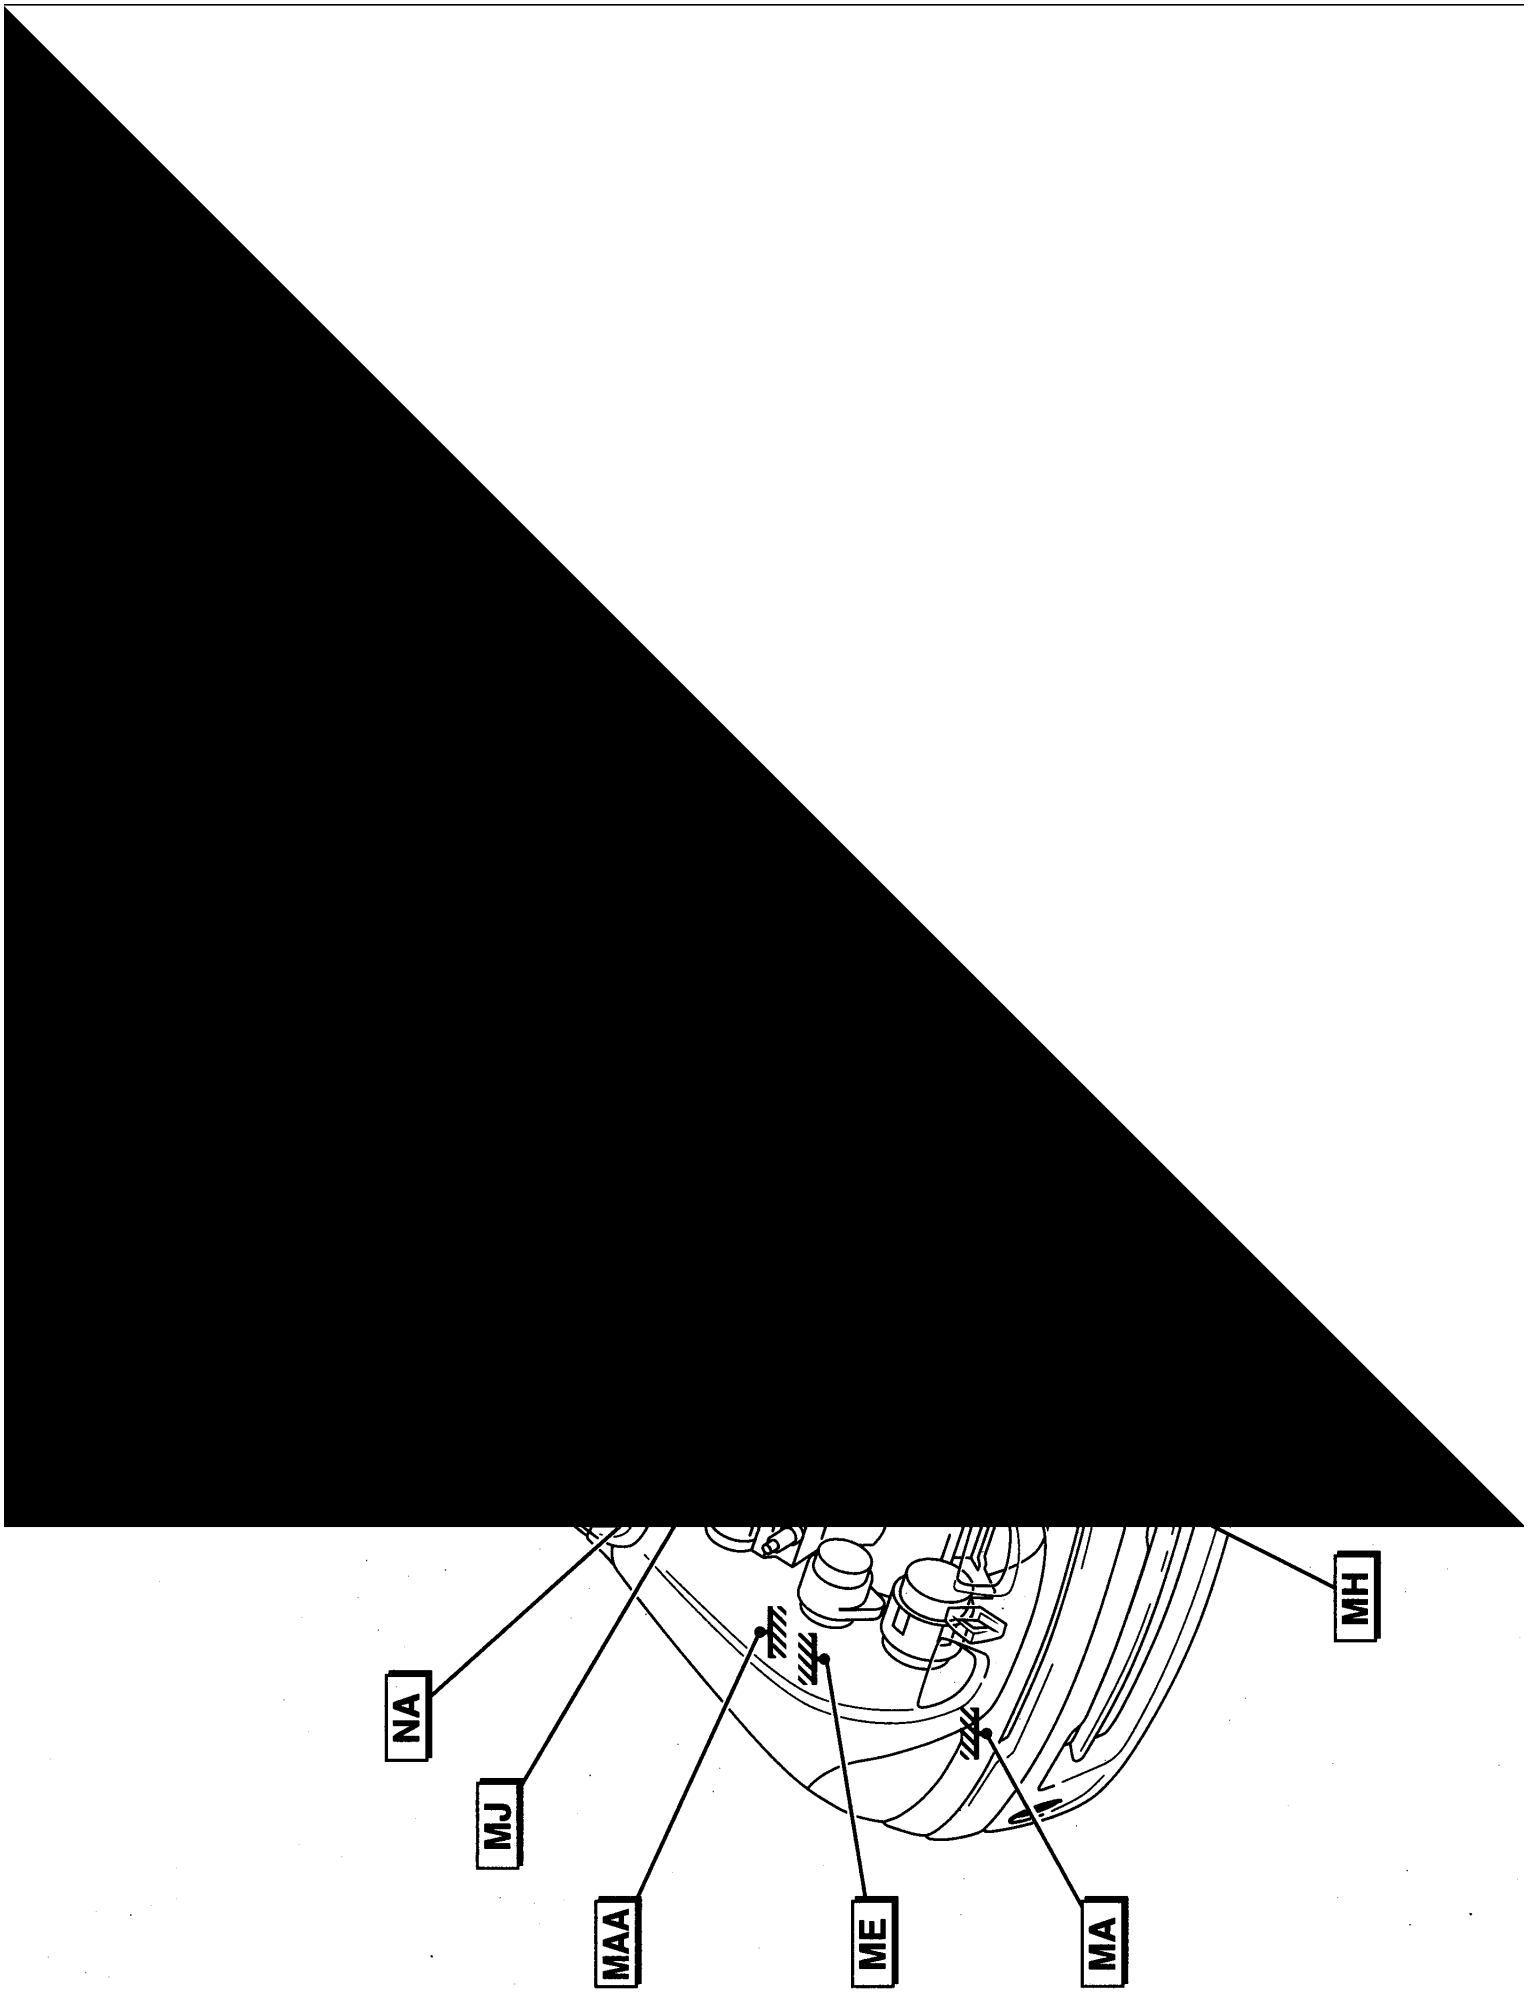

F9Q

Указатель электрических разъемов и соединений

№ ЭЛЕКТРОПРИБОРА/ РАЗЪЕМА	№ СХЕМЫ НОМЕНКЛАТУРЫ РАЗЪЕМОВ	№ СХЕМЫ ПРОКЛАДКИ ЖГУТОВ
101	115-116-117	S6-S8
103	052-053-054-055	S28-S29-S31-S32-S33-S35
104	115-116-117-118-119-120	S4
105	036	S1-S27
120	055-056-058-060-062	S28-S29-S31-S32-S33-S35
123	118-119-120	S5
125	121-122-123	S5
128	122	
130	193	S5-S8
131	193	S5-S8
132	197	
133	208-209-210	S11
134	197-198-199	S10
135	194	S5
138	004	S9-S13
139	004-196	S8
140	198-199-200	S10
141	208-209-210	S11
142	043-044-046-047-207	S15-S18-S20-S23-S26
145	121-123-124	S4
146	064-065	S28-S29-S33-S35
147	064-065	S28-S29-S31-S33-S35
149	064-065-066-067	S28-S29-S30-S31-S32-S34-S35
150	050-051	S3
151	050-051	S3
152	002	S3
153	002	S3-S27
154	043-044-046-047-207	S15-S18-S20-S23-S26
155	066-067-068-069	S28-S29-S31-S32-S33
160	114	
165	004-005-006-007-008	S14-S17-S19-S23-S24
168	124-125-126	S6
171	068-069-070-071	S28-S29-S31-S32-S33-S35
172	005-006-007-008-009	S16-S17-S20-S23-S25
173	006-009-010-011-012	S14-S15-S19-S21-S23-S24
176	036	S1
177	037	S1
178	009-010-013	S16-S20-S25
179	010-013-014	S14-S19-S24
180	011-012-013-014-015	S8-S17-S21
181	011-014-015-016-017	S9-S17-S22
184	037	
185	038	
188	070	
189	015-016-017-018-019	S16-S17-S19-S22-S25
190	016-017-018-019-020	S14-S17-S19-S21-S24
191	208-209-210	S11
192	198-199-200	S10
193	072-073	S28-S29-S30-S31-S33
194	072-073	S28-S29-S31-S33
195	072-073	S28-S29-S31-S33
196	074-075	S28-S29-S31-S33

№ ЭЛЕКТРОПРИБОРА/ РАЗЪЕМА	№ СХЕМЫ НОМЕНКЛАТУРЫ РАЗЪЕМОВ	№ СХЕМЫ ПРОКЛАДКИ ЖГУТОВ
199	018-019-020-021-022	S16-S17-S22-S34
201	022-023	S13-S22
202	022-023-196	S12-S21
203	201-202-203	S10
204	211-212-213	S11
206	071	S32
207	114	S1
209	125-126-127	S4
211	024-046-047	S15-S17-S26
212	127-128-214	S2
213	112	S7
214	020-021-023	S16-S19-S25
215	021-025-026	S14-S19-S24
219	128	S1
221	001	S1
222	074-075	S28-S29-S33-S35
224	075-076	S28-S29-S33-S35
225	129-130-131	S1-S4
226	038-039	S1
227	039-040	S1
231	129-131	S6
239	201-202-203	S10
240	211-212-213	S2-S11
241	132-133	S4
243	070-071-076-077	S28-S29-S30-S31-S35
244	077-078-079-080	S27
247	130-132-133-134-135-136	S4-S5
248	080	S32
251	081	S32
255	040	S1
256	041	S1
257	078-081-082-083	S31-S32
261	137-138-139	S4
262	079-083-084	S28-S29-S31-S32-S33-S35
265	112	
267	001	S1
268	140-141-142	S1
272	082-083-084-085	S28-S29-S32-S33-S35
282	024-025-026-027-028	S16-S17-S20-S23-S25
299	143	
304	113	S7
319	140-142-145	S4-S5-S6-S7
320	146-147-214	S2-S6
321	082-084-085-086	S28-S29-S31-S32-S33-S35
365	146-147-148	S6
366	148-149-150	S4
371	085-087	S28-S29-S33-S35
394	028	S23
398	086-088	S31-S32-S35
411	087-088-089	S28-S29-S31-S33-S35
412	086	S32
419	148-149-150-151-152-153	S7-S32
440	194	
444	113	S4-S7
449	090-091	
471	151-153	S6-S21
495	152-154-155	S9
496	152-154-155-156	S8
503	157	

Указатель электрических разъемов и соединений

№ ЭЛЕКТРОПРИБОРА/ РАЗЪЕМА	№ СХЕМЫ НОМЕНКЛАТУРЫ РАЗЪЕМОВ	№ СХЕМЫ ПРОКЛАДКИ ЖГУТОВ
529	024	S17
532	204-205-206	S10
537	041	S1
538	042	S1
562	155-156-157	S4
597	092-094-096-098	S27-S28-S29-S31-S32-S33-S35
639	027-044-048-049-207	S15-S18-S19-S23-S24-S26
645	158-159-160-161-162-163	S6
649	100-101	S28-S29-S33-S35
689	160-163-164	S4-S6
704	028-029	S21
706	029	S21
711	102-103	S32
721	003	S3
734	204-205-206	S10
738	103	S32
739	165	S1
751	165-166	S6
755	166-167	S5-S8
756	168-169-170	S5
757	171-172-173	S8
758	171-172-173	S5-S9
760	171-173	S5
771	172-174-175	S5
777	174-176-215	S2-S3-S6-S28-S29-S31-S32-S33-S35
778	101	S35
791	100	S28-S29-S33
792	104	S28-S29-S33
793	104	S28-S29-S33
794	105	S28-S29-S33
809	175-176-177	S5-S6
841	030	
842	030	
867	043	S20
868	045	S20
882	195	
883	031	S21
884	032	S21
885	032-033	S23
887	101-105	S34
921	102	S31
927	106-107-108-109	S28-S29-S31-S32-S33-S35
948	034	S21
949	034	S22
950	035	S21
951	035	S23
969	177-178	S8
997	110	S33
1003	179	S4
1016	180-182-184	S1-S6-S10-S11
1026	186-187-188	S8
1027	186-187-188	
1028	186-187-188	
1029	189-190-191	
1034	189-190	S6
1035	111	S33
1062	192	
1089	111	S33
1090	111	S33
R2	216-217-218-219-220-221	S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23
R3	222-223-224-225-226-227	S4-S10
R4	228-229-230-231-232	S5-S6-S7-S9-S11
R9	233-234-235	S1-S27
R13	236	S8-S12
R15	237-238-239	S8-S14-S15-S24-S26
R34	240-241-242-243-244	S1-S4-S6-S27-S28-S29-S31-S32-S33-S35
R35	244-245	S6
R36	245-246	S2-S3
R108	247-248	S5-S8
R227	249	S1
R236	250	S19
R237	251	S3
R240	252	
R243	252	S8-S9
R244	253-254-255	S18-S19-S20-S21-S23
R250	256-257	S15-S18-S23-S26
R254	258-259-260-261	
R255	262	
R279	262-263	S4
R280	263	S22
R301	264-265	S4-S7
R304	266	S4
R314	266-267	

FRONT WASHER PUMP

S1

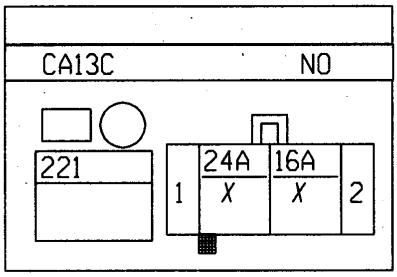

N°	mm²		... → ...
1	.6	24A	+ REAR SCREEN WASHER PUMP CONTROL
2	.6	16A	+ FRONT SCREEN WASHER PUMP CONTROL

RIGHT REPEATER

S1

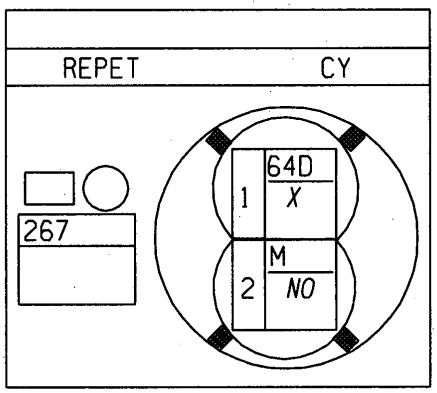

N°	mm²		... → ...
1	.6	64D	RH FRONT INDICATOR CONTROL
2	.6	M	EARTH

RIGHT FRONT WHEEL SENSOR
NINAV3
S3

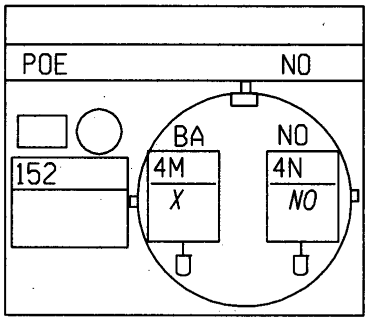

N°	mm²		... ⟶ ...
BA	.5	4M	RH FRONT WHEEL SENSOR SIGNAL
NO	.5	4N	+RH FRONT WHEEL SENSOR

LEFT FRONT WHEEL SENSOR
J64,F64
S3-S27

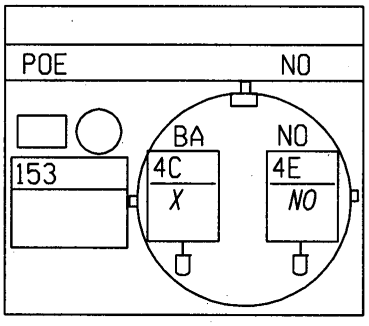

N°	mm²		... ⟶ ...
BA	.5	4C	LH FRONT WHEEL SENSOR SIGNAL
NO	.5	4E	+LH FRONT WHEEL SENSOR

ECU BLOCK FOR ABS + ABS HYDRAULIC UNIT

J64,F64

S3

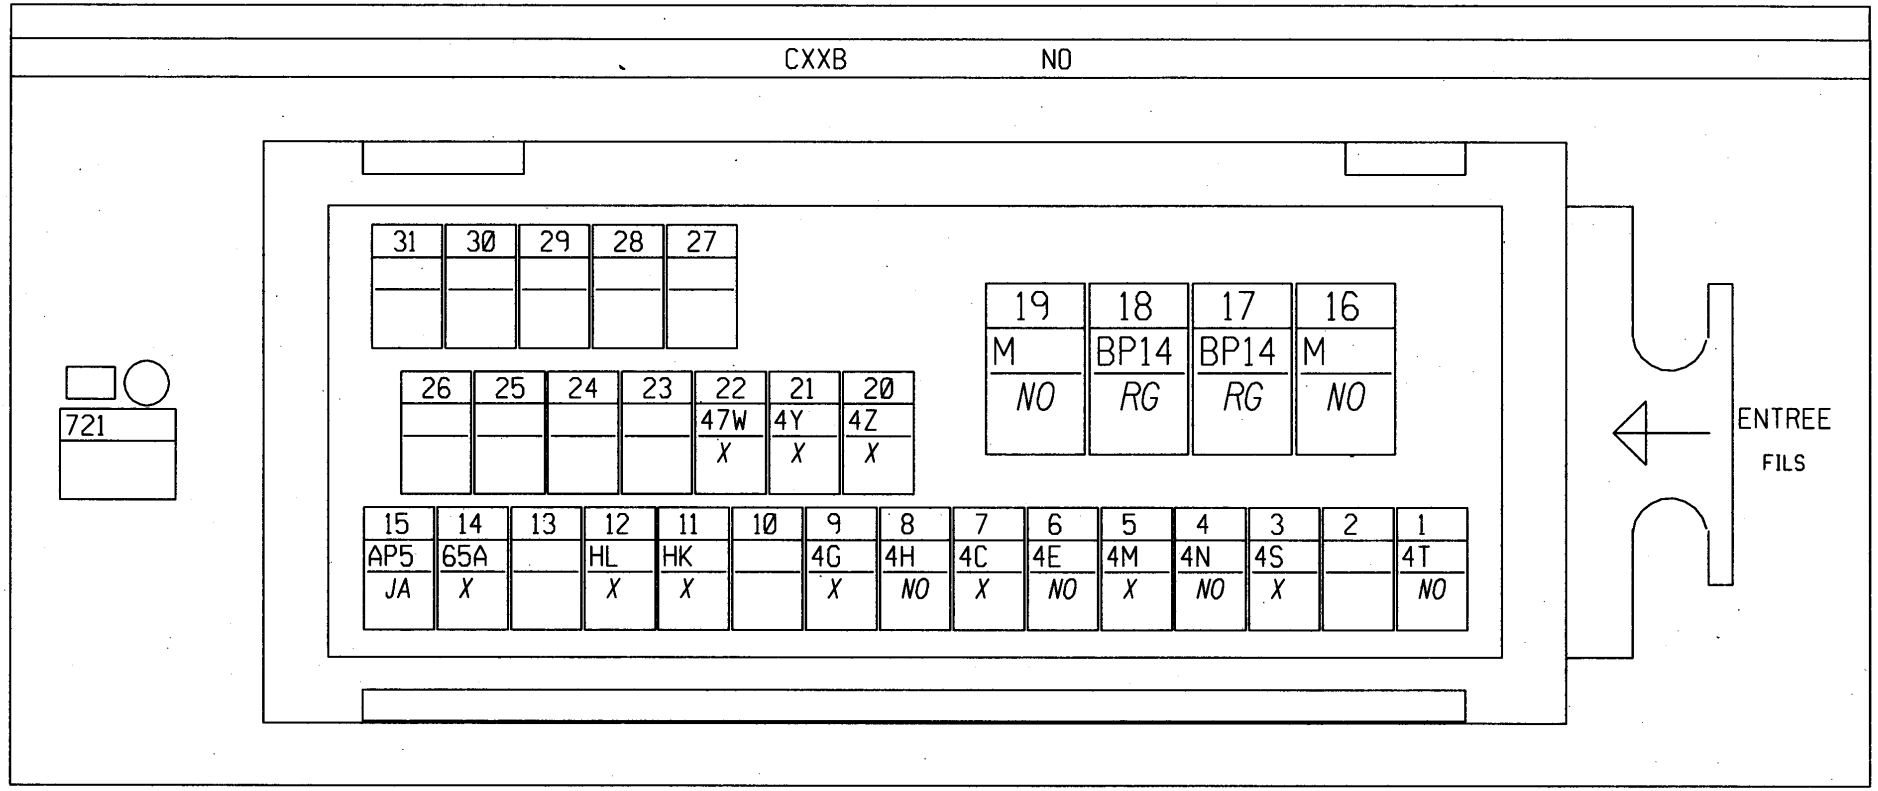

N°	mm²		... → ...
1	.6	4T	+RH REAR WHEEL SENSOR
3	.6	4S	RH REAR WHEEL SENSOR SIGNAL
4	.5	4N	+RH FRONT WHEEL SENSOR
5	.5	4M	RH FRONT WHEEL SENSOR SIGNAL
6	.5	4E	+LH FRONT WHEEL SENSOR
7	.5	4C	LH FRONT WHEEL SENSOR SIGNAL
8	.6	4H	+LH REAR WHEEL SENSOR
9	.6	4G	LH REAR WHEEL SENSOR SIGNAL
11	.35	HK	DIAGNOSTIC SIGNAL K
12	.35	HL	DIAGNOSTIC SIGNAL L
14	.35	65A	+ BRAKE LIGHTS CONTROL
15	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
16	4	M	EARTH
17	4	BP14	PROTECTED BATTERY > ABS SYSTEM
18	4	BP14	PROTECTED BATTERY > ABS SYSTEM
19	4	M	EARTH
20	.35	4Z	- ABS WARNING LIGHT
21	.35	4Y	- BRAKE FAULT WARNING LIGHT
22	.35	47W	SECONDARY SPEED SIGNAL

REAR RIGHT ELECTRIC DOOR LOCKING

S9-S13

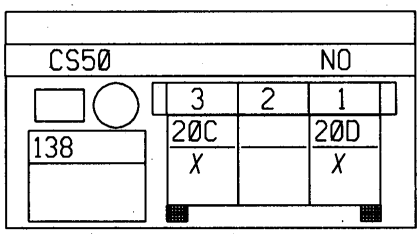

N°	mm²		··· ⟶ ···
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTRQL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

REAR LEFT ELECTRIC DOOR LOCKING

S8

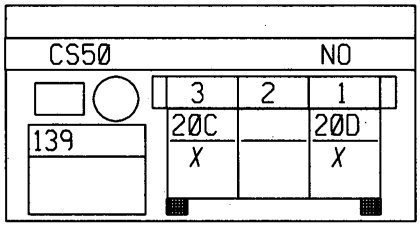

N°	mm²		··· ⟶ ···
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT LIGHTING

S14-S17-S19-S23-S24

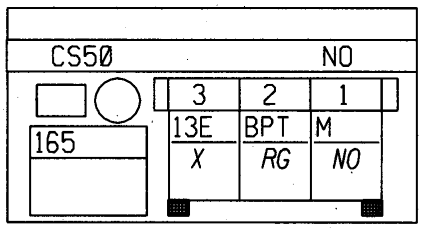

N°	mm²		··· ⟶ ···
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

BOOT LIGHTING

NINAV3

S14-S17-S19-S23-S24

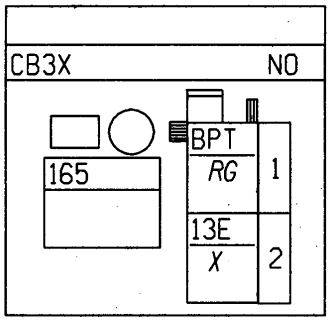

N°	mm²		... → ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

RIGHT REAR LIGHT

J64,F64

S16-S17-S20-S23-S25

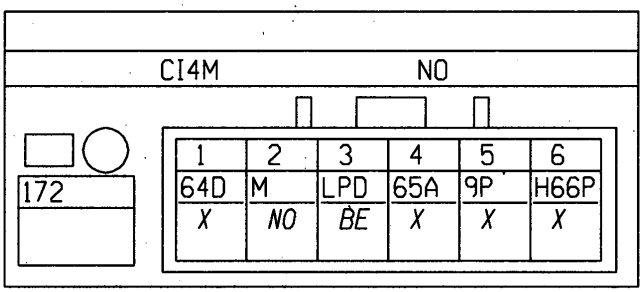

N°	mm²		... → ...
1	.6	64D	RH FRONT INDICATOR CONTROL
2	1	M	EARTH
3	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
4	.6	65A	+ BRAKE LIGHTS CONTROL
5	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
6	.6	H66P	+ REVERSING LIGHTS CONTROL

BOOT LIGHTING

S14-S17-S19-S23-S24

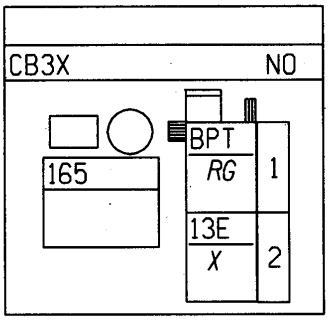

N°	mm²		··· ⟶ ···
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

RIGHT REAR LIGHT

S16-S17-S20-S23-S25

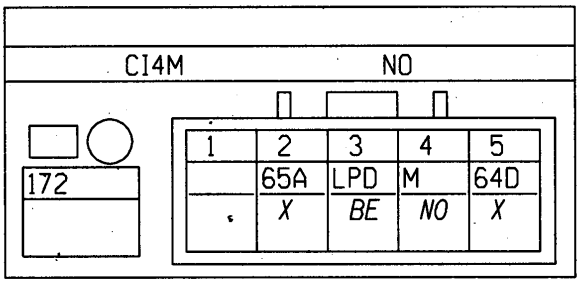

N°	mm²		··· ⟶ ···
2	.6	65A	+ BRAKE LIGHTS CONTROL
3	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
4	.6	M	EARTH
5	.6	64D	RH FRONT INDICATOR CONTROL

LEFT REAR LIGHT

S14-S15-S19-S21-S23-S24

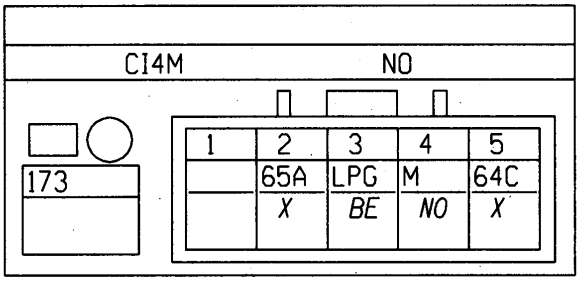

N°	mm²		··· ⟶ ···
2	.6	65A	+ BRAKE LIGHTS CONTROL
3	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
4	.6	M	EARTH
5	.6	64C	LH INDICATOR CONTROL

BOOT LIGHTING

S14-S17-S19-S23-S24

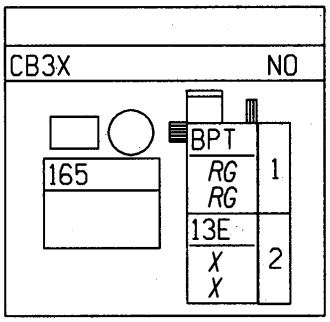

N°	mm²		... ⟶ ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

RIGHT REAR LIGHT

S16-S17-S20-S23-S25

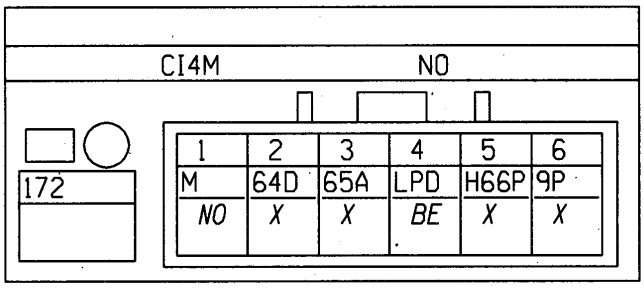

N°	mm²		... ⟶ ...
1	1	M	EARTH
2	.6	64D	RH FRONT INDICATOR CONTROL
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
5	.6	H66P	+ REVERSING LIGHTS CONTROL
6	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

BOOT LIGHTING
NINAV3
S14-S17-S19-S23-S24

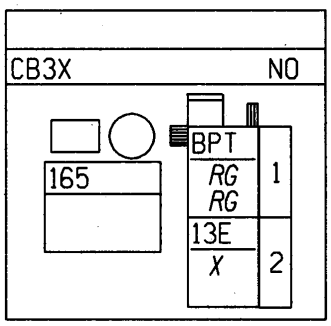

N°	mm²		... ⟶ ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

RIGHT REAR LIGHT
NINAV3
S16-S17-S20-S23-S25

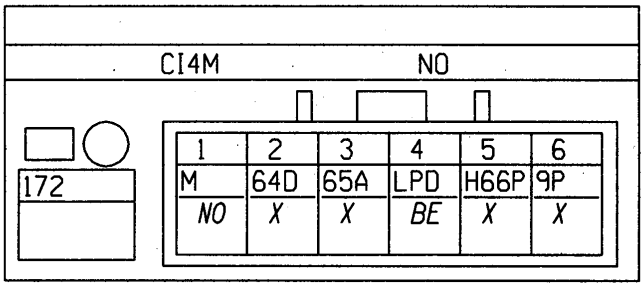

N°	mm²		... ⟶ ...
1	1	M	EARTH
2	.6	64D	RH FRONT INDICATOR CONTROL
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
5	.6	H66P	+ REVERSING LIGHTS CONTROL
6	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

RIGHT REAR LIGHT

S16-S17-S20-S23-S25

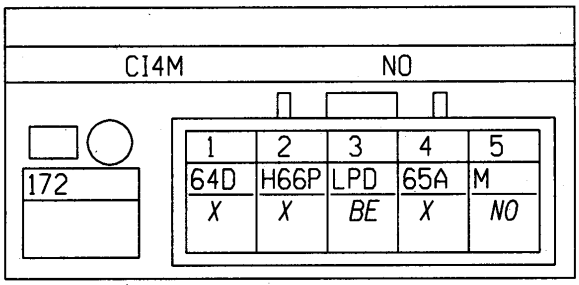

N°	mm²		... → ...
1	.6	64D	RH FRONT INDICATOR CONTROL
2	.6	H66P	+ REVERSING LIGHTS CONTROL
3	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
4	.6	65A	+ BRAKE LIGHTS CONTROL
5	1	M	EARTH

LEFT REAR LIGHT

S14-S15-S19-S21-S23-S24

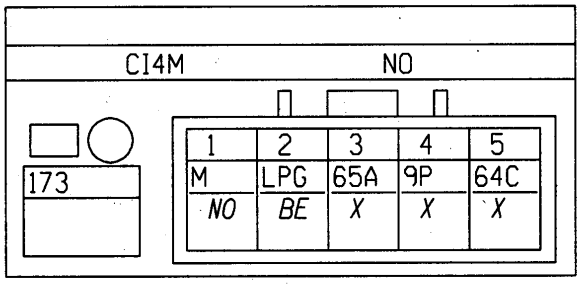

N°	mm²		... → ...
1	1	M	EARTH
2	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
5	.6	64C	LH INDICATOR CONTROL

RIGHT REAR RABBET SWITCH

S16-S20-S25

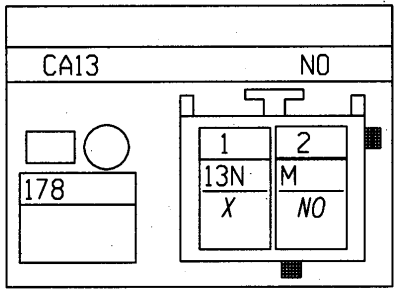

N°	mm²		... → ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

LEFT REAR LIGHT

NINAV3

S14-S15-S19-S21-S23-S24

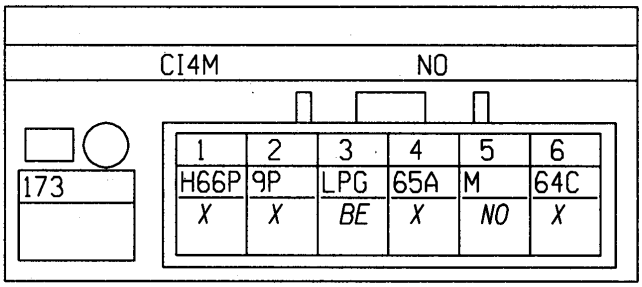

N°	mm²		... ⟶ ...
1	.6	H66P	+ REVERSING LIGHTS CONTROL
2	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
3	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
4	.6	65A	+ BRAKE LIGHTS CONTROL
5	1	M	EARTH
6	.6	64C	LH INDICATOR CONTROL

RIGHT REAR RABBET SWITCH

NINAV3

S16-S20-S25

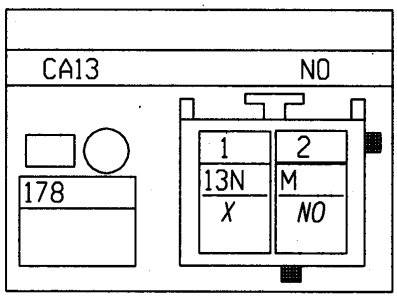

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.6	M	EARTH

LEFT REAR RABBET SWITCH

J64,F64

S14-S19-S24

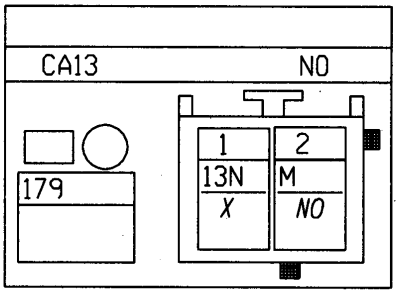

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.6	M	EARTH

LEFT REAR LIGHT

S14-S15-S19-S21-S23-S24

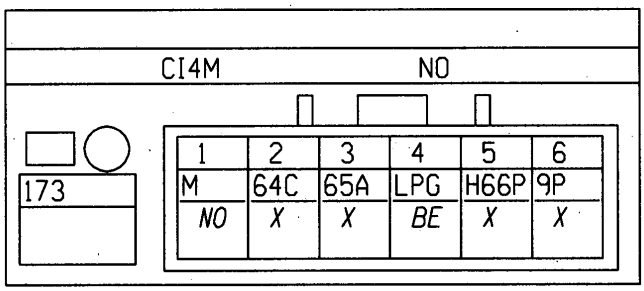

N°	mm²		... ⟶ ...
1	1	M	EARTH
2	.6	64C	LH INDICATOR CONTROL
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
5	.6	H66P	+ REVERSING LIGHTS CONTROL
6	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DRIVER'S RABBET SWITCH

S8-S17-S21

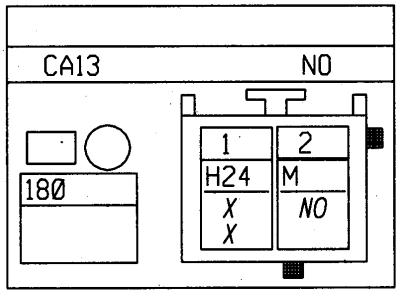

N°	mm²		... ⟶ ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.6	M	EARTH

PASSENGER'S RABBET SWITCH

S9-S17-S22

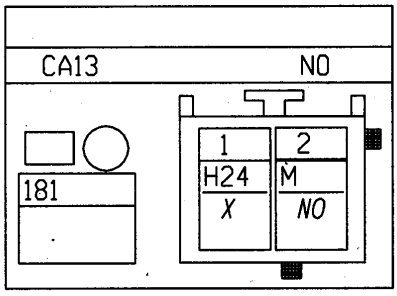

N°	mm²		... ⟶ ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.6	M	EARTH

LEFT REAR LIGHT
J64,F64
S14-S15-S19-S21-S23-S24

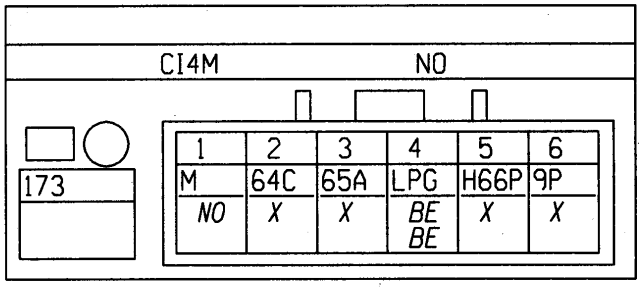

N°	mm²		... → ...
1	1	M	EARTH
2	.6	64C	LH INDICATOR CONTROL
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
4	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
5	.6	H66P	+ REVERSING LIGHTS CONTROL
6	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DRIVER'S RABBET SWITCH
J64,F64
S8-S17-S21

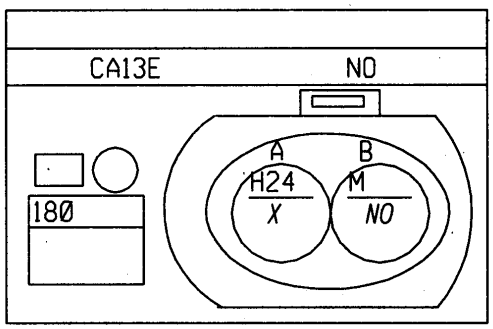

N°	mm²		... → ...
A	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
B	.35	M	EARTH

RIGHT REAR RABBET SWITCH

S16-S20-S25

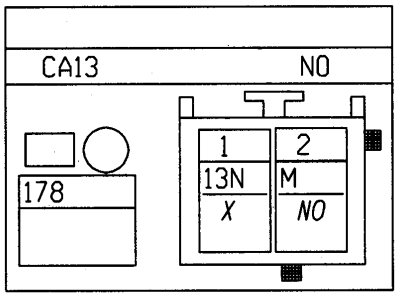

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

LEFT REAR RABBET SWITCH

S14-S19-S24

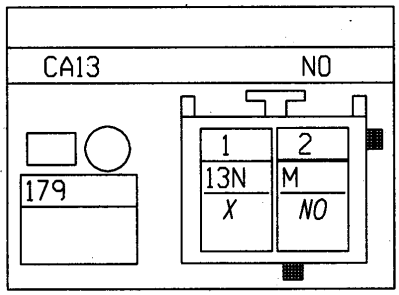

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

DRIVER'S RABBET SWITCH

S8-S17-S21

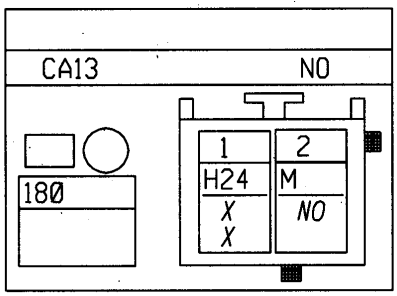

Nº	mm²		... ⟶ ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.35	M	EARTH

LEFT REAR RABBET SWITCH

S14-S19-S24

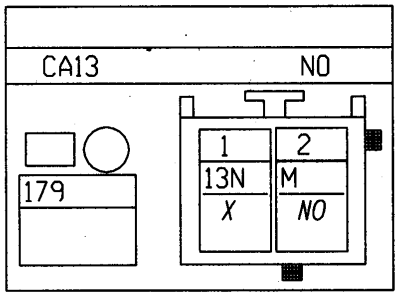

N°	mm²		... → ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

DRIVER'S RABBET SWITCH

S8-S17-S21

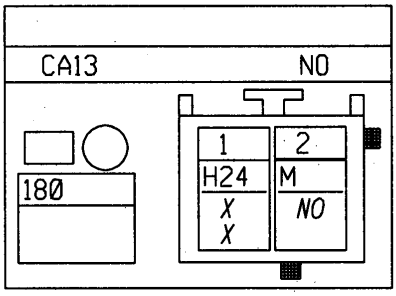

N°	mm²		... → ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.35	M	EARTH

PASSENGER'S RABBET SWITCH

S9-S17-S22

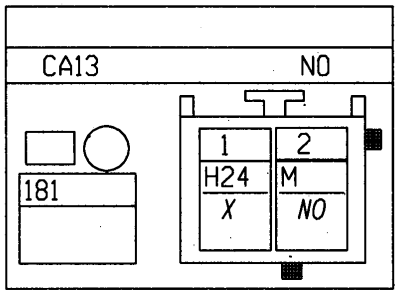

N°	mm²		... → ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.35	M	EARTH

DRIVER'S RABBET SWITCH

J64,F64

S8-S17-S21

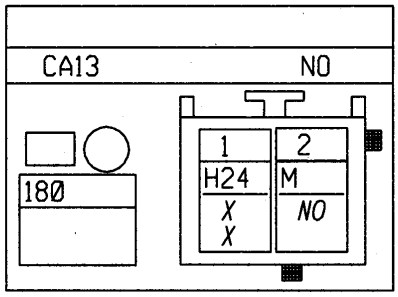

N°	mm²		... → ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.6	M	EARTH

PASSENGER'S RABBET SWITCH

LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR

S9-S17-S22

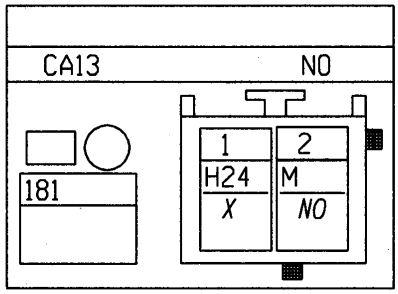

N°	mm²		... → ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.6	M	EARTH

RIGHT REAR SPEAKER

LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR

S16-S17-S19-S22-S25

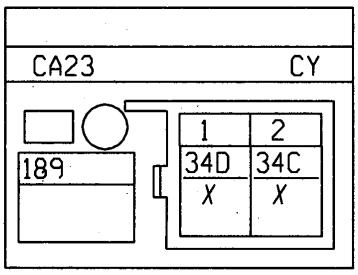

N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

PASSENGER'S RABBET SWITCH

S9-S17-S22

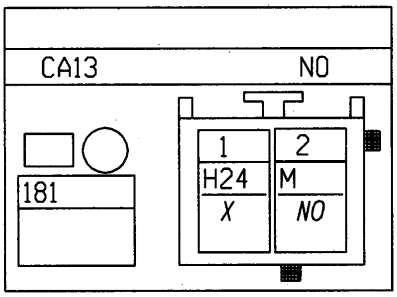

N°	mm²		... → ...
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.35	M	EARTH

RIGHT REAR SPEAKER

S16-S17-S19-S22-S25

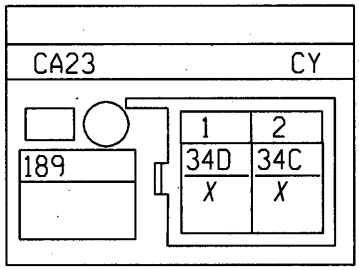

N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER

S14-S17-S19-S21-S24

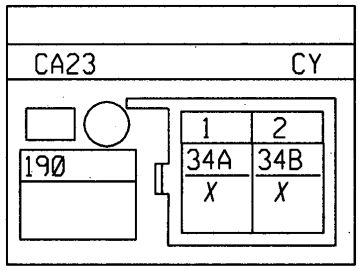

N°	mm²		... → ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER

PASSENGER'S RABBET SWITCH
LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR
S9-S17-S22

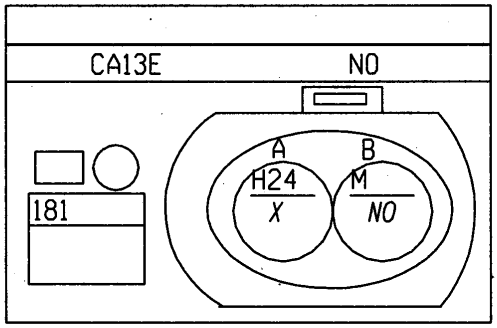

N°	mm²		... → ...
A	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
B	.35	M	EARTH

RIGHT REAR SPEAKER
LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR
S16-S17-S19-S22-S25

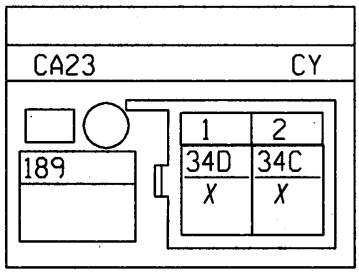

N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER
LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR
S14-S17-S19-S21-S24

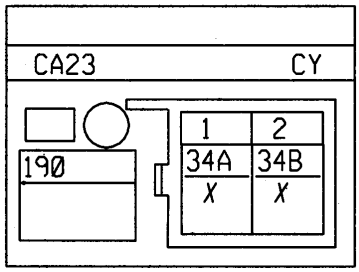

N°	mm²		... → ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER

RIGHT REAR SPEAKER

S16-S17-S19-S22-S25

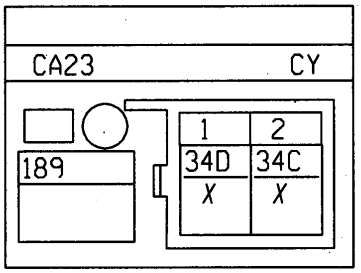

N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER

S14-S17-S19-S21-S24

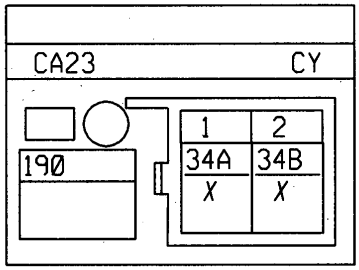

N°	mm²		... → ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER

FUEL GAUGE

S16-S17-S22-S34

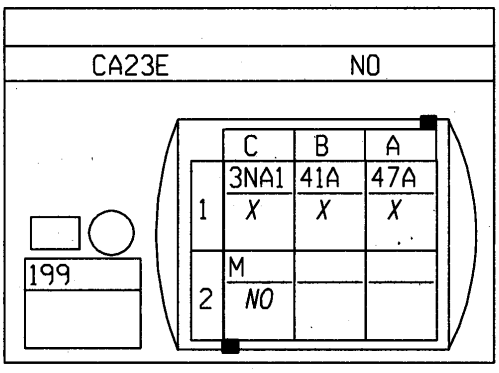

N°	mm²		... → ...
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
C2	1.4	M	EARTH

RIGHT REAR SPEAKER

S16-S17-S19-S22-S25

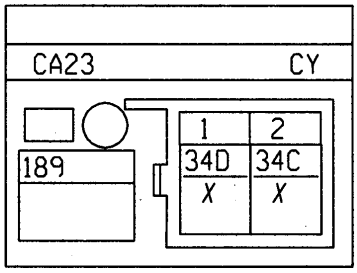

N°	mm²		... ⟶ ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER

S14-S17-S19-S21-S24

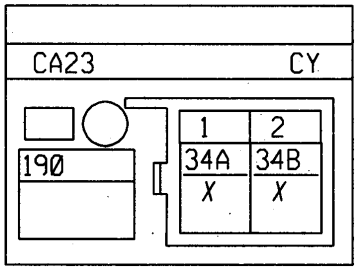

N°	mm²		... ⟶ ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER

FUEL GAUGE

S16-S17-S22-S34

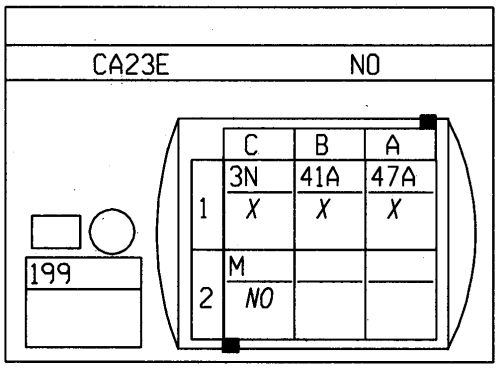

N°	mm²		... ⟶ ...
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3N	+ FUEL PUMP>
C2	1.4	M	EARTH

LEFT REAR SPEAKER

J64,F64

S14-S17-S19-S21-S24

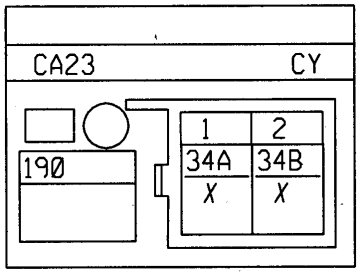

N°	mm²		... ⟶ ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER

FUEL GAUGE

LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR

S16-S17-S22-S34

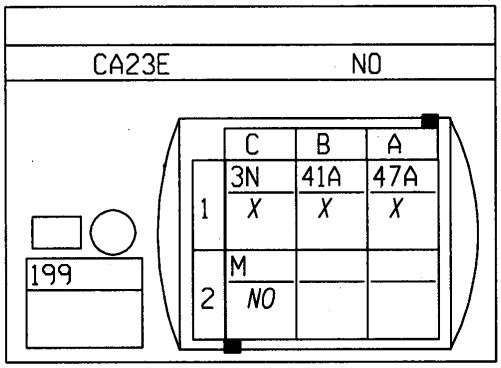

N°	mm²		... ⟶ ...
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3N	+ FUEL PUMP>
C2	1.4	M	EARTH

REAR RIGHT-HAND COURTESY LIGHTS

LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR

S16-S19-S25

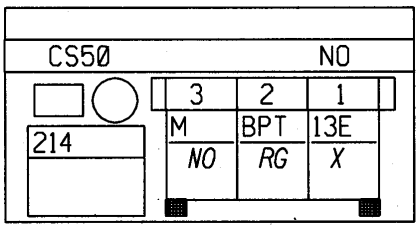

N°	mm²		... ⟶ ...
1	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH

FUEL GAUGE

S16-S17-S22-S34

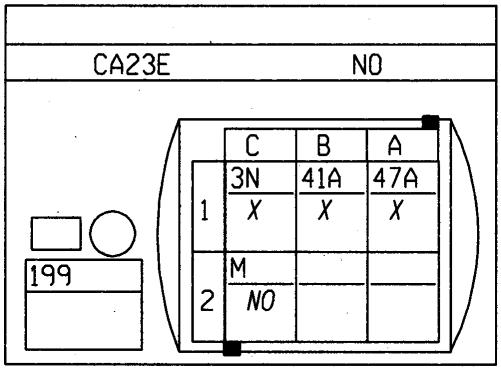

N°	mm²		··· ⟶ ···
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3N	+ FUEL PUMP>
C2	1.4	M	EARTH

REAR RIGHT-HAND COURTESY LIGHTS

S16-S19-S25

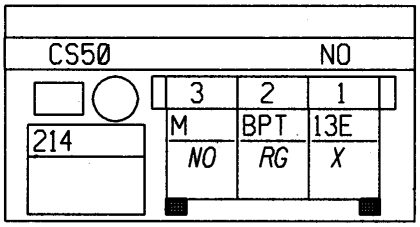

N°	mm²		··· ⟶ ···
1	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH

REAR LEFT-HAND COURTESY LIGHTS

S14-S19-S24

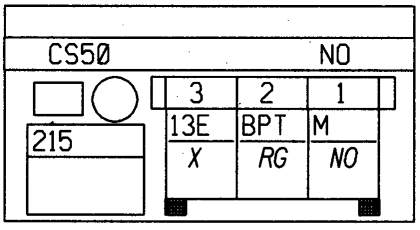

N°	mm²		··· ⟶ ···
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

FUEL GAUGE
LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR
S16-S17-S22-S34

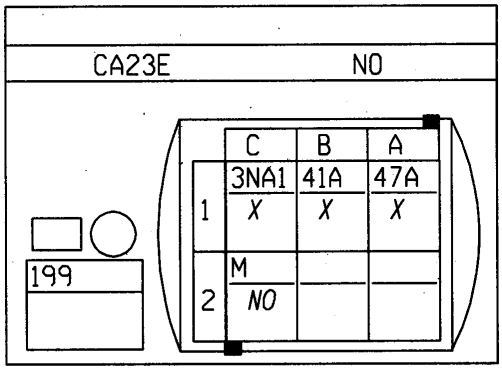

N°	mm²		... ⟶ ...
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
C2	1.4	M	EARTH

REAR RIGHT-HAND WINDOW WINDER MOTOR
LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR
S13-S22

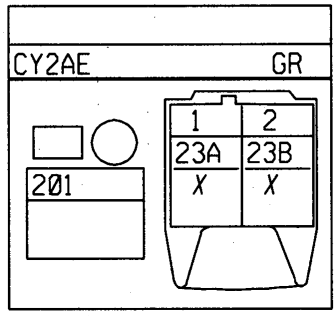

N°	mm²		... ⟶ ...
1	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
2	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING

LEFT-HAND REAR WINDOW WINDER MOTOR
LVAREL/SAUF MERCOS,TUR LVARMA/SAUF MERCOS,TUR
S12-S21

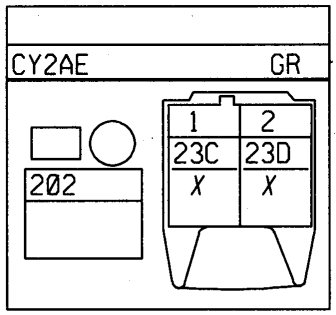

N°	mm²		... ⟶ ...
1	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
2	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL

REAR RIGHT-HAND WINDOW WINDER MOTOR

S13-S22

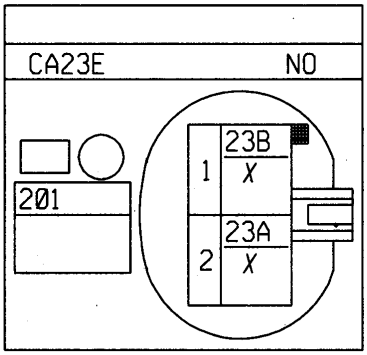

N°	mm²		... ⟶ ...
1	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
2	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE

LEFT-HAND REAR WINDOW WINDER MOTOR

S12-S21

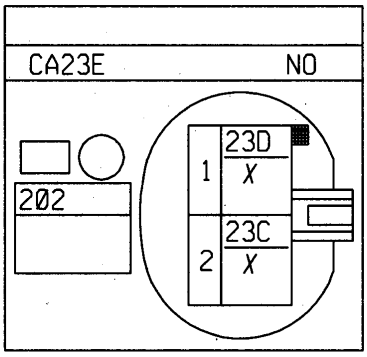

N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL

REAR RIGHT-HAND COURTESY LIGHTS

S16-S19-S25

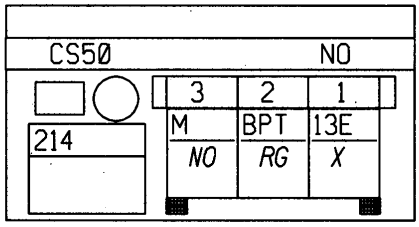

N°	mm²		... ⟶ ...
1	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH

REAR WINDOW WIPER MOTOR

S15-S17-S26

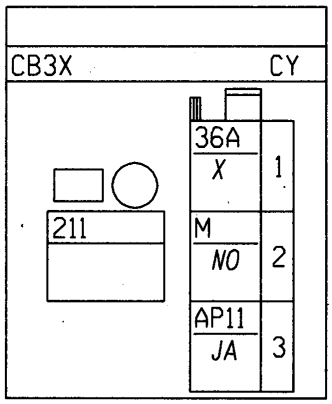

N°	mm²		... → ...
1	1	36A	+ REAR WIPER CONTROL
2	1	M	EARTH
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL

S16-S17-S20-S23-S25

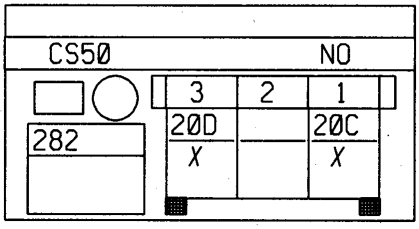

N°	mm²		... → ...
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

CENTRAL COURTESY LIGHT

S17

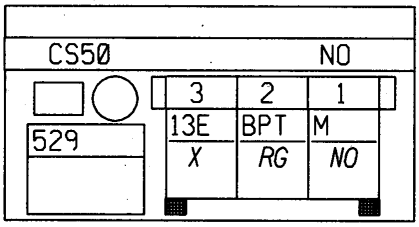

N°	mm²		... → ...
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

REAR LEFT-HAND COURTESY LIGHTS

PROJAB

S14-S19-S24

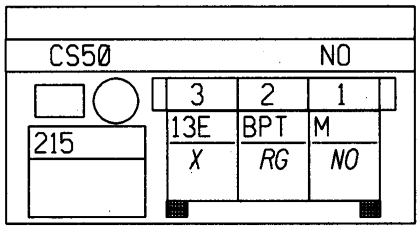

N°	mm²		... ⟶ ...
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL

J64,F64

S16-S17-S20-S23-S25

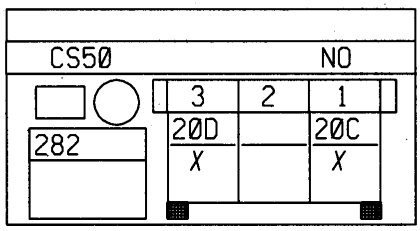

N°	mm²		... ⟶ ...
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

REAR LEFT-HAND COURTESY LIGHTS

S14-S19-S24

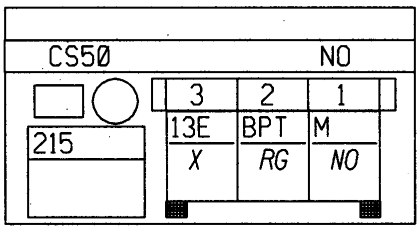

N°	mm²		... → ...
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL

S16-S17-S20-S23-S25

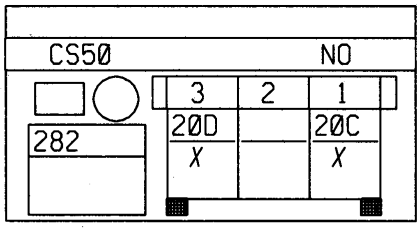

N°	mm²		... → ...
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL

J64,F64

S16-S17-S20-S23-S25

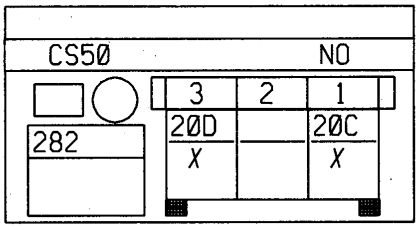

N°	mm²		... ⟶ ...
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

ELECTRIC AERIAL

SPROJA PROJAB

S23

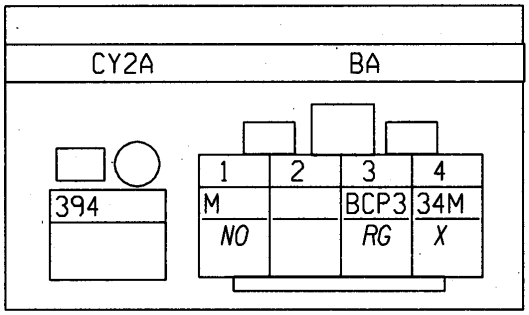

N°	mm²		... ⟶ ...
1	.35	M	EARTH
3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
4	.35	34M	+ ANTENNA CONTROL

HOOD WARNING BUZZER

SPROJA PROJAB

S21

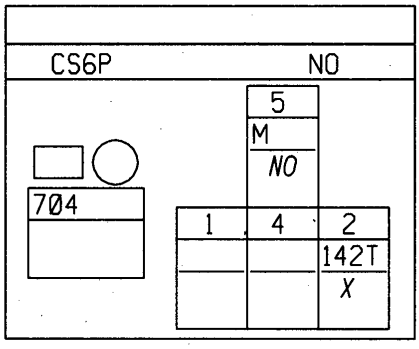

N°	mm²		... ⟶ ...
2	.6	142T	+ HOOD WARNING BUZZER
5	.35	M	EARTH

HOOD WARNING BUZZER
SPROJA PROJAB
S21

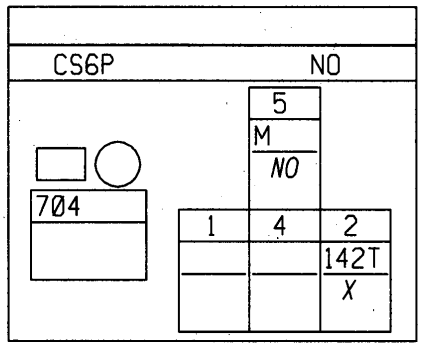

N°	mm²		... ⟶ ...
2	.35	142T	+ HOOD WARNING BUZZER
5	.35	M	EARTH

HOOD SWITCH
SPROJA PROJAB
S21

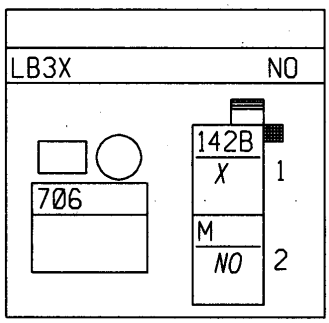

N°	mm²		... ⟶ ...
1	.35	142B	- HOOD TOP DEAD CENTRE SENSOR > HOOD SIGNAL
2	.35	M	EARTH

LEFT-HAND ELECTRIC PANEL OP/CLOS MOTOR

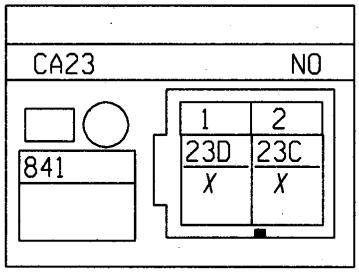

N°	mm²		... → ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL

RIGHT-HAND ELECTRIC PANEL OP/CLOS MOTOR

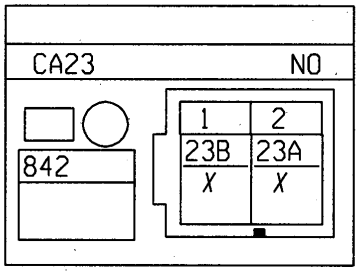

N°	mm²		... → ...
1	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
2	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE

HOOD COVER LOCK
SPROJA PROJAB
S21

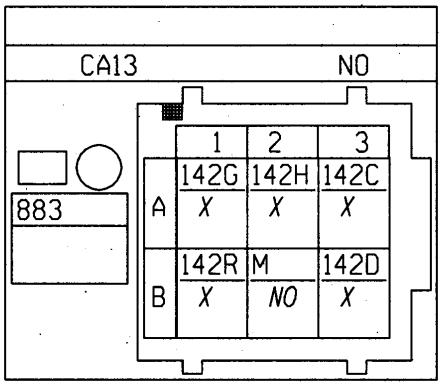

N°	mm²		··· ⟶ ···
A1	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL
B1	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL
A2	.6	142H	+ CENTRAL DOOR LOCKING CLOSURE HOOD COVER LOCK > C CONTROL
B2	.35	M	EARTH
A3	.35	142C	- HOOD COVER 1 LOCK SWITCH > HOOD SIGNAL
B3	.35	142D	- HOOD COVER 2 LOCK SWITCH > HOOD SIGNAL

HOOD COVER LOCK
J64,F64
S21

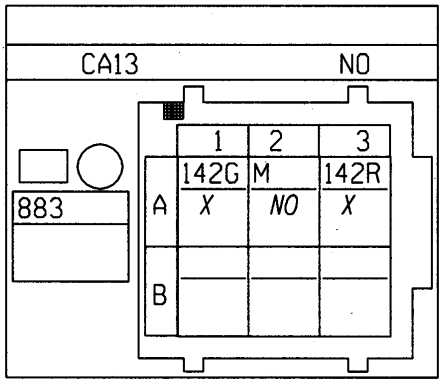

N°	mm²		··· ⟶ ···
A1	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL
A2	.6	M	EARTH
A3	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL

OPTIONAL MALLEABLE MODULE
J64,F64
S21

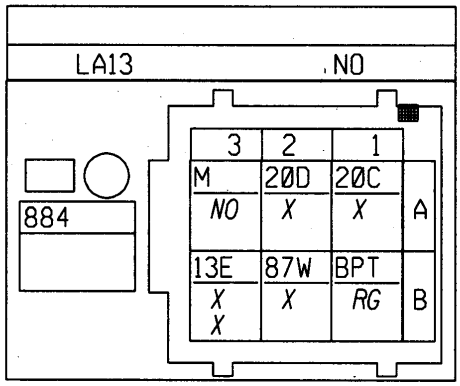

N°	mm²		... → ...
A1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
A2	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B2	.35	87W	FLAP NOTCH MODULE SWITCH 1 SIGNAL
A3	.35	M	EARTH
B3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
B3	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

ELECTRIC HOOD
J64,F64/LARNOU/SAUF MERCOS/TUR
S23

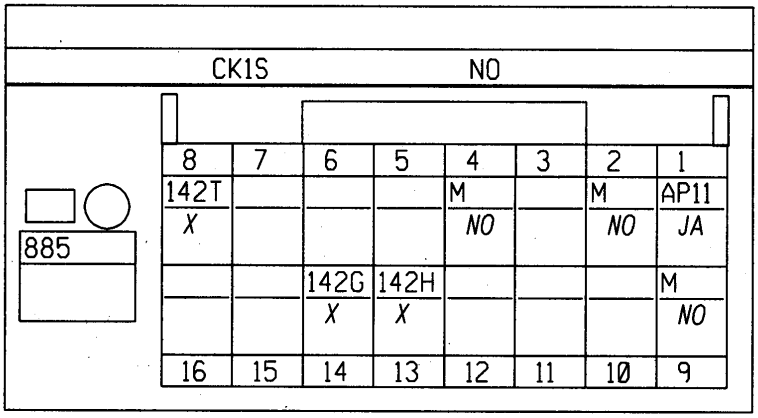

N°	mm²		... → ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	M	EARTH
4	.6	M	EARTH
8	.6	142T	+ HOOD WARNING BUZZER
9	.6	M	EARTH
13	.6	142H	+ CENTRAL DOOR LOCKING CLOSURE HOOD COVER LOCK > C CONTROL
14	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL

ELECTRIC HOOD
2X5KI/SAUF NAVIG,RADIO,MERCOS
S23

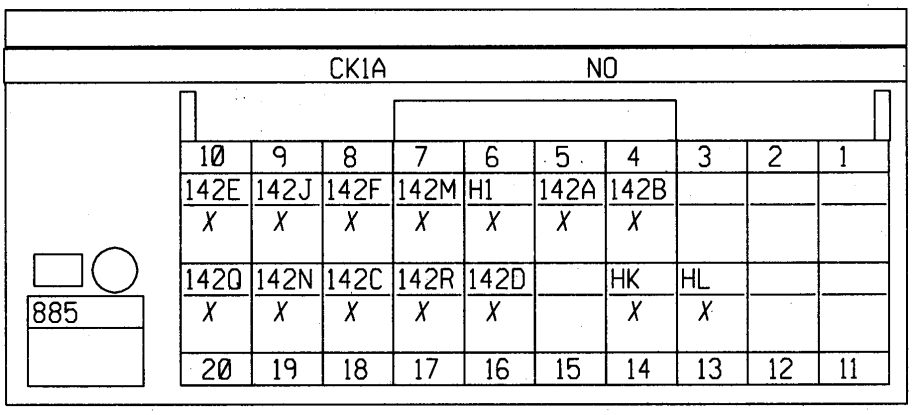

N°	mm²		... → ...
4	.35	142B	- HOOD TOP DEAD CENTRE SENSOR > HOOD SIGNAL
5	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
6	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
7	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL
8	.35	142F	- MASTER CYLINDER OPENING SIGNAL
9	.35	142J	- MASTER CYLINDER CLOSING SIGNAL
10	.35	142E	- HOOD COVER CYLINDER OPENING > HOOD SIGNAL
13	.35	HL	DIAGNOSTIC SIGNAL L
14	.35	HK	DIAGNOSTIC SIGNAL K
16	.35	142D	- HOOD COVER 2 LOCK SWITCH > HOOD SIGNAL
17	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL
18	.35	142C	- HOOD COVER 1 LOCK SWITCH > HOOD SIGNAL
19	.35	142N	- 5TII ARCII CYLINDER CLOSURE SIGNAL
20	.35	142Q	- 5TH ARCH CYLINDER OPENING SIGNAL

ELECTRIC HOOD
4X15KI,2X8KI,4X15CI/SAUF MERCOS
S23

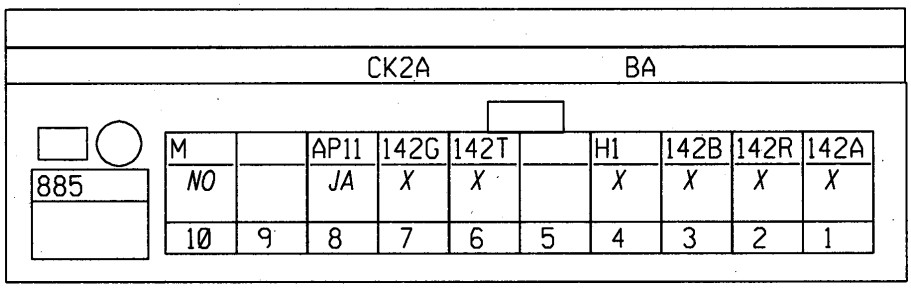

N°	mm²		... → ...
1	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
2	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL
3	.35	142B	- HOOD TOP DEAD CENTRE SENSOR > HOOD SIGNAL
4	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
6	.35	142T	+ HOOD WARNING BUZZER
7	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL
8	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
10	1	M	EARTH

BONNET COVER CYLINDER SWITCH
4X15KI,2X8KI,4X15CI/SAUF MERCOS
S21

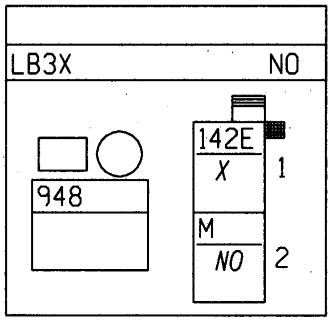

N°	mm²		... → ...
1	.35	142E	- HOOD COVER CYLINDER OPENING > HOOD SIGNAL
2	.35	M	EARTH

5TH ARCH CYLINDER SWITCH
4X15KI,2X8KI,4X15CI/SAUF MERCOS
S22

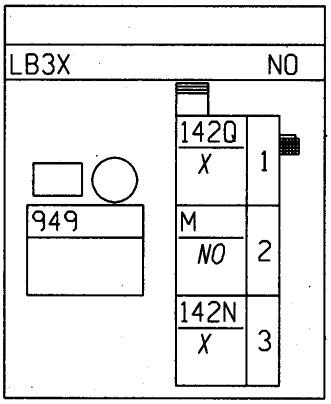

N°	mm²		... → ...
1	.35	142Q	- 5TH ARCH CYLINDER OPENING SIGNAL
2	.35	M	EARTH
3	.35	142N	- 5TH ARCH CYLINDER CLOSURE SIGNAL

MASTER CYLINDER SWITCH

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S21

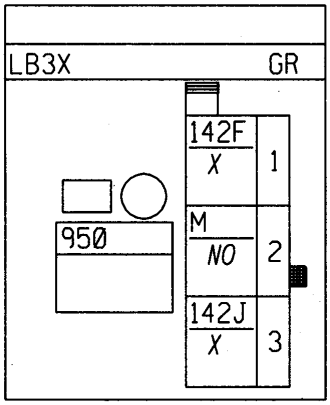

N°	mm²		... ⟶ ...
1	.35	142F	- MASTER CYLINDER OPENING SIGNAL
2	.35	M	EARTH
3	.35	142J	- MASTER CYLINDER CLOSING SIGNAL

HYDRAULIC PUMP RELAY SUPPLY CONNECTION

J64

S23

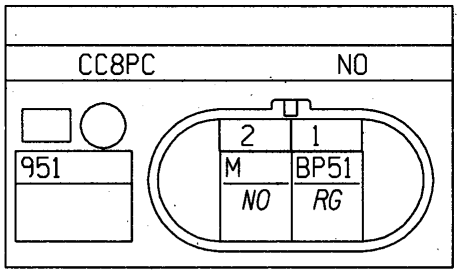

N°	mm²		... ⟶ ...
1	4	BP51	+ BATTERY PROTECTION > HOOD
2	4	M	EARTH

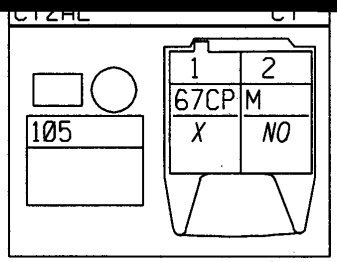

N°	mm²		... ⟶ ...
1	2	67CP	+ HORN > FUSE CONTROL
2	2	M	EARTH

RIGHT FRONT FOGLIGHT
J64,F64/DIESEL
S1

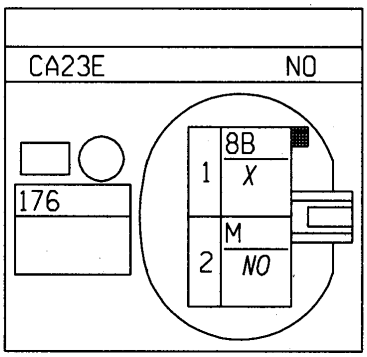

N°	mm²		... ⟶ ...
1	.6	8B	+ FRONT FOG LIGHTS > RELAY
2	.6	M	EARTH

LEFT FRONT FOGLIGHT

K4M/CA/STHPLG/BVA4

S1

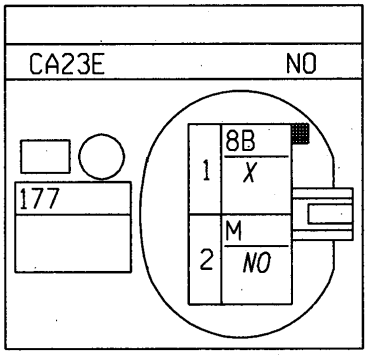

N°	mm²		... → ...
1	.6	8B	+ FRONT FOG LIGHTS > RELAY
2	.6	M	EARTH

RIGHT HEADLIGHT

J64

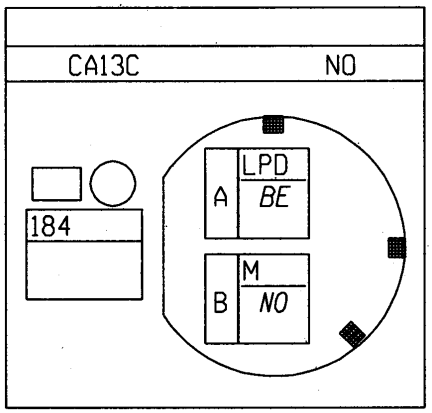

N°	mm²		... → ...
A	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B	.6	M	EARTH

LEFT HEADLIGHT

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

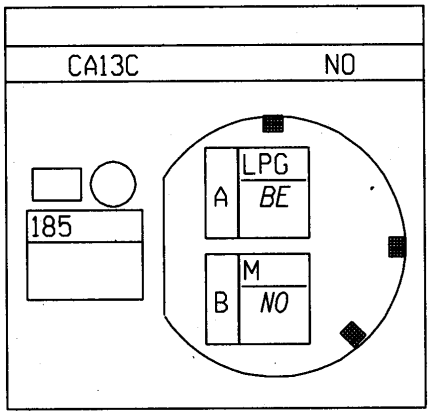

N°	mm²		... → ...
A	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B	.6	M	EARTH

RIGHT HEADLIGHT

J64

S1

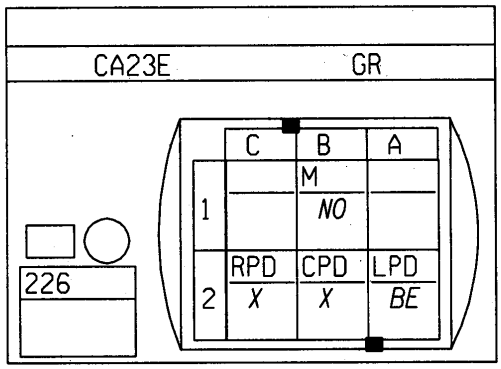

N°	mm²		... → ...
B1	2	M	EARTH
A2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
C2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT

N°	mm²		... → ...
C	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
C	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
M	.6	M	EARTH
M	1	M	EARTH
R	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT

LEFT HEADLIGHT

J64

S1

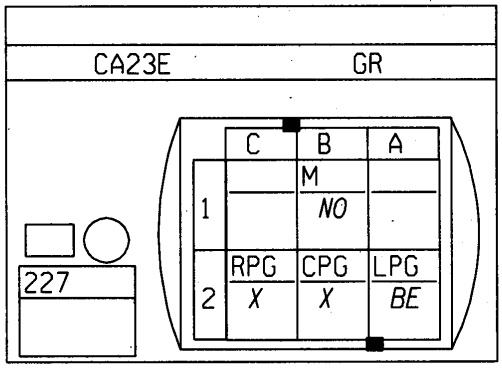

N°	mm²		... → ...
B1	2	M	EARTH
A2	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
C2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

LEFT HEADLIGHT

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S1

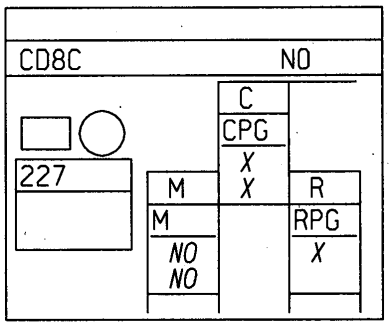

N°	mm²		... ⟶ ...
C	.6	CPG	+ LH PROTECTED DIPPED HEADLIGHT
C	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
M	.6	M	EARTH
M	1	M	EARTH
R	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

RIGHT FRONT FLASHING LIGHT

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S1

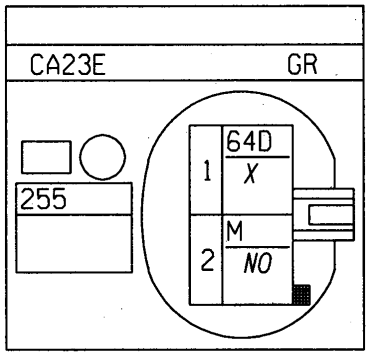

N°	mm²		... ⟶ ...
1	.35	64D	RH FRONT INDICATOR CONTROL
2	.35	M	EARTH

LEFT FRONT FLASHING LIGHT

J64

S1

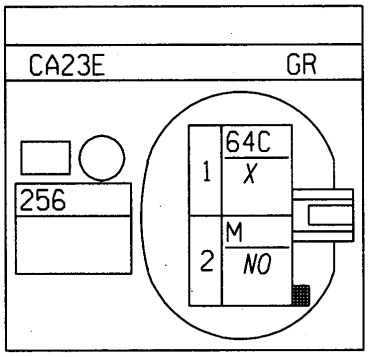

N°	mm²		... → ...
1	.35	64C	LH INDICATOR CONTROL
2	.35	M	EARTH

LEFT HEADLIGHT CORRECTOR MOTOR

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S1

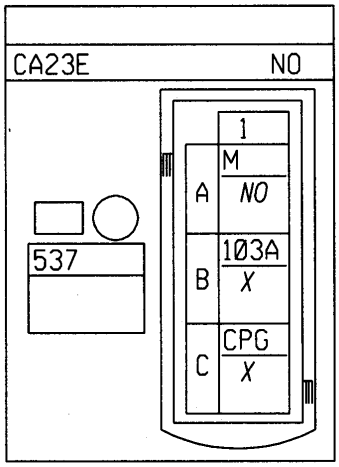

N°	mm²		... → ...
A1	.6	M	EARTH
B1	.6	103A	HEADLAMP POSITIONING CONTROL
C1	.6	CPG	+ LH PROTECTED DIPPED HEADLIGHT

RIGHT HEADLIGHT CORRECTOR MOTOR

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/EQGPL/BVM5

S1

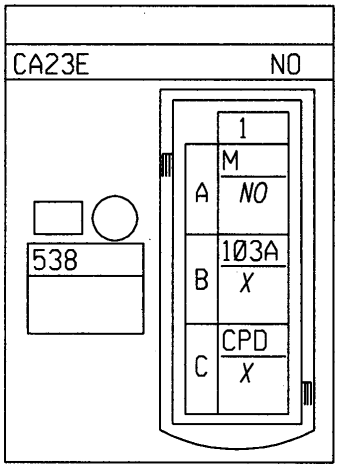

N°	mm²		... → ...
A1	.6	M	EARTH
B1	.6	103A	HEADLAMP POSITIONING CONTROL
C1	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT

ELECTRICAL BOOT LOCKING

S15-S18-S20-S23-S26

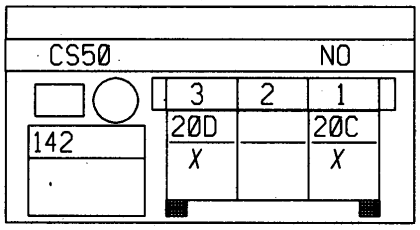

N°	mm²		... ⟶ ...
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

BOOT SWITCH

S15-S18-S20-S23-S26

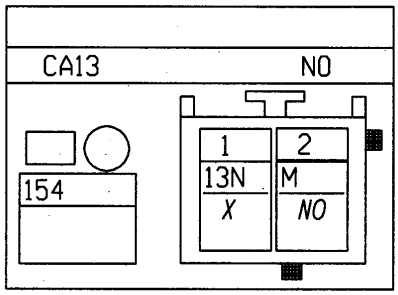

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

REAR FOG LIGHT AND REAR RH REVERSE LIGHT

S20

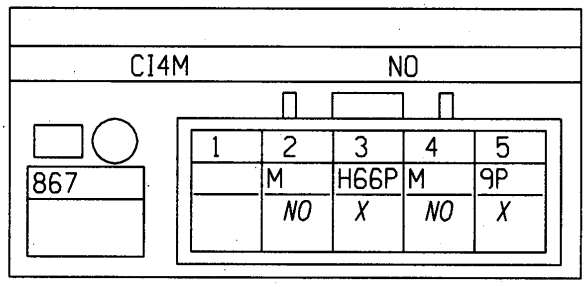

N°	mm²		... ⟶ ...
2	.6	M	EARTH
3	.6	H66P	+ REVERSING LIGHTS CONTROL
4	.6	M	EARTH
5	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

ELECTRICAL BOOT LOCKING

S15-S18-S20-S23-S26

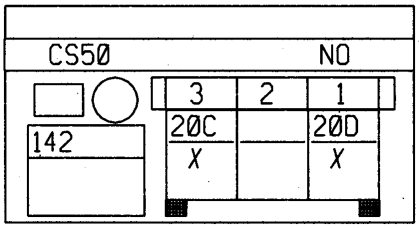

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCH

S15-S18-S20-S23-S26

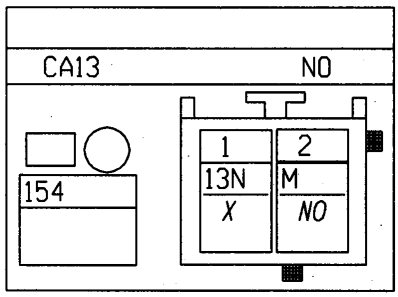

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

RAISED BRAKE LIGHTS

S15-S18-S19-S23-S24-S26

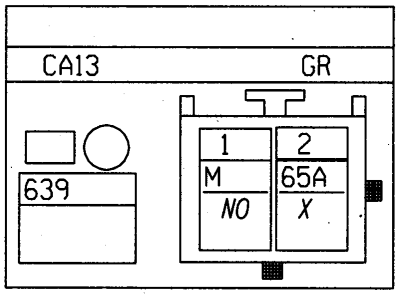

N°	mm²		... ⟶ ...
1	.35	M	EARTH
2	.35	65A	+ BRAKE LIGHTS CONTROL

REAR FOG LIGHT AND REAR LH REVERSE LIGHT

S20

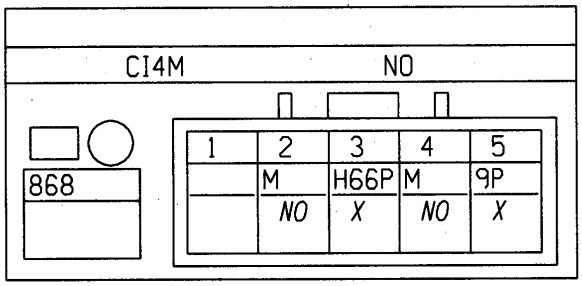

N°	mm²		... → ...
2	.6	M	EARTH
3	.6	H66P	+ REVERSING LIGHTS CONTROL
4	.6	M	EARTH
5	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

ELECTRICAL BOOT LOCKING

S15-S18-S20-S23-S26

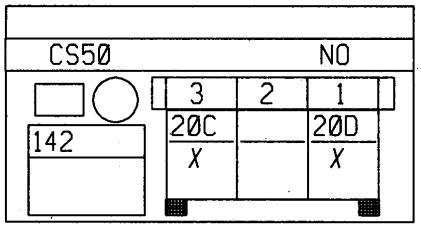

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCII

S15-S18-S20-S23-S26

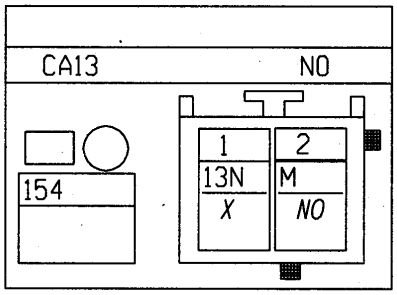

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

REAR WINDOW WIPER MOTOR

S15-S17-S26

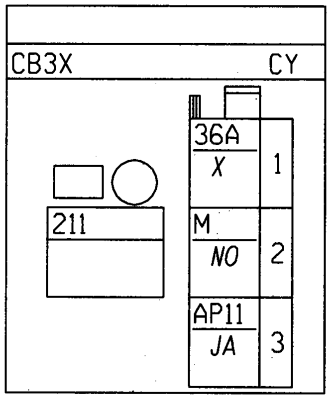

N°	mm²		... ⟶ ...
1	1	36A	+ REAR WIPER CONTROL
2	1	M	EARTH
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION

ELECTRICAL BOOT LOCKING

S15-S18-S20-S23-S26

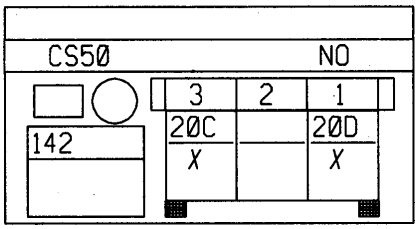

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCH

S15-S18-S20-S23-S26

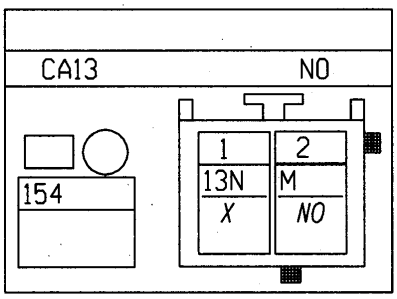

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

REAR WINDOW WIPER MOTOR

S15-S17-S26

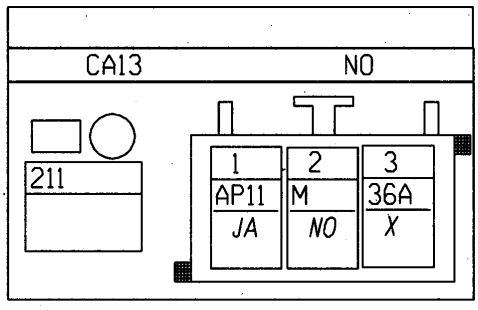

N°	mm²		... ⟶ ...
1	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	1	M	EARTH
3	1	36A	+ REAR WIPER CONTROL

RAISED BRAKE LIGHTS

S15-S18-S19-S23-S24-S26

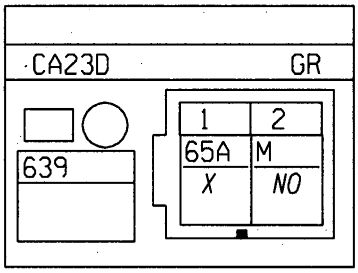

N°	mm²		... ⟶ ...
1	.35	65A	+ BRAKE LIGHTS CONTROL
2	.35	M	EARTH

RAISED BRAKE LIGHTS

S15-S18-S19-S23-S24-S26

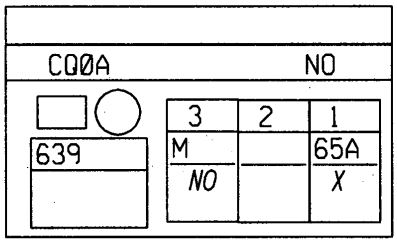

N°	mm²		··· → ···
1	.35	65A	+ BRAKE LIGHTS CONTROL
3	.35	M	EARTH

RIGHT REAR WHEEL SENSOR

S3

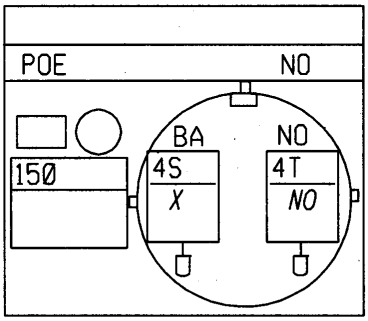

N°	mm²		... ⟶ ...
BA	.5	4S	RH REAR WHEEL SENSOR SIGNAL
NO	.5	4T	+RH REAR WHEEL SENSOR

LEFT REAR WHEEL SENSOR

S3

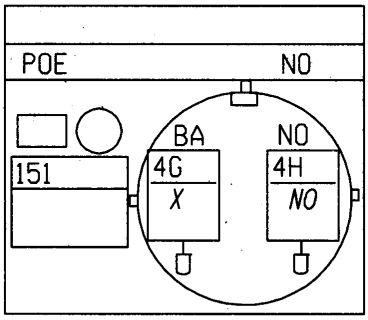

N°	mm²		... ⟶ ...
BA	.5	4G	LH REAR WHEEL SENSOR SIGNAL
NO	.5	4H	+LH REAR WHEEL SENSOR

RIGHT REAR WHEEL SENSOR

S3

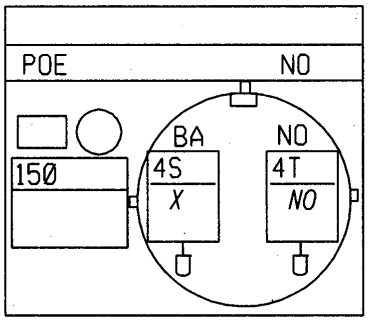

N°	mm²		··· → ···
BA	.5	4S	RH REAR WHEEL SENSOR SIGNAL
NO	.5	4T	+RH REAR WHEEL SENSOR

LEFT REAR WHEEL SENSOR

S3

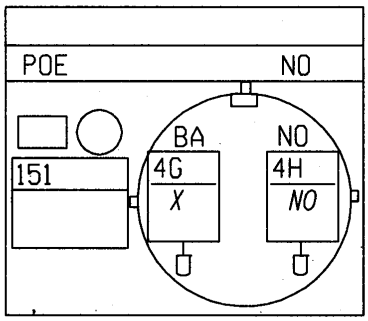

N°	mm²		··· → ···
BA	.5	4G	LH REAR WHEEL SENSOR SIGNAL
NO	.5	4H	+LH REAR WHEEL SENSOR

ALTERNATOR
J64,F64/DIESEL
S28-S29-S31-S32-S33-S35

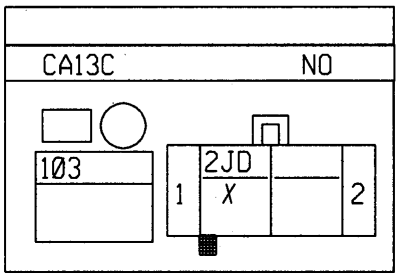

N°	mm²		... ⟶ ...
1	.6	2JD	+ ALTERNATOR EXCITATION

ALTERNATOR

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S28-S29-S31-S32-S33-S35

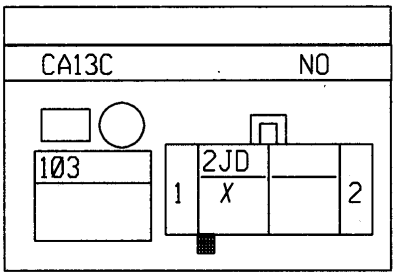

N°	mm²		... ⟶ ...
1	.6	2JD	+ ALTERNATOR EXCITATION

ALTERNATOR
J64
S28-S29-S31-S32-S33-S35

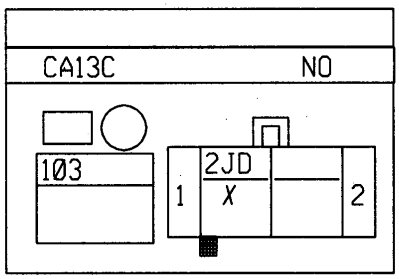

N°	mm²		... ⟶ ...
1	.6	2JD	+ ALTERNATOR EXCITATION

ALTERNATOR
K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4
S28-S29-S31-S32-S33-S35

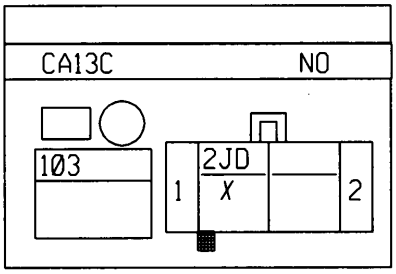

N°	mm²		... ⟶ ...
1	.6	2JD	+ ALTERNATOR EXCITATION

ELECTRONIC CONTROL UNIT INJECTION
K4M/CA/EQGPL/BVM5
S28-S29-S31-S32-S33-S35

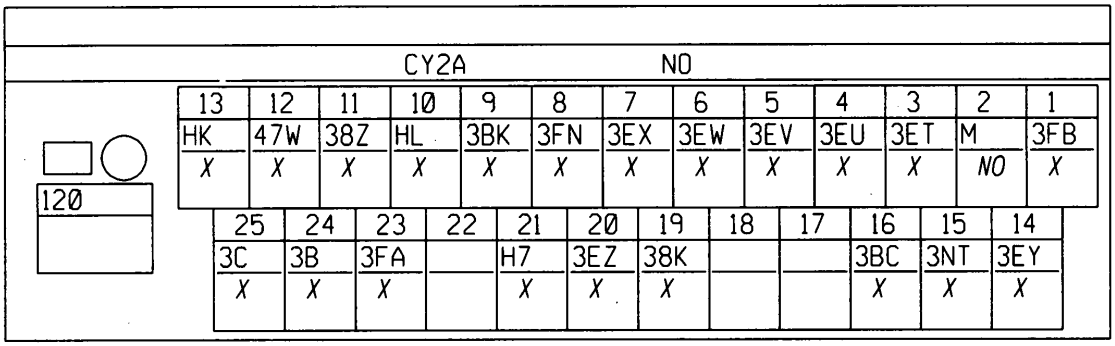

N°	mm²		... ⟶ ...
1	.6	3FB	+ INJECTION > PROTECTION RELAY
2	3	M	EARTH
3	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR
4	.6	3EU	+ POTENTIOMETER CHARGE 1
5	.6	3EV	- EGR SOLENOID VALVE > COMPUTER CONTROL
6	.6	3EW	- CAM SOLENOID VALVE > COMPUTER CONTROL
7	.5	3EX	RH LIFT SIGNAL
8	.6	3FN	ENGINE SPEED SENSOR SIGNAL
9	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
10	.35	HL	DIAGNOSTIC SIGNAL L
11	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL
13	.35	HK	DIAGNOSTIC SIGNAL K
14	.6	3EY	- SPARK PLUG COIL RELAY 1 (1-3) CONTROL
15	.6	3NT	ALTIMETRIC CORRECTION RELAY CONTROL
16	.6	3BC	- IDLING REGULATION SOLENOID > INJECTION COMPUTER CONTROL
19	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
20	.6	3EZ	- SPARK PLUG COIL RELAY 2 (2-4) CONTROL
21	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
23	.6	3FA	SIGNAL+ POTENTIOMETER CHARGE 1
24	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
25	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

ELECTRONIC CONTROL UNIT INJECTION
CA
S28-S29-S31-S32-S33-S35

CA13C NO

120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		HL	3KO				3LS	TB9		51B	3KB	3KC	3KT	3KR
		X	X				X	X		X	X	X	X	X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
		HK	3C	3EL	3FAB	3LW		3KH		3LR	3LU			
		X	X	X	X	X		X		X	X			
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
3LT	3LV	3JM		3JQ	3JK	3KP							51A	
X	X	X		X	X	X							X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	47W	123N	3KD	H17			3JP	3BK		H7				3FW
	X	X	X	X			X	X		X				X
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
65A	38GT		3KK		3KL	3FF	3JN	31A	38K				3EV	3KU
X	X		X		X	X	X	X	X				X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3FB	3FB	M	M		AP29	3FAC	3FH		47H				3FZ	3KV
X	X	NO	NO		JA	X	X		X				X	X

N°	mm²		... ⟶ ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.6	3KQ	AIR TEMPERATURE SIGNAL
8	.6	3LS	SIGNAL+ POTENTIOMETER CHARGE 1
9	.6	TB9	INJECTION PUMP SCREENING BRAID
11	.6	51B	TDC SENSOR INFO 1
12	.6	3KB	ROTOR COMPENSATION SIGNAL
13	.6	3KC	CAM SENSOR SIGNAL
14	.6	3KT	DIESEL PUMP ROTOR SENSOR SIGNAL
15	.6	3KR	INDUCTANCE SWITCH SIGNAL
17	.35	47W	SECONDARY SPEED SIGNAL
18	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
19	.6	3KD	SPARK PLUG DIAGNOSTIC SIGNAL 1
20	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
23	.6	3JP	FAN 2 CONTROL RELAY
24	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
26	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
30	1	3FW	- ELECTRIC CUT-OUT SOLENOID VALVE CONTROL
33	.35	HK	DIAGNOSTIC SIGNAL K
34	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
35	.35	3EL	SIGNAL+ EGR POTENTIOMETER
36	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
37	.35	3LW	SIGNAL+ POTENTIOMETER CHARGE 2
39	.35	3KH	+ EGR PRINTOUT
41	.35	3LR	+ POTENTIOMETER CHARGE 1
42	.35	3LU	+ POTENTIOMETER CHARGE 2
46	.35	65A	+ BRAKE LIGHTS CONTROL
47	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
49	.6	3KK	SPARK PLUG DIAGNOSTIC SIGNAL 2
51	.6	3KL	FOR DIESEL PUMP MEMORY SIGNAL
52	.6	3FF	- PREHEATER RELAY CONTROL
53	.6	3JN	FAN CONTROL RELAY 1
54	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
55	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
59	1	3EV	- EGR SOLENOID VALVE > COMPUTER CONTROL
60	.6	3KU	DIESEL PUMP ROTOR B CONTROL
61	.35	3LT	- POTENTIOMETER CHARGE 1
62	.35	3LV	- POTENTIOMETER CHARGE 2
63	.35	3JM	- EGR SOLENOID VALVE
65	.6	3JQ	- AIR TEMPERATURE
66	.35	3JK	- COOLANT TEMPERATURE
67	.6	3KP	- DIESEL FUEL TEMPERATURE > DIESEL PUMP MEMORY
74	.6	51A	TDC SENSOR INFO 2
76	1	3FB	+ INJECTION > PROTECTION RELAY
77	1	3FB	+ INJECTION > PROTECTION RELAY
78	2	M	EARTH
79	2	M	EARTH
81	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
82	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
83	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
85	.35	47H	FUEL FLOW RATE SIGNAL
89	.6	3FZ	- SOLENOID VALVE ADVANCE CONTROL
90	.6	3KV	DIESEL PUMP ROTOR CONTROL

ELECTRONIC CONTROL UNIT INJECTION
K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG BVA4 K4M/CA/EQGPL/BVM5 K4M/K4
S28-S29-S31- 32-S33-S35

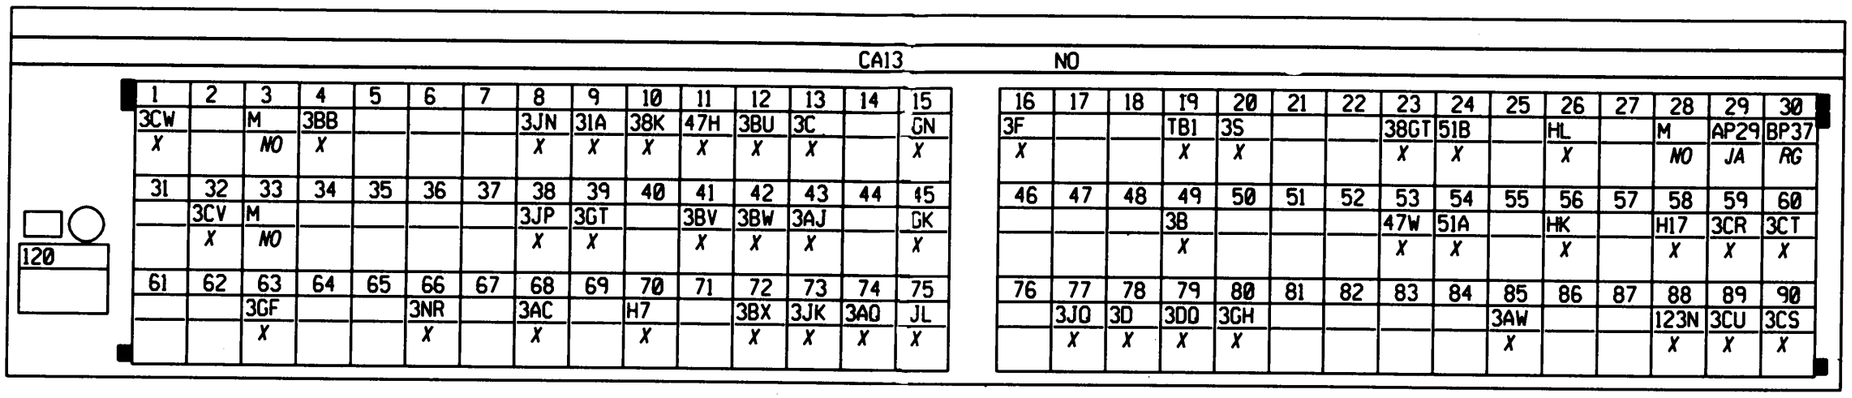

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	31A	38K	47H	3BU	3C		GN
X		NO	X				X	X	X	X	X	X		X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3JP	3GT		3BV	3BW	3AJ		GK
	X	NO					X	X		X	X	X		X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF			3NR		3AC		H7		3BX	3JK	3AQ	JL
		X			X		X		X		X	X	X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F			TB1	3S			38GT	51B		HL		M	AP29	BP37
X			X	X			X	X		X		NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
			3B				47W	51A		HK		H17	3CR	3CT
			X				X	X		X		X	X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
	3JQ	3D	3DD	3GH					3AW			123N	3CU	3CS
	X	X	X	X					X			X	X	X

N°	mm²		... ⟶ ...
1	1	3CW	- COIL INJECTOR 2-3 CONTROL
3	1.4	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
10	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
23	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
24	.6	51B	TDC SENSOR INFO 1
26	.35	HL	DIAGNOSTIC SIGNAL L
28	1.4	M	EARTH
29	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	- COIL INJECTOR 1-4 CONTROL
33	1.4	M	EARTH
38	.6	3JP	FAN 2 CONTROL RELAY
39	1	3GT	POWER LATCH ACTIVATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47W	SECONDARY SPEED SIGNAL
54	.6	51A	TDC SENSOR INFO 2
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	.6	3CR	INJECTOR 1 CONTROL
60	.6	3CT	INJECTOR 3 CONTROL
63	1	3GF	- UPSTREAM REHEATER OXYGEN SENSOR CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.6	3JL	- THROTTLE POSITION POTENTIOMETER
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
85	.35	3AW	SIGNAL+ POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.6	3CU	INJECTOR 4 CONTROL
90	.6	3CS	INJECTOR 2 CONTROL

ELECTRONIC CONTROL UNIT INJECTION
K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4
S28-S29-S31-S32-S33-S35

CA13C NO

120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	31A	38K	47H	3BU	3C		3GN
X		NO	X				X	X	X	X	X	X		X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3JP	3GT		3BV	3BW	3AJ		3GK
	X	NO					X	X		X	X	X		X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF			3NR		3AC		H7		3BX	3JK	3AQ	3JL
		X			X		X		X		X	X	X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F			TB1	3S			38GT	51B		HL		M	AP29	BP37
X			X	X			X	X		X		NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
			3B	3HY			47W	51A		HK		H17	3CR	3CT
			X	X			X	X		X		X	X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
	3JQ	3D	3DQ	3GH					3AW			123N	3CU	3CS
	X	X	X	X					X			X	X	X

N°	mm²		... → ...
1	1	3CW	- COIL INJECTOR 2-3 CONTROL
3	1.4	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
10	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
23	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
24	.6	51B	TDC SENSOR INFO 1
26	.35	HL	DIAGNOSTIC SIGNAL L
28	1.4	M	EARTH
29	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	- COIL INJECTOR 1-4 CONTROL
33	1.4	M	EARTH
38	.6	3JP	FAN 2 CONTROL RELAY
39	1	3GT	POWER LATCH ACTIVATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.35	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
50	.35	3HY	LIQUEFIED PETROLEUM GAS > INJECTION COMPUTER SIGNAL
53	.35	47W	SECONDARY SPEED SIGNAL
54	.6	51A	TDC SENSOR INFO 2
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	.6	3CR	INJECTOR 1 CONTROL
60	.6	3CT	INJECTOR 3 CONTROL
63	1	3GF	- UPSTREAM REHEATER OXYGEN SENSOR CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.6	3JL	- THROTTLE POSITION POTENTIOMETER
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
85	.35	3AW	SIGNAL+ POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.6	3CU	INJECTOR 4 CONTROL
90	.6	3CS	INJECTOR 2 CONTROL

ELECTRONIC CONTROL UNIT INJECTION
CHAUFO CA
S28-S29-S31-S32-S33-S35

CA13C NO

120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	31A	38K	47H	3BU	3C		3GN
X		NO	X				X	X	X	X	X	X		X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3JP	3GT		3BV	3BW	3AJ		3GK
	X	NO					X	X		X	X	X		X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF			3NR		3AC		H7		3BX	3JK	3AQ	3JL
		X			X		X		X		X	X	X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F			TB1	3S			38GT	51B		HL		M	AP29	BP37
X			X	X			X	X		X		NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
			3B				47W	51A		HK		H17	3CR	3CT
			X				X	X		X		X	X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
	3JD	3D	3DD	3GH					3AW			123N	3CU	3CS
	X	X	X	X					X			X	X	X

N°	mm²		... ⟶ ...
1	2	3CW	- COIL INJECTOR 2-3 CONTROL
3	2	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
10	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
23	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
24	.6	51B	TDC SENSOR INFO 1
26	.35	HL	DIAGNOSTIC SIGNAL L
28	2	M	EARTH
29	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	2	3CV	- COIL INJECTOR 1-4 CONTROL
33	2	M	EARTH
38	.6	3JP	FAN 2 CONTROL RELAY
39	1	3GT	POWER LATCH ACTIVATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47W	SECONDARY SPEED SIGNAL
54	.6	51A	TDC SENSOR INFO 2
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	1	3CR	INJECTOR 1 CONTROL
60	1	3CT	INJECTOR 3 CONTROL
63	1	3GF	- UPSTREAM REHEATER OXYGEN SENSOR CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.6	3JL	- THROTTLE POSITION POTENTIOMETER
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
85	.6	3AW	SIGNAL+ POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	1	3CU	INJECTOR 4 CONTROL
90	1	3CS	INJECTOR 2 CONTROL

RATTLE SENSOR
CHAUFO
S28-S29-S33-S35

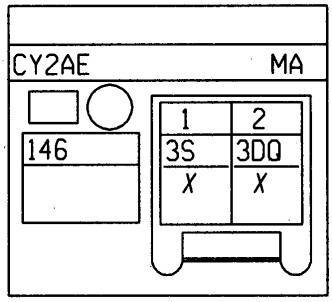

N°	mm²		... → ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR

COLLECTOR PRESSURE SENSOR
CHAUFO CA
S28-S29-S31-S33-S35

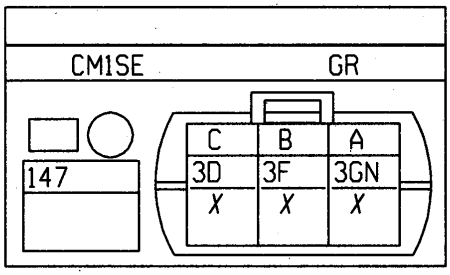

N°	mm²		... → ...
A	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.35	3D	-SENSOR ASSEMBLY 4

TDC SENSOR
J64,F64/DIESEL
S28-S29-S30-S31-S32-S34-S35

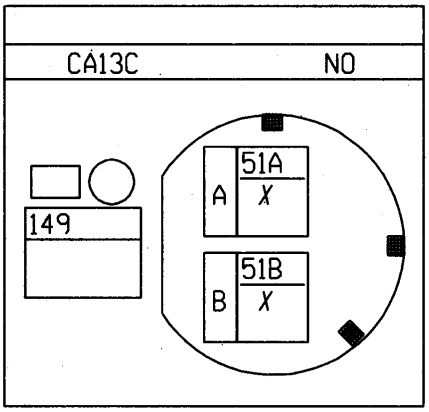

N°	mm²		... → ...
A	.6	51A	TDC SENSOR INFO 2
B	.6	51B	TDC SENSOR INFO 1

RATTLE SENSOR
CHAUFO CA
S28-S29-S33-S35

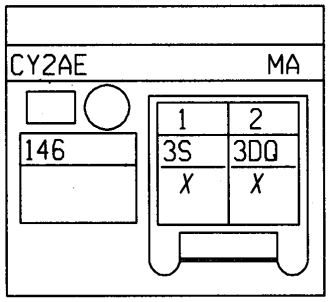

N°	mm²		... ⟶ ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR

COLLECTOR PRESSURE SENSOR
J64,F64/DIESEL
S28-S29-S31-S33-S35

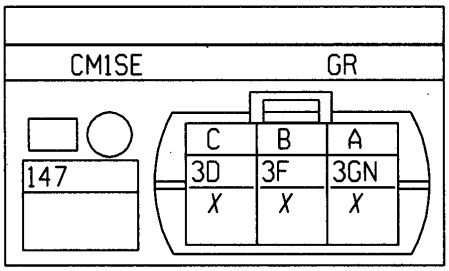

N°	mm²		... ⟶ ...
A	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.35	3D	-SENSOR ASSEMBLY 4

TDC SENSOR
CA
S28-S29-S30-S31-S32-S34-S35

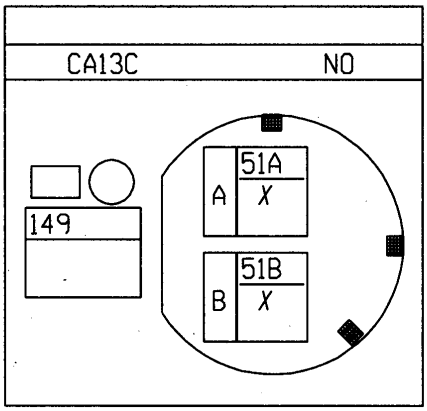

N°	mm²		... ⟶ ...
A	.6	51A	TDC SENSOR INFO 2
B	.6	51B	TDC SENSOR INFO 1

TDC SENSOR
CA
S28-S29-S30-S31-S32-S34-S35

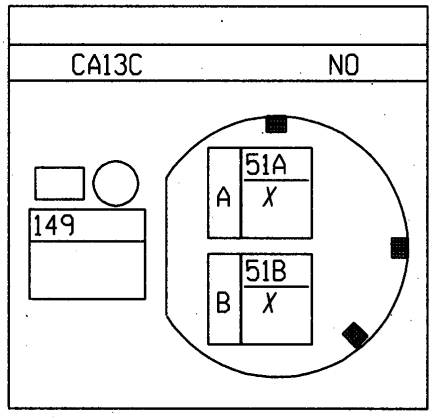

N°	mm²		··· ⟶ ···
A	.6	51A	TDC SENSOR INFO 2
B	.6	51B	TDC SENSOR INFO 1

REVERSING LIGHTS SWITCH
J64,F64/DIESEL
S28-S29-S31-S32-S33

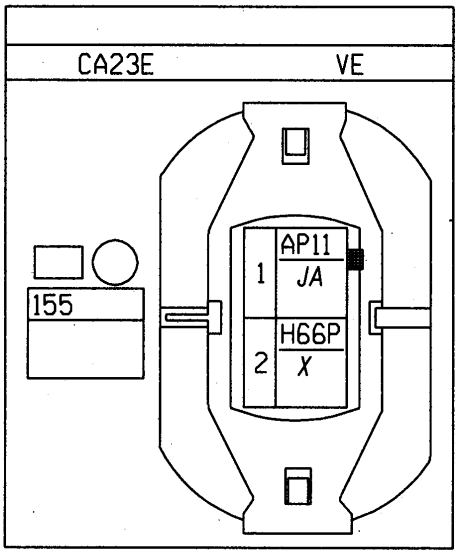

N°	mm²		··· ⟶ ···
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

TDC SENSOR

K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4 K4M/CA/EQGPL/BVM5

S28-S29-S30-S31-S32-S34-S35

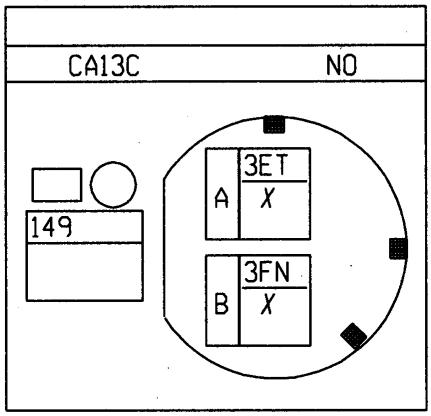

N°	mm²		... → ...
A	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR
B	.6	3FN	ENGINE SPEED SENSOR SIGNAL

REVERSING LIGHTS SWITCH

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S28-S29-S31-S32-S33

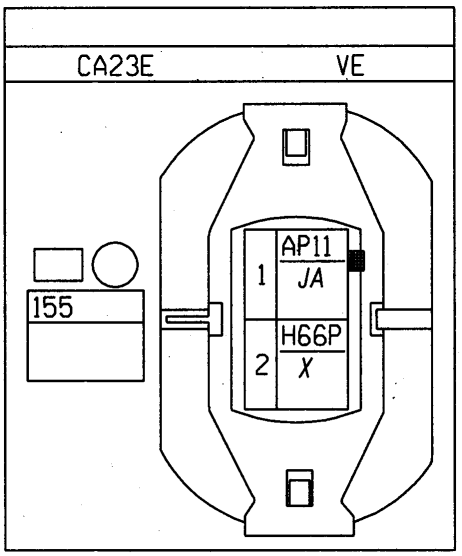

N°	mm²		... → ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

REVERSING LIGHTS SWITCH
CHAUFO CA
S28-S29-S31-S32-S33

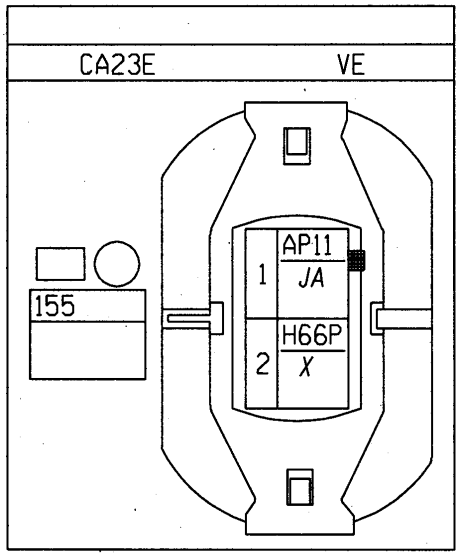

N°	mm²		... → ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

AIR CONDITIONING CLUTCH
CHAUFO CA
S28-S29-S31-S32-S33-S35

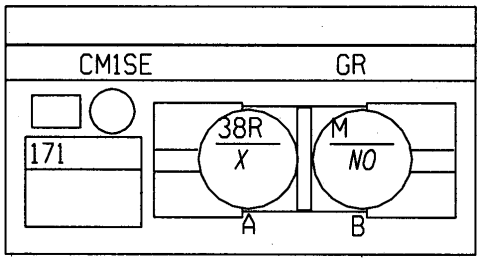

N°	mm²		... → ...
A	1	38R	+ AIR CONDITIONING CLUTCH CONTROL
B	1	M	EARTH

REVERSING LIGHTS SWITCH

K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4 K4M/CA/EQGPL/BVM5

S28-S29-S31-S32-S33

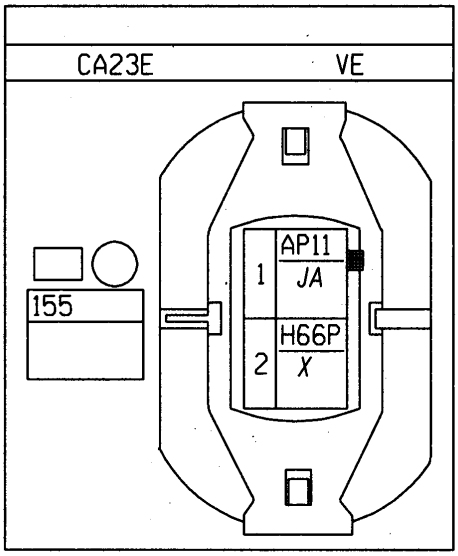

N°	mm²		... → ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

AIR CONDITIONING CLUTCH

J64

S28-S29-S31-S32-S33-S35

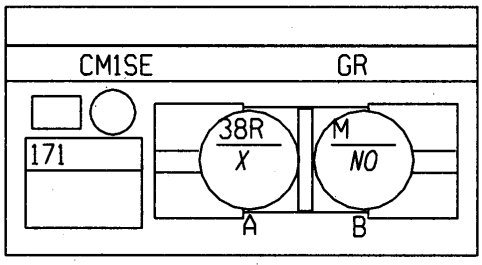

N°	mm²		... → ...
A	1	38R	+ AIR CONDITIONING CLUTCH CONTROL
B	1	M	EARTH

AIR CONDITIONING CLUTCH
J64,F64/DIESEL
S28-S29-S31-S32-S33-S35

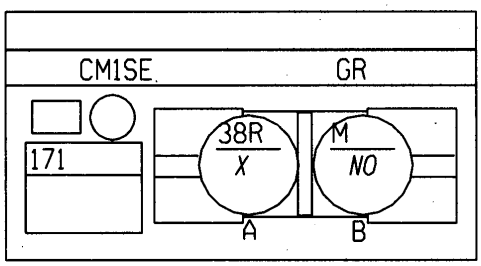

N°	mm²		··· → ···
A	1	38R	+ AIR CONDITIONING CLUTCH CONTROL
B	1	M	EARTH

COOLING FAN GROUP
K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4 K4M/CA/EQGPL/BVM5

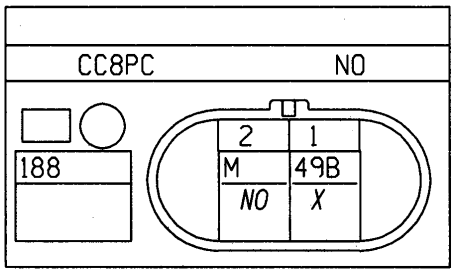

N°	mm²		··· → ···
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

OIL LEVEL SENSOR
J64
S28-S29-S30-S31-S35

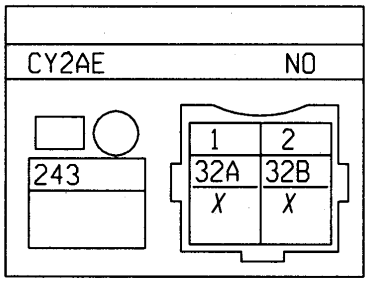

N°	mm²		··· → ···
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

AIR CONDITIONING CLUTCH
K4M/K4J/CHAUFO/SPRGPL/BVM5
S28-S29-S31-S32-S33-S35

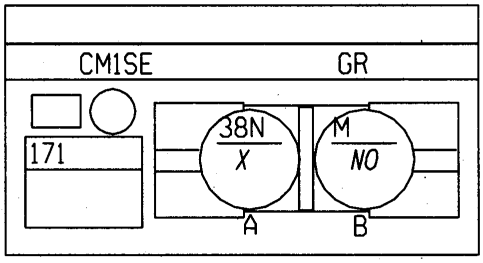

N°	mm²		... → ...
A	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
B	1	M	EARTH

AIR CONDITIONING SLECTION FUNCTION PRESSURE SWITCH
J64
S32

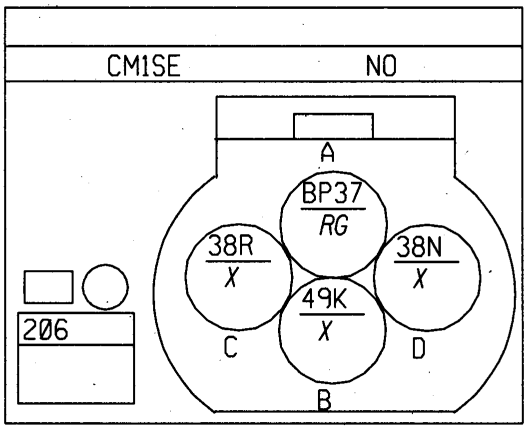

N°	mm²		... → ...
A	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
B	.35	49K	- HIGH SPEED FAN UNIT CONTROL
C	1	38R	+ AIR CONDITIONING CLUTCH CONTROL
D	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL

OIL LEVEL SENSOR
CHAUFO
S28-S29-S30-S31-S35

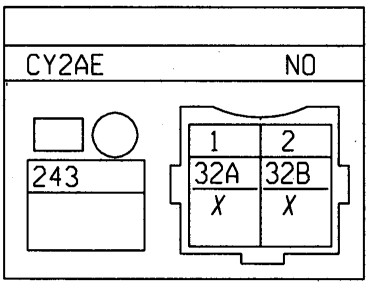

N°	mm²		... → ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

INJECTOR 1
CA
S28-S29-S30-S31-S33

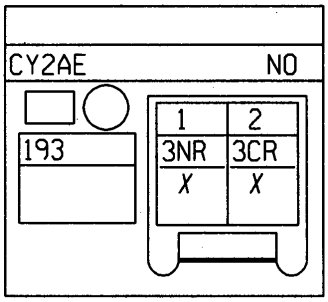

N°	mm²		... → ...
1	.6	3NR	+ INJECTOR >
2	.6	3CR	INJECTOR 1 CONTROL

INJECTOR 2
J64,F64/DIESEL
S28-S29-S31-S33

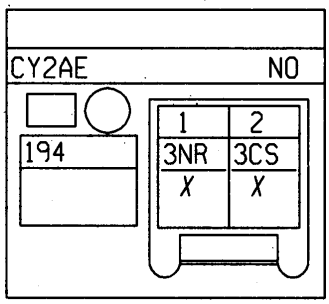

N°	mm²		... → ...
1	.6	3NR	+ INJECTOR >
2	.6	3CS	INJECTOR 2 CONTROL

INJECTOR 3
J64,F64/DIESEL
S28-S29-S31-S33

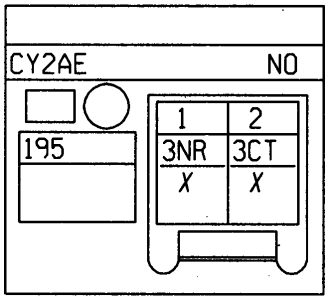

N°	mm²		... → ...
1	.6	3NR	+ INJECTOR >
2	.6	3CT	INJECTOR 3 CONTROL

INJECTOR 1
K4M/CA/STHPLG/BVA4
S28-S29-S30-S31-S33

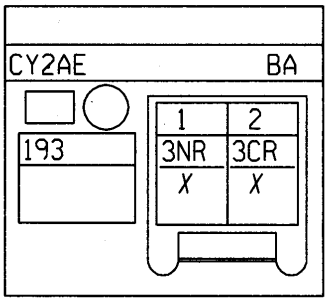

N°	mm²		... ⟶ ...
1	1	3NR	+ INJECTOR >
2	1	3CR	INJECTOR 1 CONTROL

INJECTOR 2
J64
S28-S29-S31-S33

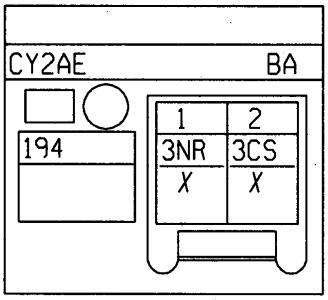

N°	mm²		... ⟶ ...
1	1	3NR	+ INJECTOR >
2	1	3CS	INJECTOR 2 CONTROL

INJECTOR 3
CHAUFO CA
S28-S29-S31-S33

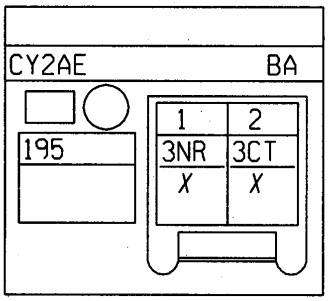

N°	mm²		... ⟶ ...
1	1	3NR	+ INJECTOR >
2	1	3CT	INJECTOR 3 CONTROL

INJECTOR 4
J64,F64/DIESEL
S28-S29-S31-S33

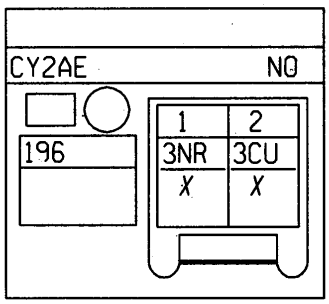

N°	mm²		... ⟶ ...
1	.6	3NR	+ INJECTOR >
2	.6	3CU	INJECTOR 4 CONTROL

THROTTLE POTENTIOMETER
K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4
S28-S29-S33-S35

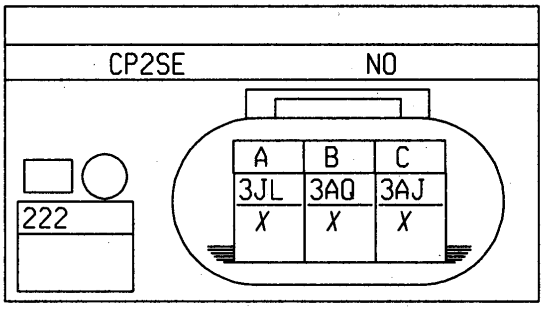

N°	mm²		... ⟶ ...
A	.6	3JL	- THROTTLE POSITION POTENTIOMETER
B	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
C	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER

THROTTLE POTENTIOMETER
K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4
S28-S29-S33-S35

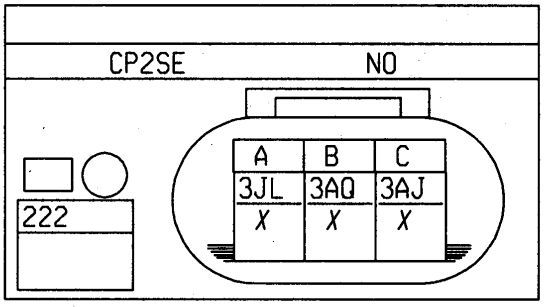

N°	mm²		... ⟶ ...
A	.35	3JL	- THROTTLE POSITION POTENTIOMETER
B	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
C	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER

INJECTOR 4

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S28-S29-S31-S33

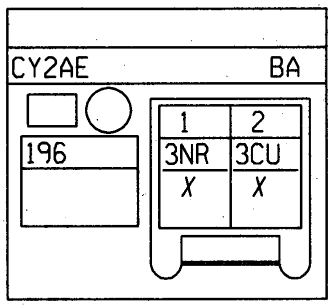

N°	mm²		... ⟶ ...
1	1	3NR	+ INJECTOR >
2	1	3CU	INJECTOR 4 CONTROL

THROTTLE POTENTIOMETER

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S28-S29-S33-S35

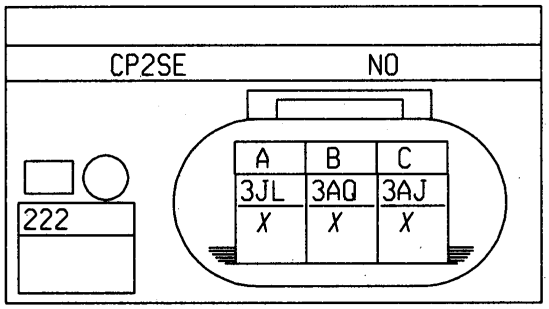

N°	mm²		... ⟶ ...
A	.6	3JL	- THROTTLE POSITION POTENTIOMETER
B	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
C	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER

POWER ASSISTED STEERING PRESSOSTAT

J64

S28-S29-S33-S35

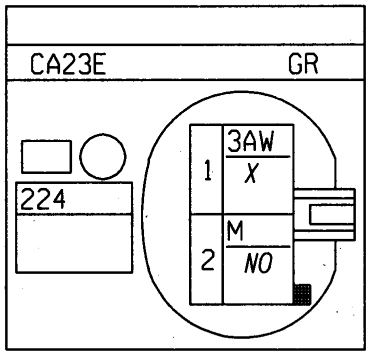

N°	mm²		... ⟶ ...
1	.6	3AW	SIGNAL+ POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER
2	.6	M	EARTH

POWER ASSISTED STEERING PRESSOSTAT

K4M/K4J/CHAUFO/SPRGPL/BVM5 K4M/CA/SPRGPL/BVM5 K4M/CA/STHPLG/BVA4

S28-S29-S33-S35

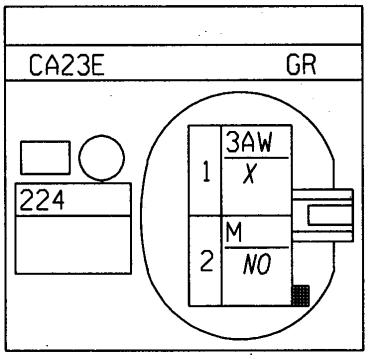

N°	mm²		... ⟶ ...
1	.35	3AW	SIGNAL+ POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER
2	.6	M	EARTH

OIL LEVEL SENSOR

J64

S28-S29-S30-S31-S35

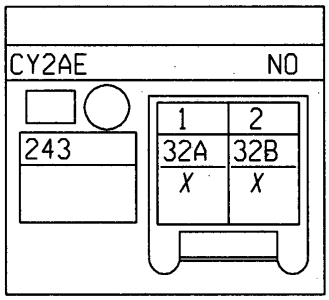

N°	mm²		... ⟶ ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

OIL LEVEL SENSOR
J64,F64/DIESEL
S28-S29-S30-S31-S35

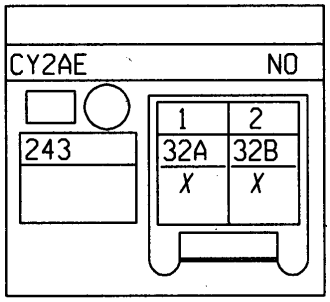

N°	mm²		... → ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

WATER INJECTION TEMPERATURE SENSOR
K4M/CA/STHPLG/BVA4
S27

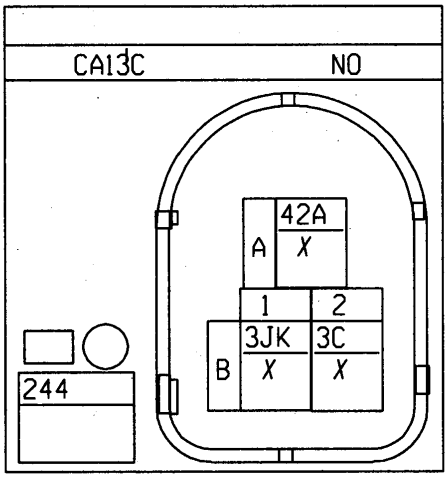

N°	mm²		... → ...
A	.35	42A	SIGNAL+ COOLANT TEMPERATURE
B1	.6	3JK	- COOLANT TEMPERATURE
B2	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

WATER INJECTION TEMPERATURE SENSOR
J64
S27

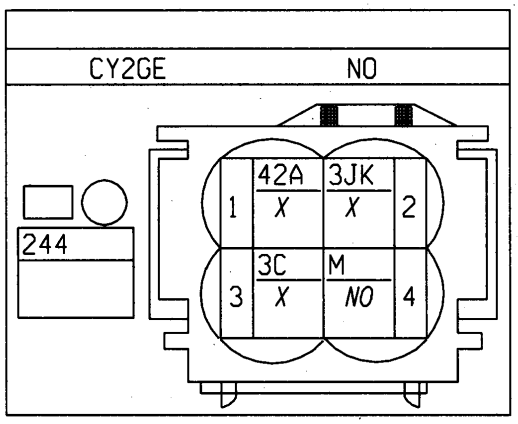

N°	mm²		... ⟶ ...
1	.35	42A	SIGNAL+ COOLANT TEMPERATURE
2	.35	3JK	- COOLANT TEMPERATURE
3	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
4	.35	M	EARTH

PREHEATING UNIT
K4M/CA/EQGPL/BVM5
S31-S32

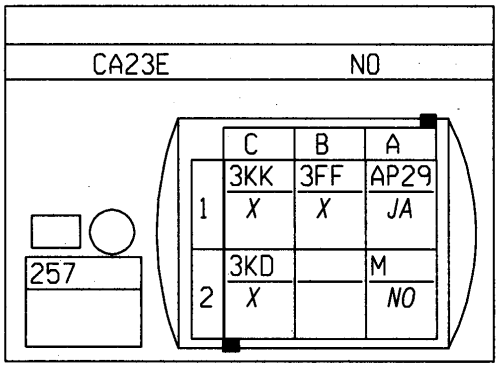

N°	mm²		... ⟶ ...
A1	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
B1	.6	3FF	- PREHEATER RELAY CONTROL
C1	.6	3KK	SPARK PLUG DIAGNOSTIC SIGNAL 2
A2	.6	M	EARTH
C2	.6	3KD	SPARK PLUG DIAGNOSTIC SIGNAL 1

WATER INJECTION TEMPERATURE SENSOR

J64

S27

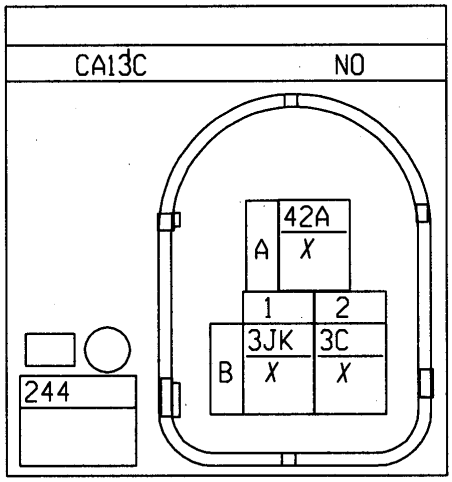

N°	mm²		... → ...
A	.6	42A	SIGNAL+ COOLANT TEMPERATURE
B1	.6	3JK	- COOLANT TEMPERATURE
B2	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

COOLING FAN AND AIR CONDITIONING

K4M/CA/EQGPL/BVM5

S28-S29-S31-S32-S33-S35

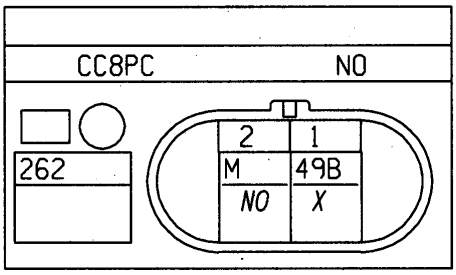

N°	mm²		... → ...
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

WATER INJECTION TEMPERATURE SENSOR
J64
S27

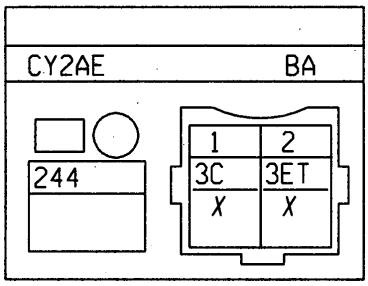

N°	mm²		... ⟶ ...
1	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
2	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR

FAN UNIT THERMAL SENSOR
PBCH
S32

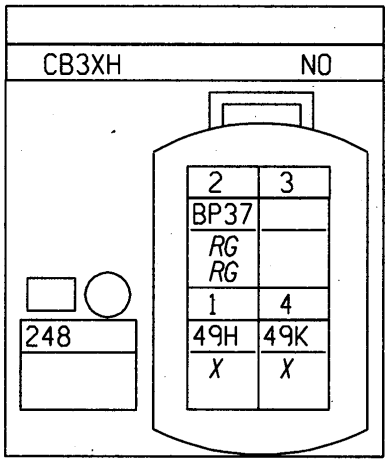

N°	mm²		... ⟶ ...
1	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
2	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
4	.35	49K	- HIGH SPEED FAN UNIT CONTROL

BI-WATER THERMAL SENSOR
J64,F64
S32

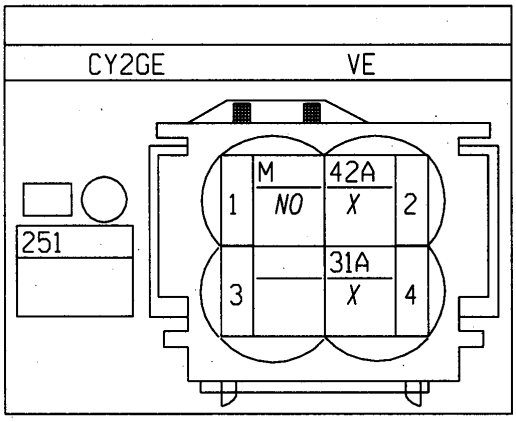

N°	mm²		... ⟶ ...
1	.35	M	EARTH
2	.35	42A	SIGNAL+ COOLANT TEMPERATURE
4	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL

PREHEATING UNIT
TO TO
S31-S32

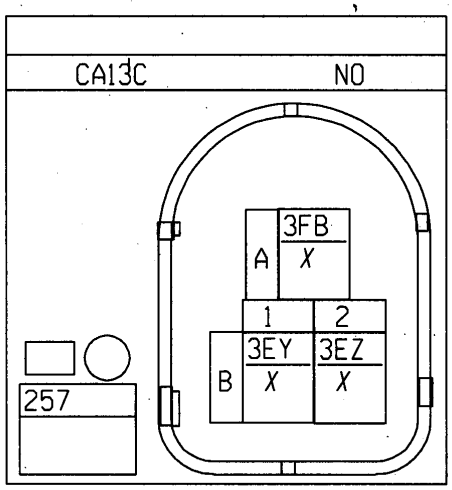

N°	mm²		... ⟶ ...
A	.6	3FB	+ INJECTION > PROTECTION RELAY
B1	.6	3EY	- SPARK PLUG COIL RELAY 1 (1-3) CONTROL
B2	.6	3EZ	- SPARK PLUG COIL RELAY 2 (2-4) CONTROL

PREHEATING UNIT
J64,F64
S31-S32

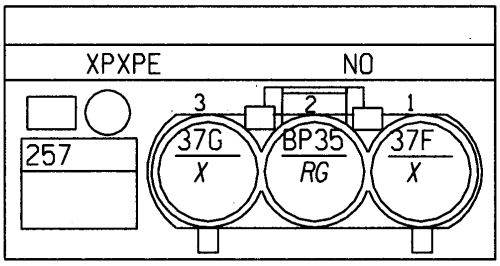

N°	mm²		... ⟶ ...
1	5	37F	+ SPARK PLUG 1> 3 CONTROL
2	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
3	5	37G	+ SPARK PLUG 2> 4 CONTROL

AIR INJECTION TEMPERATURE SENSOR
TO
S28-S29-S32-S33-S35

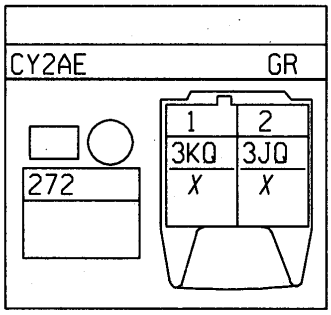

N°	mm²		... ⟶ ...
1	.6	3KQ	AIR TEMPERATURE SIGNAL
2	.6	3JQ	- AIR TEMPERATURE

CONDITIONING FAN RESISTANCE
TO TO
S28-S29-S31-S32-S33-S35

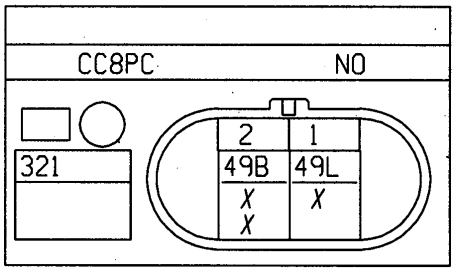

N°	mm²		... ⟶ ...
1	3	49L	+ LOW RESISTANCE FAN CONTROL
2	3	49B	+ FAN CONTROL
2	3	49B	+ FAN CONTROL

PREHEATING UNIT
TO TO TN
S31-S32

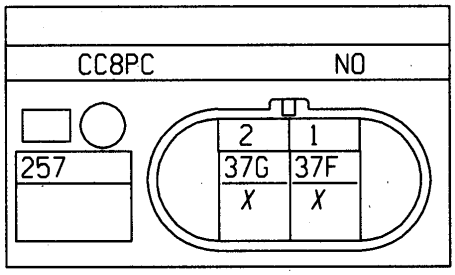

N°	mm²		... → ...
1	5	37F	+ SPARK PLUG 1> 3 CONTROL
2	5	37G	+ SPARK PLUG 2> 4 CONTROL

COOLING FAN AND AIR CONDITIONING
J64,F64
S28-S29-S31-S32-S33-S35

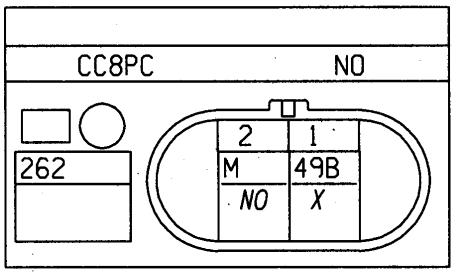

N°	mm²		... → ...
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

AIR INJECTION TEMPERATURE SENSOR
E2/SAUF TUR E1/SAUF TUR
S28-S29-S32-S33-S35

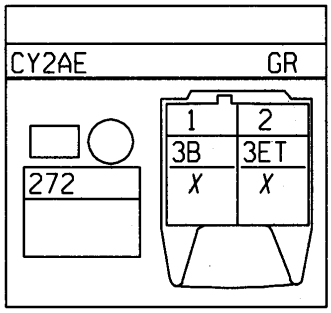

N°	mm²		... → ...
1	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
2	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR

COOLING FAN AND AIR CONDITIONING
J64,F64
S28-S29-S31-S32-S33-S35

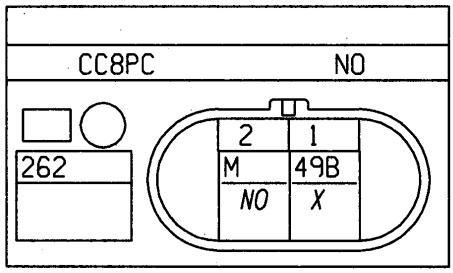

N°	mm²		... ⟶ ...
1	5	49B	+ FAN CONTROL
2	3	M	EARTH

AIR INJECTION TEMPERATURE SENSOR
E2/SAUF TUR E1/SAUF TUR
S28-S29-S32-S33-S35

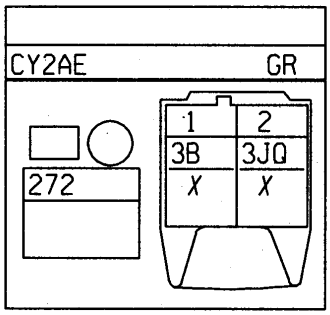

N°	mm²		... ⟶ ...
1	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
2	.6	3JQ	- AIR TEMPERATURE

CONDITIONING FAN RESISTANCE
E2/SAUF TUR E1/SAUF TUR
S28-S29-S31-S32-S33-S35

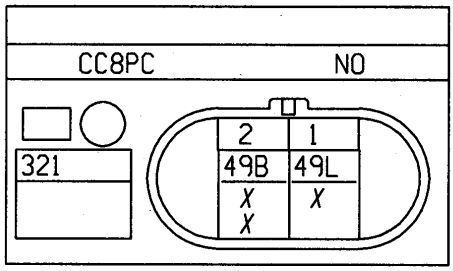

N°	mm²		... ⟶ ...
1	3	49L	+ LOW RESISTANCE FAN CONTROL
2	3	49B	+ FAN CONTROL
2	5	49B	+ FAN CONTROL

AIR INJECTION TEMPERATURE SENSOR
E2/SAUF TUR E1/SAUF TUR
S28-S29-S32-S33-S35

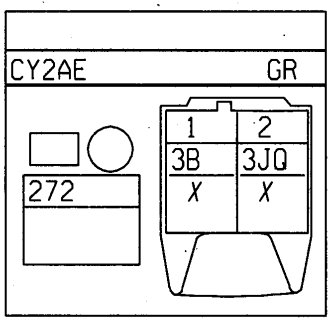

N°	mm²		... → ...
1	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
2	.6	3JQ	- AIR TEMPERATURE

CONDITIONING FAN RESISTANCE
E2/SAUF TUR
S28-S29-S31-S32-S33-S35

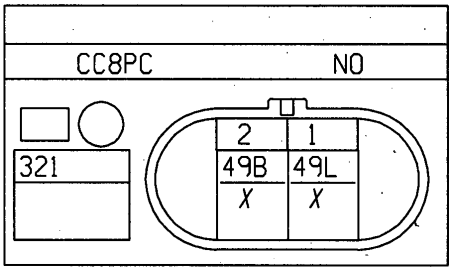

N°	mm²		... → ...
1	3	49L	+ LOW RESISTANCE FAN CONTROL
2	3	49B	+ FAN CONTROL

PETROL VAPOUR ABSORBER
J64,F64
S28-S29-S33-S35

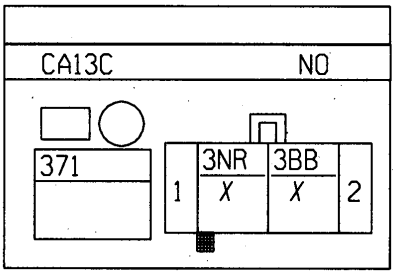

N°	mm²		... → ...
1	.6	3NR	+ INJECTOR >
2	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL

CONDITIONING FAN RESISTANCE
E2/SAUF TUR E1/SAUF TUR
S28-S29-S31-S32-S33-S35

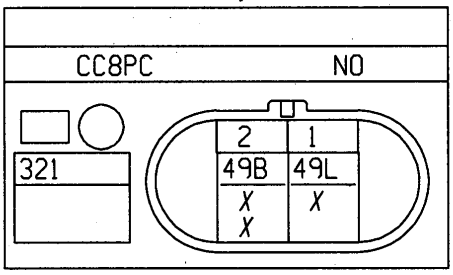

N°	mm²		... ⟶ ...
1	3	49L	+ LOW RESISTANCE FAN CONTROL
2	3	49B	+ FAN CONTROL
2	3	49B	+ FAN CONTROL

GAS RECYCLING SOLENOID VALVE (EGR)
J64,F64
S31-S32-S35

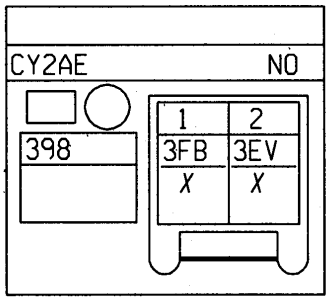

N°	mm²		... ⟶ ...
1	.6	3FB	+ INJECTION > PROTECTION RELAY
2	.6	3EV	- EGR SOLENOID VALVE > COMPUTER CONTROL

FAST IDLE SOLENOID VALVE
E2/SAUF TUR E1/SAUF TUR
S32

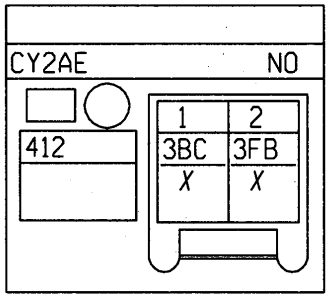

N°	mm²		... ⟶ ...
1	.6	3BC	- IDLING REGULATION SOLENOID > INJECTION COMPUTER CONTROL
2	.6	3FB	+ INJECTION > PROTECTION RELAY

PETROL VAPOUR ABSORBER
J64,F64
S28-S29-S33-S35

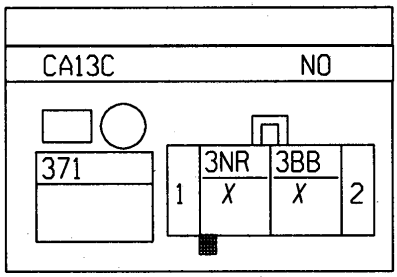

N°	mm²		... ⟶ ...
1	.6	3NR	+ INJECTOR >
2	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL

AIR CONDITIONING PRESSOSTAT
E2/SAUF TUR E1/SAUF TUR
S28-S29-S31-S33-S35

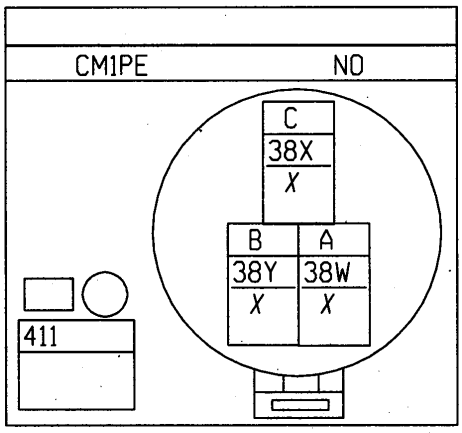

N°	mm²		... ⟶ ...
A	.6	38W	- FREON PRESSURE SENSOR (AC)
B	.6	38Y	+FREON PRESSURE SENSOR
C	.6	38X	FREON PRESSURE SENSOR SIGNAL

GAS RECYCLING SOLENOID VALVE (EGR)
J64,F64
S31-S32-S35

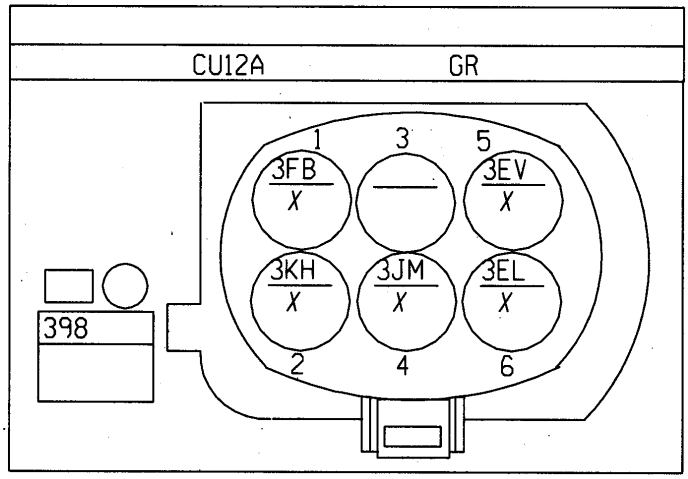

N°	mm²		... → ...
1	1	3FB	+ INJECTION > PROTECTION RELAY
2	.35	3KH	+ EGR PRINTOUT
4	.35	3JM	- EGR SOLENOID VALVE
5	1	3EV	- EGR SOLENOID VALVE > COMPUTER CONTROL
6	.35	3EL	SIGNAL+ EGR POTENTIOMETER

AIR CONDITIONING PRESSOSTAT
E2/SAUF TUR E1/SAUF TUR
S28-S29-S31-S33-S35

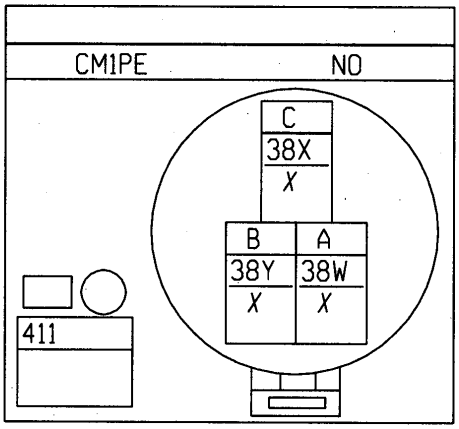

N°	mm²		... → ...
A	.6	38W	- FREON PRESSURE SENSOR (AC)
B	.6	38Y	+FREON PRESSURE SENSOR
C	.6	38X	FREON PRESSURE SENSOR SIGNAL

AIR CONDITIONING PRESSOSTAT
J64,F64
S28-S29-S31-S33-S35

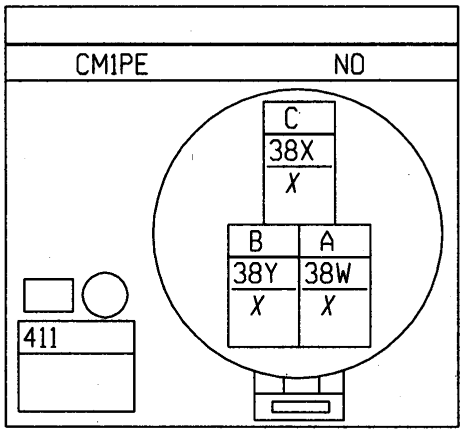

N°	mm²		... → ...
A	.6	38W	- FREON PRESSURE SENSOR (AC)
B	.6	38Y	+FREON PRESSURE SENSOR
C	.6	38X	FREON PRESSURE SENSOR SIGNAL

DERV RESISTANCE REHEATER
E2/SAUF TUR E1/SAUF TUR

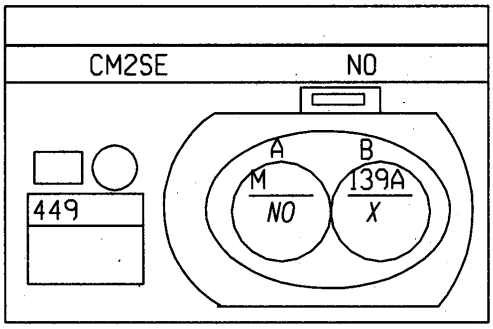

N°	mm²		··· ⟶ ···
A	1.4	M	EARTH
B	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL

DERV RESISTANCE REHEATER
E2/SAUF TUR E1/SAUF TUR

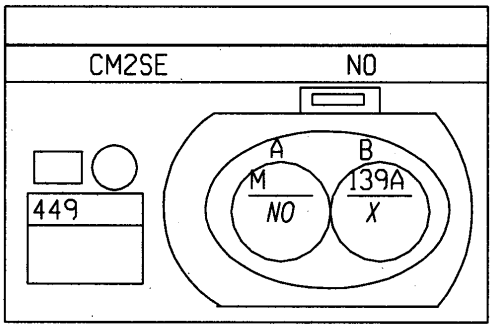

N°	mm²		... → ...
A	1.4	M	EARTH
B	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL

MOTOR AND RELAY FUSE BOX
J64,F64
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

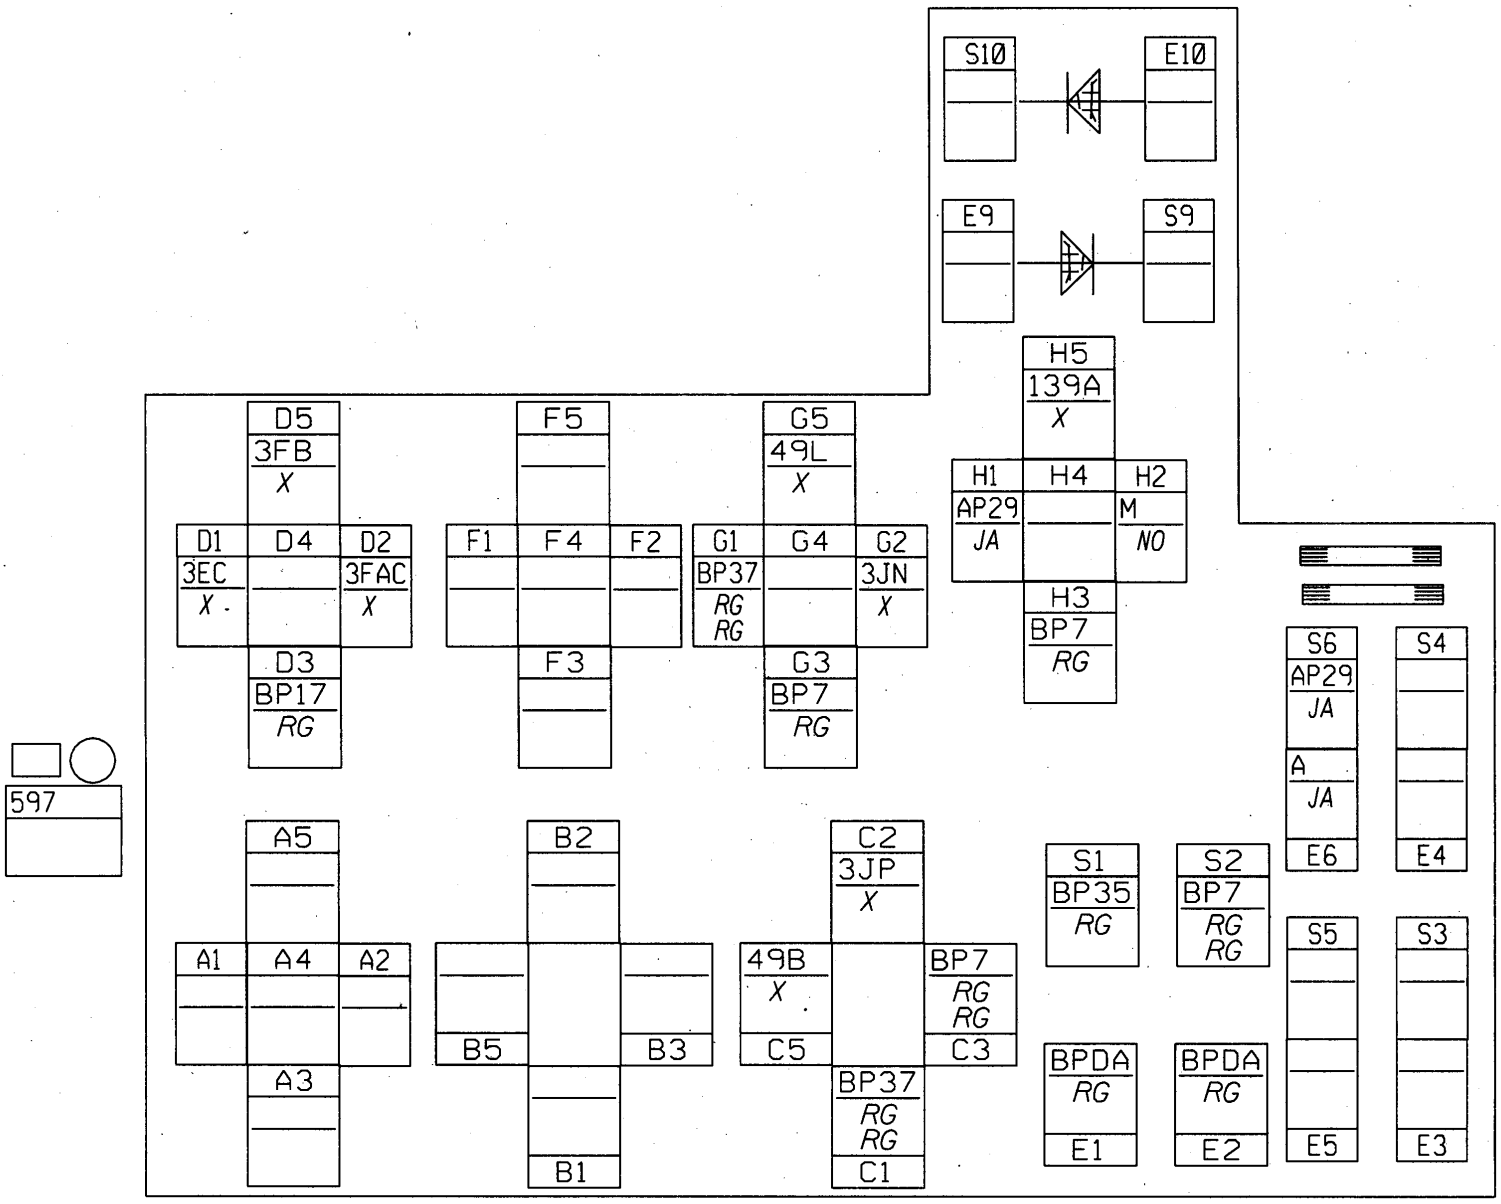

N°	mm²		... → ...
C1	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
C1	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
D1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
E1	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G1	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
G1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
H1	1	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
S1	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
C2	.6	3JP	FAN 2 CONTROL RELAY
D2	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
E2	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G2	.6	3JN	FAN CONTROL RELAY 1
H2	.6	M	EARTH
S2	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
C3	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
C3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
H3	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
C5	3	49B	+ FAN CONTROL
D5	2	3FB	+ INJECTION > PROTECTION RELAY
G5	3	49L	+ LOW RESISTANCE FAN CONTROL
H5	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL
E6	2	A	+ AFTER IGNITION
S6	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE

MOTOR AND RELAY FUSE BOX
J64,F64
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

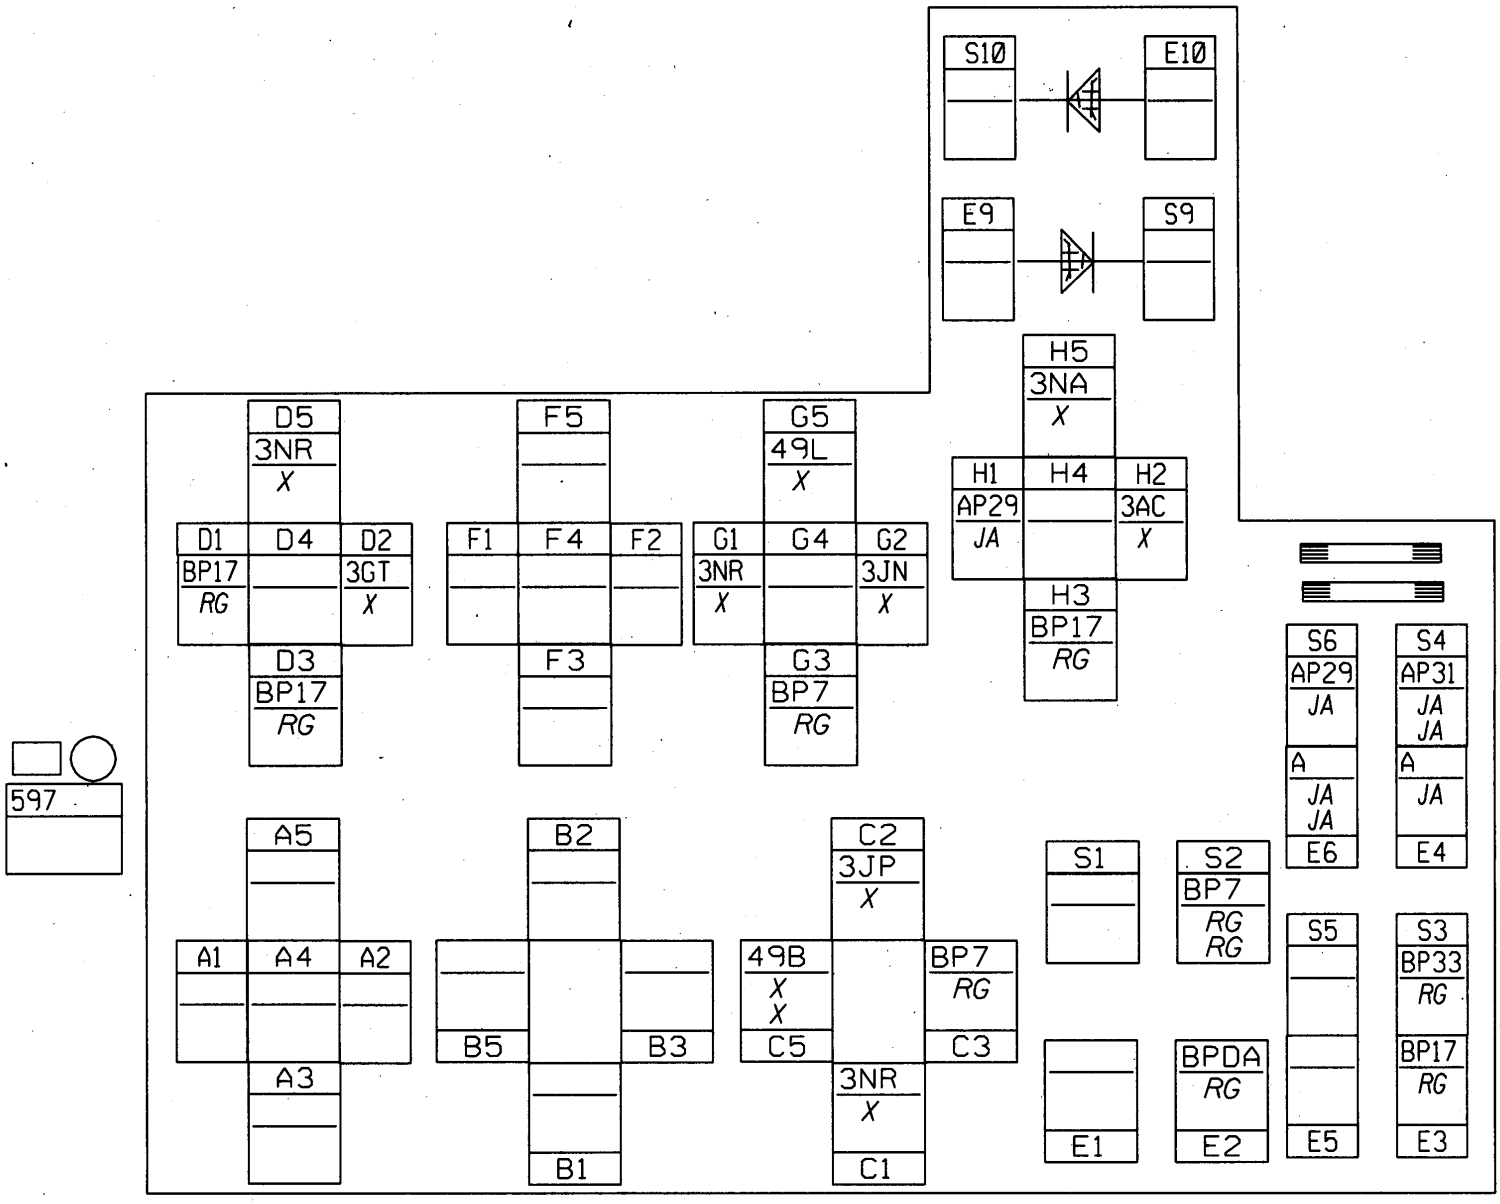

N°	mm²		... ⟶ ...
C1	1	3NR	+ INJECTOR >
D1	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G1	1	3NR	+ INJECTOR >
H1	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
C2	.6	3JP	FAN 2 CONTROL RELAY
D2	1	3GT	POWER LATCH ACTIVATOR RELAY CONTROL
E2	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G2	.6	3JN	FAN CONTROL RELAY 1
H2	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
S2	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
C3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
E3	.6	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
H3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
S3	.6	BP33	PROTECTED BATTERY FUSE LPG
E4	2	A	+ AFTER IGNITION
S4	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER
S4	1.4	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER
C5	3	49B	+ FAN CONTROL
C5	3	49B	+ FAN CONTROL
D5	3	3NR	+ INJECTOR >
G5	3	49L	+ LOW RESISTANCE FAN CONTROL
H5	3	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY
E6	2	A	+ AFTER IGNITION
E6	2	A	+ AFTER IGNITION
S6	2	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE

MOTOR AND RELAY FUSE BOX
E2/SAUF TUR
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

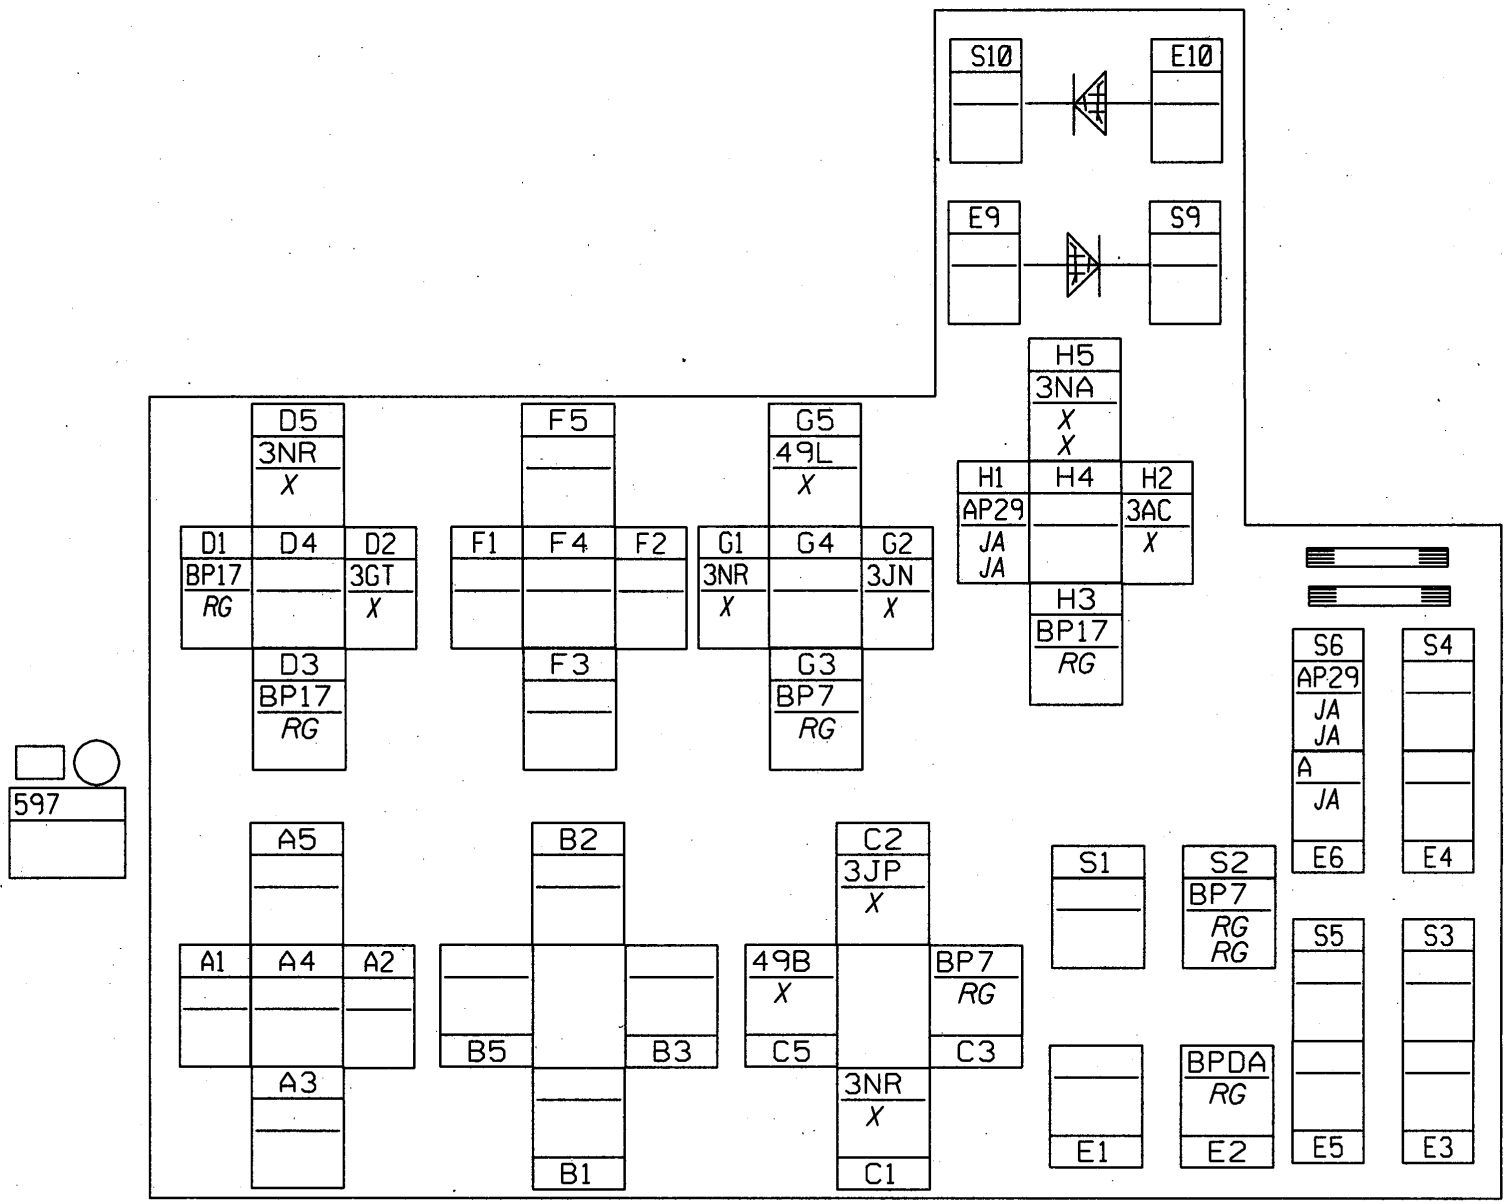

N°	mm²		... ⟶ ...
C1	1	3NR	+ INJECTOR >
D1	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G1	1	3NR	+ INJECTOR >
H1	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
H1	2	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
C2	.6	3JP	FAN 2 CONTROL RELAY
D2	1	3GT	POWER LATCH ACTIVATOR RELAY CONTROL
E2	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G2	.6	3JN	FAN CONTROL RELAY 1
H2	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
C3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
H3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
C5	3	49B	+ FAN CONTROL
D5	3	3NR	+ INJECTOR >
G5	3	49L	+ LOW RESISTANCE FAN CONTROL
H5	1.4	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY
H5	2	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY
E6	2	A	+ AFTER IGNITION
S6	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
S6	2	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE

MOTOR AND RELAY FUSE BOX
J64,F64
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

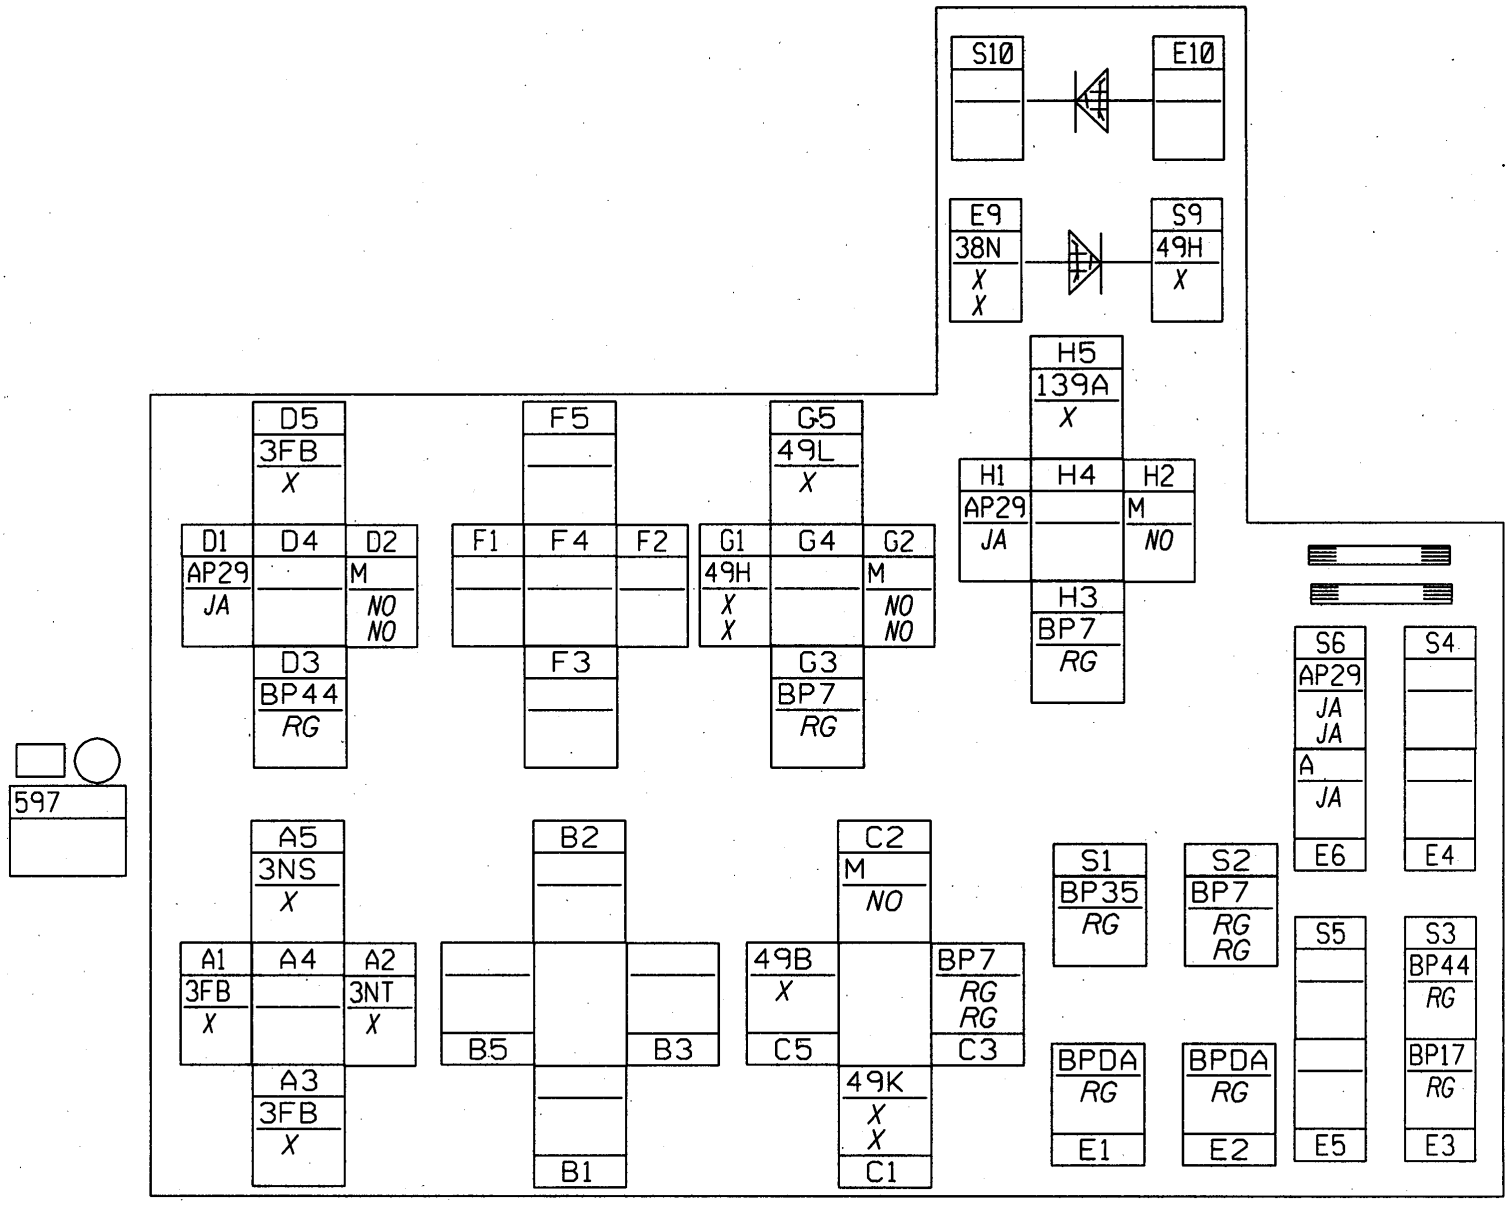

N°	mm²		... ⟶ ...
A1	.6	3FB	+ INJECTION > PROTECTION RELAY
C1	.35	49K	- HIGH SPEED FAN UNIT CONTROL
C1	.35	49K	- HIGH SPEED FAN UNIT CONTROL
D1	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
E1	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G1	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
G1	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
H1	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
S1	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
A2	.6	3NT	ALTIMETRIC CORRECTION RELAY CONTROL
C2	.6	M	EARTH
D2	.6	M	EARTH
D2	.6	M	EARTH
E2	5	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G2	.6	M	EARTH
G2	.6	M	EARTH
H2	.6	M	EARTH
S2	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
A3	.6	3FB	+ INJECTION > PROTECTION RELAY
C3	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
C3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	3	BP44	PROTECTED BATTERY > INJECTOR POWER
E3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
H3	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
S3	3	BP44	PROTECTED BATTERY > INJECTOR POWER
A5	.6	3NS	DIESEL PUMP > ALTIMETRIC RELAY INFO
C5	3	49B	+ FAN CONTROL
D5	2	3FB	+ INJECTION > PROTECTION RELAY
G5	3	49L	+ LOW RESISTANCE FAN CONTROL
H5	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL
E6	2	A	+ AFTER IGNITION
S6	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
S6	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
E9	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
E9	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
S9	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL

N°	mm²		... → ...
A	.6	3BV	IDLING REGULATION CONTROL 2
B	.6	3BU	IDLING REGULATION CONTROL 1
C	.6	3BW	IDLING REGULATION CONTROL 3
D	.6	3BX	IDLING REGULATION CONTROL 4

CYLINDER 1 IGNITION COIL

J64,F64

S28-S29-S33

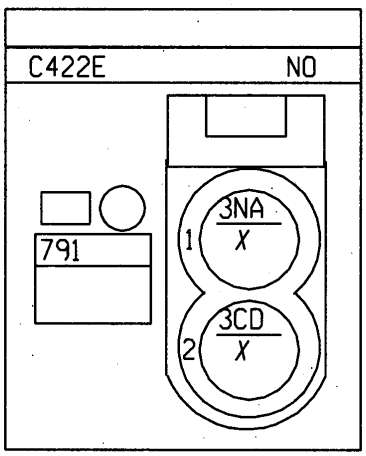

N°	mm²		... → ...
1	1	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY
2	1	3CD	- INJECTOR COIL 1> INJECTOR COIL 4 CONTROL

STEPPER MOTOR
E2/SAUF TUR
S28-S29-S33-S35

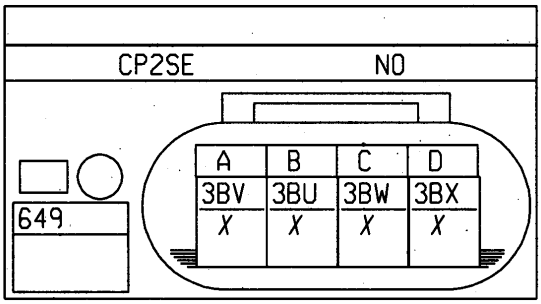

N°	mm²		... ⟶ ...
A	.6	3BV	IDLING REGULATION CONTROL 2
B	.6	3BU	IDLING REGULATION CONTROL 1
C	.6	3BW	IDLING REGULATION CONTROL 3
D	.6	3BX	IDLING REGULATION CONTROL 4

IGNITION QUADRUPLE COIL MODULE
J64,F64
S35

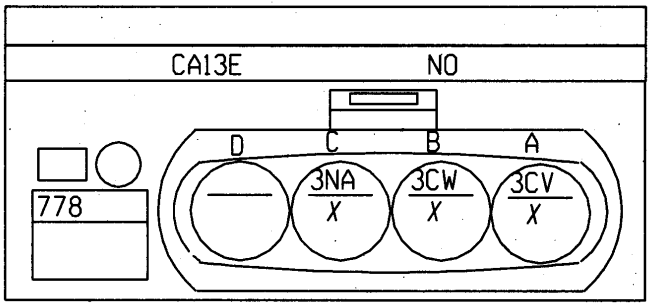

N°	mm²		... ⟶ ...
A	2	3CV	- COIL INJECTOR 1-4 CONTROL
B	2	3CW	- COIL INJECTOR 2-3 CONTROL
C	2	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY

UPSTREAM OXYGEN SENSOR
E2/SAUF TUR E1/SAUF TUR
S34

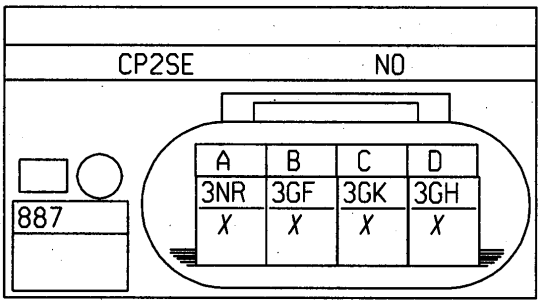

N°	mm²		... ⟶ ...
A	1	3NR	+ INJECTOR >
B	1	3GF	- UPSTREAM REHEATER OXYGEN SENSOR CONTROL
C	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH

DIESEL PUMP
E2/SAUF TUR
S32

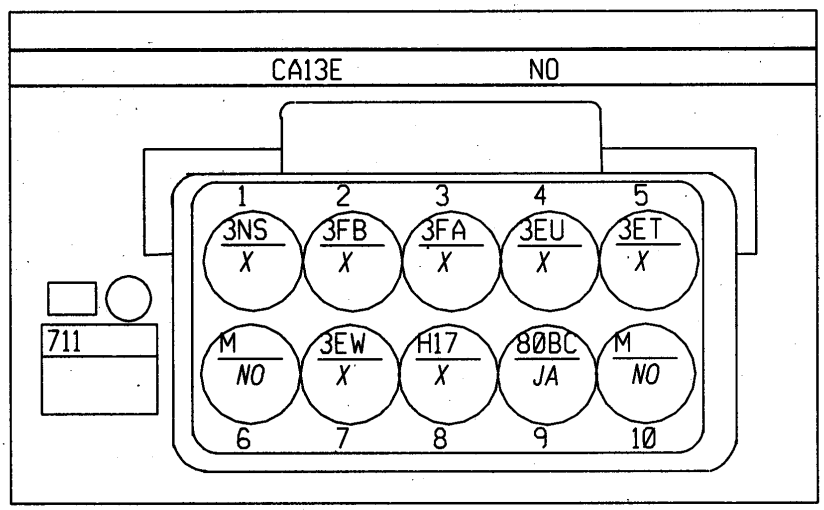

N°	mm²		··· ⟶ ···
1	.6	3NS	DIESEL PUMP > ALTIMETRIC RELAY INFO
2	.6	3FB	+ INJECTION > PROTECTION RELAY
3	.6	3FA	SIGNAL+ POTENTIOMETER CHARGE 1
4	.6	3EU	+ POTENTIOMETER CHARGE 1
5	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR
6	.6	M	EARTH
7	.6	3EW	- CAM SOLENOID VALVE > COMPUTER CONTROL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
9	.6	80BC	+ ELECTRIC CUT-OFF SOLENOID VALVE > INERTIA SWITCH
10	.35	M	EARTH

INJECTION NEEDLE RAISE SENSOR
J64,F64
S32

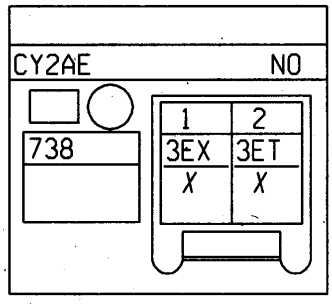

N°	mm²		··· ⟶ ···
1	.5	3EX	RH LIFT SIGNAL
2	.5	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR

CYLINDER 2 IGNITION COIL
E2/SAUF TUR E1/SAUF TUR
S28-S29-S33

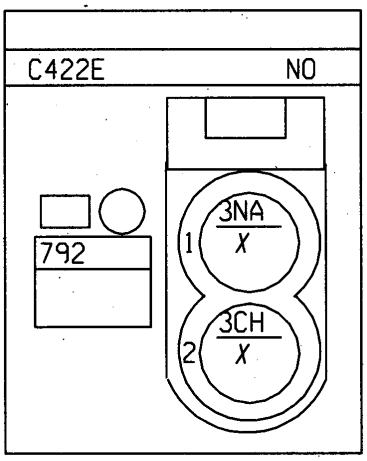

N°	mm²		... ⟶ ...
1	1	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY
2	1	3CII	- INJECTOR COIL 2> INJECTOR COIL 3 CONTROL

CYLINDER 3 IGNITION COIL
J64,F64
S28-S29-S33

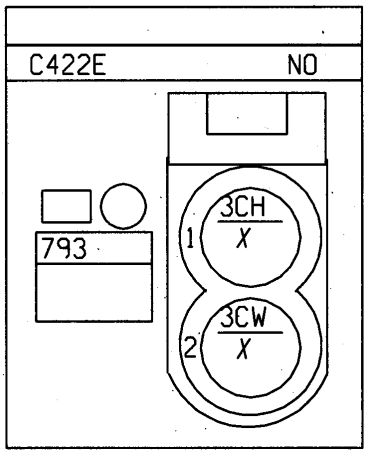

N°	mm²		... ⟶ ...
1	1	3CII	- INJECTOR COIL 2> INJECTOR COIL 3 CONTROL
2	1	3CW	- COIL INJECTOR 2-3 CONTROL

CYLINDER 4 IGNITION COIL
E2/SAUF TUR E1/SAUF TUR
S28-S29-S33

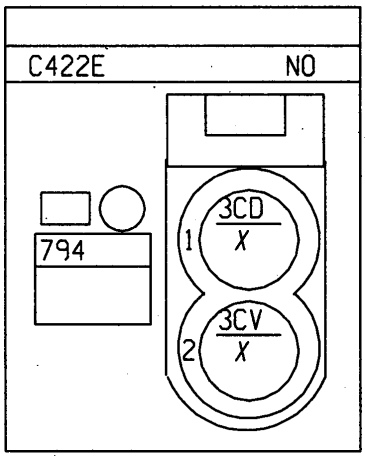

N°	mm²		... ⟶ ...
1	1	3CD	- INJECTOR COIL 1> INJECTOR COIL 4 CONTROL
2	1	3CV	- COIL INJECTOR 1-4 CONTROL

UPSTREAM OXYGEN SENSOR
J64,F64
S34

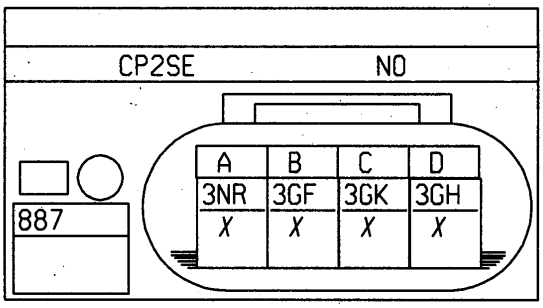

N°	mm²		... ⟶ ...
A	1	3NR	+ INJECTOR >
B	1	3GF	- UPSTREAM REHEATER OXYGEN SENSOR CONTROL
C	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH

IMPACT SENSOR (INERTIA SENSOR)
E2/SAUF TUR E1/SAUF TUR
S28-S29-S31-S32-S33-S35

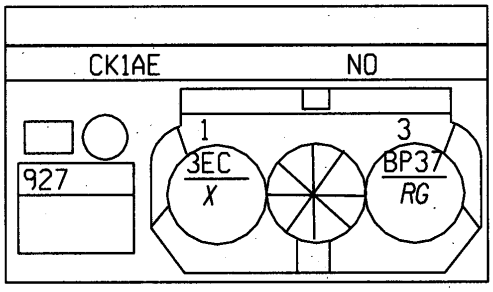

N°	mm²		... → ...
1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
3	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

IMPACT SENSOR (INERTIA SENSOR)
E2/SAUF TUR E1/SAUF TUR
S28-S29-S31-S32-S33-S35

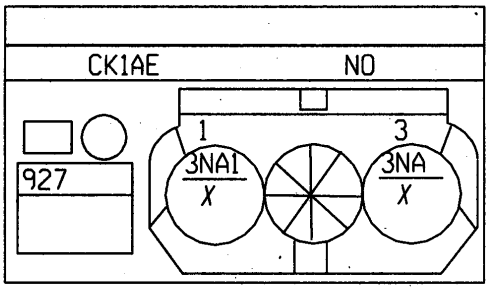

N°	mm²		··· ⟶ ···
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1.4	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY

IMPACT SENSOR (INERTIA SENSOR)
J64,F64
S28-S29-S31-S32-S33-S35

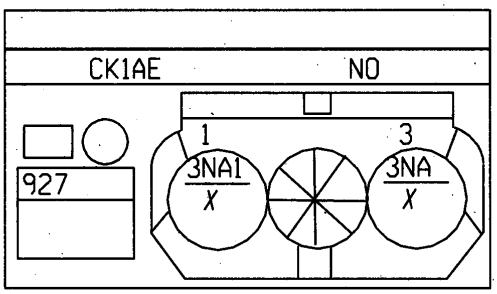

N°	mm²		... → ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1.4	3NA	+INERTIA SWITCH IGNITION COIL > FUEL PUMP RELAY

IMPACT SENSOR (INERTIA SENSOR)
J64,F64
S28-S29-S31-S32-S33-S35

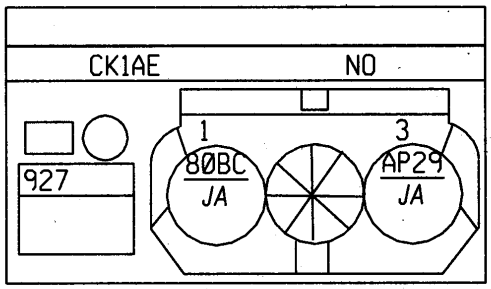

N°	mm²		... → ...
1	.6	80BC	+ ELECTRIC CUT-OFF SOLENOID VALVE > INERTIA SWITCH
3	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE

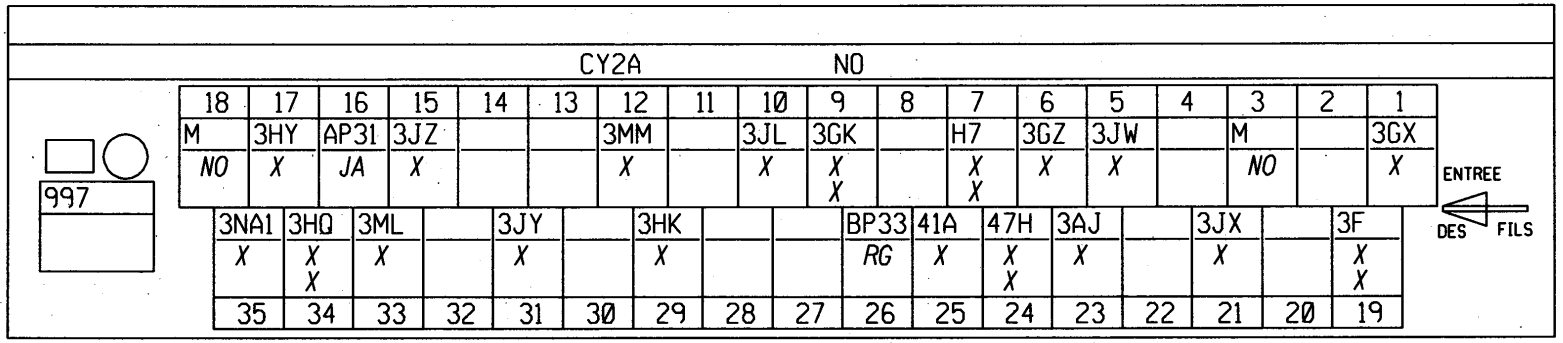

N°	mm²		... → ...
1	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
3	1.4	M	EARTH
5	.6	3JW	LIQUEFIED PETROLEUM GAS TEMPERATURE SIGNAL
6	.35	3GZ	+ LIQUEFIED PETROLEUM GAS SELECTION CONTROL
7	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
7	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
9	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
9	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
10	.6	3JL	- THROTTLE POSITION POTENTIOMETER
12	.35	3MM	FUEL GAUGE LEVEL > LIQUEFIED PETROLEUM GAS ECU SIGNAL
15	1	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
16	1.4	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER
17	.35	3HY	LIQUEFIED PETROLEUM GAS > INJECTION COMPUTER SIGNAL
18	1.4	M	EARTH
19	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
19	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
21	.6	3JX	LIQUEFIED PETROLEUM GAS FLOW SIGNAL
23	.35	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
24	.35	47H	FUEL FLOW RATE SIGNAL
24	.35	47H	FUEL FLOW RATE SIGNAL
25	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
26	.6	BP33	PROTECTED BATTERY FUSE LPG
29	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
31	.6	3JY	+ LIQUEFIED PETROLEUM GAS INSTRUMENTATION
33	1	3ML	- LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
34	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
34	1	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
35	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH

MAIN LPG SOLENOID VALVE
E2/SAUF TUR E1/SAUF TUR
S33

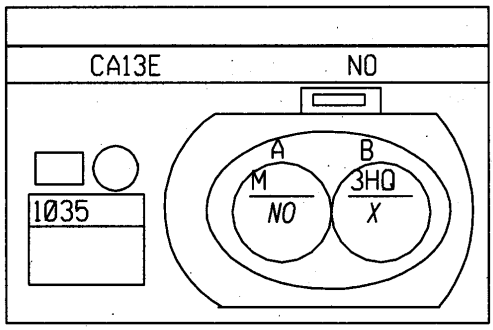

N°	mm²		... ⟶ ...
A	.6	M	EARTH
B	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL

LPG INJECTOR
E2/SAUF TUR E1/SAUF TUR
S33

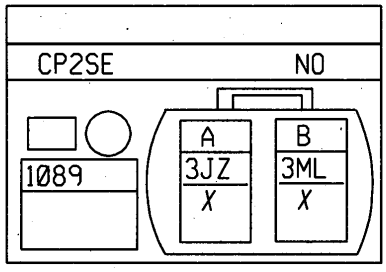

N°	mm²		... ⟶ ...
A	1	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
B	1	3ML	- LIQUEFIED PETROLEUM GAS INJECTOR CONTROL

LPG TEMPERATURE AND FLOW SENSOR
J64,F64
S33

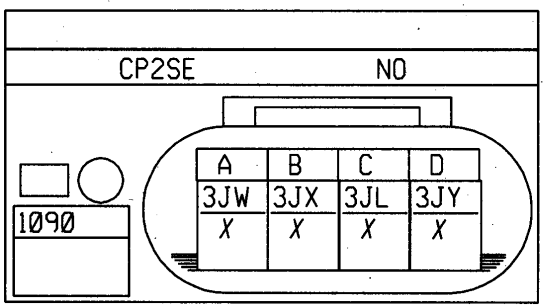

N°	mm²		... ⟶ ...
A	.6	3JW	LIQUEFIED PETROLEUM GAS TEMPERATURE SIGNAL
B	.6	3JX	LIQUEFIED PETROLEUM GAS FLOW SIGNAL
C	.6	3JL	- THROTTLE POSITION POTENTIOMETER
D	.6	3JY	+ LIQUEFIED PETROLEUM GAS INSTRUMENTATION

FRONT CEILING LIGHT
E2/SAUF TUR E1/SAUF TUR
S7

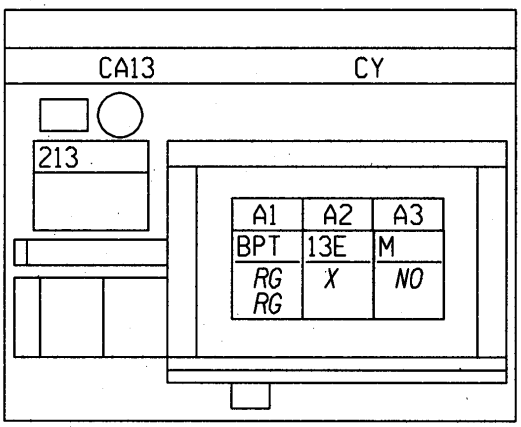

N°	mm²		... ⟶ ...
A1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
A1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
A2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
A3	.35	M	EARTH

ROOF CONSOLE LIGHT
J64,F64

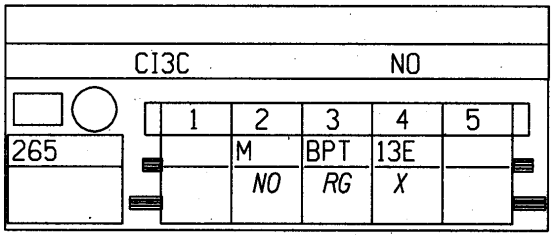

N°	mm²		... ⟶ ...
2	.35	M	EARTH
3	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
4	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

SUNROOF
E2/SAUF TUR
S7

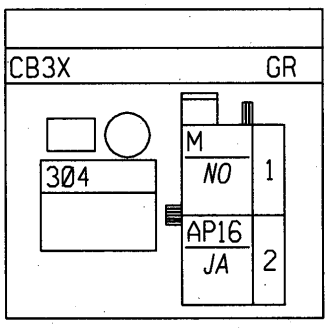

N°	mm²		... → ...
1	1.4	M	EARTH
2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE

FRONT READING LIGHT
J64,F64
S4-S7

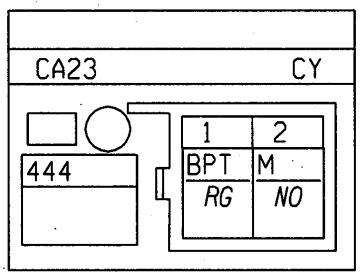

N°	mm²		... → ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	M	EARTH

STOP SWITCH

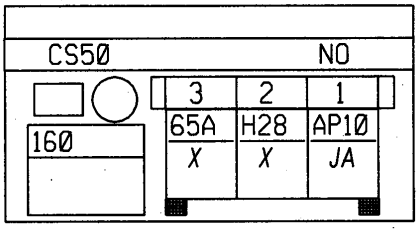

N°	mm²		... → ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
3	.6	65A	+ BRAKE LIGHTS CONTROL

MINI BRAKE FLUID

S1

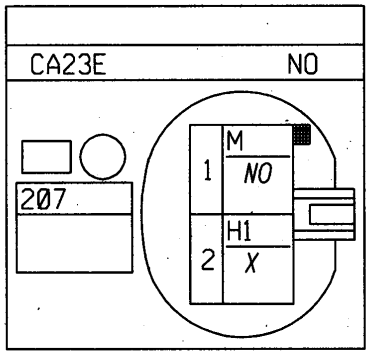

N°	mm²		... → ...
1	.6	M	EARTH
2	.6	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL

CIGAR LIGHTER

E2/SAUF TUR E1/SAUF TUR

S6-S8

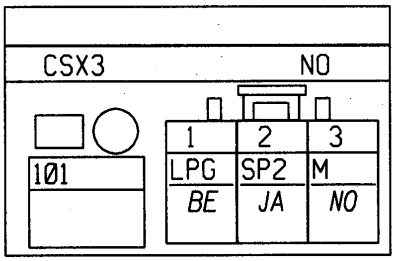

N°	mm²		... → ...
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.6	SP2	+ PROTECTED CONTROL > RADIO >
3	.6	M	EARTH

ANTI-THEFT DEVICE

J64,F64

S4

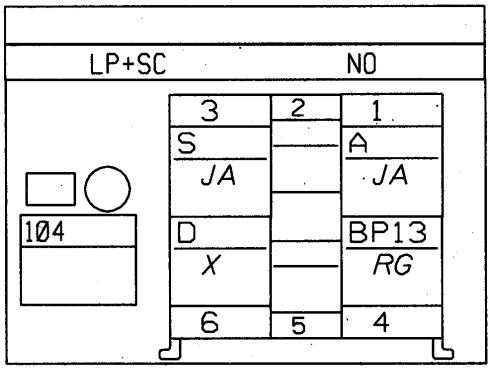

N°	mm²		... → ...
1	3	A	+ AFTER IGNITION
3	3	S	+ FUSE BOARD FUSE
4	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
6	3	D	+ STARTING

CIGAR LIGHTER
J64,F64
S6-S8

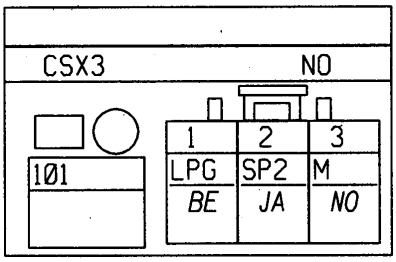

N°	mm²		... ⟶ ...
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.6	SP2	+ PROTECTED CONTROL > RADIO >
3	.6	M	EARTH

ANTI-THEFT DEVICE
E2/SAUF TUR E1/SAUF TUR
S4

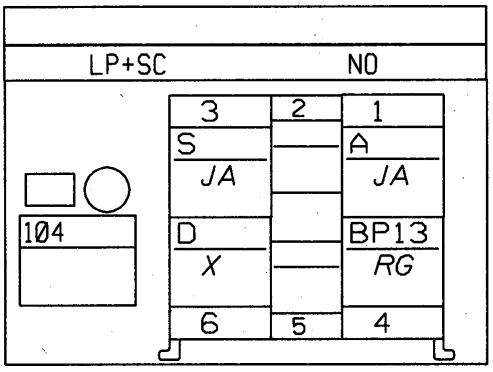

N°	mm²		... ⟶ ...
1	3	A	+ AFTER IGNITION
3	3	S	+ FUSE BOARD FUSE
4	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
6	3	D	+ STARTING

CIGAR LIGHTER

S6-S8

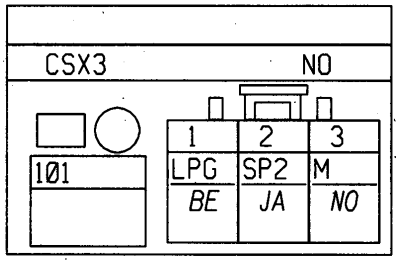

N°	mm²		... → ...
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.6	SP2	+ PROTECTED CONTROL > RADIO >
3	.6	M	EARTH

ANTI-THEFT DEVICE

S4

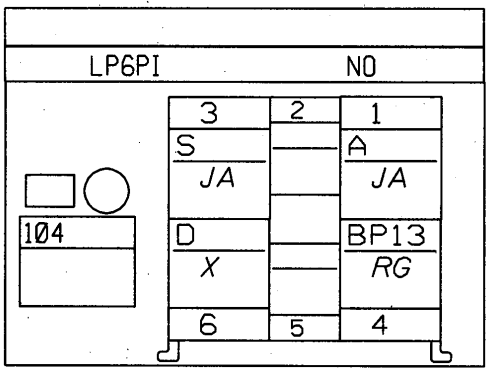

N°	mm²		... → ...
1	3	A	+ AFTER IGNITION
3	3	S	+ FUSE BOARD FUSE
4	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
6	3	D	+ STARTING

ANTI-THEFT DEVICE

J64,F64

S4

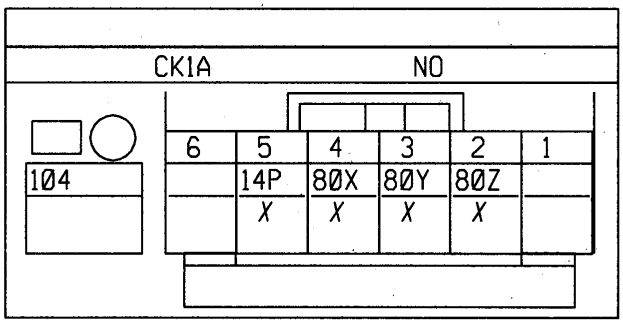

N°	mm²		... ⟶ ...
2	.35	80Z	+ TRANSPONDER AERIAL
3	.35	80Y	TRANSPONDER CLOCK SIGNAL
4	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
5	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER

ELECTRICAL DOOR LOCKING COMMAND

E2/SAUF TUR E1/SAUF TUR

S5

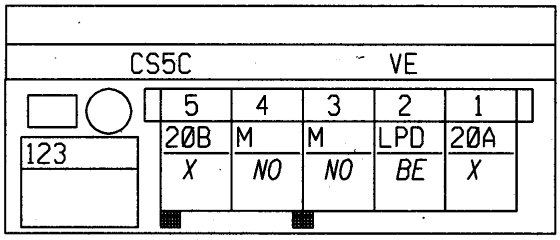

N°	mm²		... ⟶ ...
1	.35	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
3	.35	M	EARTH
4	.35	M	EARTH
5	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL

ANTI-THEFT DEVICE
E2/SAUF TUR E1/SAUF TUR
S4

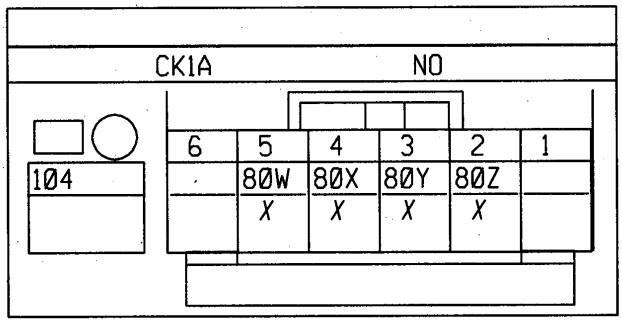

N°	mm²		... → ...
2	.35	80Z	+ TRANSPONDER AERIAL
3	.35	80Y	TRANSPONDER CLOCK SIGNAL
4	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
5	.35	80W	- TRANSPONDER AERIAL

ELECTRICAL DOOR LOCKING COMMAND
J64,F64
S5

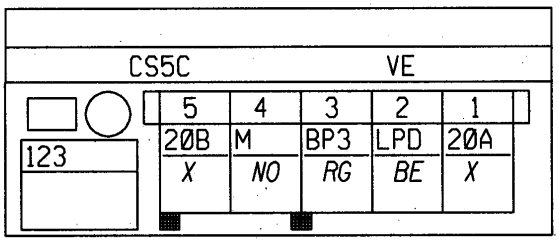

N°	mm²		... → ...
1	.6	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
3	.35	BP3	PROTECTED BATTERY CENTRAL DOOR LOCKING
4	.35	M	EARTH
5	.6	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL

ANTI-THEFT DEVICE

S4

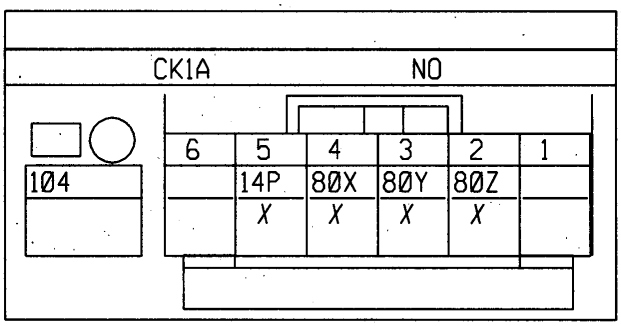

N°	mm²		... ⟶ ...
2	.35	80Z	+ TRANSPONDER AERIAL
3	.35	80Y	TRANSPONDER CLOCK SIGNAL
4	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
5	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER

ELECTRICAL DOOR LOCKING COMMAND

S5

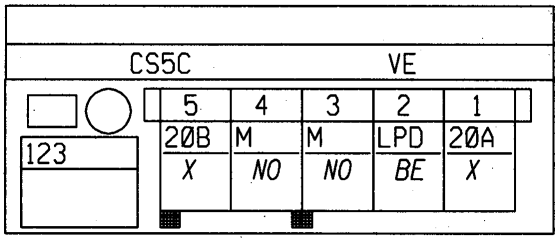

N°	mm²		... ⟶ ...
1	.35	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
3	.35	M	EARTH
4	.35	M	EARTH
5	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL

HAZARD LIGHTS COMMAND

J64,F64

S5

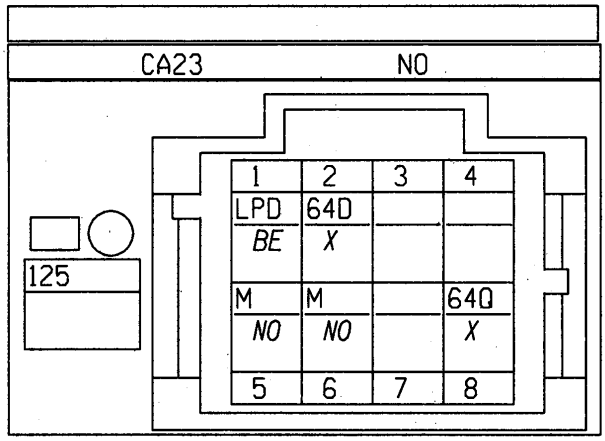

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.6	64D	RH FRONT INDICATOR CONTROL
5	.35	M	EARTH
6	.35	M	EARTH
8	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL

COMBINED WIPER-WASHER

LVAREL

S4

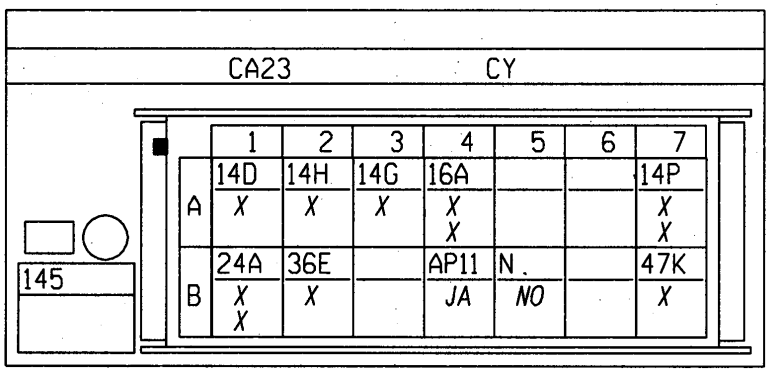

N°	mm²		... ⟶ ...
A1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
A2	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
B2	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
A3	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B4	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B5	.6	N	ELECTRONIC EARTH
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
B7	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL

HAZARD LIGHTS COMMAND
J64,F64
S5

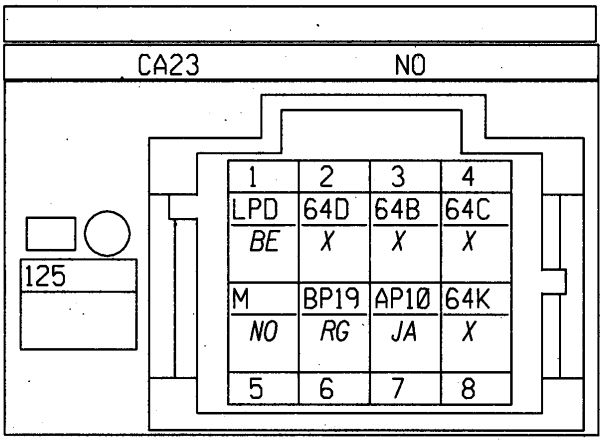

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.6	64D	RH FRONT INDICATOR CONTROL
3	.6	64B	+ TIMED > FLASHER UNIT TIME SWITCH CONTROL
4	.6	64C	LH INDICATOR CONTROL
5	.35	M	EARTH
6	1	BP19	PROTECTED BATTERY > FLASHER UNIT TIME SWITCH
7	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
8	.6	64K	+ FLASHER UNIT TIMING

REAR WINDOW DE-ICING COMMAND
E1

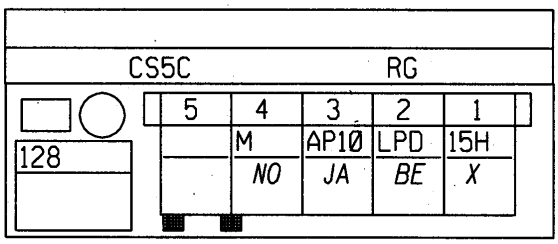

N°	mm²		... ⟶ ...
1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
3	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.35	M	EARTH

HAZARD LIGHTS COMMAND

S5

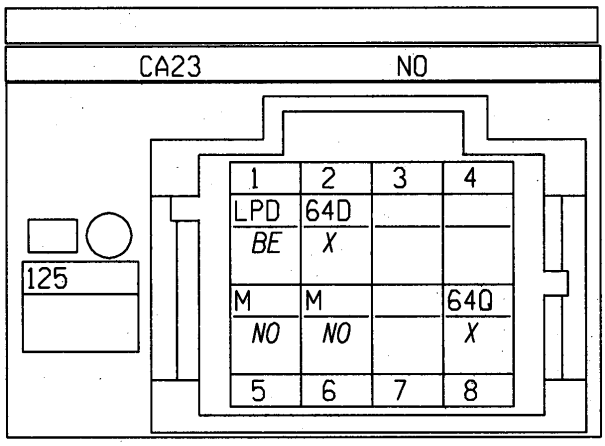

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.6	64D	RH FRONT INDICATOR CONTROL
5	.35	M	EARTH
6	.35	M	EARTH
8	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL

COMBINED WIPER-WASHER

S4

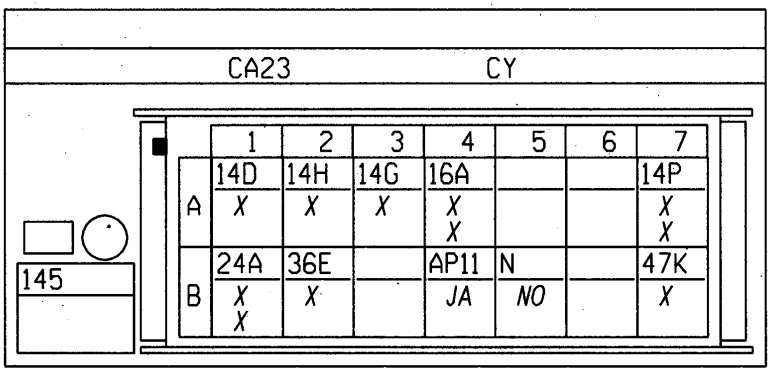

N°	mm²		... → ...
A1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
A2	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
B2	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
A3	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B4	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B5	.6	N	ELECTRONIC EARTH
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
B7	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL

COMBINED WIPER-WASHER
E2 E1
S4

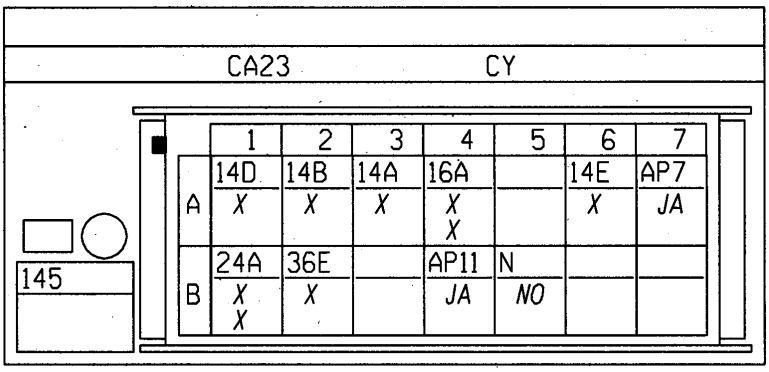

N°	mm²		... → ...
A1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
A2	1.4	14B	+ WINDSCREEN WIPER IIIGH SPEED CONTROL
B2	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
A3	1	14A	+ WINDSCREEN WIPER LOW SPEED CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B4	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B5	.6	N	ELECTRONIC EARTH
A6	1	14E	+ WINDSCREEN WIPER TIME SWITCH CONTROL
A7	1.4	AP7	+ AFTER IGNITION PROTECTED WINDSCREEN WIPER FUSE

GLOVE COMPARTMENT LIGHT
E2 E1
S6

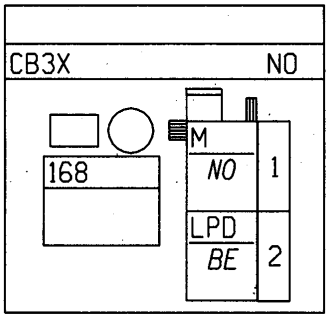

N°	mm²		... → ...
1	.35	M	EARTH
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT

GLOVE COMPARTMENT LIGHT

E2 E1

S6

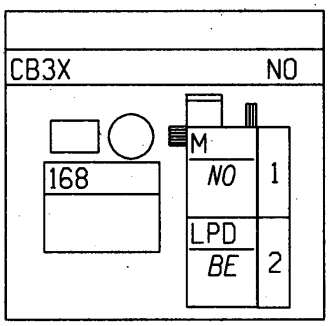

N°	mm²		... ⟶ ...
1	.35	M	EARTH
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT

MONOLEVER

E2 E1

S4

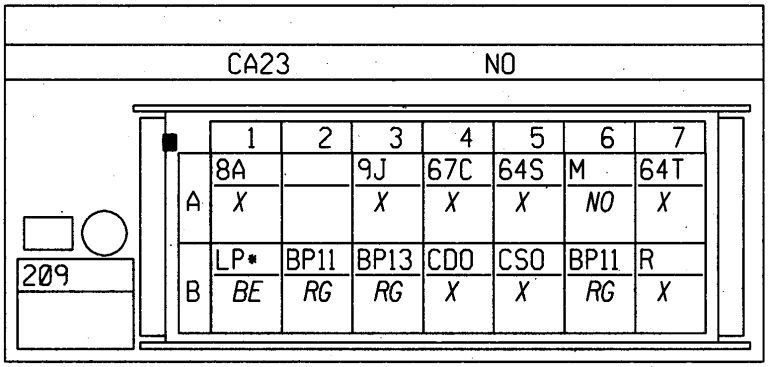

N°	mm²		... ⟶ ...
A1	2	8A	+ FOG LIGHTS RELAY
B1	2	LP*	+ PROTECTED MAIN BEAM HEADLIGHT NOT AFFECTED
B2	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A3	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
B3	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
A4	2	67C	+ HORN FUSE CONTROL
B4	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
A5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B5	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
A6	.35	M	EARTH
B6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B7	2	R	+ MAIN BEAM HEADLIGHTS

GLOVE COMPARTMENT LIGHT

S6

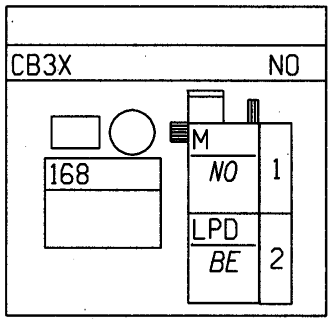

N°	mm²		··· → ···
1	.35	M	EARTH
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT

MONOLEVER

S4

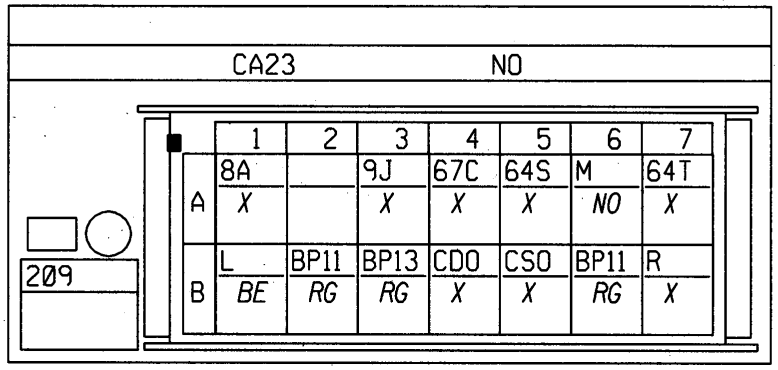

N°	mm²		··· → ···
A1	2	8A	+ FOG LIGHTS RELAY
B1	2	L	+MAIN BEAM HEADLIGHT
B2	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A3	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
B3	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
A4	2	67C	+ HORN FUSE CONTROL
B4	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
A5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B5	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
A6	.35	M	EARTH
B6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B7	2	R	+ MAIN BEAM HEADLIGHTS



WINDSCREEN WIPER MOTOR

E1

S2

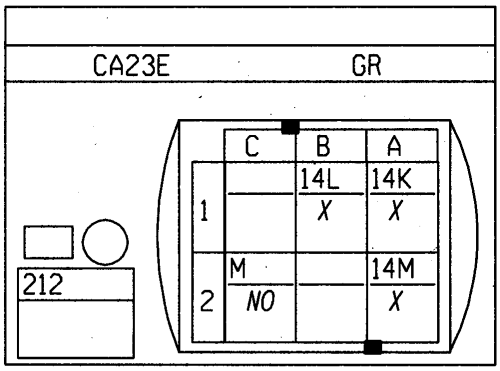

N°	mm²		... → ...
A1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
B1	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
A2	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
C2	1.4	M	EARTH

HEADLIGHT WASHER PUMP

J64,F64/DG

S1

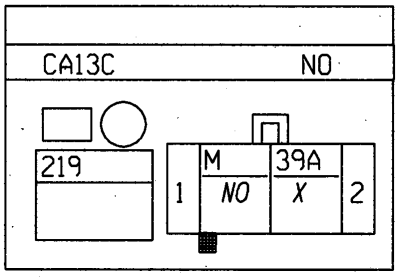

N°	mm²		... → ...
1	1	M	EARTH
2	1	39A	+ HEADLIGHT WASHER PUMP CONTROL

DIAGNOSTICS SOCKET

J64,F64/DG

S1-S4

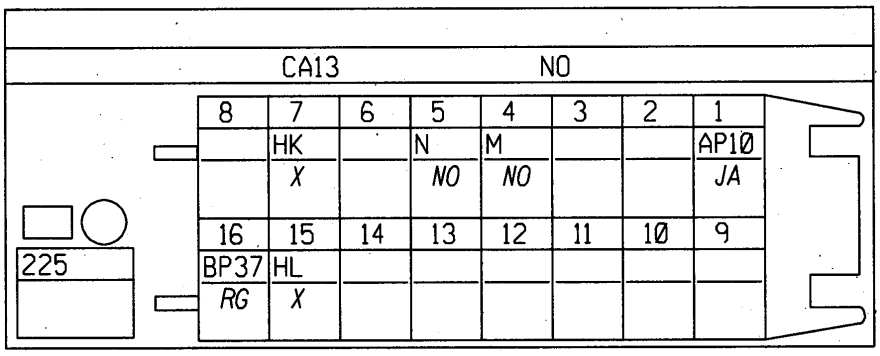

N°	mm²		... → ...
1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.35	M	EARTH
5	.35	N	ELECTRONIC EARTH
7	.35	HK	DIAGNOSTIC SIGNAL K
15	.35	HL	DIAGNOSTIC SIGNAL L
16	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

FRONT FOG RELAY

J64,F64/DG

S6

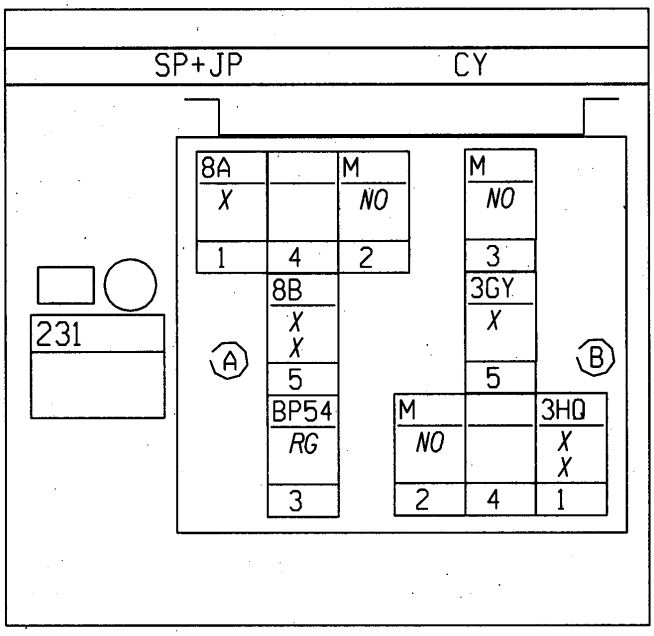

N°	mm²		... → ...
A1	2	8A	+ FOG LIGHTS RELAY
B1	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
B1	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
A2	1	M	EARTH
B2	.35	M	EARTH
A3	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
B3	.6	M	EARTH
A5	.35	8B	+ FRONT FOG LIGHTS > RELAY
A5	1	8B	+ FRONT FOG LIGHTS > RELAY
B5	.6	3GY	- FUEL/LPG SELECTION INDICATOR LIGHT CONTROL

DIAGNOSTICS SOCKET
J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR
S1-S4

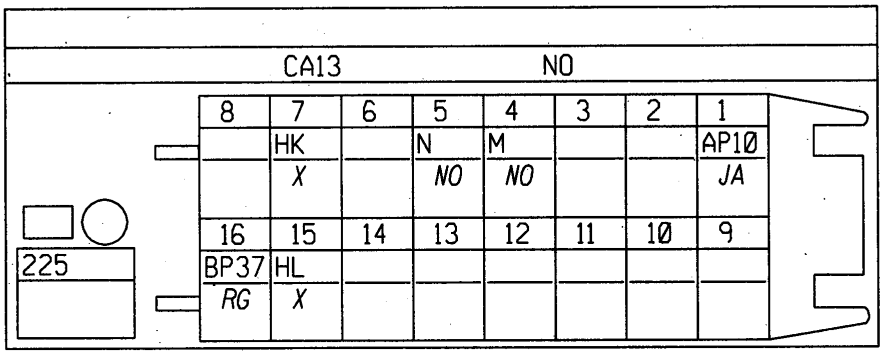

N°	mm²		... → ...
1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.35	M	EARTH
5	.35	N	ELECTRONIC EARTH
7	.35	HK	DIAGNOSTIC SIGNAL K
15	.35	HL	DIAGNOSTIC SIGNAL L
16	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

INSTRUMENT PANEL
J64,F64 LVAREL/SAUF MERCOS,TUR J64
S4-S5

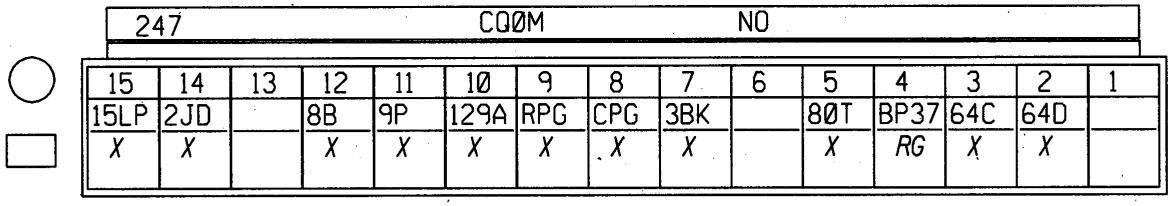

N°	mm²		... → ...
2	.35	64D	RH FRONT INDICATOR CONTROL
3	.35	64C	LH INDICATOR CONTROL
4	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
5	.35	80T	- SOFTWARE LOCK INDICATOR LIGHT CONTROL
7	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
8	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
10	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
11	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
12	.35	8B	+ FRONT FOG LIGHTS > RELAY
14	.35	2JD	+ ALTERNATOR EXCITATION
15	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

DIAGNOSTICS SOCKET

S1-S4

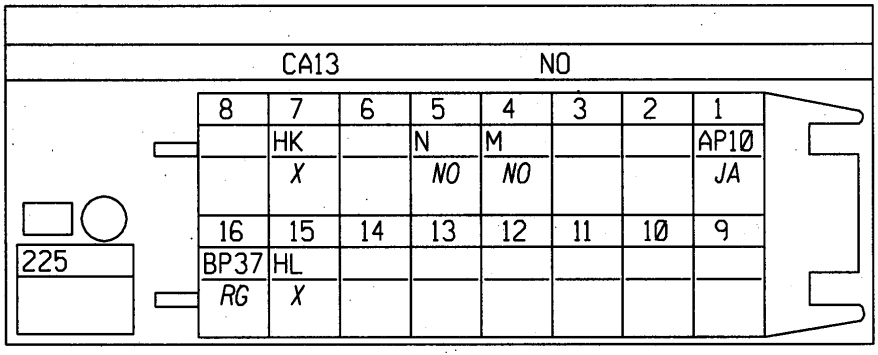

N°	mm²		... → ...
1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.35	M	EARTH
5	.35	N	ELECTRONIC EARTH
7	.35	HK	DIAGNOSTIC SIGNAL K
15	.35	HL	DIAGNOSTIC SIGNAL L
16	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

FRONT FOG RELAY

S6

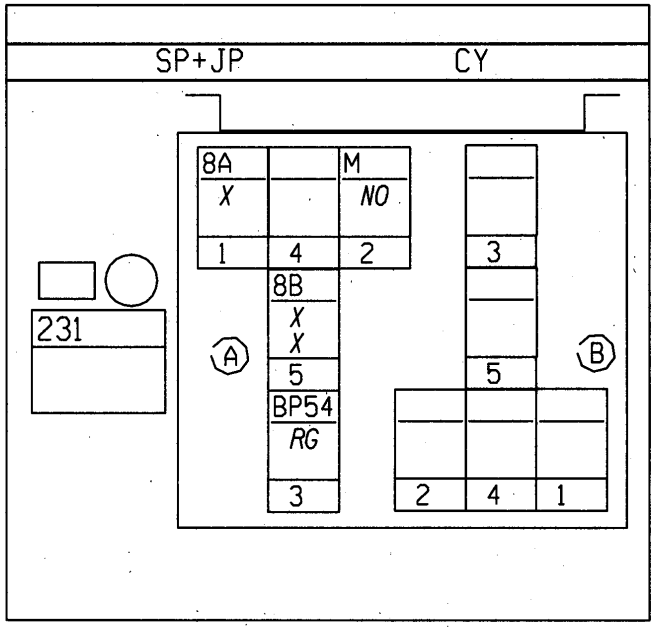

N°	mm²		... → ...
A1	2	8A	+ FOG LIGHTS RELAY
A2	1	M	EARTH
A3	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
A5	.35	8B	+ FRONT FOG LIGHTS > RELAY
A5	1	8B	+ FRONT FOG LIGHTS > RELAY

LIGHTING RHEOSTAT

J64,F64 E2/SAUF TUR

S4

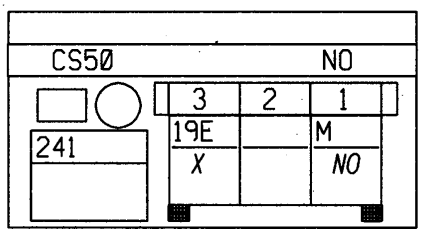

N°	mm²		··· ⟶ ···
1	.35	M	EARTH
3	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL

INSTRUMENT PANEL

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S4-S5

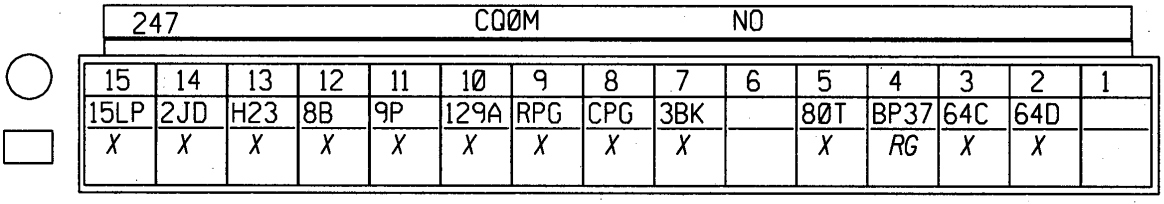

N°	mm²		··· ⟶ ···
2	.35	64D	RH FRONT INDICATOR CONTROL
3	.35	64C	LH INDICATOR CONTROL
4	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
5	.35	80T	- SOFTWARE LOCK INDICATOR LIGHT CONTROL
7	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
8	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
10	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
11	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
12	.35	8B	+ FRONT FOG LIGHTS > RELAY
13	.6	H23	MINIMUM HEADLIGHT WASHER > WINDSCREEN WASHER WARNING LIGHT CONTROL
14	.35	2JD	+ ALTERNATOR EXCITATION
15	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

LIGHTING RHEOSTAT

S4

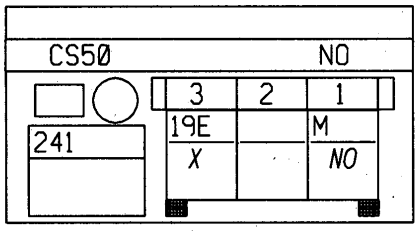

N°	mm²		... ⟶ ...
1	.35	M	EARTH
3	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL

INSTRUMENT PANEL

S4-S5

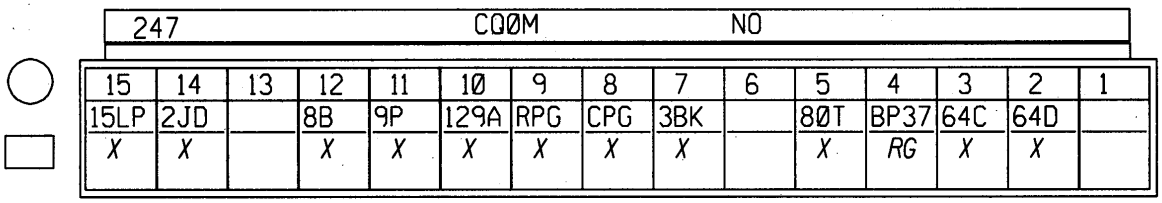

N°	mm²		... ⟶ ...
2	.35	64D	RH FRONT INDICATOR CONTROL
3	.35	64C	LH INDICATOR CONTROL
4	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
5	.35	80T	- SOFTWARE LOCK INDICATOR LIGHT CONTROL
7	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
8	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
10	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
11	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
12	.35	8B	+ FRONT FOG LIGHTS > RELAY
14	.35	2JD	+ ALTERNATOR EXCITATION
15	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

INSTRUMENT PANEL

J64,F64 LVAREL/SAUF MERCOS,TUR J64

S4-S5

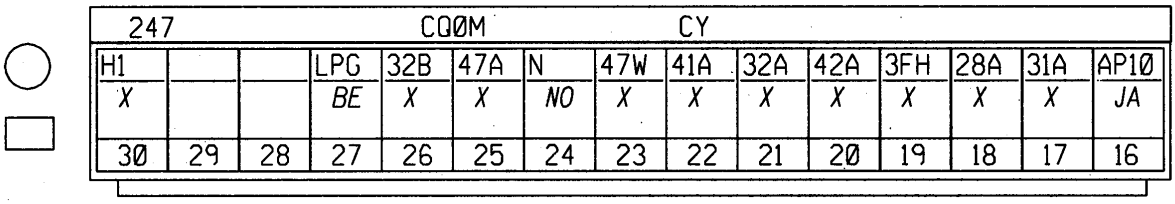

N°	mm²		... ⟶ ...
16	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
17	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
18	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
19	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
20	.35	42A	SIGNAL+ COOLANT TEMPERATURE
21	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
22	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
23	.35	47W	SECONDARY SPEED SIGNAL
24	.35	N	ELECTRONIC EARTH
25	.35	47A	- FUEL LEVEL GAUGE >
26	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
27	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
30	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL

INSTRUMENT PANEL

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S4-S5

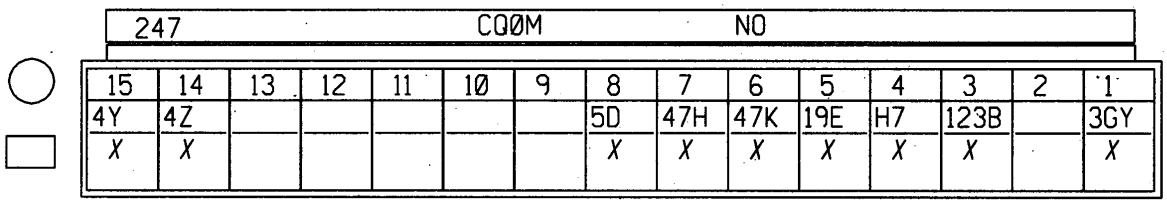

N°	mm²		... ⟶ ...
1	.6	3GY	- FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
3	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
4	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
5	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
6	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
14	.35	4Z	- ABS WARNING LIGHT
15	.35	4Y	- BRAKE FAULT WARNING LIGHT

INSTRUMENT PANEL
J64,F64/DG E2 J64,F64/DG E1
S4-S5

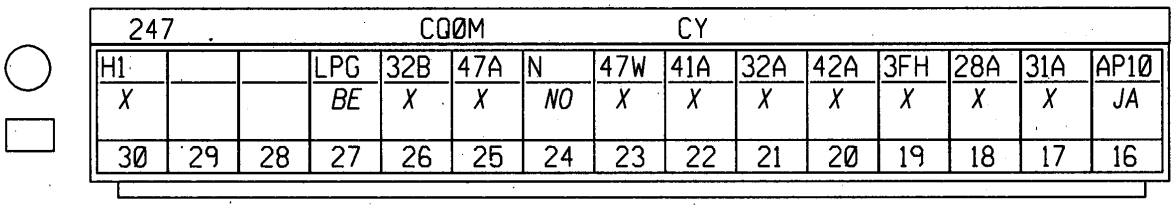

N°	mm²		... → ...
16	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
17	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
18	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
19	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
20	.35	42A	SIGNAL+ COOLANT TEMPERATURE
21	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
22	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
23	.35	47W	SECONDARY SPEED SIGNAL
24	.35	N	ELECTRONIC EARTH
25	.35	47A	- FUEL LEVEL GAUGE >
26	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
27	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
30	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL

INSTRUMENT PANEL
J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR
S4-S5

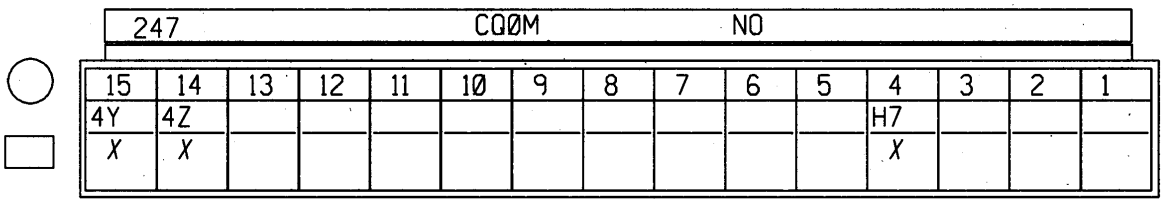

N°	mm²		... → ...
4	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
14	.35	4Z	- ABS WARNING LIGHT
15	.35	4Y	- BRAKE FAULT WARNING LIGHT

INSTRUMENT PANEL

S4-S5

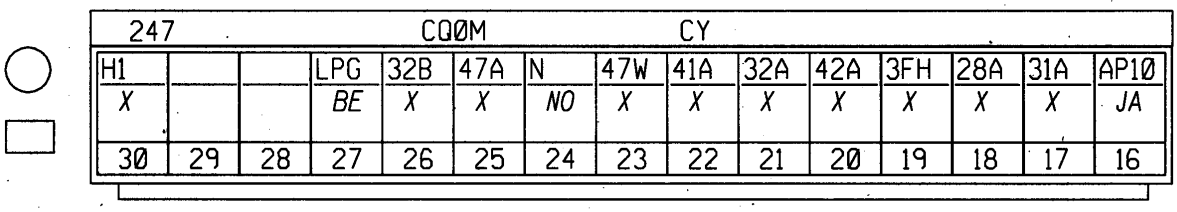

N°	mm²		... → ...
16	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
17	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
18	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
19	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
20	.35	42A	SIGNAL+ COOLANT TEMPERATURE
21	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
22	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
23	.35	47W	SECONDARY SPEED SIGNAL
24	.35	N	ELECTRONIC EARTH
25	.35	47A	- FUEL LEVEL GAUGE >
26	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
27	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
30	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL

INSTRUMENT PANEL

S4-S5

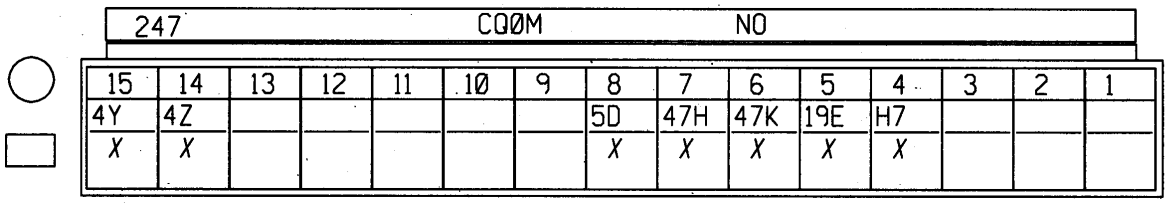

N°	mm²		... → ...
4	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
5	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
6	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
14	.35	4Z	- ABS WARNING LIGHT
15	.35	4Y	- BRAKE FAULT WARNING LIGHT

RADIO

J64,F64 SPROJA J64,F64 PROJAB

S4

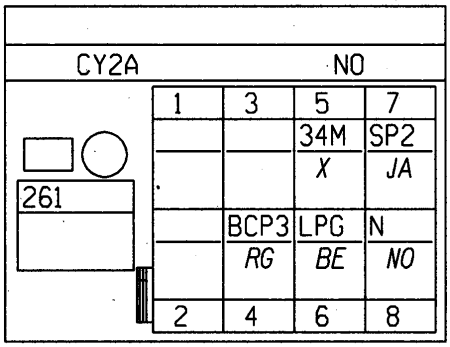

N°	mm²		... ⟶ ...
4	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
6	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
7	1	SP2	+ PROTECTED CONTROL > RADIO >
8	3	N	ELECTRONIC EARTH
5	.35	34M	+ ANTENNA CONTROL

RADIO

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S4

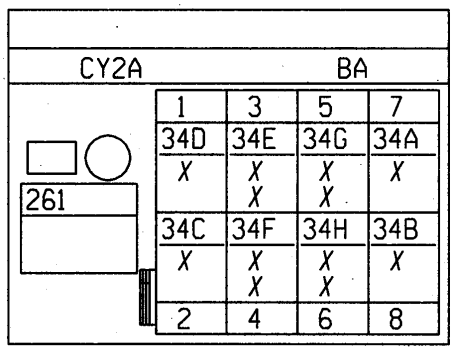

N°	mm²		... ⟶ ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER
3	.6	34E	SIGNAL+ RH FRONT SPEAKER
3	1	34E	SIGNAL+ RH FRONT SPEAKER
4	.6	34F	SIGNAL- RH FRONT SPEAKER
4	1	34F	SIGNAL- RH FRONT SPEAKER
5	.6	34G	SIGNAL+ LH FRONT SPEAKERS
5	1	34G	SIGNAL+ LH FRONT SPEAKERS
6	.6	34H	SIGNAL- LH FRONT SPEAKER
6	1	34H	SIGNAL- LH FRONT SPEAKER
7	1	34A	SIGNAL+ LH REAR SPEAKER
8	1	34B	SIGNAL- LH REAR SPEAKER

RADIO
J64,F64 SPROJA J64,F64 PROJAB
S4

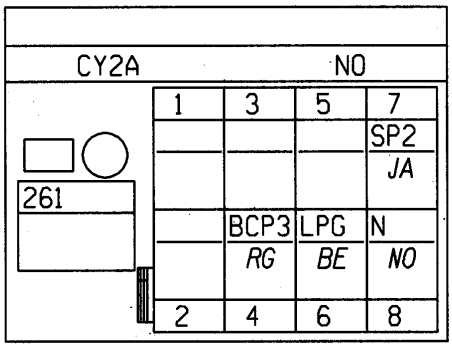

N°	mm²		... → ...
4	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
6	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
7	1	SP2	+ PROTECTED CONTROL > RADIO >
8	3	N	ELECTRONIC EARTH

RADIO
J64,F64 LVAREL
S4

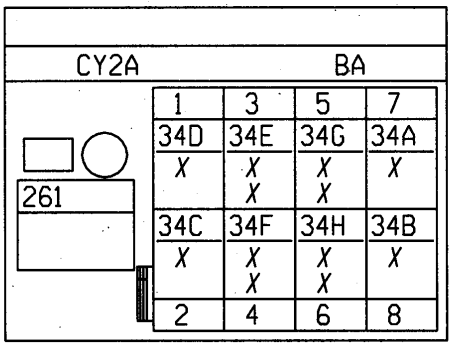

N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER
3	.6	34E	SIGNAL+ RH FRONT SPEAKER
3	1	34E	SIGNAL+ RH FRONT SPEAKER
4	.6	34F	SIGNAL- RH FRONT SPEAKER
4	1	34F	SIGNAL- RH FRONT SPEAKER
5	.6	34G	SIGNAL+ LH FRONT SPEAKERS
5	1	34G	SIGNAL+ LH FRONT SPEAKERS
6	.6	34H	SIGNAL- LH FRONT SPEAKER
6	1	34H	SIGNAL- LH FRONT SPEAKER
7	1	34A	SIGNAL+ LH REAR SPEAKER
8	1	34B	SIGNAL- LH REAR SPEAKER

RADIO

S4

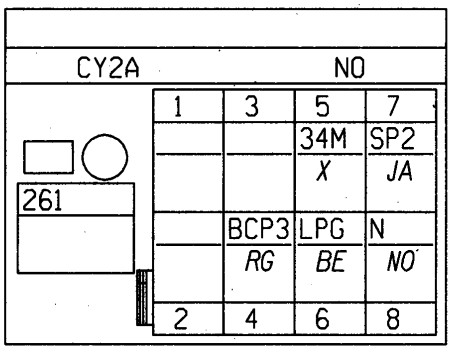

N°	mm²		... → ...
4	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
5	.35	34M	+ ANTENNA CONTROL
6	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
7	1	SP2	+ PROTECTED CONTROL > RADIO >
8	3	N	ELECTRONIC EARTH

RADIO

S4

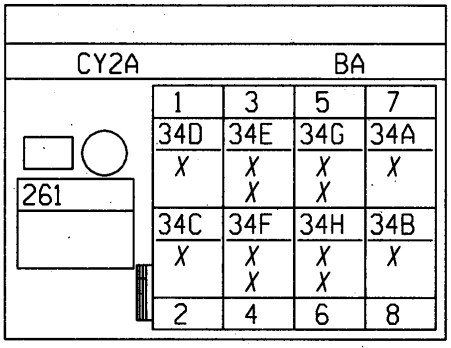

N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER
3	.6	34E	SIGNAL+ RH FRONT SPEAKER
3	1	34E	SIGNAL+ RH FRONT SPEAKER
4	.6	34F	SIGNAL- RH FRONT SPEAKER
4	1	34F	SIGNAL- RH FRONT SPEAKER
5	.6	34G	SIGNAL+ LH FRONT SPEAKERS
5	1	34G	SIGNAL+ LH FRONT SPEAKERS
6	.6	34H	SIGNAL- LH FRONT SPEAKER
6	1	34H	SIGNAL- LH FRONT SPEAKER
7	1	34A	SIGNAL+ LH REAR SPEAKER
8	1	34B	SIGNAL- LH REAR SPEAKER

LEFT REPEATER

J64,F64 LVARMA/SAUF MERCOS,TUR

S1

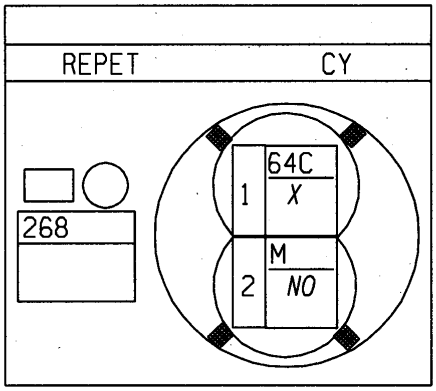

N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.6	M	EARTH

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

J64,F64 LVAREL/SAUF MERCOS,TUR J64,F6

S4-S5-S6-S7

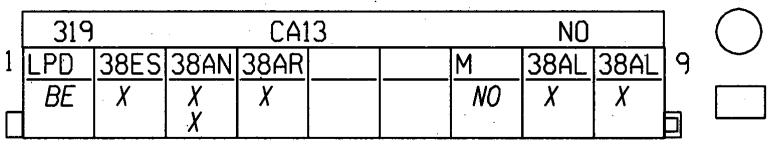

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	38ES	- AIR CONDITIONING INDICATOR LIGHT CONTROL
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
4	.35	38AR	AIR CONDITIONING START/STOP SIGNAL
7	1	M	EARTH
8	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

J64,F64/LARNOU/SAUF MERCOS/TUR

S4-S5-S6-S7

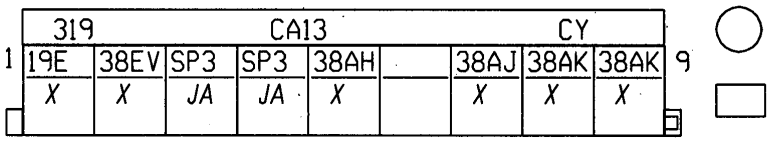

N°	mm²		... ⟶ ...
1	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
2	.35	38EV	+ RECIRCULATION CONTROL
3	1.4	SP3	+ PROTECTED CONTROL > HEATING
4	1.4	SP3	+ PROTECTED CONTROL > HEATING
5	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
7	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
9	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

LEFT REPEATER
J64,F64 LVAREL/SAUF MERCOS,TUR J64,F64
SI

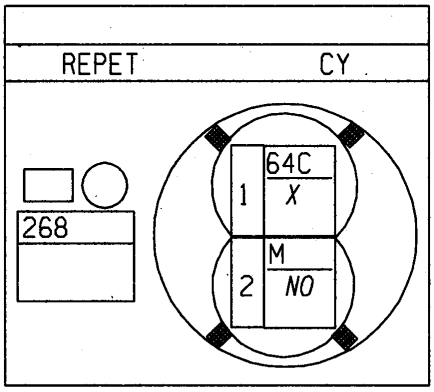

N°	mm²		... → ...
1	.6	64C	LH INDICATOR CONTROL
2	.6	M	EARTH

LEFT REPEATER

S1

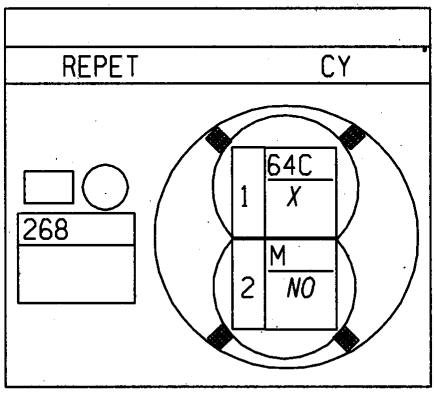

N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.6	M	EARTH

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

S4-S5-S6-S7

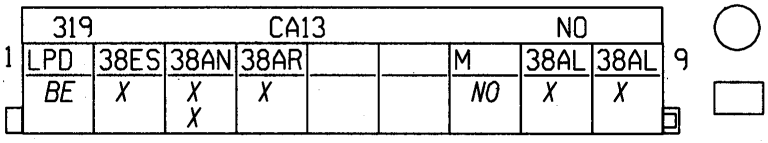

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	38ES	- AIR CONDITIONING INDICATOR LIGHT CONTROL
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
4	.35	38AR	AIR CONDITIONING START/STOP SIGNAL
7	1	M	EARTH
8	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

S4-S5-S6-S7

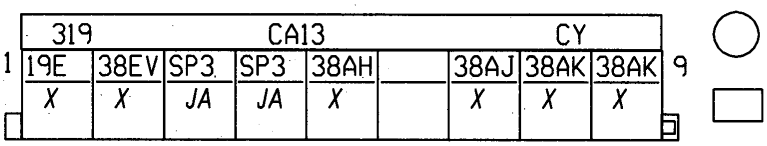

N°	mm²		... ⟶ ...
1	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
2	.35	38EV	+ RECIRCULATION CONTROL
3	1.4	SP3	+ PROTECTED CONTROL > HEATING
4	1.4	SP3	+ PROTECTED CONTROL > HEATING
5	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
9	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

CONTROL PLATE RELAY
J64,F64/DIESEL CHAUFO J64,F64/DIESEL CA J64 K4M/CA/EQGPL/BVM5

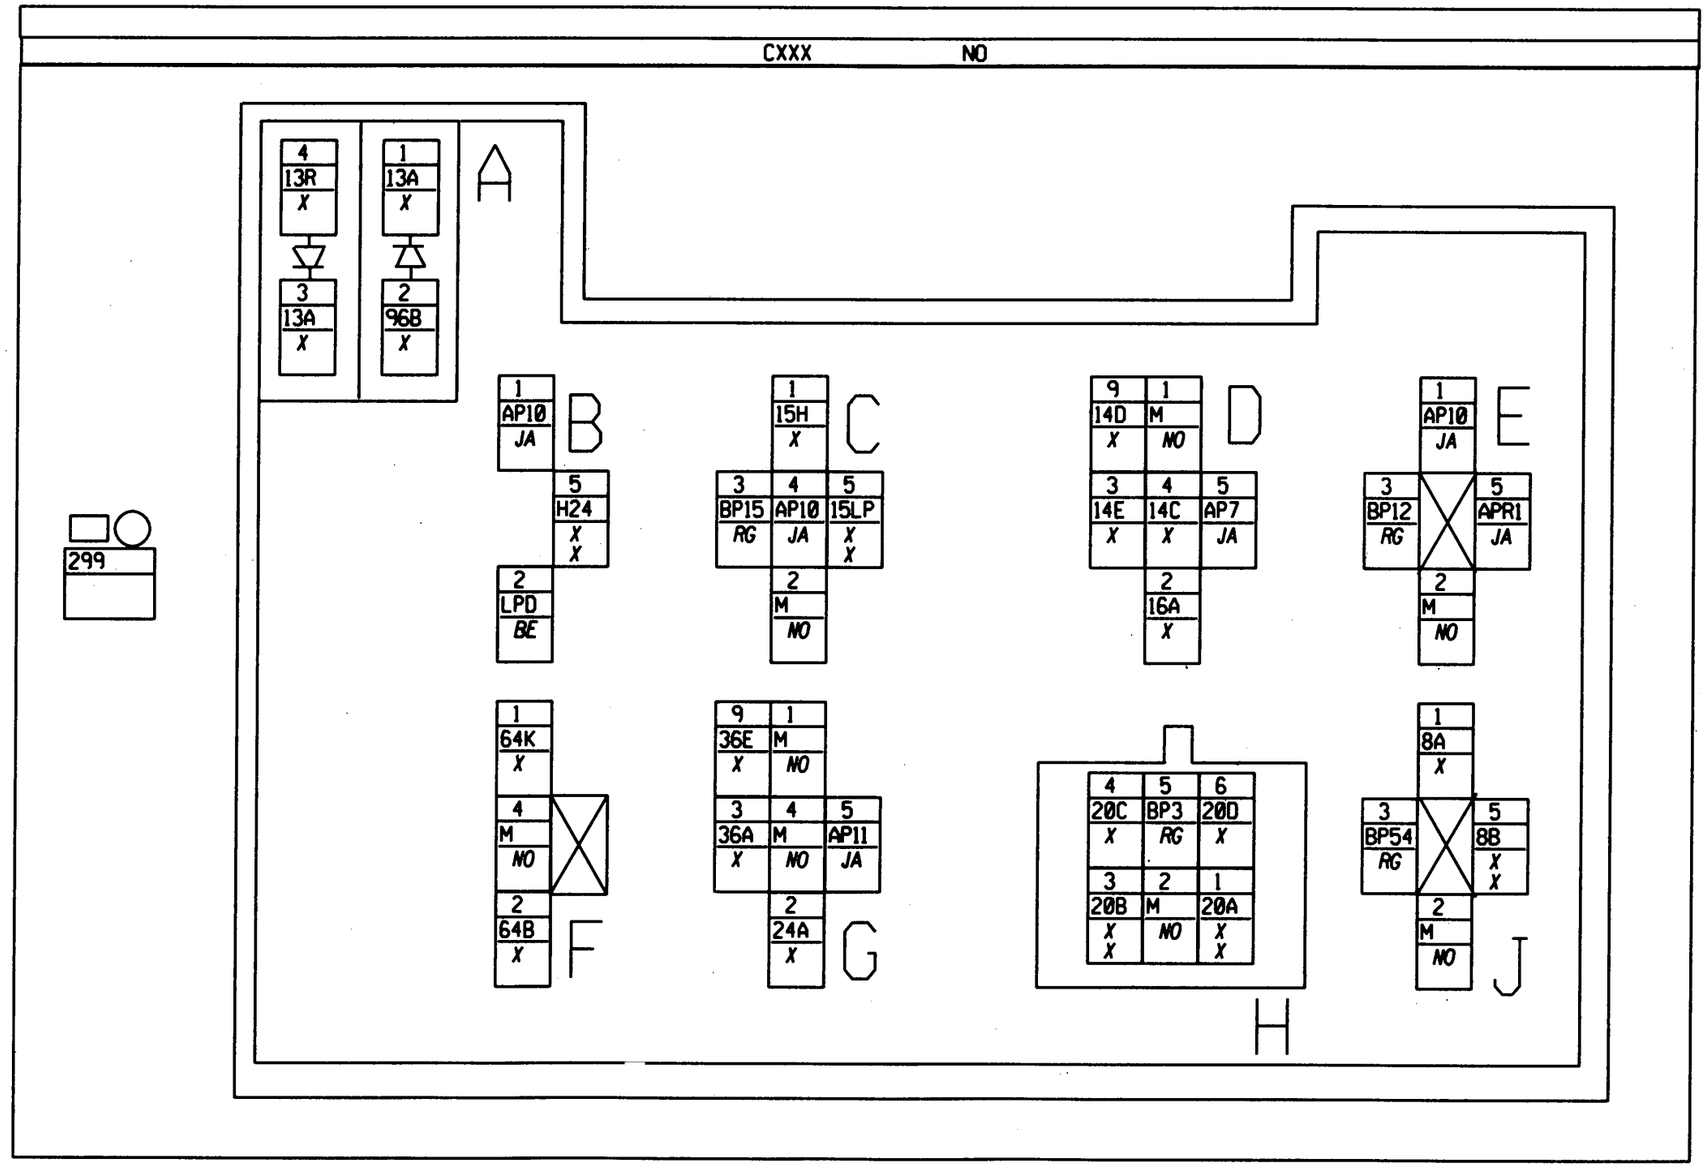

N°	mm²		... ⟶ ...
A1	.35	13A	- INTERIOR LIGHTING > REBATE CONTROL
B1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
C1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
D1	.35	M	EARTH
E1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
F1	.6	64K	+ FLASHER UNIT TIMING
G1	.35	M	EARTH
H1	.6	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
H1	.6	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
J1	2	8A	+ FOG LIGHTS RELAY
A2	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL
B2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C2	.35	M	EARTH
D2	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
E2	.35	M	EARTH
F2	.6	64B	+ TIMED > FLASHER UNIT TIME SWITCH CONTROL
G2	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
H2	2	M	EARTH
J2	.35	M	EARTH
A3	.35	13A	- INTERIOR LIGHTING > REBATE CONTROL
C3	3	BP15	PROTECTED BATTERY HEATED REAR SCREEN
D3	1	14E	+ WINDSCREEN WIPER TIME SWITCH CONTROL
E3	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
G3	1	36A	+ REAR WIPER CONTROL
H3	.6	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
H3	.6	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
J3	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
A4	.35	13R	- INTERIOR LIGHTING > DIODE
C4	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
D4	1	14C	+ PARK POSITION WINDSCREEN WIPER CONTROL
F4	.35	M	EARTH
G4	1	M	EARTH
H4	2	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B5	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
B5	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
C5	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
C5	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
D5	1	AP7	+ AFTER IGNITION PROTECTED WINDSCREEN WIPER FUSE
E5	3	APR1	AFTER-IGNITION RELAY 1
G5	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
H5	2	BP3	PROTECTED BATTERY CENTRAL DOOR LOCKING
J5	.35	8B	+ FRONT FOG LIGHTS > RELAY
J5	1	8B	+ FRONT FOG LIGHTS > RELAY
H6	2	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
D9	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
G9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM
J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR
S4-S5-S6-S7

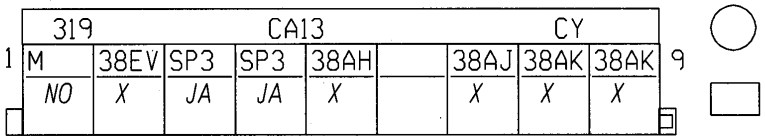

N°	mm²		··· ⟶ ···
1	.35	M	EARTH
2	.35	38EV	+ RECIRCULATION CONTROL
3	1.4	SP3	+ PROTECTED CONTROL > HEATING
4	1.4	SP3	+ PROTECTED CONTROL > HEATING
5	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
9	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM
J64 K4M/CA/EQGPL/BVM5
S4-S5-S6-S7

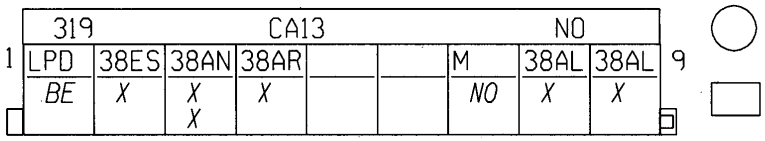

N°	mm²		··· ⟶ ···
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	38ES	- AIR CONDITIONING INDICATOR LIGHT CONTROL
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
4	.35	38AR	AIR CONDITIONING START/STOP SIGNAL
7	.35	M	EARTH
8	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

BASE FAN ASSEMBLY AND AIR CONDITIONING

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S2-S6

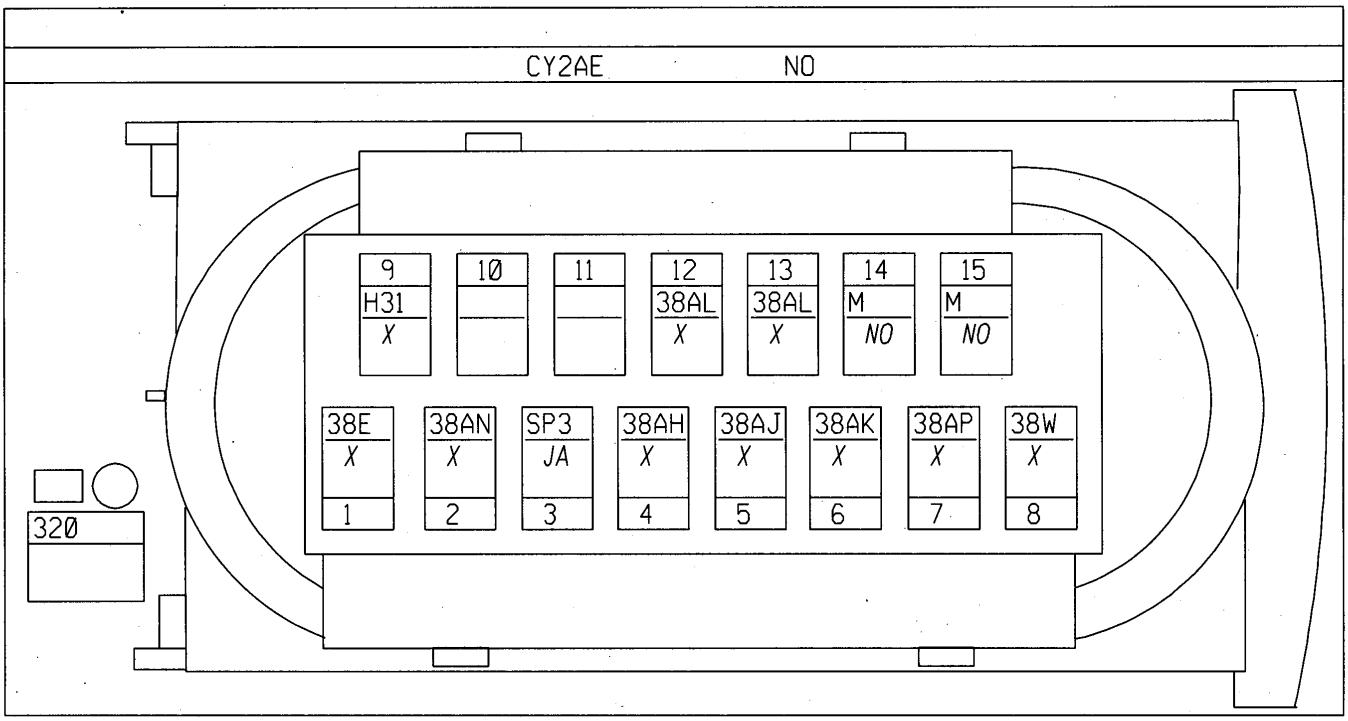

N°	mm²		... → ...
1	.35	38E	+ AIR CONDITIONING RECIRCULATION
2	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	SP3	+ PROTECTED CONTROL > HEATING
4	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
5	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
6	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
7	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
8	.35	38W	- FREON PRESSURE SENSOR (AC)
9	.35	H31	FAN UNIT VOLTAGE SIGNAL
12	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
13	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
14	1.4	M	EARTH
15	1.4	M	EARTH

FRONT RIGHT SPEAKER

J64,F64/DIESEL CHAUFO J64,F64/DIESEL CA

S6

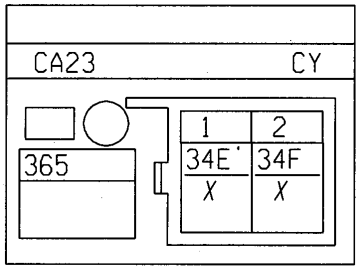

N°	mm²		... → ...
1	.6	34E	SIGNAL+ RH FRONT SPEAKER
2	.6	34F	SIGNAL- RH FRONT SPEAKER

BASE FAN ASSEMBLY AND AIR CONDITIONING

J64 K4M/K4J/CHAUFO/SPRGPL/BVM5 J64 K4M/CA/SPRGPL/BVM5 J64 K4M/CA/S

S2-S6

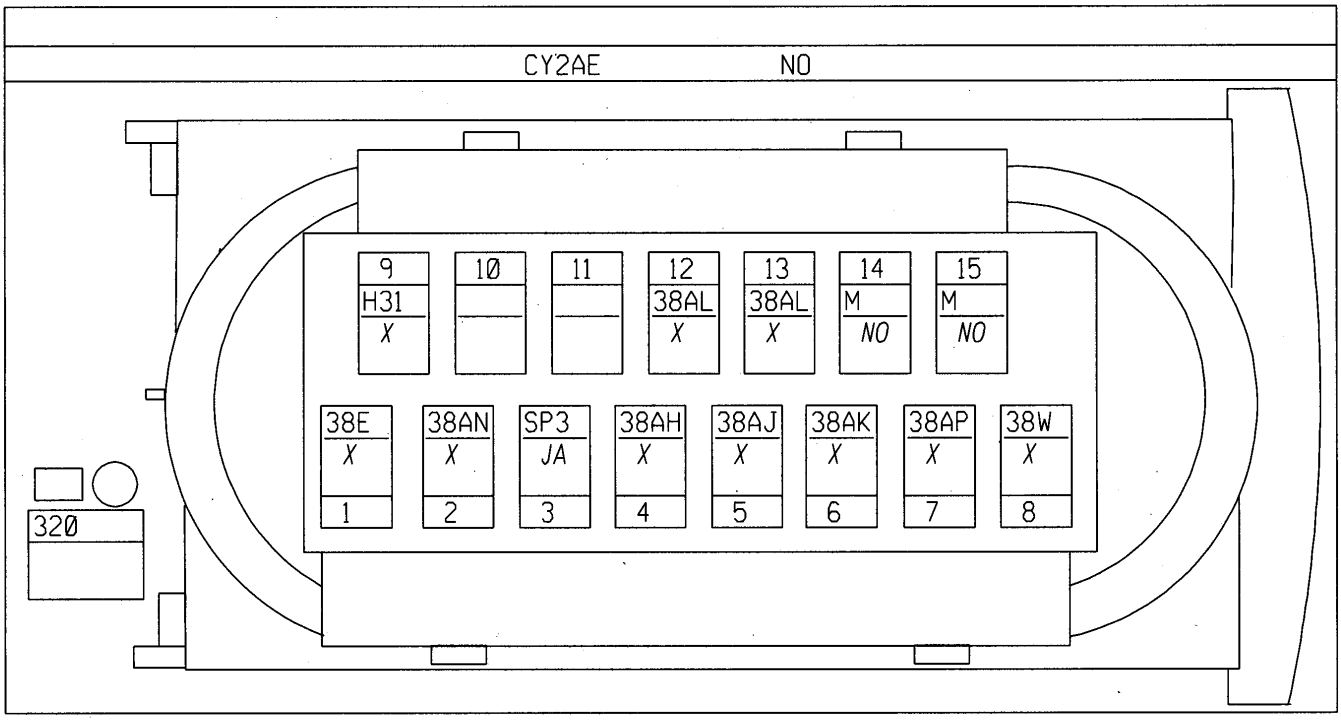

N°	mm²		... → ...
1	.35	38E	+ AIR CONDITIONING RECIRCULATION
2	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	SP3	+ PROTECTED CONTROL > HEATING
4	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
5	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
6	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
7	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
8	.35	38W	- FREON PRESSURE SENSOR (AC)
9	.35	H31	FAN UNIT VOLTAGE SIGNAL
12	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
13	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
14	1.4	M	EARTH
15	1.4	M	EARTH

FRONT RIGHT SPEAKER

J64,F64/DIESEL CHAUFO J64,F64/DIESEL CA J64 K4M/K4J/CHAUFO/SPRGPL/

S6

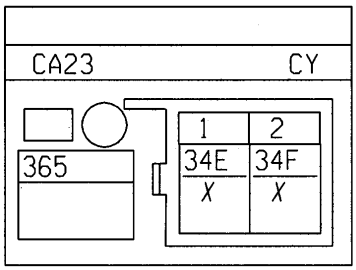

N°	mm²		... → ...
1	.6	34E	SIGNAL+ RH FRONT SPEAKER
2	.6	34F	SIGNAL- RH FRONT SPEAKER

FRONT RIGHT SPEAKER

S6

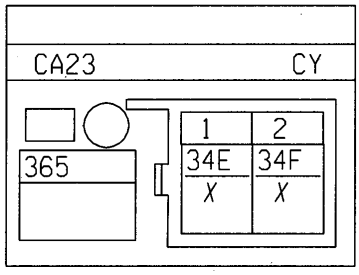

N°	mm²		... ⟶ ...
1	.6	34E	SIGNAL+ RH FRONT SPEAKER
2	.6	34F	SIGNAL- RH FRONT SPEAKER

FRONT LEFT SPEAKER

S4

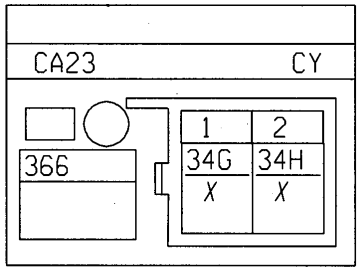

N°	mm²		... ⟶ ...
1	.6	34G	SIGNAL+ LH FRONT SPEAKERS
2	.6	34H	SIGNAL- LH FRONT SPEAKER

AIR CONDITIONING CONTROL UNIT

S7-S32

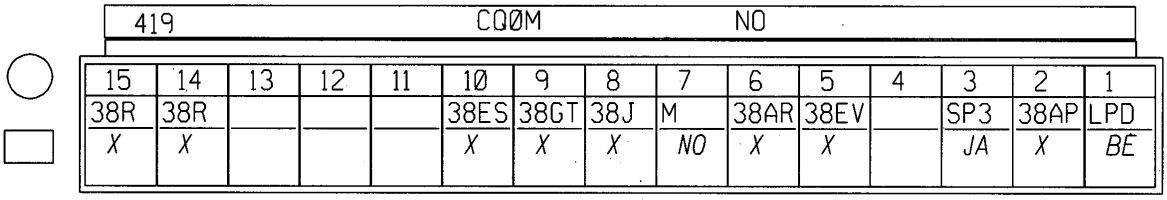

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
3	.35	SP3	+ PROTECTED CONTROL > HEATING
5	.35	38EV	+ RECIRCULATION CONTROL
6	.35	38AR	AIR CONDITIONING START/STOP SIGNAL
7	.35	M	EARTH
8	.35	38J	AIR CONDITIONING CUT-OUT SIGNAL > AUTOMATIC GEARBOX COMPUTER
9	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
10	.35	38ES	- AIR CONDITIONING INDICATOR LIGHT CONTROL
14	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL
15	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL

FRONT LEFT SPEAKER

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S4

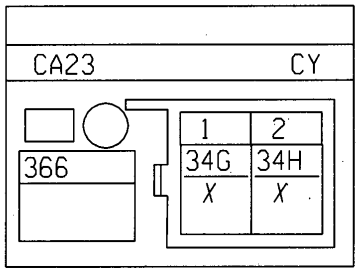

N°	mm²		... → ...
1	.6	34G	SIGNAL+ LH FRONT SPEAKERS
2	.6	34H	SIGNAL- LH FRONT SPEAKER

AIR CONDITIONING CONTROL UNIT

J64,F64

S7-S32

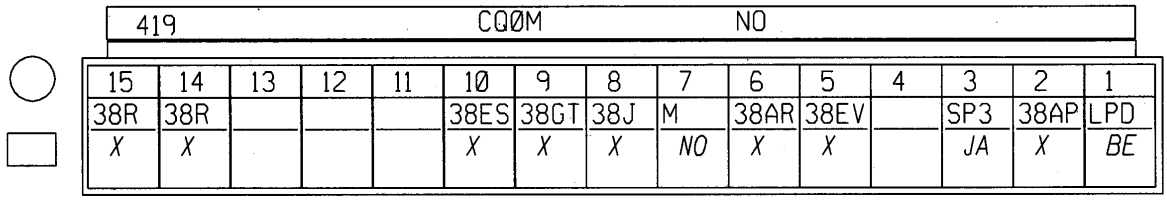

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
3	.35	SP3	+ PROTECTED CONTROL > HEATING
5	.35	38EV	+ RECIRCULATION CONTROL
6	.35	38AR	AIR CONDITIONING START/STOP SIGNAL
7	.35	M	EARTH
8	.35	38J	AIR CONDITIONING CUT-OUT SIGNAL > AUTOMATIC GEARBOX COMPUTER
9	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
10	.35	38ES	- AIR CONDITIONING INDICATOR LIGHT CONTROL
14	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL
15	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL

9	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
10	.35	38ES	- AIR CONDITIONING INDICATOR LIGHT CONTROL
14	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL
15	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL

AIR CONDITIONING CONTROL UNIT

J64,F64 PBCH

S7-S32

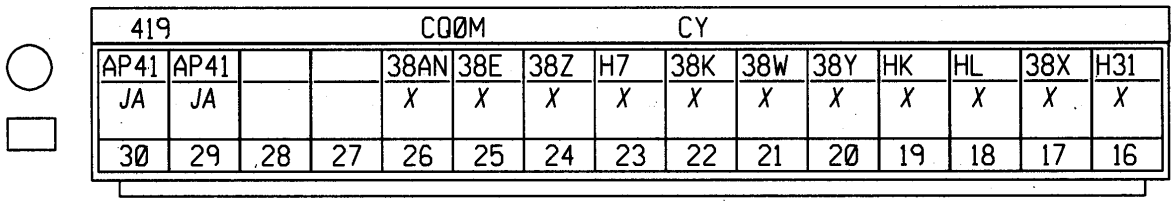

N°	mm²		... ⟶ ...
16	.35	H31	FAN UNIT VOLTAGE SIGNAL
17	.35	38X	FREON PRESSURE SENSOR SIGNAL
18	.35	HL	DIAGNOSTIC SIGNAL L
19	.35	HK	DIAGNOSTIC SIGNAL K
20	.35	38Y	+FREON PRESSURE SENSOR
21	.35	38W	- FREON PRESSURE SENSOR (AC)
22	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
23	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
24	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
25	.35	38E	+ AIR CONDITIONING RECIRCULATION
26	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
29	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
30	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION

ELECTRIC WINDOW CONTROL RELAY

J64,F64 LVAREL/SAUF MERCOS,TUR

S6-S21

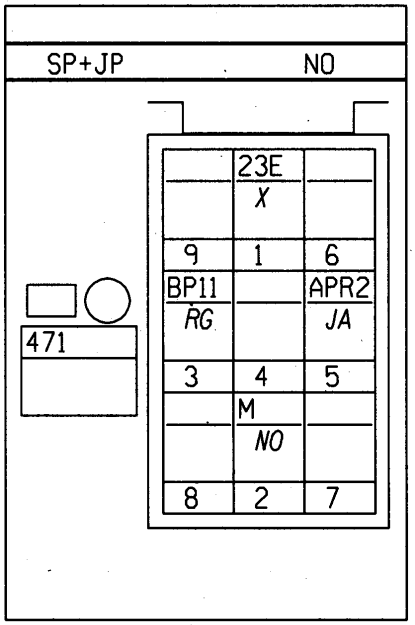

N°	mm²		... ⟶ ...
1	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
2	.6	M	EARTH
3	3	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
5	3	APR2	AFTER-IGNITION RELAY 2

AIR CONDITIONING CONTROL UNIT
J64,F64 LVARMA/SAUF MERCOS,TUR
S7-S32

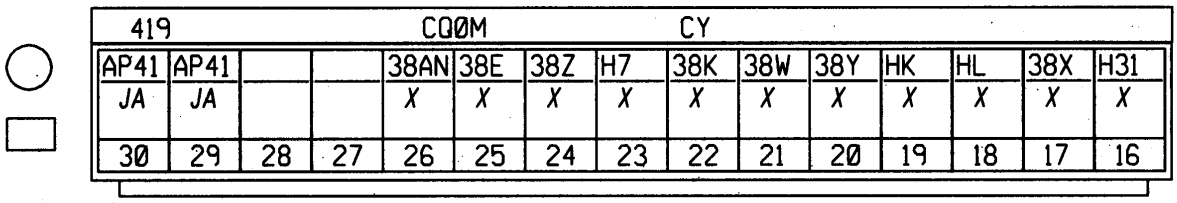

N°	mm²		··· ⟶ ···
16	.35	H31	FAN UNIT VOLTAGE SIGNAL
17	.35	38X	FREON PRESSURE SENSOR SIGNAL
18	.35	HL	DIAGNOSTIC SIGNAL L
19	.35	HK	DIAGNOSTIC SIGNAL K
20	.35	38Y	+FREON PRESSURE SENSOR
21	.35	38W	- FREON PRESSURE SENSOR (AC)
22	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
23	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
24	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
25	.35	38E	+ AIR CONDITIONING RECIRCULATION
26	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
29	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
30	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION

RH FRONT SEAT
J64,F64/LARNOU/SAUF MERCOS/TUR
S9

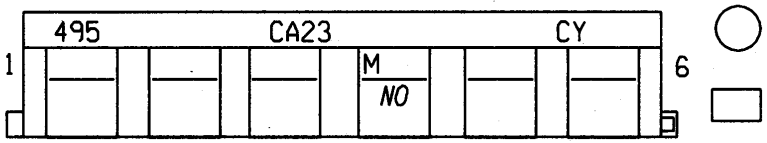

N°	mm²		··· ⟶ ···
4	.6	M	EARTH

LH FRONT SEAT
J64,F64 E2/SAUF TUR
S8

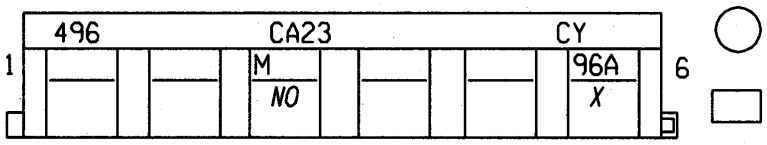

N°	mm²		··· ⟶ ···
3	.35	M	EARTH
6	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL

AIR CONDITIONING CONTROL UNIT

S7-S32

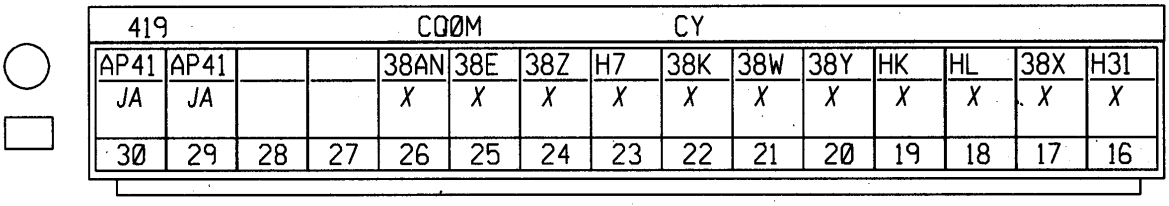

N°	mm²		... ⟶ ...
16	.35	H31	FAN UNIT VOLTAGE SIGNAL
17	.35	38X	FREON PRESSURE SENSOR SIGNAL
18	.35	HL	DIAGNOSTIC SIGNAL L
19	.35	HK	DIAGNOSTIC SIGNAL K
20	.35	38Y	+FREON PRESSURE SENSOR
21	.35	38W	- FREON PRESSURE SENSOR (AC)
22	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
23	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
24	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
25	.35	38E	+ AIR CONDITIONING RECIRCULATION
26	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
29	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
30	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION

ELECTRIC WINDOW CONTROL RELAY

S6-S21

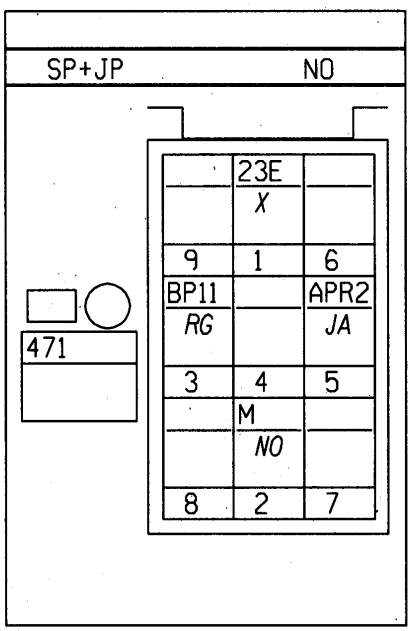

N°	mm²		... ⟶ ...
1	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
2	.6	M	EARTH
3	3	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
5	3	APR2	AFTER-IGNITION RELAY 2

RH FRONT SEAT

J64,F64 4X15KI,2X8KI,4X15CI/SAUF MERCOS J64,F64 2X5KI/SAUF NAVIG,RADIO

S9

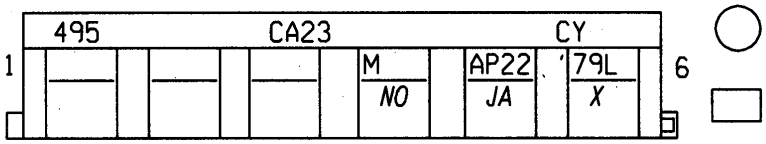

N°	mm²		... ⟶ ...
4	.6	M	EARTH
5	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
6	.35	79L	+ RELAY RH HEATED SEAT CONTROL

RH FRONT SEAT

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S9

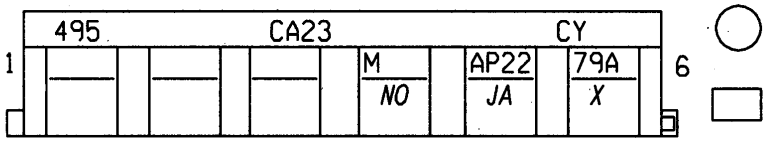

N°	mm²		... ⟶ ...
4	.6	M	EARTH
5	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
6	.35	79A	+ HEATED SEAT CONTROL

LH FRONT SEAT

J64,F64 TO

S8

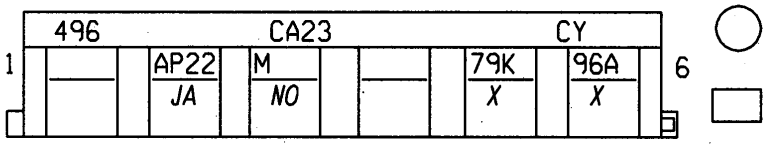

N°	mm²		... ⟶ ...
2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
3	.6	M	EARTH
5	.35	79K	+ RELAY LH HEATED SEAT CONTROL
6	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL

RH FRONT SEAT

S9

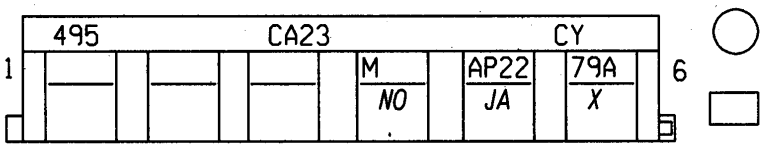

N°	mm²		... → ...
4	.6	M	EARTH
5	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
6	.35	79A	+ HEATED SEAT CONTROL

LH FRONT SEAT

S8

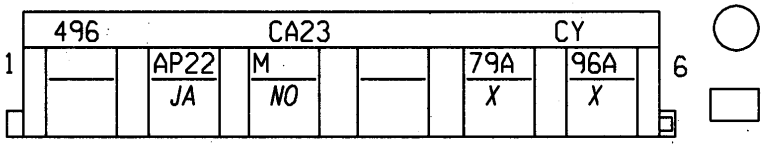

N°	mm²		... → ...
2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
3	.6	M	EARTH
5	.35	79A	+ HEATED SEAT CONTROL
6	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL

HEADLIGHT ADJUSTMENT COMMAND

S4

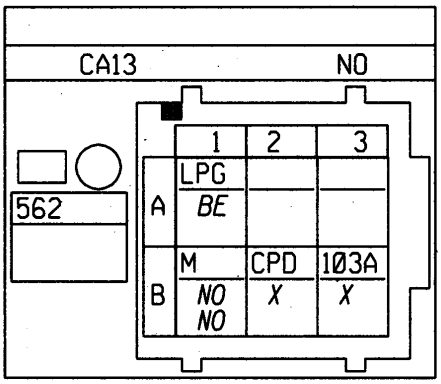

N°	mm²		... → ...
A1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B1	.6	M	EARTH
B1	.6	M	EARTH
B2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
B3	.6	103A	HEADLAMP POSITIONING CONTROL

LH FRONT SEAT

J64,F64 E2/SAUF TUR J64,F64 E1/SAUF TUR

S8

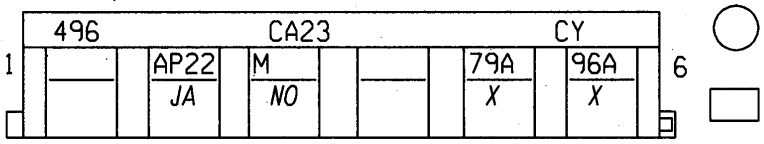

N°	mm²		... ⟶ ...
2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
3	.6	M	EARTH
5	.35	79A	+ HEATED SEAT CONTROL
6	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL

HEADLIGHT ADJUSTMENT COMMAND

K25,B64,J64/EQGPL

S4

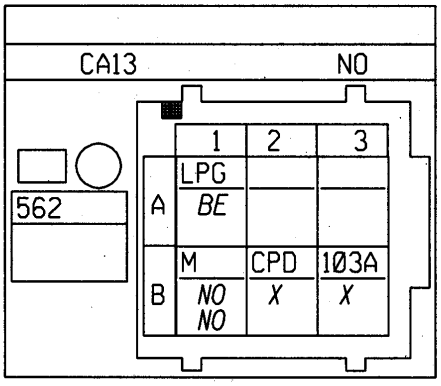

N°	mm²		... ⟶ ...
A1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B1	.6	M	EARTH
B1	.6	M	EARTH
B2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
B3	.6	103A	HEADLAMP POSITIONING CONTROL

ELECTRONIC CONTROL UNIT DECODER
J64,F64

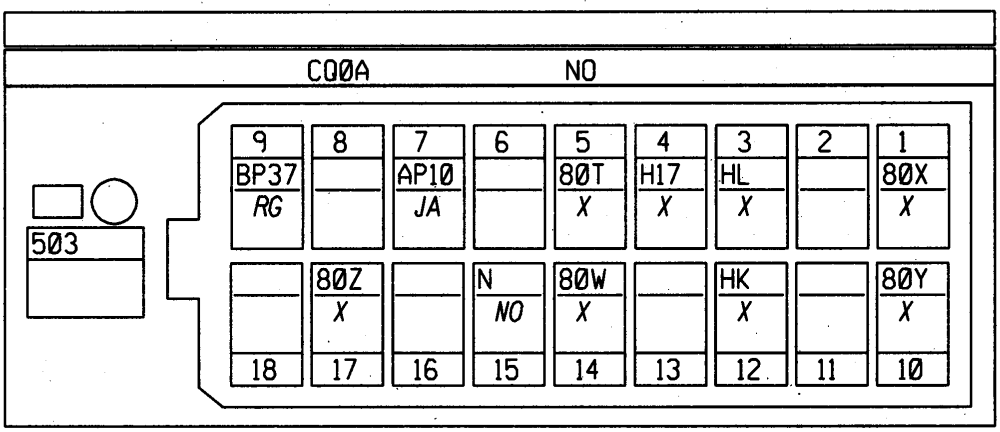

N°	mm²		... → ...
1	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
5	.35	80T	- SOFTWARE LOCK INDICATOR LIGHT CONTROL
7	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
9	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
10	.35	80Y	TRANSPONDER CLOCK SIGNAL
12	.35	HK	DIAGNOSTIC SIGNAL K
14	.35	80W	- TRANSPONDER AERIAL
15	.35	N	ELECTRONIC EARTH
17	.35	80Z	+ TRANSPONDER AERIAL

HEADLIGHT ADJUSTMENT COMMAND
J64,F64
S4

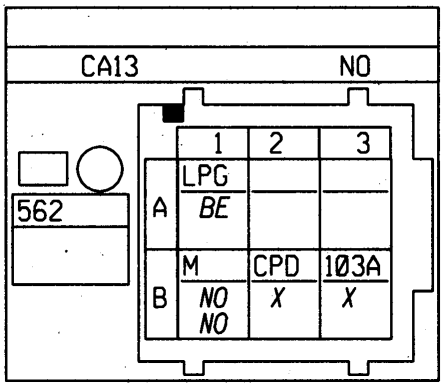

N°	mm²		... → ...
A1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B1	.6	M	EARTH
B1	.6	M	EARTH
B2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
B3	.6	103A	HEADLAMP POSITIONING CONTROL

PASSENGER COMPARTMENT ECU

Erreur lecture ligne dans Fichier Critere Connecteur

S6

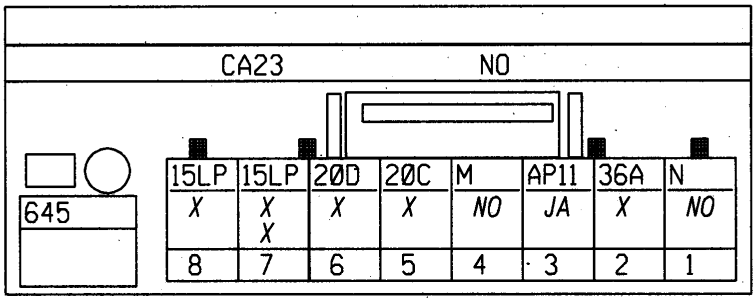

N°	mm²		... → ...
1	2	N	ELECTRONIC EARTH
2	1	36A	+ REAR WIPER CONTROL
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
4	1.4	M	EARTH
5	2	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	2	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
7	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
8	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

PASSENGER COMPARTMENT ECU

Erreur lecture ligne dans Fichier Critere Connecteur

S6

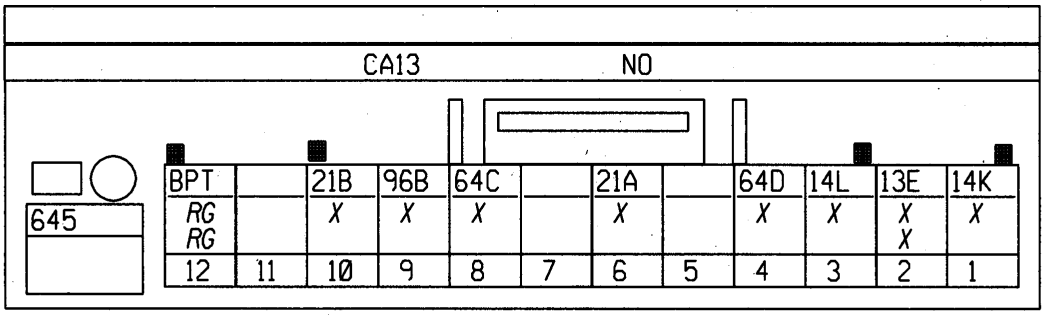

N°	mm²		... → ...
1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
3	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
4	.6	64D	RH FRONT INDICATOR CONTROL
6	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
8	.6	64C	LH INDICATOR CONTROL
9	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL
10	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY

PASSENGER COMPARTMENT ECU

Erreur lecture ligne dans Fichier Critere Connecteur

S6

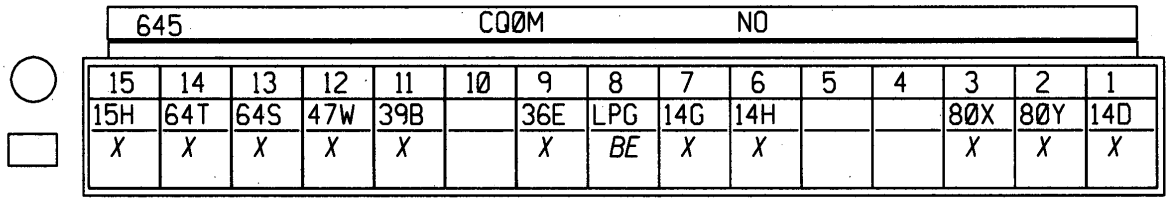

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
15H	64T	64S	47W	39B		36E	LPG	14G	14H			8ØX	8ØY	14D
X	X	X	X	X		X	BE	X	X			X	X	X

N°	mm²		... ⟶ ...
1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
2	.35	80Y	TRANSPONDER CLOCK SIGNAL
3	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
6	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
7	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
8	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
11	.35	39B	- HEADLIGHT WASHER RELAY COIL > TIME SWITCH CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL
13	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
14	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
15	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL

PASSENGER COMPARTMENT ECU

Erreur lecture ligne dans Fichier Critere Connecteur

S6

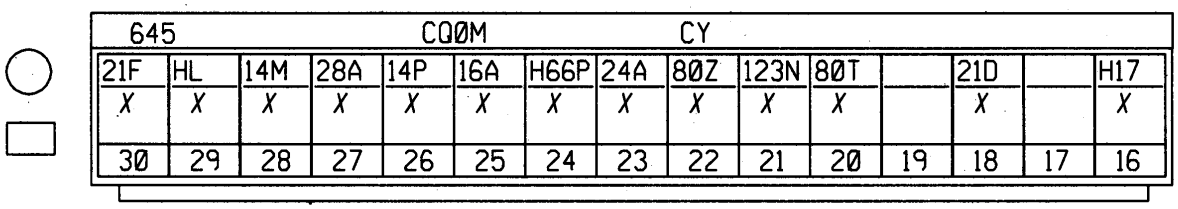

21F	HL	14M	28A	14P	16A	H66P	24A	8ØZ	123N	8ØT		21D		H17
X	X	X	X	X	X	X	X	X	X	X		X		X
30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

N°	mm²		... ⟶ ...
16	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
18	.35	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
20	.35	80T	- SOFTWARE LOCK INDICATOR LIGHT CONTROL
21	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
22	.35	80Z	+ TRANSPONDER AERIAL
23	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
24	.35	H66P	+ REVERSING LIGHTS CONTROL
25	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
26	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
27	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
28	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
29	.35	HL	DIAGNOSTIC SIGNAL L
30	.35	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL

PASSENGER COMPARTMENT ECU

Erreur lecture ligne dans Fichier Critere Connecteur

S6

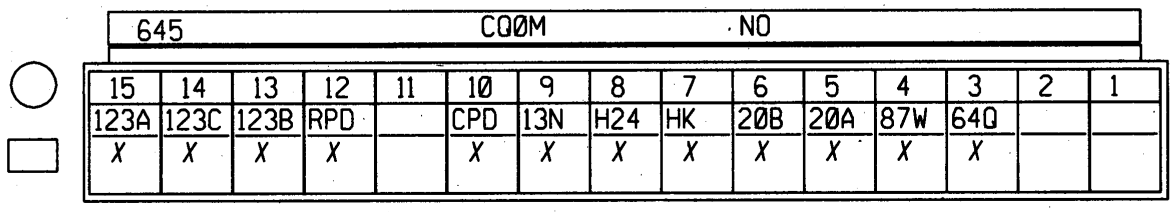

N°	mm²		... ⟶ ...
3	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL
5	.35	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
6	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
7	.35	HK	DIAGNOSTIC SIGNAL K
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	CPD	+ RH PROTECTED DIPPED HEADLIGHT
12	.6	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
13	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
14	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL
15	.35	123A	- HEATED SCREEN START UP CONTROL UNIT CONTROL
4	.35	87W	FLAP NOTCH MODULE SWITCH 1 SIGNAL

TURN SWITCH

Erreur lecture ligne dans Fichier Critere Connecteur

S4-S6

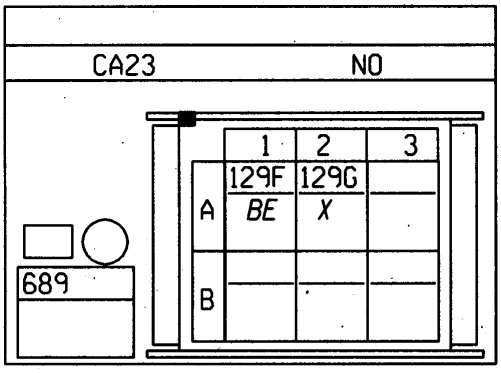

N°	mm²		... ⟶ ...
A1	.6	129F	+ DRIVER'S AIR BAG SIGNAL
A2	.6	129G	- DRIVER'S AIR BAG SIGNAL

S6

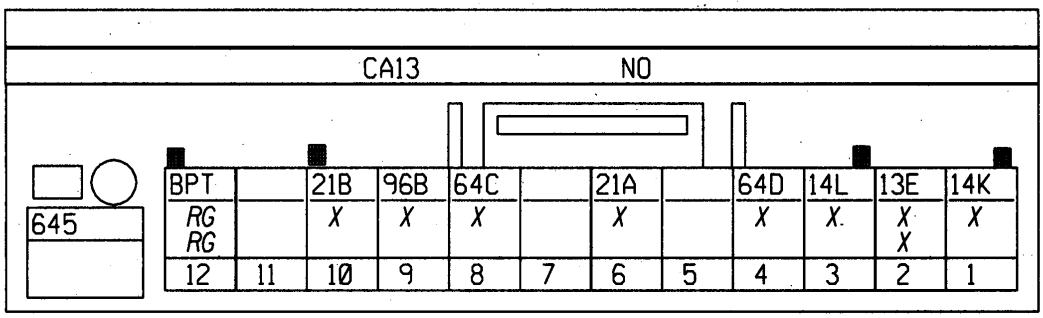

N°	mm²		... → ...
1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
3	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
4	.6	64D	RH FRONT INDICATOR CONTROL
6	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
8	.6	64C	LH INDICATOR CONTROL
9	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL
10	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY

PASSENGER COMPARTMENT ECU

S6

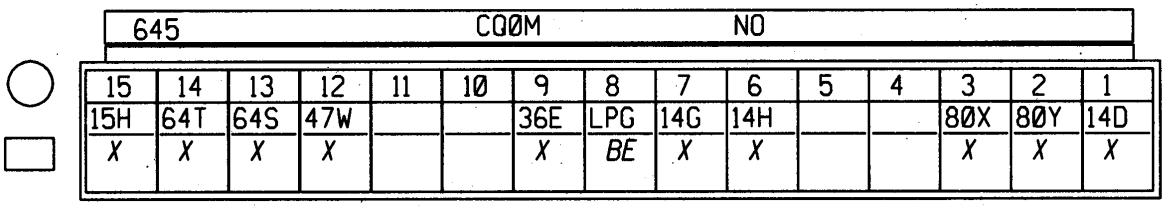

N°	mm²		... → ...
1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
2	.35	80Y	TRANSPONDER CLOCK SIGNAL
3	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
6	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
7	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
8	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL
13	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
14	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
15	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL

PASSENGER COMPARTMENT ECU

S6

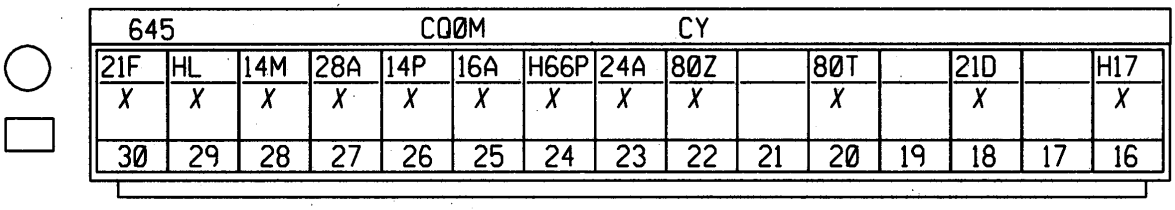

N°	mm²		... → ...
16	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
18	.6	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
20	.35	80T	- SOFTWARE LOCK INDICATOR LIGHT CONTROL
22	.35	80Z	+ TRANSPONDER AERIAL
23	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
24	.35	H66P	+ REVERSING LIGHTS CONTROL
25	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
26	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
27	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
28	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
29	.35	HL	DIAGNOSTIC SIGNAL L
30	.6	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL

PASSENGER COMPARTMENT ECU

S6

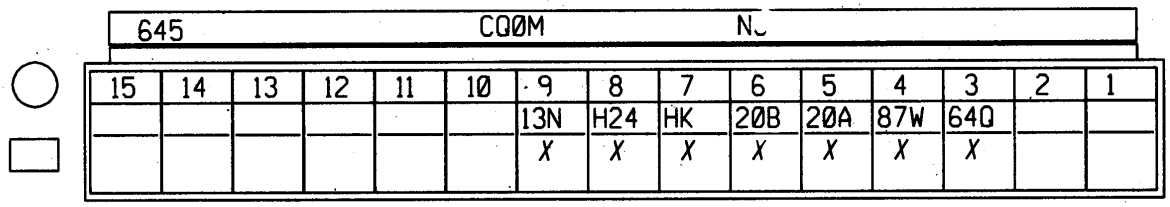

N°	mm²		... → ...
3	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL
4	.35	87W	FLAP NOTCH MODULE SWITCH 1 SIGNAL
5	.35	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
6	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
7	.35	HK	DIAGNOSTIC SIGNAL K
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL

TURN SWITCH

S4-S6

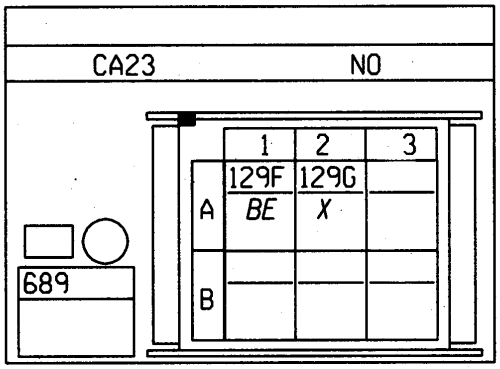

N°	mm²		... → ...
A1	.6	129F	+ DRIVER'S AIR BAG SIGNAL
A2	.6	129G	- DRIVER'S AIR BAG SIGNAL

TURN SWITCH

Erreur lecture ligne dans Fichier Critere Connecteur

S4-S6

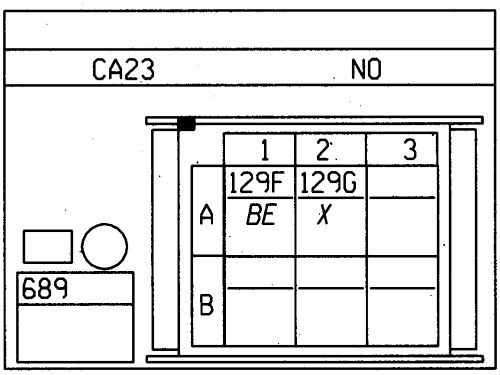

N°	mm²		... ⟶ ...
A1	.6	129F	+ DRIVER'S AIR BAG SIGNAL
A2	.6	129G	- DRIVER'S AIR BAG SIGNAL

HEADLIGHT WASHER FLUID MIN. SENSOR

Erreur lecture ligne dans Fichier Critere Connecteur

S1

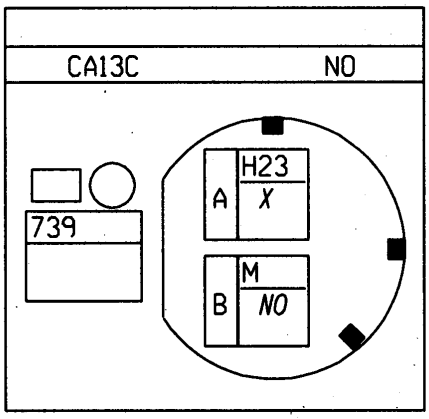

N°	mm²		... → ...
A	.6	H23	MINIMUM HEADLIGHT WASHER > WINDSCREEN WASHER WARNING LIGHT CONTROL
B	.6	M	EARTH

APC N 1 RELAY (AP1)

Erreur lecture ligne dans Fichier Critere Connecteur

S6

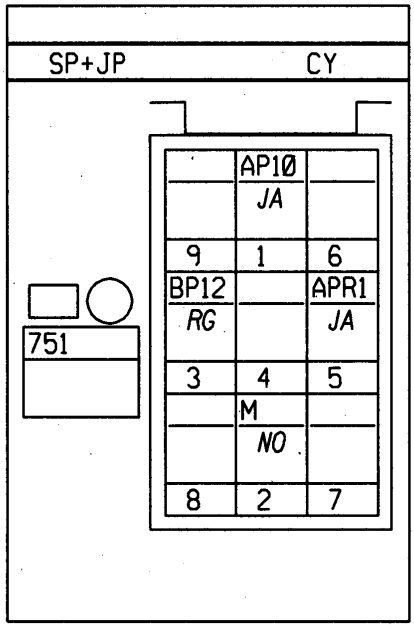

N°	mm²		... → ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.6	M	EARTH
3	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
5	3	APR1	AFTER-IGNITION RELAY 1

APC N 1 RELAY (AP1)

S6

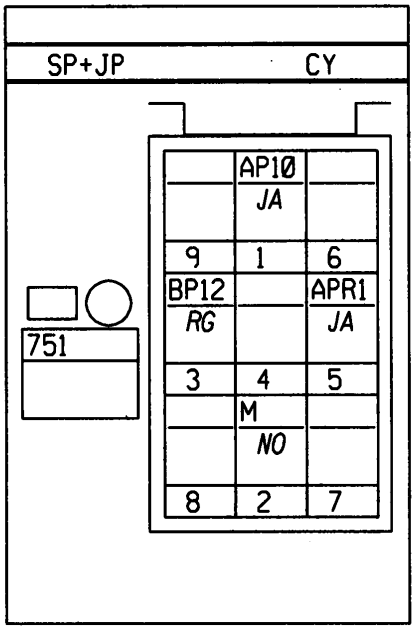

N°	mm²		... ⟶ ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.6	M	EARTH
3	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
5	2	APR1	AFTER-IGNITION RELAY 1

POOR GRIP CONTROL

S5-S8

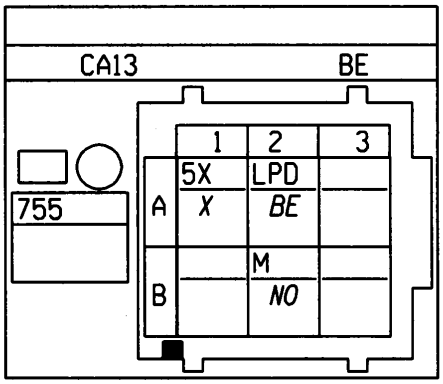

N°	mm²		... ⟶ ...
A1	.35	5X	- POOR GRIP STARTING CONTROL
A2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B2	.35	M	EARTH

POOR GRIP CONTROL

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S8

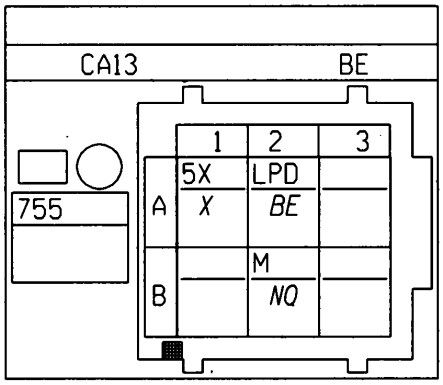

N°	mm²		... → ...
A1	.35	5X	- POOR GRIP STARTING CONTROL
A2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B2	.35	M	EARTH

DASHBOARD

X642

00

ELECTRONIC CONTROL UNIT AIRBAG /PRETENSIONNER

Erreur lecture ligne dIns Fichier Critere Connecteur

S5

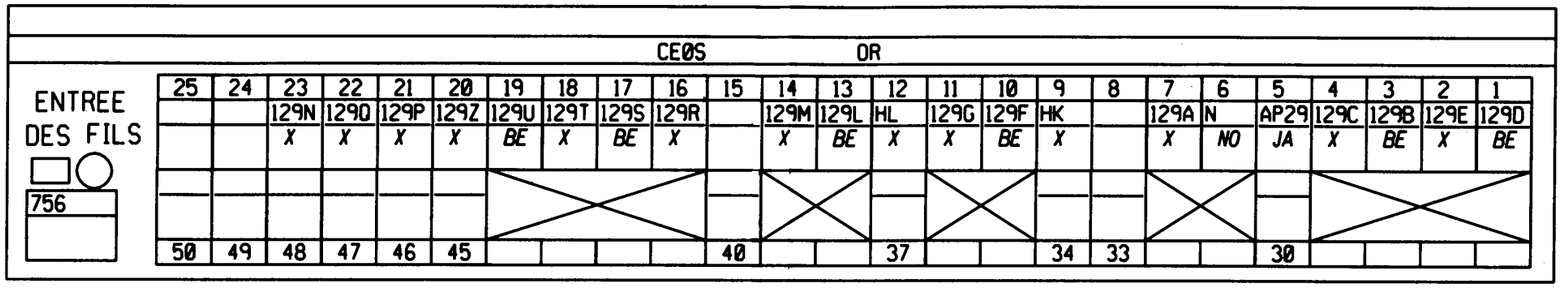

N°	mm²		... ⟶ ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL
3	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
4	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL
5	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
6	.35	N	ELECTRONIC EARTH
7	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.6	129F	+ DRIVER'S AIR BAG SIGNAL
11	.6	129G	- DRIVER'S AIR BAG SIGNAL
12	.35	HL	DIAGNOSTIC SIGNAL L
13	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
14	.6	129M	- PASSENGER AIRBAG 2 SIGNAL
16	.6	129R	+ LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
17	.6	129S	- LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
18	.6	129T	+ RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
19	.6	129U	- RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
20	.35	129Z	+ DRIVER'S SIDE SENSOR SIGNAL
21	.35	129P	+ PASSENGER'S SIDE SENSOR SIGNAL
22	.35	129Q	- DRIVER'S SIDE SENSOR
23	.35	129N	- PASSENGER'S SIDE SENSOR

DASHBOARD

Erreur lecture ligne dans Fichier Critere 1

X642

00

ELECTRONIC CONTROL UNIT AIRBAG /PRETENSIONNER

Erreur lecture ligne dans Fichier Critere Connecteur

S5

CE0S OR

ENTREE DES FILS

756

25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
		129N	129Q	129P	129Z	129U	129T	129S	129R		129M	129L	HL	129G	129F	HK		129A	N	AP29	129C	129B	129E	129D
		X	X	X	X	BE	X	BE	X		X	BE	X	X	BE	X		X	NO	JA	X	BE	X	BE
50	49	48	47	46	45					40			37			34	33			30				

N°	mm²		... ⟶ ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL
3	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
4	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL
5	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
6	.35	N	ELECTRONIC EARTH
7	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.6	129F	+ DRIVER'S AIR BAG SIGNAL
11	.6	129G	- DRIVER'S AIR BAG SIGNAL
12	.35	HL	DIAGNOSTIC SIGNAL L
13	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
14	.6	129M	- PASSENGER AIRBAG 2 SIGNAL
16	.6	129R	+ LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
17	.6	129S	- LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
18	.6	129T	+ RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
19	.6	129U	- RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
20	.35	129Z	+ DRIVER'S SIDE SENSOR SIGNAL
21	.35	129P	+ PASSENGER'S SIDE SENSOR SIGNAL
22	.35	129Q	- DRIVER'S SIDE SENSOR
23	.35	129N	- PASSENGER'S SIDE SENSOR

ELECTRONIC CONTROL UNIT:AIRBAG /PRETENSIONNER

S5

CE0S OR

ENTREE DES FILS

756

25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
		129N	129Q	129P	129Z	129U	129T	129S	129R		129M	129L	HL	129G	129F	HK		129A	N	AP29	129C	129B	129E	129D
		X	X	X	X	BE	X	BE	X		X	BE	X	X	BE	X		X	NO	JA	X	BE	X	BE
50	49	48	47	46	45					40			37			34	33			30				

N°	mm²		... ⟶ ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL
3	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
4	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL
5	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
6	.35	N	ELECTRONIC EARTH
7	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.6	129F	+ DRIVER'S AIR BAG SIGNAL
11	.6	129G	- DRIVER'S AIR BAG SIGNAL
12	.35	HL	DIAGNOSTIC SIGNAL L
13	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
14	.6	129M	- PASSENGER AIRBAG 2 SIGNAL
16	.6	129R	+ LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
17	.6	129S	- LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
18	.6	129T	+ RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
19	.6	129U	- RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
20	.35	129Z	+ DRIVER'S SIDE SENSOR SIGNAL
21	.35	129P	+ PASSENGER'S SIDE SENSOR SIGNAL
22	.35	129Q	- DRIVER'S SIDE SENSOR
23	.35	129N	- PASSENGER'S SIDE SENSOR

FRONT DRIVER'S PRETENSIONER

Erreur lecture ligne dans Fichier Critere Connecteur

S8

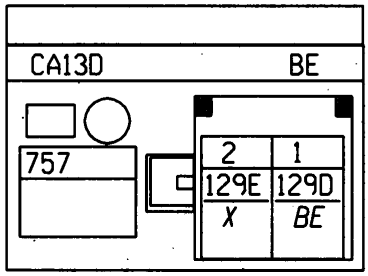

N°	mm²		... ⟶ ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL

FRONT PASSENGER PRETENSIONER

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S9

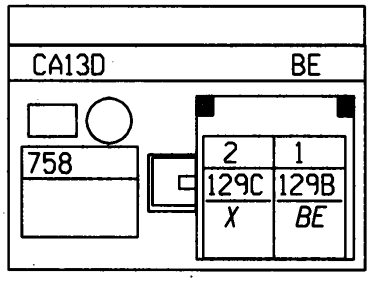

N°	mm²		... ⟶ ...
1	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL

REAR SCREEN/HEATED SCREEN CONTROL

Erreur lecture ligne dans Fichier Critere Connecteur

S5

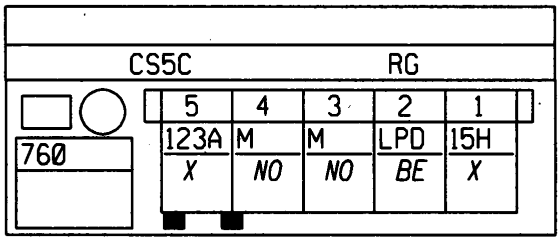

N°	mm²		... ⟶ ...
1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
3	.35	M	EARTH
4	.35	M	EARTH
5	.35	123A	- HEATED SCREEN START UP CONTROL UNIT CONTROL

FRONT DRIVER'S PRETENSIONER

Erreur lecture ligne dans Fichier Critere Connecteur

S8

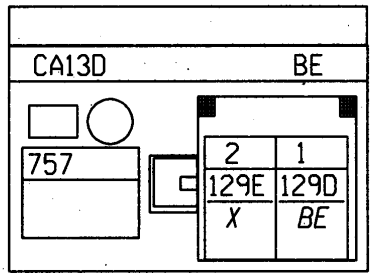

N°	mm²		... → ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL

FRONT PASSENGER PRETENSIONER

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S9

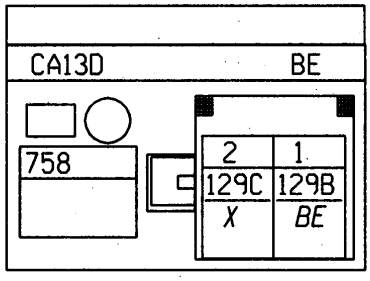

N°	mm²		... → ...
1	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL

DOOR/SEAT BELT WARNING MODULE

Erreur lecture ligne dans Fichier Critere Connecteur

S5

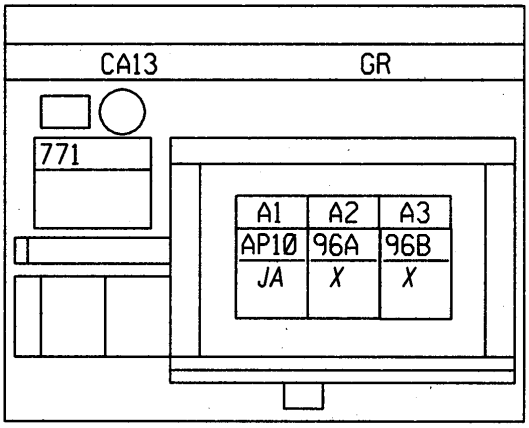

N°	mm²		... → ...
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
A3	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL

FRONT DRIVER'S PRETENSIONER

S8

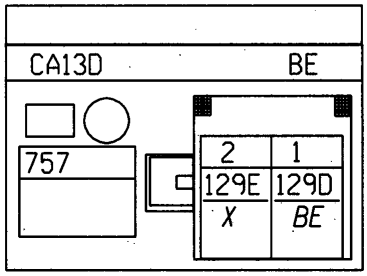

N°	mm²		... ⟶ ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL

FRONT PASSENGER PRETENSIONER

S5-S9

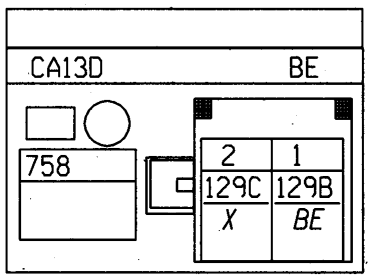

N°	mm²		... ⟶ ...
1	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL

REAR SCREEN/HEATED SCREEN CONTROL

S5

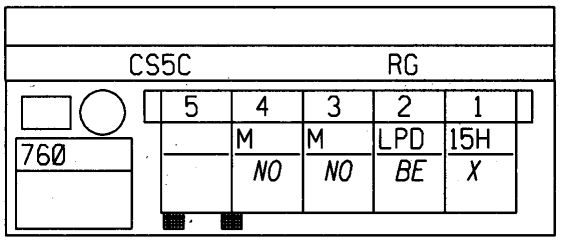

N°	mm²		... ⟶ ...
1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
3	.35	M	EARTH
4	.35	M	EARTH

DOOR/SEAT BELT WARNING MODULE

Erreur lecture ligne dans Fichier Critere Connecteur

S5

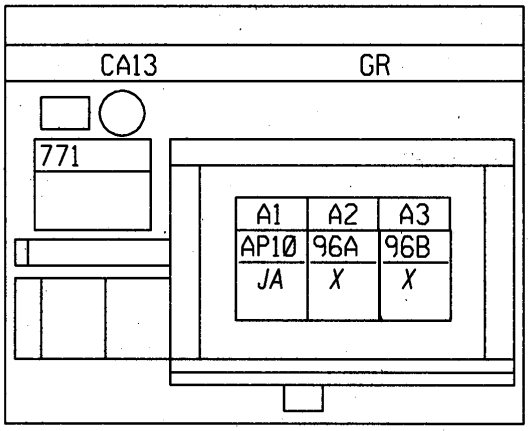

N°	mm²		... → ...
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
A3	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL

POWER SUPPLY FUSE PLATE

Erreur lecture ligne dans Fichier Critere Connecteur

S2-S3-S6-S28-S29-S31-S32-S33-S35

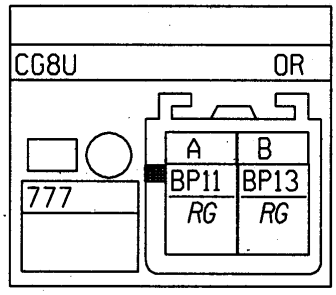

N°	mm²		... → ...
A	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

DOOR/SEAT BELT WARNING MODULE

S5

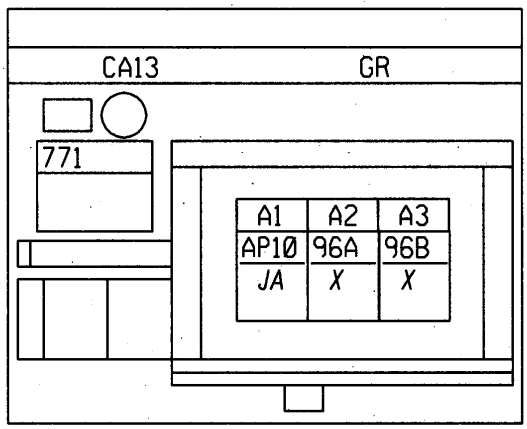

N°	mm²		... → ...
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
A3	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL

PASSENGER EURO BAG (NPU)

S5-S6

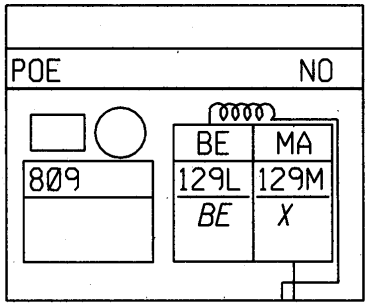

N°	mm²		... → ...
BE	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
MA	.6	129M	- PASSENGER AIRBAG 2 SIGNAL

POWER SUPPLY FUSE PLATE

Erreur lecture ligne dans Fichier Critere Connecteur

S2-S3-S6-S28-S29-S31-S32-S33-S35

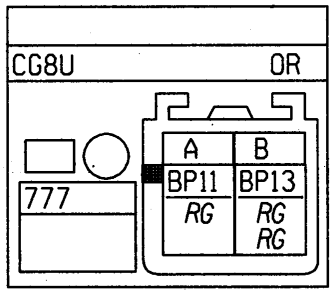

N°	mm²		... ⟶ ...
A	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
B	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

PASSENGER EURO BAG (NPU)

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S6

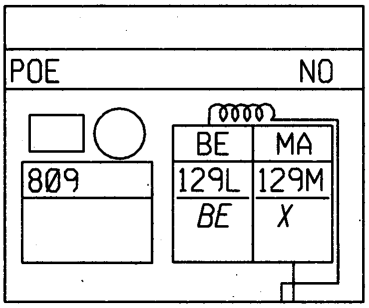

N°	mm²		... ⟶ ...
BE	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
MA	.6	129M	- PASSENGER AIRBAG 2 SIGNAL

PASSENGER EURO BAG (NPU)

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S6

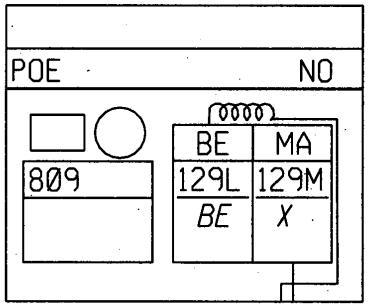

N°	mm²		... → ...
BE	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
MA	.6	129M	- PASSENGER AIRBAG 2 SIGNAL

GEAR LEVER ELECTRO-MAGNET FROM VRLJ 3RD SELECTED

Erreur lecture ligne dans Fichier Critere Connecteur

S8

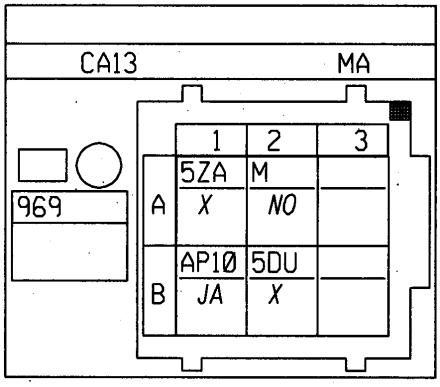

N°	mm²		... → ...
A1	.35	5ZA	UNDERDRIVE CONTROL
B1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	M	EARTH
B2	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL

GEAR LEVER ELECTRO-MAGNET FROM VRLJ 3RD SELECTED

S8

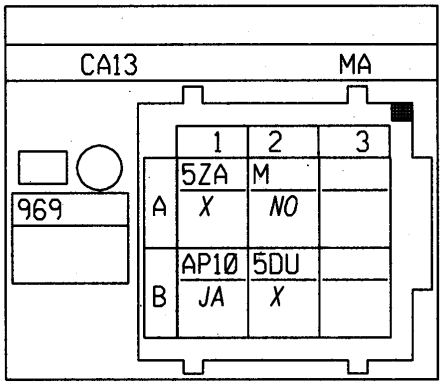

N°	mm²		... → ...
A1	.35	5ZA	UNDERDRIVE CONTROL
B1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	M	EARTH
B2	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL

LPG OR PETROL SELECTOR SWITCH

Erreur lecture ligne dans Fichier Critere Connecteur

S4

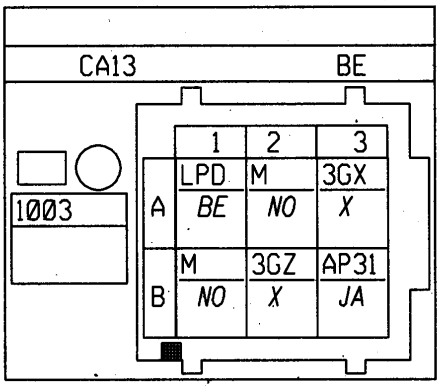

N°	mm²		... ⟶ ...
A1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B1	.35	M	EARTH
A2	.35	M	EARTH
B2	.35	3GZ	+ LIQUEFIED PETROLEUM GAS SELECTION CONTROL
A3	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
B3	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER

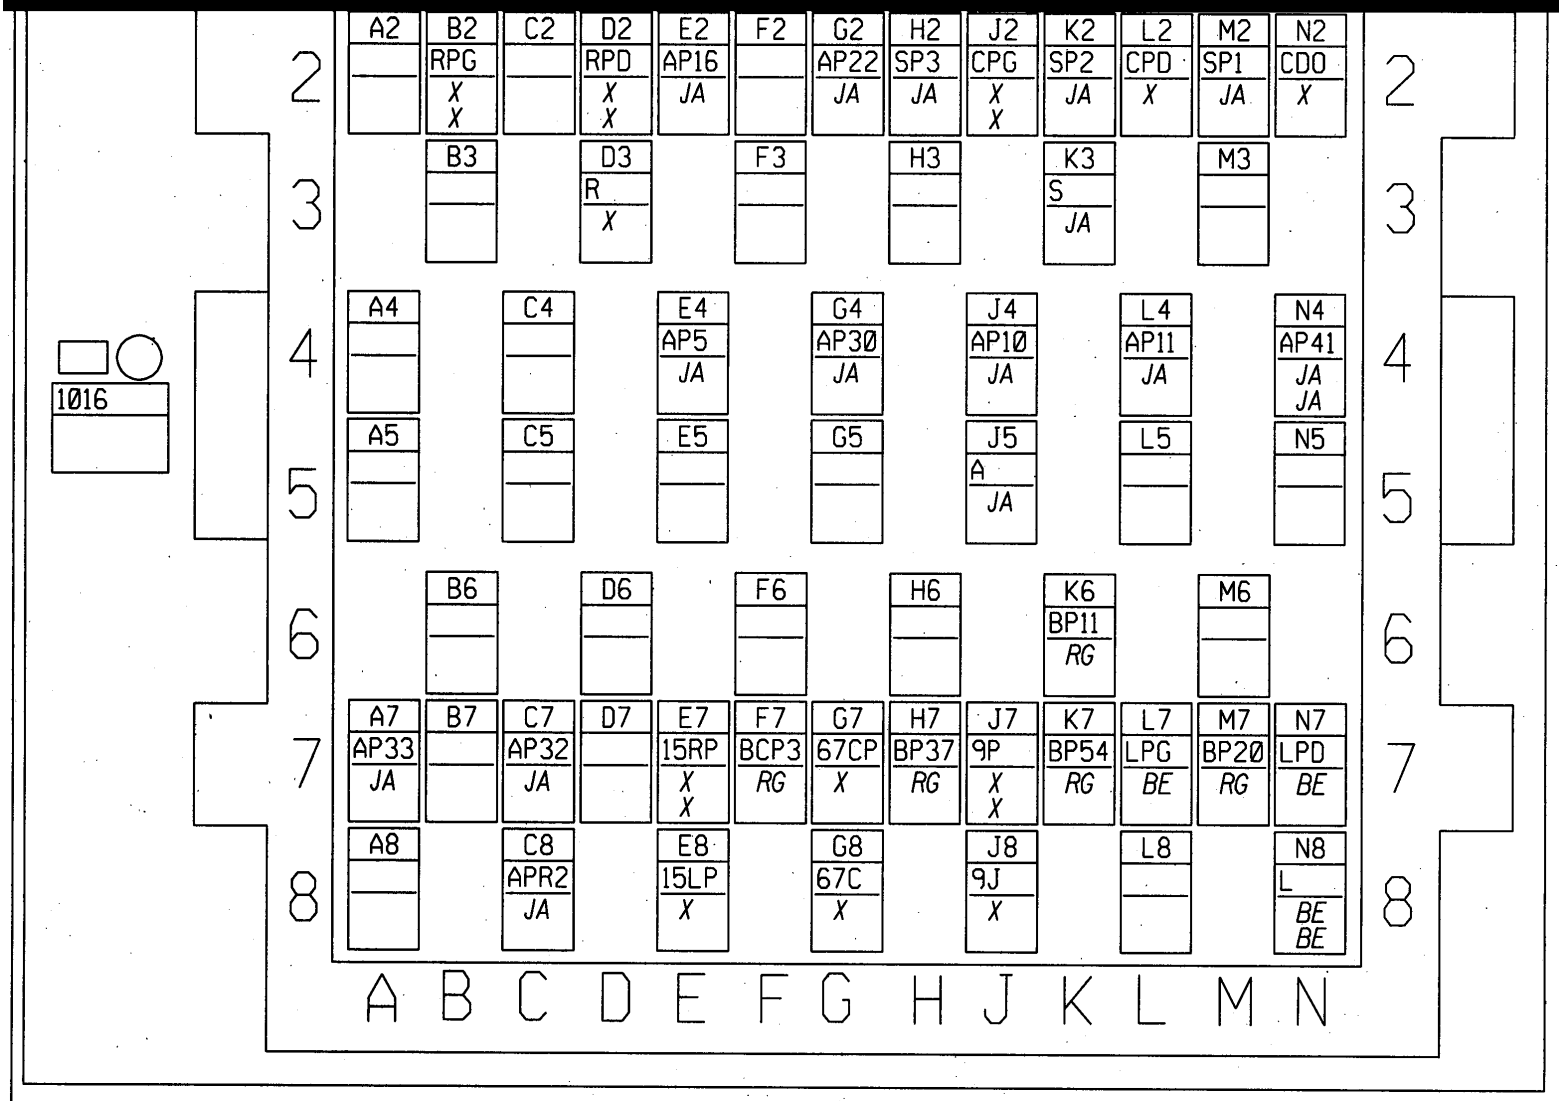
1016
A2
B2
RPG
X
X
C2
D2
RPD
X
X
E2
AP16
JA
F2
G2
AP22
JA
H2
SP3
JA
J2
CPG
X
X
K2
SP2
JA
L2
CPD
X
M2
SP1
JA
N2
CDO
X
B3
D3
R
X
F3
H3
K3
S
JA
M3
A4
C4
E4
AP5
JA
G4
AP30
JA
J4
AP10
JA
L4
AP11
JA
N4
AP41
JA
JA
A5
C5
E5
G5
J5
A
JA
L5
N5
B6
D6
F6
H6
K6
BP11
RG
M6
A7
AP33
JA
B7
C7
AP32
JA
D7
E7
15RP
X
X
F7
BCP3
RG
G7
67CP
X
H7
BP37
RG
J7
9P
X
X
K7
BP54
RG
L7
LPG
BE
M7
BP20
RG
N7
LPD
BE
A8
C8
APR2
JA
E8
15LP
X
G8
67C
X
J8
9J
X
L8
N8
L
BE
BE
2
3
4
5
6
7
8
A B C D E F G H J K L M N

N°	mm²		... ⟶ ...
E1	3	APR1	AFTER-IGNITION RELAY 1
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	.6	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
E2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
G2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
H2	2	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
M2	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
N2	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
N4	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
N4	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
K6	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
C7	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
M7	1	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
N7	1	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C8	3	APR2	AFTER-IGNITION RELAY 2
E8	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	+MAIN BEAM HEADLIGHT
N8	2	L	+MAIN BEAM HEADLIGHT

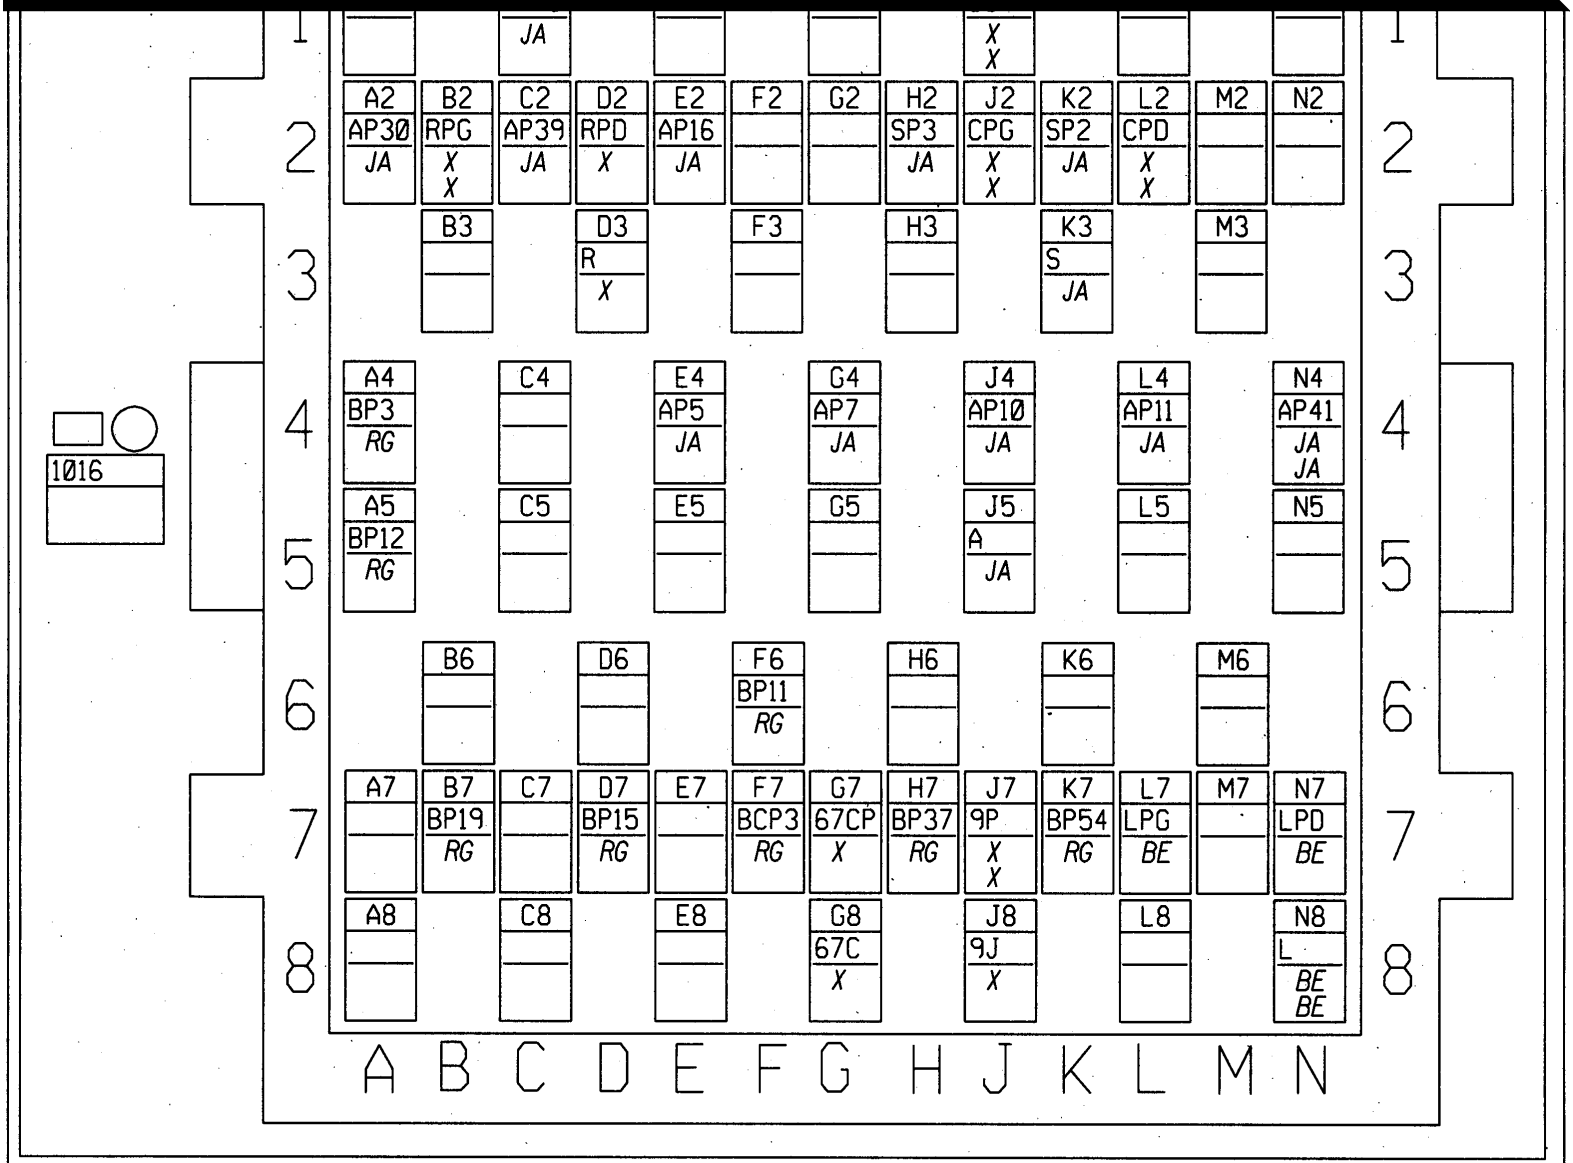
1016
A2 AP30 JA
B2 RPG X X
C2 AP39 JA
D2 RPD X
E2 AP16 JA
F2
G2
H2 SP3 JA
J2 CPG X X
K2 SP2 JA
L2 CPD X X
M2
N2
B3
D3 R X
F3
H3
K3 S JA
M3
A4 BP3 RG
C4
E4 AP5 JA
G4 AP7 JA
J4 AP10 JA
L4 AP11 JA
N4 AP41 JA JA
A5 BP12 RG
C5
E5
G5
J5 A JA
L5
N5
B6
D6
F6 BP11 RG
H6
K6
M6
A7
B7 BP19 RG
C7
D7 BP15 RG
E7
F7 BCP3 RG
G7 67CP X
H7 BP37 RG
J7 9P X X
K7 BP54 RG
L7 LPG BE
M7
N7 LPD BE
A8
C8
E8
G8 67C X
J8 9J X
L8
N8 L BE BE
1 2 3 4 5 6 7 8
A B C D E F G H J K L M N

N°	mm²		... ⟶ ...
C1	3	APR1	AFTER-IGNITION RELAY 1
J1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
J1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
A2	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
C2	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
E2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
H2	2	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
A4	2	BP3	PROTECTED BATTERY CENTRAL DOOR LOCKING
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP7	+ AFTER IGNITION PROTECTED WINDSCREEN WIPER FUSE
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
N4	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
N4	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
A5	2	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
J5	2	A	+ AFTER IGNITION
F6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B7	1	BP19	PROTECTED BATTERY > FLASHER UNIT TIME SWITCH
D7	3	BP15	PROTECTED BATTERY HEATED REAR SCREEN
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
N7	1	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	+MAIN BEAM HEADLIGHT
N8	2	L	+MAIN BEAM HEADLIGHT

PASSENGER COMPARTMENT FUSEBOX

S1-S6-S10-S11

CG2U NO

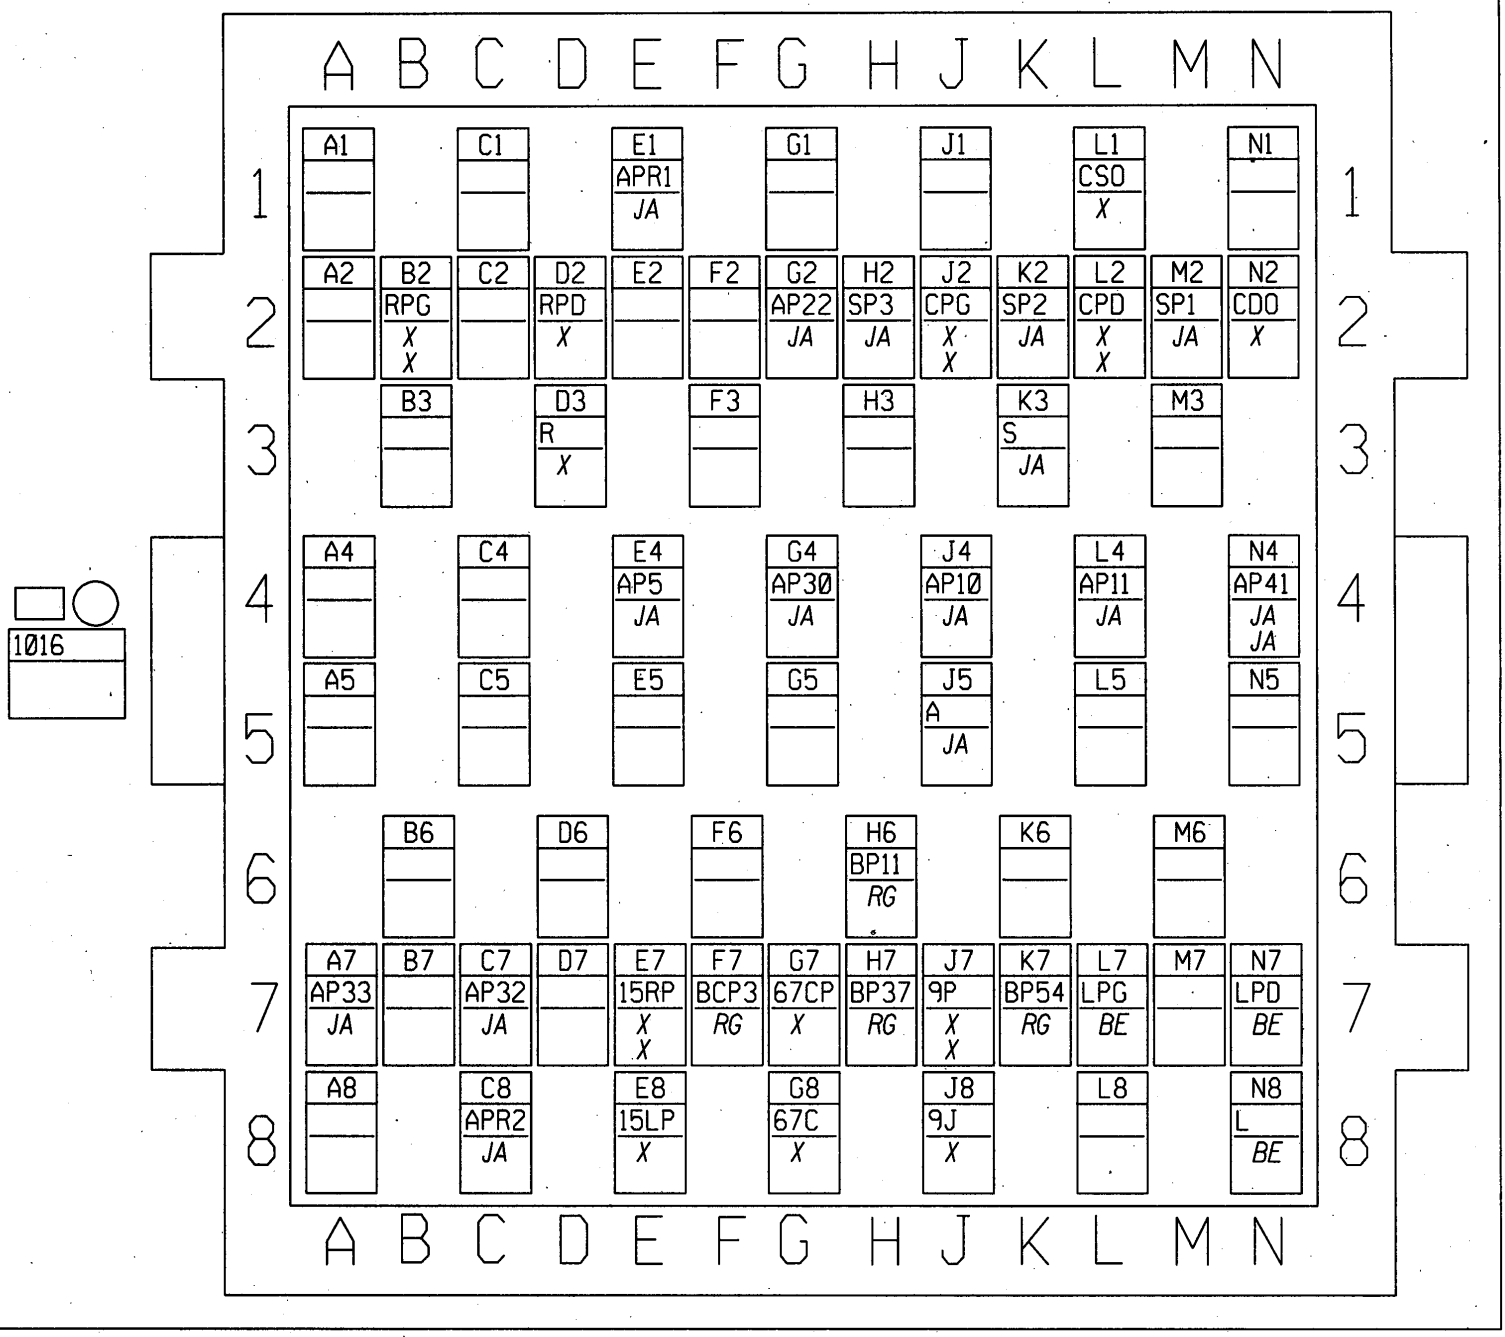

N°	mm²		... ⟶ ...
E1	2	APR1	AFTER-IGNITION RELAY 1
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
G2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
H2	2	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
M2	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
N2	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
N4	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
N4	.35	AP41	+ AFTER IGNITION AIR CONDITIONING COMPUTER FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
H6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
C7	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
N7	1	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C8	3	APR2	AFTER-IGNITION RELAY 2
E8	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	+MAIN BEAM HEADLIGHT

SIDE AIR BAG, HEAD/CHEST, DRIVER'S SIDE

Erreur lecture ligne dans Fichier Critere Connecteur

S8

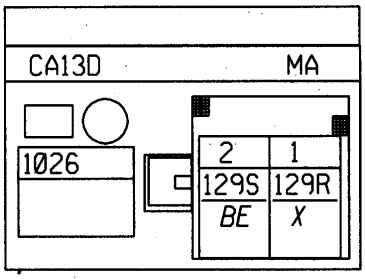

N°	mm²		··· ⟶ ···
1	.6	129R	+ LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
2	.6	129S	- LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL

PASSENGER SIDE AIR BAG FRONT HEAD/CHEST

Erreur lecture ligne dans Fichier Critere Connecteur

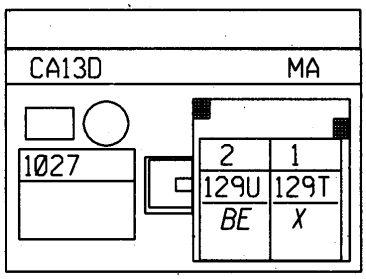

N°	mm²		··· ⟶ ···
1	.6	129T	+ RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
2	.6	129U	- RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL

DRIVER SIDE FRONT SATELLITE CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

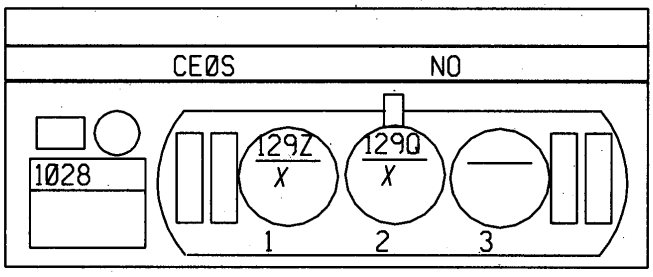

N°	mm²		··· ⟶ ···
1	.35	129Z	+ DRIVER'S SIDE SENSOR SIGNAL
2	.35	129Q	- DRIVER'S SIDE SENSOR

SIDE AIR BAG, HEAD/CHEST, DRIVER'S SIDE

Erreur lecture ligne dans Fichier Critere Connecteur

S8

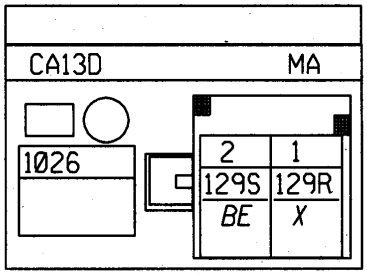

N°	mm²		... ⟶ ...
1	.6	129R	+ LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
2	.6	129S	- LEFT-HAND PASSENGER AIRBAG SUPPLY SIGNAL

PASSENGER SIDE AIR BAG FRONT HEAD/CHEST

Erreur lecture ligne dans Fichier Critere Connecteur

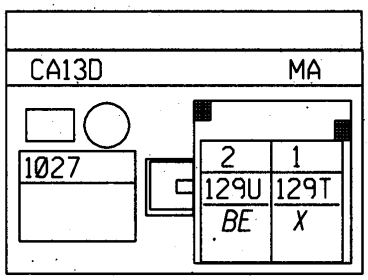

N°	mm²		... ⟶ ...
1	.6	129T	+ RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
2	.6	129U	- RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL

DRIVER SIDE FRONT SATELLITE CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

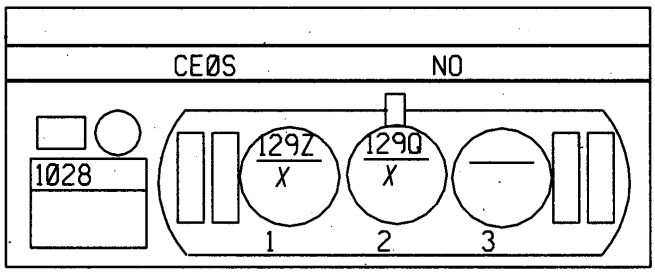

N°	mm²		... ⟶ ...
1	.35	129Z	+ DRIVER'S SIDE SENSOR SIGNAL
2	.35	129Q	- DRIVER'S SIDE SENSOR



N°	mm²		... ⟶ ...
1	.6	129T	+ RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL
2	.6	129U	- RIGHT-HAND PASSENGER AIRBAG SUPPLY SIGNAL

DRIVER SIDE FRONT SATELLITE CONSOLE

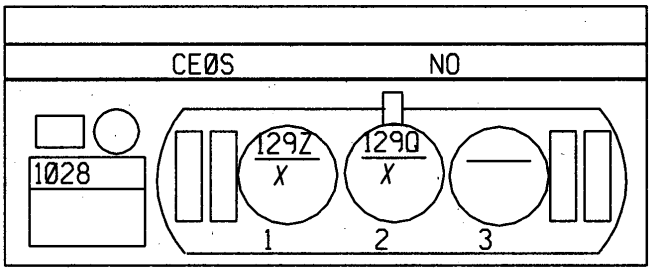

N°	mm²		... ⟶ ...
1	.35	129Z	+ DRIVER'S SIDE SENSOR SIGNAL
2	.35	129Q	- DRIVER'S SIDE SENSOR

PASSENGER SIDE FRONT SATELLITE CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

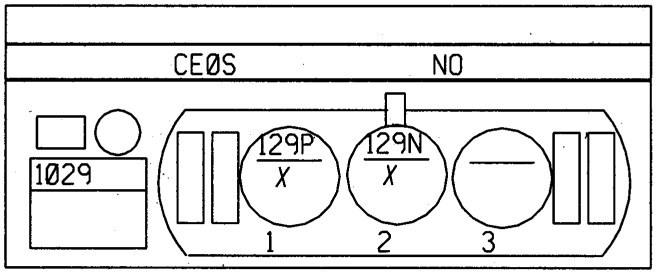

N°	mm²		... ⟶ ...
1	.35	129P	+ PASSENGER'S SIDE SENSOR SIGNAL
2	.35	129N	- PASSENGER'S SIDE SENSOR

RUNNING-LIGHT RELAY MOUNTING

Erreur lecture ligne dans Fichier Critere Connecteur

S6

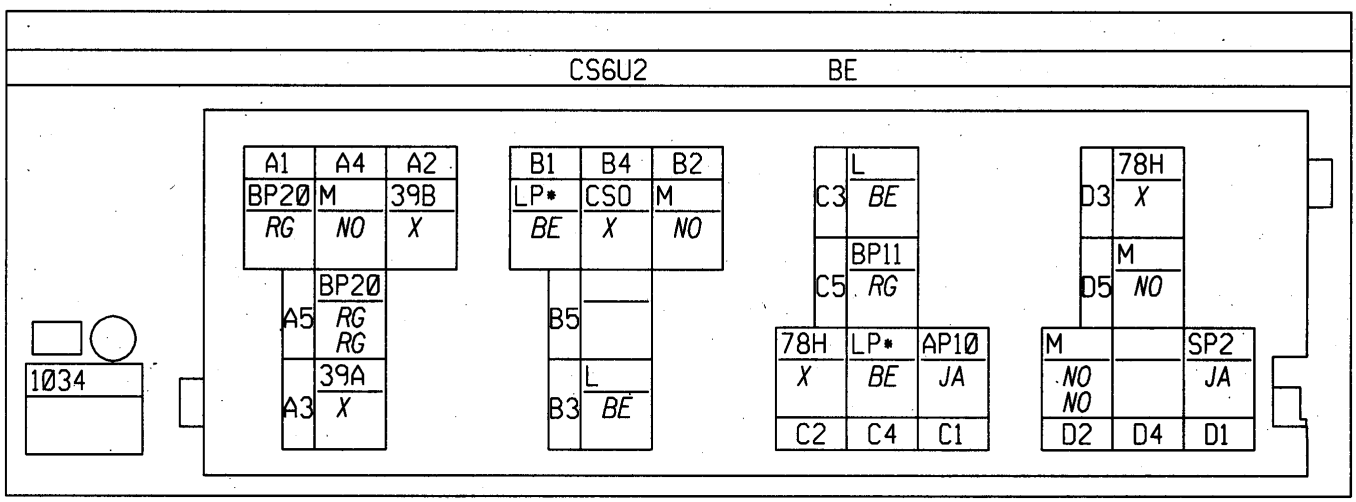

N°	mm²		... ⟶ ...
A1	.35	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
B1	2	LP*	+ PROTECTED MAIN BEAM HEADLIGHT NOT AFFECTED
C1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
D1	.35	SP2	+ PROTECTED CONTROL > RADIO >
A2	.35	39B	- HEADLIGHT WASHER RELAY COIL > TIME SWITCH CONTROL
B2	2	M	EARTH
C2	.35	78H	DAY>NIGHT RELAY CONTROL
D2	.35	M	EARTH
D2	.35	M	EARTH
A3	1	39A	+ HEADLIGHT WASHER PUMP CONTROL
B3	2	L	+MAIN BEAM HEADLIGHT
C3	2	L	+MAIN BEAM HEADLIGHT
D3	.35	78H	DAY>NIGHT RELAY CONTROL
A4	1	M	EARTH
B4	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
C4	2	LP*	+ PROTECTED MAIN BEAM HEADLIGHT NOT AFFECTED
A5	.35	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
A5	1	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
C5	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
D5	.35	M	EARTH

PASSENGER SIDE FRONT SATELLITE CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

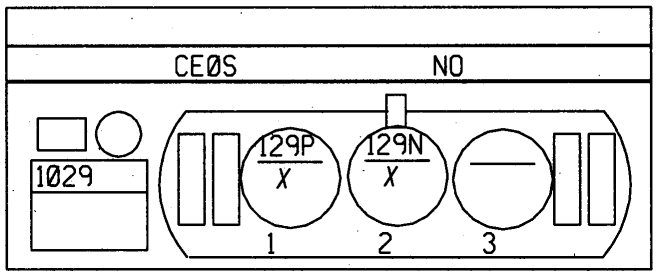

N°	mm²		... ⟶ ...
1	.35	129P	+ PASSENGER'S SIDE SENSOR SIGNAL
2	.35	129N	- PASSENGER'S SIDE SENSOR

RUNNING-LIGHT RELAY MOUNTING

Erreur lecture ligne dans Fichier Critere Connecteur

S6

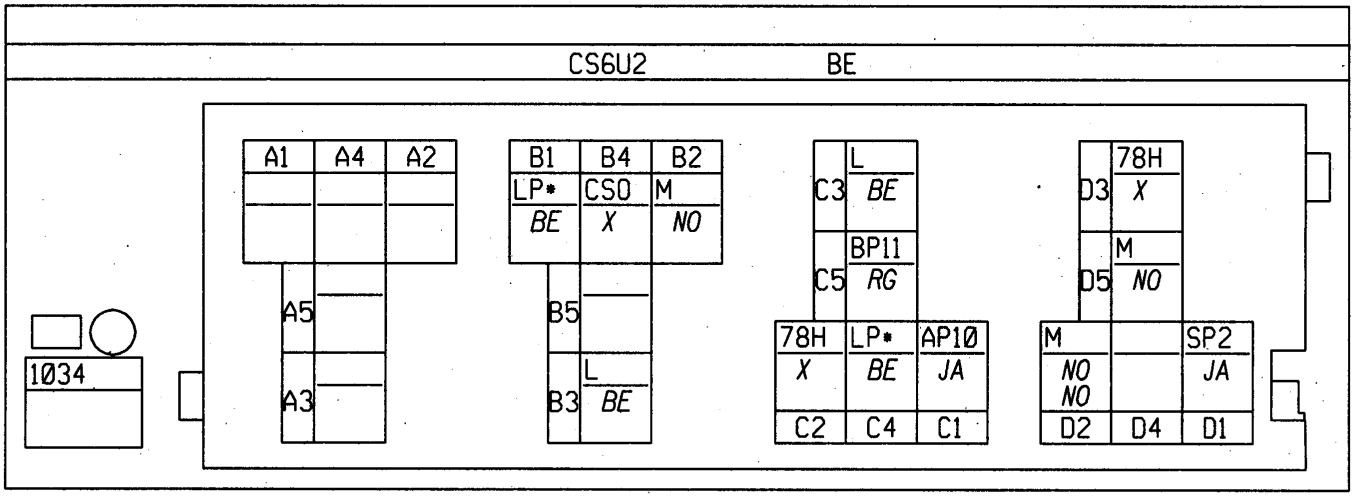

N°	mm²		... ⟶ ...
B1	2	LP*	+ PROTECTED MAIN BEAM HEADLIGHT NOT AFFECTED
C1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
D1	.35	SP2	+ PROTECTED CONTROL > RADIO >
B2	2	M	EARTH
C2	.35	78H	DAY>NIGHT RELAY CONTROL
D2	.35	M	EARTH
D2	.35	M	EARTH
B3	2	L	+MAIN BEAM HEADLIGHT
C3	2	L	+MAIN BEAM HEADLIGHT
D3	.35	78H	DAY>NIGHT RELAY CONTROL
B4	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
C4	2	LP*	+ PROTECTED MAIN BEAM HEADLIGHT NOT AFFECTED
C5	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
D5	.35	M	EARTH

PASSENGER SIDE FRONT SATELLITE CONSOLE

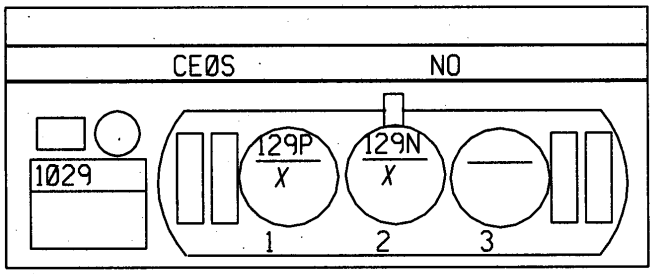

N°	mm²		... → ...
1	.35	129P	+ PASSENGER'S SIDE SENSOR SIGNAL
2	.35	129N	- PASSENGER'S SIDE SENSOR

ECU DIODE / DRIVER'S REBATE

Erreur lecture ligne dans Fichier Critere Connecteur

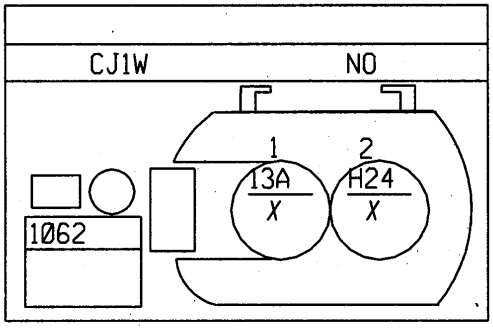

N°	mm²		... ⟶ ...
1	.35	I3A	- INTERIOR LIGHTING > REBATE CONTROL
2	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL

REAR RIGHT-HAND ELECTRIC WINDOW CONTROL

S5-S8

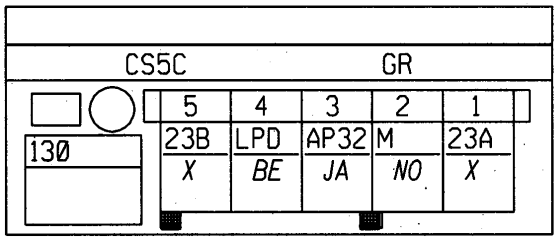

N°	mm²		... ⟶ ...
1	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
2	2	M	EARTH
3	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
4	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
5	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING

LEFT-HAND ELECTRIC WINDOW CONTROL

S5-S8

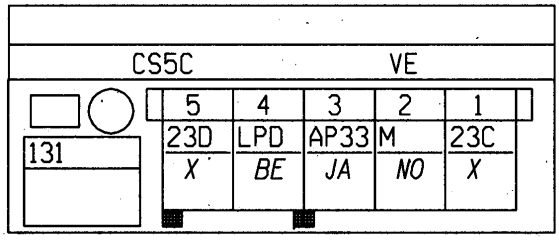

N°	mm²		... ⟶ ...
1	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
2	1.4	M	EARTII
3	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
4	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
5	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-IIAND PANEL OPENING CONTROL

REAR ELECTRIC WINDOW WINDER LOCKING CONTROL

S5

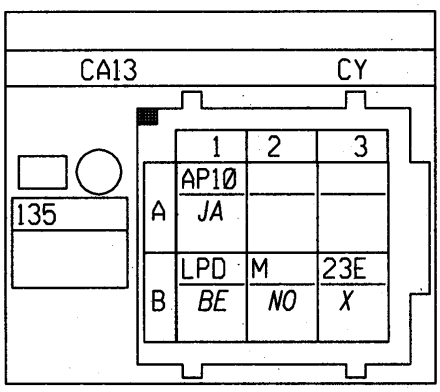

N°	mm²		... ⟶ ...
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B2	.35	M	EARTH
B3	.35	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL

HEATED SEATS CONTROL

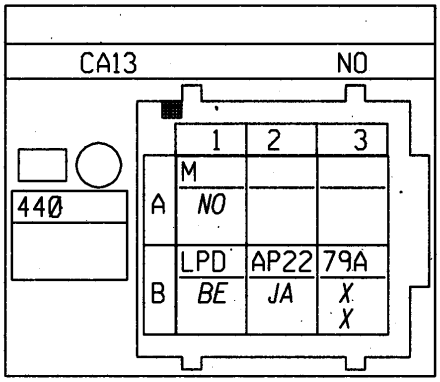

N°	mm²		... ⟶ ...
A1	.35	M	EARTH
B1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B2	.35	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
B3	.35	79A	+ HEATED SEAT CONTROL
B3	.35	79A	+ HEATED SEAT CONTROL

HOOD COVER INTERMEDIATE UNLOCKING

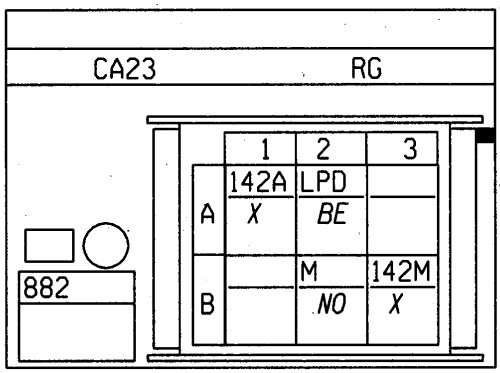

N°	mm²		... ⟶ ...
A1	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
A2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B2	.35	M	EARTH
B3	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL

REAR LEFT ELECTRIC DOOR LOCKING

Erreur lecture ligne dans Fichier Critere Connecteur

S8

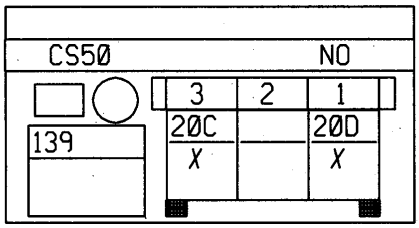

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

LEFT-IIAND REAR WINDOW WINDER MOTOR

Erreur lecture ligne dans Fichier Critere Connecteur

S12-S21

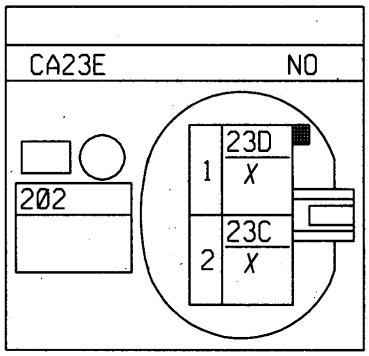

N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL

PASSENGER'S SIDE ELECTRIC WINDOW COMMAND

Erreur lecture ligne dans Fichier Critere Connecteur

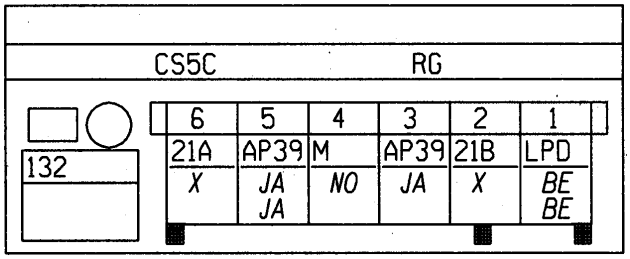

N°	mm²		··· → ···
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
3	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE
4	1.4	M	EARTH
5	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE
5	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE
6	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

ELECTRIC REAR-VIEW MIRROR COMMAND

Erreur lecture ligne dans Fichier Critere Connecteur

S10

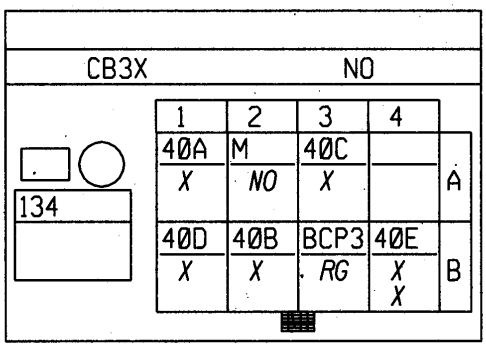

N°	mm²		··· → ···
A1	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
B1	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A2	.35	M	EARTH
B2	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
A3	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
B3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR

ELECTRIC REAR-VIEW MIRROR COMMAND

S10

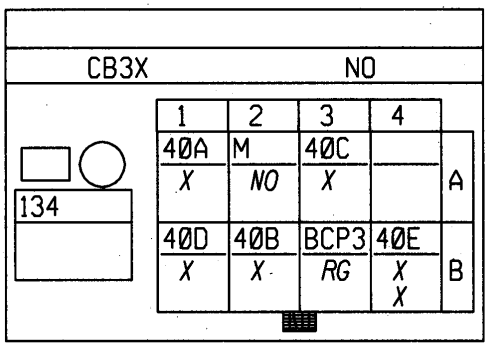

N°	mm²		... ⟶ ...
A1	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
B1	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A2	.35	M	EARTH
B2	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
A3	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
B3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DRIVER'S DOOR ELECTRIC LOCKING

S10

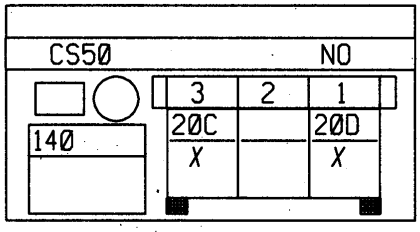

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

FRONT LEFT DOOR SPEAKER

S10

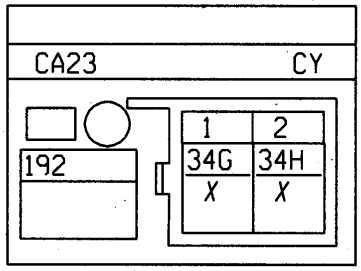

N°	mm²		... ⟶ ...
1	1	34G	SIGNAL+ LH FRONT SPEAKERS
2	1	34H	SIGNAL- LH FRONT SPEAKER

ELECTRIC REAR-VIEW MIRROR COMMAND

S10

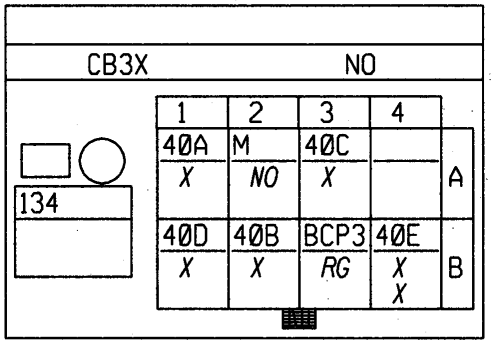

N°	mm²		... ⟶ ...
A1	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
B1	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A2	.35	M	EARTH
B2	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
A3	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
B3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DRIVER'S DOOR ELECTRIC LOCKING

S10

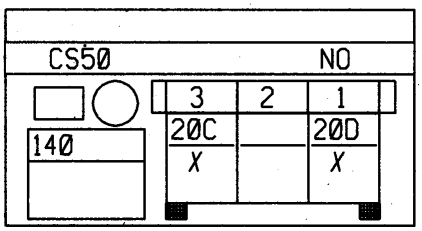

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

FRONT LEFT DOOR SPEAKER

S10

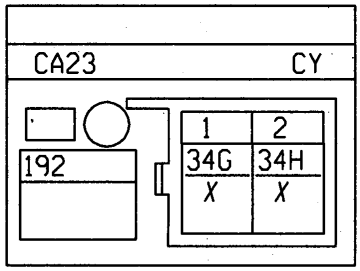

N°	mm²		... ⟶ ...
1	1	34G	SIGNAL+ LH FRONT SPEAKERS
2	1	34H	SIGNAL- LH FRONT SPEAKER

DRIVER'S DOOR ELECTRIC LOCKING
Erreur lecture ligne dans Fichier Critere Connecteur
S10

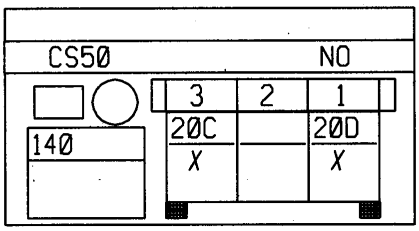

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

DRIVER'S DOOR ELECTRIC LOCKING
Erreur lecture ligne dans Fichier Critere Connecteur
S10

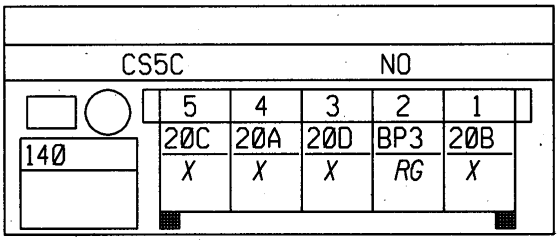

N°	mm²		... ⟶ ...
1	.6	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
2	.6	BP3	PROTECTED BATTERY CENTRAL DOOR LOCKING
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	.6	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

FRONT LEFT DOOR SPEAKER
Erreur lecture ligne dans Fichier Critere Connecteur
S10

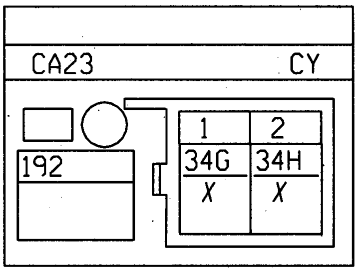

N°	mm²		... ⟶ ...
1	1	34G	SIGNAL+ LH FRONT SPEAKERS
2	1	34H	SIGNAL- LH FRONT SPEAKER

PASSENGER'S SIDE ELECTRIC WINDOW MOTOR

Erreur lecture ligne dans Fichier Critere Connecteur

S10

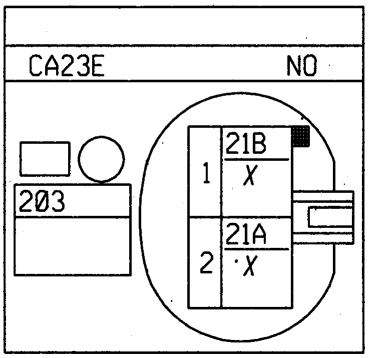

N°	mm²		··· ⟶ ···
1	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR

Erreur lecture ligne dans Fichier Critere Connecteur

S10

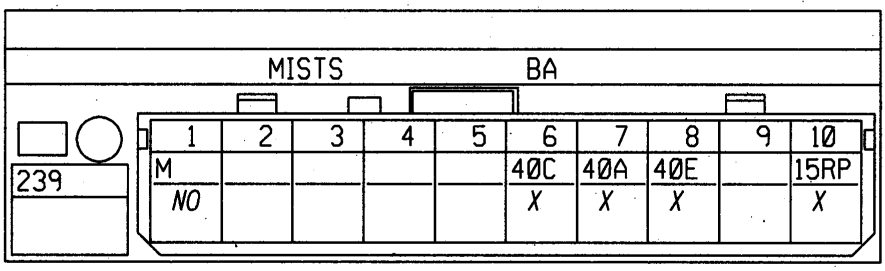

N°	mm²		··· ⟶ ···
1	.35	M	EARTH
6	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
7	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

PASSENGER'S SIDE ELECTRIC WINDOW MOTOR

S10

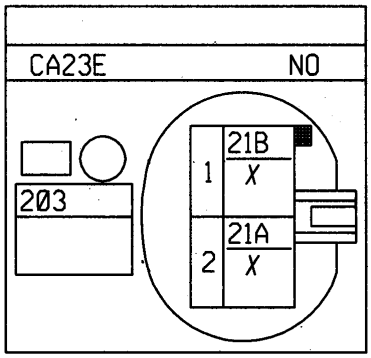

N°	mm²		··· ⟶ ···
1	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR

S10

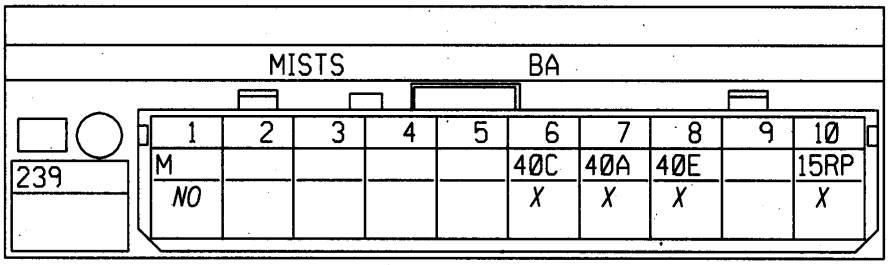

N°	mm²		··· ⟶ ···
1	.35	M	EARTH
6	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
7	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

PASSENGER'S SIDE ELECTRIC WINDOW MOTOR

S10

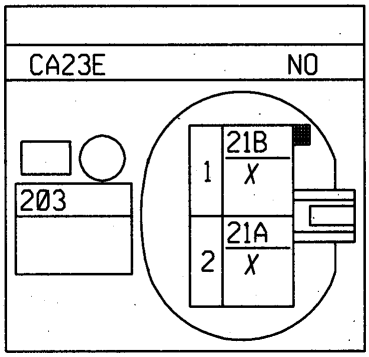

N°	mm²		... → ...
1	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR

S10

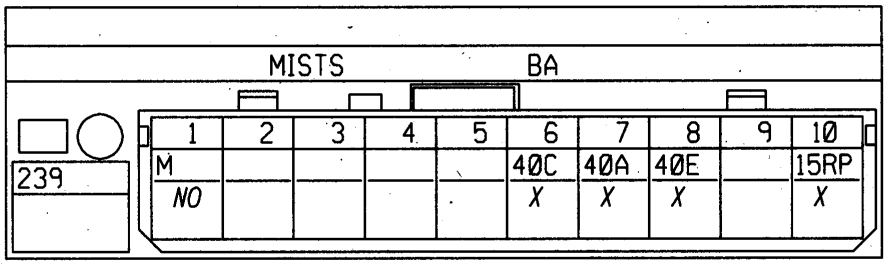

N°	mm²		... → ...
1	.35	M	EARTH
6	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
7	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW

Erreur lecture ligne dans Fichier Critere Connecteur

S10

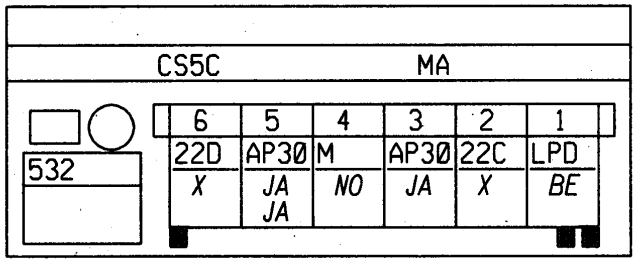

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
3	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
4	2	M	EARTH
5	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
5	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
6	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL

DRIVER'S PULSE ELECTRIC WINDOWS CONTROL

Erreur lecture ligne dans Fichier Critere Connecteur

S10

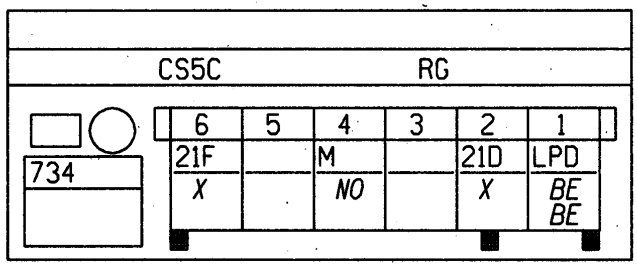

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
4	.35	M	EARTH
6	.35	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL

DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW

S10

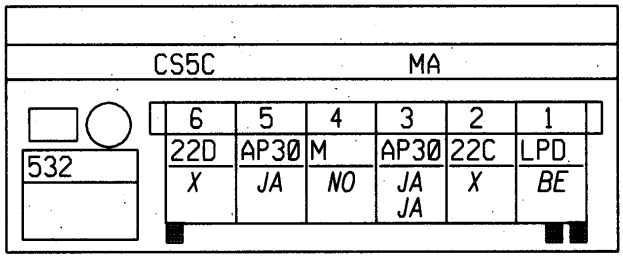

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
3	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
3	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
4	.35	M	EARTH
5	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
6	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL

DRIVER'S PULSE ELECTRIC WINDOWS CONTROL

S10

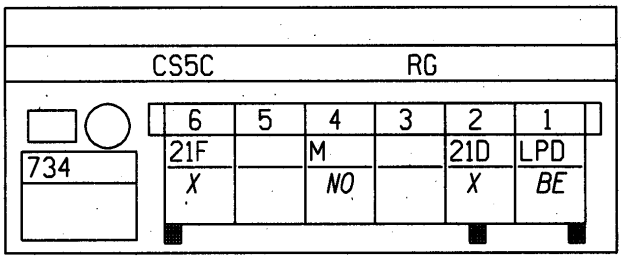

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.6	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
4	.6	M	EARTH
6	.6	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL

DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW

S10

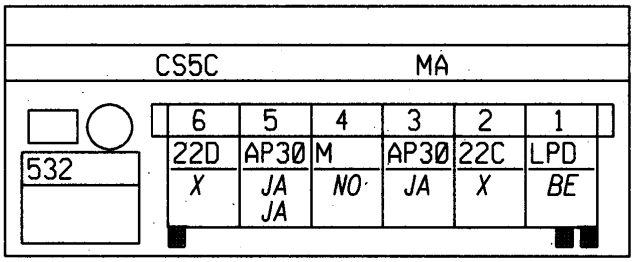

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
3	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
4	2	M	EARTH
5	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
5	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
6	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL

DRIVER'S PULSE ELECTRIC WINDOWS CONTROL

S10

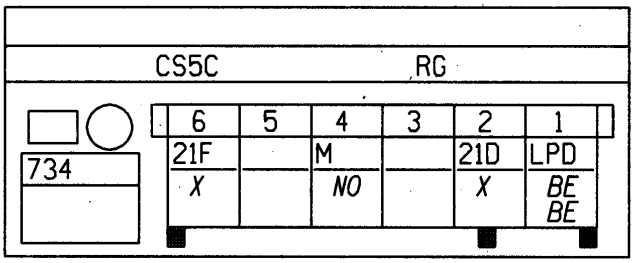

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
4	.35	M	EARTH
6	.35	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL

ELECTRICAL BOOT LOCKING

S15-S18-S20-S23-S26

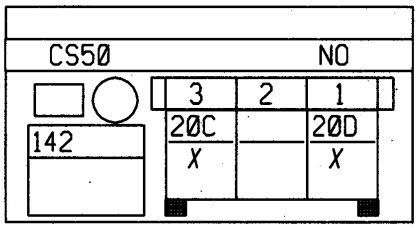

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCH

S15-S18-S20-S23-S26

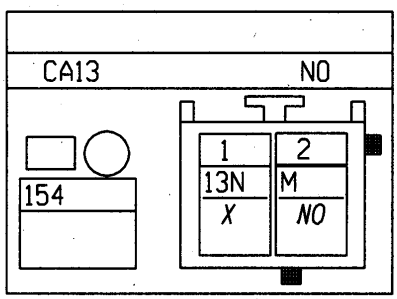

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

RAISED BRAKE LIGHTS

S15-S18-S19-S23-S24-S26

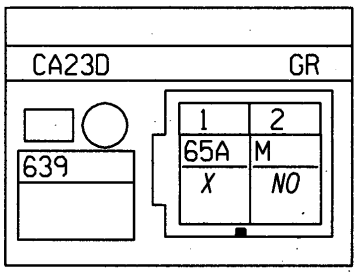

N°	mm²		... ⟶ ...
1	.35	65A	+ BRAKE LIGHTS CONTROL
2	.35	M	EARTH

DRIVER'S SIDE ELECTRIC WINDOW COMMAND
Erreur lecture ligne dans Fichier Critere Connecteur
S11

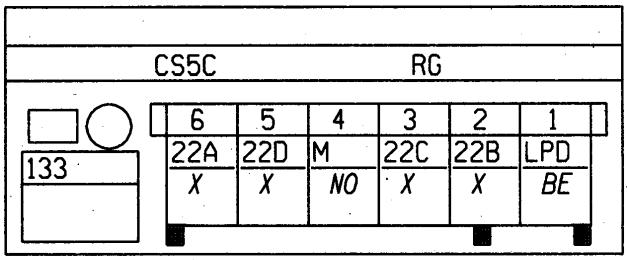

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
3	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
4	2	M	EARTH
5	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
6	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

CENTRAL LOCKING FOR PASSENGER DOOR
Erreur lecture ligne dans Fichier Critere Connecteur
S11

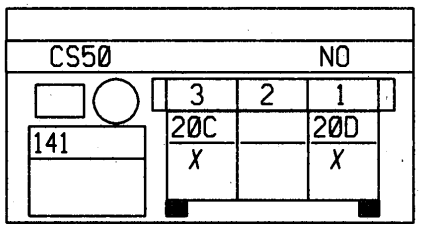

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

RH FRONT DOOR SPEAKER
Erreur lecture ligne dans Fichier Critere Connecteur
S11

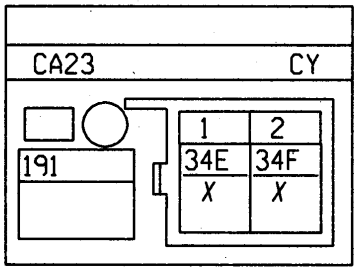

N°	mm²		... ⟶ ...
1	1	34E	SIGNAL+ RH FRONT SPEAKER
2	1	34F	SIGNAL- RH FRONT SPEAKER

DRIVER'S SIDE ELECTRIC WINDOW COMMAND

S11

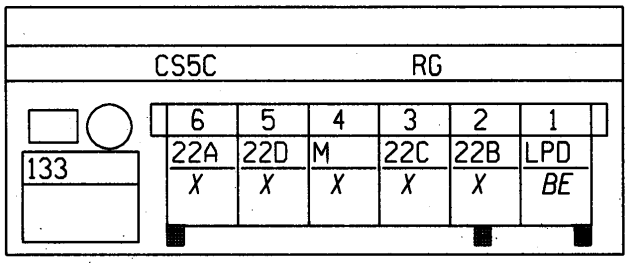

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
3	.6	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
4	.6	M	EARTH
5	.6	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
6	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

CENTRAL LOCKING FOR PASSENGER DOOR

S11

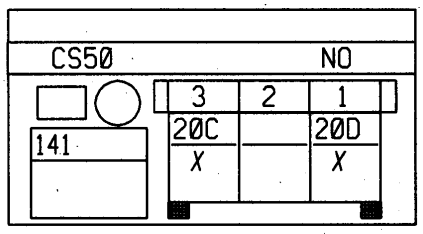

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

RH FRONT DOOR SPEAKER

S11

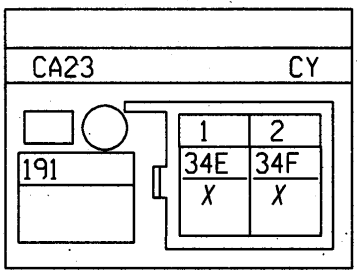

N°	mm²		... ⟶ ...
1	1	34E	SIGNAL+ RH FRONT SPEAKER
2	1	34F	SIGNAL- RH FRONT SPEAKER

DRIVER'S SIDE ELECTRIC WINDOW COMMAND

S11

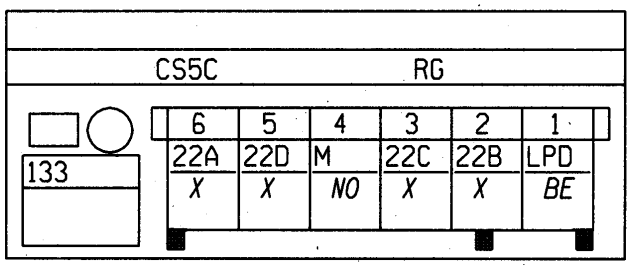

N°	mm²		... ⟶ ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
3	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
4	2	M	EARTH
5	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
6	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

CENTRAL LOCKING FOR PASSENGER DOOR

S11

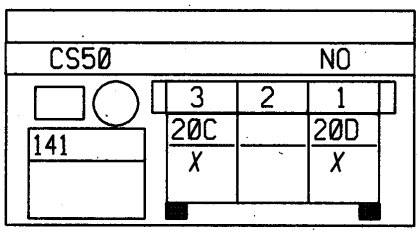

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

RH FRONT DOOR SPEAKER

S11

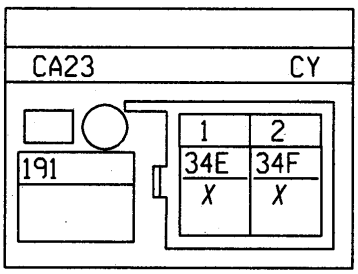

N°	mm²		... ⟶ ...
1	1	34E	SIGNAL+ RH FRONT SPEAKER
2	1	34F	SIGNAL- RH FRONT SPEAKER

PASSENGER ELECTRIC WINDOW MOTOR

Erreur lecture ligne dans Fichier Critere Connecteur

S11

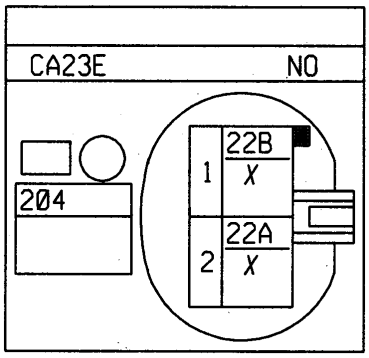

N°	mm²		... → ...
1	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
2	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

PASSENGER ELECTRIC REAR VIEW MIRROR

Erreur lecture ligne dans Fichier Critere Connecteur

S2-S11

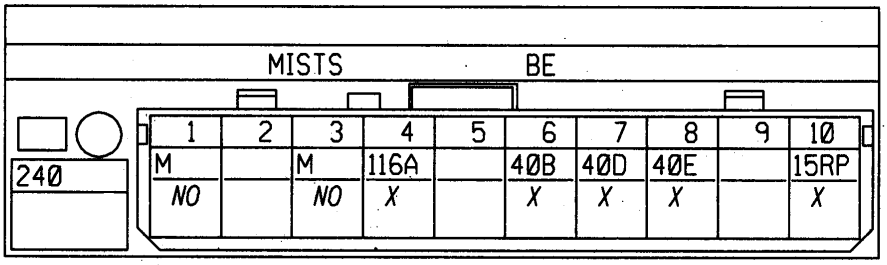

N°	mm²		... → ...
1	.35	M	EARTH
3	.35	M	EARTH
4	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
6	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
7	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

PASSENGER ELECTRIC WINDOW MOTOR

S11

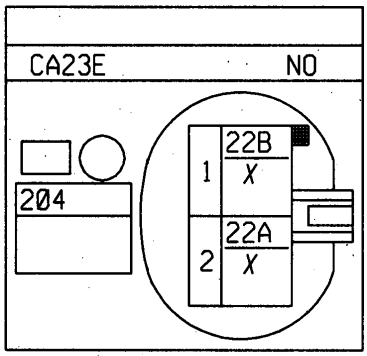

N°	mm²		... → ...
1	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
2	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

PASSENGER ELECTRIC REAR VIEW MIRROR

S2-S11

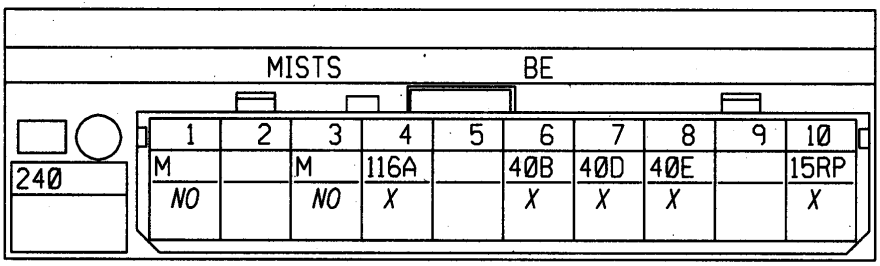

N°	mm²		... → ...
1	.35	M	EARTH
3	.35	M	EARTH
4	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
6	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
7	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

PASSENGER ELECTRIC WINDOW MOTOR

S11

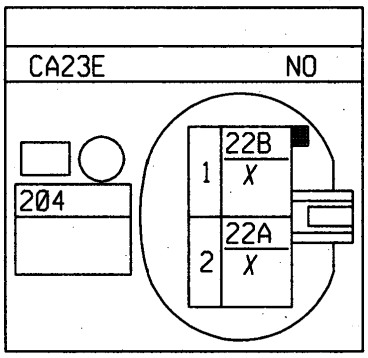

N°	mm²		... ⟶ ...
1	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
2	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

PASSENGER ELECTRIC REAR VIEW MIRROR

S2-S11

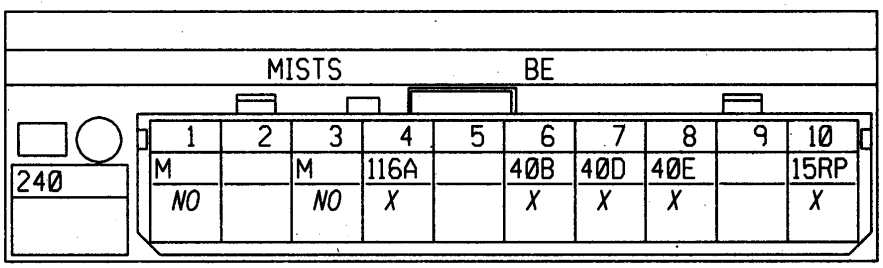

N°	mm²		... ⟶ ...
1	.35	M	EARTH
3	.35	M	EARTH
4	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
6	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
7	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

WINDSCREEN WIPER MOTOR

S2

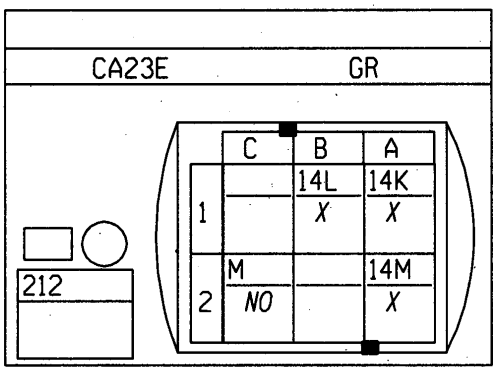

N°	mm²		... → ...
A1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
B1	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
A2	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
C2	1.4	M	EARTH

BASE FAN ASSEMBLY AND AIR CONDITIONING

S2-S6

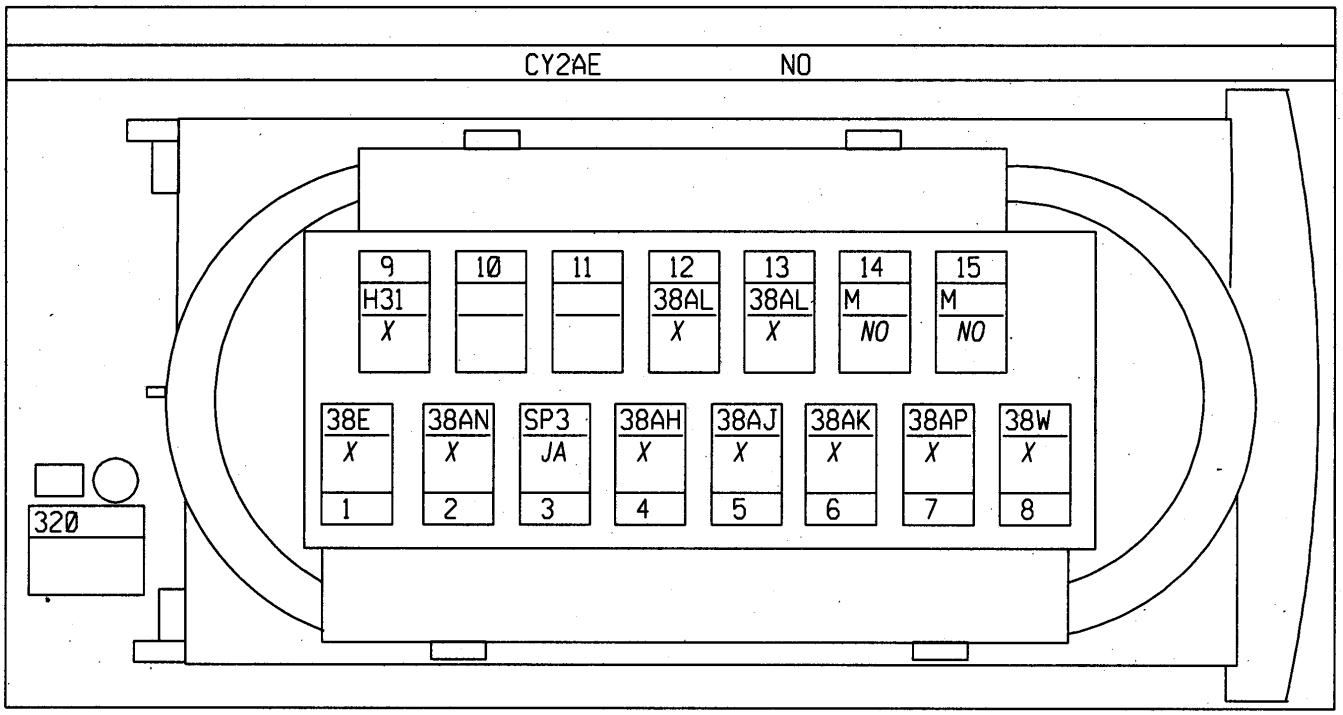

N°	mm²		... → ...
1	.35	38E	+ AIR CONDITIONING RECIRCULATION
2	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	SP3	+ PROTECTED CONTROL > HEATING
4	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
5	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
6	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
7	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
8	.35	38W	- FREON PRESSURE SENSOR (AC)
9	.35	H31	FAN UNIT VOLTAGE SIGNAL
12	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
13	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
14	1.4	M	EARTH
15	1.4	M	EARTH

POWER SUPPLY FUSE PLATE

S2-S3-S6-S28-S29-S31-S32-S33-S35

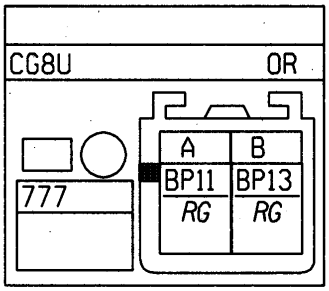

N°	mm²		... → ...
A	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

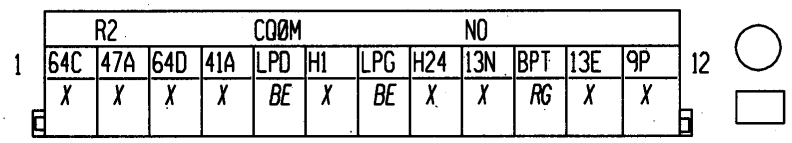

N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
6	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
7	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

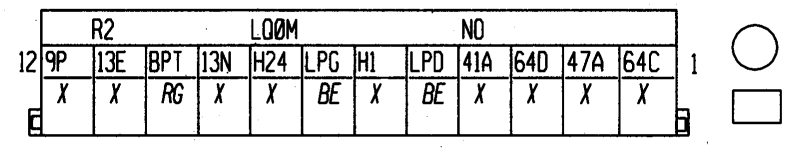

N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
6	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
7	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

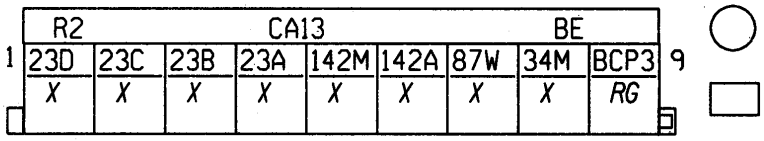

N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
3	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
4	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
5	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL
6	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
7	.35	87W	FLAP NOTCH MODULE SWITCH 1 SIGNAL
8	.35	34M	+ ANTENNA CONTROL
9	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

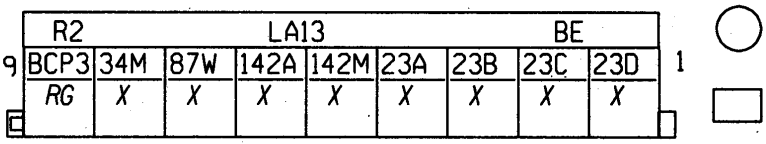

N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
3	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
4	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
5	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL
6	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
7	.35	87W	FLAP NOTCH MODULE SWITCH 1 SIGNAL
8	.35	34M	+ ANTENNA CONTROL
9	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

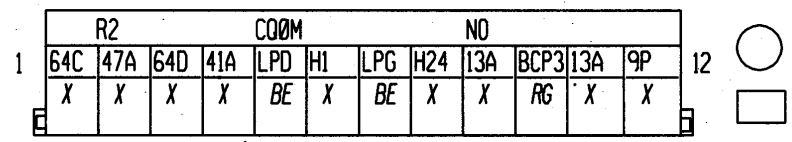

N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
6	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
7	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13A	- INTERIOR LIGHTING > REBATE CONTROL
10	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
11	.35	13A	- INTERIOR LIGHTING > REBATE CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

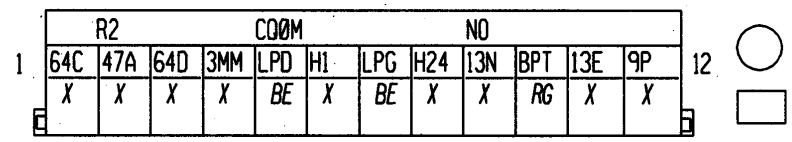

N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	3MM	FUEL GAUGE LEVEL > LIQUEFIED PETROLEUM GAS ECU SIGNAL
5	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
6	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
7	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

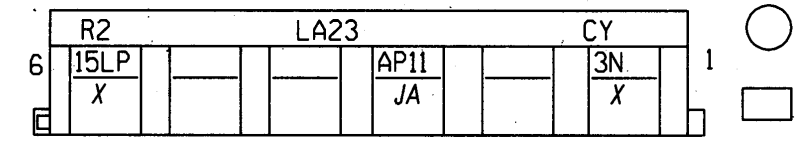

N°	mm²		... ⟶ ...
1	1.4	3N	+ FUEL PUMP>
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
6	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

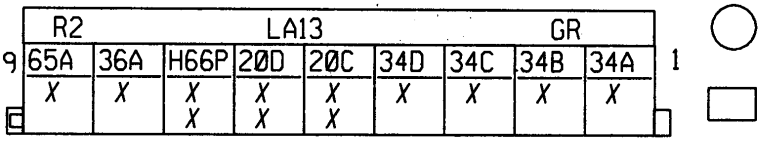

N°	mm²		... ⟶ ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.6	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

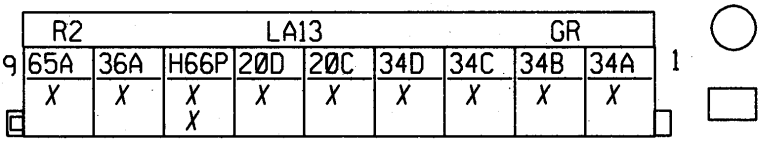

N°	mm²		... ⟶ ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	1.4	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	1.4	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.6	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

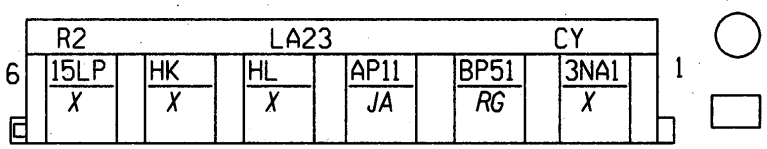

N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
2	4	BP51	+ BATTERY PROTECTION > HOOD
3	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
4	.35	HL	DIAGNOSTIC SIGNAL L
5	.35	HK	DIAGNOSTIC SIGNAL K
6	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

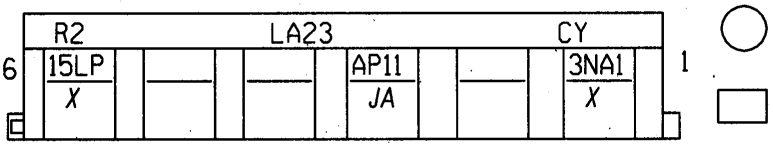

N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
6	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

DASHBOARD/LH REAR

Erreur lecture ligne dans Fichier Critere Connecteur

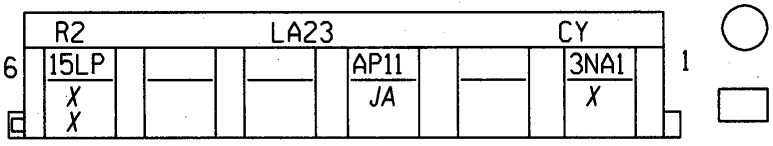

N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
6	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
6	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

DASHBOARD/DRIVER'S DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

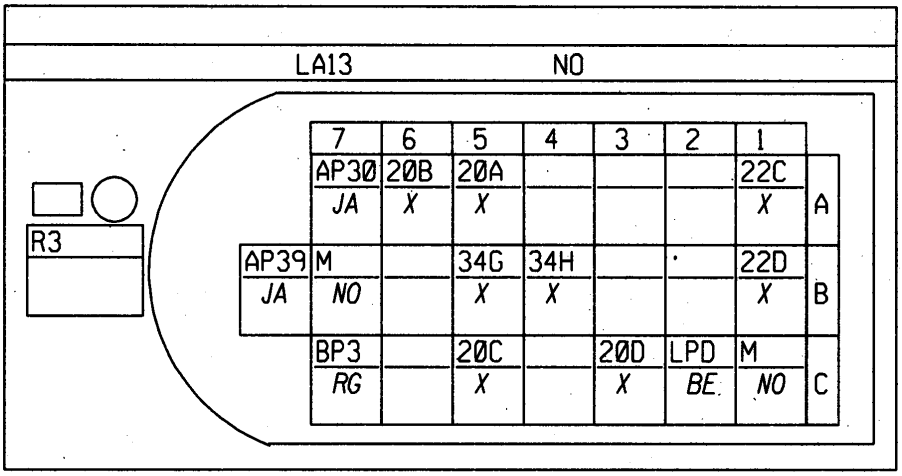

N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34H	SIGNAL- LH FRONT SPEAKER
A5	.6	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
A6	.6	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	1.4	M	EARTH
C7	.6	BP3	PROTECTED BATTERY CENTRAL DOOR LOCKING
B8	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE

DASHBOARD/DRIVER'S DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

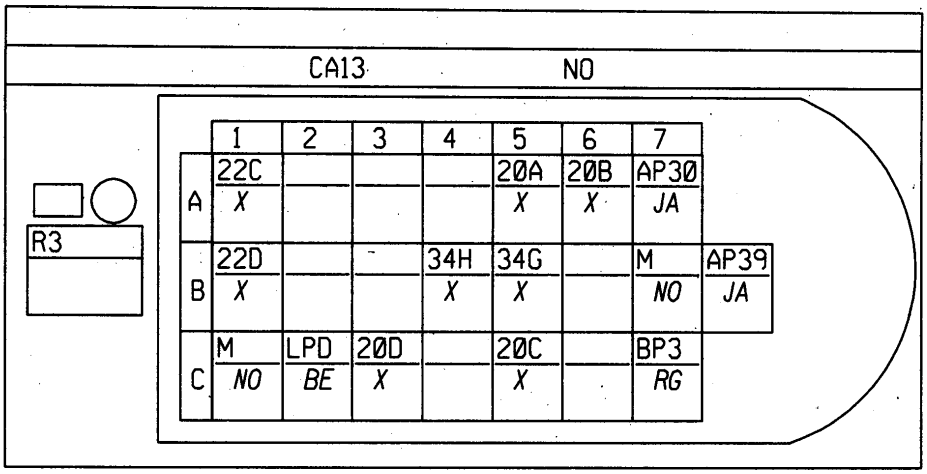

N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34H	SIGNAL- LH FRONT SPEAKER
A5	.6	20A	+ CENTRAL DOOR LOCKING CLOSING TIMER SWITCH CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
A6	.6	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	1.4	M	EARTH
C7	.6	BP3	PROTECTED BATTERY CENTRAL DOOR LOCKING
B8	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE

DASHBOARD/DRIVER'S DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

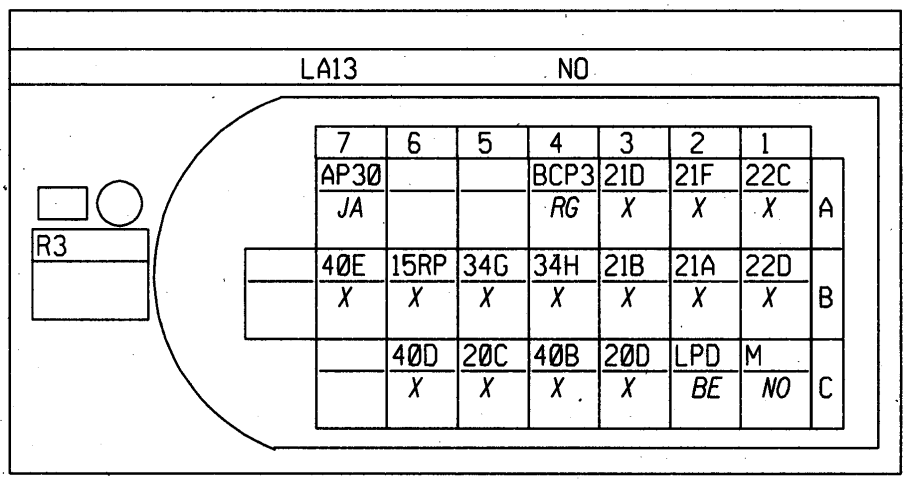

N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
A2	.35	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
A3	.35	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/DRIVER'S DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

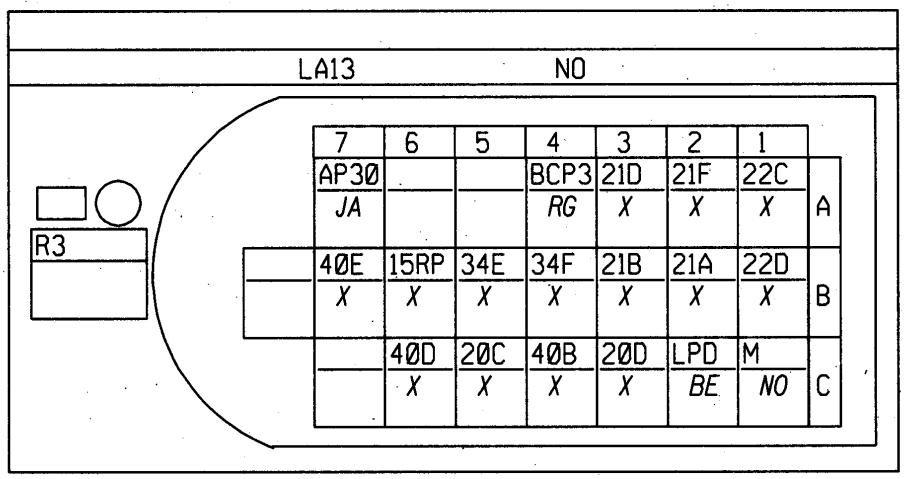

N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
A2	.6	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
A3	.6	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34F	SIGNAL- RH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/DRIVER'S DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

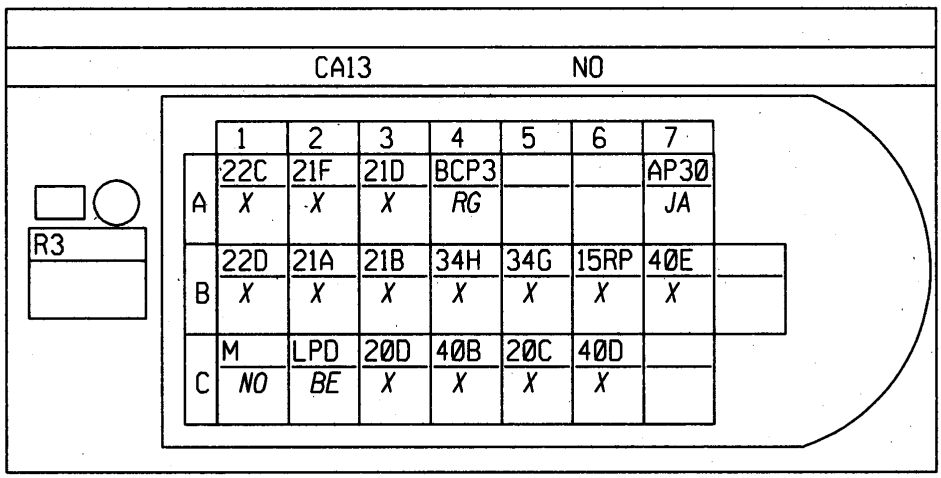

N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
A2	.35	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
A3	.35	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/DRIVER'S DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

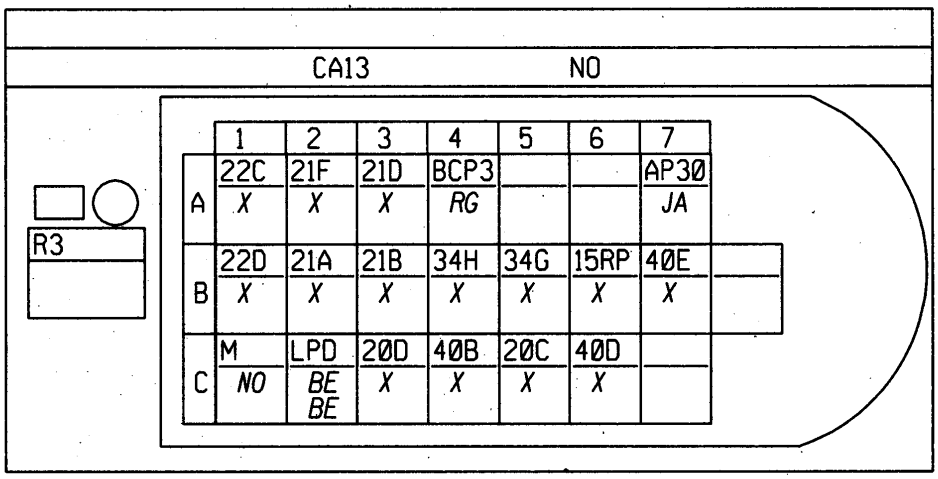

N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	1	M	EARTH
A2	.6	21F	- LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
A3	.6	21D	- RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/FRONT PASSENGER DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

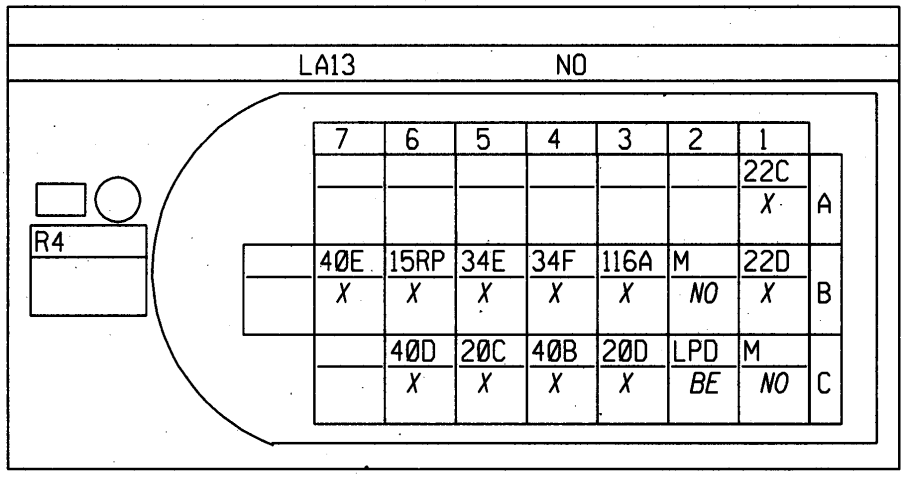

N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
B2	.35	M	EARTH
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34F	SIGNAL- RH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/FRONT PASSENGER DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

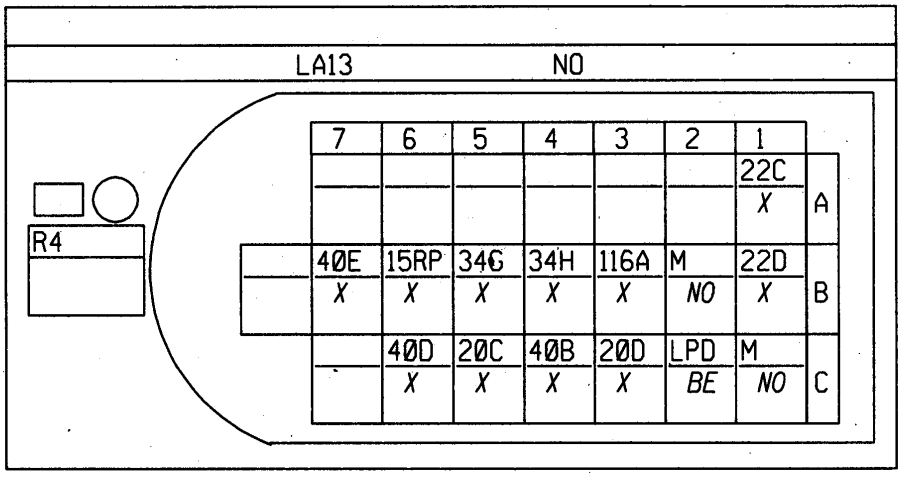

N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
B2	.35	M	EARTH
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

Erreur lecture ligne dans Fichier Critere Connecteur

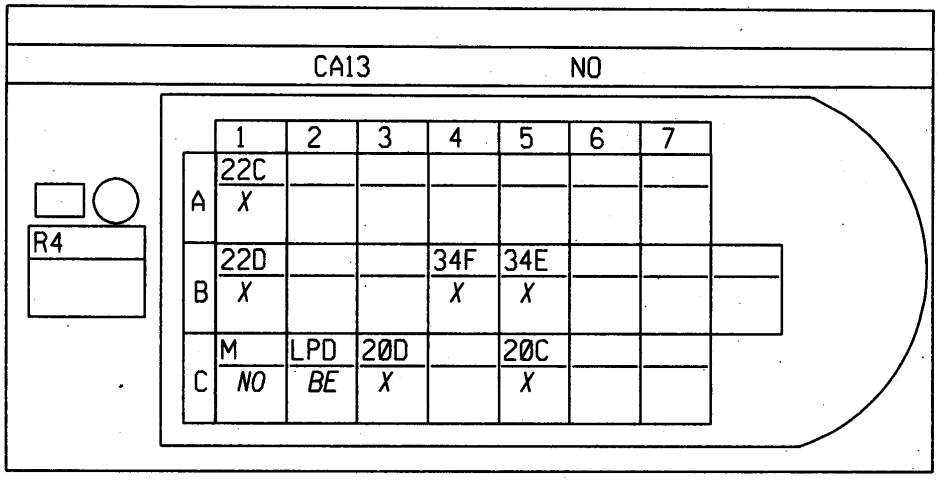

N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34F	SIGNAL- RH FRONT SPEAKER
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

DASHBOARD/FRONT PASSENGER DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

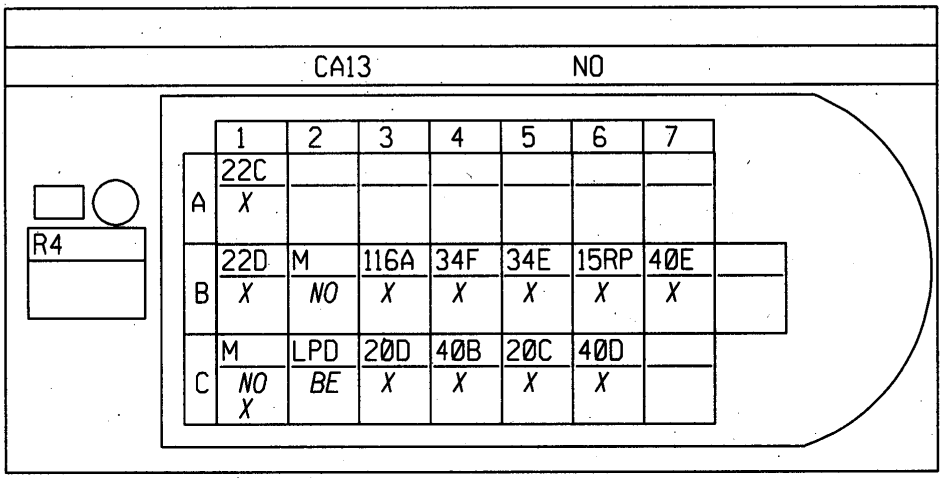

N°	mm²		... ⟶ ...
A1	.6	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	.6	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	.35	M	EARTH
C1	.6	M	EARTH
B2	.35	M	EARTH
C2	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34F	SIGNAL- RH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

INSTRUMENT PANEL/FRONT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

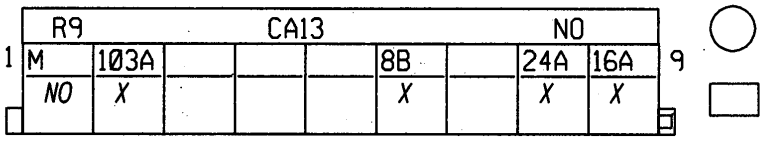

N°	mm²		... ⟶ ...
1	.6	M	EARTH
2	.6	103A	HEADLAMP POSITIONING CONTROL
6	1	8B	+ FRONT FOG LIGHTS > RELAY
8	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
9	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL

INSTRUMENT PANEL/FRONT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

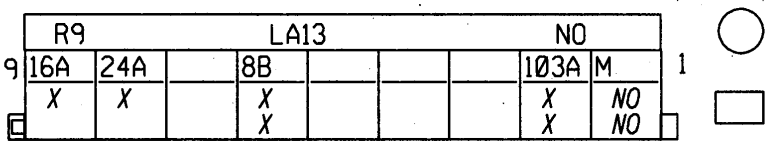

N°	mm²		... ⟶ ...
1	.6	M	EARTH
1	.6	M	EARTH
2	.6	103A	HEADLAMP POSITIONING CONTROL
2	.6	103A	HEADLAMP POSITIONING CONTROL
8	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
9	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
6	.6	8B	+ FRONT FOG LIGHTS > RELAY
6	.6	8B	+ FRONT FOG LIGHTS > RELAY

INSTRUMENT PANEL/FRONT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

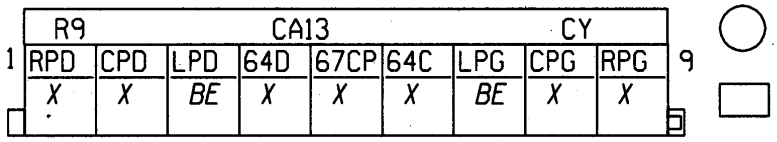

N°	mm²		... → ...
1	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
4	.35	64D	RH FRONT INDICATOR CONTROL
5	2	67CP	+ HORN > FUSE CONTROL
6	.35	64C	LH INDICATOR CONTROL
7	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

INSTRUMENT PANEL/FRONT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

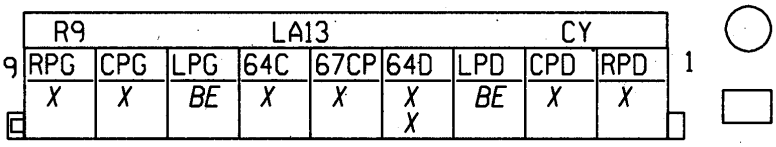

N°	mm²		... → ...
1	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.6	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
4	.35	64D	RH FRONT INDICATOR CONTROL
4	.35	64D	RH FRONT INDICATOR CONTROL
5	2	67CP	+ HORN > FUSE CONTROL
6	.35	64C	LH INDICATOR CONTROL
7	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

INSTRUMENT PANEL/FRONT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

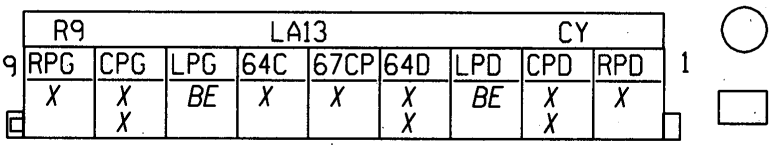

N°	mm²		... → ...
1	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
4	.35	64D	RH FRONT INDICATOR CONTROL
4	.35	64D	RH FRONT INDICATOR CONTROL
5	2	67CP	+ HORN > FUSE CONTROL
6	.35	64C	LH INDICATOR CONTROL
7	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
8	.6	CPG	+ LH PROTECTED DIPPED HEADLIGHT
8	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

LH REAR/LH REAR DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

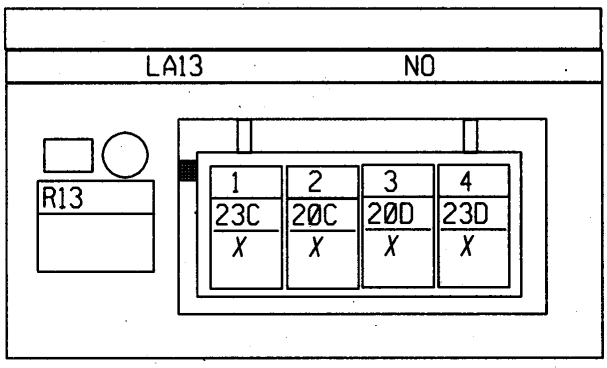

N°	mm²		... ⟶ ...
1	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
2	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL

LH REAR/LH REAR DOOR

Erreur lecture ligne dans Fichier Critere Connecteur

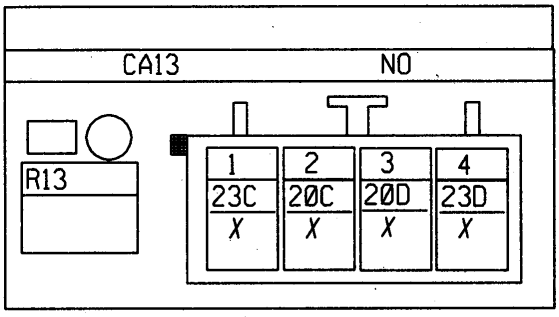

N°	mm²		... ⟶ ...
1	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
2	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL

RH REAR/LEFT-HAND TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

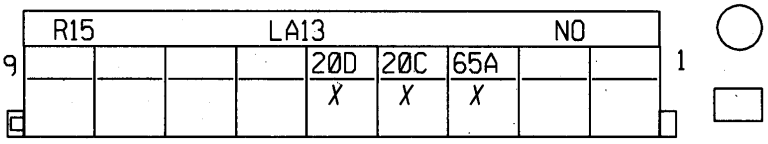

N°	mm²		... → ...
3	.35	65A	+ BRAKE LIGHTS CONTROL
4	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RH REAR/LEFT-HAND TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

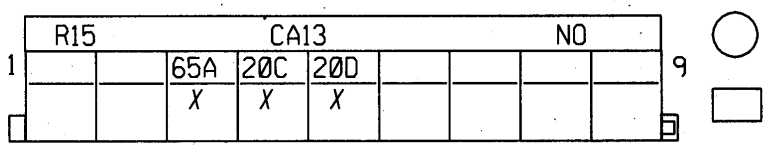

N°	mm²		... → ...
3	.35	65A	+ BRAKE LIGHTS CONTROL
4	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RH REAR/LEFT-HAND TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

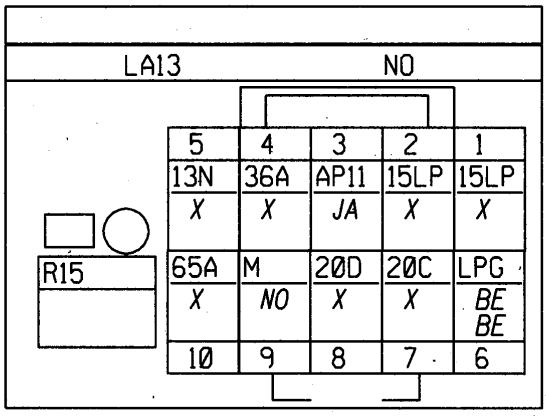

N°	mm²		··· ⟶ ···
1	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
4	1	36A	+ REAR WIPER CONTROL
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
6	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
7	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
8	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
9	1	M	EARTH
10	.35	65A	+ BRAKE LIGHTS CONTROL

RH REAR/LEFT-HAND TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

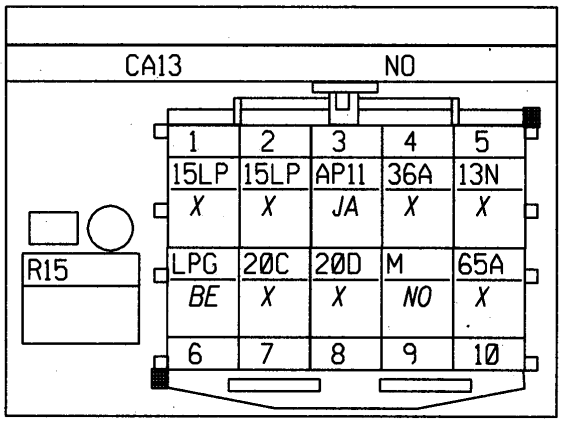

N°	mm²		··· ⟶ ···
1	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
4	1	36A	+ REAR WIPER CONTROL
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
7	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
8	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
9	1	M	EARTH
10	.35	65A	+ BRAKE LIGHTS CONTROL

RH REAR/LEFT-HAND TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

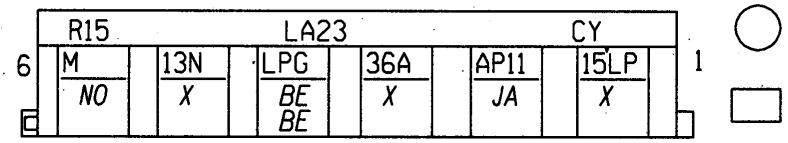

N°	mm²		... ⟶ ...
1	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
3	1	36A	+ REAR WIPER CONTROL
4	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
4	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	3	M	EARTH

RH REAR/LEFT-HAND TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

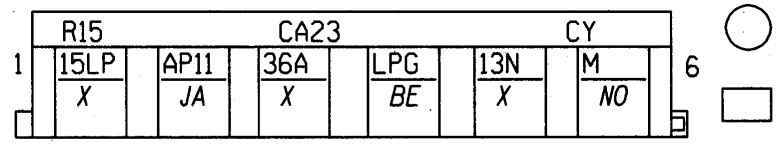

N°	mm²		... ⟶ ...
1	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
3	1	36A	+ REAR WIPER CONTROL
4	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	3	M	EARTH

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

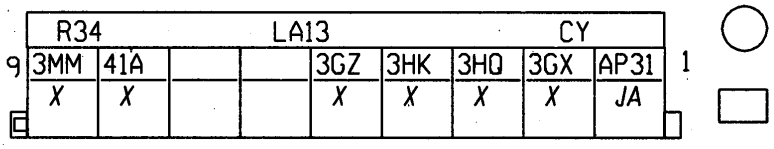

N°	mm²		... ⟶ ...
1	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER
2	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
3	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
4	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
5	.35	3GZ	+ LIQUEFIED PETROLEUM GAS SELECTION CONTROL
8	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
9	.35	3MM	FUEL GAUGE LEVEL > LIQUEFIED PETROLEUM GAS ECU SIGNAL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

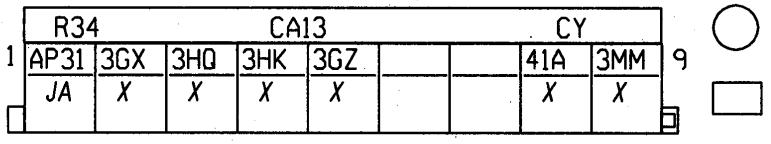

N°	mm²		... ⟶ ...
1	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER
2	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
3	1	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
4	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
5	.35	3GZ	+ LIQUEFIED PETROLEUM GAS SELECTION CONTROL
8	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
9	.35	3MM	FUEL GAUGE LEVEL > LIQUEFIED PETROLEUM GAS ECU SIGNAL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

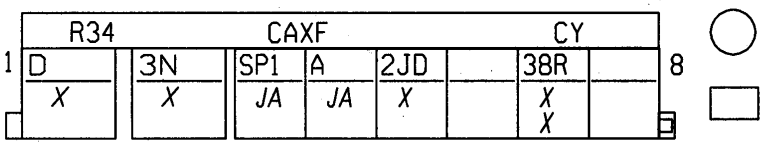

N°	mm²		... ⟶ ...
1	3	D	+ STARTING
2	1.4	3N	+ FUEL PUMP>
3	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
4	2	A	+ AFTER IGNITION
5	.35	2JD	+ ALTERNATOR EXCITATION
7	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL
7	.35	38R	+ AIR CONDITIONING CLUTCH CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

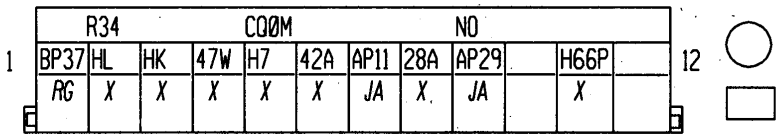

N°	mm²		... ⟶ ...
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47W	SECONDARY SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGIIT FUSE PROTECTION
8	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
11	.6	I166P	+ REVERSING LIGIITS CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

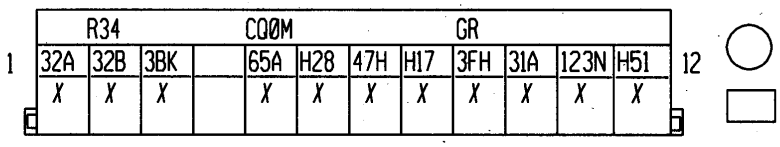

N°	mm²		... ⟶ ...
1	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
3	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
5	.35	65A	+ BRAKE LIGHTS CONTROL
6	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
9	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
10	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
11	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
12	.35	H51	LOWER CLUTCH PEDAL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

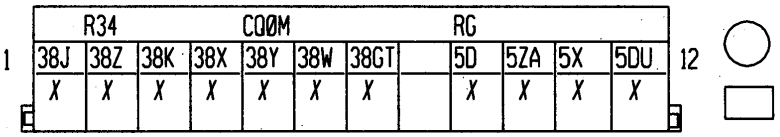

N°	mm²		... ⟶ ...
1	.35	38J	AIR CONDITIONING CUT-OUT SIGNAL > AUTOMATIC GEARBOX COMPUTER
2	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
3	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
4	.35	38X	FREON PRESSURE SENSOR SIGNAL
5	.35	38Y	+FREON PRESSURE SENSOR
6	.35	38W	- FREON PRESSURE SENSOR (AC)
7	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
9	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
10	.35	5ZA	UNDERDRIVE CONTROL
11	.35	5X	- POOR GRIP STARTING CONTROL
12	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

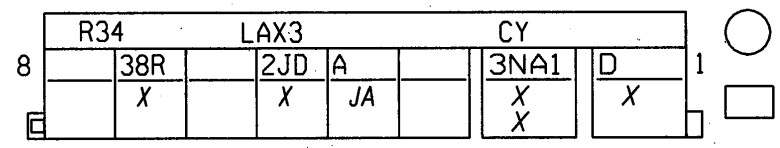

N°	mm²		... ⟶ ...
1	3	D	+ STARTING
4	2	A	+ AFTER IGNITION
5	.6	2JD	+ ALTERNATOR EXCITATION
7	1	38R	+ AIR CONDITIONING CLUTCH CONTROL
2	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
2	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

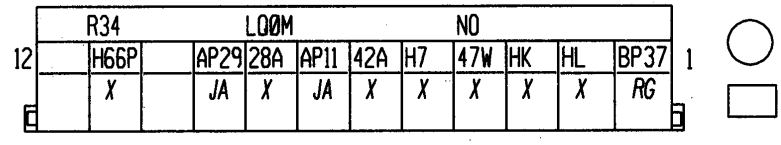

N°	mm²		... ⟶ ...
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47W	SECONDARY SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
6	.6	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.6	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

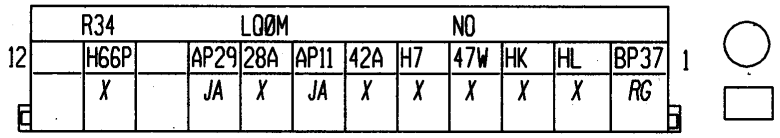

N°	mm²		... ⟶ ...
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47W	SECONDARY SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

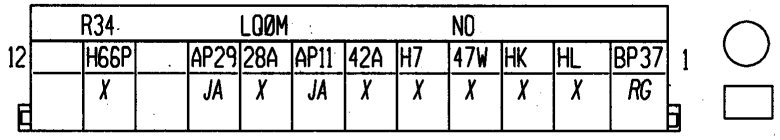

N°	mm²		... ⟶ ...
1	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47W	SECONDARY SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

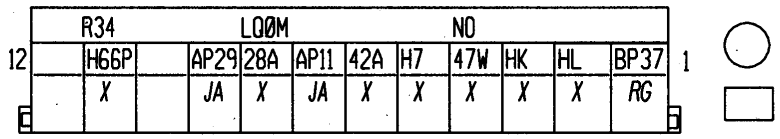

N°	mm²		... ⟶ ...
1	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47W	SECONDARY SPEED SIGNAL
5	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER > ALTERNATOR
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	+ AFTER IGNITION ENGINE SECURITY FUNCTION PROTECTED FUSE
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

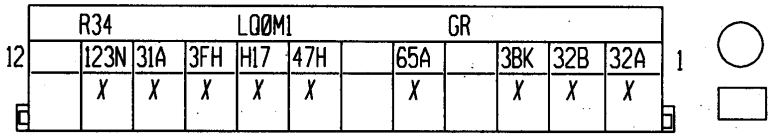

N°	mm²		... ⟶ ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
10	.35	31A	- COOLANT TEMPERATURE WARNING LIGHT CONTROL
11	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
3	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
5	.35	65A	+ BRAKE LIGHTS CONTROL
9	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL

ENGINE/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

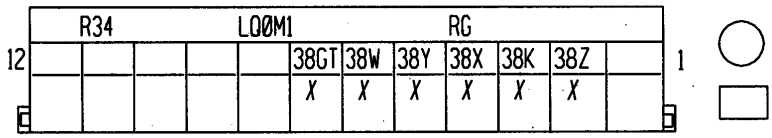

N°	mm²		... ⟶ ...
3	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
4	.6	38X	FREON PRESSURE SENSOR SIGNAL
5	.6	38Y	+FREON PRESSURE SENSOR
6	.6	38W	- FREON PRESSURE SENSOR (AC)
7	.35	38GT	SIGNAL FOR POWER ABSORBED BY AIR CONDITIONING
2	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL

PEDAL UNIT/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

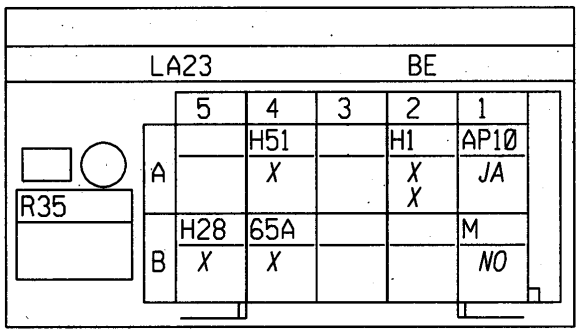

N°	mm²		... ⟶ ...
A1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.35	M	EARTH
A2	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
A2	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
A4	.35	H51	LOWER CLUTCH PEDAL
B4	.6	65A	+ BRAKE LIGHTS CONTROL
B5	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

PEDAL UNIT/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

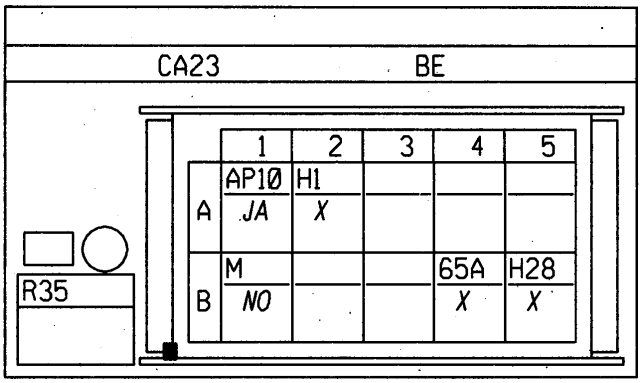

N°	mm²		... → ...
A1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.6	M	EARTH
A2	.6	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
B4	.6	65A	+ BRAKE LIGHTS CONTROL
B5	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

ABS/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

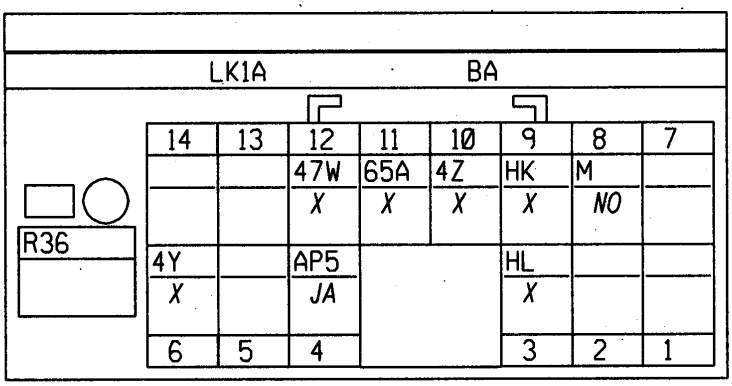

N°	mm²		... → ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
6	.35	4Y	- BRAKE FAULT WARNING LIGHT
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.35	4Z	- ABS WARNING LIGHT
11	.35	65A	+ BRAKE LIGHTS CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL
8	.35	M	EARTH

ABS/INSTRUMENT PANEL

Erreur lecture ligne dans Fichier Critere Connecteur

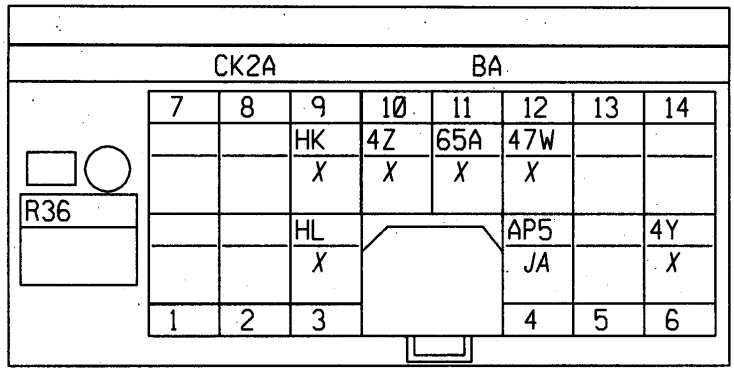

N°	mm²		... ⟶ ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
6	.35	4Y	- BRAKE FAULT WARNING LIGHT
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.35	4Z	- ABS WARNING LIGHT
11	.35	65A	+ BRAKE LIGHTS CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL

DASHBOARD/CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S8

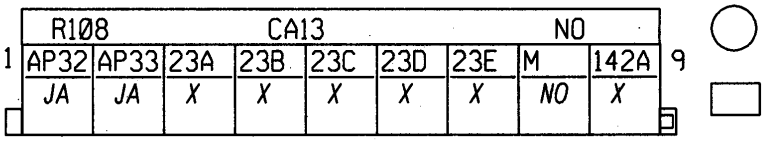

N°	mm²		... → ...
1	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
2	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
3	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
4	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
5	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
6	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
7	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
8	2	M	EARTH
9	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL

DASHBOARD/CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S8

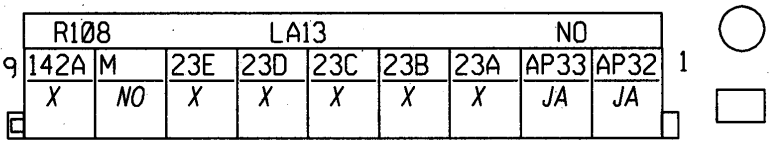

N°	mm²		... → ...
1	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
2	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
3	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
4	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
5	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
6	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
7	.35	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
8	2	M	EARTH
9	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL

DASHBOARD/CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S8

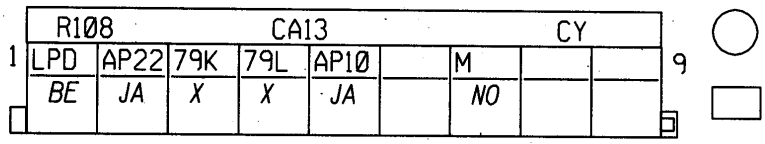

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
3	.35	79K	+ RELAY LH HEATED SEAT CONTROL
4	.35	79L	+ RELAY RH HEATED SEAT CONTROL
5	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
7	2	M	EARTH

DASHBOARD/CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S8

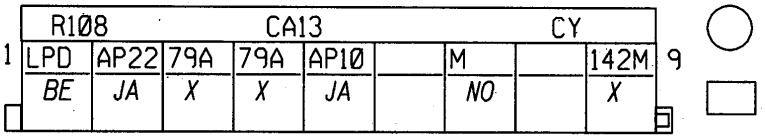

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
3	.35	79A	+ HEATED SEAT CONTROL
4	.35	79A	+ HEATED SEAT CONTROL
5	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
7	2	M	EARTH
9	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL

DASHBOARD/CONSOLE

Erreur lecture ligne dans Fichier Critere Connecteur

S5-S8

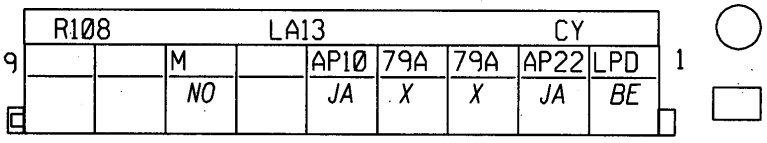

N°	mm²		... → ...
1	.35	LPD	+RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT
2	.35	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
3	.35	79A	+ HEATED SEAT CONTROL
4	.35	79A	+ HEATED SEAT CONTROL
5	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
7	2	M	EARTH

HEADLIGHT WASHER FRONT/INTERMEDIATE SURFACE

Erreur lecture ligne dans Fichier Critere Connecteur

S1

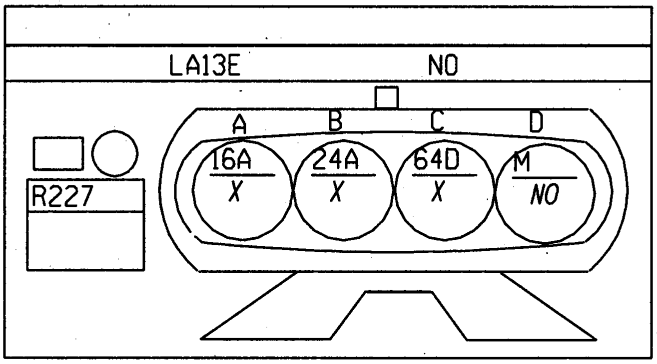

N°	mm²		... ⟶ ...
A	.6	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B	.6	24A	+ REAR SCREEN WASHER PUMP CONTROL
C	.6	64D	RH FRONT INDICATOR CONTROL
D	.6	M	EARTH

HEADLIGHT WASHER FRONT/INTERMEDIATE SURFACE

Erreur lecture ligne dans Fichier Critere Connecteur

S1

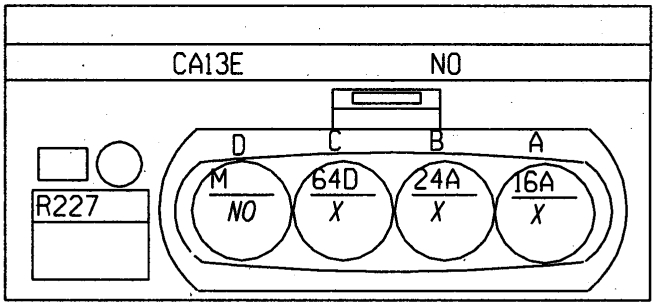

N°	mm²		... ⟶ ...
A	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
C	.35	64D	RH FRONT INDICATOR CONTROL
D	.35	M	EARTH

REAR RH/REGISTRATION PLATE LIGHTING

Erreur lecture ligne dans Fichier Critere Connecteur

S19

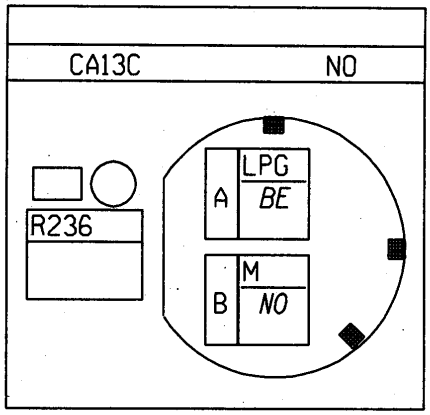

N°	mm²		... → ...
A	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B	.6	M	EARTH

CP ENGINE ABS/UNDERBODY ABS

Erreur lecture ligne dans Fichier Critere Connecteur

S3

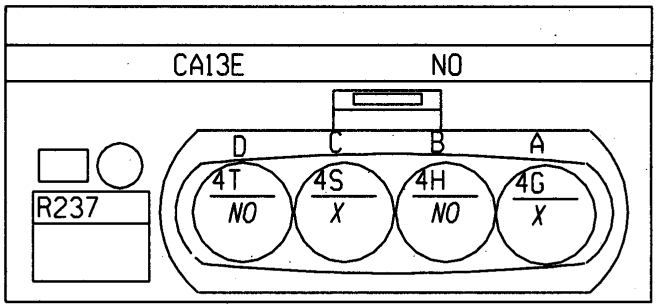

N°	mm²		··· ⟶ ···
A	.6	4G	LH REAR WHEEL SENSOR SIGNAL
B	.6	4H	+LH REAR WHEEL SENSOR
C	.6	4S	RH REAR WHEEL SENSOR SIGNAL
D	.6	4T	+RH REAR WHEEL SENSOR

CP ENGINE ABS/UNDERBODY ABS

Erreur lecture ligne dans Fichier Critere Connecteur

S3

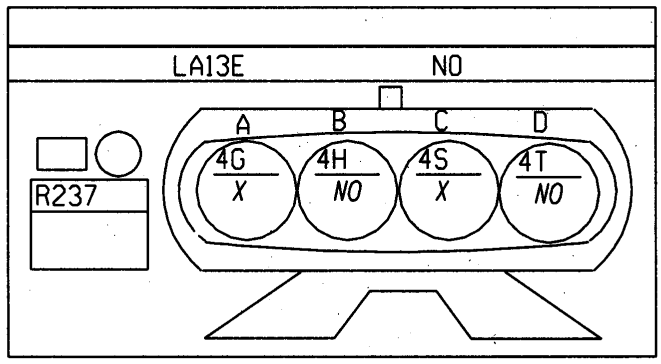

N°	mm²		··· ⟶ ···
A	.5	4G	LH REAR WHEEL SENSOR SIGNAL
B	.5	4H	+LH REAR WHEEL SENSOR
C	.5	4S	RH REAR WHEEL SENSOR SIGNAL
D	.5	4T	+RH REAR WHEEL SENSOR

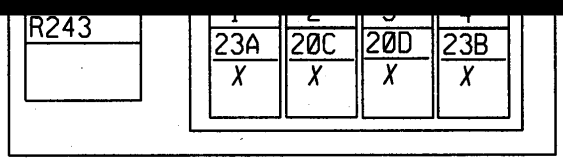

N°	mm²		... → ...
1	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL CLOSURE
2	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING

LH REAR/TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

S18-S19-S20-S21-S23

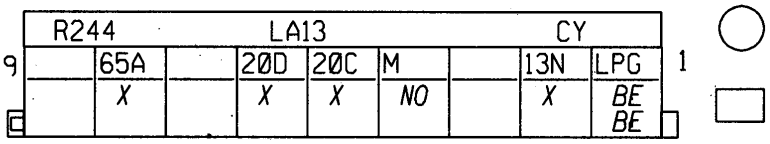

N°	mm²		... ⟶ ...
1	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
1	.6	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
4	.6	M	EARTH
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
8	.35	65A	+ BRAKE LIGHTS CONTROL

LH REAR/TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

S18-S19-S20-S21-S23

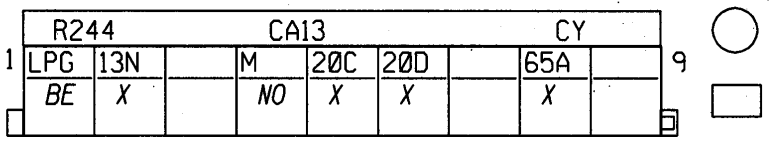

N°	mm²		... ⟶ ...
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
4	.6	M	EARTH
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
8	.35	65A	+ BRAKE LIGHTS CONTROL

LH REAR/TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

S18-S19-S20-S21-S23

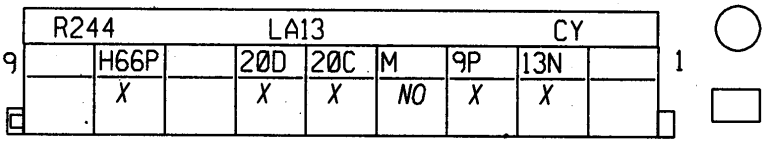

N°	mm²		... → ...
2	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
3	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
4	.6	M	EARTH
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
8	.6	H66P	+ REVERSING LIGHTS CONTROL

LH REAR/TAILGATE

Erreur lecture ligne dans Fichier Critere Connecteur

S18-S19-S20-S21-S23

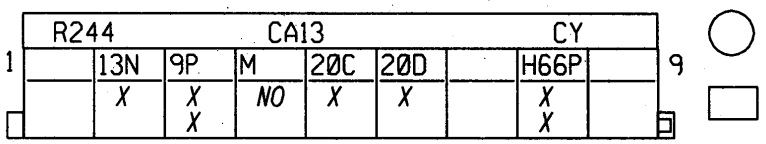

N°	mm²		... → ...
2	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
3	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
3	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
4	.6	M	EARTH
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
8	.6	H66P	+ REVERSING LIGHTS CONTROL
8	.6	H66P	+ REVERSING LIGHTS CONTROL

A	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
D	.6	M	EARTH
E	.35	65A	+ BRAKE LIGHTS CONTROL
F	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
G	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RAC TAILGATE/REGISTRATION PLATE LIGHT

Erreur lecture ligne dans Fichier Critere Connecteur

S15-S18-S23-S26

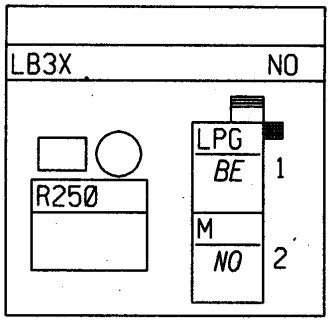

N°	mm²		... ⟶ ...
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.6	M	EARTH

RAC TAILGATE/REGISTRATION PLATE LIGHT

Erreur lecture ligne dans Fichier Critere Connecteur

S15-S18-S23-S26

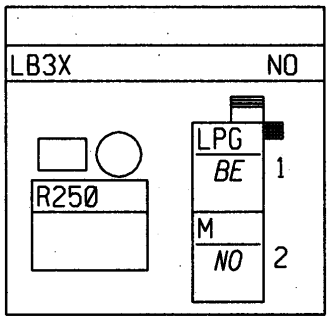

N°	mm²		... ⟶ ...
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.35	M	EARTH

RAC TAILGATE/REGISTRATION PLATE LIGHT
Erreur lecture ligne dans Fichier Critere Connecteur
S15-S18-S23-S26

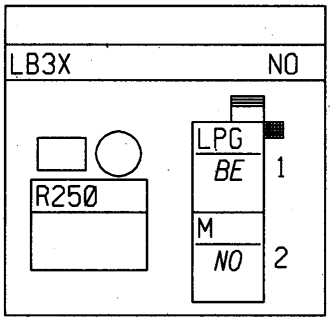

N°	mm²		··· ⟶ ···
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.35	M	EARTH

RAC TAILGATE/REGISTRATION PLATE LIGHT
Erreur lecture ligne dans Fichier Critere Connecteur
S15-S18-S23-S26

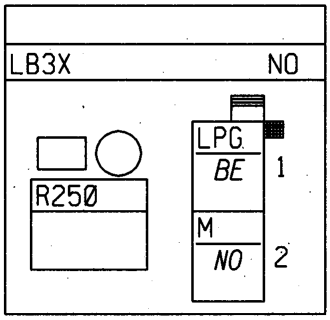

N°	mm²		··· ⟶ ···
1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
2	.6	M	EARTH

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

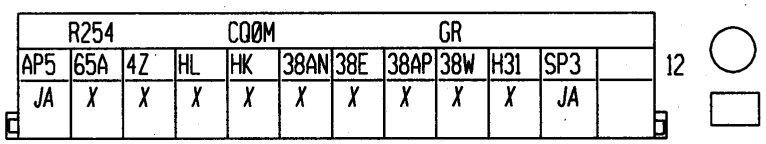

N°	mm²		... ⟶ ...
1	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
2	.35	65A	+ BRAKE LIGHTS CONTROL
3	.35	4Z	- ABS WARNING LIGHT
4	.35	HL	DIAGNOSTIC SIGNAL L
5	.35	HK	DIAGNOSTIC SIGNAL K
6	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
7	.35	38E	+ AIR CONDITIONING RECIRCULATION
8	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
9	.35	38W	- FREON PRESSURE SENSOR (AC)
10	.35	H31	FAN UNIT VOLTAGE SIGNAL
11	.35	SP3	+ PROTECTED CONTROL > HEATING

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

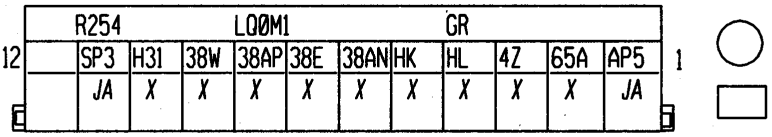

N°	mm²		... ⟶ ...
1	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
2	.35	65A	+ BRAKE LIGHTS CONTROL
3	.35	4Z	- ABS WARNING LIGHT
4	.35	HL	DIAGNOSTIC SIGNAL L
5	.35	HK	DIAGNOSTIC SIGNAL K
6	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
7	.35	38E	+ AIR CONDITIONING RECIRCULATION
8	.35	38AP	SIGNAL+ AIR CONDITIONING EVAPORATOR SENSOR
9	.35	38W	- FREON PRESSURE SENSOR (AC)
10	.35	H31	FAN UNIT VOLTAGE SIGNAL
11	.35	SP3	+ PROTECTED CONTROL > HEATING

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

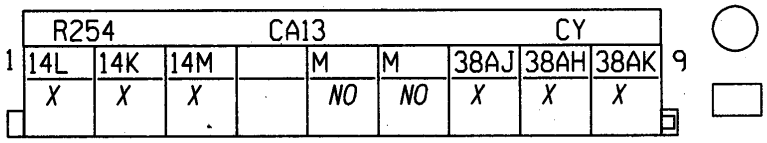

N°	mm²		... ⟶ ...
1	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
2	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
3	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
5	1.4	M	EARTH
6	1.4	M	EARTH
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
9	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

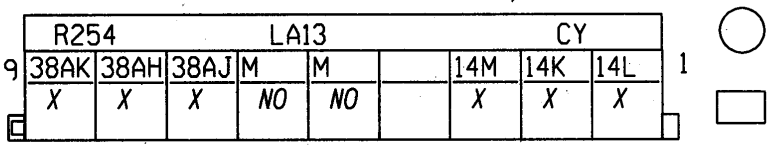

N°	mm²		... ⟶ ...
1	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
2	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
3	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
5	1.4	M	EARTH
6	1.4	M	EARTH
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
9	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

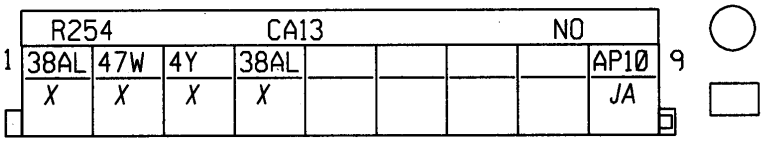

N°	mm²		... ⟶ ...
1	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
2	.35	47W	SECONDARY SPEED SIGNAL
3	.35	4Y	- BRAKE FAULT WARNING LIGHT
4	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

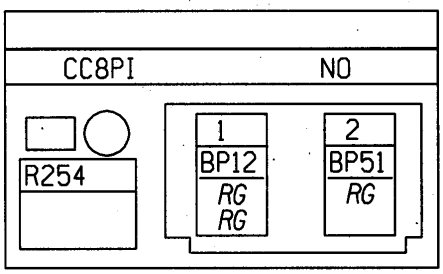

N°	mm²		... ⟶ ...
1	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
1	4	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
2	4	BP51	+ BATTERY PROTECTION > HOOD

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

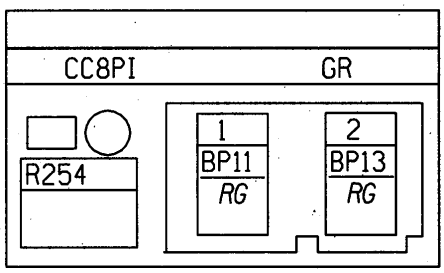

N°	mm²		... ⟶ ...
1	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
2	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3



N°	mm²		... → ...
1	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
2	.35	47W	SECONDARY SPEED SIGNAL
3	.35	4Y	- BRAKE FAULT WARNING LIGHT
4	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

INSTRUMENT PANEL/WATER BOX

Erreur lecture ligne dans Fichier Critere Connecteur

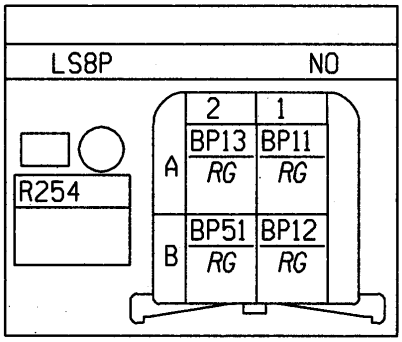

N°	mm²		... → ...
A1	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B1	4	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
A2	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
B2	4	BP51	+ BATTERY PROTECTION > HOOD

ABS/RADIATOR TANK

Erreur lecture ligne dans Fichier Critere Connecteur

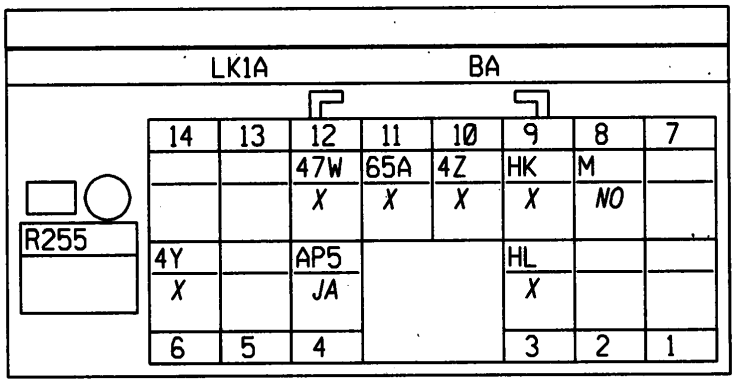

N°	mm²		... ⟶ ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
6	.35	4Y	- BRAKE FAULT WARNING LIGHT
8	.35	M	EARTH
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.35	4Z	- ABS WARNING LIGHT
11	.35	65A	+ BRAKE LIGHTS CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY

Erreur lecture ligne dans Fichier Critere Connecteur

S4

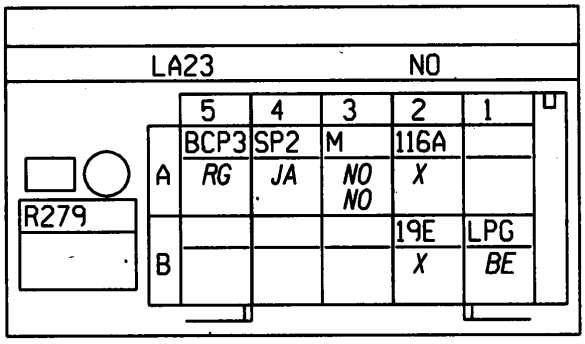

N°	mm²		... ⟶ ...
B1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
A2	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
B2	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
A3	.35	M	EARTH
A3	.35	M	EARTH
A4	.35	SP2	+ PROTECTED CONTROL > RADIO >
A5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY

Erreur lecture ligne dans Fichier Critere Connecteur

S4

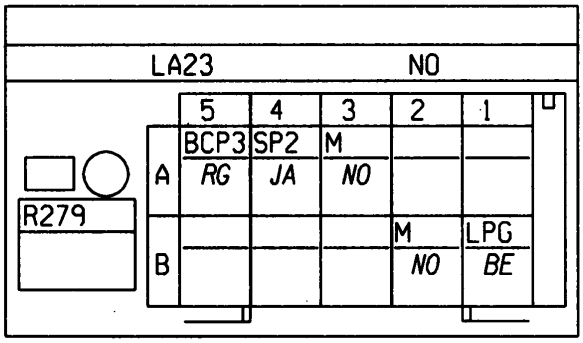

N°	mm²		... ⟶ ...
B1	.35	LPG	+ PROTECTED LEFT HAND MAIN BEAM HEADLIGHT
B2	.35	M	EARTH
A3	.35	M	EARTH
A4	.35	SP2	+ PROTECTED CONTROL > RADIO >
A5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

REAR / HOOD COVER

Erreur lecture ligne dans Fichier Critere Connecteur

S22

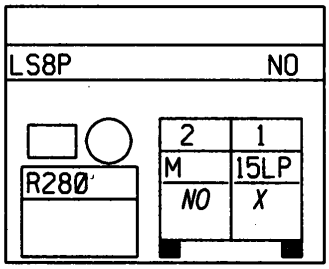

N°	mm²		... ⟶ ...
1	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	3	M	EARTH

INSTRUMENT PANEL / COURTESY LIGHTS

Erreur lecture ligne dans Fichier Critere Connecteur

S4-S7

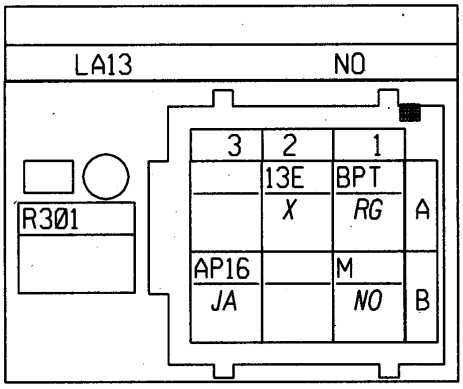

N°	mm²		... → ...
A1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
B1	1.4	M	EARTH
A2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
B3	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE

INSTRUMENT PANEL / COURTESY LIGHTS

Erreur lecture ligne dans Fichier Critere Connecteur

S4-S7

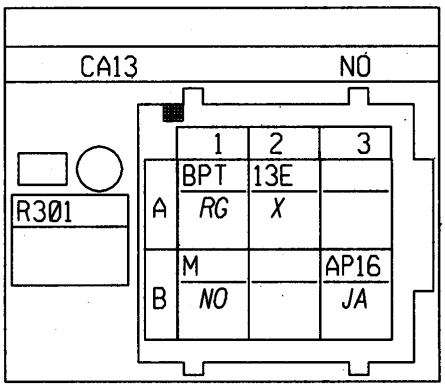

N°	mm²		... → ...
A1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
B1	1.4	M	EARTH
A2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL
B3	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE

INSTRUMENT PANEL / COURTESY LIGHTS

Erreur lecture ligne dans Fichier Critere Connecteur

S4-S7

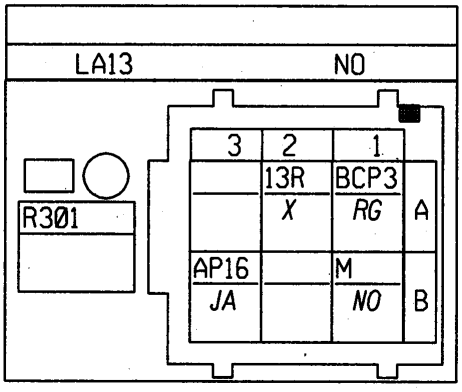

N°	mm²		... ⟶ ...
A1	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B1	1.4	M	EARTH
A2	.35	13R	- INTERIOR LIGHTING > DIODE
B3	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE

INSTRUMENT PANEL / COURTESY LIGHTS

Erreur lecture ligne dans Fichier Critere Connecteur

S4-S7

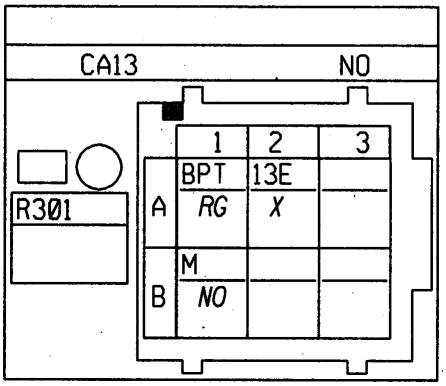

N°	mm²		... ⟶ ...
A1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
B1	.35	M	EARTH
A2	.35	13E	- COURTESY LIGHT > TIMER SWITCH CONTROL

ADDITIONAL LPG TANK/PASSENGER COMPARTMENT

Erreur lecture ligne dans Fichier Critere Connecteur

S4

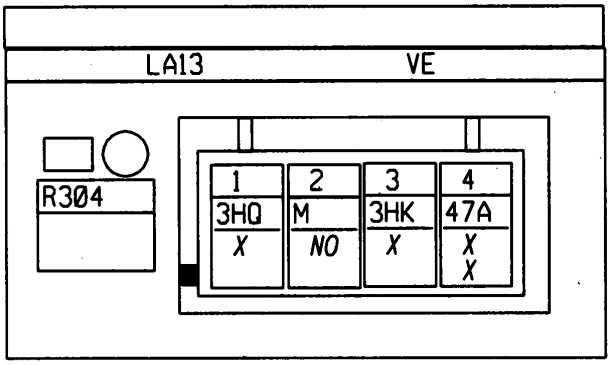

N°	mm²		... → ...
1	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
2	.6	M	EARTH
3	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
4	.35	47A	- FUEL LEVEL GAUGE >
4	.35	47A	- FUEL LEVEL GAUGE >

ABS/ABS

Erreur lecture ligne dans Fichier Critere Connecteur

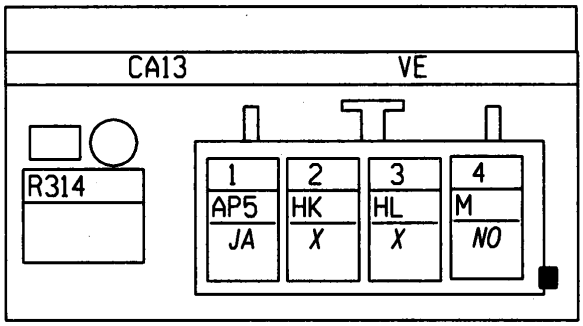

N°	mm²		... → ...
1	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
2	.35	HK	DIAGNOSTIC SIGNAL K
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.35	M	EARTH

ABS/ABS

Erreur lecture ligne dans Fichier Critere Connecteur

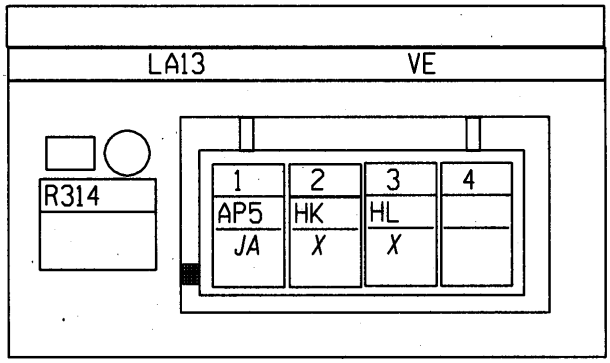

N°	mm²		... → ...
1	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
2	.35	HK	DIAGNOSTIC SIGNAL K
3	.35	HL	DIAGNOSTIC SIGNAL L

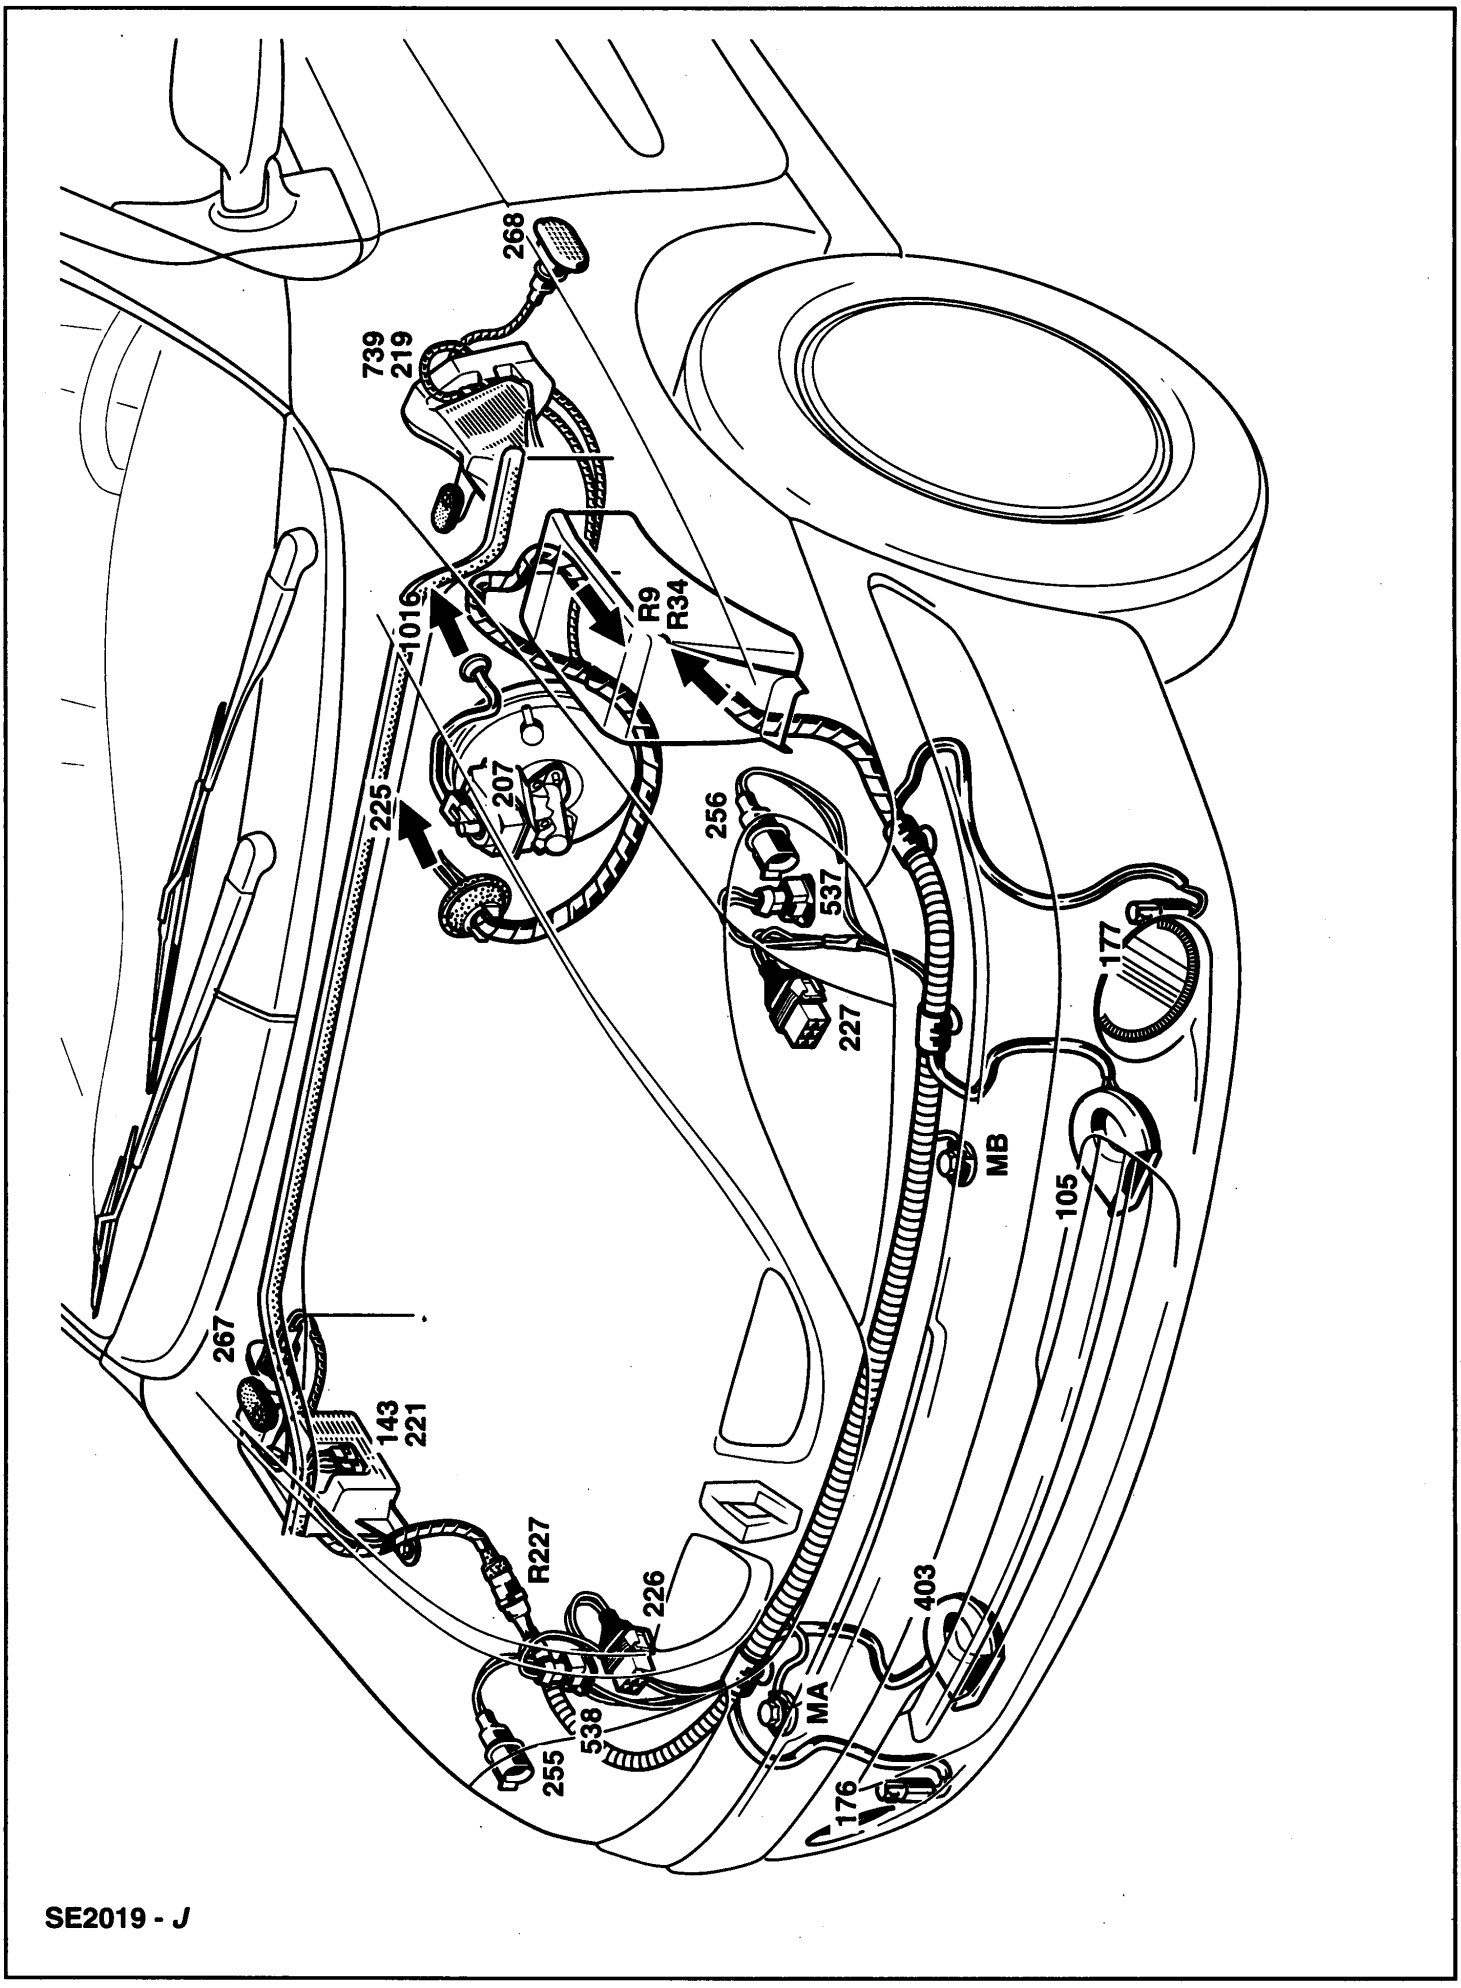
268
739
219
1010
R9
R34
225
207
256
537
227
177
MB
105
267
143
221
R227
226
403
MA
538
255
176

SE2019 - *J*

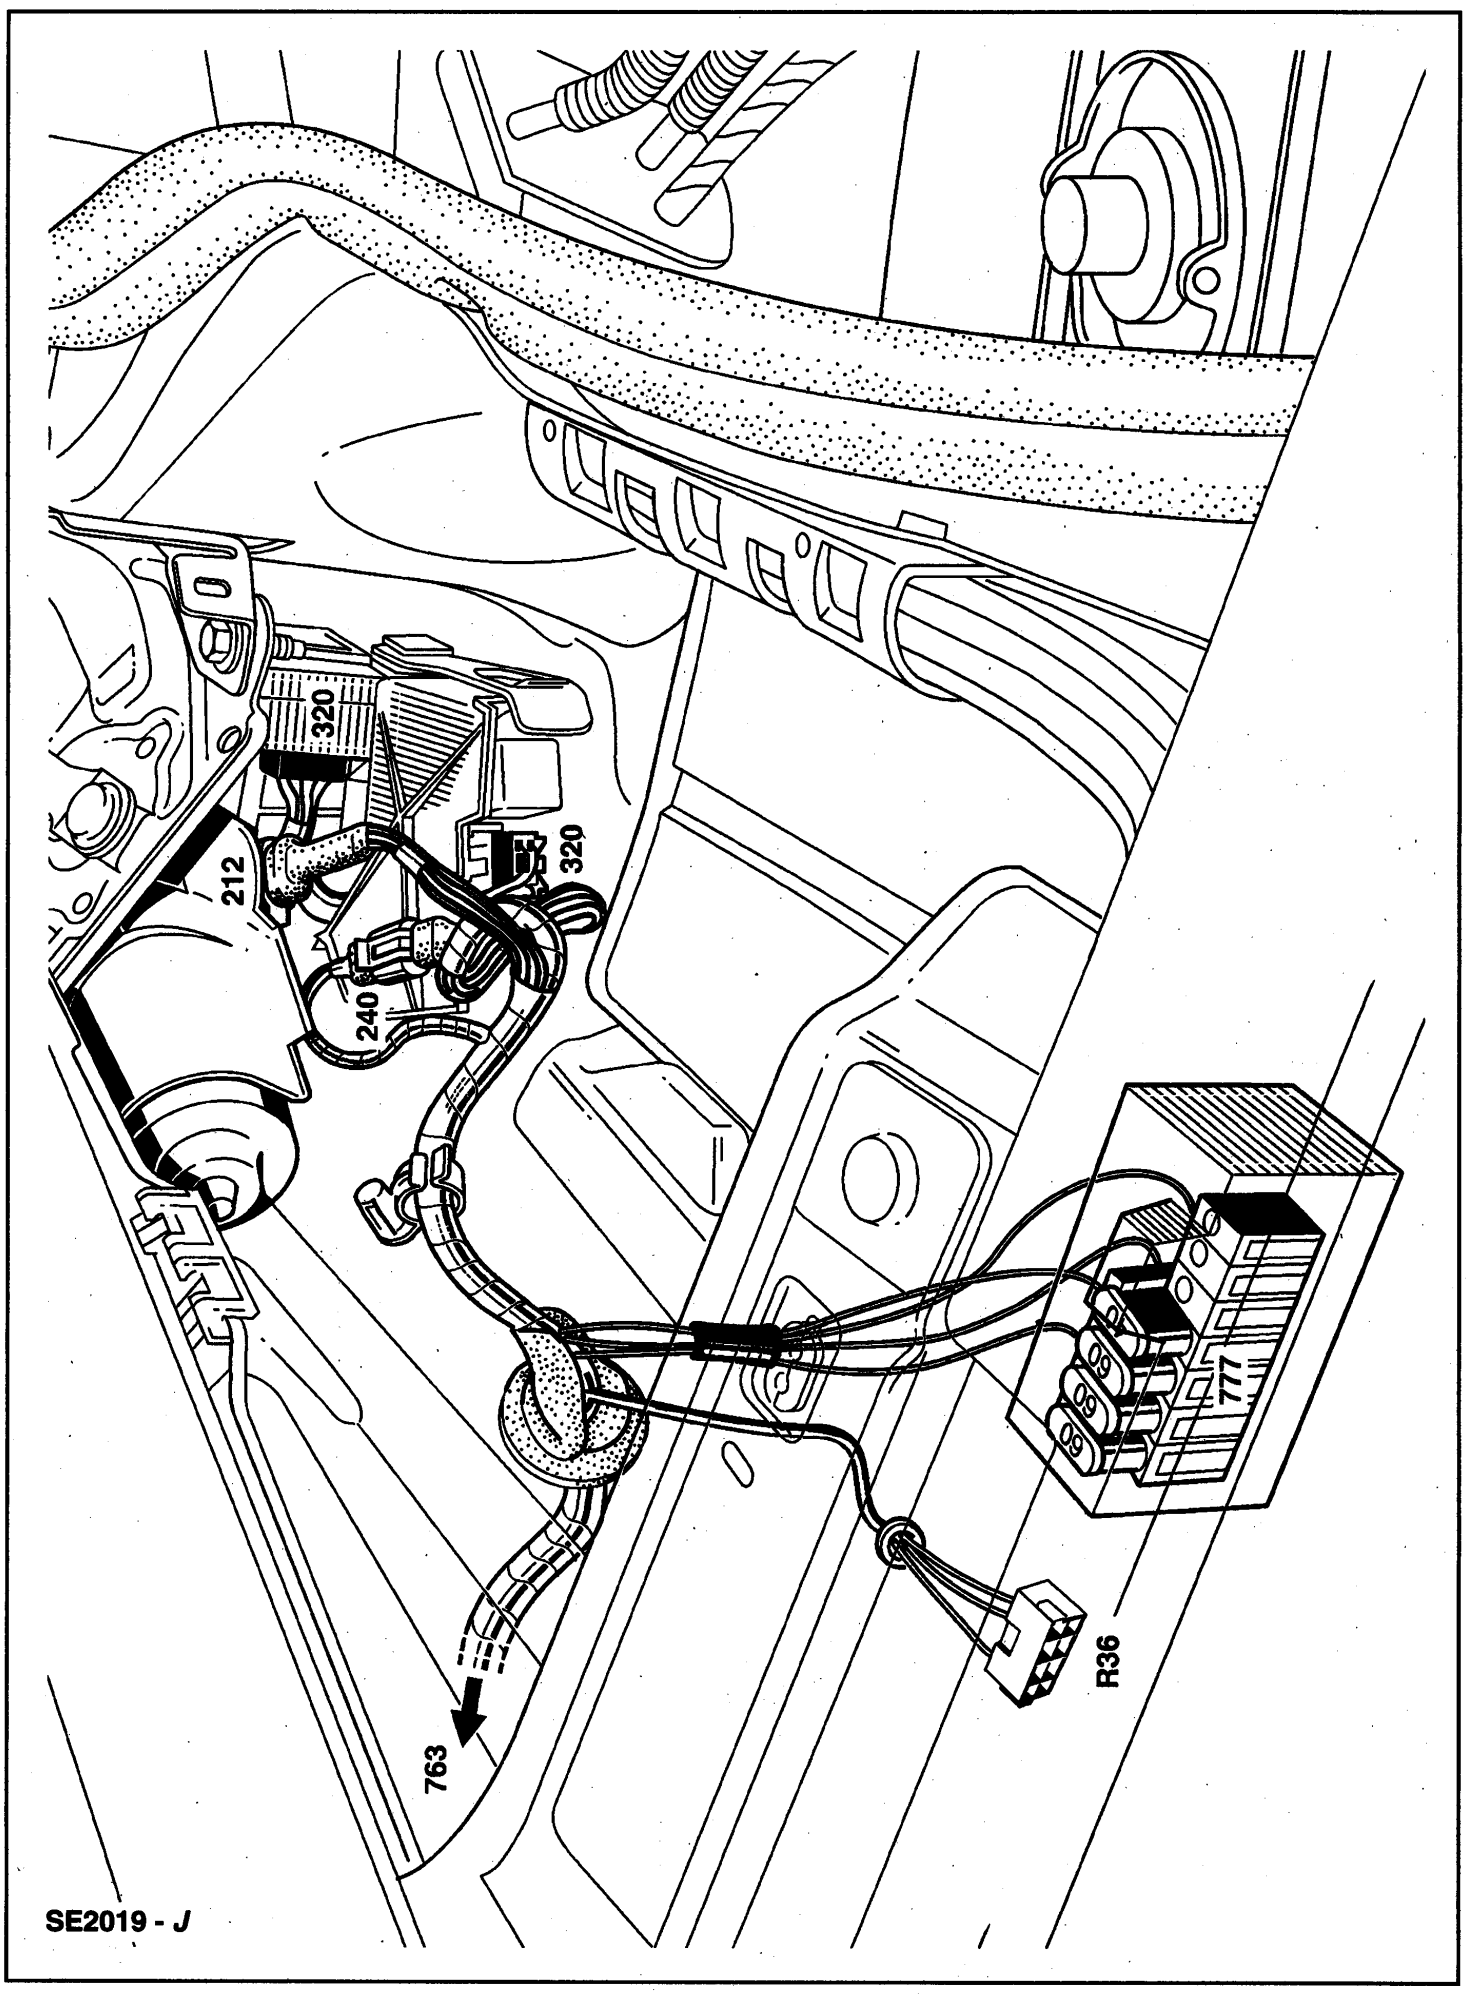
320
320
212
240
777
R36
763
SE2019 - J

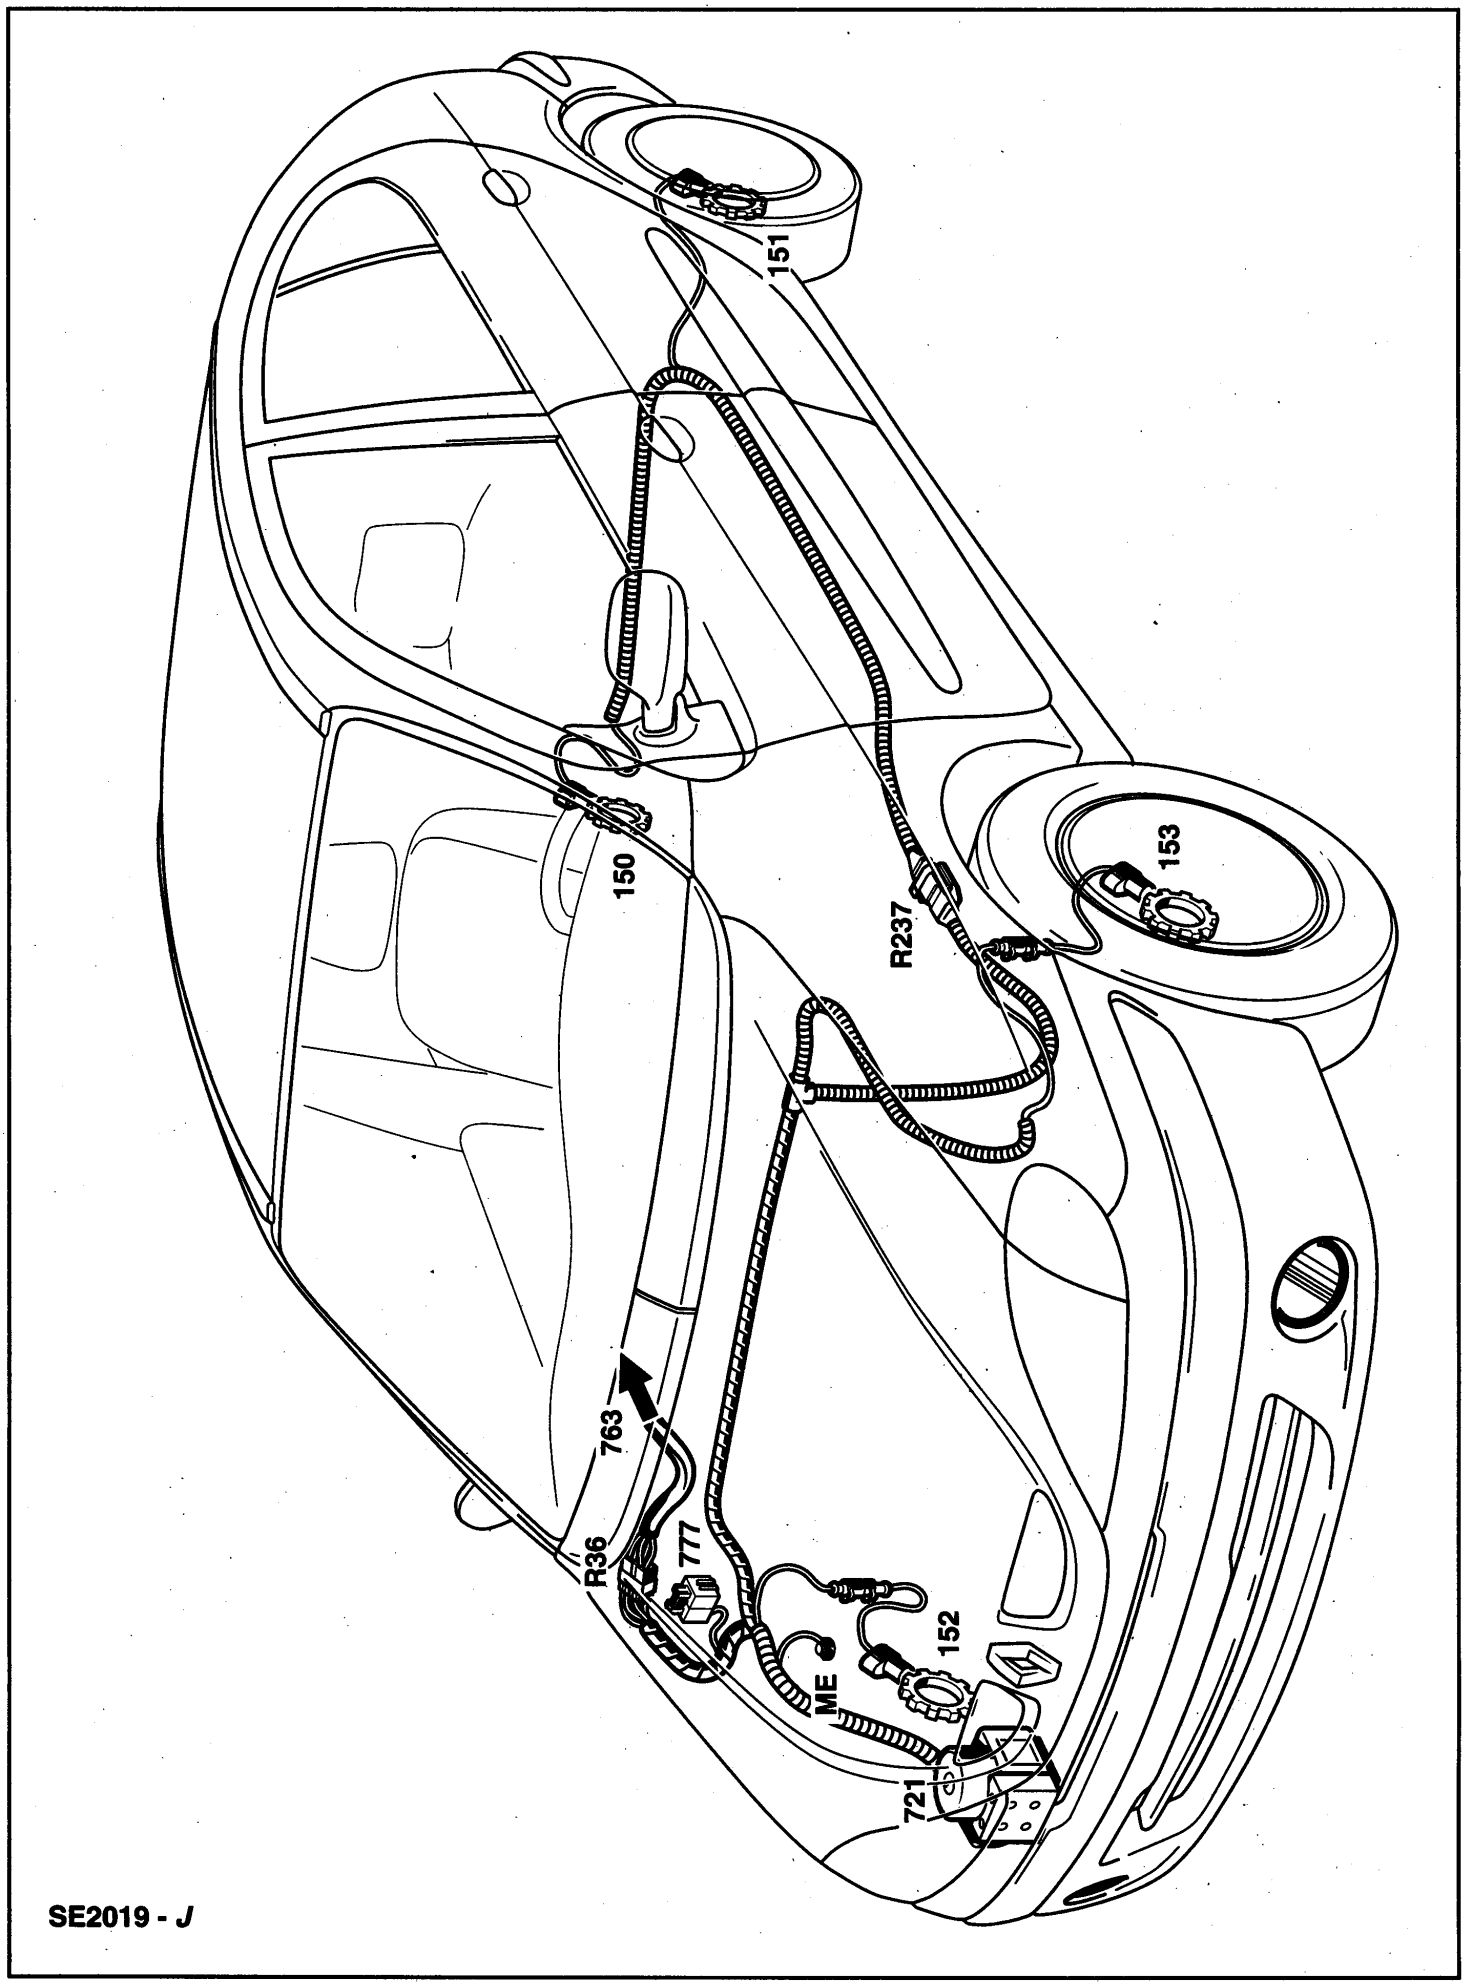

SE2019 - *J*

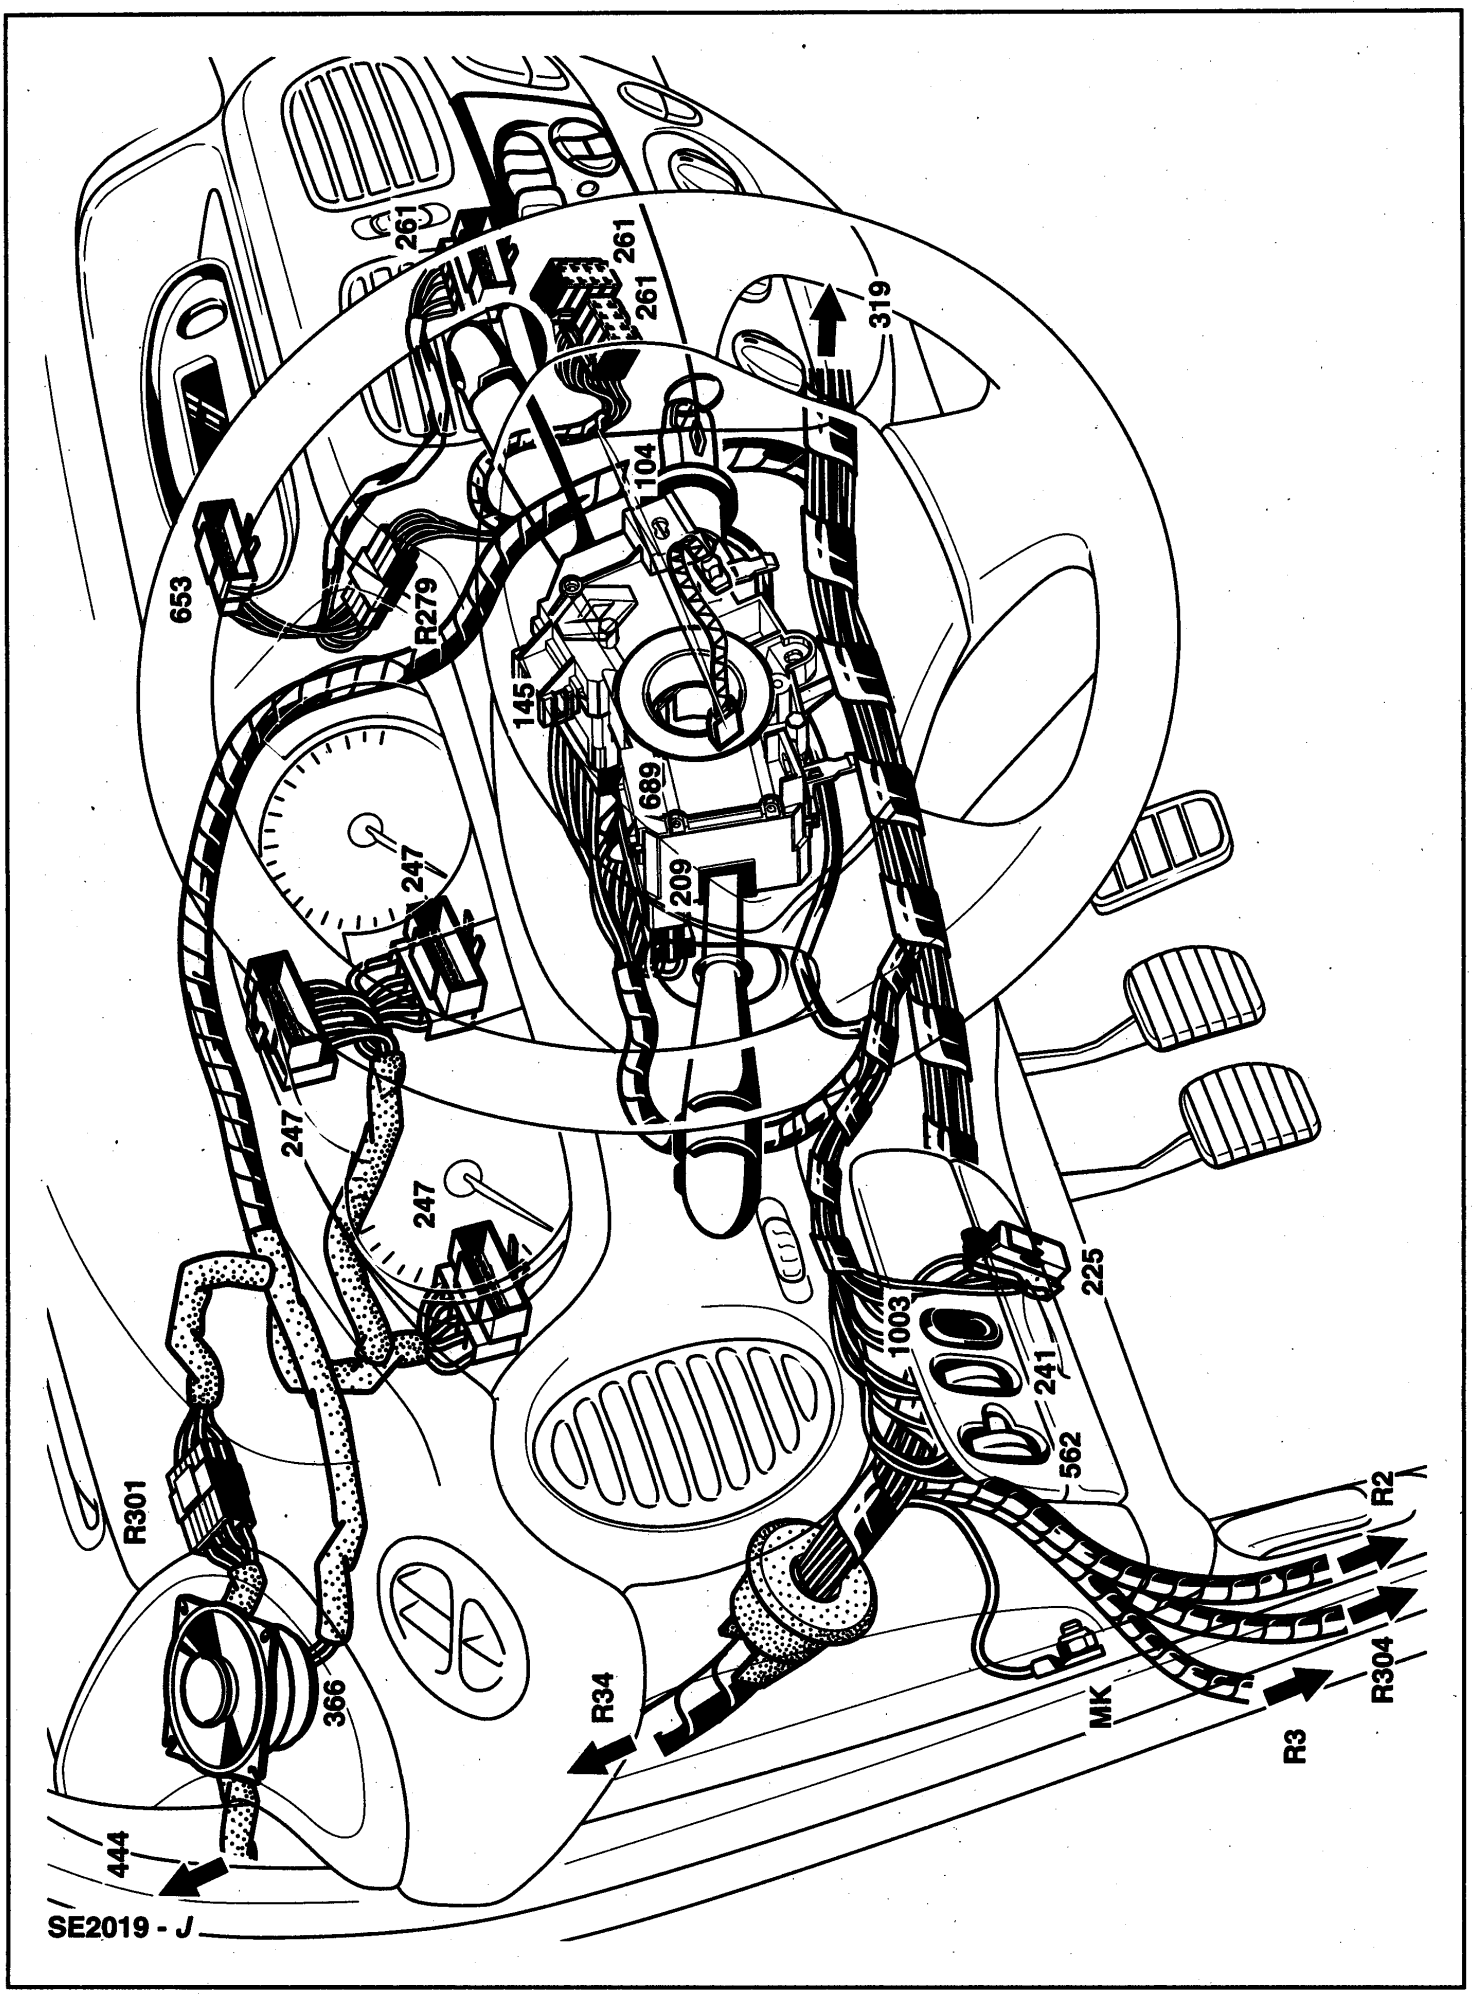
261
261
261
319
104
653
R279
145
689
209
247
247
247
225
1003
241
562
R2
R304
R3
MK
R34
366
R301
444
SE2019 - J

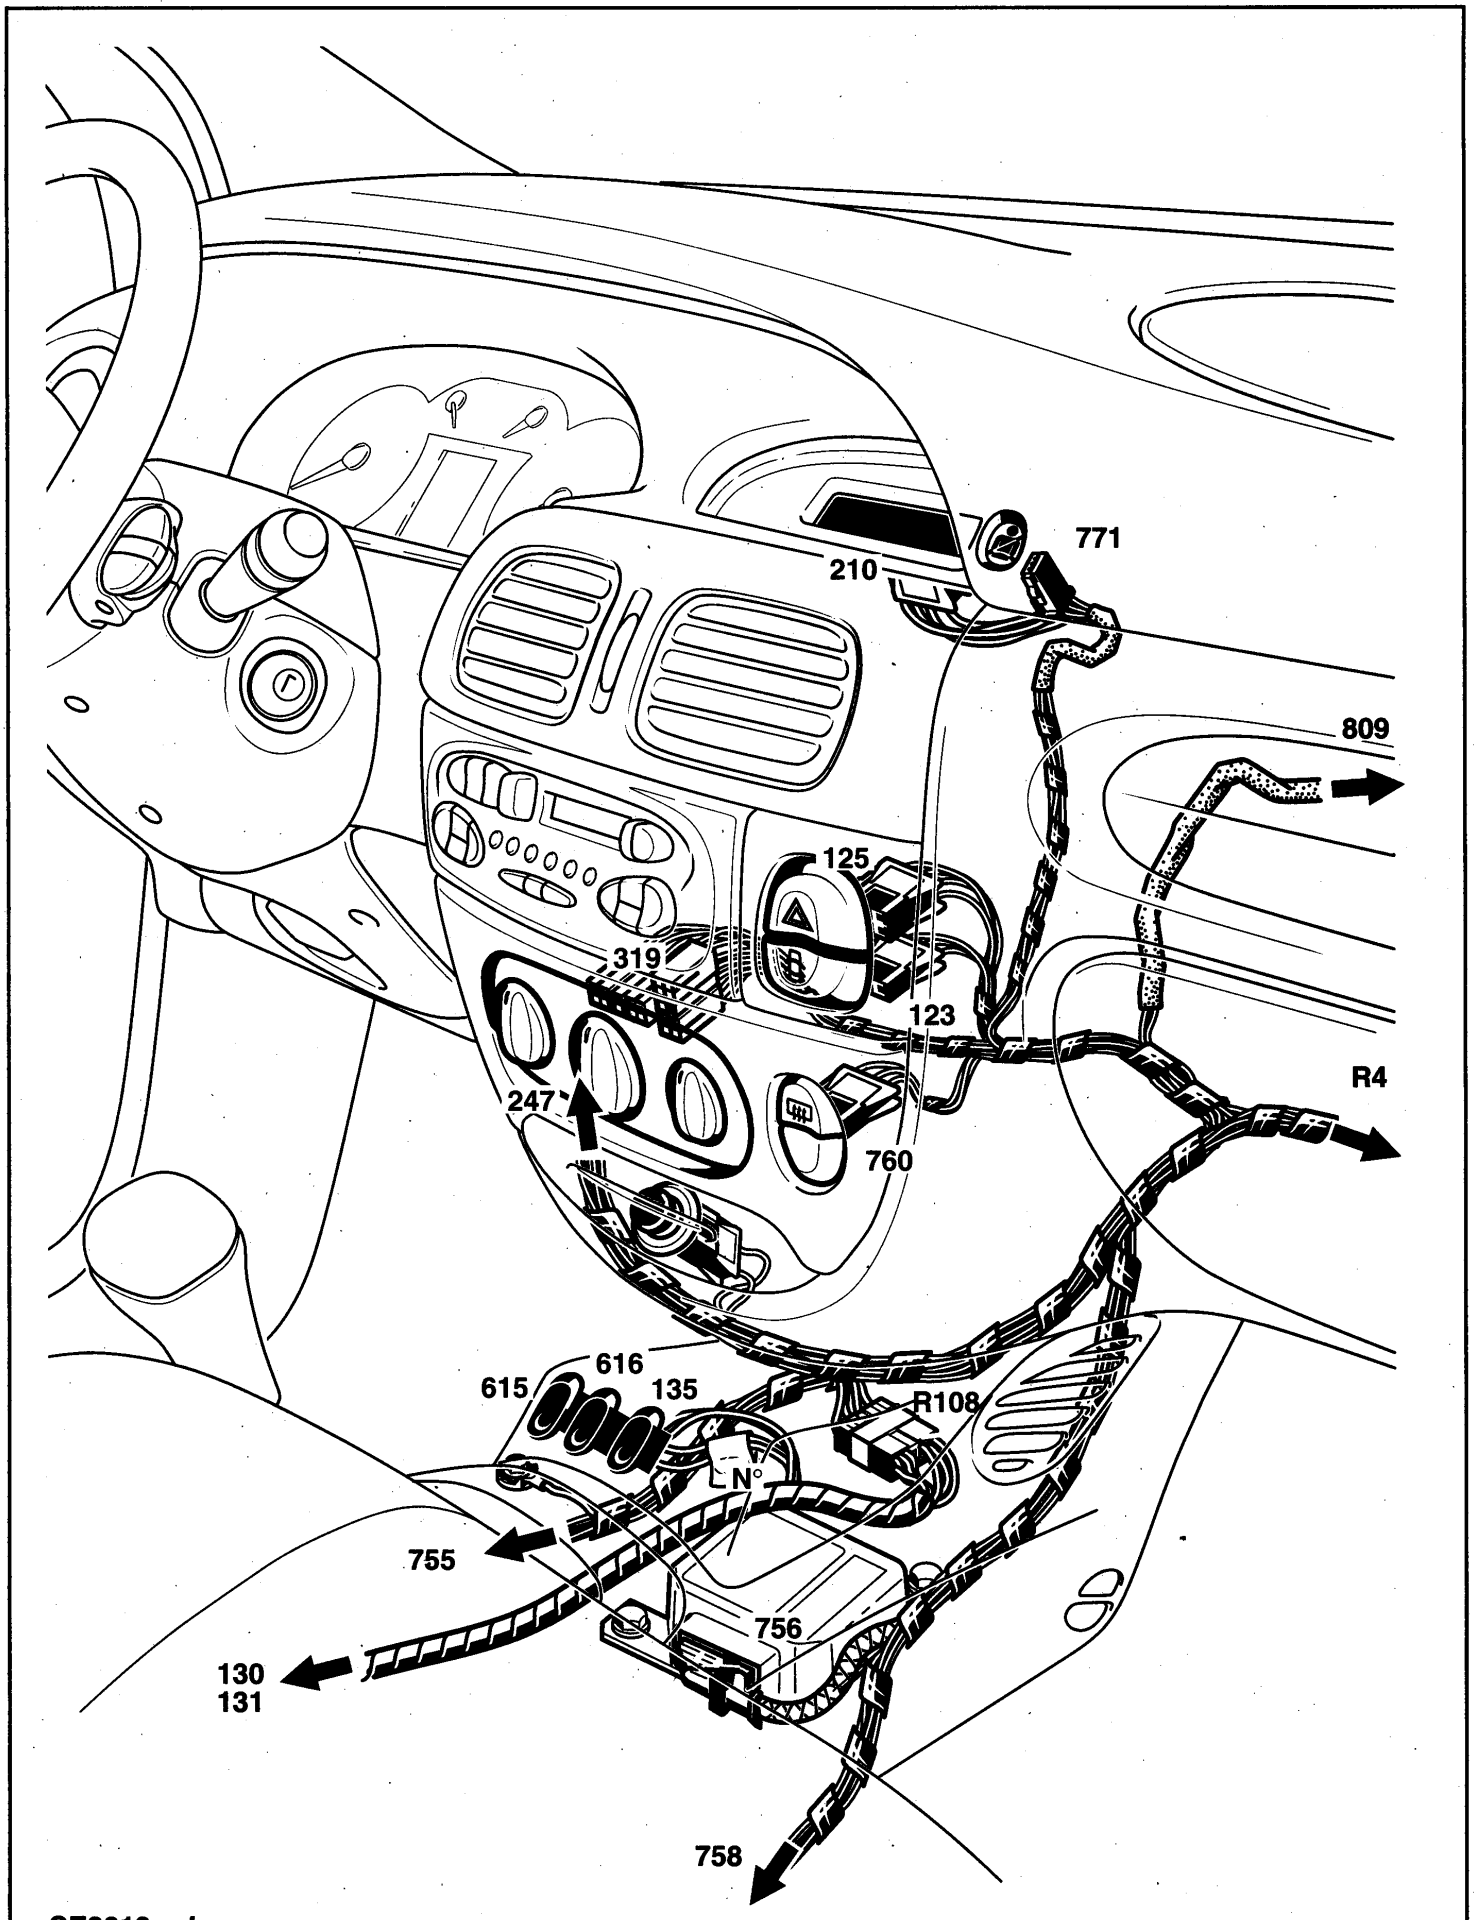
771
210
809
125
319
123
247
R4
760
616
615
135
R108
N°
755
756
130
131
758

SE2019 - *J*

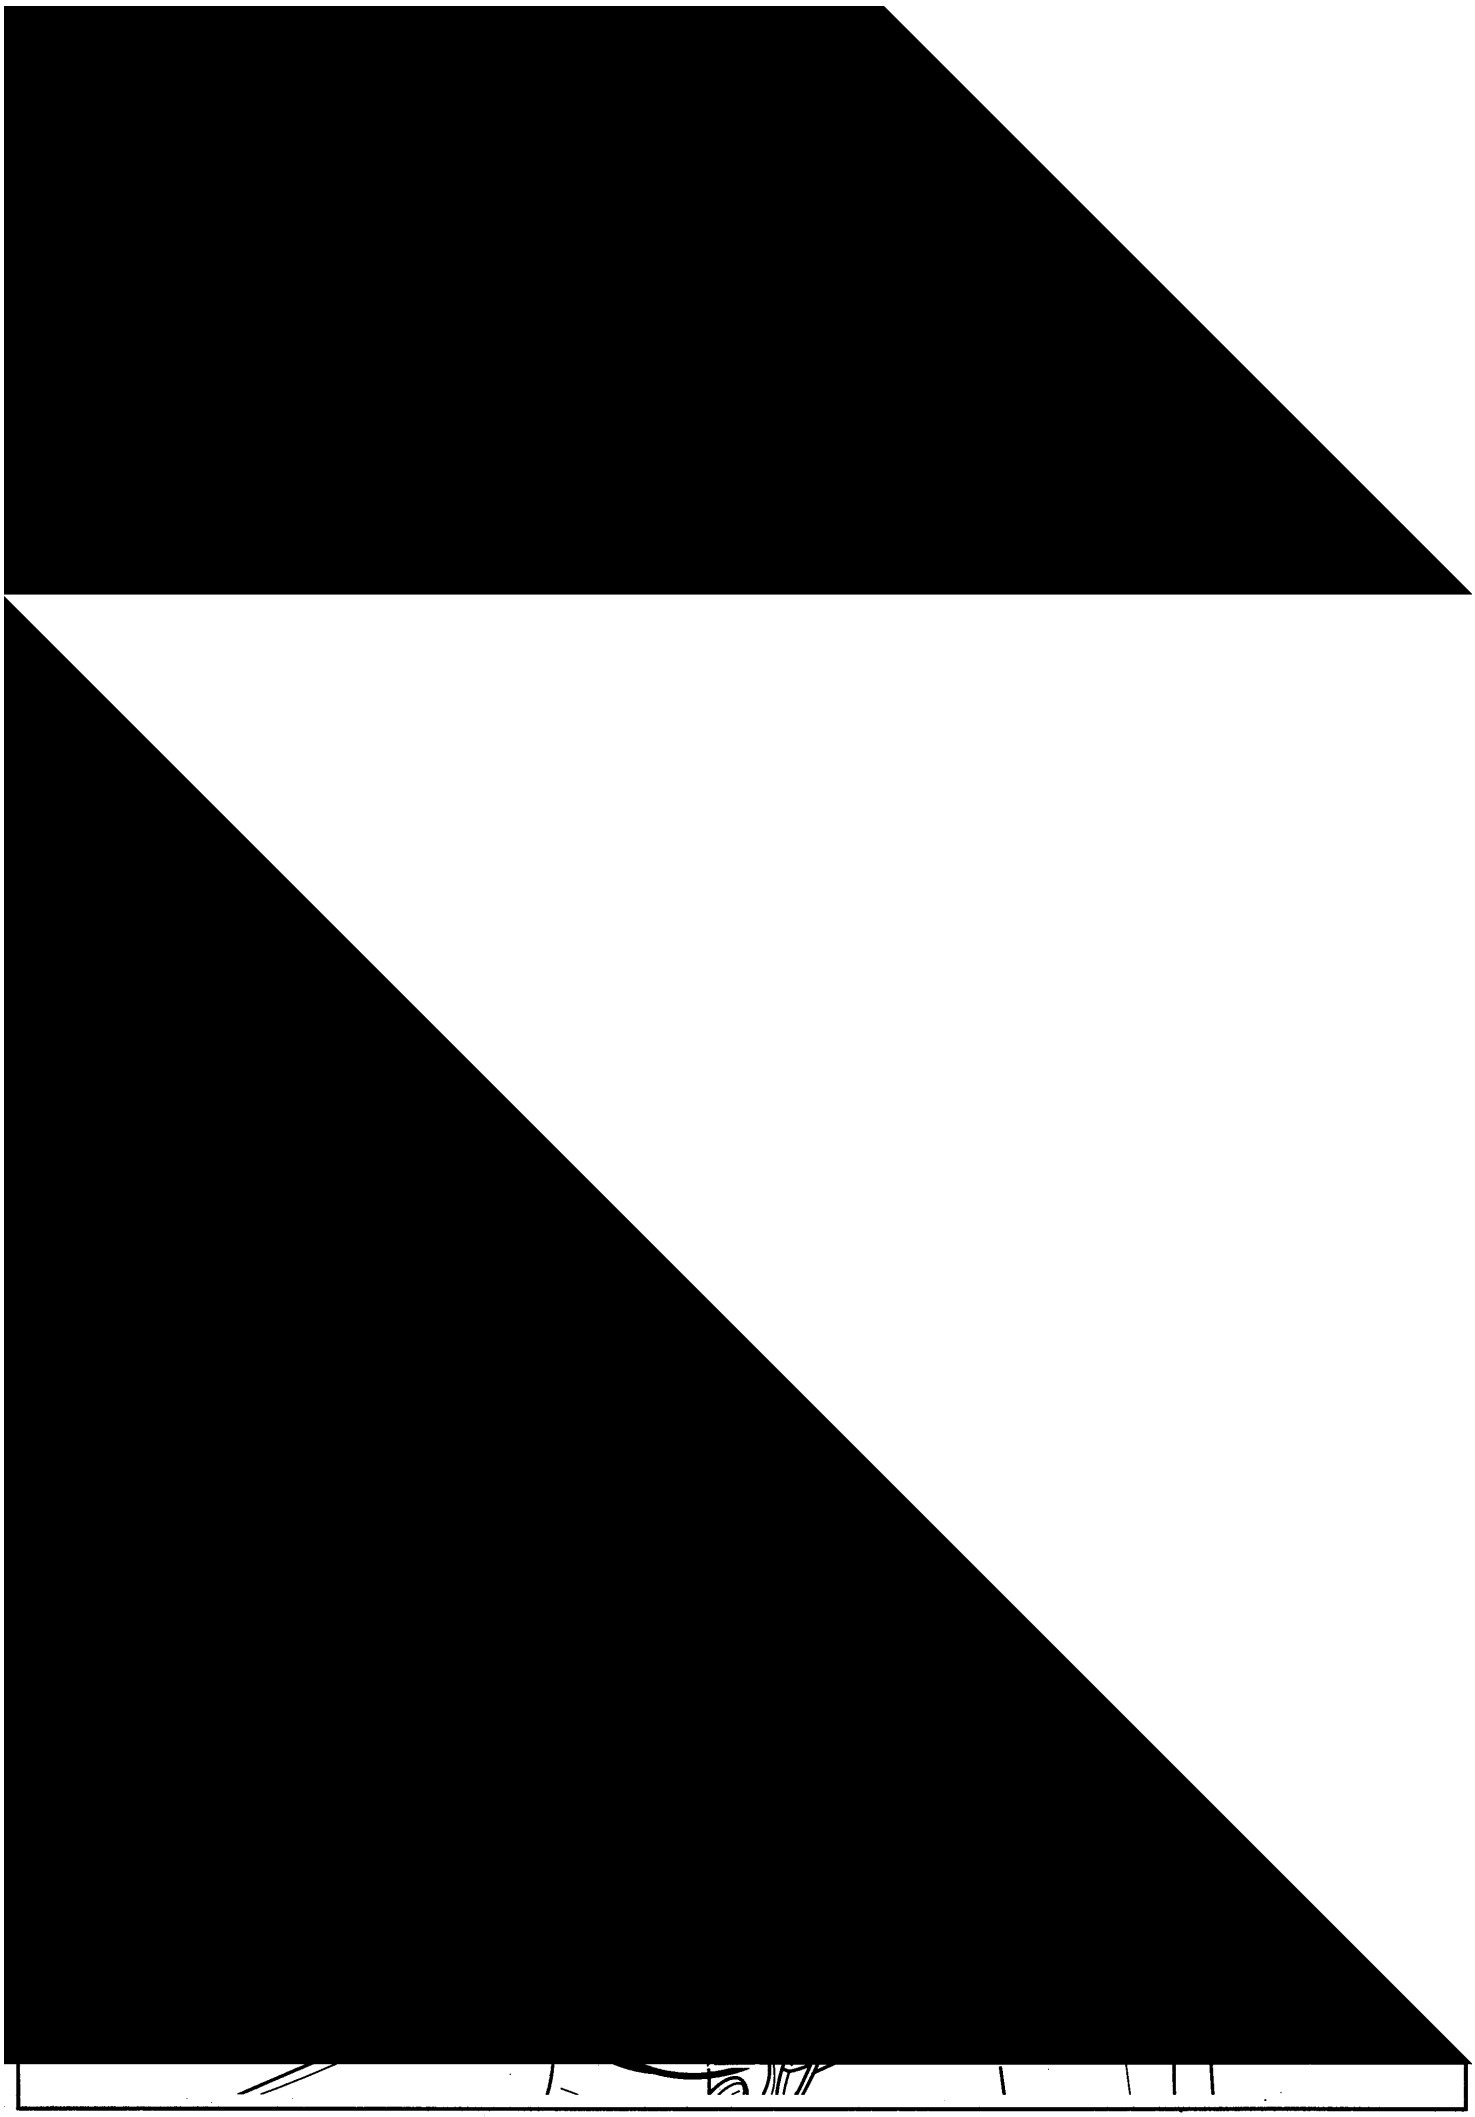

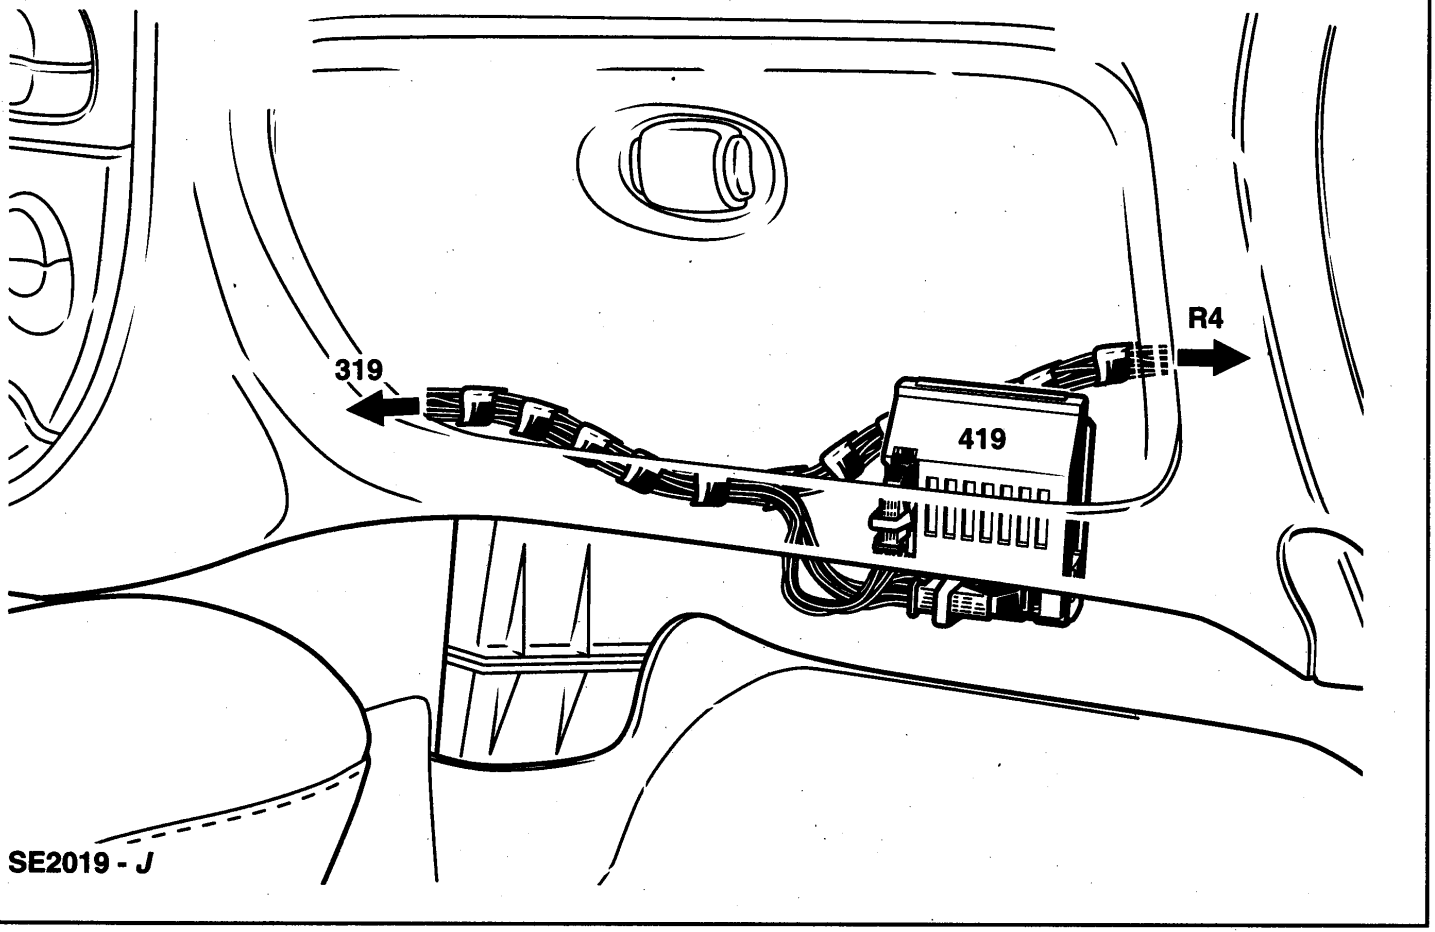
319
R4
419
SE2019 - J

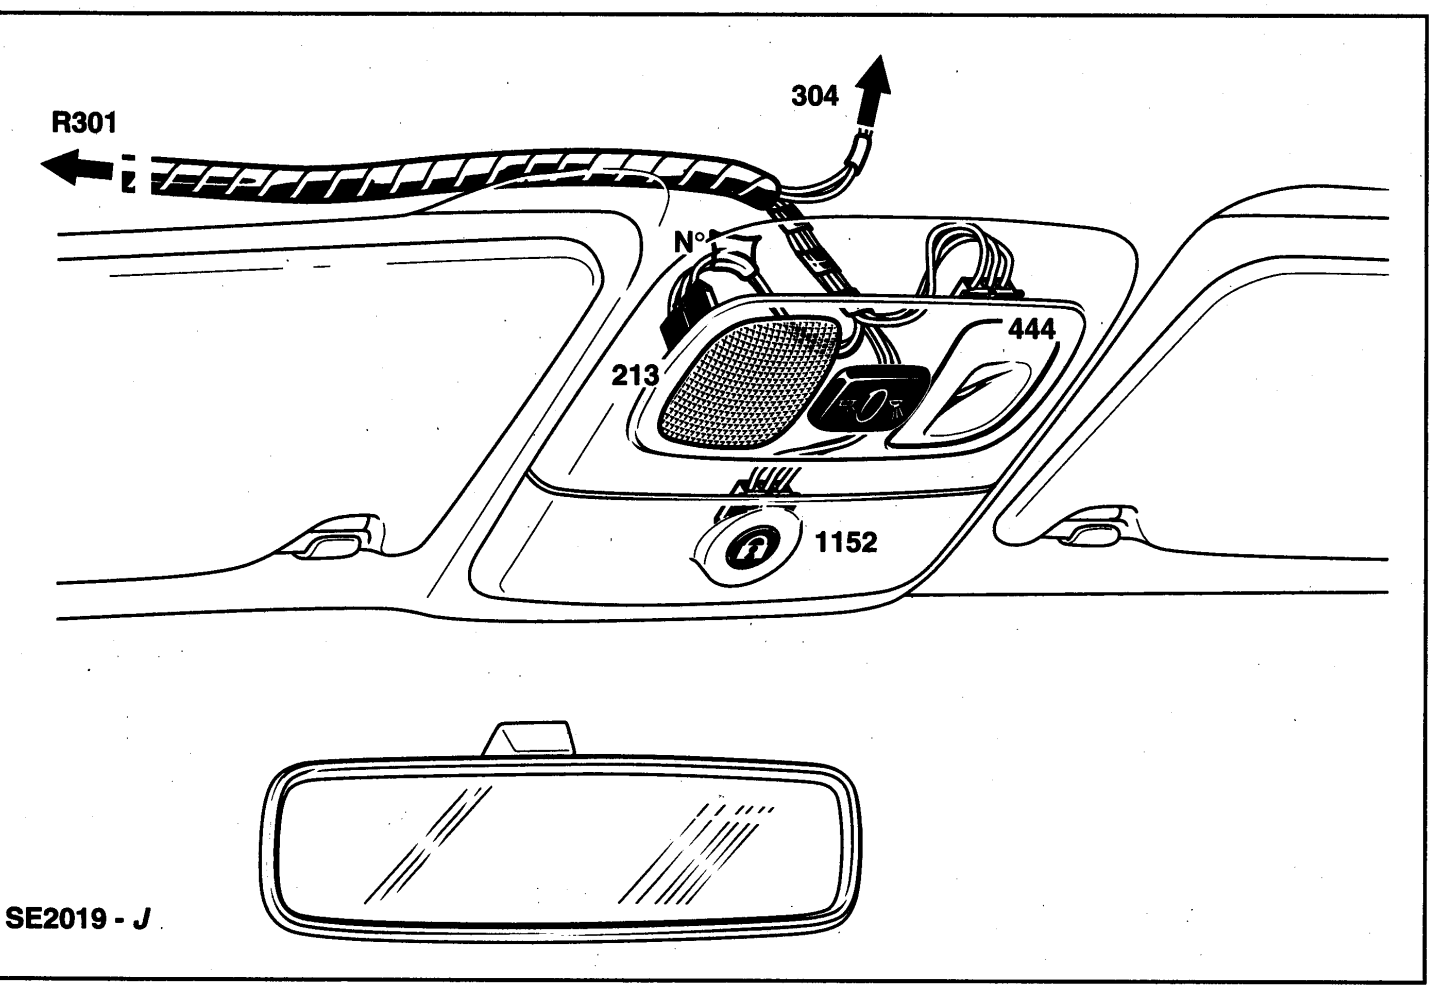
R301
304
N°
444
213
1152
SE2019 - J

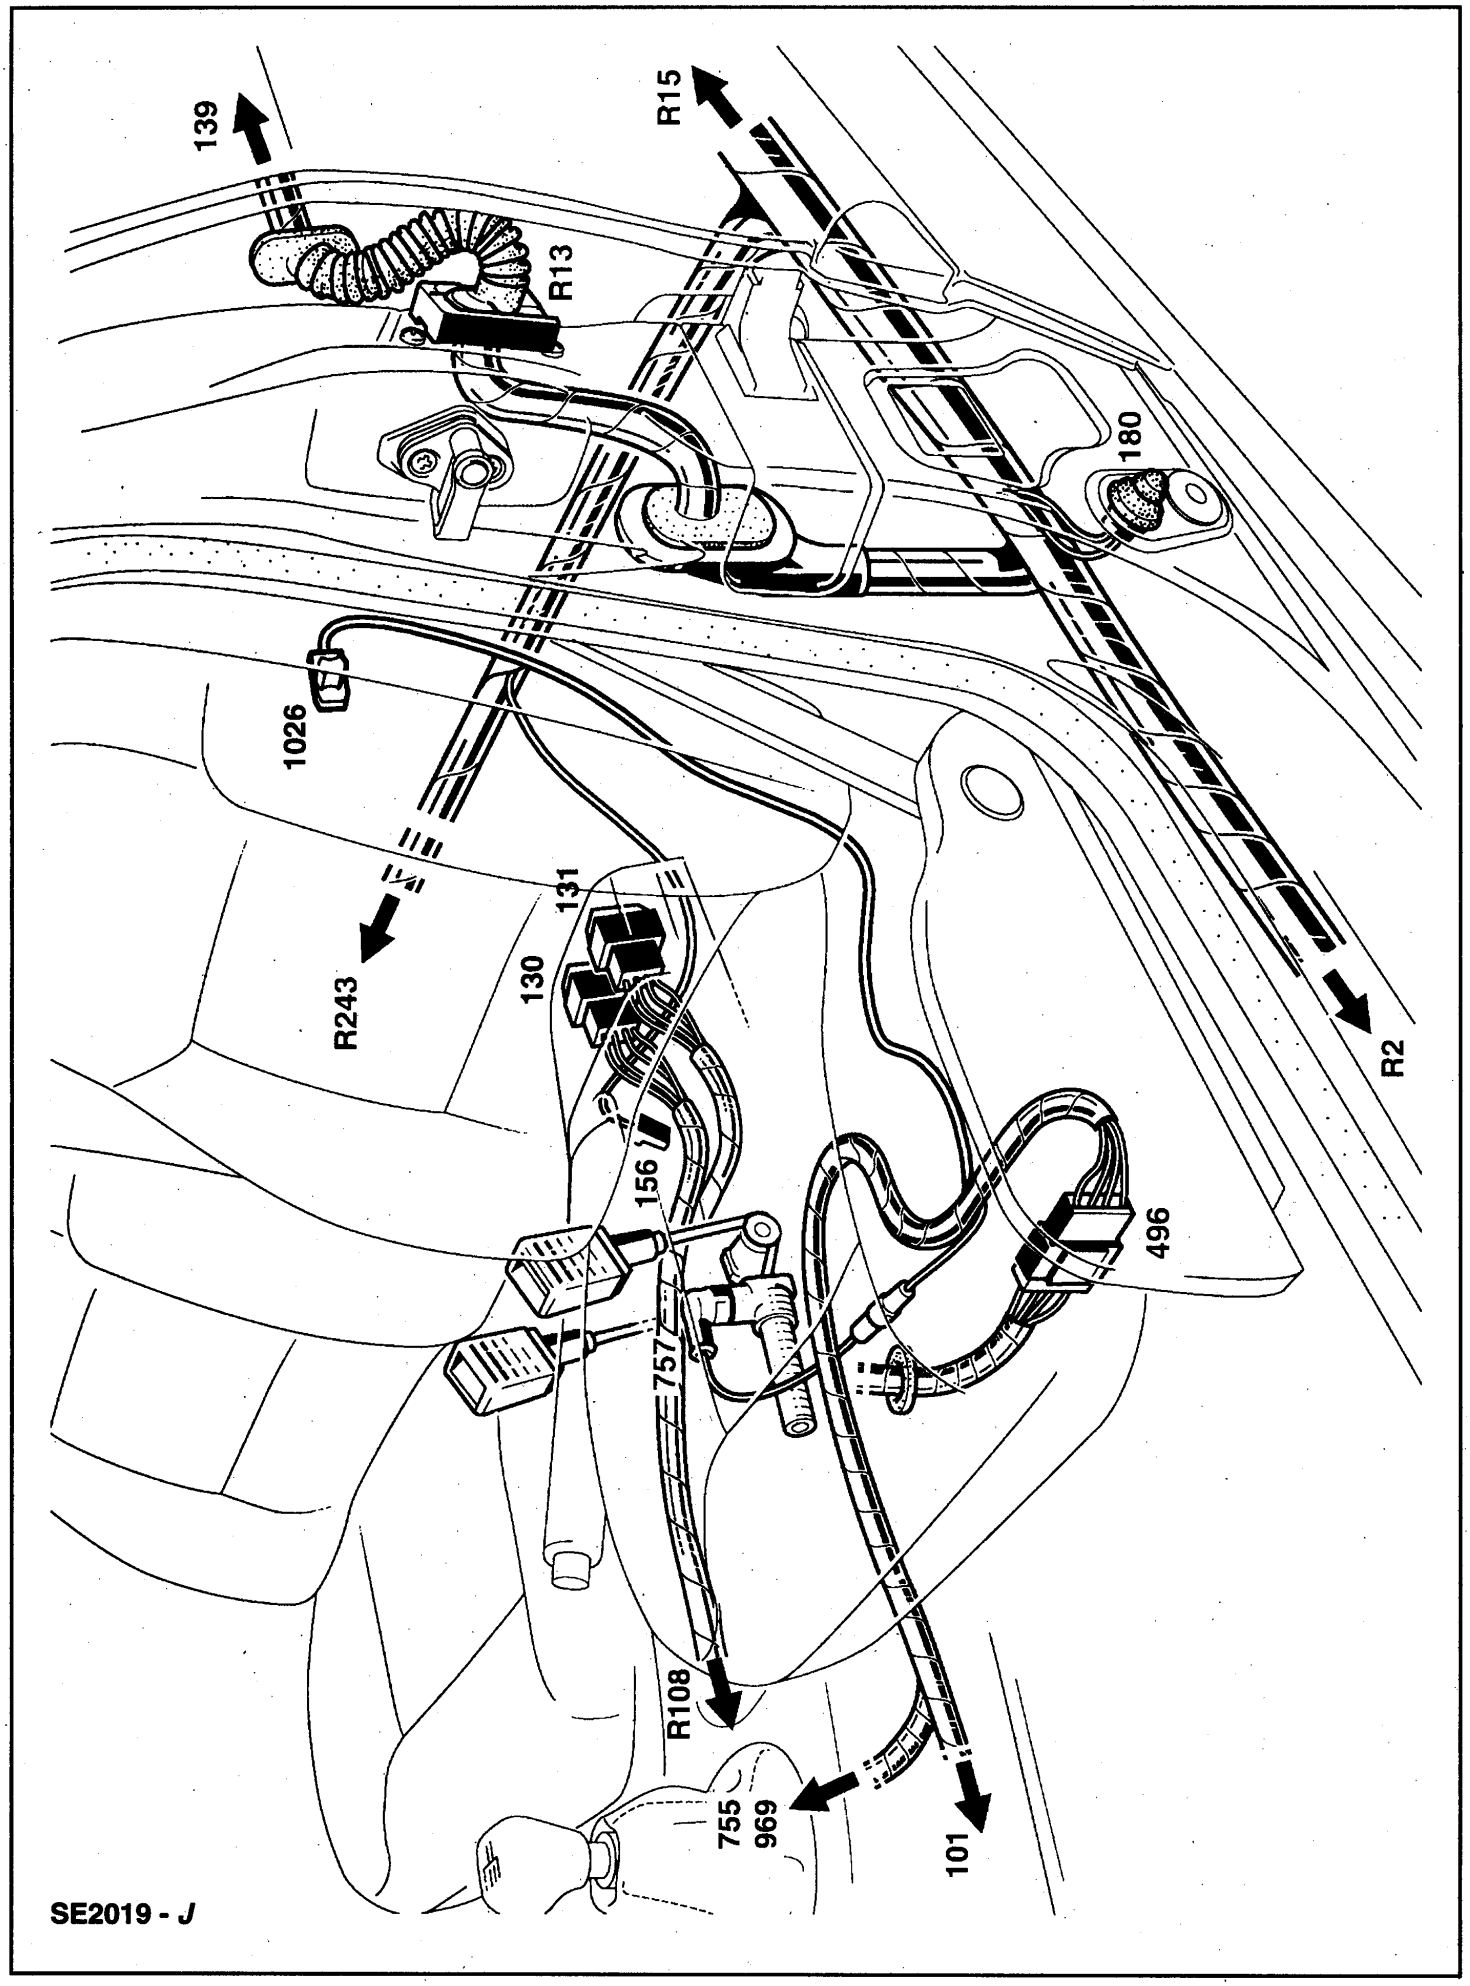
139
R15
R13
180
1026
131
130
R243
156
496
R2
757
R108
755
969
101
SE2019 - J

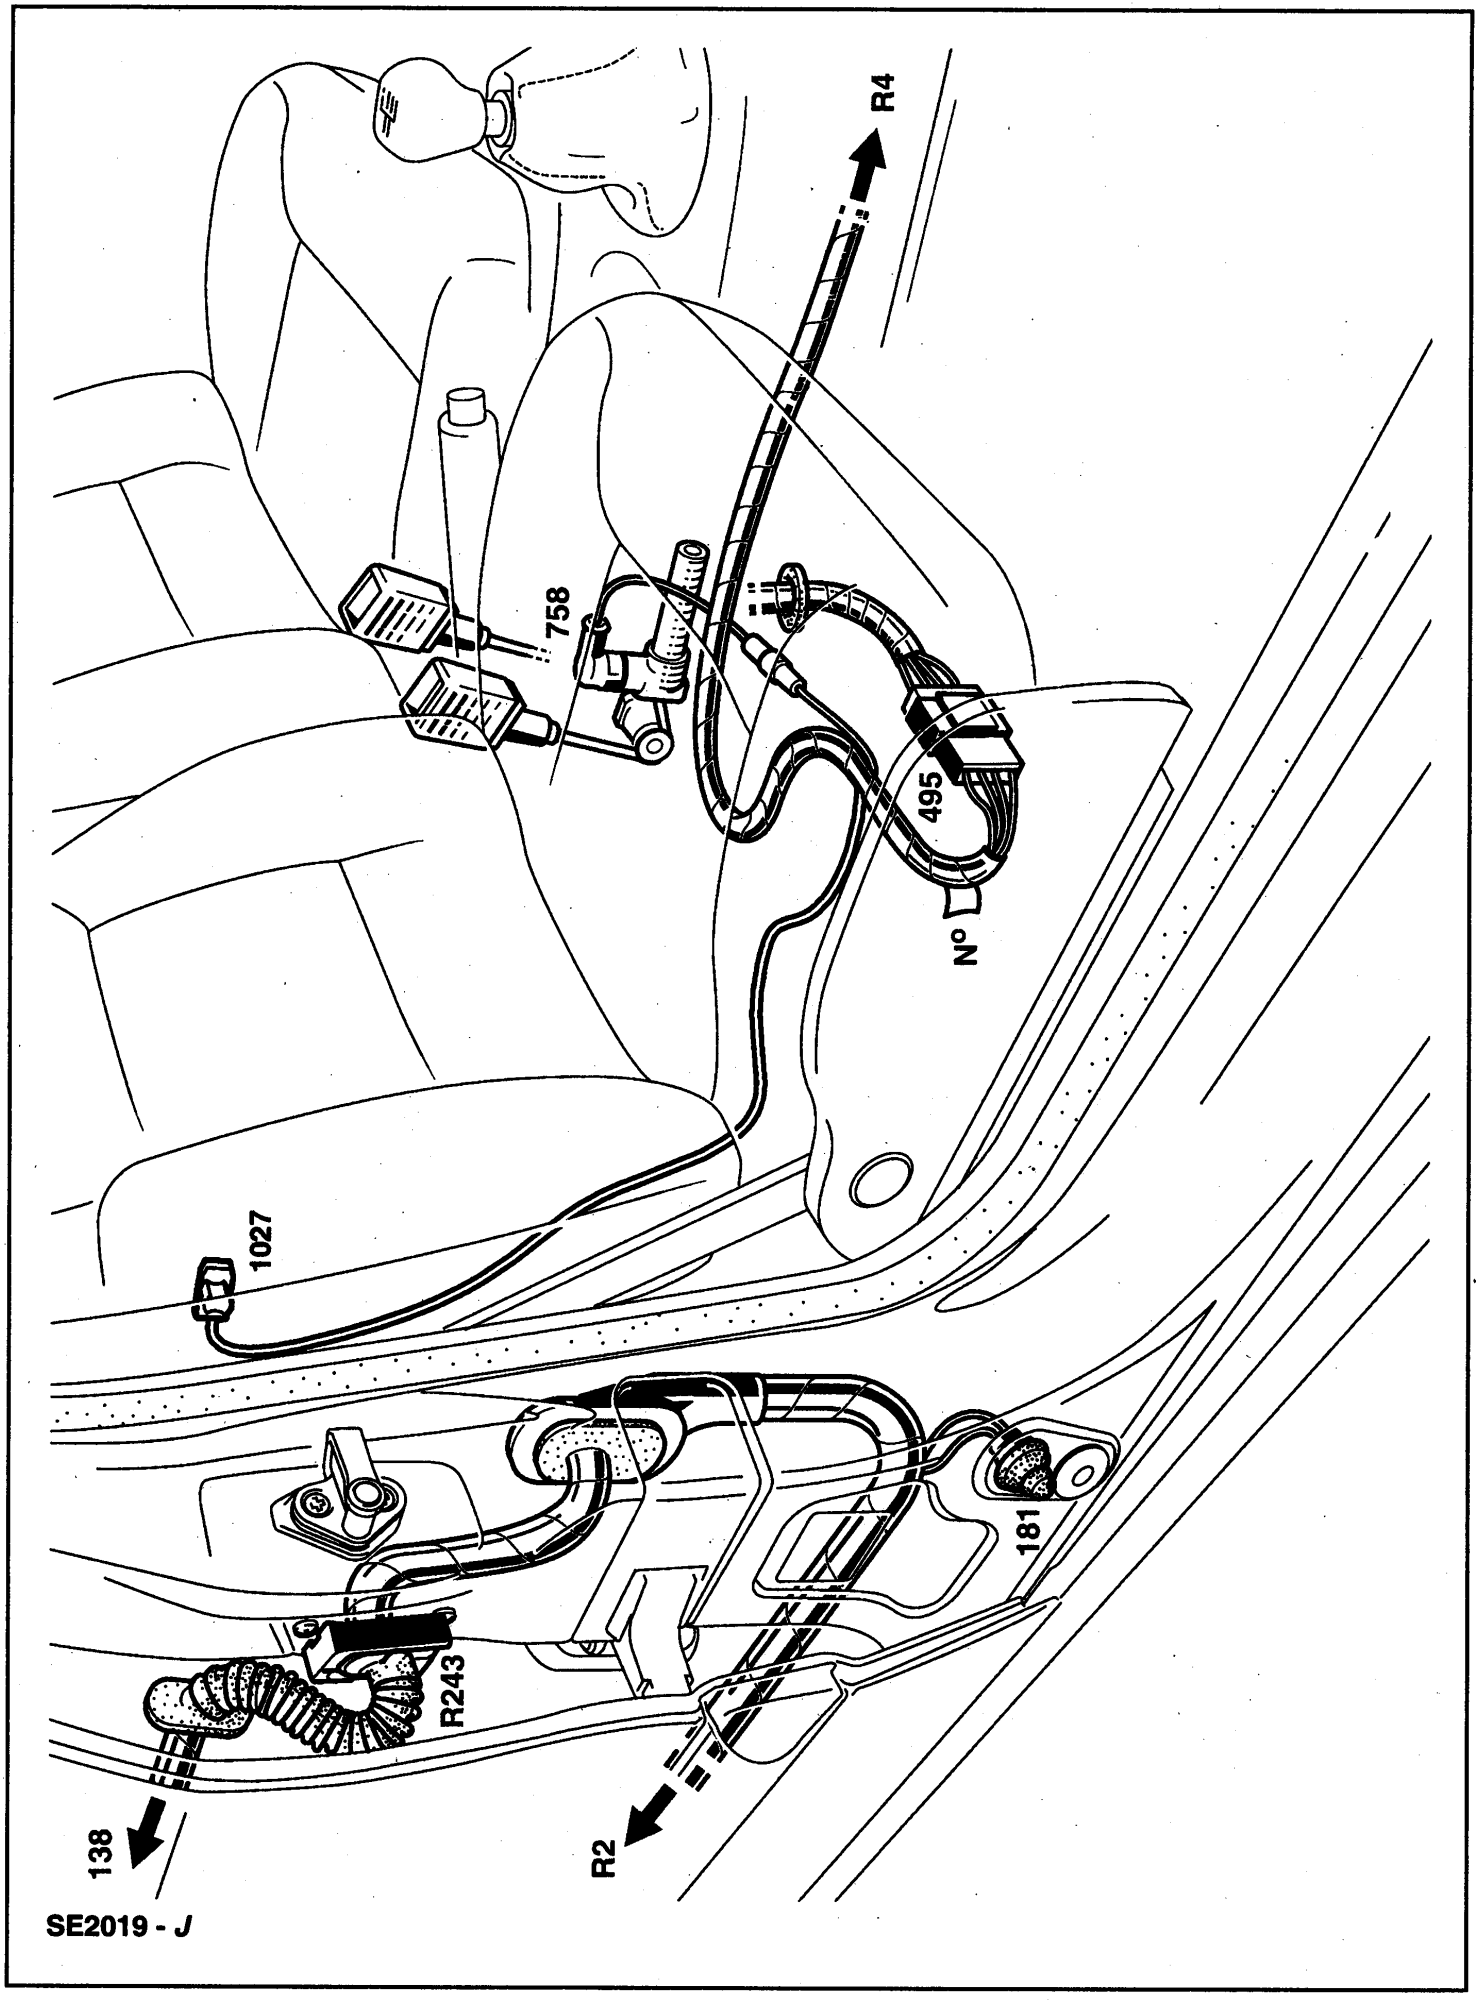
R4
758
495
N°
1027
181
R243
138
R2
SE2019 - J

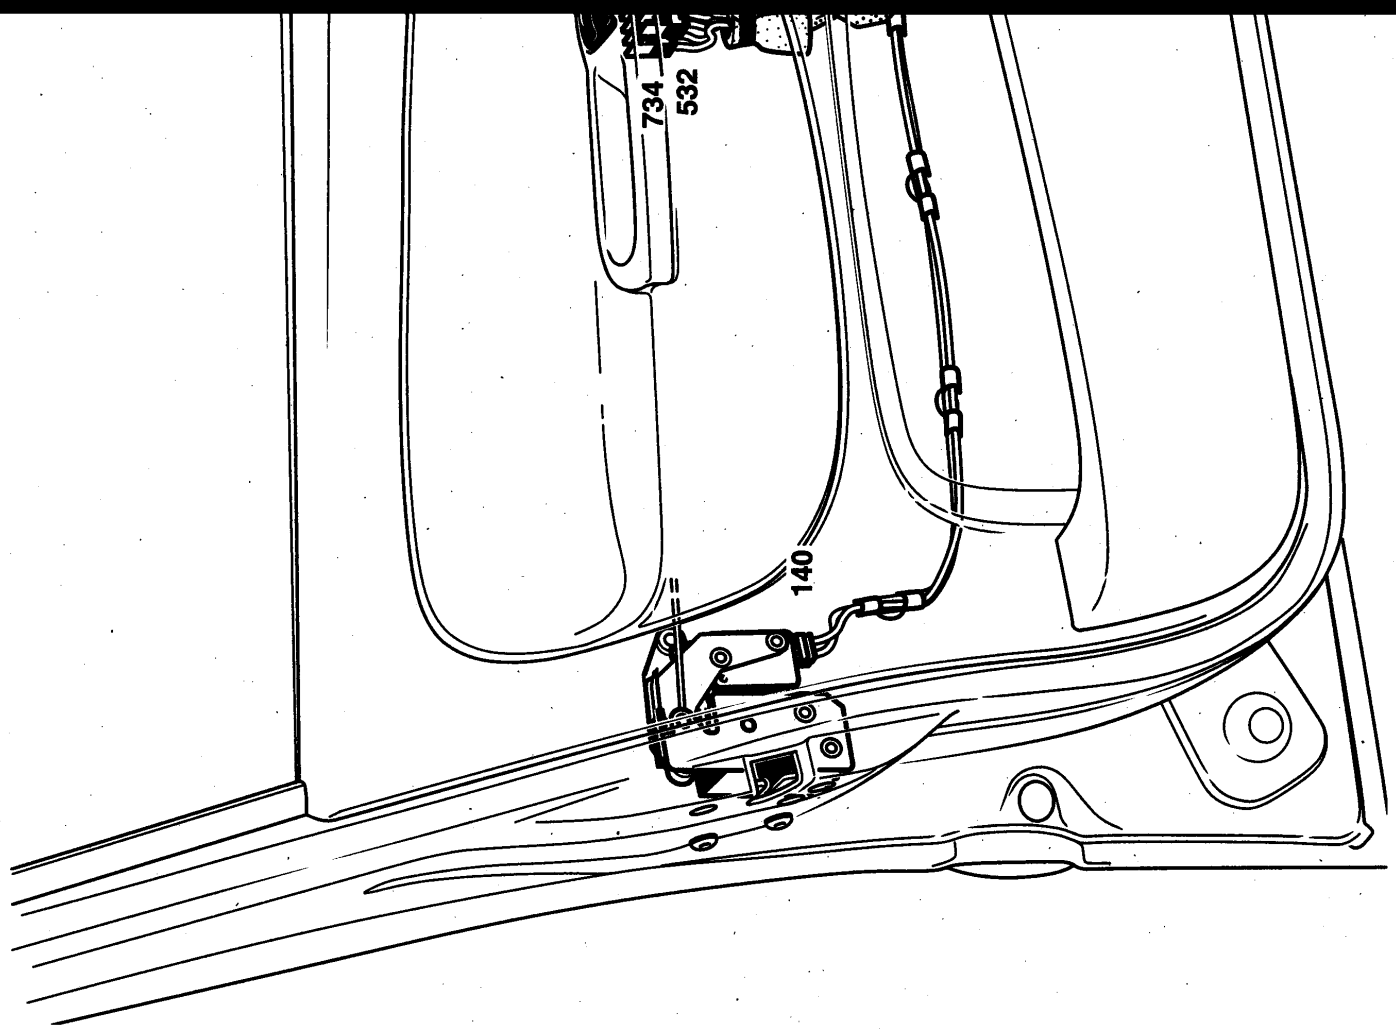

SE2019 - *J*

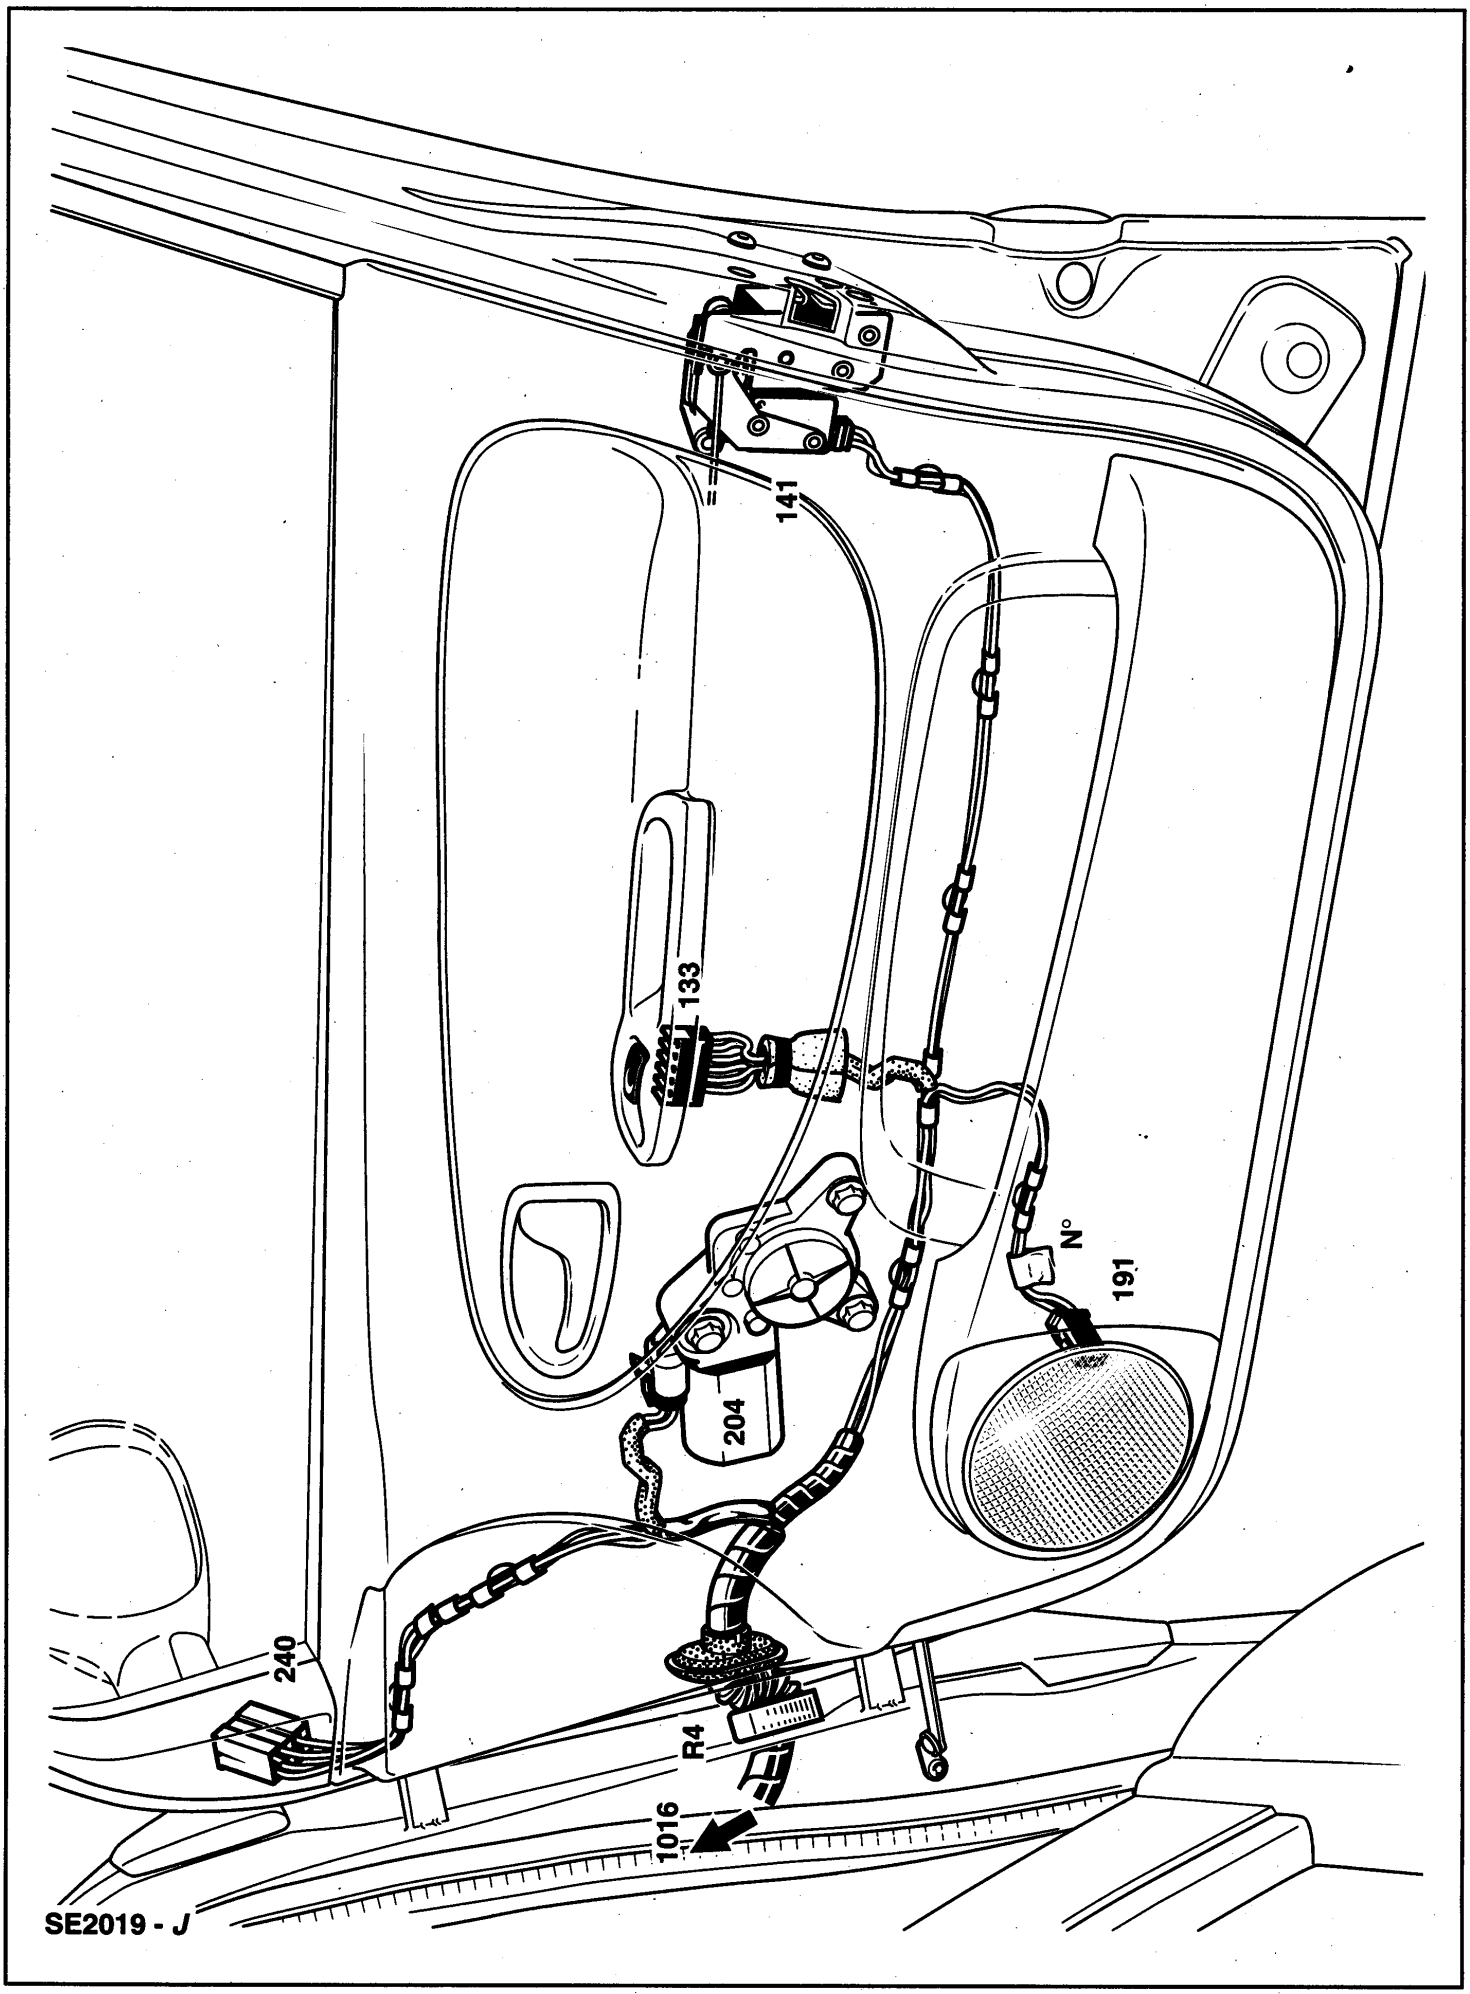
141
133
N°
191
204
240
R4
1016
SE2019 - J

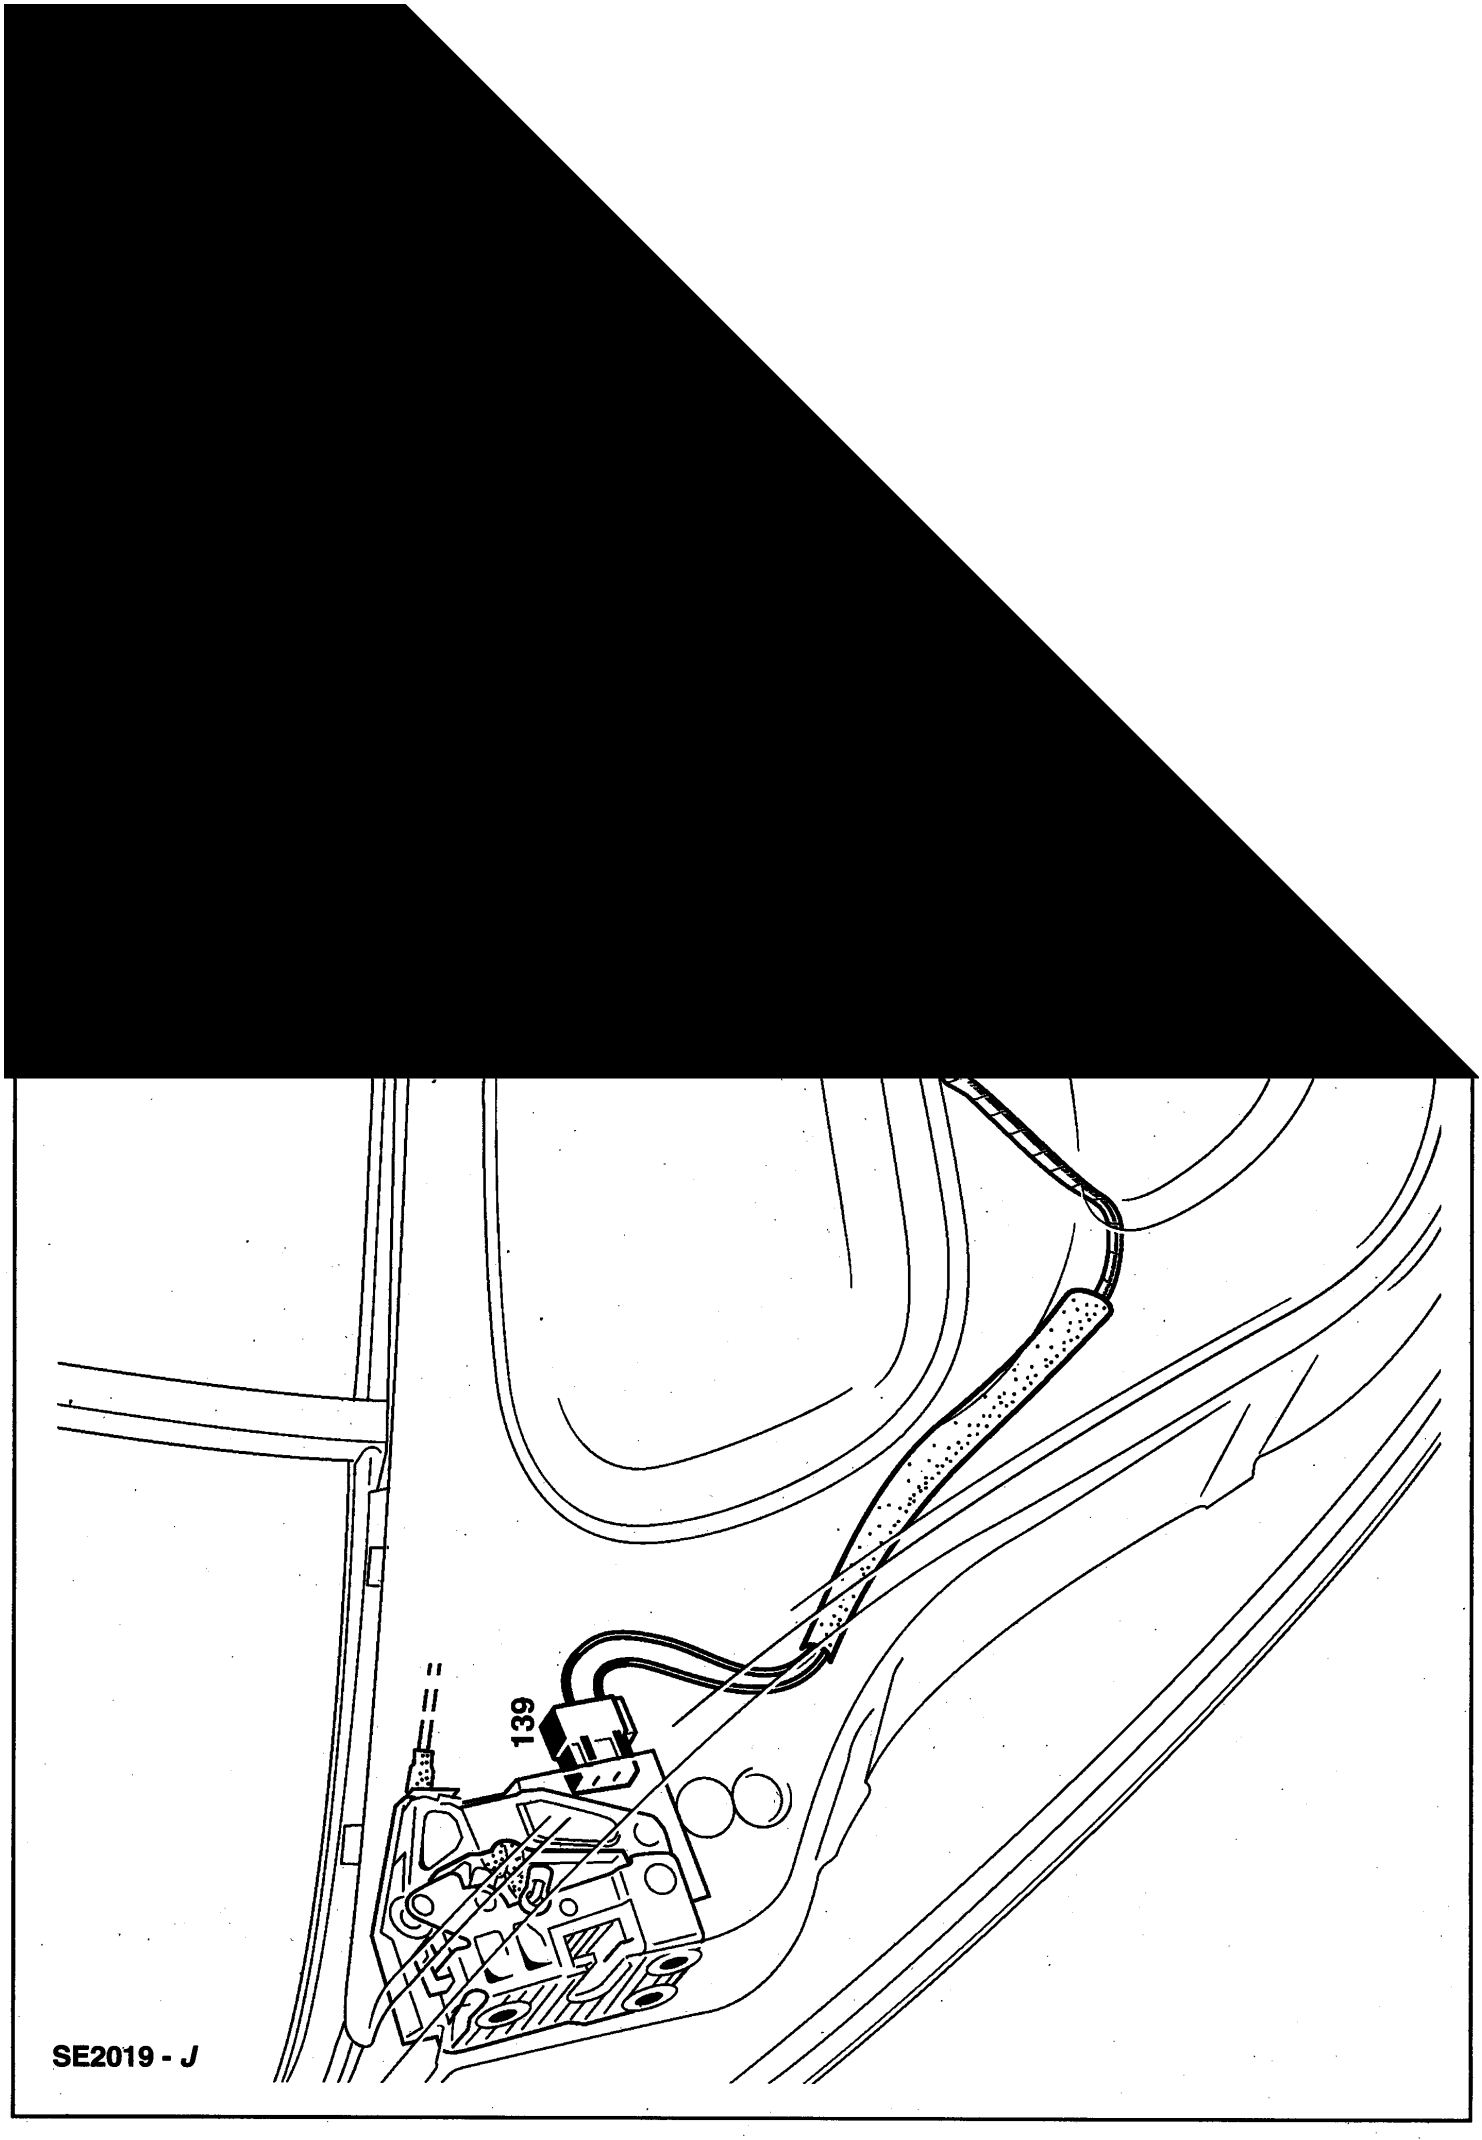
139
SE2019 - J

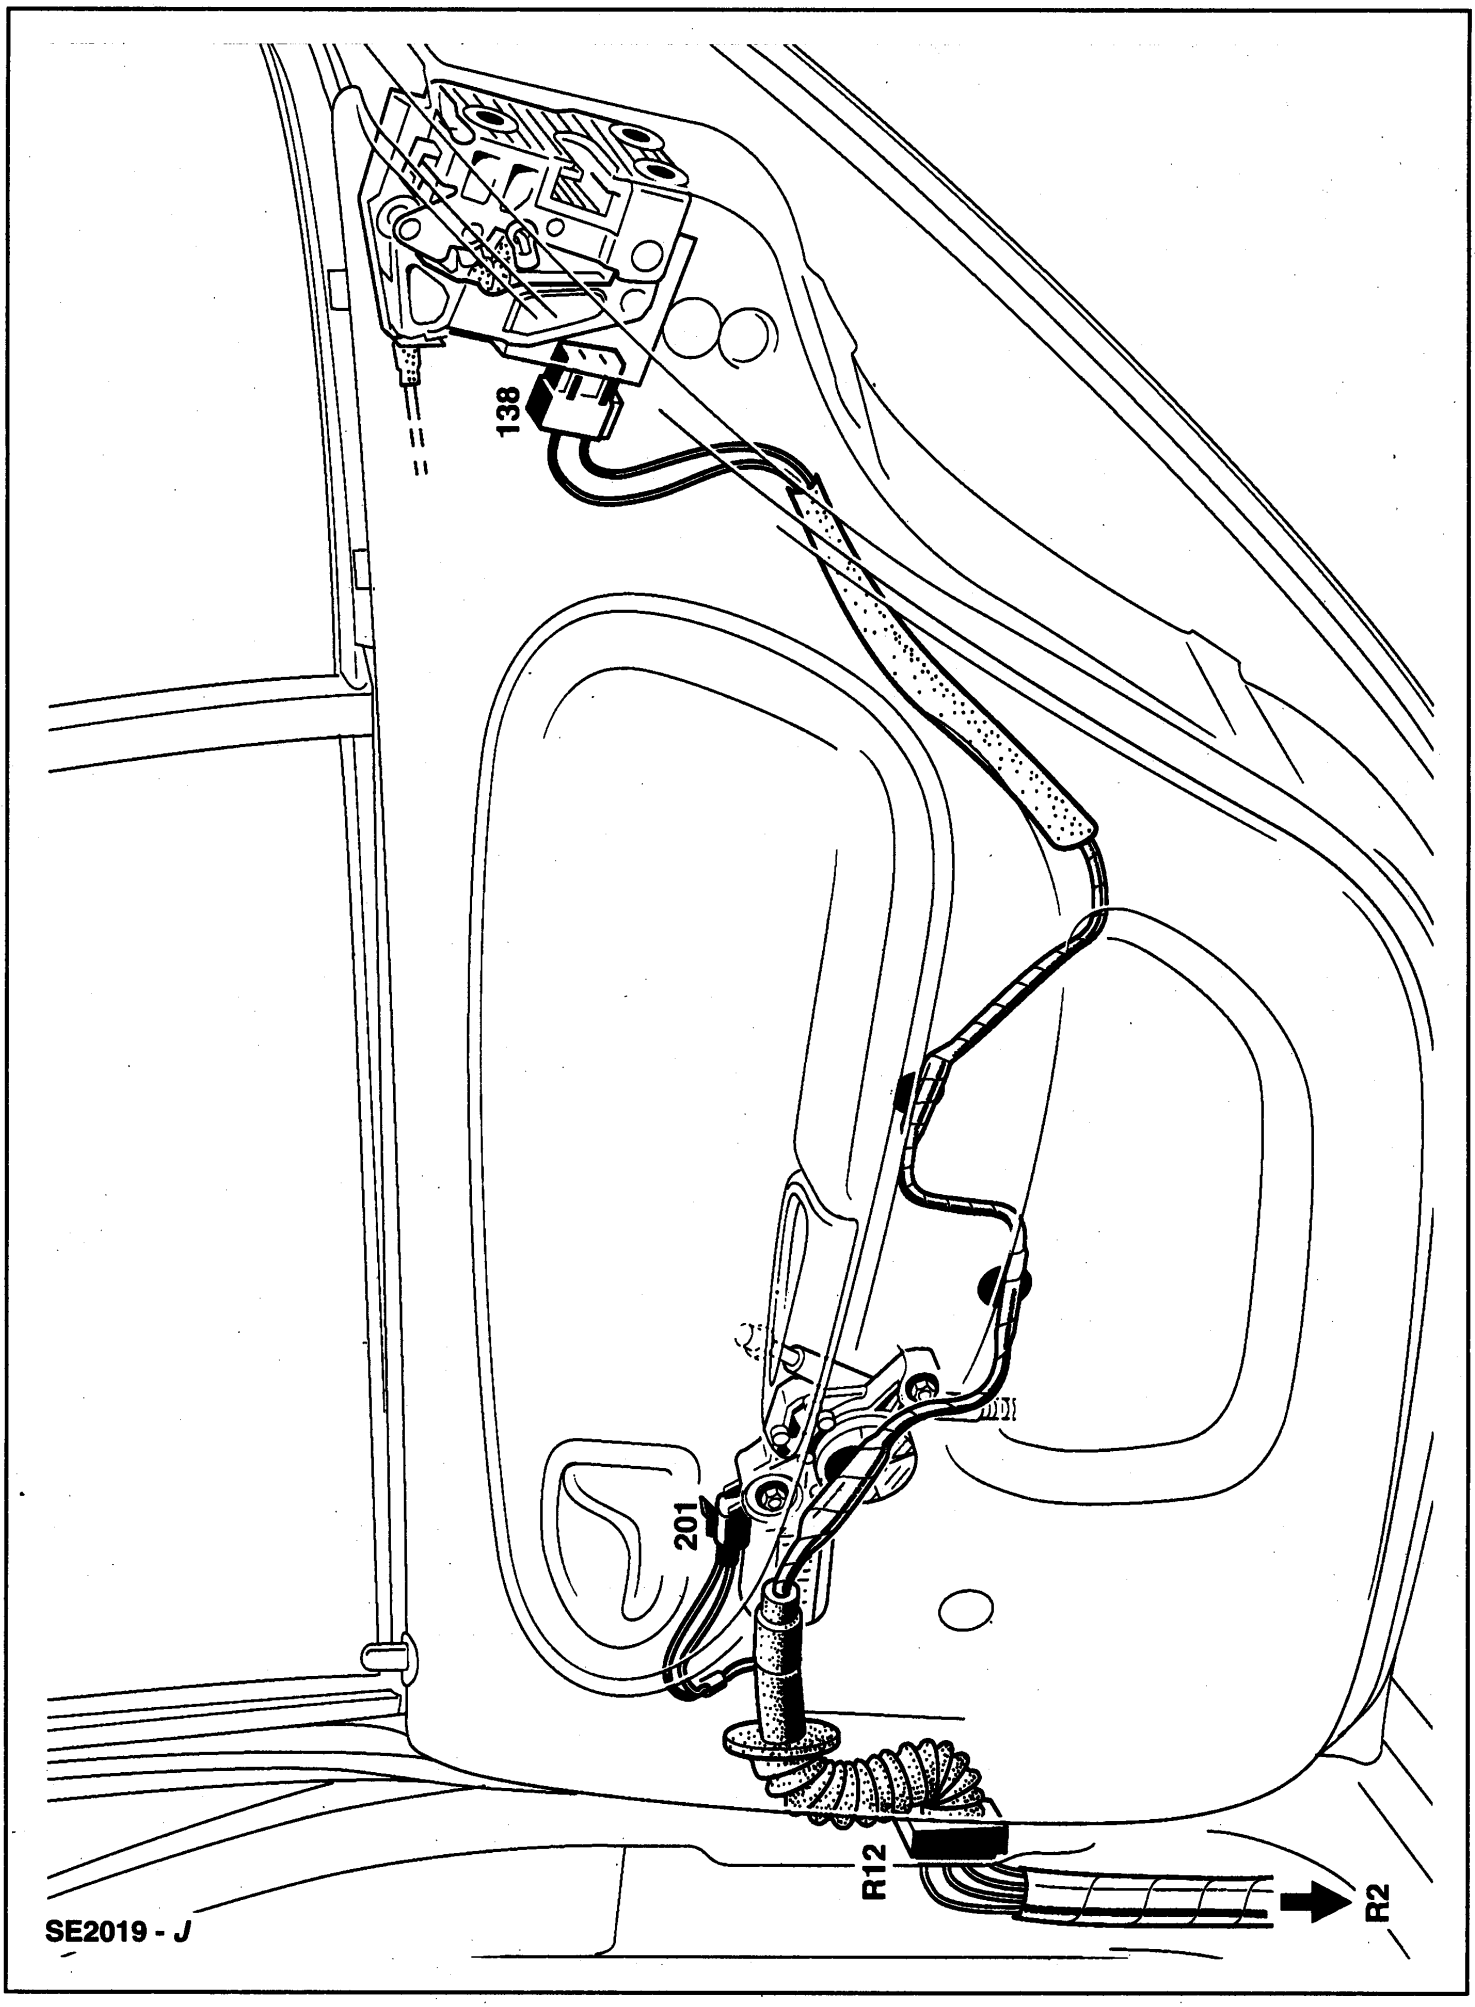
138
201
R12
R2
SE2019 - J

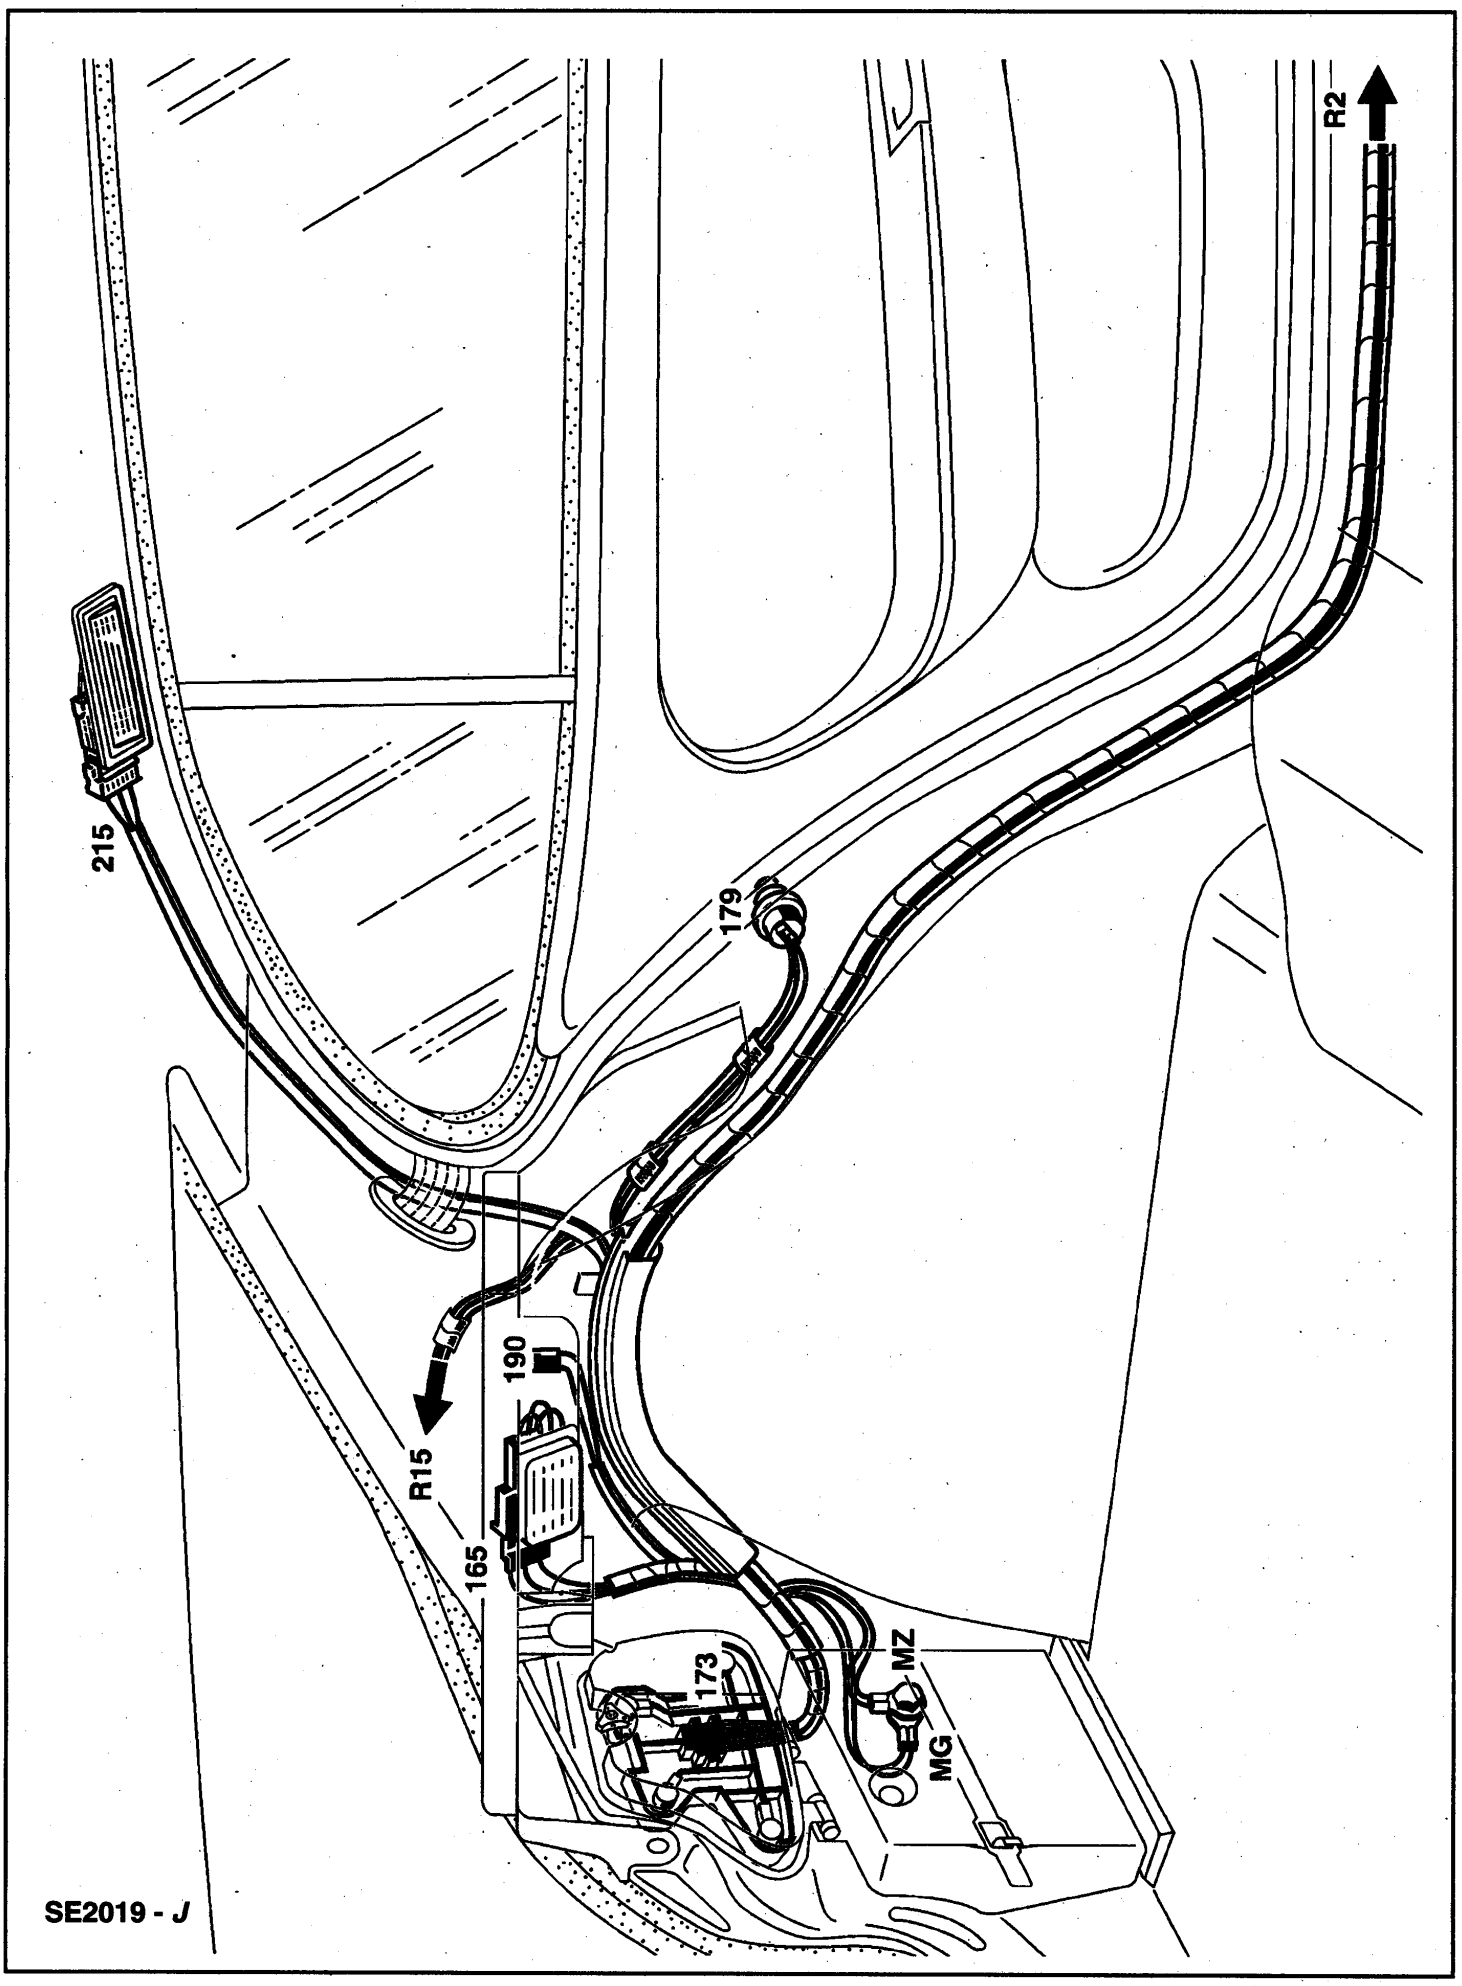
R2
215
179
190
R15
165
173
MZ
MG
SE2019 - J

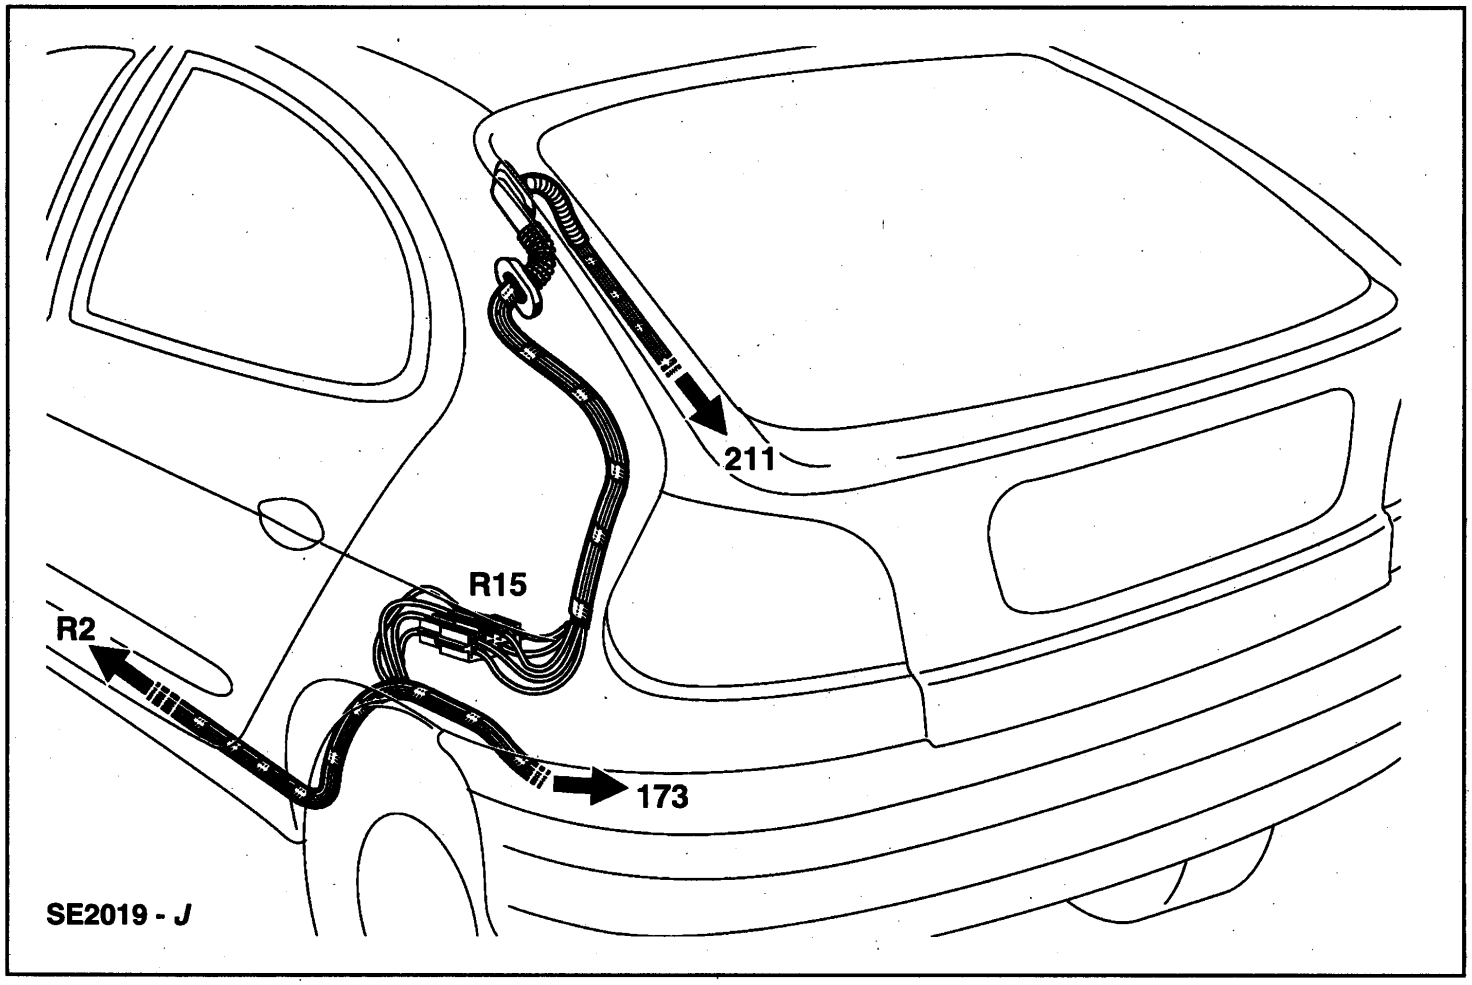
211
R15
R2
173
SE2019 - J

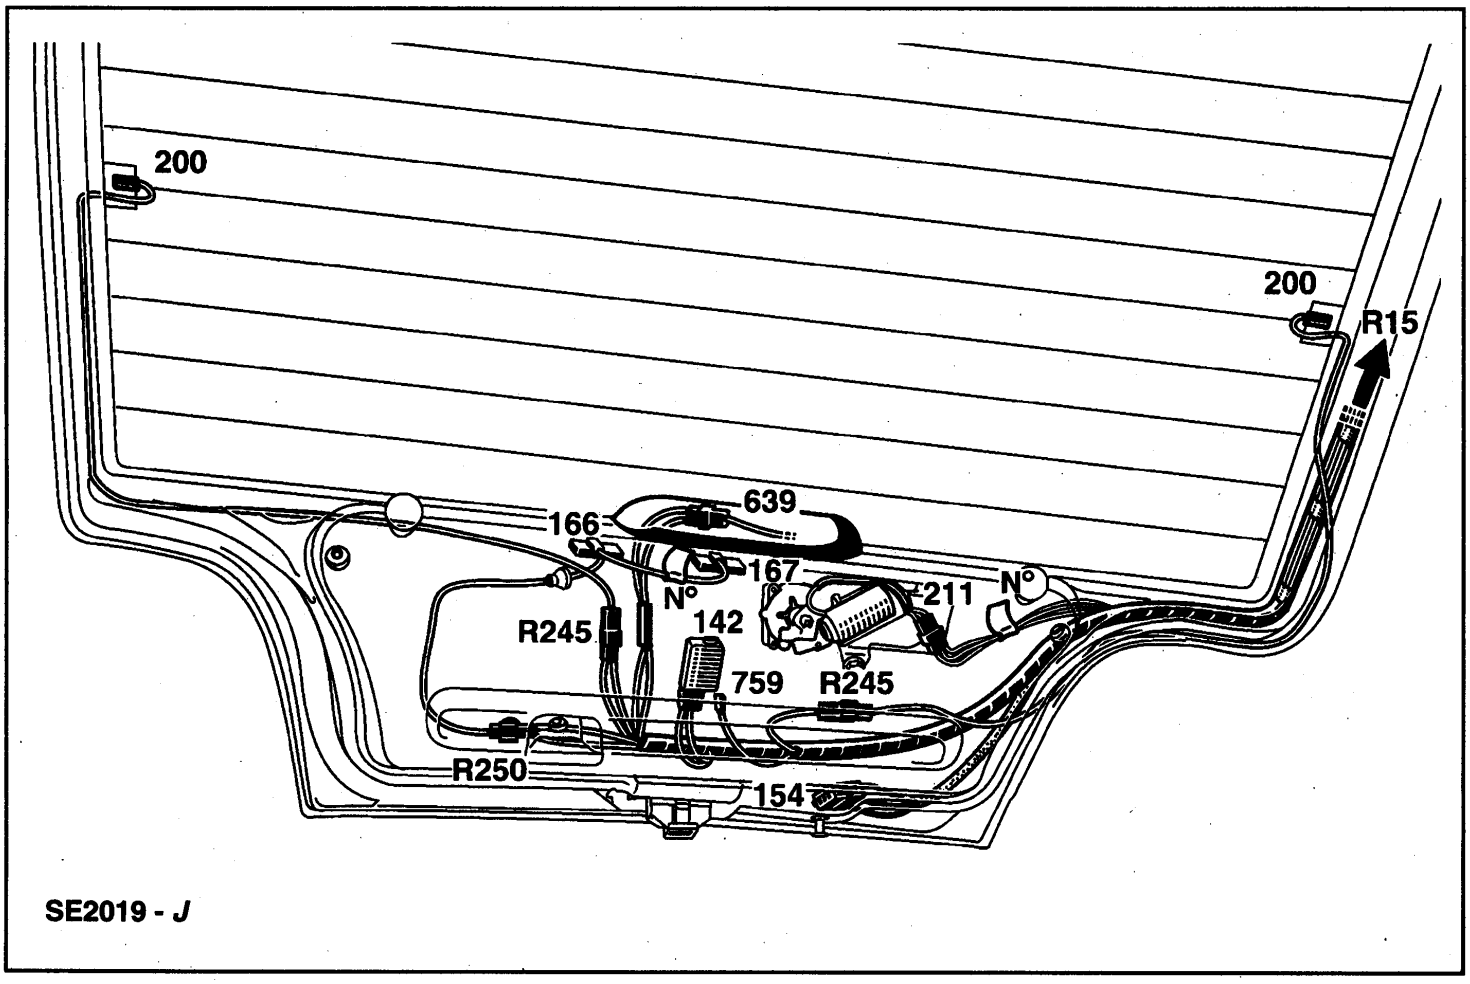
200
200
R15
639
166
167
N°
211
N°
142
R245
759
R245
R250
154
SE2019 - J

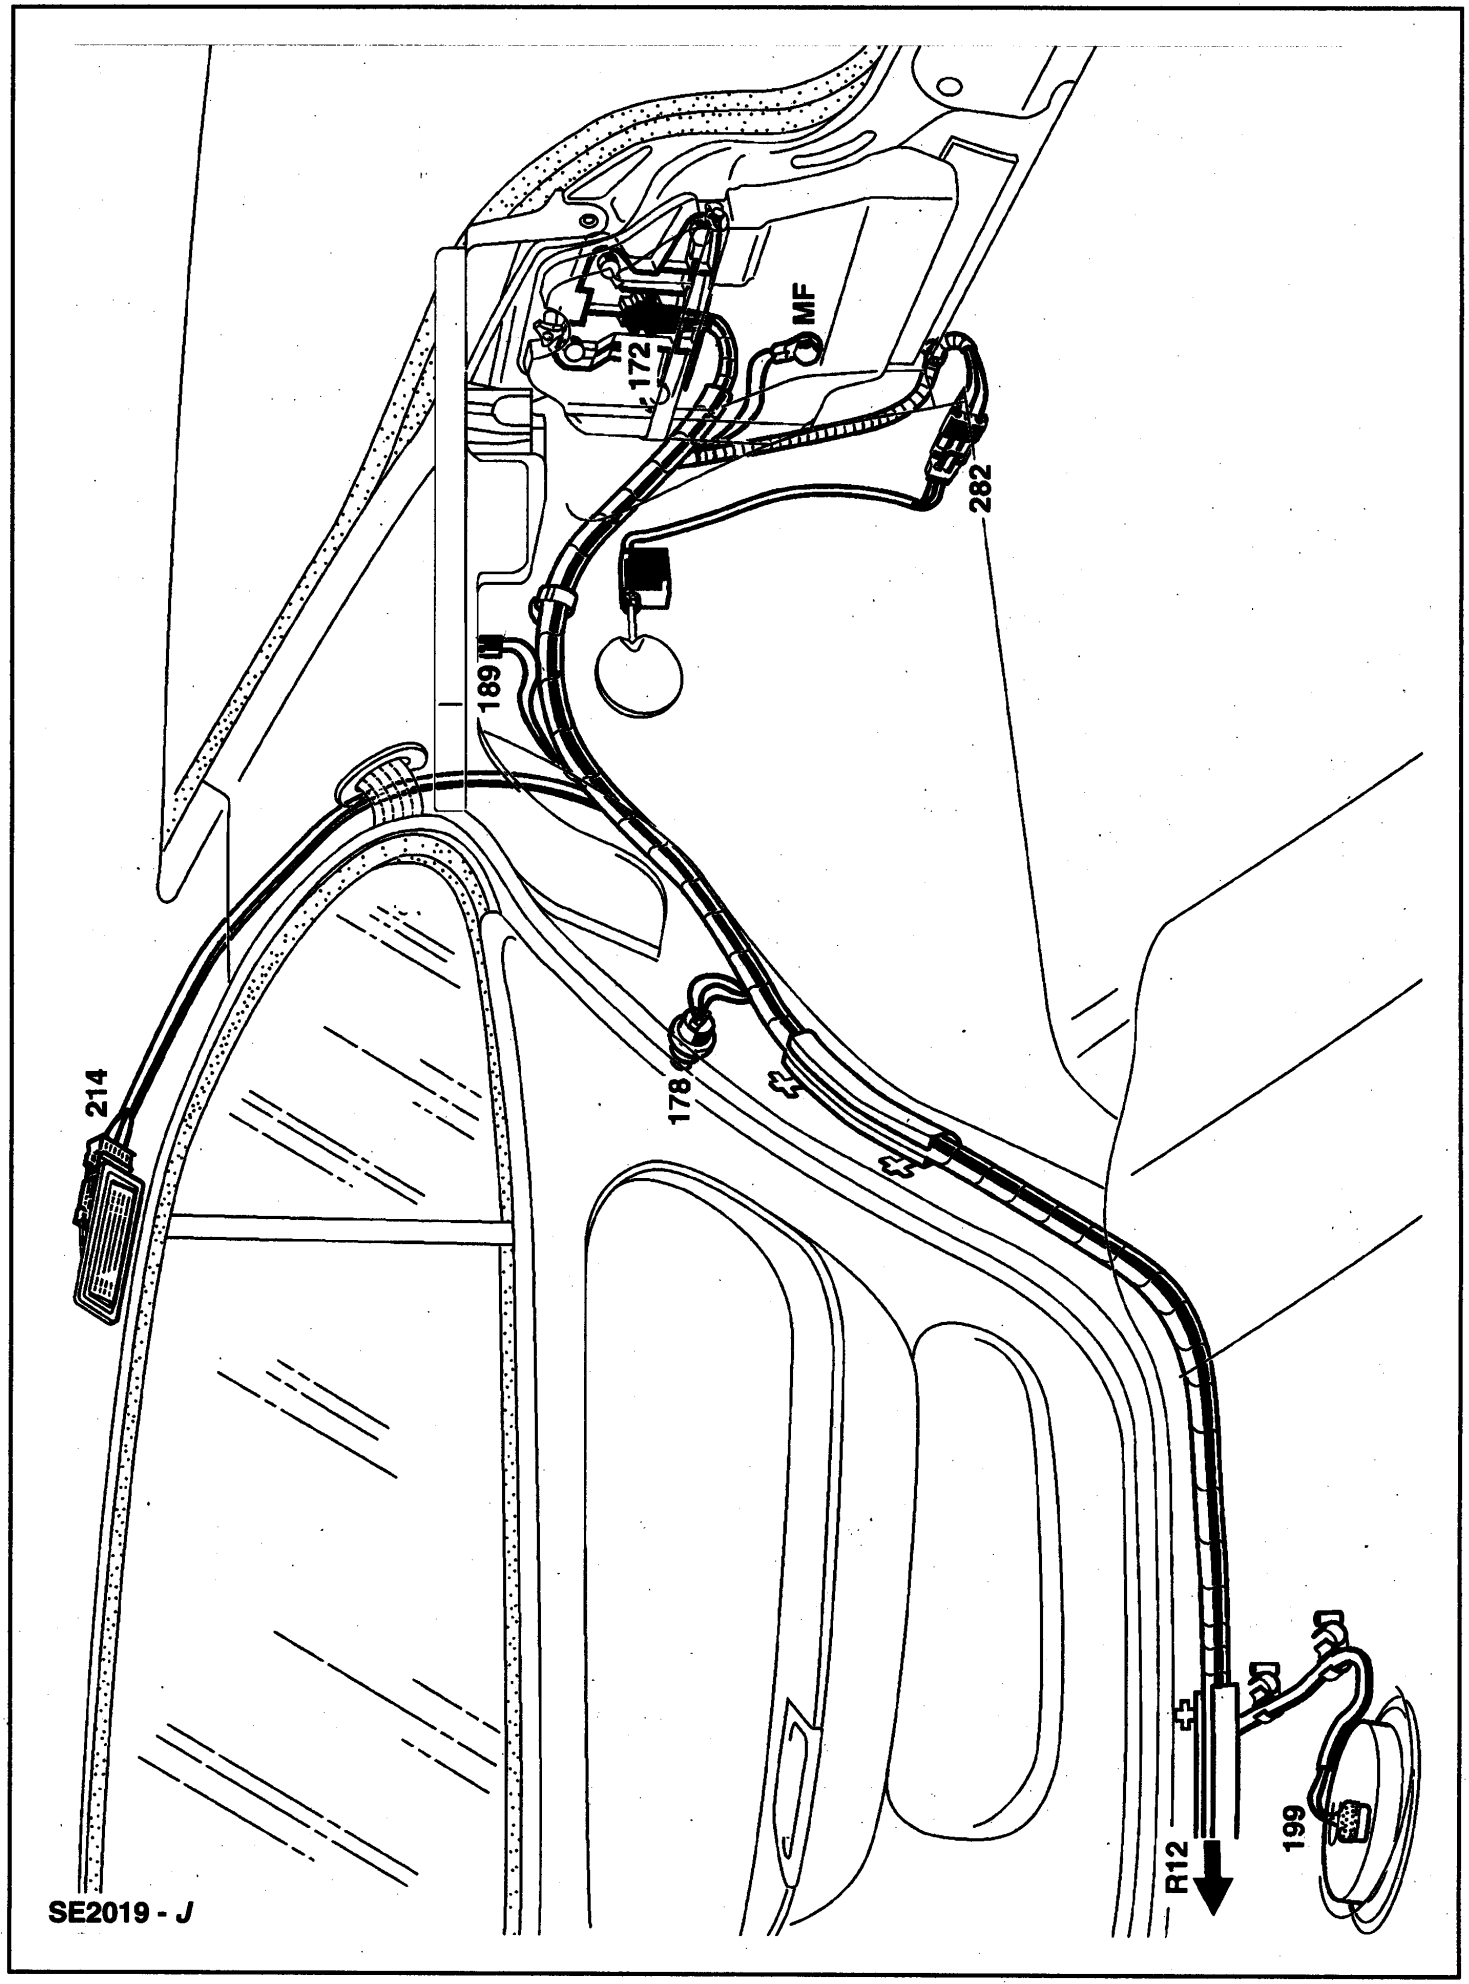
MF
172
282
189
214
178
R12
199
SE2019 - J

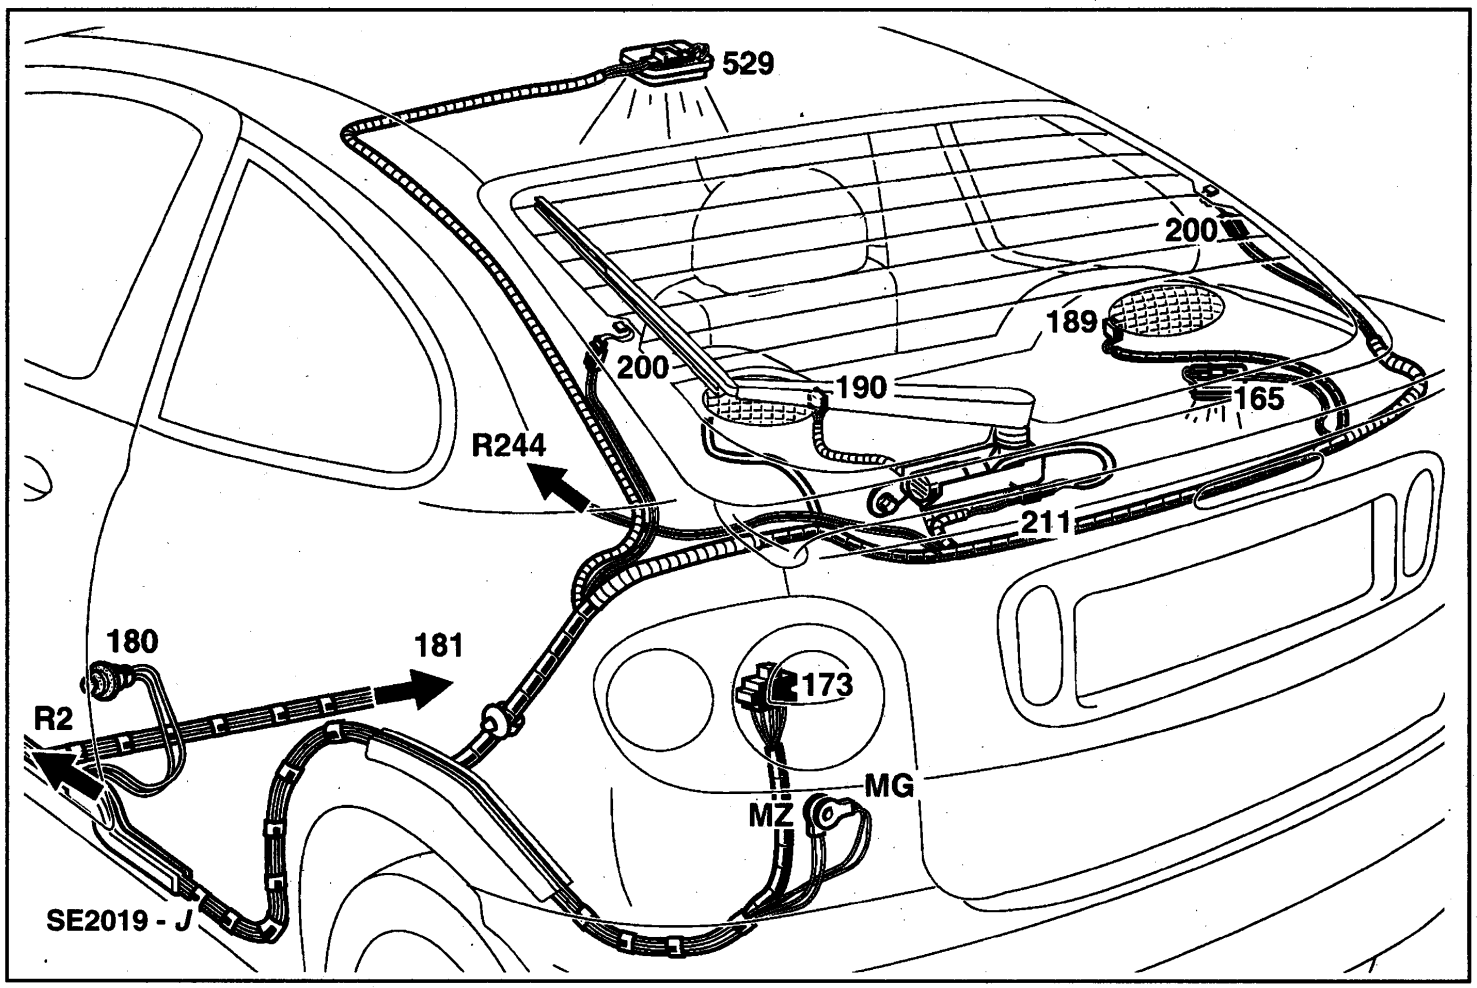
529
200
189
200
190
165
R244
211
180
181
R2
173
MG
MZ
SE2019 - J

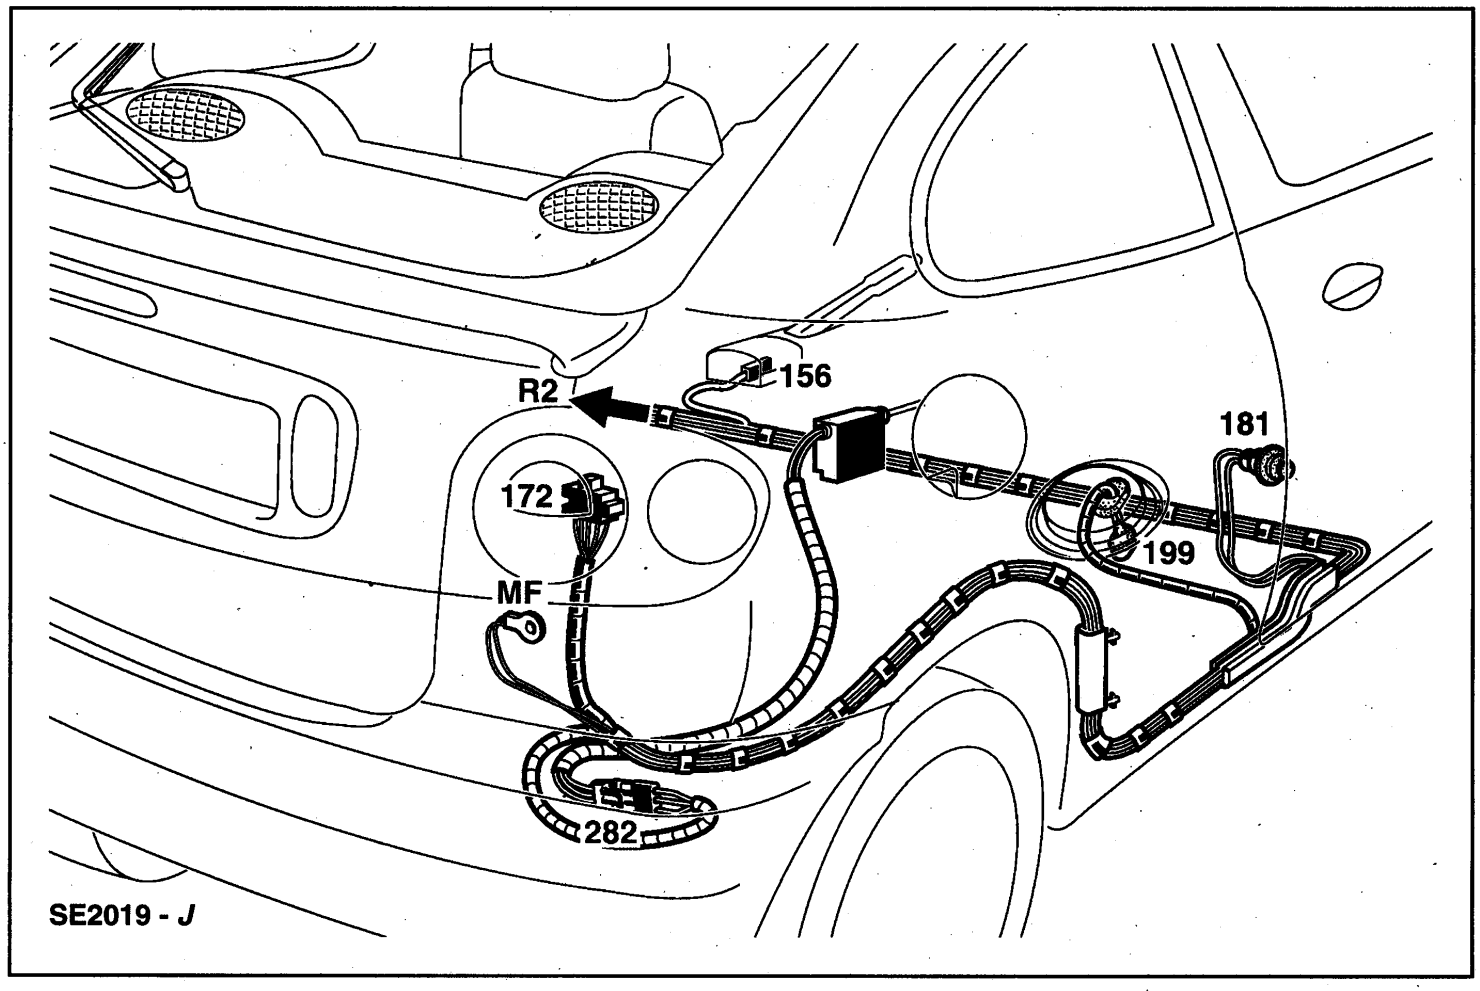
156
R2
181
172
199
MF
282
SE2019 - J

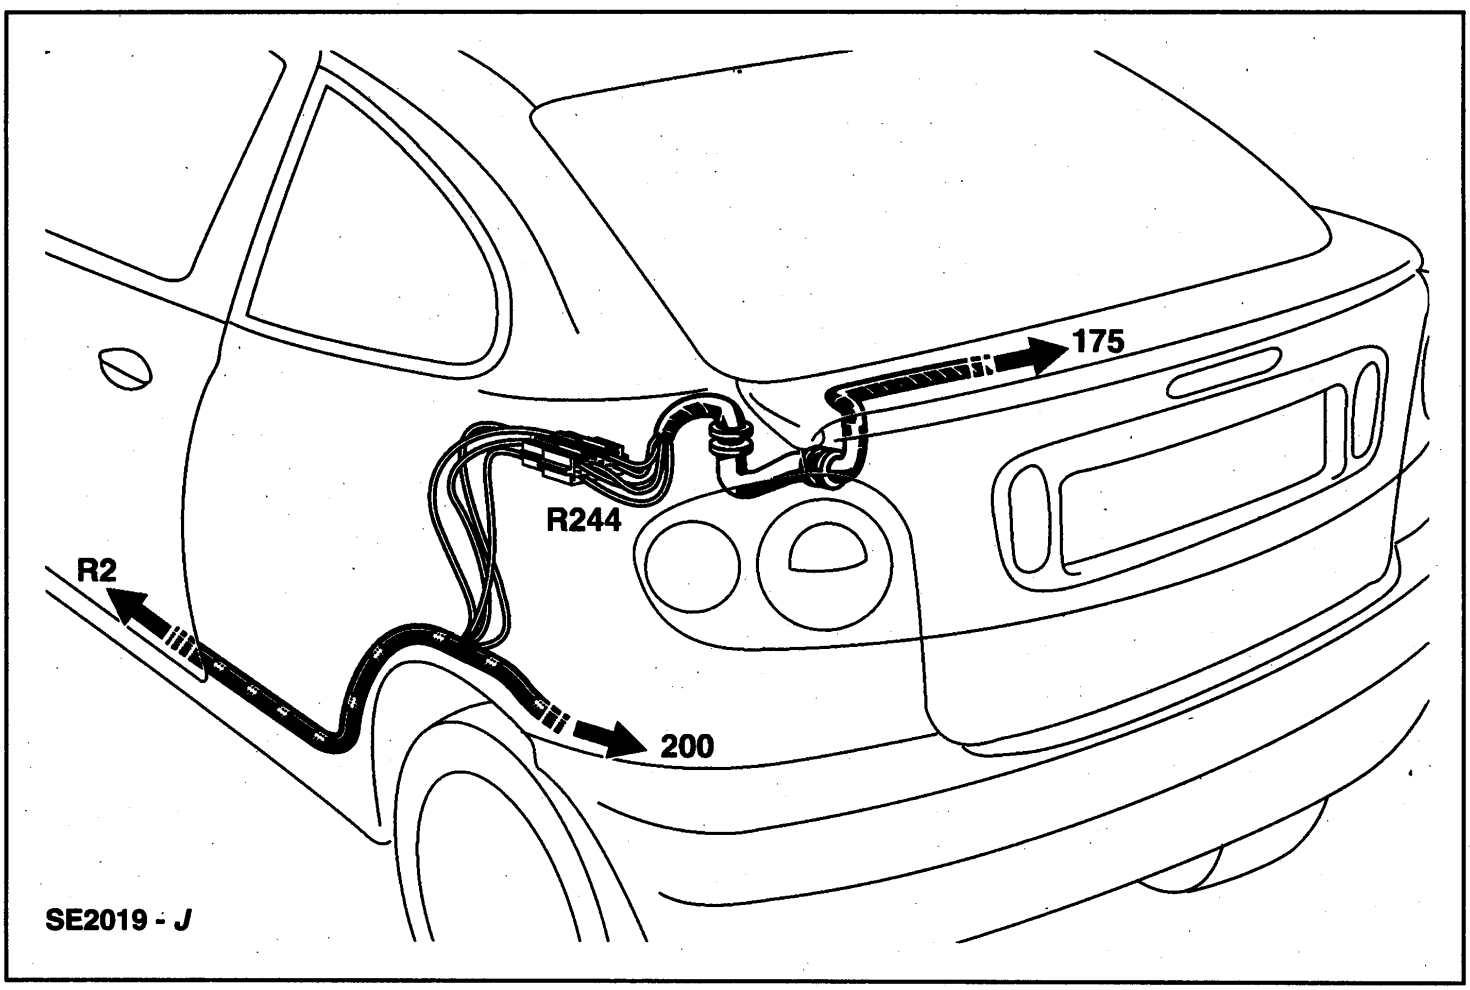
175
R244
R2
200
SE2019 - J

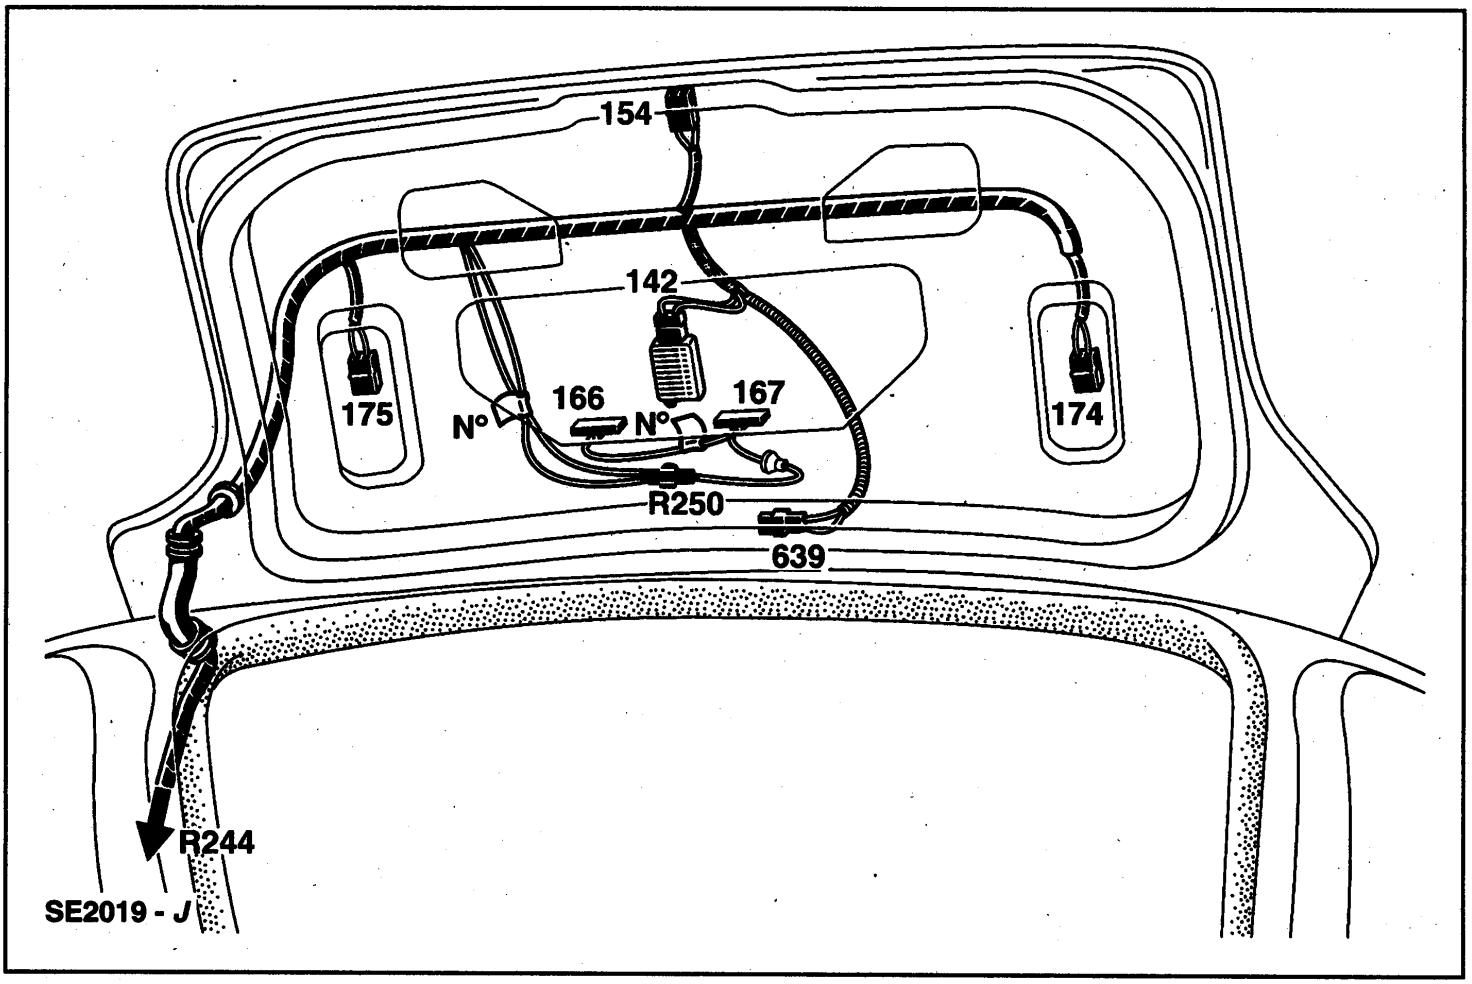
154
142
175
166
167
174
N°
N°
R250
639
R244
SE2019 - J

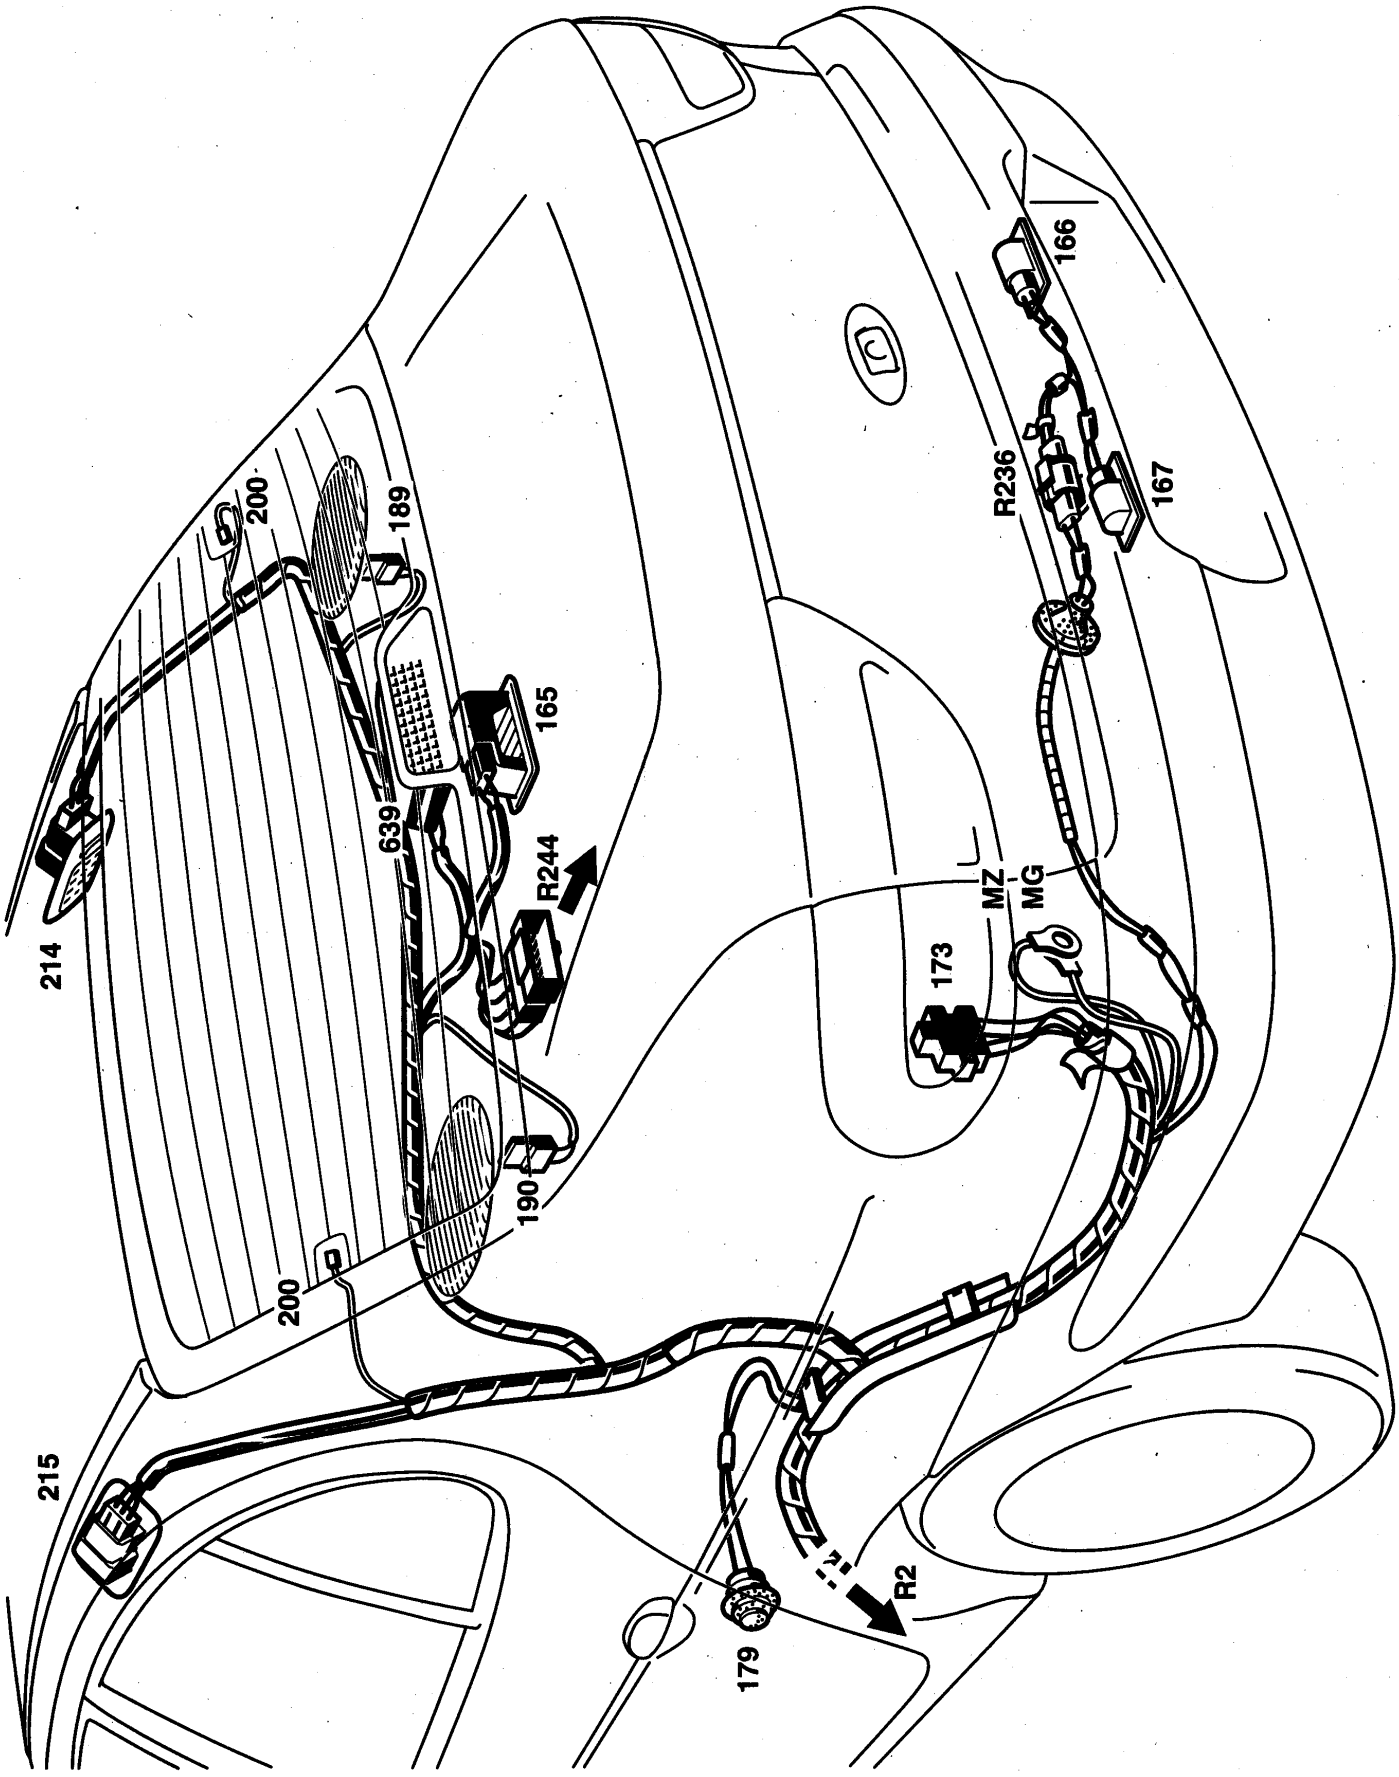
166
R236
167
200
189
165
639
R244
214
MZ-
MG
173
190
200
215
179
R2

SE2019 - *J*

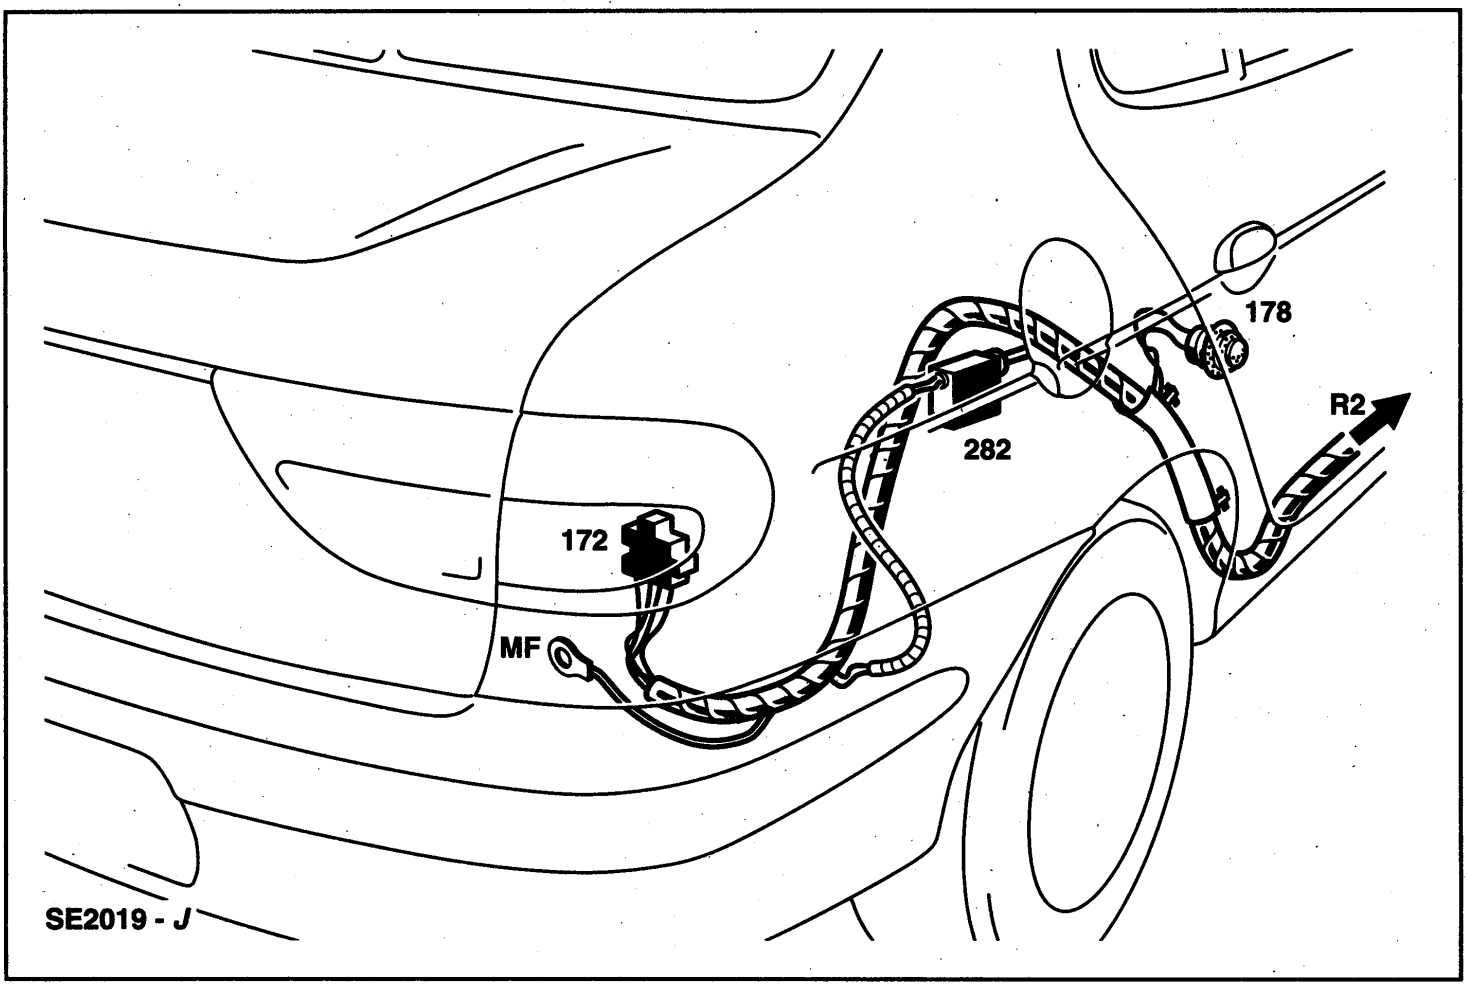
178
R2
282
172
MF
SE2019 - J

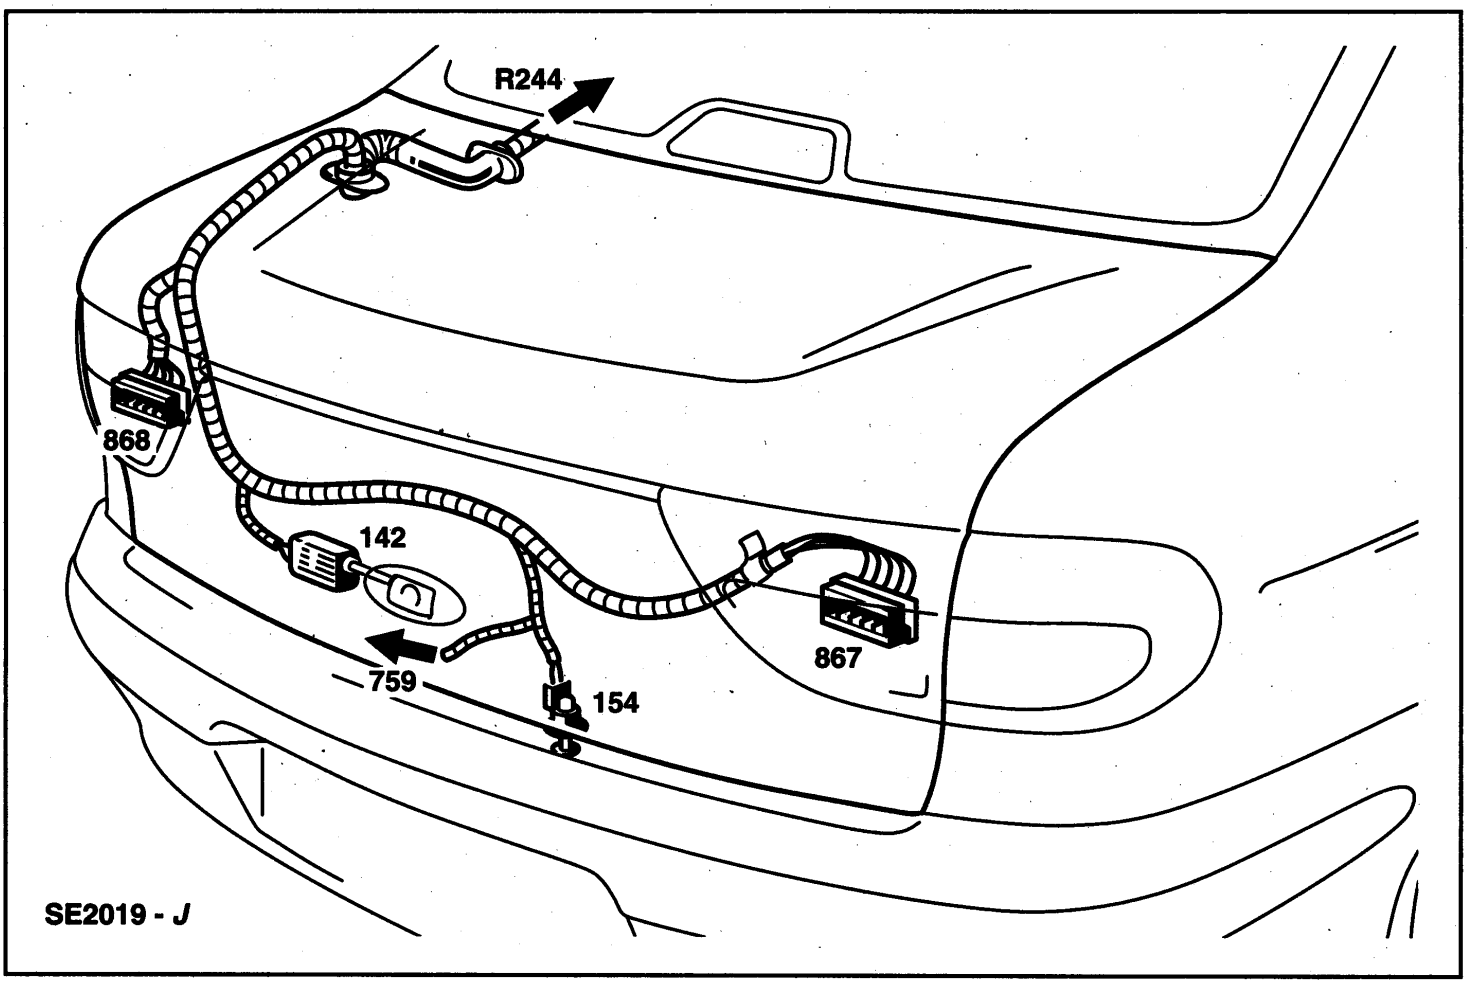
R244
868
142
759
154
867
SE2019 - J

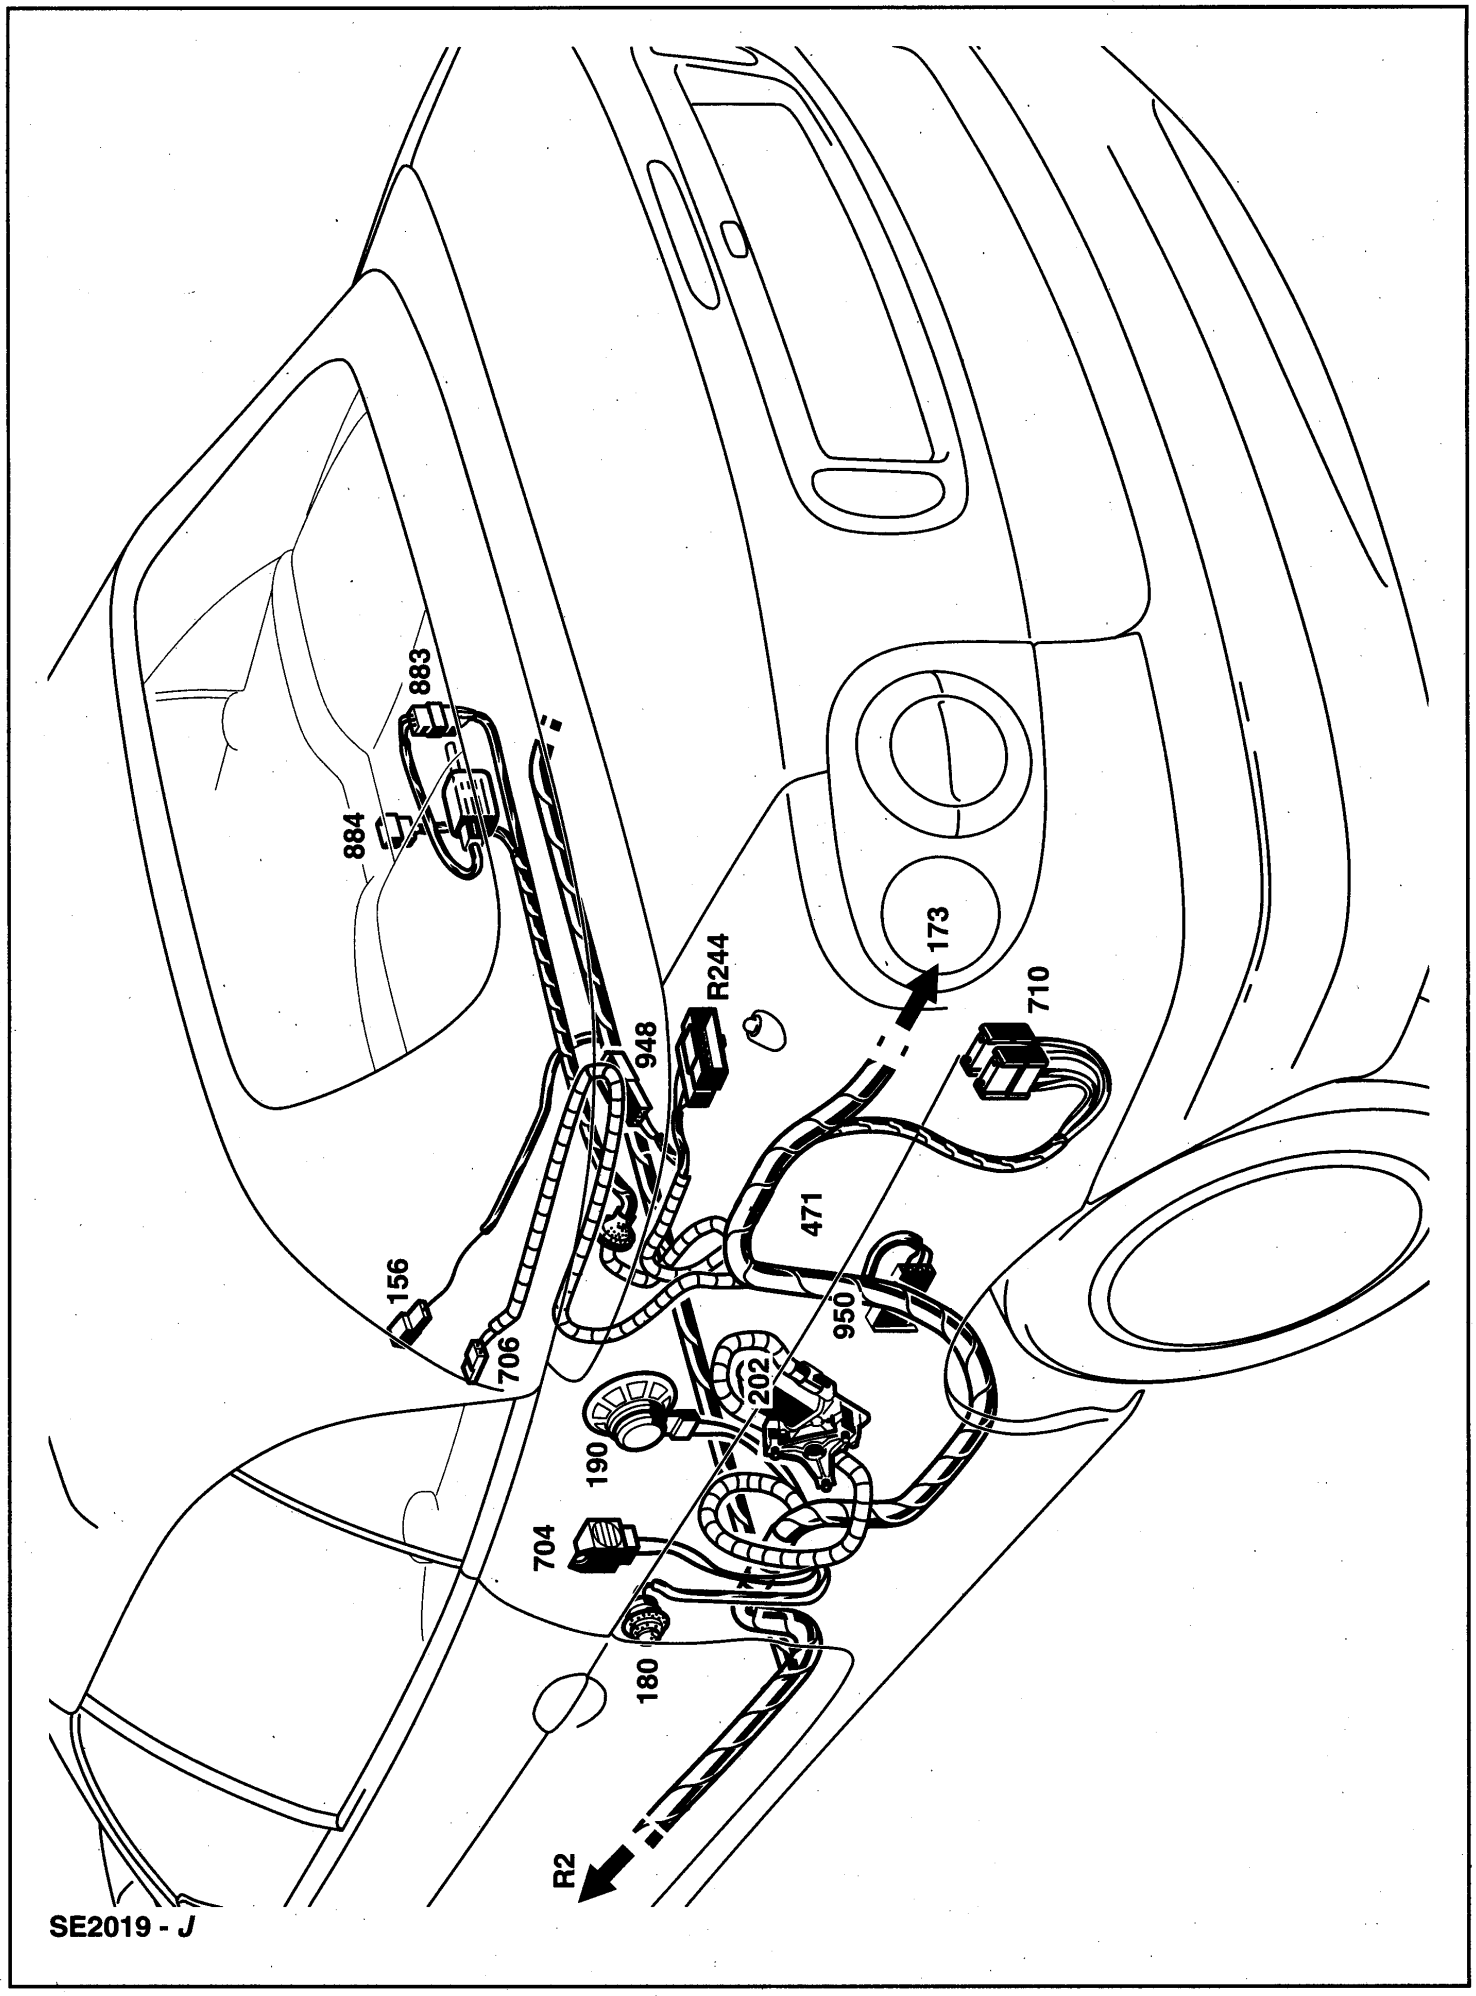
883
884
156
706
948
R244
173
710
471
950
202
190
704
180
R2
SE2019 - J

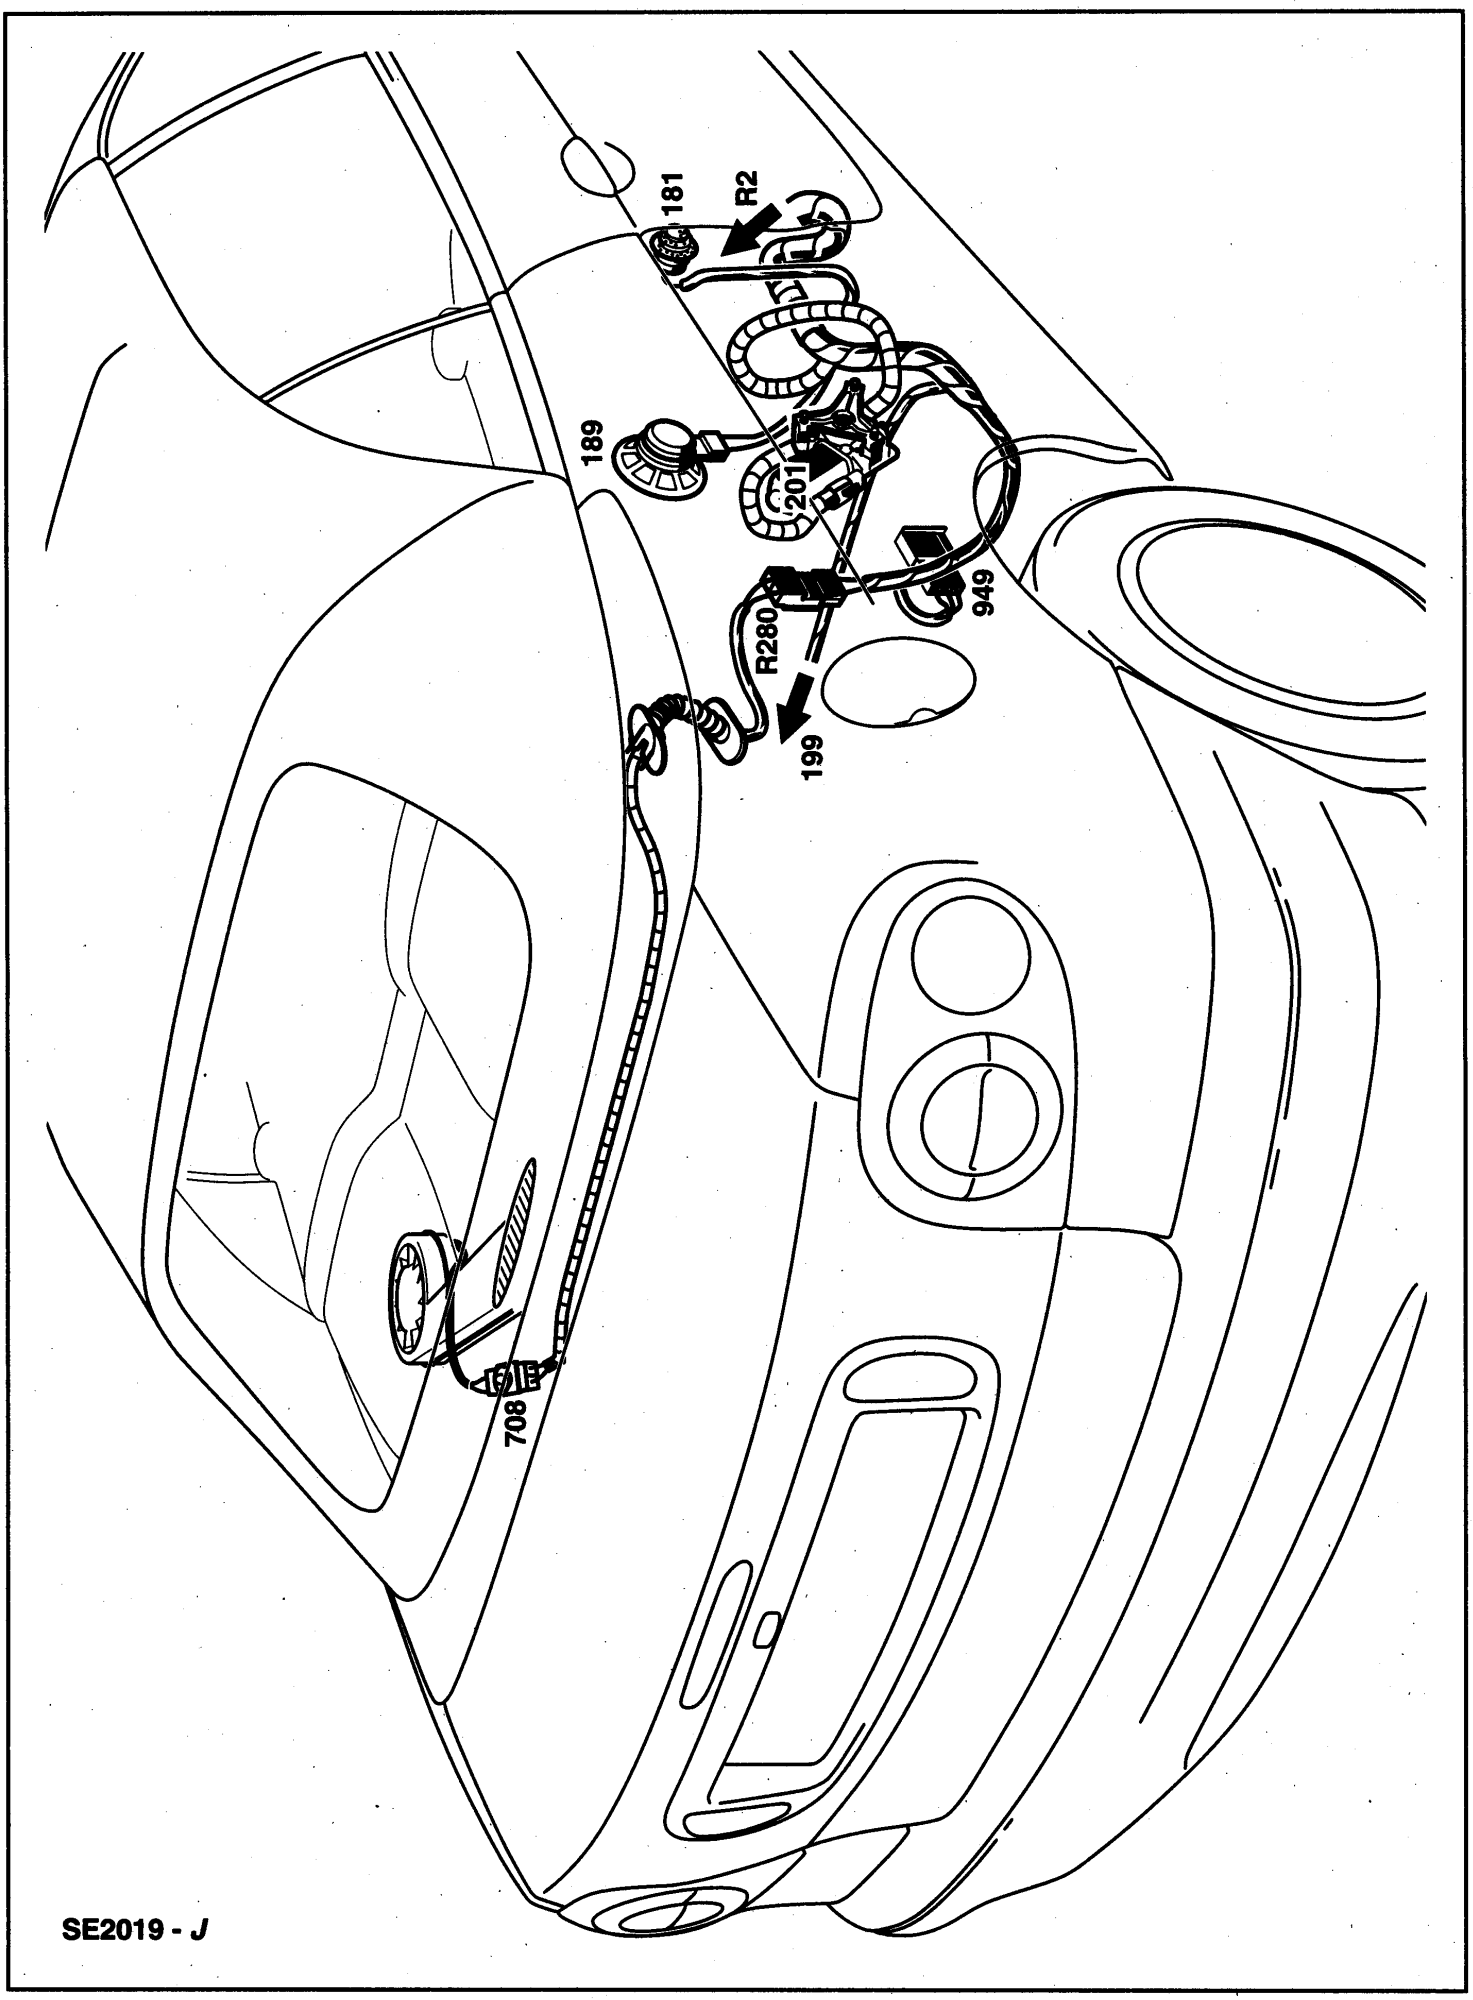
181
R2
189
201
949
R280
199
708
SE2019 - J

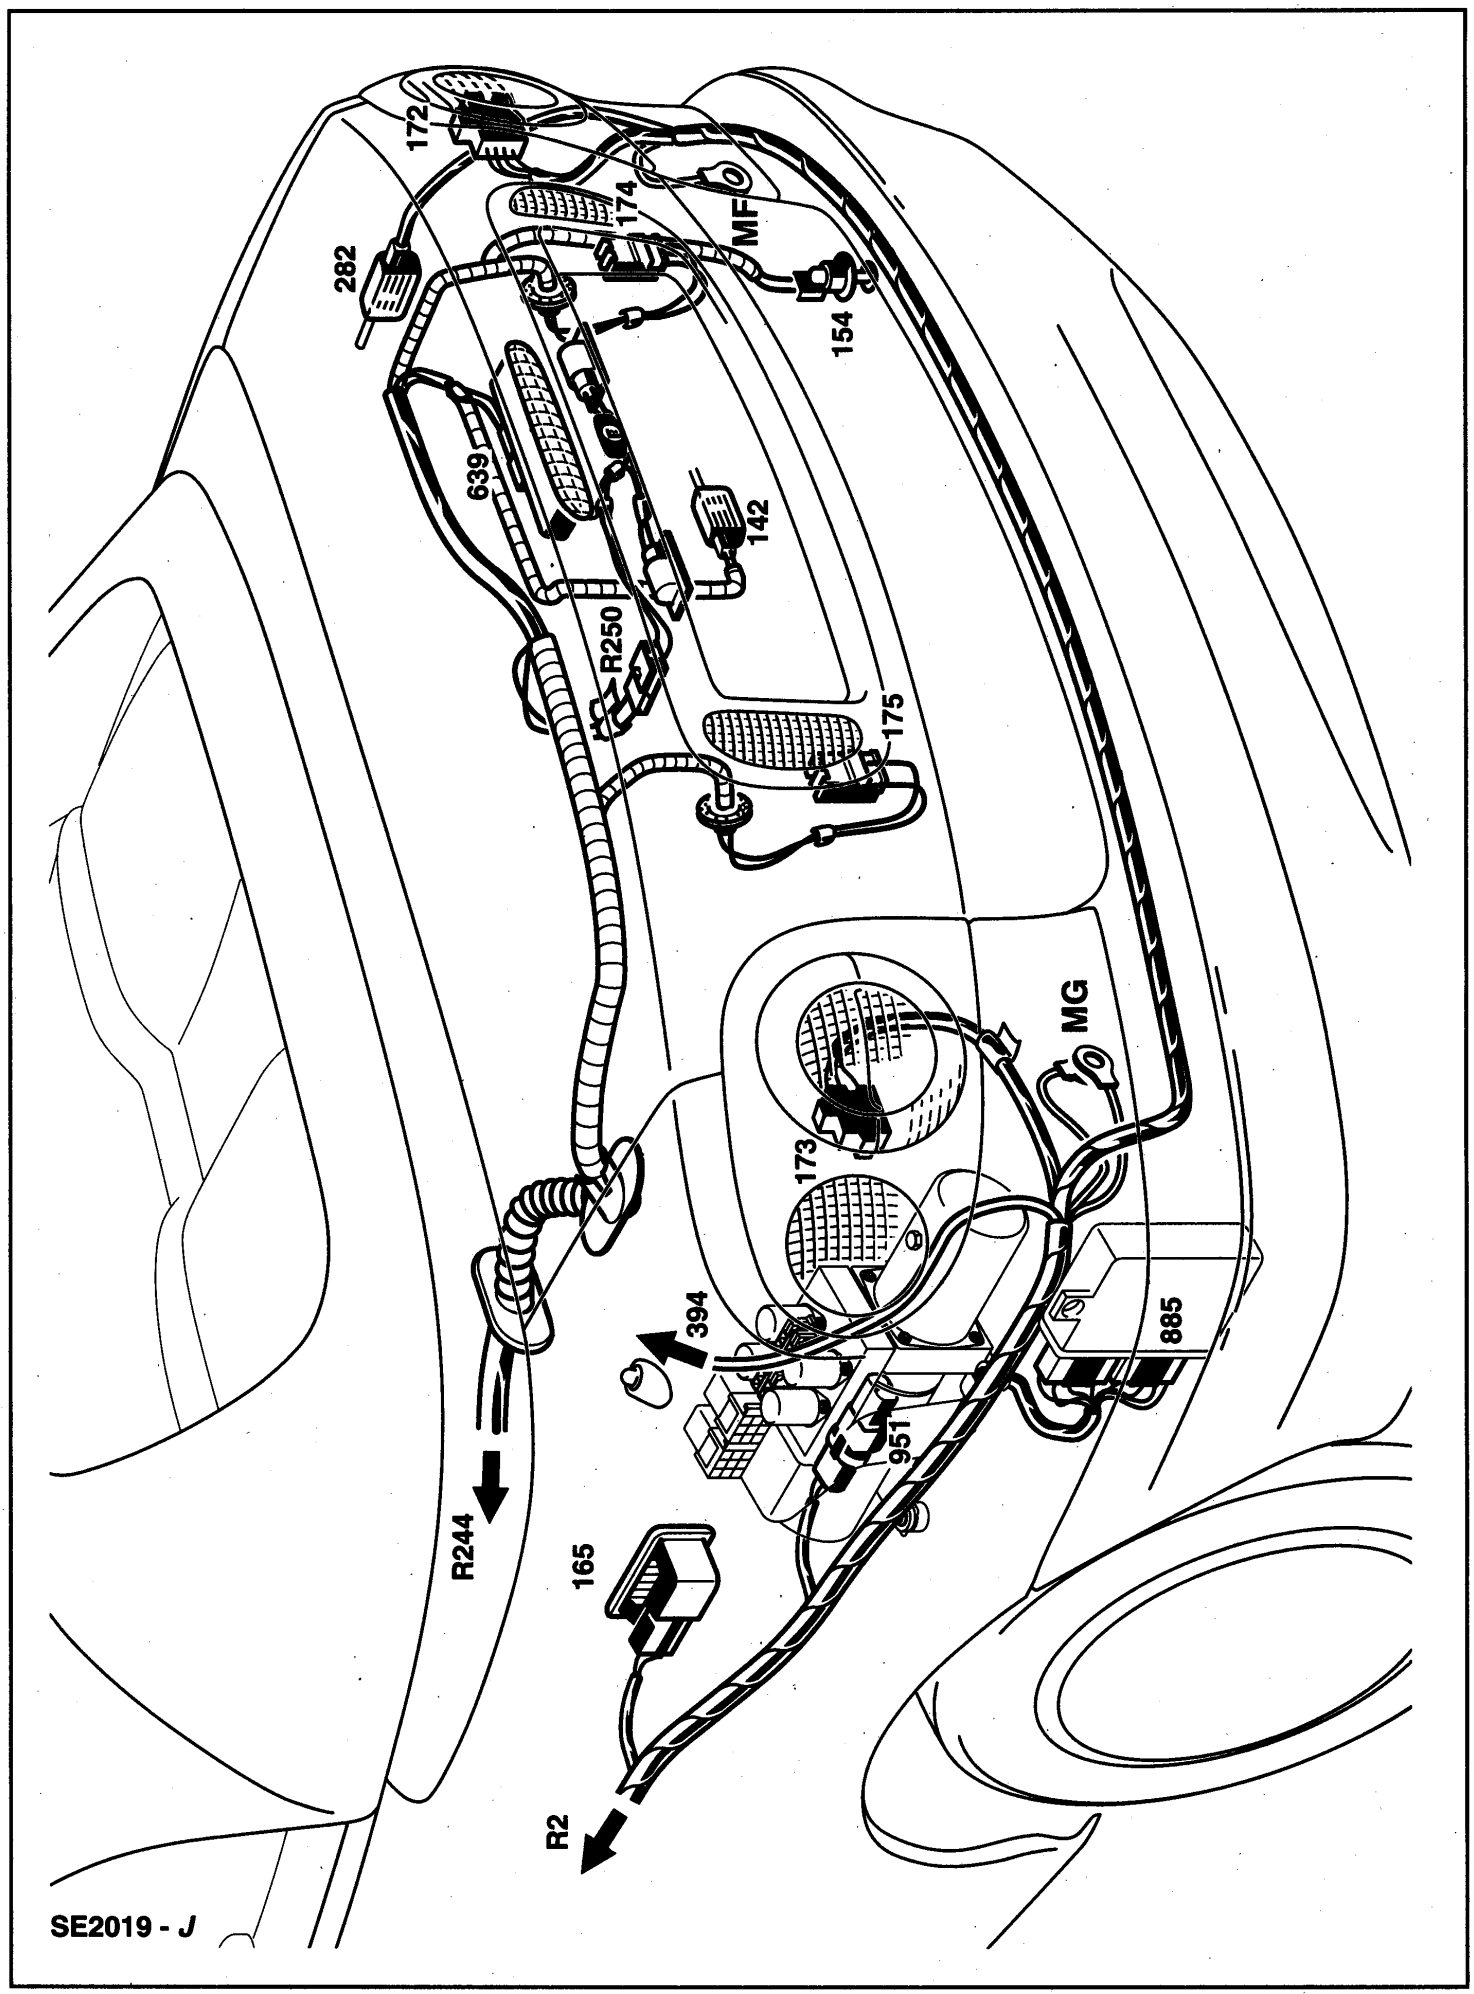
172
174
MF
282
154
639
142
R250
175
MG
173
394
885
951
R244
165
R2
SE2019 - J

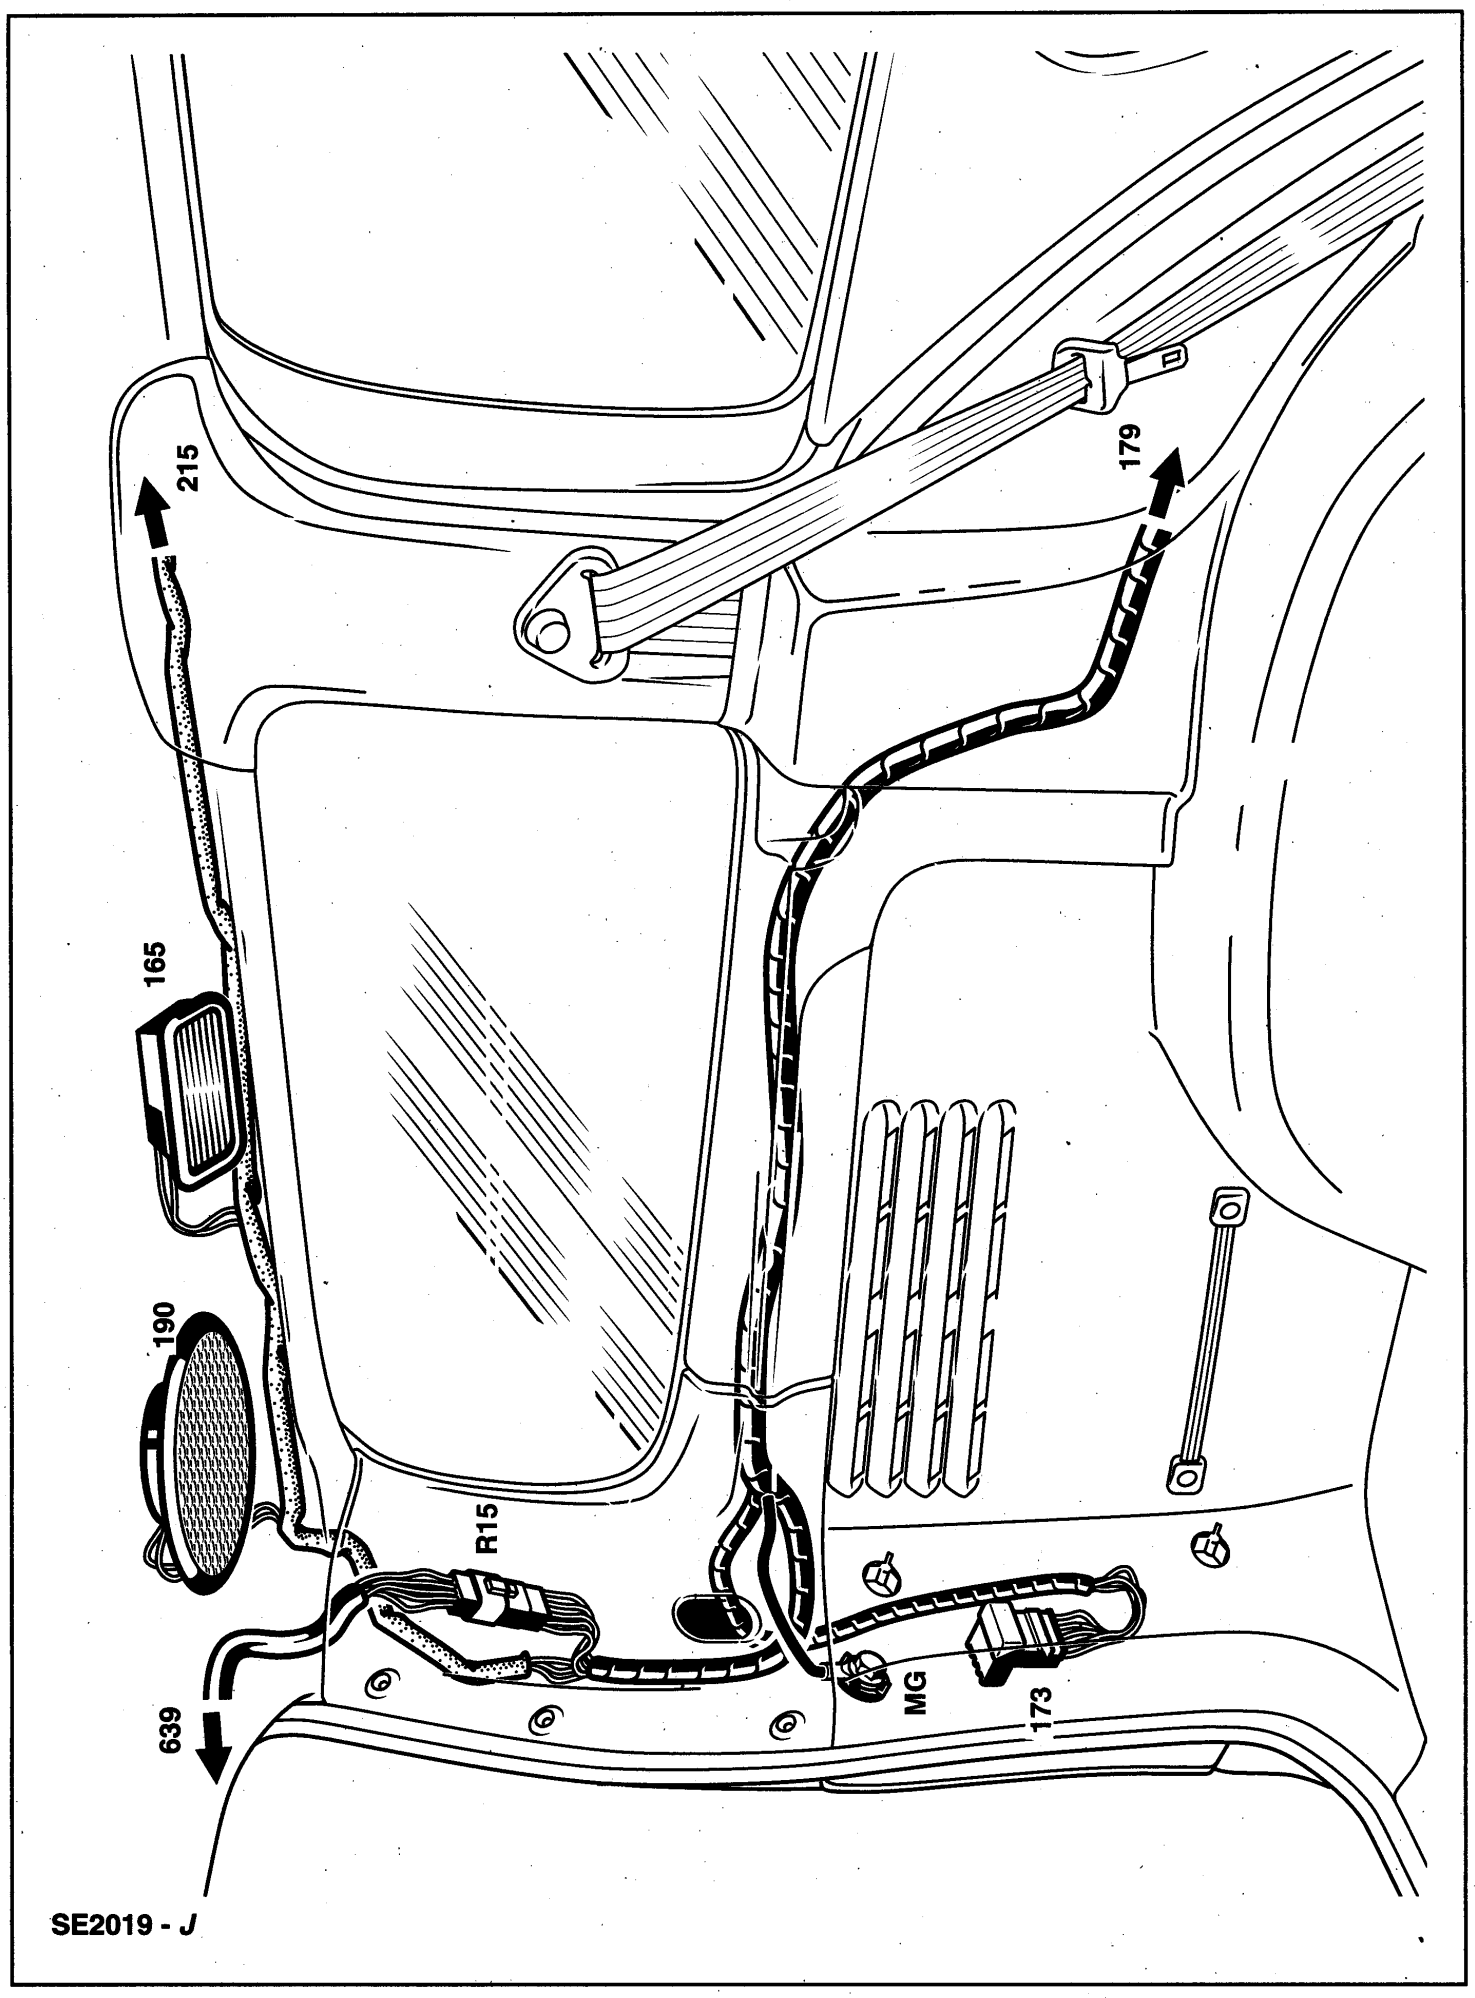
215
179
165
190
R15
639
MG
173
SE2019 - J

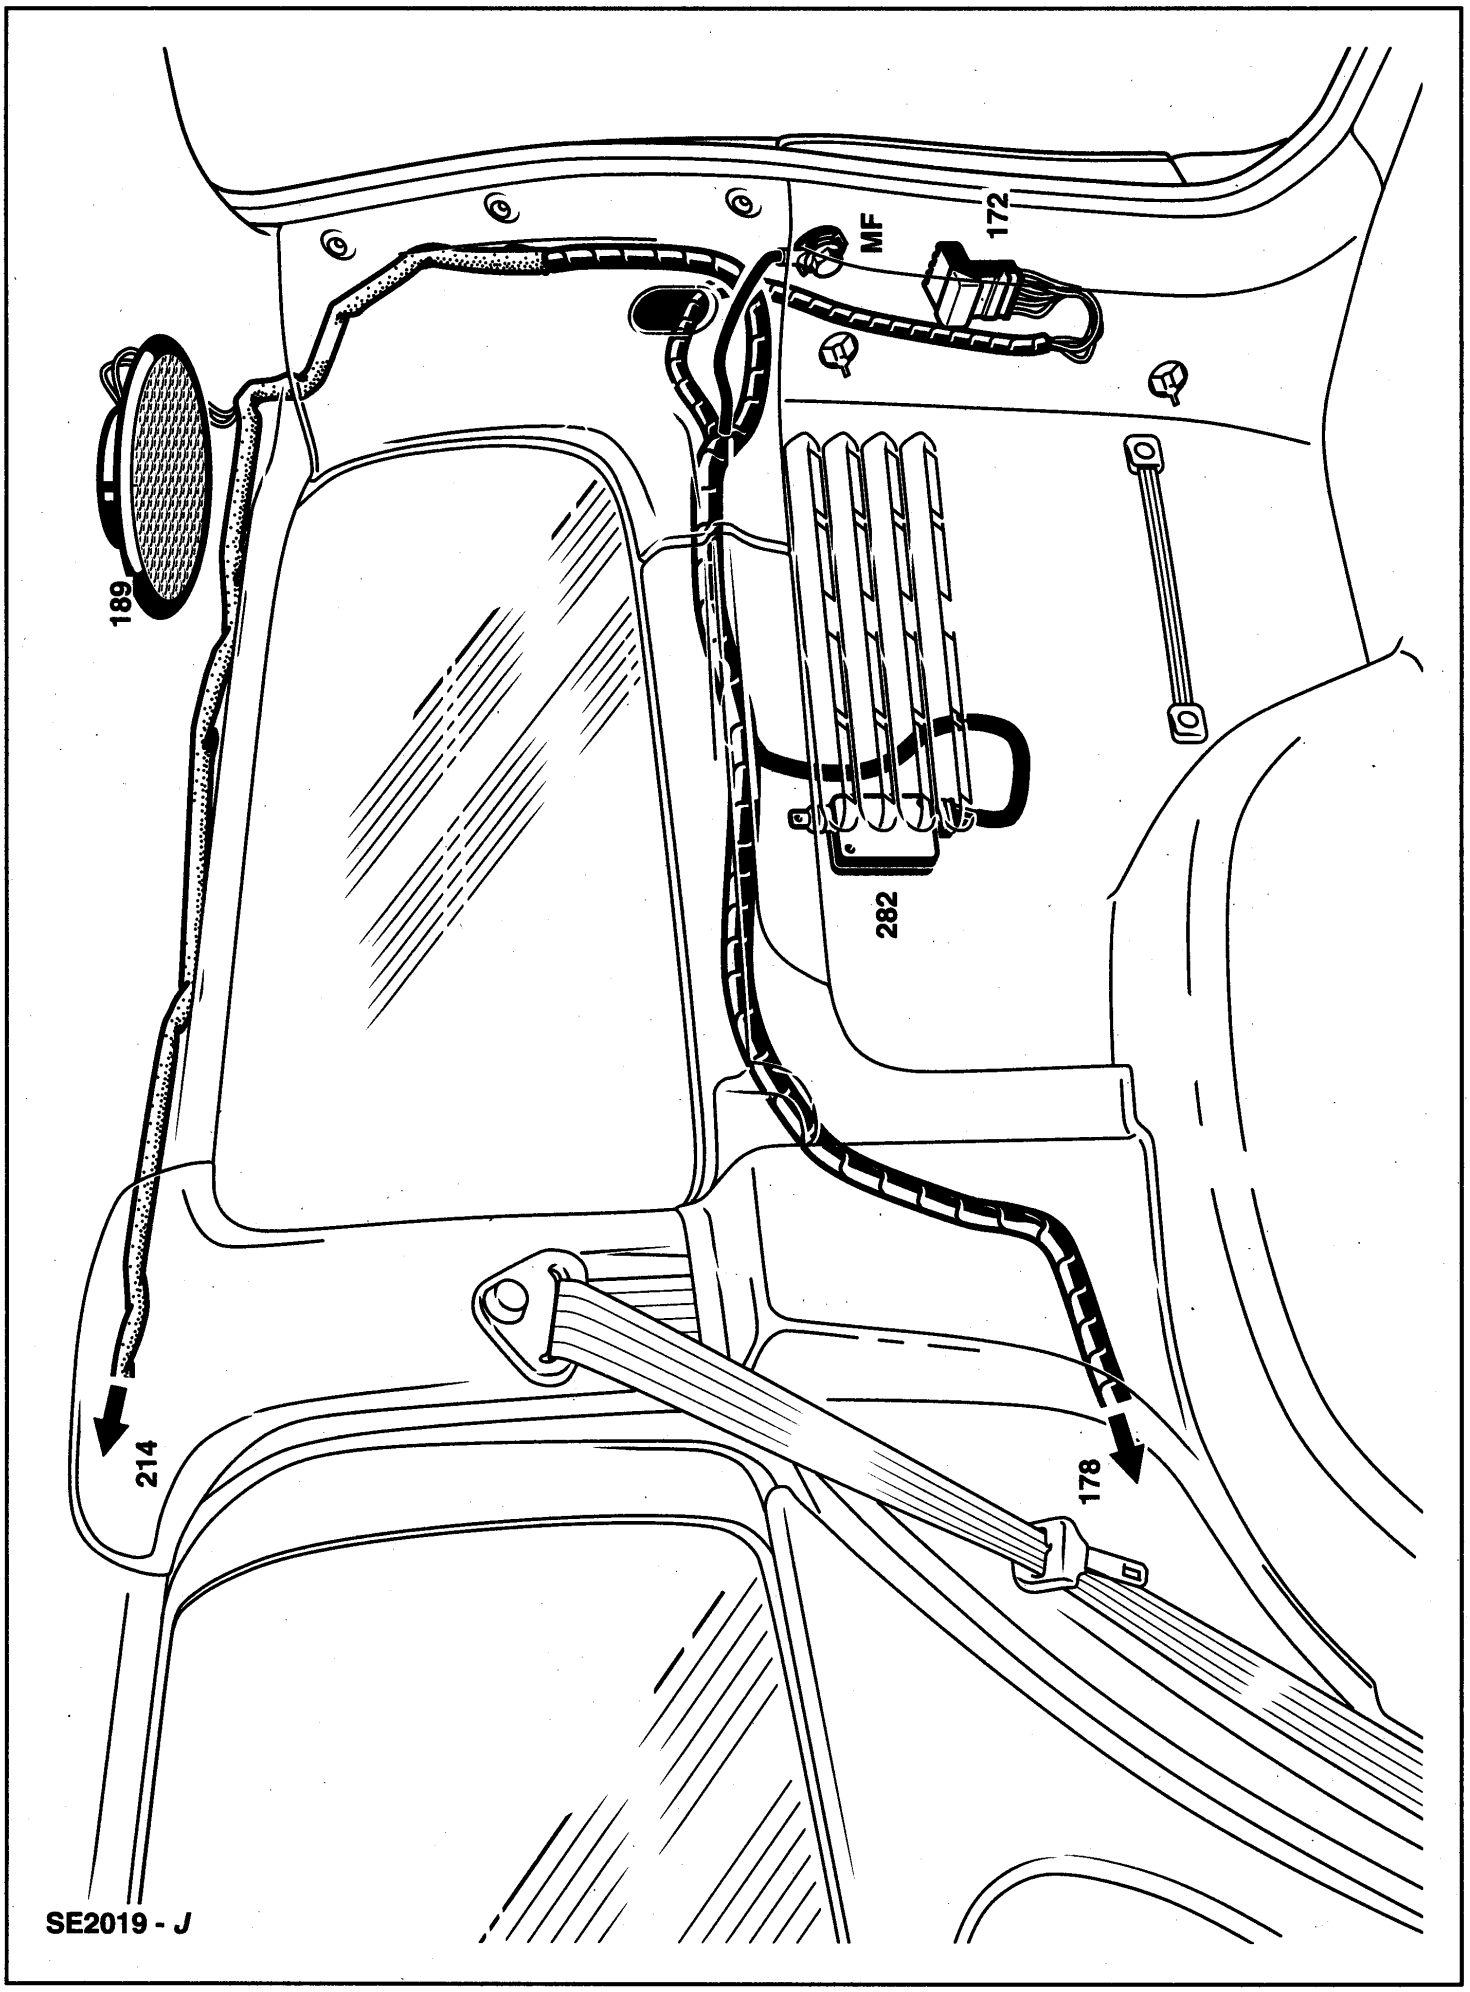
MF
172
189
282
214
178
SE2019 - J

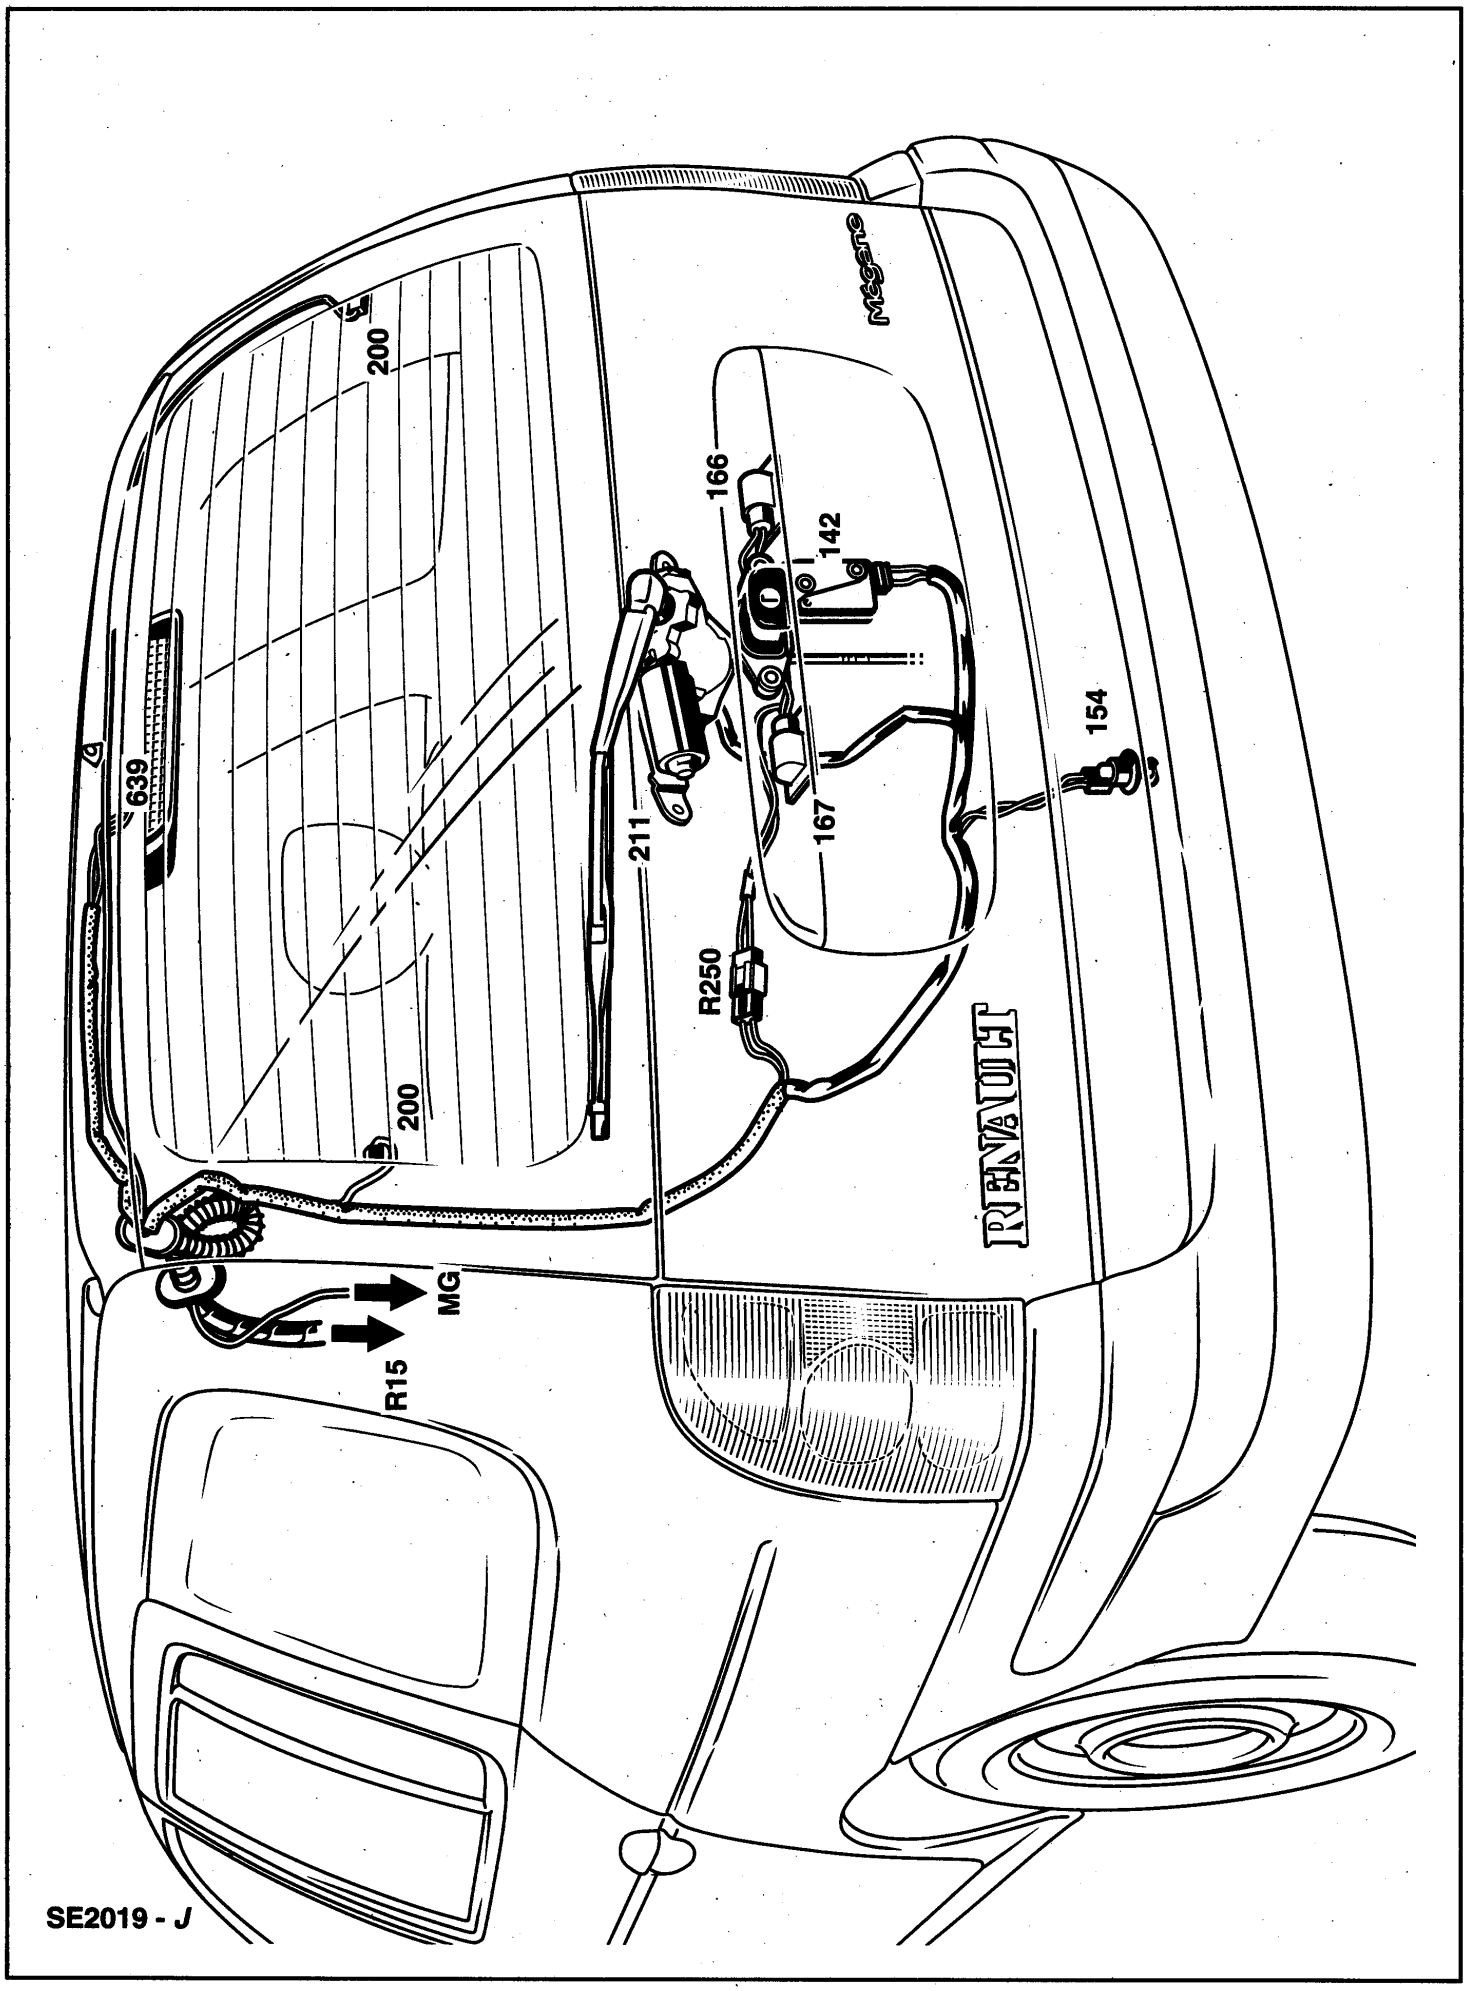
200
200
639
211
166
142
167
154
R250
MG
R15
Mégane
RENAULT
SE2019 - J

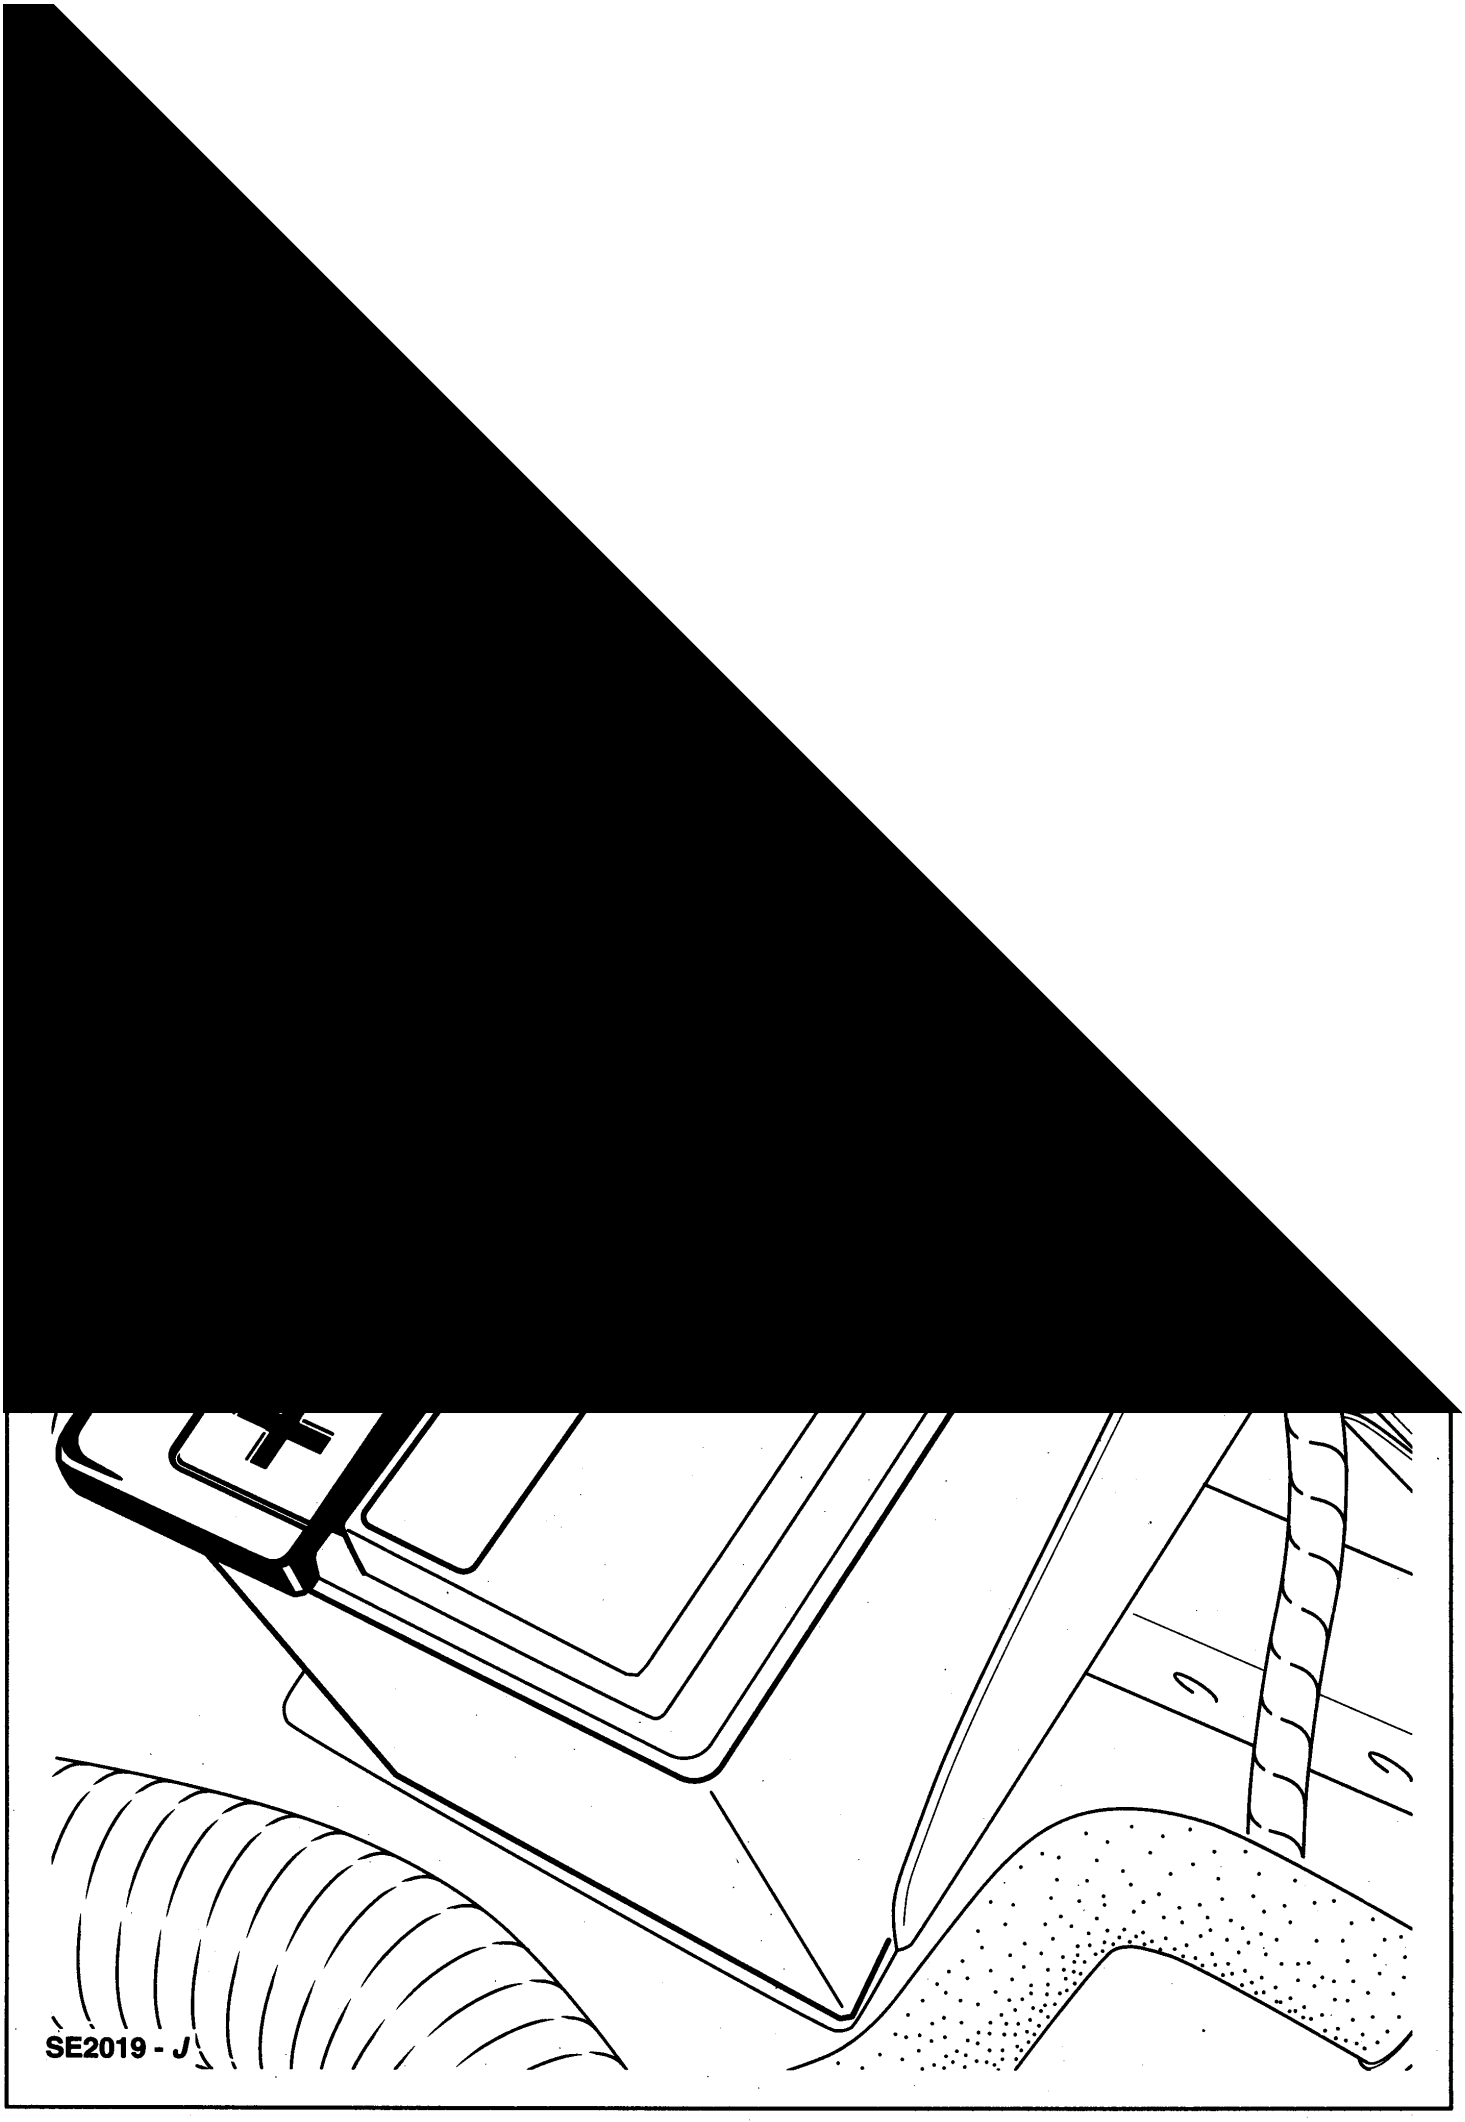
SE2019 - J

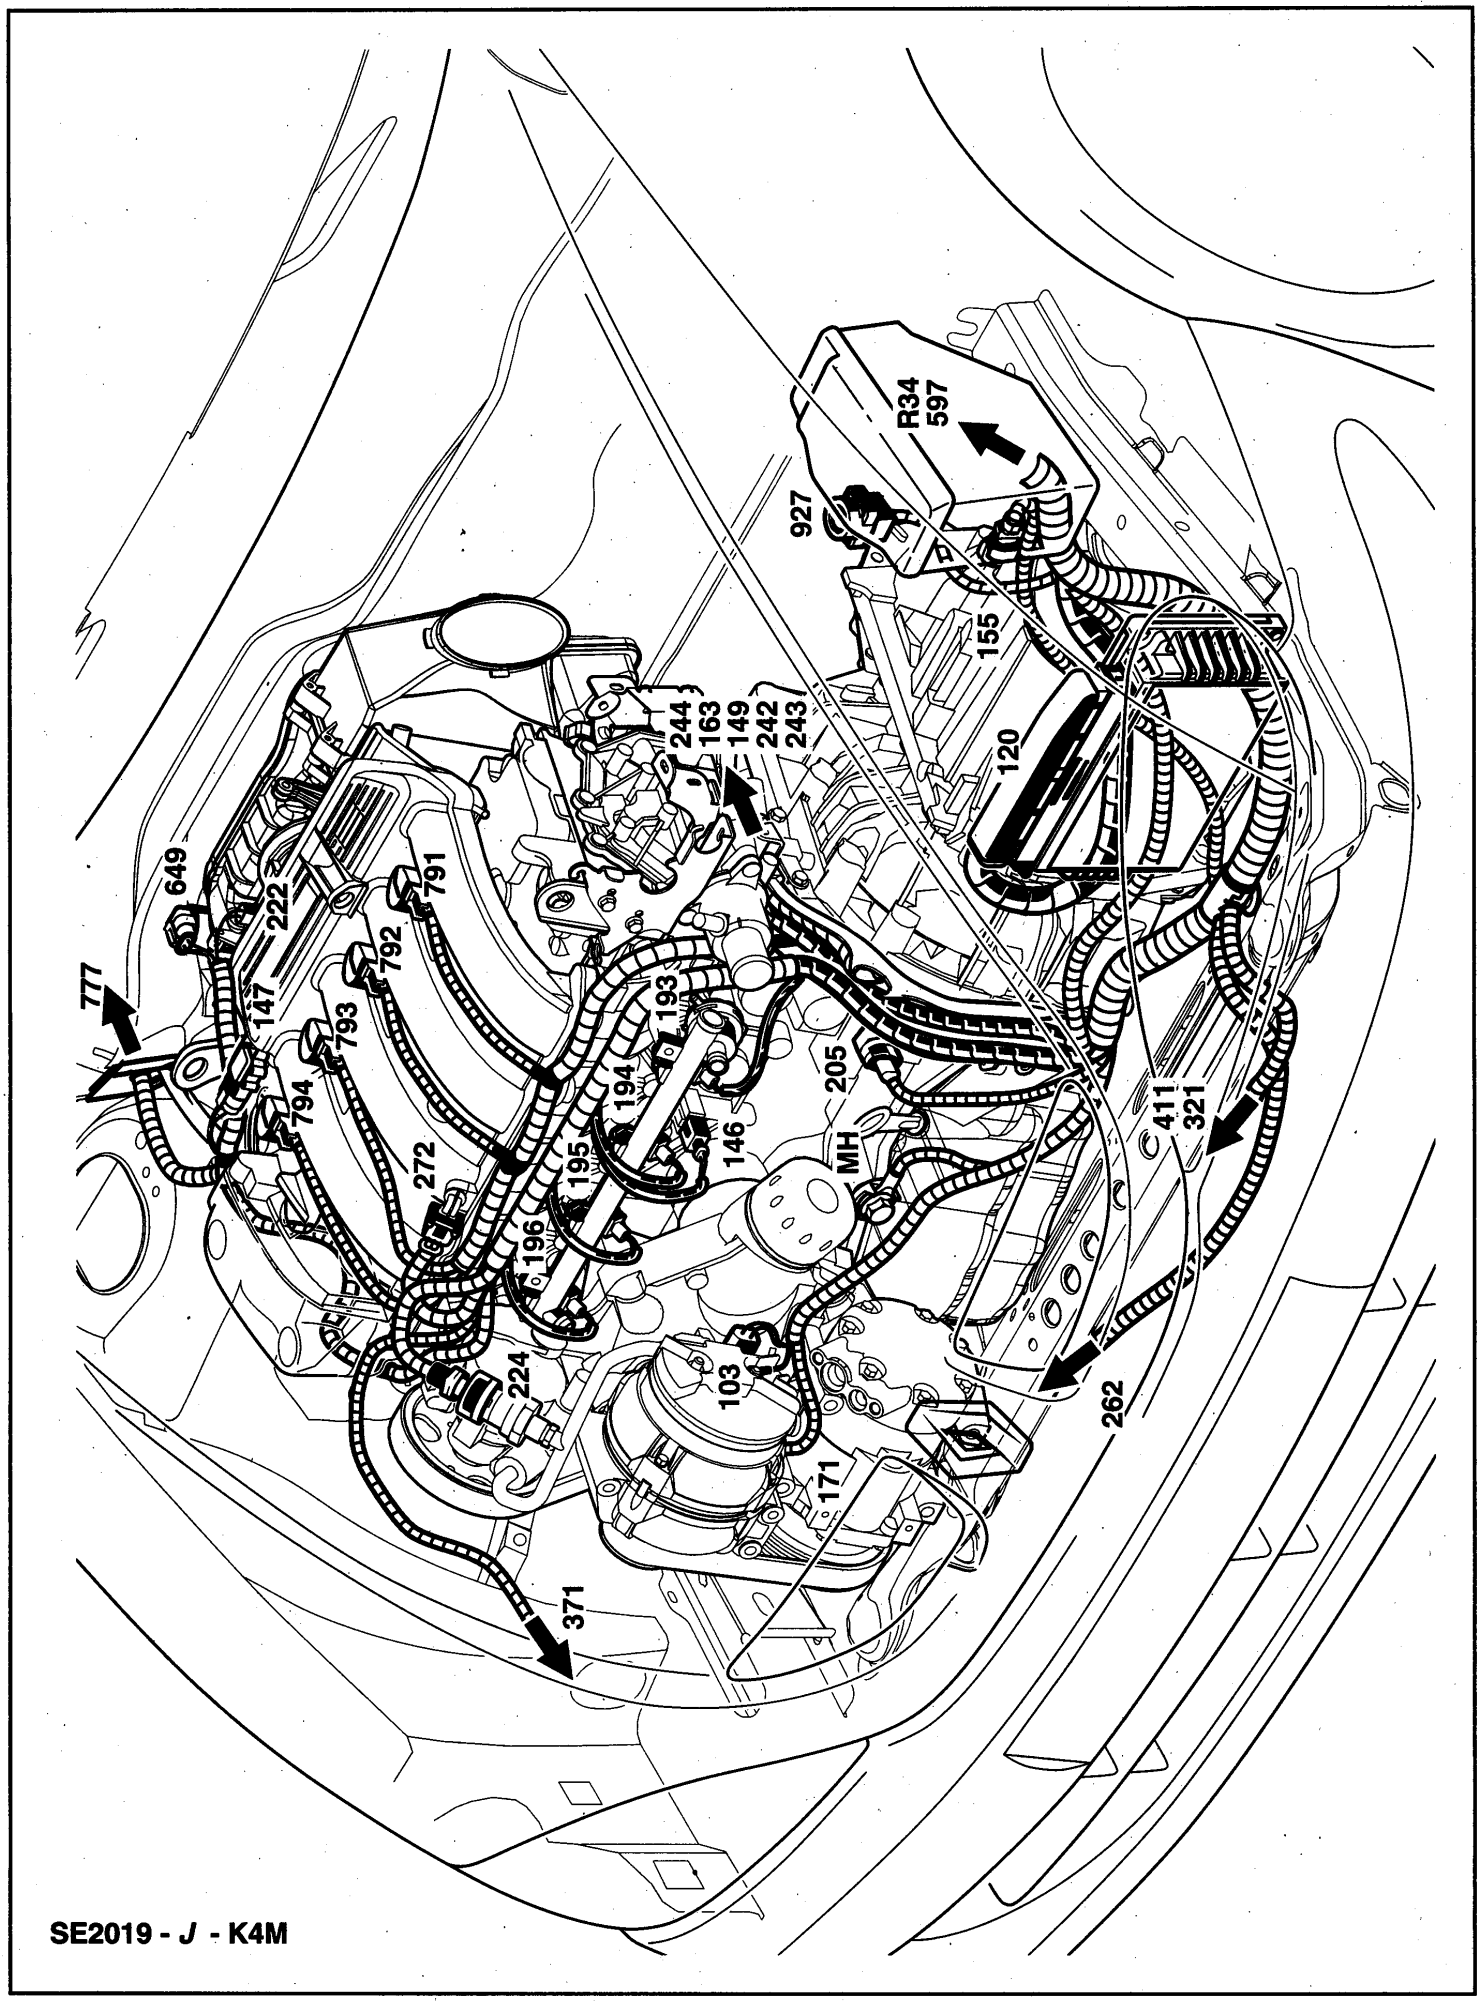
R34
597
927
155
120
244
163
149
242
243
649
222
791
792
793
794
147
777
193
194
195
196
272
146
205
MH
411
321
262
103
224
171
371

SE2019 - J - K4M

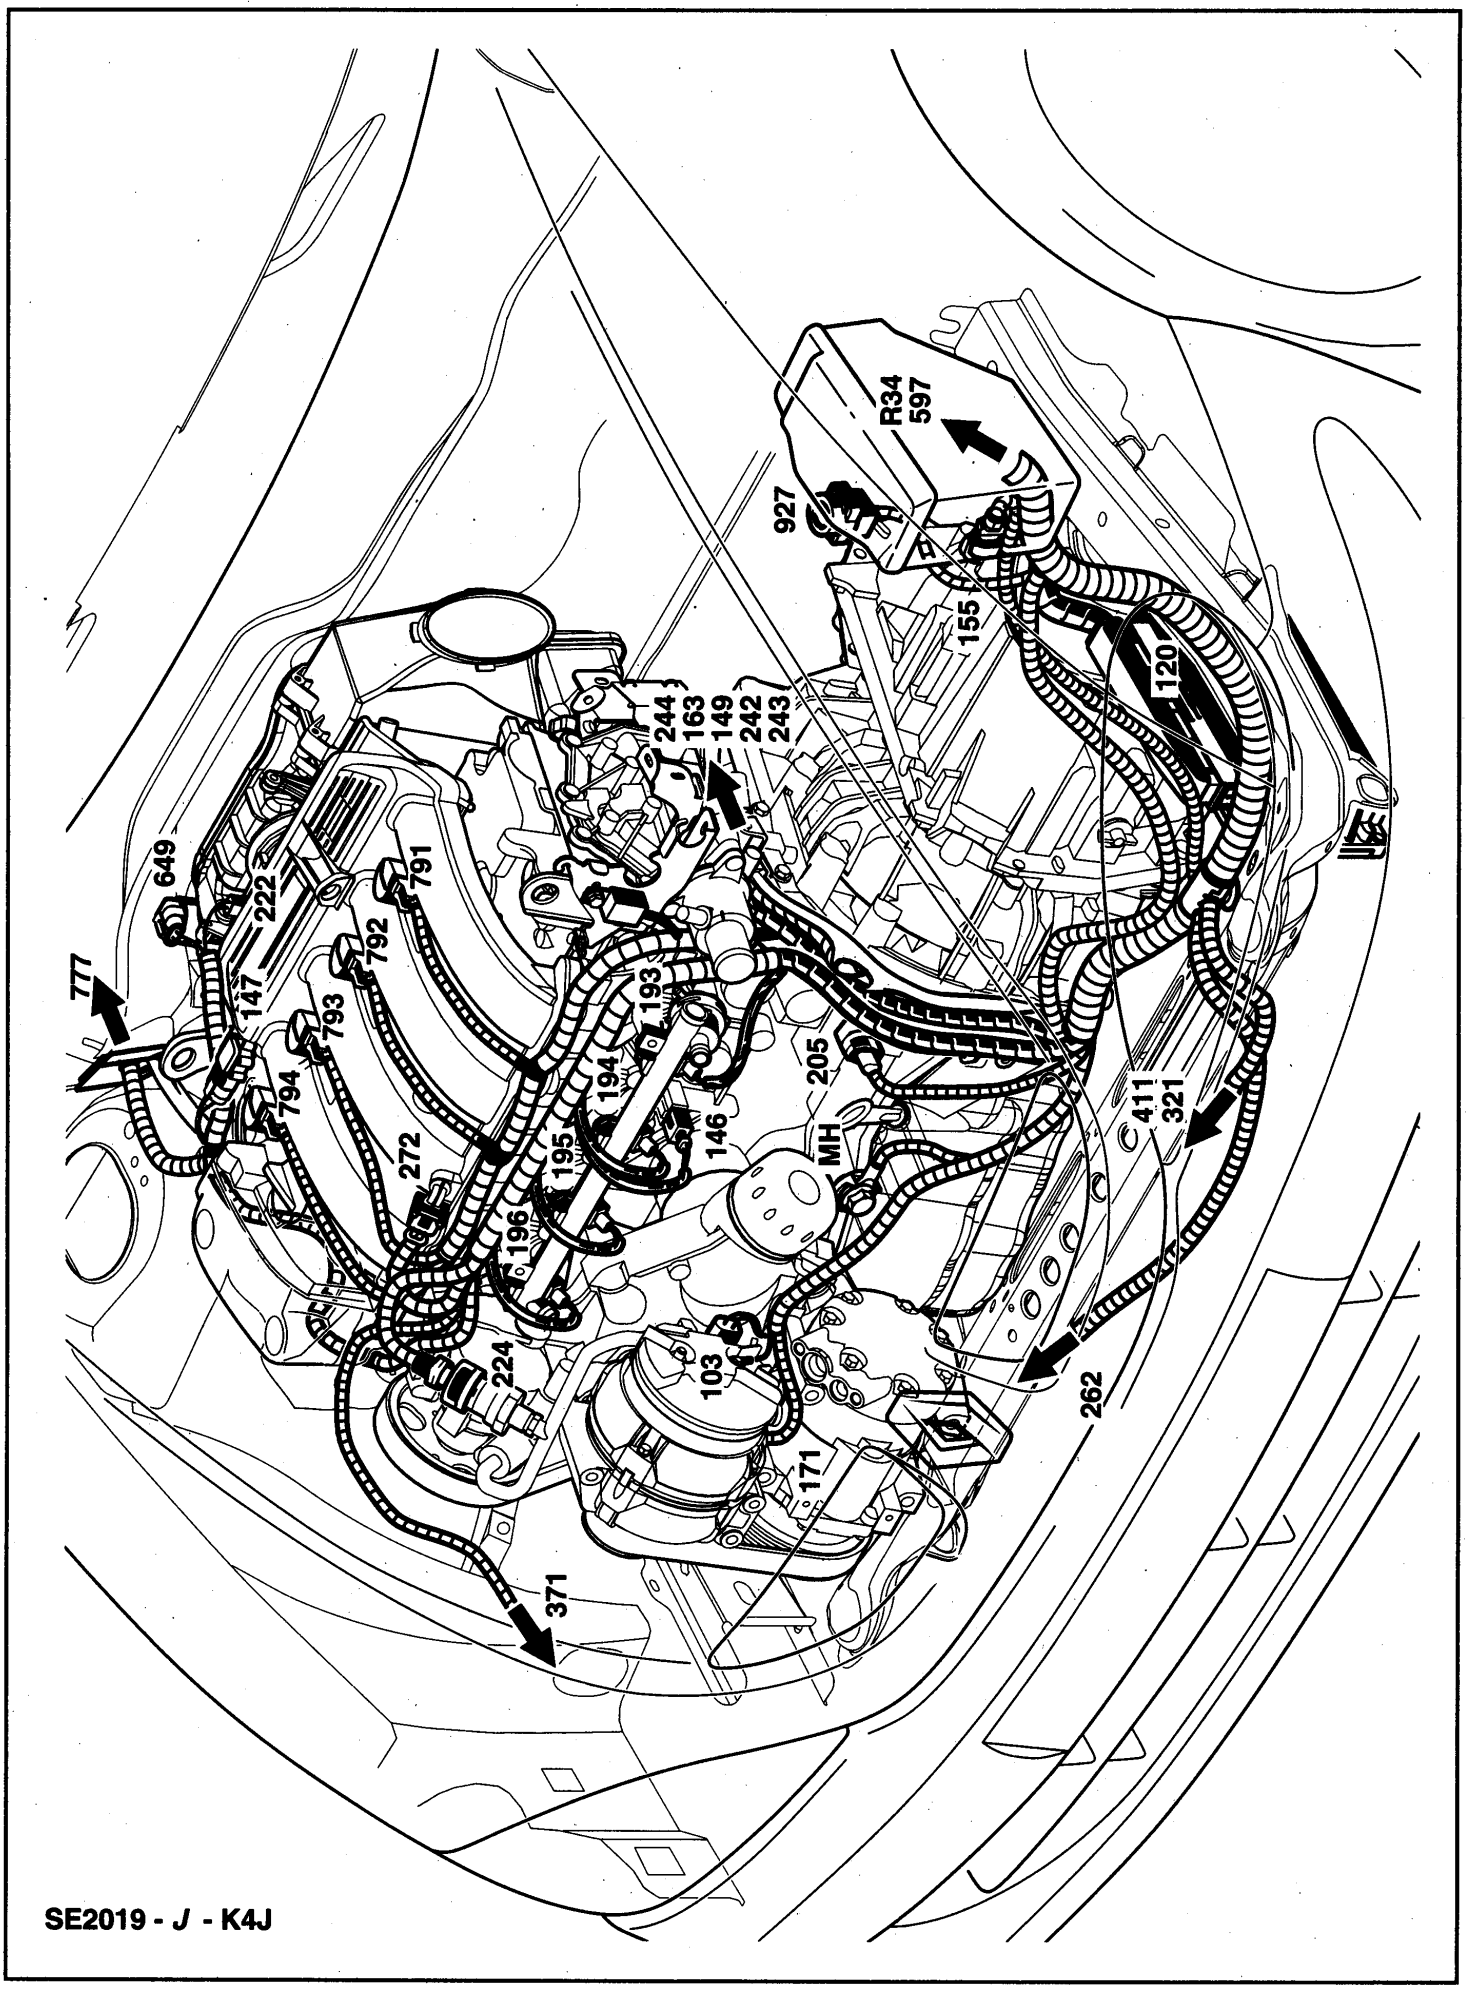
R34
597
927
155
120
244
163
149
242
243
649
222
791
792
777
147
793
794
193
194
205
272
195
146
MH
196
411
321
224
103
262
171
371
SE2019 - J - K4J

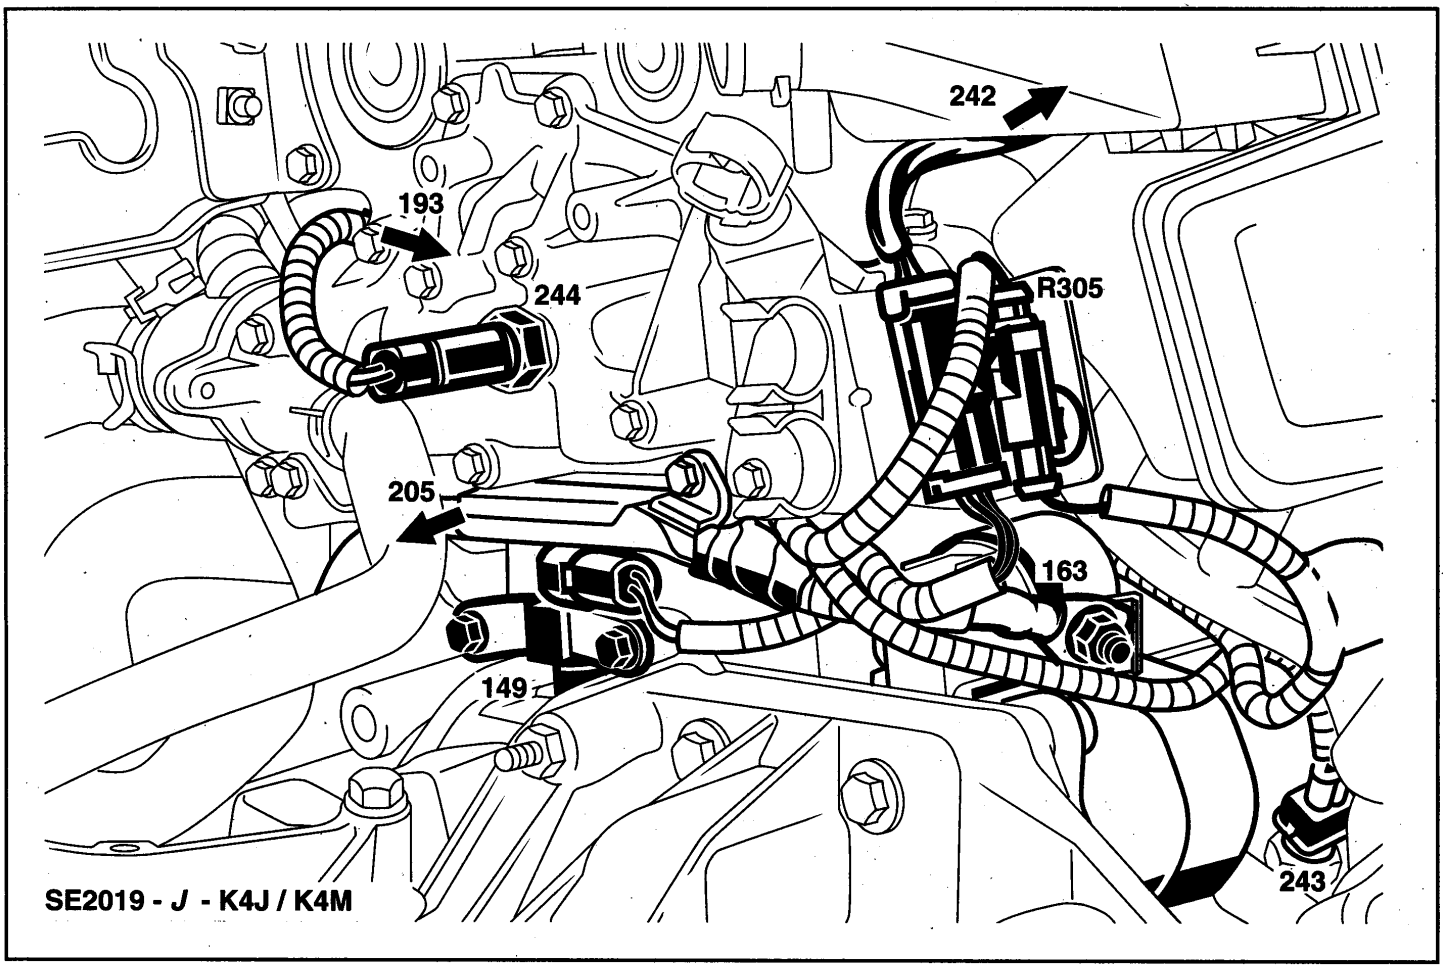

SE2019 - J - K4J / K4M

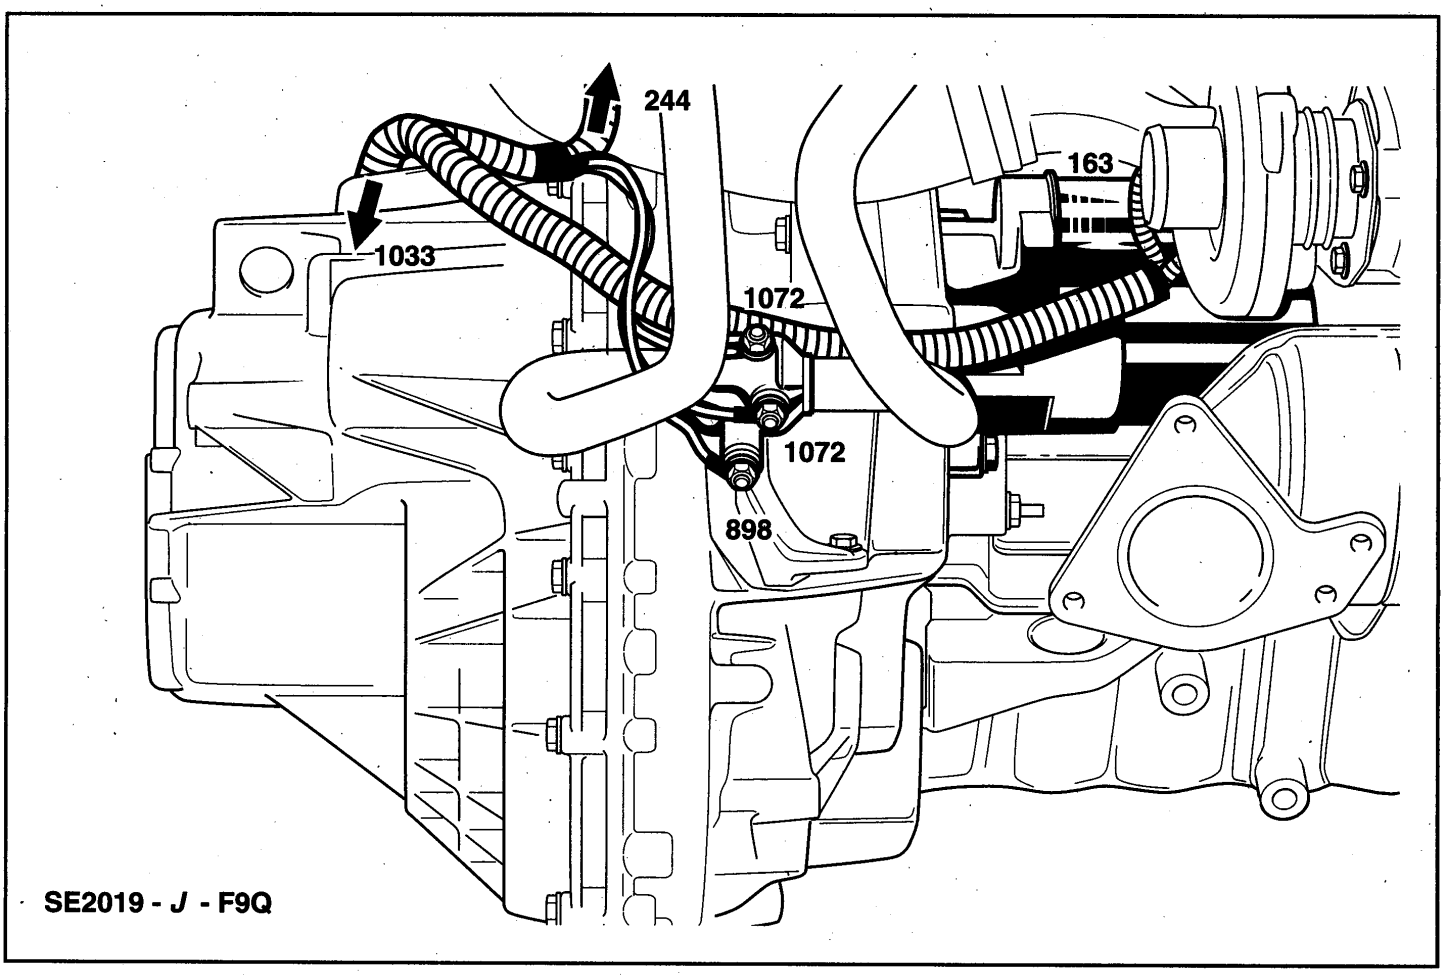

SE2019 - J - F9Q

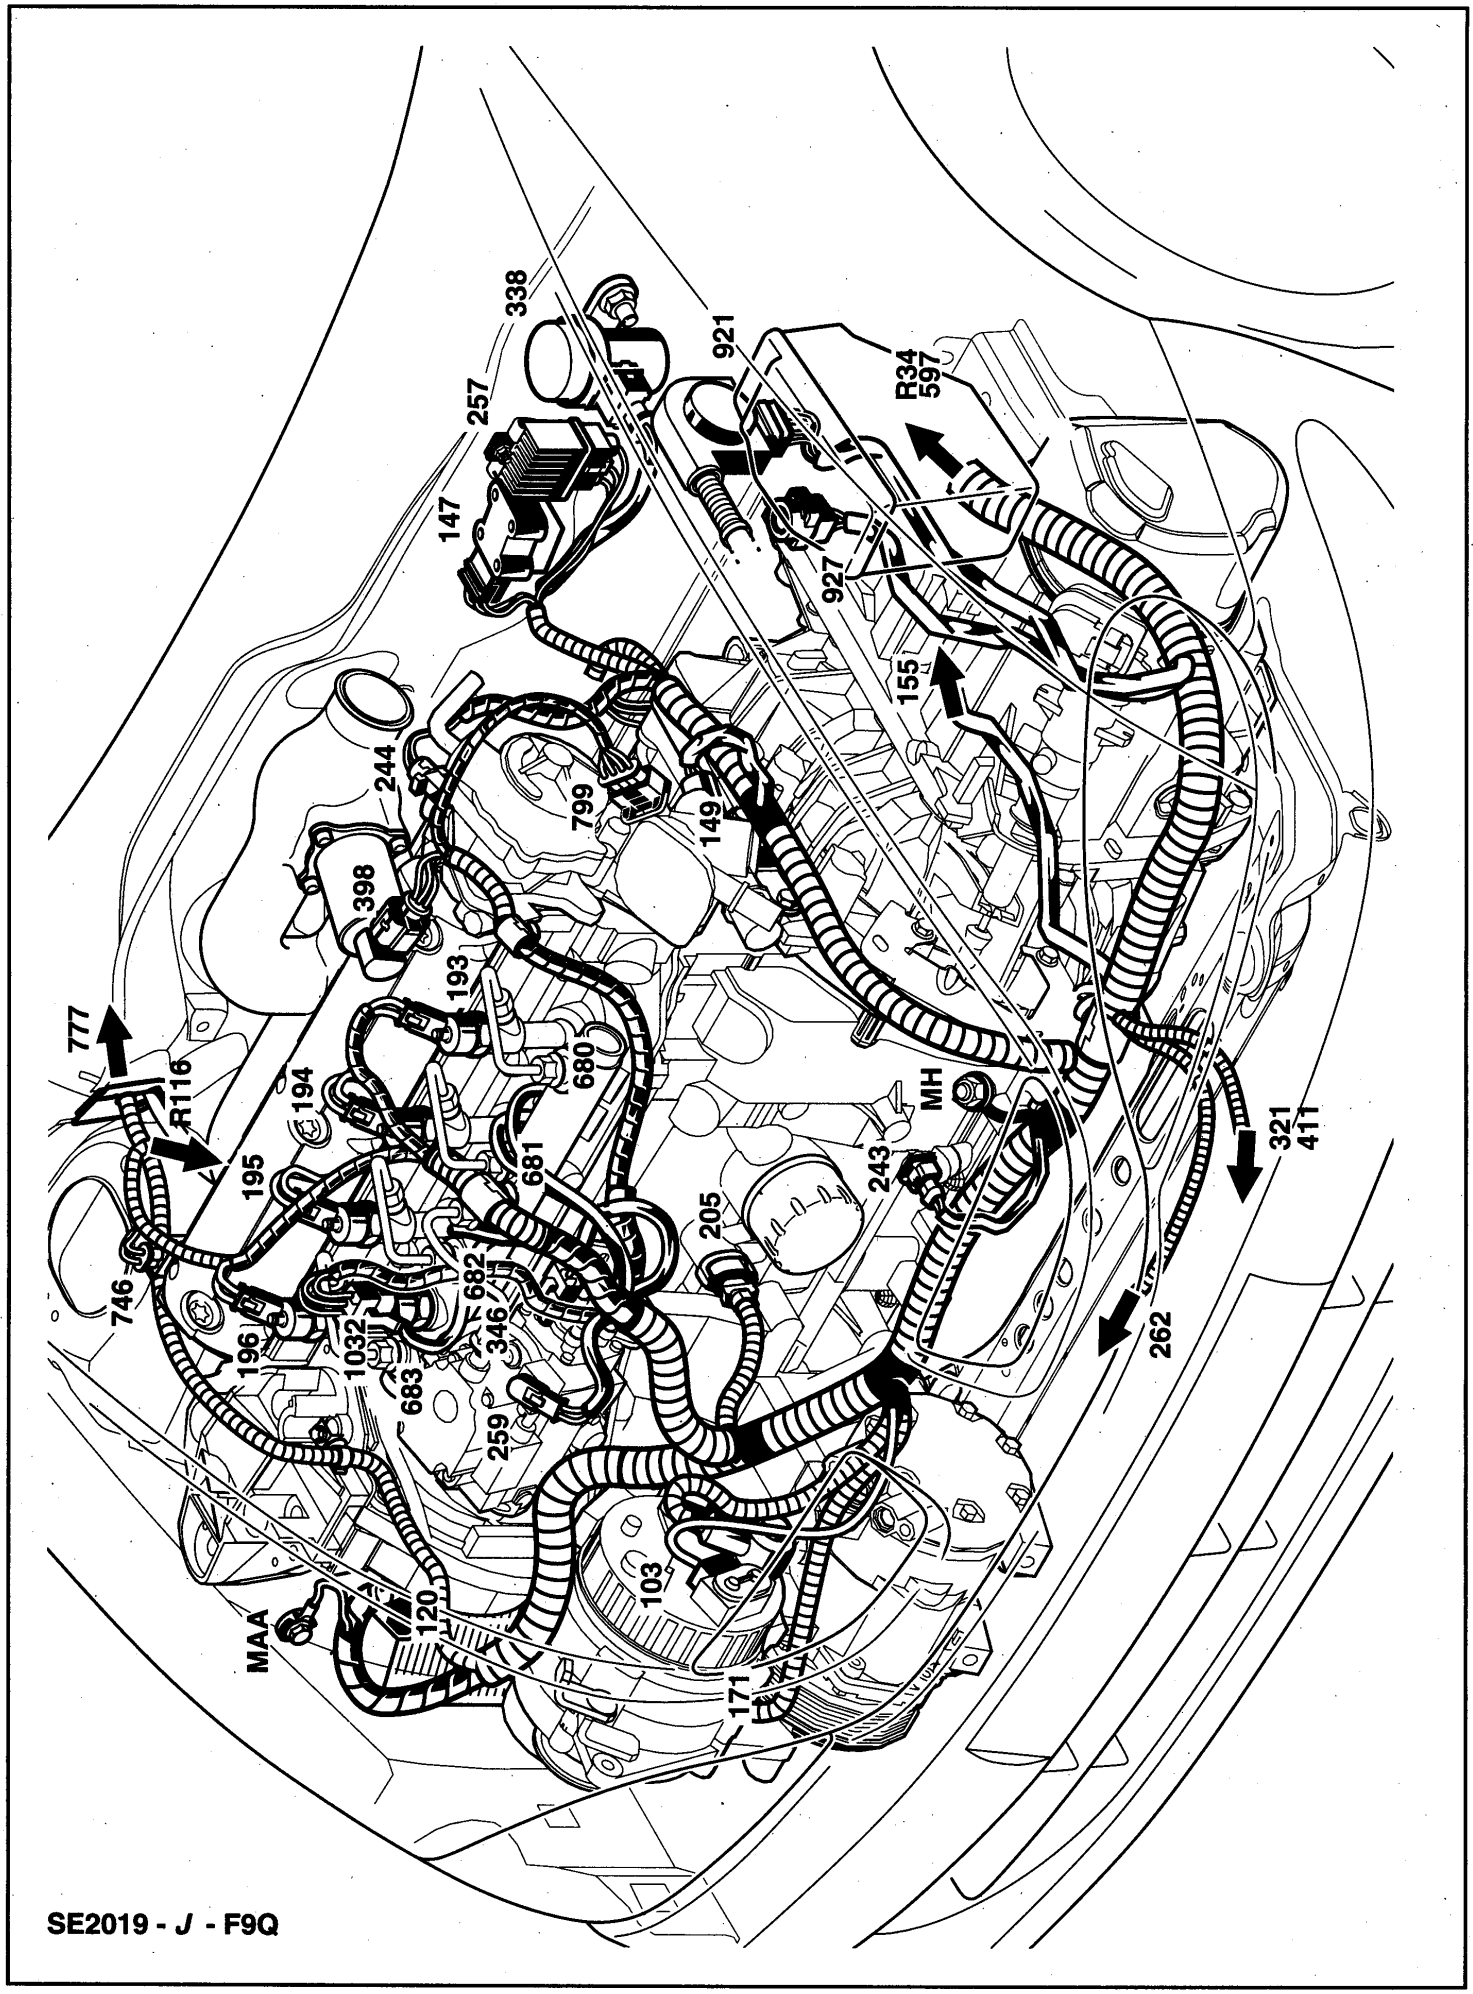
338
257
147
921
R34
597
927
155
244
799
149
398
193
777
680
R116
194
MH
195
681
243
321
411
205
746
682
346
196
1032
683
259
262
103
MAA
120
171
SE2019 - J - F9Q

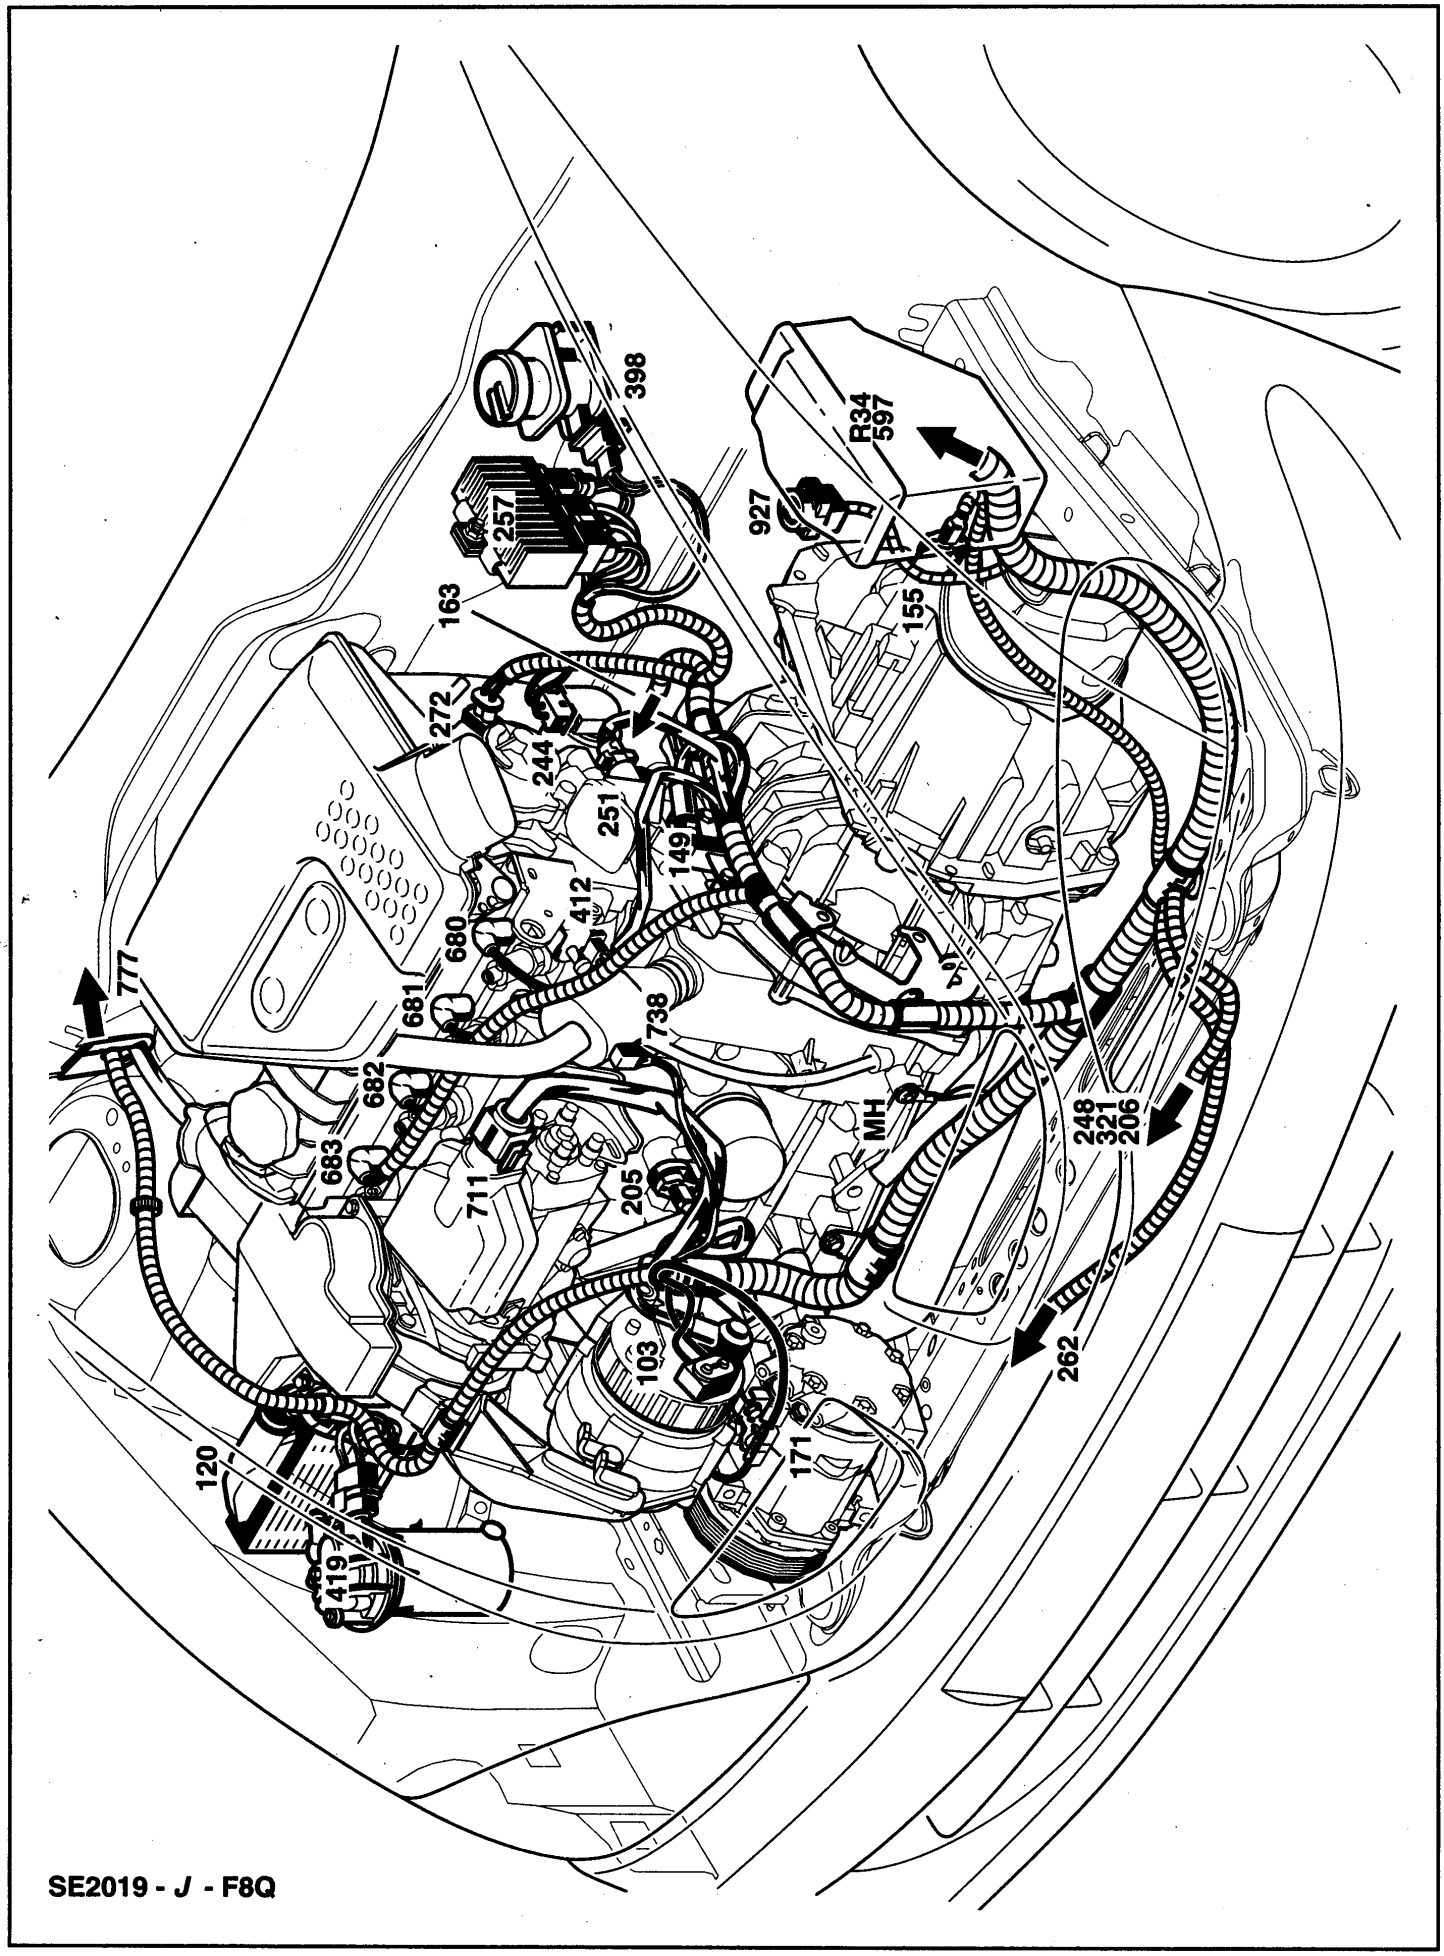
398
257
163
272
244
251
149
412
680
681
682
683
711
205
738
777
927
R34
597
155
MH
248
321
206
262
103
171
120
419

SE2019 - *J* - F8Q

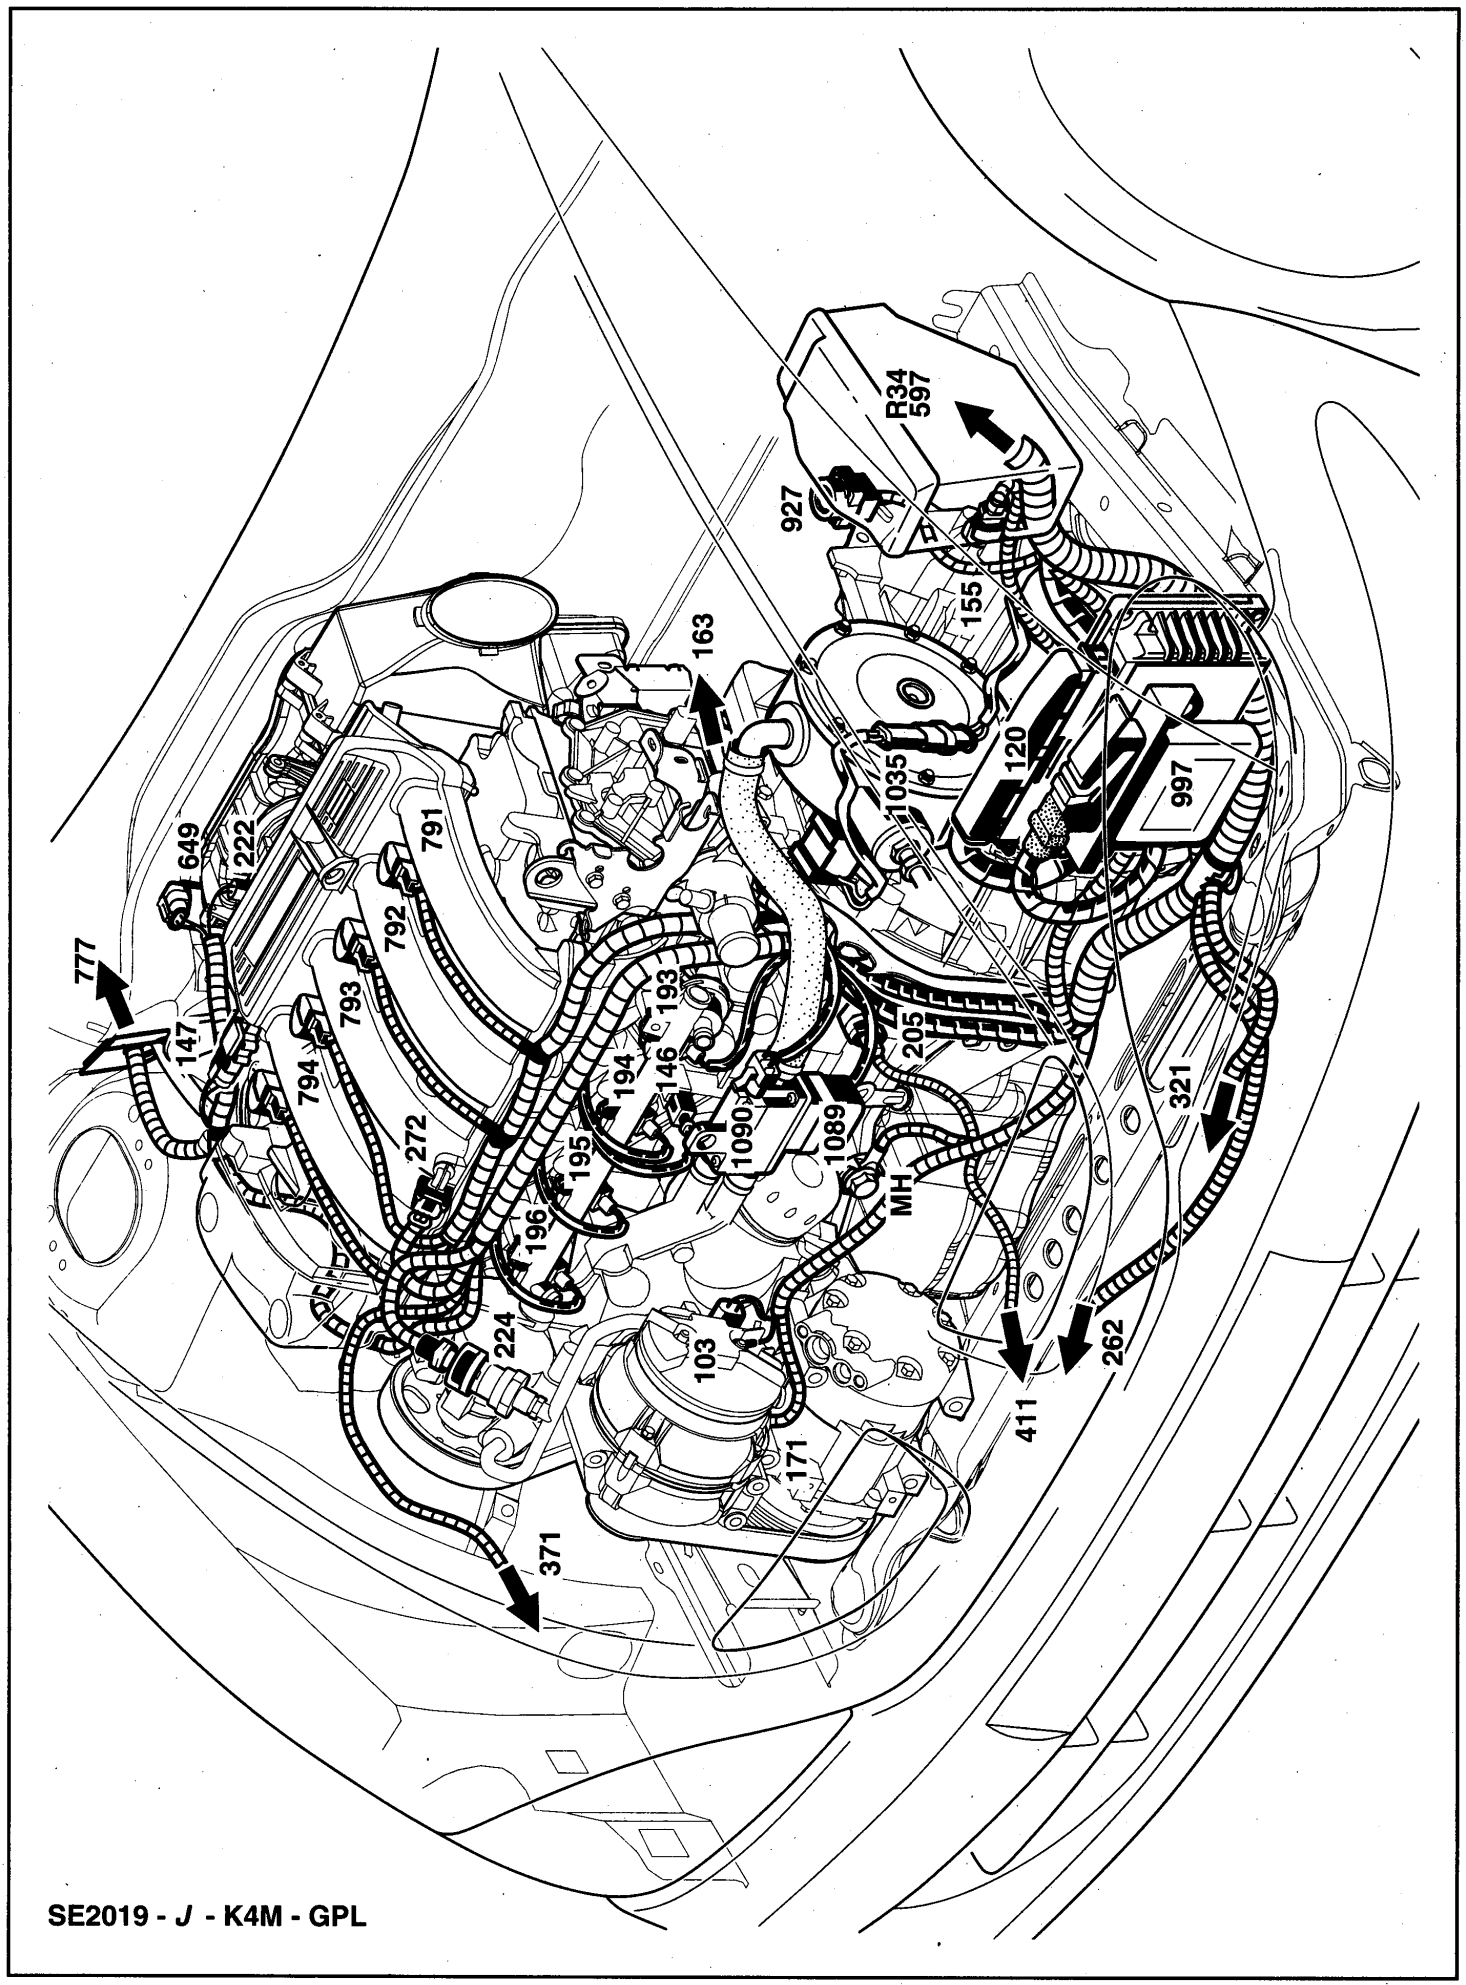

SE2019 - *J* - K4M - GPL

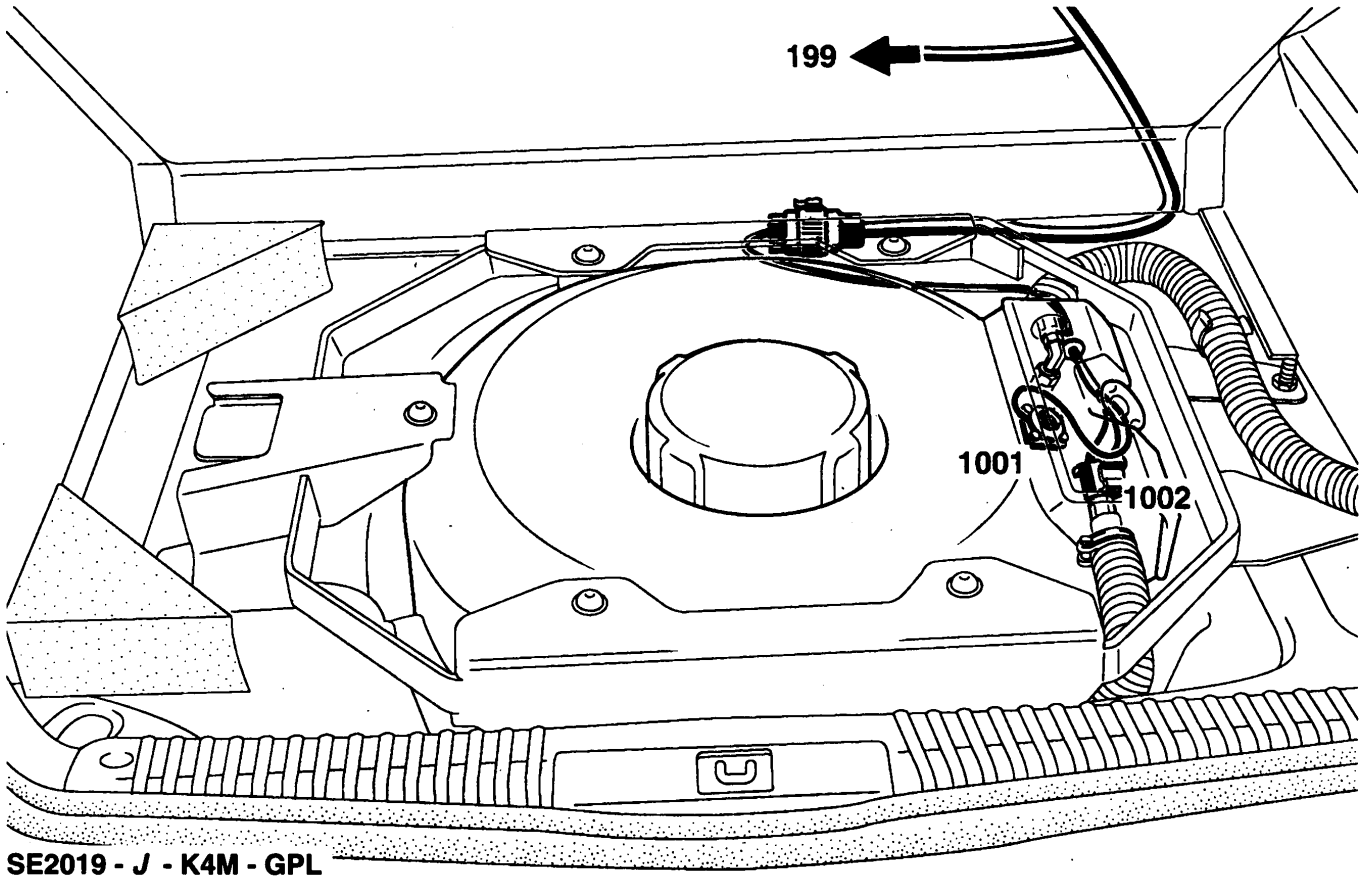

SE2019 - J - K4M - GPL

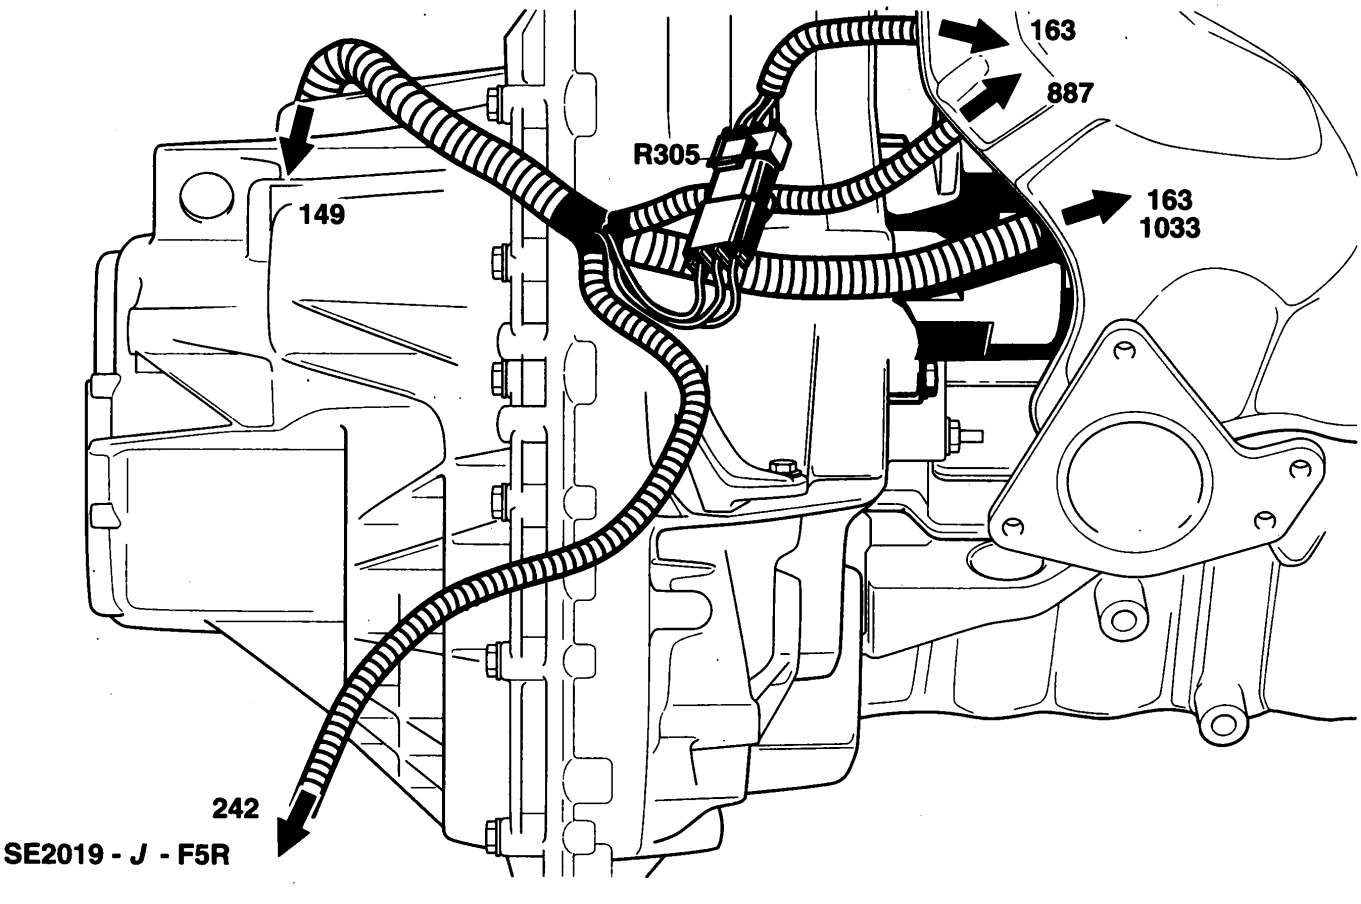

SE2019 - J - F5R

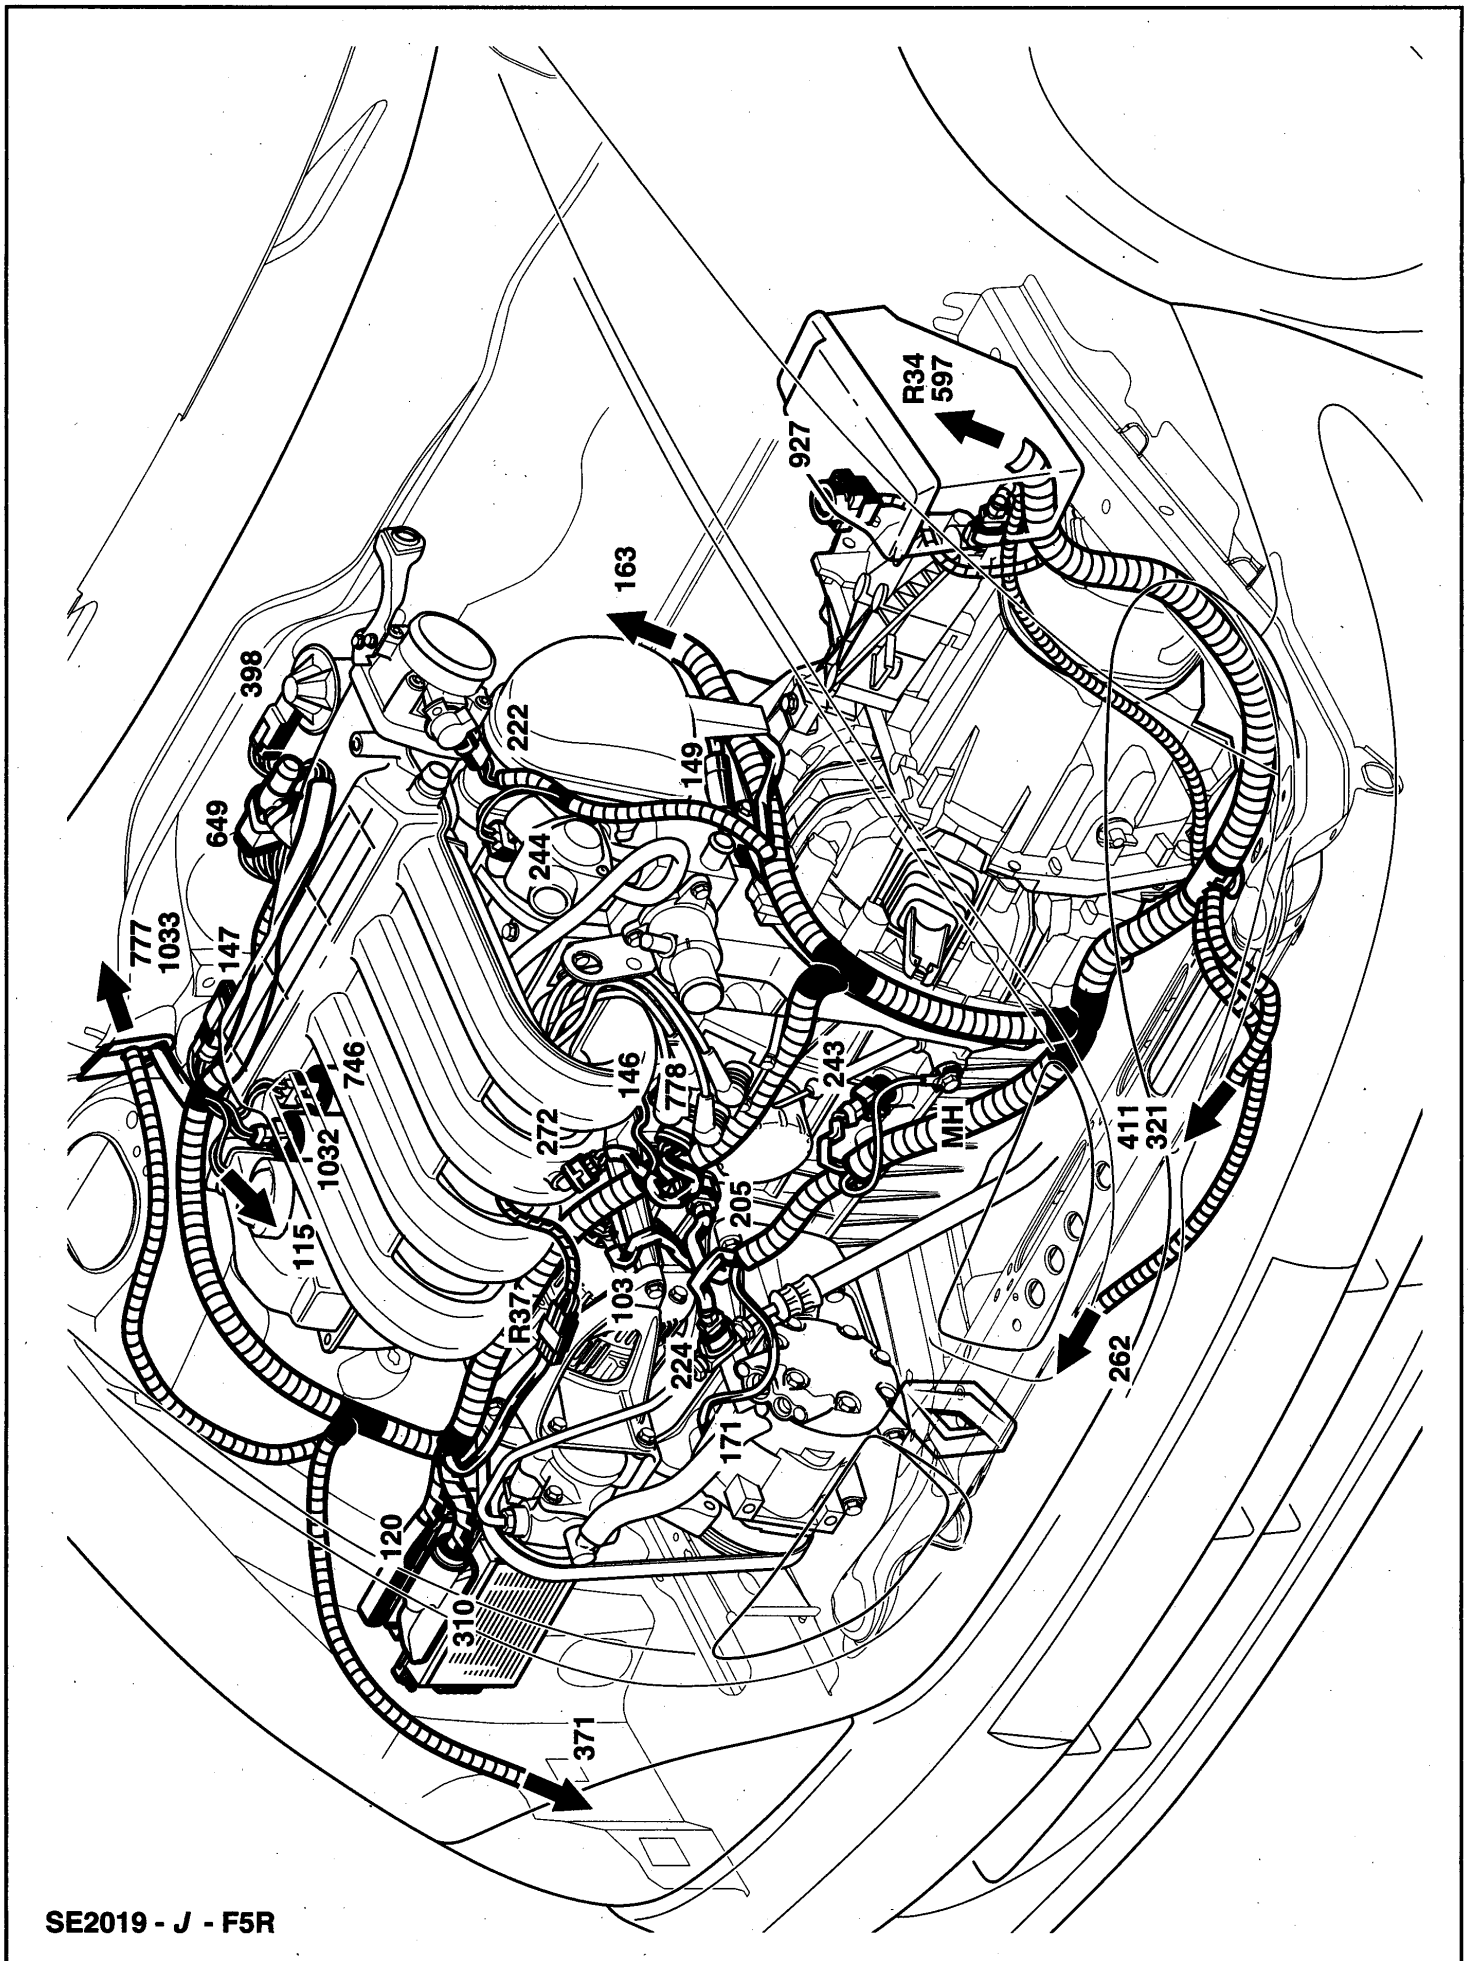
R34
597
927
163
398
222
149
649
244
777
1033
147
746
146
778
243
1032
272
MH
411
321
115
205
103
R37
224
262
171
120
310
371

SE2019 - *J* - F5R

Список сокращений

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
1 VIT	1 СТУПЕНЬ
2X6W	АУДИОСИСТЕМА 2×6 ВТ
2PORBA	ФУРГОН С РАСПАШНЫМИ ДВЕРЬМИ
2PORBP	ФУРГОН С РАСПАШНЫМИ НЕЗАСТЕКЛЕННЫМИ ДВЕРЬМИ
2X5KI	АВТОМАГНИТОЛА 2×5 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X5KS	АВТОМАГНИТОЛА 2×5 ВТ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X6CD	АУДИОСИСТЕМА 2×6 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ
2X6K7	КАССЕТНАЯ АВТОМАГНИТОЛА 2×6 ВТ
2X6KI	АВТОМАГНИТОЛА 2×6 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X6KS	АВТОМАГНИТОЛА 2×6 ВТ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X6W	АУДИОСИСТЕМА 2×6 ВТ
2X8KI	АВТОМАГНИТОЛА 2×8 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
3500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 3500 КГ
3VIT	3 СТУПЕНИ
4500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 4,5 ТОННЫ
4 VIT	4 СТУПЕНИ
4X15CI	АУДИОСИСТЕМА 4×15 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X15CS	АУДИОСИСТЕМА 4×15 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X15KI	АВТОМАГНИТОЛА 4×15 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X15KP	АУДИОСИСТЕМА 4×15 ВТ С КАССЕТНЫМ ПРОИГРЫВАТЕЛЕМ И ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X20WI	АВТОМАГНИТОЛА 4×20 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X25KI	АВТОМАГНИТОЛА 4×25 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X25KJ	АВТОМАГНИТОЛА 4×25 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X25WI	АВТОМАГНИТОЛА 4×25 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X30W	АУДИОСИСТЕМА 430 ВТ
4X6CD	АУДИОСИСТЕМА 4×6 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ

Список сокращений

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
4X6CI	АУДИОСИСТЕМА 4×6 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X6K7	КАССЕТНАЯ АВТОМАГНИТОЛА 4×6 ВТ
4X6KI	АВТОМАГНИТОЛА 4×6 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X6W	АУДИОСИСТЕМА 4×6 ВТ
4X6WI	АВТОМАГНИТОЛА 4×6 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X6WS	АВТОМАГНИТОЛА 4×6 ВТ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X7W	АУДИОСИСТЕМА 4×7 ВТ
5000 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 5 ТОНН
5500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 5,5 ТОНН
5 VIT	5 СТУПЕНЕЙ
6000 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 6 ТОНН
6500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 6,5 ТОНН
ABCO01	ПОДУШКА БЕЗОПАСНОСТИ ВОДИТЕЛЯ
ABLAV	ПЕРЕДНЯЯ БОКОВАЯ ПОДУШКА БЕЗОПАСНОСТИ
ABPA 01	ПОДУШКА БЕЗОПАСНОСТИ ПАССАЖИРА
ABR	АНТИБЛОКИРОВОЧНАЯ СИСТЕМА ТОРМОЗОВ
АБС	АНТИБЛОКИРОВОЧНАЯ СИСТЕМА ТОРМОЗОВ
ABS1	4-КАНАЛЬНАЯ АБС
ABS2	УПРОЩЕННАЯ АБС
ACPLAR	ВЕЩЕВОЙ ОТСЕК ПО ЗАДНИМИ СИДЕНЬЯМИ + РОЗЕТКА ДЛЯ ПОДКЛЮЧЕНИЯ ДОПОЛНИТЕЛЬНОГО ОБОРУДОВАНИЯ
ADAC	БОРТОВОЙ КОМПЬЮТЕР
ADAGPL	АДАПТАЦИЯ ПОД ГАЗОВОЕ ТОПЛИВО
ADNORM	УСИЛИТЕЛЬ РУЛЕВОГО УПРАВЛЕНИЯ, НОРМАЛЬНЫЙ РЕЖИМ РАБОТЫ
ADPARK	УСИЛИТЕЛЬ РУЛЕВОГО УПРАВЛЕНИЯ, РЕЖИМ РАБОТЫ ПРИ ПАРКОВКЕ
AFS	ИСПОЛНЕНИЯ ДЛЯ ЮАР
AIRBA1	ПОДУШКА БЕЗОПАСНОСТИ ЕВРОСТАНДАРТА
ALA1	ОХРАННАЯ СИГНАЛИЗАЦИЯ С ВКЛЮЧЕНИЕМ УКАЗАТЕЛЕЙ ПОВОРОТА В РЕЖИМЕ АВАРИЙНОЙ СИГНАЛИЗАЦИИ, ЗВУКОВОГО СИГНАЛА, БЛИЖНЕГО СВЕТА ФАР
ALA2	СВЕТОВОЙ СИГНАЛИЗАТОР + ЗВУКОВАЯ СИГНАЛИЗАЦИЯ
ALARME	ОХРАННАЯ СИГНАЛИЗАЦИЯ С ВКЛЮЧЕНИЕМ УКАЗАТЕЛЕЙ ПОВОРОТА В РЕЖИМЕ АВАРИЙНОЙ СИГНАЛИЗАЦИИ И БЛИЖНЕГО СВЕТА ФАР
ALASIR	ОХРАННАЯ СИГНАЛИЗАЦИЯ С СИРЕНОЙ МОЩНОСТЬЮ 100 ДБ
ALOUC	СВЕТОВОЙ СИГНАЛИЗАТОР НЕЗАСТЕГНУТОГО РЕМНЯ БЕЗОПАСНОСТИ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
AMV	ИЗМЕНЯЕМАЯ ЖЕСТКОСТЬ ПОДВЕСКИ
AMVA	ИЗМЕНЯЕМАЯ ЖЕСТКОСТЬ ПОДВЕСКИ
ANSRAD	С НАРУЖНОЙ АНТЕННОЙ, БЕЗ АУДИОСИСТЕМЫ
ANTID	СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ДВИГАТЕЛЯ
ANTIDI	СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ДВИГАТЕЛЯ + С ОХРАННОЙ СИГНАЛИЗАЦИЕЙ
ANTIV	С ОХРАННОЙ СИГНАЛИЗАЦИЕЙ
ANTVOL	С ОХРАННОЙ СИГНАЛИЗАЦИЕЙ С ИК ДИСТАНЦИОННЫМ УПРАВЛЕНИЕМ
AOEF	С СИГНАЛИЗАТОРОМ О НЕВЫКЛЮЧЕННОМ НАРУЖНОМ ОСВЕЩЕНИИ
ARB	ИСПОЛНЕНИЕ ДЛЯ САУДОВСКОЙ АРАВИИ
ARG	ИСПОЛНЕНИЕ ДЛЯ АРГЕНТИНЫ
ASFIXE	С СИГНАЛИЗАТОРОМ ПРЕВЫШЕНИЯ ЗАДАННОЙ СКОРОСТИ
ASPROG	ПРОГРАММИРОВАННЫЙ СИГНАЛИЗАТОР ПРЕВЫШЕНИЯ ЗАДАННОЙ СКОРОСТИ
ASR	С ПРОТИВОБУКСОВОЧНОЙ СИСТЕМОЙ
ATAVEL	ПОДГОЛОВНИК ПЕРЕДНЕГО СИДЕНЬЯ С ЭЛЕКТРОПРИВОДОМ
ATREM	РОЗЕТКА БУКСИРОВОЧНОГО УСТРОЙСТВА
AUS	ИСПОЛНЕНИЕ ДЛЯ АВСТРАЛИИ
AUT	ИСПОЛНЕНИЕ ДЛЯ АВСТРИИ
AVREPL	С БОКОВЫМИ ПОВТОРИТЕЛЯМИ УКАЗАТЕЛЕЙ ПОВОРОТА
B29	RENAULT 25, СЕДАН
B40	RENAULT 5, ПЯТИДВЕРНЫЙ ХЭТЧБЕК
B48	RENAULT 21 СЕДАН
B53	RENAULT 19, ПЯТИДВЕРНЫЙ ХЭТЧБЕК
B54	СЕДАН SAFRANE
B64	ПЯТИДВЕРНЫЙ ХЭТЧБЕК MEGANE
B65	ПЯТИДВЕРНЫЙ ХЭТЧБЕК CLIO
BATR02	АККУМУЛЯТОРНАЯ БАТАРЕЯ ЭЛЕКРОАВТОМОБИЛЯ ТИПА 02
BATR03	АККУМУЛЯТОРНАЯ БАТАРЕЯ ЭЛЕКРОАВТОМОБИЛЯ ТИПА 03
BEL	ИСПОЛНЕНИЕ ДЛЯ БЕЛЬГИИ
BICARB	ДВУХТОПЛИВНОЕ ИСПОЛНЕНИЕ
BR	ДОРОЖНОЕ ПОЛОТНО ХОРОШЕГО КАЧЕСТВА
BRK	АВТОМОБИЛЬ С КУЗОВОМ УНИВЕРСАЛ
BVA	АКП
BVA3	3-СТУПЕНЧАТАЯ АКП
BVA4	4-СТУПЕНЧАТАЯ АКП
BVM	МЕХАНИЧЕСКАЯ КП
BVM5	МЕХАНИЧЕСКАЯ КП 5-СТУПЕНЧАТАЯ
C40	RENAULT 5, ТРЕХДВЕРНЫЙ ХЭТЧБЕК
C53	RENAULT 19, ТРЕХДВЕРНЫЙ ХЭТЧБЕК

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
C65	CLIO ТРЕХДВЕРНЫЙ ХЭТЧБЕК
CA	КОНДИЦИОНЕР
CAREG	КЛИМАТИЧЕСКАЯ УСТАНОВКА С АВТОМАТИЧЕСКИМ УПРАВЛЕНИЕМ
CATADI	КАТАЛИТИЧЕСКИЙ НЕЙТРАЛИЗАТОР, ДИЗЕЛЬНЫЙ ДВИГАТЕЛЬ
CATOEL	СКЛАДНАЯ МЯГКАЯ КРЫША С ЭЛЕКТРОПРИВОДОМ
CATOMA	СКЛАДНАЯ МЯГКАЯ КРЫША С МЕХАНИЧЕСКИМ ПРИВОДОМ
CDCOF	CD-ЧЕЙНДЖЕР, УСТАНАВЛИВАЕМЫЙ В БАГАЖНОМ ОТДЕЛЕНИИ
CDISC	ПРОИГРЫВАТЕЛЬ КОМПАКТ-ДИСКОВ
CHAAUG	С УВЕЛИЧЕННОЙ ПОЛЕЗНОЙ НАГРУЗКОЙ
CHANOR	С НОРМАЛЬНОЙ ПОЛЕЗНОЙ НАГРУЗКОЙ
CHAREG	СИСТЕМА ОТОПЛЕНИЯ И ВЕНТИЛЯЦИИ С АВТОМАТИЧЕСКИМ УПРАВЛЕНИЕМ
CHAUD	МОДИФИКАЦИЯ ДЛЯ СТРАН С ЖАРКИМ КЛИМАТОМ
CHAUFA	ДОПОЛНИТЕЛЬНЫЙ ОТОПИТЕЛЬ
CHAUFO	ШТАТНАЯ СИСТЕМА ОТОПЛЕНИЯ
CHFUFR	СИСТЕМА ОТОПЛЕНИЯ И ВЕНТИЛЯЦИИ С АВТОМАТИЧЕСКИМ УПРАВЛЕНИЕМ
CHBPUB	КАБЕЛЬ К РОЗЕТКЕ ДЛЯ ЗАРЯДКИ ЭЛЕКТРОМОБИЛЯ
CHL	ИСПОЛНЕНИЕ ДЛЯ ЧИЛИ
CHOREC	ОБЫЧНАЯ СИСТЕМА ОТОПЛЕНИЯ С РЕЦИРКУЛЯЦИЕЙ ВОЗДУХА
COA	СИСТЕМА ПОДДЕРЖАНИЯ ВЫСОТЫ КУЗОВА
COAMEM	СИДЕНЬЕ ВОДИТЕЛЯ С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
COARLO	СИДЕНЬЕ ВОДИТЕЛЯ С РЕГУЛИРОВКОЙ ПОЯСНИЧНОГО ПОДПОРА
COL	ИСПОЛНЕНИЕ ДЛЯ КОЛУМБИИ
COLMEM	РУЛЕВАЯ КОЛОНКА С РЕГУЛИРОВКОЙ И ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
COLOMB	СИДЕНЬЕ ВОДИТЕЛЯ С РЕГУЛИРОВКОЙ ПОЯСНИЧНОГО ПОДПОРА
COMEMO	СИДЕНЬЕ ВОДИТЕЛЯ С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
COSMEM	СИДЕНЬЕ ВОДИТЕЛЯ БЕЗ ФУНКЦИИ ЗАПОМИНАНИЯ ПОЛОЖЕНИЯ
COSRLO	СИДЕНЬЕ ВОДИТЕЛЯ БЕЗ РЕГУЛИРОВКИ ПОЯСНИЧНОГО ПОДПОРА
COUP	КУПЕ
CP	ПОВОРАЧИВАЮЩЕЕСЯ ЗАДНЕЕ БОКОВОЕ ОКНО
CPE	СИСТЕМА БЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ С ЭЛЕКТРОПРИВОДОМ
CPETIR	СИСТЕМА БЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ С ЭЛЕКТРОПРИВОДОМ + ИК СИСТЕМА ПДУ
CPKELN	ДОПОЛНИТЕЛЬНЫЙ ЭЛЕКТРОННЫЙ ПАКЕТ
CPLCT	СО СБЛИЖЕННЫМИ ПЕРЕДАТОЧНЫМИ ЧИСЛАМИ
CPLG	С РАЗНЕСЕННЫМИ ПЕРЕДАТОЧНЫМИ ЧИСЛАМИ
CPLN	С ОБЫЧНЫМИ ПЕРЕДАТОЧНЫМИ ЧИСЛАМИ
CTL	ТАХОГРАФ
CTMOT	ТАХОМЕТР
CUSFIX	НЕПОДВИЖНОЕ ТОНИРОВАННОЕ ЗАДНЕЕ БОКОВОЕ ОКНО

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
CUSPIV	ПОВОРАЧИВАЮЩЕЕСЯ ЗАДНЕЕ БОКОВОЕ ОКНО
D53	R19 КАБРИОЛЕТ
D64	MEGANE КУПЕ, 3-ДВЕРНЫЙ ХЭТЧБЕК
DA	РУЛЕВОЕ УПРАВЛЕНИЕ С УСИЛИТЕЛЕМ
DAN	ИСПОЛНЕНИЕ ДЛЯ ДАНИИ
DAV	РУЛЕВОЕ УПРАВЛЕНИЕ С АДАПТИВНЫМ УСИЛИТЕЛЕМ
DD	ПРАВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ
DEGIV	ОБОГРЕВ НАРУЖНОГО ЗЕРКАЛА ЗАДНЕГО ВИДА
DG	ЛЕВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ
DISEL	ДИЗЕЛЬНОЕ ТОПЛИВО
DIREG	РЕГУЛИРУЕМАЯ РУЛЕВАЯ КОЛОНКА
DM	МЕХАНИЧЕСКОЕ РУЛЕВОЕ УПРАВЛЕНИЕ
E0	УРОВЕНЬ КОМПЛЕКТАЦИИ 0
E1	УРОВЕНЬ КОМПЛЕКТАЦИИ 1
E2	УРОВЕНЬ КОМПЛЕКТАЦИИ 2
ES2	УРОВЕНЬ КОМПЛЕКТАЦИИ СПОРТ, 2
E3	УРОВЕНЬ КОМПЛЕКТАЦИИ 3
E3L	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, ДОСУГ
E3P	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, ПЛЮС
E3S	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, СПОРТ
E4	УРОВЕНЬ КОМПЛЕКТАЦИИ 4
E5	УРОВЕНЬ КОМПЛЕКТАЦИИ 5
E64	MEGANE КАБРИОЛЕТ X64
ECLAR	ОСВЕЩЕНИЕ ЗАДНИХ СИДЕНИЙ
ECOLE	УЧЕБНЫЙ АВТОМОБИЛЬ
ELA	ОЧИСТИТЕЛЬ ЗАДНЕГО СТЕКЛА
ELEC	ЭЛЕКТРОМОБИЛЬ
EMBNOR	КЛАССИЧЕСКОЕ СЦЕПЛЕНИЕ
EMBPIL	АВТОМАТИЧЕСКОЕ СЦЕПЛЕНИЕ
EP	ФАРООЧИСТИТЕЛИ
EQGPL	ГАЗОБАЛЛОННОЕ ОБОРУДОВАНИЕ
ES2	УРОВЕНЬ КОМПЛЕКТАЦИИ 2, СПОРТ
ES3	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, СПОРТ
ES4	УРОВЕНЬ КОМПЛЕКТАЦИИ 4, СПОРТ
ESP	ВАРИАНТ ИСПОЛНЕНИЯ ДЛЯ ИСПАНИИ
ESS	С БЕНЗИНОВЫМ ДВИГАТЕЛЕМ
EUNORD	МОДИФИКАЦИЯ ДЛЯ СТРАН СЕВЕРНОЙ ЕВРОПЫ
EVCFIX	СТЕКЛООЧИСТИТЕЛЬ С ФИКСИРОВАННЫМ ПРЕРЫВИСТЫМ РЕЖИМОМ РАБОТЫ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
EVCVAR	СТЕКЛООЧИСТИТЕЛЬ С ИЗМЕНЯЕМЫМ ПРЕРЫВИСТЫМ РЕЖИМОМ РАБОТЫ
F40	ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ ЭКСПРЕСС
F64	MEGANE SCENIC X64 В ГРУЗОПАССАЖИРСКОМ ИСПОЛНЕНИИ
FARBR	ЗАДНИЕ ПРОТИВОТУМАННЫЕ ФОНАРИ
FGT	МАЛОГАБАРИТНЫЙ ФУРГОН
FIPOU	С ФИЛЬТРОМ СИСТЕМЫ ВЕНТИЛЯЦИИ САЛОНА
FR	СВЕТ ЗАДНЕГО ХОДА
FRA	ИСПОЛНЕНИЕ ДЛЯ ФРАНЦИИ
FRAS	ТОРМОЗНАЯ СИСТЕМА С УСИЛИТЕЛЕМ В ПРИВОДЕ ТОРМОЗОВ
FROID	МОДИФИКАЦИЯ ДЛЯ СТРАН С ХОЛОДНЫМ КЛИМАТОМ
FSTPO	ДОПОЛНИТЕЛЬНЫЙ СТОП-СИГНАЛ
FUJI	СПЕЦИАЛЬНАЯ КОМПЛЕКТАЦИЯ ДЛЯ ЯПОНИИ
FXEPAV	ГАБАРИТНЫЕ ФОНАРИ НА КРЫШЕ
GALERI	БАГАЖНИК НА КРЫШЕ
GAZNAT	АВТОМОБИЛЬ, РАБОТАЮЩИЙ НА ПРИРОДНОМ ГАЗЕ
GBR	ИСПОЛНЕНИЕ ДЛЯ ВЕЛИКОБРИТАНИИ
GDFROI	МОДИФИКАЦИЯ ДЛЯ СТРАН С ОЧЕНЬ ХОЛОДНЫМ КЛИМАТОМ
GPL	ГАЗОБАЛОННОЕ ОБОРУДОВАНИЕ ДЛЯ АВТОМОБИЛЯ РАБОТАЮЩЕГО НА СЖИЖЕННОМ НЕФТЯНОМ ГАЗЕ
HANDIC	ИСПОЛНЕНИЕ ДЛЯ ИНВАЛИДОВ
HARDTO	АВТОМОБИЛЬ БЕЗ СЪЕМНОЙ КРЫШИ
HAYON	ДВЕРЬ ЗАДКА
HOL	ИСПОЛНЕНИЕ ДЛЯ НИДЕРЛАНДОВ
HYPCP1	ЗАДНЕЕ БОКОВОЕ СТЕКЛО С МЕХАНИЧЕСКИМ ПРИВОДОМ
HYPCP2	ЗАДНЕЕ БОКОВОЕ СТЕКЛО С ЭЛЕКТРОПРИВОДОМ
HYPRT1	СТАЦИОНАРНАЯ ТЕЛЕФОННАЯ ТРУБКА
HYPRT2	ПЕРЕНОСНАЯ ТЕЛЕФОННАЯ ТРУБКА
HYPTE1	КРЫШКА ЛЮКА ГОРЛОВИНЫ ТОПЛИВНОГО БАКА С УПРАВЛЕНИЕМ ИЗ САЛОНА
HYPTE2	БЛОКИРОВКА КРЫШКИ ЛЮКА ГОРЛОВИНЫ ТОПЛИВНОГО БАКА
INFR	С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
INJEL	ЭЛЕКТРОННАЯ СИСТЕМА ВПРЫСКА
INJMCA	МЕХАНИЧЕСКАЯ СИСТЕМА ВПРЫСКА
ITA	ИСПОЛНЕНИЕ ДЛЯ ИТАЛИИ
J64	MEGANE ПЯТИДВЕРНЫЙ ХЭТЧБЕК
JPN	ИСПОЛНЕНИЕ ДЛЯ ЯПОНИИ, ЛЕВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ
K25	MEGANE УНИВЕРСАЛ
K53	УНИВЕРСАЛ R19
KM	КИЛОМЕТРЫ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
KANG	СПЕЦИАЛЬНАЯ КОМПЛЕКТАЦИЯ ДЛЯ АВСТРАЛИИ
L53	R19 С КУЗОВОМ СЕДАН
L64	MEGANE С КУЗОВОМ СЕДАН
L65	CLIO С КУЗОВОМ СЕДАН
LAC	ОБОГРЕВ ЗАДНЕГО СТЕКЛА
LADECH	КСЕНОНОВЫЕ ЛАМПЫ
LARNOU	НЕОТКРЫВАЮЩЕЕСЯ ЗАДНЕЕ СТЕКЛО
LAROU	ЗАДНЕЕ ОТКРЫВАЮЩЕЕСЯ СТЕКЛО
LAVPH	ИСПОЛНЕНИЕ С ОЧИСТИТЕЛЯМИ ФАР
LNC	ЗАДНЕЕ СТЕКЛО БЕЗ ЭЛЕКТРОПОДОГРЕВА
LOKBA	С БЛОКИРОВКОЙ РЫЧАГА СЕЛЕКТОРА АКП
LVARAP	ТРАВМОБЕЗОПАСНЫЕ СТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ
LVAREL	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ
LVARMA	СТЕКЛОПОДЪЕМНИК ЗАДНЕЙ ДВЕРИ С РУЧНЫМ ПРИВОДОМ
LVAVAP	ТРАВМОБЕЗОПАСНЫЕ ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ПЕРЕДНИХ ДВЕРЕЙ
LVAVEL	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИК ПЕРЕДНЕЙ ДВЕРИ
LVAVMA	МЕХАНИЧЕСКИЙ СТЕКЛОПОДЪЕМНИК ПЕРЕДНЕЙ ДВЕРИ
LVE	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ
LVEAR	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ
LVM	СТЕКЛОПОДЪЕМНИКИ С РУЧНЫМ ПРИВОДОМ
MAL	ИСПОЛНЕНИЕ ДЛЯ МАЛАЙЗИИ
MALA	ИСПОЛНЕНИЕ ДЛЯ МАЛАЙЗИИ
MERCOS	ВАРИАНТ ИСПОЛНЕНИЯ ДЛЯ СТРАН ЛАТИНСКОЙ АМЕРИКИ
MILES	MILES
MICRO	С ЗЕРКАЛОМ ВОДИТЕЛЯ
NAVIG	С СИСТЕМОЙ НАВИГАЦИИ
NINAVO	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 0
NINAV1	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 1
NINAV2	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 2
NINAV3	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 3
NINAV4	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 4
NIVDO	ДАТЧИК УРОВНЯ ЖИДКОСТИ
NOR	ИСПОЛНЕНИЕ ДЛЯ НОРВЕГИИ
ODIN	СПЕЦИАЛЬНАЯ КОМПЛЕКТАЦИЯ ДЛЯ ШВЕЦИИ/НОРВЕГИИ/ФИНЛЯНДИИ
OUCAEL	СКЛАДНАЯ КРЫША С ЭЛЕКТРОПРИВОДОМ
OUCAMA	СКЛАДНАЯ КРЫША С РУЧНЫМ ПРИВОДОМ
OUTOEL	ЛЮК КРЫШИ С ЭЛЕКТРОПРИВОДОМ
PAELEC	СИДЕНЬЕ ПАССАЖИРА, С ЭЛЕКТРОПРИВОДОМ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
PAMEMO	СИДЕНЬЕ ПАССАЖИРА С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
PAARLO	СИДЕНЬЕ ПАССАЖИРА С РЕГУЛИРОВКОЙ ПОЯСНИЧНОГО ПОДПОРА
PBCH	ВЕТРОВОЕ СТЕКЛО С ОБОГРЕВОМ
PBNCH	ВЕТРОВОЕ СТЕКЛО БЕЗ ОБОГРЕВА
PISTE	ГРУНТОВАЯ ДОРОГА
PKERGO	ЭРГОНОМИЧЕСКИЙ ПАКЕТ
PLAFNT	ПЛАФОН ОСВЕЩЕНИЯ БЕЗ РЕЛЕ ВРЕМЕНИ
PLAFT	ПЛАФОН ОСВЕЩЕНИЯ С РЕЛЕ ВРЕМЕНИ
PRAD01	УСТРОЙСТВА ДЛЯ УСТАНОВКИ РАДИООБОРУДОВАНИЯ
PRECA	ОБОРУДОВАНИЕ ДЛЯ УСТАНОВКИ КОНДИЦИОНЕРА
PREGPL	ПОДГОТОВКА ПОД УСТАНОВКУ СИСТЕМЫ ПИТАНИЯ СЖИЖЕННЫМ ГАЗОМ
PRERAD	УСТРОЙСТВА ДЛЯ УСТАНОВКИ РАДИООБОРУДОВАНИЯ
PRETEL	ПОДГОТОВКА ПОД УСТАНОВКУ РАДИО- И ТЕЛЕФОННОГО ОБОРУДОВАНИЯ
PRHALO	ГАЛОГЕННЫЕ ЛАМПЫ
PROJAB	ПРОТИВОТУМАННЫЕ ФАРЫ
PROJAD	ДОПОЛНИТЕЛЬНЫЕ ФАРЫ
PROJDO	СПАРЕННАЯ ФАРА
PROJLP	ФАРЫ ДАЛЬНЕГО СВЕТА
PROJSO	ОБЫЧНАЯ ФАРА
PTCAV	С ПЕРЕДНИМ ПРЕДНАТЯЖИТЕЛЕМ
R2X5	АУДИОСИСТЕМА 2×5 ВТ
R2X6	АУДИОСИСТЕМА 2×6 Вт
R2X6WI	АУДИОСИСТЕМА 2×6 ВТ С ИНФОРМАЦИЕЙ О ДОРОЖНОЙ ОБСТАНОВКЕ
R4000	АУДИОСИСТЕМА ТИПА 4000
R501	АУДИОСИСТЕМА ТИПА DC501
R5020	АУДИОСИСТЕМА 5020
R521	АУДИОСИСТЕМА ТИПА DC521
R552	АУДИОСИСТЕМА DC552
RADI	С АУДИОСИСТЕМОЙ
RADIO	АУДИОСИСТЕМА
RADIO1	АУДИОСИСТЕМА №°1
RADIO5	АУДИОСИСТЕМА №°5
RADIO6	АУДИОСИСТЕМА №°6
RADSDK	АУДИОСИСТЕМА С SDK
RADTEL	МОБИЛЬНЫЙ ТЕЛЕФОН
RC4X15	АУДИОСИСТЕМА С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ 4×15 ВТ
REDE	ПРАВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
REDF	НЕРЕГУЛИРУЕМОЕ ПРАВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
REDR	С РУЧНОЙ РЕГУЛИРОВКОЙ
REGE	ЛЕВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
REGELE	ЭЛЕКТРОДВИГАТЕЛЬ РЕГУЛИРОВКИ ПОЛОЖЕНИЯ РУЛЕВОЙ КОЛОНКИ
REGF	НЕРЕГУЛИРУЕМОЕ ЛЕВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА
REGR	ЛЕВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА С РУЧНОЙ РЕГУЛИРОВКОЙ
REGSIT	КОРРЕКТОР
REMEM	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
REMEM	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА БЕЗ ЗАПОМИНАНИЯ ПОЛОЖЕНИЯ
REPOCH	ИСПОЛНЕНИЕ ДЛЯ КНР
RETROE	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
RETROF	ДВА НАРУЖНЫХ ЗЕРКАЛА ЗАДНЕГО ВИДА С ФИКСИРОВАННЫМ ПОЛОЖЕНИЕМ
RETROL	ДВА ЗЕРКАЛА ЗАДНЕГО ВИДА С УВЕЛИЧЕННЫМ УГЛОМ ОБЗОРА
RETROR	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
RK4X15	АВТОМАГНИТОЛА 4×15 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
RPROX	С РАДАРОМ ДЛЯ ПАРКОВКИ
RUNLI	С ФАРАМИ ДНЕВНОГО ДВИЖЕНИЯ
RV	РЕГУЛЯТОР СКОРОСТИ ДВИЖЕНИЯ
S40	RENAULT 5, ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
S53	RENAULT 19 ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
S64	MEGANE ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
S65	CLIO ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
SABLAV	БЕЗ ПЕРЕДНЕЙ БОКОВОЙ ПОДУШКИ БЕЗОПАСНОСТИ
SACPLA	БЕЗ ВЕЩЕВОГО ОТДЕЛЕНИЯ В РАЙОНЕ ЗАДНИХ СИДЕНИЙ + РОЗЕТКИ ДЛЯ ПОДКЛЮЧЕНИЯ ДОПОЛНИТЕЛЬНОГО ОБОРУДОВАНИЯ
SADAC	НАВИГАЦИОННАЯ СИСТЕМА
SAIRBA	БЕЗ ПОДУШКИ БЕЗОПАСНОСТИ
SALOUC	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О НЕЗАСТЕГНУТОМ РЕМНЕ БЕЗОПАСНОСТИ
SANABS	БЕЗ АБС
SANALA	БЕЗ СИСТЕМЫ ОХРАННОЙ СИГНАЛИЗАЦИИ
SANCOA	БЕЗ СИСТЕМЫ ПОДДЕРЖАНИЯ ВЫСОТЫ КУЗОВА
SANCTL	БЕЗ ТАХОГРАФА
SANCUS	ИСПОЛНЕНИЕ БЕЗ ЗАДНИХ БОКОВЫХ ОКОН
SANRAD	БЕЗ РАДИООБОРУДОВАНИЯ
SANSYP	БЕЗ СИНТЕЗАТОРА РЕЧИ
SANTIV	БЕЗ ОХРАННОЙ СИГНАЛИЗАЦИИ
SAOEF	БЕЗ СИГНАЛИЗАТОРА О НЕВЫКЛЮЧЕННОМ НАРУЖНОМ ОСВЕЩЕНИИ
SASURV	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О ПРЕВЫШЕНИИ ЗАДАННОЙ СКОРОСТИ ДВИЖЕНИЯ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
SAUF	ИСКЛЮЧЕНИЕ
SCATAD	БЕЗ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА ОТРАБОТАВШИХ ГАЗОВ ДИЗЕЛЬНОГО ДВИГАТЕЛЯ
SCCHA	СИДЕНЬЯ С ОБОГРЕВОМ
SCDCOF	БЕЗ ЧЕЙНДЖЕРА КОМПАКТ-ДИСКОВ В БАГАЖНОМ ОТДЕЛЕНИИ
SCDISC	БЕЗ ПРОИГРЫВАТЕЛЯ КОМПАКТ-ДИСКОВ
SCTMOT	БЕЗ ТАХОГРАФА
SDEGIV	БЕЗ ОБОГРЕВА НАРУЖНЫХ ЗЕРКАЛ ЗАДНЕГО ВИДА
SECLAR	БЕЗ ОСВЕЩЕНИЯ ЗАДНИХ СИДЕНИЙ
SEMBRY	БЕЗ СЦЕПЛЕНИЯ
SFIPOU	БЕЗ ФИЛЬТРА ВЕНТИЛЯЦИИ САЛОНА
SFSTPO	БЕЗ ДОПОЛНИТЕЛЬНОГО СТОП-СИГНАЛА
SGACHA	СИДЕНЬЕ С ОБОГРЕВОМ
SGECFT	АНАТОМИЧЕСКОЕ РЕГУЛИРУЕМОЕ СИДЕНЬЕ С ЭЛЕКТРОПРИВОДОМ
SGELAR	РЕГУЛИРОВКА С ПОМОЩЬЮ ЭЛЕКТРОПРИВОДА
SGELAV	РЕГУЛИРОВКА ПЕРЕДНИХ СИДЕНИЙ С ПОМОЩЬЮ ЭЛЕКТРОПРИВОДА
SGELEC	ЭЛЕКТРОПРИВОД ОТКИДЫВАНИЯ ПЕРЕДНИХ СИДЕНИЙ
SGMANU	СИДЕНЬЕ С РУЧНОЙ РЕГУЛИРОВКОЙ
SGMEMO	СИДЕНЬЕ С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
SGSCHA	СИДЕНЬЕ БЕЗ ОБОГРЕВА
SHARDT	АВТОМОБИЛЬ СО СЪЕМНОЙ КРЫШЕЙ
SIEREH	ПЕРЕДНЕЕ РЕГУЛИРУЕМОЕ СИДЕНЬЕ
SLAVPH	БЕЗ ОМЫВАТЕЛЯ ФАР
SLDECH	БЕЗ КСЕНОНОВЫХ ФАР
SLOKBA	БЕЗ БЛОКИРОВКИ РЫЧАГА СЕЛЕКТОРА АКП
SMIRCO	БЕЗ ЗЕРКАЛА В ПРОТИВОСОЛНЕЧНОМ КОЗЫРЬКЕ ВОДИТЕЛЯ
SNAVIG	БЕЗ СИСТЕМЫ НАВИГАЦИИ
SNIVDO	БЕЗ ДАТЧИКА УРОВНЯ ЖИДКОСТИ В БАЧКЕ ОМЫВАТЕЛЯ
SPRGPL	БЕЗ ОБОРУДОВАНИЯ СИСТЕМЫ ПИТАНИЯ СЖИЖЕННЫМ ГАЗОМ
SPROJA	БЕЗ ДОПОЛНИТЕЛЬНЫХ ФАР
SPRTEL	БЕЗ ПОДГОТОВКИ ПОД УСТАНОВКУ РАДИОТЕЛЕФОНА
SPTCAV	БЕЗ ПРЕДНАТЯЖИТЕЛЯ ПЕРЕДНЕГО РЕМНЯ БЕЗОПАСНОСТИ
SREGUL	БЕЗ РЕГУЛИРОВАНИЯ РАСПРЕДЕЛЕНИЯ ВОЗДУХА В САЛОНЕ
SRPROX	БЕЗ СИСТЕМЫ КОНТРОЛЯ ПАРКОВКИ
SRUNLI	БЕЗ ФАР ДНЕВНОГО ДВИЖЕНИЯ
SSABCO	БЕЗ ПОДУШКИ БЕЗОПАСНОСТИ ВОДИТЕЛЯ
SSABPA	БЕЗ ПОДУШКИ БЕЗОПАСНОСТИ ПАССАЖИРА
SSABS	БЕЗ АБС
SSALA	БЕЗ СИСТЕМЫ ОХРАННОЙ СИГНАЛИЗАЦИИ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
SSASR	БЕЗ ПРОТИВОБУКСОВОЧНОЙ СИСТЕМЫ
SSCPE	БЕЗ СИСТЕМЫ БЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ
SSELA	БЕЗ СТЕКЛООЧИСТИТЕЛЯ ЗАДНЕГО СТЕКЛА
SSFEUX	БЕЗ БОКОВЫХ ФОНАРЕЙ
SSINFR	БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
SSLAC	БЕЗ ОБОГРЕВА ЗАДНЕГО СТЕКЛА
SSLVAR	БЕЗ СТЕКЛОПОДЪЕМНИКА ЗАДНЕЙ ДВЕРИ
SSNMAS	БЕЗ ОХРАННОЙ СИГНАЛИЗАЦИИ И СИРЕНЫ
SSNMTE	БЕЗ ТЕЛЕФОНА
SSOUTO	БЕЗ ЛЮКА В КРЫШЕ
SSRADI	БЕЗ АУДИОСИСТЕМЫ
SSREPL	БЕЗ БОКОВЫХ ПОВТОРИТЕЛЕЙ УКАЗАТЕЛЕЙ ПОВОРОТА
SSRSIT	БЕЗ КОРРЕКТОРА СВЕТА ФАР
SSRV	БЕЗ РЕГУЛЯТОРА СКОРОСТИ ДВИЖЕНИЯ
SSSIR	БЕЗ СИРЕНЫ
SSTETA	БЕЗ ДАТЧИКА ТЕМПЕРАТУРЫ
SSTIR	БЕЗ ИК СИСТЕМЫ ДУ (РАЗБЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ)
STELCB	БЕЗ ТЕЛЕФОННОГО ОБОРУДОВАНИЯ
STELER	БЕЗ ПРИЕМОПЕРЕДАТЧИКА РАДИОТЕЛЕФОНА
STELIN	БЕЗ ТЕЛЕФОНА
STHPGL	БЕЗ ПОГРУЖНЫХ ПОДОГРЕВАТЕЛЕЙ
STPOKA	БЕЗ ДАТЧИКА ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
STTPOK	БЕЗ СИГНАЛЬНОЙ ЛАМПЫ ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
SURVIT	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О ПРЕВЫШЕНИИ ЗАДАННОЙ СКОРОСТИ ДВИЖЕНИЯ
SUSNOR	ОБЫЧНАЯ ПОДВЕСКА
SUE	ИСПОЛНЕНИЕ ДЛЯ ШВЕЦИИ
SUI	ИСПОЛНЕНИЕ ДЛЯ ШВЕЙЦАРИИ
SURVIT	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О ПРЕВЫШЕНИИ ЗАДАННОЙ СКОРОСТИ ДВИЖЕНИЯ
SUSNOR	ОБЫЧНАЯ ПОДВЕСКА
SUSNPN	ПОДВЕСКА БЕЗ ПНЕВМАТИЧЕСКИХ ЭЛЕМЕНТОВ
SUSPNE	ПНЕВМОПОДВЕСКА
SUSPIL	РЕГУЛИРУЕМАЯ ПОДВЕСКА
SUSREN	УСИЛЕННАЯ ПОДВЕСКА
SYP	СИНТЕЗАТОР РЕЧИ
TBORD00	ЩИТОК ПРИБОРОВ ВАРИАНТ 00
TBORD01	ЩИТОК ПРИБОРОВ ВАРИАНТ 01

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
TBORD02	ЩИТОК ПРИБОРОВ ВАРИАНТ 02
TBORD03	ЩИТОК ПРИБОРОВ ВАРИАНТ 03
TBORD04	ЩИТОК ПРИБОРОВ ВАРИАНТ 04
TELIN	ВСТРОЕННЫЙ МОБИЛЬНЫЙ ТЕЛЕФОН
TEMP	МОДИФИКАЦИЯ ДЛЯ СТРАН С УМЕРЕННЫМ КЛИМАТОМ
TETA	С ДАТЧИКОМ ТЕМПЕРАТУРЫ
THA	ИСПОЛНЕНИЕ ДЛЯ ТАЙЛАНДА
THEPLG	ПОГРУЖНОЙ ПОДОГРЕВАТЕЛЬ
TIR	С СИСТЕМОЙ ДИСТАНЦИОННОЙ РАЗБЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ
TKO	ТАКСИ
TN	ОБЫЧНАЯ КРЫША
TO	КРЫША С ЛЮКОМ
TOEC	СДВИГАЮЩИЙСЯ И ПРИОТКРЫВАЮЩИЙСЯ ЛЮК КРЫШИ
TOELEC	ЛЮК КРЫШИ С ЭЛЕКТРОПРИВОДОМ
TOLE1	ГРУЗОВАЯ МОДИФИКАЦИЯ БЕЗ ОСТЕКЛЕНИЯ ГРУЗОВОГО ОТДЕЛЕНИЯ
TOMANU	ЛЮК КРЫШИ С РУЧНЫМ ПРИВОДОМ
TPOKA	С ДАТЧИКОМ ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
TR4X2	ТРАНСМИССИЯ С ПРИВОДОМ НА ПЕРЕДНЮЮ ОСЬ
TR4X4	ПОЛНОПРИВОДНАЯ ТРАНСМИССИЯ
TTPOK	С СИГНАЛЬНОЙ ЛАМОЙ ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
TUNCKD	ИСПОЛНЕНИЕ ДЛЯ ТУНИСА
TUR	ИСПОЛНЕНИЕ ДЛЯ ТУРЦИИ
TURB	С ТУРБОНАДДУВОМ
U40	ЭКСПРЕСС (ПИКАП)
UKR	ИСПОЛНЕНИЕ ДЛЯ УКРАИНЫ
URS	ИСПОЛНЕНИЕ ДЛЯ РОССИИ
URU	ИСПОЛНЕНИЕ ДЛЯ УРУГВАЯ
V25	MEGANE УНИВЕРСАЛ В ГРУЗОПАССАЖИРСКОМ ВАРИАНТЕ
VECOLE	УЧЕБНАЯ МОДИФИКАЦИЯ АВТОМОБИЛЯ
VEN	ИСПОЛНЕНИЕ ДЛЯ ВЕНЕСУЭЛЫ
VERLOG	ЭЛЕКТРОННАЯ ПРОТИВОУГОННАЯ СИСТЕМА
VERROU	ТОЛЬКО СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ЗАПУСКА ДВИГАТЕЛЯ
VHECOL	УЧЕБНЫЙ АВТОМОБИЛЬ
VITRE1	ГРУЗОВАЯ МОДИФИКАЦИЯ С ОСТЕКЛЕНИЕМ ГРУЗОВОГО ОТДЕЛЕНИЯ
VOLDIF	БЕЗ ВЫКЛЮЧАТЕЛЯ ЗВУКОВОГО СИГНАЛА НА РУЛЕВОМ КОЛЕСЕ

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1	Блок учебного автомобиля
2	Устройство отключения аккумуляторной батареи
3	Тахограф
4	Переключатель блокировки замка правой двери
5	Переключатель блокировки замка левой двери
6	Электронный модуль электровентилятора кондиционера
7	Блок резистора управления модулем
8	Датчик давления в напорной магистрали АКП
9	Электромагнитный клапан ограничения крутящего момента
10	Выключатель 1-ой передачи
11	Выключатель включения полного привода
12	Реле «массы» фар дневного движения
13	Выключатель охранной сигнализации
14	Выключатель блокировки задних дверей
15	Сигнальная лампа блокировки задних дверей
16	Реле электромагнитного клапана регулирования момента опережения впрыска
17	Термовыключатель электромагнитного клапана регулирования момента опережения впрыска
18	Датчик температуры нагнетаемого воздуха
19	Электронный термостат
20	Лампа освещения передней пепельницы
21	Сигнальная лампа охранной сигнализации
22	Газонаполненный упор двери задка
23	Реле разблокировки открывающихся элементов кузова
24	Датчик поперечного ускорения
25	Электродвигатель привода замка правой двери
26	Электродвигатель привода замка левой двери
27	Реле выключения электровентиляторов системы охлаждения двигателя
28	Реле правого замка
29	Реле левого замка
30	Сигнальная лампа состояния открывающихся элементов кузова
31	Сигнальная лампа противотуманных фар
32	Сигнальная лампа адсорбера
33	Реле времени электронного блока датчика уровня топлива
34	Фонарь на крыше
35	Датчик высоты кузова
36	Компрессор системы поддержания высоты кузова
37	Электрический модуль управления вспомогательным электрооборудованием
38	ЭБУ убирающихся фар
39	Электродвигатель привода правой убирающейся фары

ОБОЗН.	ЭЛЕМЕНТ
40	Электродвигатель привода левой убирающейся фары
41	ЭБУ системы поддержания высоты кузова
42	ЭБУ электромагнитным клапаном СРОГ
43	Сигнальная лампа запуска холодного двигателя
44	Сигнальная лампа сидений с обогревом
45	ЭБУ запуском холодного двигателя
46	Электромагнитный клапан пускового устройства (подача дизельного топлива)
47	Электронный блок указателя уровня масла
48	Правая фара дальнего света
49	Левая фара дальнего света
50	Правая фара ближнего света
51	Левая фара ближнего света
52	Электронный ключ охранной сигнализации
53	Диод группы электровентиляторов системы охлаждения двигателя
54	Помехоподавительный фильтр электродвигателя стеклоочистителя
55	Реле убирающихся фар
56	Реостат освещения приборов
57	Реле группы электровентиляторов через центральный коммутационный блок дополнительного оборудования
58	Концевой выключатель
59	Электродвигатель привода заслонки воздухораспределения
60	Электродвигатель системы антиобледенения
62	Микровыключатель 1 СРОГ для последующего подогрева 1
63	Микровыключатель 1 СРОГ для последующего подогрева 2
64	Термовыключатель прекращения подачи топлива 110/115
65	Электромагнитный клапан рециркуляции воздуха
66	Реле люка крыши
67	Реле электропитания системы управления вентиляцией салона
68	Реле 4-ой скорости вентилятора системы вентиляции салона
69	Датчик забортной температуры
70	Электронный блок датчика наличия воды в дизтопливе
71	Электродвигатель блокировки распашной двери
72	Электродвигатель блокировки сдвижной двери
73	Светодиод системы электронной противоугонной блокировки запуска двигателя
74	Реле включения плафона освещения
75	Ченджер компакт-дисков
76	Контрольный разъем
77	Главное реле системы дизельного впрыска
78	Электромагнитный клапан высокого давления

ОБОЗН.	ЭЛЕМЕНТ
79	Триггерное реле кислородного датчика
80	Реле запуска холодного двигателя
81	Кнопка запуска холодного двигателя
82	Переключатель видов топлива бензин/газ
83	Выключатель обогрева ветрового стекла
84	Узел электронасоса опрокидывающегося кузова
85	Дистанционное управление опрокидыванием кузова
86	Реле управления опрокидыванием кузова
87	Электромагнитный клапан опускания опрокидывающегося кузова
88	Сигнальная лампа реле давления подъема опрокидывающегося кузова
89	Электродвигатель подъема опрокидывающегося кузова
90	Электровентилятор испарителя кондиционера пассажирского отделения
91	Электровентилятор конденсора кондиционера
92	Реле конденсора кондиционера 1
93	Реле испарителя кондиционера 2
94	Реле разрешения включения указателей поворота аварийной сигнализации 1
95	Реле разрешения включения указателей поворота аварийной сигнализации 2
96	Выключатель блокировки задних дверей
97	Плафон освещения со стороны пассажира
98	Фонарь освещения подножки
99	Реле фонарей освещения подножек
1A	Реле фонарей освещения через габаритный огонь
2A	Реле отключения блока управления отоплением
3A	Реле электровентилятора системы охлаждения автономного отопителя № 1
4A	Реле электровентилятора системы охлаждения автономного отопителя № 2
5A	Реле отключения аккумуляторной батареи
6A	Реле временной задержки отключения аккумуляторной батареи
7A	Реле электромагнитного клапана остановки двигателя
8A	Выключатель приведения в рабочее положение устройства отключения аккумуляторной батареи
101	Прикуриватель
102	Распределитель зажигания
103	Генератор
104	Охранная сигнализация
105	Главный электромагнитный звуковой сигнал
106	Электропневматический звуковой сигнал
107	Аккумуляторная батарея

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
108	Катушка зажигания
109	Бортовой компьютер
110	Блок регулирования давления АБС
111	Силовой модуль зажигания
112	Реле-прерыватель заднего стеклоочистителя
113	Реле-прерыватель переднего стеклоочистителя
114	Блок двухтонального звукового сигнала
115	Блок регулирования узла электронасоса
116	Реле времени омывателя фары
117	Звуковой сигнализатор о невыключенном наружном освещении/ звуковой сигнализатор учебного автомобиля
118	ЭБУ АБС
119	ЭБУ АКП
120	ЭБУ системы впрыска
121	Выключатель задних противотуманных фонарей
122	Выключатель противотуманных фар
123	Переключатель блокировки замков дверей
124	Переключатель вентилятора отопителя
125	Выключатель аварийной сигнализации
126	Переключатель вентилятора нагнетания холодного воздуха
127	Переключатель очистителя заднего стекла
128	Выключатель обогрева заднего стекла
129	Переключатель выбора программ движения
130	Переключатель электростеклоподъемника правой задней двери
131	Переключатель электростеклоподъемника левой задней двери
132	Переключатель электростеклоподъемника двери водителя
133	Переключатель электростеклоподъемника двери пассажира
134	Переключатель наружного зеркала заднего вида
135	Выключатель блокировки электростеклоподъемника задней двери
136	Выключатель пускового устройства
137	Реле-прерыватель указателей поворота и аварийной сигнализации
138	Электродвигатель привода замка правой задней двери
139	Электродвигатель привода замка левой задней двери
140	Электродвигатель привода замка двери водителя
141	Электродвигатель привода замка двери пассажира
142	Электродвигатель привода замка крышки багажника
143	Датчик уровня жидкости в бачке омывателя ветрового стекла
144	Датчик уровня охлаждающей жидкости

ОБОЗН.	ЭЛЕМЕНТ
145	Переключатель стеклоочистителя и стеклоомывателя
146	Датчик детонации 1
147	Датчик атмосферного давления
148	Датчик давления масла
149	Датчик ВМТ
150	Датчик скорости вращения правого заднего колеса
151	Датчик скорости вращения левого заднего колеса
152	Датчик скорости вращения правого переднего колеса
153	Датчик скорости вращения левого переднего колеса
154	Выключатель крышки багажника
155	Выключатель света заднего хода
156	Выключатель стояночного тормоза
157	Концевой выключатель педали тормоза
158	Выключатель полной нагрузки
159	Выключатель холостого хода
160	Выключатель стоп-сигнала
161	Выключатель освещения вещевого ящика
162	Расходомер
163	Стартер
164	Вентилятор нагнетания холодного воздуха
165	Фонарь освещения багажного отделения
166	Фонарь освещения номерного знака, правый
167	Фонарь освещения номерного знака, левый
168	Фонарь освещения вещевого ящика
169	Электромагнитный клапан рециркуляции отработавших газов
170	Электромагнитный клапан рулевого управления с усилителем
171	Электромагнитная муфта компрессора кондиционера
172	Правый задний фонарь
173	Левый задний фонарь
174	Правый задний противотуманный фонарь
175	Левый задний противотуманный фонарь
176	Правая противотуманная фара
177	Левая противотуманная фара
178	Концевой выключатель правой задней двери
179	Концевой выключатель левой задней двери
180	Концевой выключатель двери водителя
181	Концевой выключатель двери пассажира
182	Правый задний фонарь заднего хода
183	Левый задний фонарь заднего хода
184	Правый габаритный фонарь
185	Левый габаритный фонарь
186	Узел электронасоса рулевого управления с усилителем
187	Вентилятор отопителя
188	Электровентилятор системы охлаждения
189	Правый задний громкоговоритель

ОБОЗН.	ЭЛЕМЕНТ
190	Левый задний громкоговоритель
191	Громкоговоритель в передней правой двери
192	Громкоговоритель в передней левой двери
193	Форсунка 1-го цилиндра
194	Форсунка 2-го цилиндра
195	Форсунка 3-го цилиндра
196	Форсунка 4-го цилиндра
197	Форсунка 5-го цилиндра
196	Форсунка 6-го цилиндра
199	Датчик уровня топлива
200	Заднее стекло с обогревом
201	Электродвигатель привода стеклоподъемника задней правой двери
202	Электродвигатель привода стеклоподъемника задней левой двери
203	Электродвигатель привода стеклоподъемника двери водителя
204	Электродвигатель привода стеклоподъемника двери пассажира
205	Датчик давления
206	Трехфункциональный датчик давления кондиционера
207	Датчик уровня тормозной жидкости
208	Силовой модуль зажигания
209	Рычажный переключатель
210	Часы с аналоговой или цифровой индикацией
211	Электродвигатель очистителя заднего стекла
212	Электродвигатель очистителя ветрового стекла
213	Передний плафон освещения
214	Правый задний плафон освещения
215	Левый задний плафон освещения
216	Датчик износа тормозных колодок правого переднего колеса
217	Датчик износа тормозных колодок левого переднего колеса
218	Топливный насос
219	Насос омывателя фары
220	Насос омывателя заднего стекла
221	Насос омывателя ветрового стекла
222	Потенциометрический датчик положения дроссельной заслонки
223	Потенциометр регулирования холостого хода
224	Реле давления гидроусилителя рулевого управления
225	Диагностический разъем
226	Правая фара
227	Левая фара
228	Регулятор холостого хода
229	Реле звукового сигнала
230	Реле задних противотуманных фонарей
231	Реле противотуманных фар
232	Реле стартера
233	Реле нагнетания холодного воздуха
234	Реле электровентилятора системы охлаждения двигателя
235	Реле включения обогрева заднего стекла
236	Реле топливного насоса

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
237	Реле спаренной фары
238	Реле блокировки впрыска
239	Наружное зеркало заднего вида с электроприводом и электрообогревом со стороны водителя
240	Наружное зеркало заднего вида с электроприводом и электрообогревом со стороны пассажира
241	Реостат освещения приборов
242	Нижний кислородный датчик
243	Датчик уровня масла
244	Датчик температуры охлаждающей жидкости системы впрыска
245	Датчик наружной температуры
246	Электромагнитный клапан останова дизельного двигателя
247	Щиток приборов
248	Датчик включения электровентилятора системы охлаждения двигателя
249	Инфракрасный передатчик
250	Датчик скорости движения автомобиля
251	Двухфункциональный датчик температуры охлаждающей жидкости
252	Фильтр радиотелефона
253	Правый передний громкоговоритель
254	Левый передний громкоговоритель
255	Правый передний указатель поворота
256	Левый передний указатель поворота
257	Блок предварительного подогрева
528	Свечи предпускового подогрева
259	Датчик температуры
260	Блок предохранителей и реле в салоне
261	Аудиосистема
262	Электровентилятор системы охлаждения двигателя и кондиционера
263	Переключатель очистителя и обогрева заднего стекла
264	Реле времени блокировки замков дверей
265	Консоль фонаря направленного освещения
266	Выключатель холостой ход — полная нагрузка
267	Повторитель указателя поворота, правый
268	Повторитель указателя поворота, левый
269	Выключатель холостого хода
270	Термодатчик изменения УОЗ на 8°
271	Терморезистор
272	Датчик температуры воздуха системы впрыска
273	Датчик частоты вращения коленчатого вала двигателя
274	Электромагнитный клапан кондиционера
275	Реле времени подкачивающего топливного насоса
276	Переключатель импульсного электростеклоподъемника
277	ЭБУ контроля исправности ламп
278	Датчик детонации 2
279	Реле защиты двигателя от перегрева
280	Реле отключения электронной системы зажигания со статическим распределением высоковольтного напряжения
281	Реле ближнего света фар
282	Выключатель электродвигателя привода замка крышки люка наливной горловины
283	Дополнительный топливный насос
284	Электродвигатель правого фароочистителя
285	Электродвигатель левого фароочистителя
286	Выключатель омывателя заднего стекла
287	Реле балластной обмотки
288	Главное реле света дневного движения
289	Реле габаритных огней дневного движения
290	Реле постоянного ближнего света фар
291	Электромагнитный запорный клапан карбюратора
292	Реле реостата освещения приборов
293	Источник питания основного оборудования
294	Блок временной задержки обогрева заднего стекла
295	Блок сигнальных ламп
296	Реле шунтирования цепи противотуманных фар
297	Шунт цепи противотуманных фар
298	Отопитель
299	Плата вспомогательных реле
300	Плафон освещения на задней балке
301	Реле узла электронасоса АБС
302	Реле рулевого управления с адаптивным усилителем
303	Фонарь освещения рычага селектора АКП
304	Люк крыши
305	Электромагнитный регулятор момента опережения
306	Датчик температуры регулятора момента опережения
307	Шунт замыкания на «массу» платы вспомогательных реле
308	Реле времени дегазации
309	Многофункциональный звуковой сигнал
310	Силовой модуль системы впрыска 1
311	Реле времени плафонов освещения
312	Реле отключения потребителей электроэнергии
313	Реле включения топливного насоса
314	Реле очистителя фар
315	Реле 2-ой скорости очистителя ветрового стекла
316	Реле изменения угла опережения зажигания на 4°
317	Переключатель люка крыши
318	Подогреватель корпуса дроссельных заслонок карбюратора
319	Панель управления кондиционером
320	Электровентилятор системы охлаждения двигателя и кондиционера
321	Резистор электровентилятора и кондиционера
322	Диод кондиционера и рулевого управления с усилителем
323	Диод электромагнитного клапана кондиционера и рулевого управления с усилителем
324	Реле превышения заданной скорости
325	ПДУ аудиосистемы
326	Сигнализатор превышения заданной скорости
327	ЭБУ датчика уровня топлива
328	Левый передний плафон освещения
329	Правый передний плафон освещения
330	Задний прикуриватель
331	Выключатель регулятора скорости движения
332	Переключатель импульсного стеклоподъемника
333	Выключатель сигнальной лампы незастегнутого ремня безопасности водителя
334	Термовыключатель
335	Реле 1-ой скорости группы электровентиляторов системы охлаждения двигателя
336	Реле 2-ой скорости группы электровентиляторов системы охлаждения двигателя
337	Реле 3-ой скорости группы электровентиляторов системы охлаждения двигателя
338	Регулятор давления наддува
339	Пусковая форсунка
340	Термовыключатель с временной задержкой
341	Клапан регулирования холостого хода
342	Защитное реле давления наддува
343	Датчик температуры масла
344	Пневмонасос регулятора
345	Предохранительный электромагнитный клапан системы регулирования
346	Электромагнитный клапан насоса регулирования
347	Разъем электропитания аудиосистемы
348	Переключатель импульсного стеклоподъемника
349	Распределитель зажигания
350	Датчик износа тормозных колодок левого заднего колеса
351	Датчик износа тормозных колодок правого заднего колеса
352	Электродвигатель 1 наклона спинки левого переднего сиденья
353	Электродвигатель 2 наклона спинки левого переднего сиденья
354	Электродвигатель регулировки по высоте левого переднего сиденья

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
355	Электродвигатель регулировки в продольном направлении левого переднего сиденья
356	Электродвигатель 1 наклона спинки правого переднего сиденья
357	Электродвигатель 2 наклона спинки правого переднего сиденья
358	Электродвигатель подъема подушки правого переднего сиденья
359	Электродвигатель регулировки в продольном направлении правого переднего сиденья
360	Переключатель синтезатора речи
361	Гидравлический блок АБС
362	Плата с зажимами, «+» аккумуляторной батареи
363	ЭБУ синтезатора речи
364	Громкоговоритель синтезатора речи
365	Правый высокочастотный громкоговоритель
366	Левый высокочастотный громкоговоритель
367	Правый концевой выключатель капота
368	Левый концевой выключатель капота
369	Водяной насос охлаждения подшипников турбокомпрессора
370	Резистор двухтонального звукового сигнала
371	Адсорбер паров бензина
372	ЭБУ открыванием/закрыванием багажного отделения
373	ЭБУ регулятора скорости движения
374	Переключатель регулировки спинки левого переднего сиденья
375	Переключатель регулировки спинки правого переднего сиденья
376	Переключатель регулировки левого переднего сиденья
377	Переключатель регулировки правого переднего сиденья
378	Переключатель регулировки по высоте подушки левого переднего сиденья
379	Реле ускоренного холостого хода
380	Преобразовательный блок бортового компьютера
381	Карбюратор
382	Реле подогрева впускного коллектора
383	Датчик температуры воздуха на впуске
384	Подогреватель коллектора
385	Сиденье водителя с подогревом
386	Сиденье пассажира с подогревом
387	Датчик давления масла
388	Выключатель сигнальной лампы включения полного привода
389	Центральный громкоговоритель
390	Шунт цепи задних противотуманных фонарей
391	Реле-прерыватель заднего стеклоочистителя
392	Кнопка вывода информации на дисплей бортового компьютера

ОБОЗН.	ЭЛЕМЕНТ
393	Электромагнитный клапан

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
471	Реле управления электростеклоподъемником
472	Реле отключения аудиосистемы
473	Выключатель проверки синтезатора речи
474	Реле управления компрессором кондиционера
475	Электродвигатель привода заслонки рециркуляции
476	ЭБУ полноприводной трансмиссией
477	Насос ускорения прогрева дизельного двигателя
478	Выключатель полного привода
479	Датчик температуры охлаждающей жидкости системы ускоренного подогрева
480	Датчик включения вентилятора нагнетания горячего воздуха
481	Вентилятор нагнетания горячего воздуха
482	Электромагнитный клапан включения полного привода
483	Датчик ускорения
484	Электромагнитный клапан полноприводной трансмиссии
485	Многофункциональный переключатель
486	Выключатель сигнальной лампы незастегнутого ремня безопасности пассажира
487	Электромагнитный клапан экономайзера мощностных режимов
488	Датчик температуры экономайзера мощностных режимов
489	Однопозиционный выключатель левой задней двери
490	Однопозиционный выключатель правой передней двери
491	Однопозиционный выключатель левой передней двери
492	ЭБУ радиотелефоном
493	Левое заднее сиденье
494	Правое заднее сиденье
495	Правое переднее сиденье
496	Левое переднее сиденье
497	Акселерометр АБС полноприводных автомобилей
496	Датчик вертикального ускорения
499	Датчик углового ускорения
500	Датчик поперечного ускорения
501	ЭБУ системы запоминания положения сидений/наружных зеркал заднего вида
502	ЭБУ рулевого управления с адаптивным усилителем
503	ЭБУ декодера
504	Правый задний плафон направленного освещения
505	Левый задний плафон направленного освещения
506	Розетка для подключения дополнительного оборудования
507	Переключатель противотуманных фар, задних противотуманных фонарей и аварийной сигнализации
508	Правый фонарь освещения багажного отделения
509	Левый фонарь освещения багажного отделения

ОБОЗН.	ЭЛЕМЕНТ
510	Датчик системы запоминания положения сиденья
511	Выключатель освещения
512	Выключатель плафона направленного освещения
513	Выключатель надувания карманов сиденья с запоминанием положения
514	Насос надувания карманов сиденья с запоминанием положения
515	ЭБУ системы запоминания положения сиденья
516	ЭБУ системы запоминания положения сиденья
517	Клавиши регулировки положения и запоминания положения сиденья
518	Генератор импульсов
519	Лампа подсветки передней левой двери
520	Лампа подсветки передней правой двери
521	Лампа подсветки задней правой двери
522	Лампа подсветки задней левой двери
523	Лампа освещения двери водителя
524	Лампа освещения передней двери пассажира
525	Лампа освещения задней правой двери
526	Лампа освещения задней левой двери
527	Переключатель электростеклоподъемника задней двери на двери водителя
528	Переключатель электростеклоподъемника задней двери на двери водителя
529	Центральный плафон
530	Выключатель регулятора скорости движения
531	Концевой выключатель педали сцепления регулятора скорости движения
532	Переключатель электростеклоподъемника двери переднего пассажира на двери водителя
533	Выключатель системы поддержания высоты кузова
534	Выключатель амортизаторов с изменяемой жесткостью
535	Сигнальная лампа экономичной/спортивной программы переключения передач
536	Розетка для подключения наушников
537	Электродвигатель корректора левой фары
538	Электродвигатель корректора правой фары
539	Выключатель лампы освещения моторного отсека
540	Электродвигатель рулевого управления с адаптивным усилителем
541	Лампа подсветки зеркала в противосолнечном козырьке
542	ЭБУ системы поддержания высоты кузова

ОБОЗН.	ЭЛЕМЕНТ
543	ЭБУ амортизаторов с изменяемой жесткостью
544	Реле узла поддержания высоты кузова
545	Реле защиты системы поддержания высоты кузова
546	Узел компрессора системы поддержания высоты кузова
547	Электромагнитный клапан левого заднего амортизатора
548	Электромагнитный клапан правого заднего амортизатора
549	Электромагнитный клапан левой передней амортизаторной стойки
550	Электромагнитный клапан правой передней амортизаторной стойки
551	Правый передний датчик высоты кузова
552	Левый передний датчик высоты кузова
553	Правый задний датчик высоты кузова
554	Левый задний датчик высоты кузова
555	Элетроклапан системы поддержания высоты кузова
556	Датчик положения двери задка
557	Электродвигатель закрытия двери задка
558	Выключатель закрытия двери задка
559	ЭБУ системы закрытия двери задка
560	Выключатель открытия двери задка
561	Компрессор звукового сигнала
562	Корректор фар
563	Реле воздухомасляного охладителя
564	Электровентилятор воздухомасляного охладителя
565	Блок дроссельной заслонки
566	Тепловое реле времени системы предотвращения перегрева двигателя
567	Водяной электронасос
568	Реле времени водяного электронасоса
569	Включатель режима кик-даун 4-ступенчатой АКП
570	Реле электромагнитного клапана 1-ой ступени рулевого управления с усилителем
571	Реле электромагнитного клапана 2-ой ступени рулевого управления с усилителем
572	Диод рулевого управления с усилителем
573	Реле водяного электронасоса
574	Диод водяного электронасоса
575	Вывод для регулировки двигателя E5F
576	Реле разрешения включения системы предотвращения перегрева двигателя
577	ЭБУ радиотелефона
578	Электромагнитный клапан системы снижения токсичности отработавших газов карбюратора Pierburg

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
579	Выключатель электромагнитного клапана рециркуляции отработавших газов
580	Реле разрешения включения водяного насоса охлаждения подшипников турбокомпрессора
581	Делительный диод компрессор/водяной насос
582	Датчик температуры водяного насоса
583	Датчик угла поворота рулевого колеса
584	Реле включения муфты компрессора кондиционера
585	Датчик давления в шинах
586	Выключатель аварийной сигнализации
587	Датчик продольного ускорения АБС
588	Лампа подсветки зеркала в противосолнечном козырьке водителя
589	ТНВД
590	Выключатель охранной сигнализации
591	Датчик температуры каталитического нейтрализатора
592	ЭБУ обработки данных о температуре каталитического нейтрализатора
593	Реле защиты рулевого управления с адаптивным усилителем
594	Диод сигнальной лампы температуры каталитического нейтрализатора
595	Реле разрешения включения узла электронасоса
597	Коробка предохранителей и реле в моторном отсеке
596	Электромагнитный клапан уменьшения крутящего момента
599	Самоудерживающееся реле водяного насоса
600	Электродвигатель регулятора отопителя
601	Датчик температуры охлаждающей жидкости в радиаторе отопителя
602	Реле света заднего хода
603	Выключатель регулировки рулевой колонки с запоминанием положения
604	Электродвигатель рулевой колонки с запоминанием положения
605	Реле разрешения подогрева основания карбюратора
606	Реле подогрева основания карбюратора
607	Датчик температуры подогрева основания карбюратора
608	Датчик электровентилятора системы предотвращения перегрева двигателя
609	ЭБУ температурой охлаждающей жидкости
610	Диагностический выключатель АБС
611	Левое ветровое стекло с электрообогревом
612	Реле обогрева левого ветрового стекла
613	Выключатель обогрева ветрового стекла

ОБОЗН.	ЭЛЕМЕНТ
614	Переключатель импульсного электростеклоподъемника
615	Выключатель обогрева водительского сиденья
616	Выключатель обогрева пассажирского сиденья
617	Гасящий резистор
618	Кнопка ввода кода транспондера
619	Приемник сигнала управления открывающимися элементами кузова
620	Двухдорожечный потенциометрический датчик положения дроссельной заслонки
621	Реле шунта выключателя системы охлаждения двигателя
622	Реле времени системы предотвращения перегрева двигателя
623	Электромагнитный клапан вентиляции (заслонка)
624	Разъем электродвигателя регулировки наклона заднего правого сиденья
625	Разъем электродвигателя регулировки наклона заднего левого сиденья
626	Блок ламп подсветки АКП
627	Выключатель регулятора скорости движения
628	Датчик скорости движения рулевого управления с адаптивным усилителем
629	Реле обогрева правого ветрового стекла
630	Правое ветровое стекло с электрообогревом
631	Модуль температуры наружного воздуха
632	Свечи предварительного подогрева 1 и 3
633	Свечи предварительного подогрева 2 и 4
634	Датчик положения педали сцепления
635	Реле времени запрещения включения компрессора кондиционера
636	Разъединяющий диод стоп-сигнала
637	Разъединяющий диод стоп-сигнала/сцепление
638	Реле звукового сигнала/ сигнальная лампа (учебный автомобиль)
639	Дополнительный стоп-сигнал
640	Вспомогательное реле/реле блокировки впрыска
641	Разъединяющий диод/система охлаждения/цепь временной задержки
642	Разъединяющий диод/кондиционер/система предварительного подогрева
643	Резистор системы предотвращения перегрева двигателя
644	ЭБУ регулируемой подвески
645	Центральный электронный коммутационный блок в салоне
646	Реле обогрева ветрового стекла
647	Обогреватель ветрового стекла
648	Диод системы впрыска
649	Шаговый электродвигатель

ОБОЗН.	ЭЛЕМЕНТ
650	Сигнальная лампа сидений с обогревом
651	Жидкокристаллический щиток приборов
652	Реле управления кондиционером
653	Комбинация приборов часы/указатель температуры наружного воздуха/дисплей радиотелефона
654	Ключ сигнализации
655	Датчик halex/halmo
658	Узел пневмопривод — электромагнитный клапан регулятора скорости движения
659	Делительный диод кондиционер/ система охлаждения двигателя
660	Датчик температуры отключения кондиционера
661	Реле времени управления выключением кондиционера
662	ЭБУ навигационной системы
663	Катушка зажигания 1 с двумя выводами
664	Катушка зажигания 2 с двумя выводами
665	Катушка зажигания 3 с двумя выводами
666	Катушка зажигания 4 с двумя выводами
667	Датчик хода педали тормоза
668	Левый передний датчик вертикального ускорения
669	Правый передний датчик вертикального ускорения
670	Левый задний датчик вертикального ускорения
671	Правый задний датчик вертикального ускорения
672	Блок резисторов
673	Выключатель блокировки электростеклоподъемника
674	Сдвоенный выключатель заднего противотуманного света и обогрева заднего стекла
675	Концевой выключатель педали сцепления
676	Концевой выключатель педали акселератора
677	Насос двухстороннего действия омывателей ветрового и заднего стекол
678	Датчик температуры электромагнитного клапана рециркуляции отработавших газов
679	Помехоподавительный конденсатор
680	Свеча предпускового подогрева 1-го цилиндра
681	Свеча предпускового подогрева 2-го цилиндра
682	Свеча предпускового подогрева 3-го цилиндра
683	Свеча предпускового подогрева 4-го цилиндра
684	Лазерный проигрыватель
685	Электромагнитный клапан регулятора скорости движения
686	Реле электромагнитного клапана рулевого управления с усилителем
687	Блок диодов
688	Датчик уровня и датчик температуры масла

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
689	Выключатель регулятора скорости и подушки безопасности
690	Реле электронного термостата
691	Дисплей навигационной системы
692	Трубка радиотелефона
693	Громкоговоритель радиотелефона
694	Левый обогреваемый жиклер омывателя ветрового стекла
695	Правый обогреваемый жиклер омывателя ветрового стекла
696	Шунт
697	Изолирующий диод «+» после замка зажигания/дополнительное оборудование
698	Изолирующий диод дополнительное оборудование/«+» после замка зажигания
699	Шунт регулятора скорости на автомобилях с АКП
700	Реле малой скорости электровентилятора/система предотвращения перегрева двигателя
701	Самоблокирующееся реле насоса системы предотвращения перегрева двигателя
702	Реле 18-минутной временной задержки водяного насоса системы предотвращения перегрева двигателя
703	Реле электростеклоподъемника
704	Звуковой сигнализатор складной крыши
705	Реле электровентилятора обдува заднего стекла складной крыши
706	Выключатель складной крыши
707	Концевой выключатель крышки отделения для складной крыши
706	Электровентилятор обдува заднего стекла складной крыши
709	Диод компенсации боковых колебаний рулевого управления с усилителем и узла электронасоса
710	Отдельный предохранитель
711	Топливный насос дизельного двигателя
712	Радиатор системы охлаждения двигателя в сборе с конденсором
713	Разъем для подключения электрооборудования жилого прицепа
714	Делительный диод системы снижения токсичности отработавших газов двигателя F8Q/кондиционер
715	Коммуникационный интерфейс радиотелефона
716	Правая передняя амортизаторная стойка
717	Левая передняя амортизаторная стойка
718	Правый задний амортизатор
719	Левый задний амортизатор
720	Реле отключения кондиционера
721	Узел: ЭБУ АБС + гидроблок АБС
722	Сдвоенный выключатель ветрового и заднего стекол
723	Диод автоматического сцепления
724	Узел электронасоса автоматического сцепления
725	Электромагнитный клапан автоматического сцепления

ОБОЗН.	ЭЛЕМЕНТ
726	Датчик включенной передачи
727	Датчик положения сцепления
728	Датчик положения рычага переключения передач
729	Датчик положения педали акселератора
730	ЭБУ автоматического сцепления
731	Реле времени ветрового стекла с электрообогревом
732	Выключатель задания порога скорости
733	ЭБУ звукового сигнализатора превышения заданной скорости и невыключенного наружного освещения
734	Переключатель импульсного электростеклоподъемника двери водителя
735	Звуковой сигнализатор о незастегнутых ремнях безопасности
736	Магнитометр
737	Датчик скорости движения автомобиля (автомобили с двигателем N7Q)
738	Датчик подъема иглы форсунки
739	Датчик уровня жидкости в бачке омывателя фар
740	Разъединяющий диод цепей «+» аккумуляторной батареи/«+» дополнительного оборудования
741	Высотный корректор
742	Электромагнитный клапан изменения в сторону запаздывания момента подачи топлива
743	Реле высотного корректора
744	Реле питания ЭБУ/система рециркуляции отработавших газов
745	Реле управления подогревом дизтоплива
746	Датчик положения распределительного вала
747	Переключатель левого заднего сиденья
748	Переключатель правого заднего сиденья
749	Переключатель подголовника левого переднего сиденья
750	Реле системы обеспечения безопасности детей
751	Реле «+» после замка зажигания №1
752	Реле «+» после замка зажигания №2
753	Реле насоса омывателя фар
754	Интерфейс электро- и гидравлической систем
755	Выключатель противобуксовочной системы
756	ЭБУ подушки безопасности/преднатяжители ремней безопасности
757	Преднатяжитель ремня безопасности водителя
758	Преднатяжитель ремня безопасности пассажира
759	Однопозиционный выключатель крышки багажника
760	Выключатель обогрева заднего и ветрового стекол
761	Реле разгрузки генератора

ОБОЗН.	ЭЛЕМЕНТ
762	Реле узла электронасоса автоматического сцепления
763	Звуковой сигнализатор неисправности автоматического сцепления
764	Реле питания поршневого компрессора и электромагнитного клапана поршневого компрессора
765	Электродвигатель поршневого компрессора
766	Электромагнитный клапан поршневого компрессора
767	Реле ЭБУ АКП
768	Электромагнитный клапан регулирования длины впускного трубопровода
769	Термовыключатель выключения кондиционера
771	Модуль сигнализации о незакрытых дверях и непристегнутом ремне безопасности
772	Реле подогревателя
773	Отопитель
774	Реле питания преднатяжителя ремня безопасности
775	АКП Volvo Aisin Warner
776	Вспомогательное реле/реле блокировки
777	Плата предохранителей защиты цепей питания
778	Модуль катушки зажигания с четырьмя выводами
779	Многофункциональный переключатель АКП
780	Датчик скорости движения автомобиля с АКП
781	Датчик относительного давления АКП
782	Датчик частоты вращения коленчатого вала АКП
783	Блок 2-х силовых реле
784	Блок 2-х реле управления
785	Реле питания фазорегулятора
786	Электромагнитный клапан 1-го фазорегулятора
787	Электромагнитный клапан 2-го фазорегулятора
788	Электромагнитный клапан сообщения топливного бака с атмосферой
789	Микрофон свободные руки радиотелефона
790	Электромагнитный клапан 2 регулирования длины впускного трубопровода
791	Катушка зажигания 1-го цилиндра
792	Катушка зажигания 2-го цилиндра
793	Катушка зажигания 3-го цилиндра
794	Катушка зажигания 4-го цилиндра
795	Катушка зажигания 5-го цилиндра
796	Катушка зажигания 6-го цилиндра
797	Кислородный датчик
798	Двухрежимный электромагнитный клапан
799	Датчик расхода воздуха системы впрыска
800	Реле управления импульсного модулятора
801	Выпрямительный диод цепи заряда

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
802	Выпрямительный диод ЭБУ системы впрыска двигателя N7U/реле топливного насоса
803	Выпрямительный диод ЭБУ системы впрыска двигателя N7U/реле бензонасоса
804	Реле защиты (x54)
805	Реле обогрева ветрового стекла
806	Система охлаждения автомобиля с однообъемным кузовом
807	Реле времени электромагнитного клапана системы рециркуляции отработавших газов
806	Реле питания силового модуля зажигания или электронной системы зажигания со статическим распределением высоковольтного напряжения
809	Подушка безопасности пассажира
810	Правое заднее обогреваемое окно боковины кузова
811	Левое заднее обогреваемое окно боковины кузова
812	ЭБУ складывающихся наружных зеркал заднего вида
813	Каскад усиления мощности системы зажигания № 1
814	Каскад усиления мощности системы зажигания № 2
815	Левый воспламенитель подушки безопасности пассажира
816	Правый воспламенитель подушки безопасности пассажира
817	Плата 2-х реле обогрева ветрового стекла
818	Реле разрешения включения водяного насоса системы ускоренного подогрева
819	Электромагнитный клапан пускового устройства
820	Реле-прерыватель указателей поворота и аварийной сигнализации + звуковой сигнализатор невыключенного наружного освещения и/или превышения заданной скорости
821	Выключатель блокировки заднего открывающегося стекла
822	Выключатель заднего открывающегося стекла
823	Правый громкоговоритель 3-го ряда сидений
824	Левый громкоговоритель 3-го ряда сидений
825	Выключатель противобуксовочной системы и программ переключения передач экономичная/спортивная
826	Считывающее устройство системы K7
827	Электродвигатель привода заслонки распределения потоков воздуха со стороны водителя
828	Электродвигатель привода заслонки распределения потоков воздуха со стороны пассажира
829	Электродвигатель привода заслонки со стороны пассажира
830	Электродвигатель привода заслонки смешения воздушных потоков со стороны пассажира

ОБОЗН.	ЭЛЕМЕНТ
831	Панель управления отоплением и вентиляцией со стороны пассажира
832	Панель управления климатической установкой со стороны пассажира
833	Датчик уровня топлива и топливный насос
834	ЭБУ компрессором системы поддержания высоты кузова
835	Реле давления автоматического сцепления
836	Выпрямительный диод обмотки стартера
837	Реле отключения сигнальной лампы зарядки аккумуляторной батареи
838	Реле отключения обмотки возбуждения регулятора напряжения
839	Выпрямительный диод ЭБУ системы впрыска/ЭБУ автоматического сцепления/электродвигателя регулятора холостого хода
840	Реле времени отключения сигнальной лампы заряда аккумуляторной батареи
841	Электродвигатель открывания/закрывания левого окна боковины кузова
842	Электродвигатель открывания/закрывания правого окна боковины кузова
843	Переключатель электростеклоподъемника окна боковины кузова
844	Электродвигатель блокировки замка крышки люка горловины топливного бака
845	Подушка безопасности пассажира № 2
846	Электродвигатель наклона передней части подушки сиденья переднего пассажира
847	Электродвигатель наклона задней части подушки сиденья переднего пассажира
848	Электродвигатель наклона передней части подушки сиденья водителя
849	Электродвигатель наклона задней части подушки сиденья водителя
850	Датчик крутящего момента электроусилителя рулевого управления
851	ЭБУ системы контроля давления в шинах
852	Реле времени электростеклоподъемника
853	Реле «+» после замка зажигания, «+» до замка зажигания
854	Выключатель одновременного включения электростеклоподъемников
855	Электромагнитный клапан останова дизельного двигателя с кодом кодированного электромагнитного клапана
856	Блок управления задним стеклом и дверью задка
857	Реле ИК-системы дистанционного управления
858	Электронный реостат освещения

ОБОЗН.	ЭЛЕМЕНТ
859	Зуммер системы управления задним стеклом и дверью задка
860	Контактный диск
861	Подушка безопасности пассажира
862	Реле запрета включения регулятора скорости при положении P и N рычага селектора
863	Реле электропитания двухфункциональной антенны
864	Регулятор подачи топлива и датчик температуры топлива
865	Регулятор опережения впрыска топлива
866	ЭБУ дизельного впрыска
867	Задний противотуманный фонарь и правый задний фонарь заднего хода
868	Задний противотуманный фонарь и левый задний фонарь заднего хода
869	Изолирующий диод концевого выключателя левой передней двери/системы поддержания высоты кузова
870	Изолирующий диод правого концевого выключателя правой передней двери/системы поддержания высоты кузова
871	Изолирующий диод концевого выключателя задней двери/системы поддержания высоты кузова
872	Декодер RDS
873	Электродвигатель привода правой заслонки распределения потоков воздуха
874	Электродвигатель привода левой заслонки распределения потоков воздуха
875	Электродвигатель привода правой заслонки воздухозабора
876	Электродвигатель привода левой заслонки воздухозабора
877	Электродвигатель привода правой заслонки смешения воздушных потоков
878	Электродвигатель привода левой заслонки смешения воздушных потоков
879	Плата реле стеклоподъемника левой задней двери
880	Плата реле стеклоподъемника правой задней двери
881	Плата реле стеклоподъемника двери переднего пассажира
882	Выключатель блокировки крышки отделения для уборки складной крыши
883	Замок крышки отделения для уборки складной крыши
884	Розеточная часть модуля для подключения дополнительного оборудования
885	Складная крыша с электроприводом
886	Антенный усилитель
887	Верхний кислородный датчик
888	Приемный блок навигационной системы Carminat
889	ЭБУ магнитометра
890	Реле электромагнитного клапана форсунки-воспламенителя
891	Реле форсунки-воспламенителя

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
892	Электромагнитный клапан форсунки-воспламенителя
893	Форсунка-воспламенитель
894	Насос обнаружения утечек
895	ЭБУ двухрежимной системой выпуска отработавших газов
896	Двухрежимный моторедуктор
897	Блок резисторов противотуманных фар
898	Дополнительная свеча подогрева
899	Подушка безопасности водителя (x06)
900	Электровентиляторы контейнера аккумуляторных батарей
901	ЭБУ прибора для проверки изоляции
902	Контактный выключатель крышки контейнера для аккумуляторных батарей
903	Электромагнитный переключатель
904	Тяговый электродвигатель
905	Электровентилятор обдува тягового электродвигателя
906	Выключатель сигнальной лампы минимального остатка топлива в баке отопителя
907	Вакуумный насос
908	Датчик падения тормозного усилия 0,5 бар
909	Дозирующий насос отопителя
910	Реле электровентиляторов контейнера для аккумуляторных батарей
911	Реле отключения цепи зарядки
912	Термовыключатель зарядки цепи
913	Датчик температуры в контейнере для аккумуляторных батарей
914	Реле управления электромагнитными выключателями
915	Реле неисправности в контейнере для аккумуляторных батарей
916	Зарядная вилка
917	Контроллер
918	Выключатель аварийной остановки
919	Переключатель направления движения вперед/назад
920	Потенциометр торможения
921	Потенциометр акселератора
922	Реле электровентилятора обдува тягового электродвигателя
923	Выключатель отопителя
924	Сигнальная лампа отопителя
925	Автономный отопитель
926	Дисплей электрического модуля управления
927	Датчик удара (инерционный датчик)
928	Датчик тока аккумуляторных батарей
929	Бортовое вентилируемое зарядное устройство
930	Статический преобразователь
931	Громкоговоритель аварийной сигнализации электрического модуля управления
932	Потенциометр цепи управления направлением движения
933	Реле давления вакуумного насоса

ОБОЗН.	ЭЛЕМЕНТ
934	Реле принудительного включения на малую скорость электровентилятора салона
935	Реле программирования режима обогрева
936	Кронштейн зарядной вилки
937	Электровентилятор преобразователя
938	Тяговая аккумуляторная батарея
939	ЭБУ автономным отопителем
940	Интерфейс датчика уровня топлива
941	Высоковольтный предохранитель
942	Микровыключатель высоковольтного предохранителя
943	Реле тестирования сигнальных ламп
944	Термовыключатель тягового двигателя
946	Электрический модуль электромобиля
947	Сигнальная лампа зарядки
948	Концевой выключатель гидроцилиндра уборки складной крыши
949	Концевой выключатель гидроцилиндра 5-й дуги
950	Концевой выключатель главного гидроцилиндра
951	Узел электронасоса складной крыши с электроприводом
952	Электромагнитный клапан останова двигателя + электромагнитный клапан регулирования опережения впрыска
953	Блок управления скоростью вращения колеса
954	ЭБУ модуля управления системы предупреждения об отклонениях высоты кузова
955	Реле давления определения перегрузки системы поддержания высоты кузова
956	Электромагнитный клапан для удаления воздуха из системы поддержания высоты кузова
957	Приемоответчик
958	Диод цепи звукового сигнализатора невыключенного наружного освещения/реле повторной инициализации задних противотуманных фонарей
959	Диод цепи звукового сигнализатора невыключенного наружного освещения/щиток приборов
960	Реле повторной инициализации задних противотуманных фонарей
961	Устройство отключения аккумуляторной батареи (X70)
962	Реле защиты генератора
963	Диод цепи обнаружения неисправности цепи малой скорости электровентилятора системы охлаждения двигателя
964	Диод цепи обнаружения неисправности цепи большой скорости электровентилятора системы охлаждения двигателя
965	Выпрямительный диод цепи малой скорости работы электровентилятора/датчик включения электровентилятора на 1-й скорости

ОБОЗН.	ЭЛЕМЕНТ
966	Выпрямительный диод системы впрыска/реле системы предотвращения перегрева двигателя
967	Электромагнитный звуковой сигнал
968	Реле блокировки рычага селектора
969	Рычаг переключения передачи, электромагнит блокировки рычага при включении 3-й передачи
970	Замок ремня безопасности
971	ЭБУ АКП DP0
972	Пульт управления навигационной системой Carminat
973	Блок управления спутниковой системы навигации
974	Антенна спутниковой системы навигации
975	Проигрыватель компакт-дисков
976	Блок управления интерфейсом пользователя
977	Цепь включения водяного насоса от аккумуляторной батареи
978	Электродвигатель блокировки лючка зарядного разъема
979	Подогреватель трубопровода системы вентиляции картера
980	Коробка реле свечей предпускового подогрева дизельного двигателя
981	Форсунка с встроенным датчиком подъема иглы
982	Реле управления задними плафонами освещения
983	Реле питания ЭБУ системы впрыска дизельного топлива
984	ЭБУ степенью зарядки аккумуляторных батарей электромобиля
989	ЭБУ ксеноновых фар
990	Правый передний потенциометрический датчик
991	Правый задний потенциометрический датчик
992	Мультиселектор АКП
993	Сигнальная лампа включения охранной сигнализации (j66)
994	Выключатель отключения объемной защиты (j66)
995	Электронный тахометр (j66)
996	Имитатор форсунок двигателя, работающего на сжиженном газе
997	ЭБУ системы питания сжиженным газом
996	Серводвигатель управления расходом газа системы питания сжиженным газом
999	Переходник системы зажигания для работы на сжиженном газе
1001	Датчик количества сжиженного газа
1002	Электромагнитный клапан системы питания сжиженным газом на баллоне
1003	Переключатель питания двигателя газ/бензин
1004	Реле управления сигналом кислородного датчика
1006	Реле отключения электромагнитного клапана продувки адсорбера при работе двигателя на сжиженном газе
1006	Переходник системы питания сжиженным газом

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1007	Выключатель зарядного отделения
1006	Переключатель вентилятора
1009	Электродвигатель зарядного отделения
1010	Электродвигатель вентилятора на задней перегородке
1011	Коммутационный блок навигационной системы
1012	Громкоговоритель навигационной системы
1013	Фазорегулятор распределительного вала
1014	Резистор малой скорости электровентилятора системы охлаждения двигателя
1015	Реле времени системы предупреждения остановки двигателя
1016	Коробка предохранителей в салоне автомобиля
1017	Датчик частоты вращения турбины АКП
1018	Реле обратной связи (блокировка открывающихся элементов кузова)
1019	Электромагнитный клапан блокировки охладителя
1020	Выключатель включения пониженной передачи
1021	Выключатель блокировки рычага селектора
1022	Выключатель блокировки ключа в замке зажигания
1023	Силовой модуль электровентилятора кондиционера (j64)
1024	Указатель уровня топлива (автомобиль с системой питания сжиженным газом)
1025	Усилитель сигнала частоты вращения коленчатого вала двигателя
1026	Боковая подушка безопасности водителя
1027	Боковая подушка безопасности пассажира
1028	Боковой пульт дистанционного управления водителя
1029	Боковой пульт дистанционного управления пассажира
1090	Резистор
1031	Отключаемый плунжер высокого давления
1032	Датчик давления в топливораспределительной рампе
1033	Аккумуляторная батарея с предохранителем положительного вывода
1034	Кронштейн реле постоянного ближнего света фар
1035	Главный электромагнитный клапан системы питания сжиженным газом
1036	Предохранительный электромагнитный клапан и электромагнитный клапан холостого хода двигателя системы питания сжиженным газом
1037	Усилитель сигнала частоты вращения коленчатого вала двигателя
1038	Шунт программирования (ЭБУ системы питания сжиженным газом)

ОБОЗН.	ЭЛЕМЕНТ
1039	Реле-прерывытель указателей поворота и аварийной сигнализации
1040	Реле очистителя ветрового стекла
1041	Реле очистителя заднего стекла
1042	Реле блокировки замков дверей с электроприводом
1043	Реле разблокировки замков дверей с электроприводом
1044	Реле подъема стекол импульсными стеклоподъемниками
1045	Реле опускания стекол импульсными стеклоподъемниками
1046	Диод впрыска 2
1047	Реле впрыска
1048	ЭБУ двери задка
1049	Реле погружного подогревателя
1050	Электромагнитный клапан сцепления
1051	Электромагнитный клапан 1 включения передач
1052	Электромагнитный клапан 2 включения передач
1053	Электромагнитный клапан 1 последовательности переключения передач
1054	Электромагнитный клапан 2 последовательного переключения передач
1055	Датчик включенной передачи
1056	Датчик положения селектора передач
1057	Датчик положения сцепления
1058	Выключатель на рычаге селектора передач
1059	Датчик давления МКП с автоматическим управлением
1060	Датчики скорости на входе АКП
1061	Реле датчика уровня топлива
1062	Диод ЭБУ/концевой выключатель двери водителя
1063	Инвертор кондиционера
1064	Дополнительный топливный бак
1065	Переключатель на подачу топлива из дополнительного бака
1066	Датчик температуры топлива
1067	Реле дополнительного подогрева 1
1068	Реле дополнительного подогрева 2
1069	Реле дополнительного подогрева 3
1070	Интерфейс регулятора скорости движения
1071	Датчик давления наддува
1072	Свеча дополнительного подогрева 2
1073	Свеча дополнительного подогрева 3
1074	Свеча дополнительного подогрева 4
1075	Электромагнитный клапан управления пневмоприводом заслонки завихрения воздуха
1076	Блок дроссельной заслонки с сервоприводом
1077	Катушка зажигания 1-го цилиндра
1078	Катушка зажигания 2-го цилиндра
1079	Катушка зажигания 3-го цилиндра
1060	Катушка зажигания 4-го цилиндра

ОБОЗН.	ЭЛЕМЕНТ
1081	Выключатель регулятора и ограничителя скорости движения
1082	Считывающее устройство карточки автомобиля без ключа
1083	Датчик присутствия в наружной ручке правой передней двери автомобиля без ключа
1084	Датчик присутствия в наружной ручке левой передней двери автомобиля без ключа
1065	Датчик присутствия в наружной ручке правой задней двери автомобиля без ключа
1086	Датчик присутствия в наружной ручке левой задней двери автомобиля без ключа
1087	Кнопочный выключатель запуска и остановки двигателя автомобиля без ключа
1068	Электрозамок рулевой колонки
1069	Форсунка системы питания сжиженным газом
1090	Датчик температуры и расхода сжиженного газа
1091	Датчик давления в контуре 1 тормозной системы с диагональным разделением контуров
1092	Датчик давления в контуре 2 тормозной системы с диагональным разделением контуров
1093	Микровыключатель усилителя тормозного усилия
1094	ЭБУ АБС/Системы стабилизации траектории
1095	Преднатяжитель поясной лямки ремня безопасности водителя
1096	Преднатяжитель поясной лямки ремня безопасности пассажира
1097	Преднатяжитель левого заднего ремня безопасности
1098	Преднатяжитель правого заднего ремня безопасности
1099	Боковая подушка безопасности, левая задняя
1100	Боковая подушка безопасности, правая задняя
1101	Боковая подушка безопасности на уровне головы водителя
1102	Боковая подушка безопасности на уровне головы пассажира
1103	Боковая подушка безопасности на уровне груди водителя
1104	Боковая подушка безопасности на уровне груди пассажира
1105	Регулятор подачи топлива
1106	Выключатель системы стабилизации траектории
1107	Датчик ускорения системы стабилизации траектории
1108	Датчик наличия детского кресла на сиденье переднего пассажира
1109	Датчик нейтрального положения рычага переключения передач механической КП/включения света заднего хода
1110	Дисплей системы контроля давления в шинах
1111	Датчик интенсивности солнечного излучения
1112	Датчик загрязненности воздуха
1113	Дополнительный обогреватель салона

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1114	Электродвигатель привода заслонки обогрева ветрового и бокового стекол
1115	Электродвигатель привода заслонки подачи воздуха от кондиционера к ногам
1116	ЭБУ системы контроля давления в шинах информация о проколах шин
1117	Датчик давления в шине
1118	Лампа подсветки ниши для ног переднего пассажира
1119	Лампа подсветки ниши для ног водителя
1120	Лампа подсветки со стороны правого заднего пассажира
1121	Лампа подсветки со стороны левого заднего пассажира
1122	ЭБУ мультиплексной сети двери водителя
1123	ЭБУ мультиплексной сети двери пассажира
1124	ЭБУ датчика дождя
1125	Центральный коммуникационный блок
1126	ПУ системы дистанционной передачи данных
1127	Дисплей
1128	Антенна спутниковой системы навигации
1129	Индикатор положения рычага селектора АКП
1130	Датчик положения сиденья водителя
1131	Датчик положения сиденья переднего пассажира
1132	Правый задний высокочастотный громкоговоритель
1133	Левый задний высокочастотный громкоговоритель
1134	Датчик положения распределительного вала ряда цилиндров А
1135	Датчик положения распределительного вала ряда цилиндров В
1136	Фазорегулятор распределительного вала ряда цилиндров А
1137	Фазорегулятор распределительного вала ряда цилиндров В
1138	Нижний кислородный датчик ряда цилиндров В
1139	Верхний кислородный датчик ряда цилиндров А
1140	Датчик скорости на выходе из КП
1141	Левый задний потенциометрический датчик
1142	Топливораспределительная рампа
1143	Выключатель аварийной остановки
1144	Модуль отключения аккумуляторной батареи
1145	Датчик температуры испарителя быстродействующей системы отопления
1146	Датчик температуры хладагента
1147	Реле давления быстродействующей системы отопления
1148	Электромагнитный клапан изменения тока хладагента
1149	Электромагнитный клапан перепуска хладагента
1150	Компрессор с изменяемой холодопроизводительностью
1151	Фиксатор замка двери задка
1152	Сигнальная лампа блокировки открывающихся элементов кузова
1153	Выключатель открытия заднего открывающегося стекла
1154	Электродвигатель привода замка крышки
1155	Реле «+» потребителей электроэнергии
1156	Электровентилятор 1 салона
1157	Электровентилятор 2 салона
1158	Блок резисторов электровентилятора 2 салона
1159	Блок управления электровентилятора 2 салона
1160	Реле автономного отопителя
1161	Реле электромагнитного клапана системы питания сжиженным газом
1162	Электромагнитный клапан подавления шума адаптивного усилителя рулевого управления (рулевое колесо с двойным глушителем шума)
1163	Выключатель регулятора скорости движения с контролем дистанции до впереди идущего автомобиля
1164	ЭБУ регулятора скорости движения с контролем дистанции до впереди идущего автомобиля
1165	ЭБУ ремня безопасности, встроенного в сиденье
1166	Выключатель блокировки замков задних дверей
1167	ЭБУ форсункой EDU (интерфейс управления производительностью системы впрыска)
1168	Переключатель стеклоподъемников передних дверей, работающих в обычном и импульсном режимах
1169	Переключатель стеклоподъемников задних дверей, работающих в обычном режиме
1170	Переключатель импульсных стеклоподъемников передних дверей, работающих в импульсном режиме
1171	Переключатель импульсных стеклоподъемников задних дверей
1172	Переключатель мультиплексных импульсных стеклоподъемников передних дверей
1173	Блок управления реле дополнительного подогрева
1174	Насос создания предварительного давления системы стабилизации траектории
1175	Датчик углового, продольного и поперечного ускорения
1176	Датчик скорости вращения ротора генератора, встроенного в инерционный маховик
1177	Выключатель запрета включения генератора, встроенного в инерционный маховик
1178	Аккумуляторная батарея напряжением 36 В
1179	Генератор, встроенный в инерционный маховик
1180	Инвертор
1181	Электрический модуль управления генератором, встроенным в инерционный маховик
1182	Датчик температуры аккумуляторной батареи
1183	Датчик давления топлива
1184	Многофункциональный звуковой сигнализатор
1185	Выключатель блокировки замка левой боковой двери
1186	Электромагнитный клапан редуктора системы питания сжиженным газом
1187	Датчик разряжения в вакуумном усилителе тормозов
1188	Коаксиальная антенна системы свободные руки
1189	Электромагнитный клапан регулирования давления топлива
1190	Выключатель блокировки правой боковой двери
1191	Выключатель блокировки замка левой боковой двери
1192	Концевой выключатель правой боковой двери
1193	Концевой выключатель левой боковой двери
1194	Антенна приемоответчика
1195	Датчик давления сжиженного газа
1196	Реле отсечки топливного насоса автомобиля с системой питания сжиженным газом
1197	Датчик температуры ветрового стекла
1196	Регулятор давления в общей топливораспределительной рампе дизельного двигателя
1199	Датчик наличия пробки топливного бака
1200	ЭБУ блокировки боковой двери
1201	Датчик температуры воздуха в салоне/сигнальная лампа открывающихся элементов кузова
1202	Датчик давления хладагента
1203	Дополнительная аккумуляторная батарея
1204	Датчик температуры каталитического нейтрализатора
1205	Реле А резистора дополнительного подогревателя (каталитического нейтрализатора)
1206	Реле В резистора дополнительного подогревателя (каталитического нейтрализатора)
1207	Резистор дополнительного подогревателя каталитического нейтрализатора
1208	Радиоантенна
1209	Узел компрессора пневматической подвески
1210	Реле компрессора пневматической подвески
1211	Датчик высоты кузова пневматической подвески
1212	Форсунка 1-го цилиндра, система питания сжиженным газом
1213	Форсунка 2-го цилиндра, система питания сжиженным газом
1214	Форсунка 3-го цилиндра, система питания сжиженным газом
1215	Форсунка 4-го цилиндра, система питания сжиженным газом

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1216	Блок управления рукояткой автоматического стояночного тормоза
1217	ЭБУ автоматическим стояночным тормозом
1218	Левый задний наружный датчик обнаружения препятствия системы контроля парковки
1219	Правый задний наружный датчик обнаружения препятствия системы контроля парковки
1220	Правый задний внутренний датчик обнаружения препятствия системы контроля парковки
1221	Левый задний внутренний датчик обнаружения препятствия системы контроля парковки
1222	ЭБУ системы контроля парковки
1223	Звуковой сигнал системы парковки
1224	Датчик положения турбокомпрессора

ОБОЗН.	ЭЛЕМЕНТ
1225	Панель управления климатической установкой на водительском месте
1226	Панель управления климатической установкой со стороны пассажира
1227	Панель управления климатической установкой со стороны правого заднего сиденья
1228	Панель управления климатической установкой со стороны левого заднего сиденья
1229	Электродвигатель 2 привода заслонки обдува ветрового и бокового стекол
1230	Электродвигатель привода заслонки воздухораспределения в задней части автомобиля
1231	Датчик углового ускорения
1232	Рулевое управление с электроусилителем руля

ОБОЗН.	ЭЛЕМЕНТ
1233	Электромагнитный клапан регулирования 1
1234	Электромагнитный клапан регулирования 2
1235	Датчик воздушного испарителя 2
1236	Электромагнитный клапан 1 ускоренного обогрева
1237	Электромагнитный клапан 2 ускоренного обогрева
1238	Электромагнитный клапан 3 ускоренного обогрева
1239	Катушка ионизации системы впрыска
1240	Электромагнитное реле отключения аккумуляторной батареи
1241	ЭБУ мультиплексной системой связи между ЭБУ автомобиля по протоколу CAN
1242	ЭБУ навигационной системы

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
R1	Приборная панель/правая задняя часть автомобиля
R2	Приборная панель/левая задняя часть автомобиля
R3	Приборная панель/дверь водителя
R4	Приборная панель/дверь пассажира
R5	Приборная панель/воздуховод системы отопления
R6	Приборная панель/скоба
R7	Приборная панель/аудиоустановка
R8	Приборная панель/правая часть крыши
R9	Приборная панель/передняя панель кузова
R10	Приборная панель/правый лонжерон
R11	Приборная панель/левый лонжерон
R12	Правая задняя часть кузова/правая задняя дверь
R13	Левая задняя часть кузова/левая задняя дверь
R14	Правая задняя часть кузова/правая дверь задка
R15	Левая задняя часть кузова/левая дверь задка
R16	Левая задняя часть кузова/задняя поперечина
R17	Воздуховод системы отопления/двигатель
R18	Воздуховод системы отопления/«+» аккумуляторной батареи
R19	Воздуховод системы отопления/масса двигателя
R20	Двигатель/система зажигания
R21	Двигатель/электровентилятор системы охлаждения
R22	Двигатель/АКП
R23	Двигатель/система снижения токсичности отработавших газов
R24	Двигатель/система впрыска
R25	Двигатель/«+» аккумуляторной батареи
R26	Двигатель/«масса» двигателя
R27	Двигатель/правый лонжерон
R28	Двигатель/левый лонжерон
R29	Двигатель/система предотвращения перегрева двигателя
R30	Скоба/правое переднее сиденье
R31	Скоба/левое переднее сиденье
R32	Передняя панель/стеклоомыватель фар
R33	Передняя панель/бампер
R34	Двигатель/приборная панель
R35	Педальный узел/приборная панель
R36	АБС/приборная панель
R37	Двигатель/система впрыска
R38	Приборная панель/левая часть крыши
R39	Левая задняя часть кузова/задняя поперечина
R40	Правая задняя часть кузова/задняя поперечина
R41	Задняя поперечина/дверь задка
R42	Передняя панель/указатель правого поворота
R43	Передняя панель/указатель левого поворота
R44	Приборная панель/«массовая» шина правой стороны кузова
R45	Приборная панель/«массовая» шина левой стороны кузова
R46	Двигатель/«масса» кузова
R47	Передняя панель/«массовая» шина правой стороны кузова
R48	Передняя панель/массовая шина левой стороны кузова
R49	Правая задняя часть кузова/масса правой задней части кузова
R50	Правая задняя часть кузова/«масса» левой задней части кузова
R51	Двигатель/«масса» двигателя
R52	Кузов/«масса» двигателя
R53	Кузов/«масса» кузова
R54	Воздуховод системы отопления/механическая КП
R55	Концевой выключатель капота/воздуховод системы отопления
R56	Капот/двигатель
R57	Основание кузова автомобиля/приборная панель
R58	Электровентилятор системы охлаждения двигателя/правый лонжерон
R59	Воздуховод системы отопления/система впрыска
R60	АБС/правый лонжерон
R61	Регулятор скорости движения/правый лонжерон
R62	Система впрыска/регулятор скорости
R63	Левый лонжерон/система впрыска
R64	Система впрыска/плата АКП
R65	Система впрыска/воздуховод системы отопления
R66	Система впрыска/правый лонжерон
R67	Передняя часть двигателя/двигатель
R68	Система впрыска/датчики температуры
R69	Кузов автомобиля/АБС
R70	Система впрыска/водяной насос охлаждения подшипников турбокомпрессора
R71	Регулятор скорости движения/воздуховод системы отопления
R72	Приборная панель/антенна с электроприводом
R73	Электровентилятор системы охлаждения двигателя/электронная система зажигания со статическим распределением высоковольтного напряжения
R74	Двигатель/двухфункциональный датчик давления масла
R75	«Масса» электровентилятора системы охлаждения двигателя/электровентилятор
R76	Левый боковой повторитель указателя поворота/левая фара
R77	Правый боковой повторитель указателя поворота/правая фара
R78	Дополнительная фара/левый лонжерон
R79	Форсунки/система впрыска
R80	Воздуховод системы отопления/АБС
F81	Воздуховод системы отопления/левый лонжерон
R82	Двигатель/кондиционер
R83	Дополнительная фара/правый лонжерон
R84	Система вентиляции салона/система впрыска
R85	Двигатель/фонари заднего хода
R86	Воздуховод системы отопления/балластная катушка
R87	Воздуховод системы отопления/очистители фар
R88	Левый лонжерон/диод стартера
R89	Приборная панель/датчик износа тормозных колодок
R90	Воздуховод системы отопления/система вентиляции салона
R91	Воздуховод системы отопления/отопитель
R92	Воздуховод системы отопления/нагнетательный вентилятор системы вентиляции салона
R93	Воздуховод системы отопления/кондиционер
R94	Воздуховод системы отопления/реле балластной катушки
R96	Воздуховод системы отопления/АКП
R96	Правая задняя часть кузова/подкачивающий топливный насос
R97	Воздуховод системы отопления/омыватель ветрового стекла
R98	Правый лонжерон/очистители и омыватели фар
R99	Приборная панель/отопитель
R100	АБС/левый лонжерон
R101	Правый лонжерон/правая фара
R102	Левый лонжерон/левая фара
R103	Крышка багажника/цепь управления крышкой багажника
R104	Воздуховод системы отопления/катушка зажигания
R105	Шунт обогревателя заднего стекла/кузов автомобиля
R106	Передняя часть двигателя/бампер
R107	Приборная панель/передняя часть двигателя
R108	Приборная панель/консоль
R109	Правая задняя часть кузова/фонарь освещения номерного знака
R110	Двигатель/навесное оборудование передней части двигателя
R111	Приборная панель/навесное оборудование передней части двигателя
R112	Передняя часть двигателя/кузов
R113	«Массовая» шина: двигатель/аккумуляторная батарея/кузов/кузов
R114	Массовая шина: двигатель/аккумуляторная батарея/кузов/двигатель
R115	Двигатель/электропроводка двигателя
R116	Двигатель/топливный насос

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
R117	Правая задняя часть кузова/левая задняя дверь
R118	Правая задняя часть кузова/кузов автомобиля
R119	Передняя левая часть кузова/ охранная сигнализация люка крыши
R120	Ниша воздухозабора/охранная сигнализация такси
R121	Передняя правая часть кузова/люк крыши
R122	Приборная панель/противотуманные фары
R123	Скоба/аудиоустановка
R124	Приборная панель/шунт аудиоустановки
R125	Радиоустановка/шунт аудиоустановки
R126	Электровентилятор системы охлаждения двигателя/реле отключения кондиционера
R127	Система впрыска/реле отключения кондиционера
R128	Кузов/масса электровентилятора системы охлаждения двигателя
R129	Кузов/компрессор звукового сигнала
R130	Левый лонжерон/компрессор
R131	Электропроводка двигателя/компрессор
R132	Приборная панель/постоянный ближний свет фар
R133	Левая передняя часть кузова/ электромагнитный клапан продувки адсорбера
R134	Приборная панель/дополнительная электропроводка для прицепа
R135	Дополнительная электропроводка в задней правой части кузова/приборная панель
R136	Задняя левая дверь/дополнительная электропроводка в правой задней части кузова
R137	Правая задняя дверь/дополнительная электропроводка в правой задней части кузова
R138	Воздуховод системы отопления/АБС
R139	Двигатель/АБС
R140	Плата АКП/АКП
R141	Плафон освещения/передняя часть двигателя
R142	Двигатель/ТНВД
R143	Правый боковой повторитель указателя поворота/правый лонжерон
R144	Левый боковой повторитель указателя поворота/левый лонжерон
R145	Плата АКП/балластная катушка
R146	Приборная панель/переднее сиденье
R147	Бампер/левое переднее крыло
R148	Электровентилятор системы охлаждения/левое переднее крыло
R149	Двигатель/левое переднее крыло
R150	Салон/левое переднее крыло
R151	Двигатель/правое переднее крыло
R152	Салон/левое переднее крыло

ОБОЗН.	РАЗЪЕМ
R153	Салон/дверь водителя
R154	Салон/дверь пассажира
R155	Салон/ левая задняя дверь
R156	Салон/правая задняя дверь
R157	Салон/дверь задка
R158	Салон/правая часть крыши
R159	Салон/скоба
R160	Разъем АКП/система впрыска
R161	Система впрыска/масляно-воздушный охладитель
R162	Сиденье с запоминанием положения/датчики
R163	Система впрыска/разъем датчика положения дроссельной заслонки
R164	Электровентилятор системы охлаждения двигателя/приборная панель
R165	Электровентилятор системы охлаждения двигателя/топливный насос
R166	Двигатель/датчик износа тормозных колодок
R167	Воздуховод системы отопления/система зажигания
R168	Двигатель/фонари заднего хода
R169	Фонари заднего хода/регулятор тормозных сил
R170	Фонари заднего хода/фонари освещения номерного знака
R171	Стояночный тормоз/воздуховод системы отопления
R172	Стеклоомыватель/приборная панель
R173	Приборная панель/консоль
R174	Воздуховод системы отопления/аудиоустановка
R175	Кожух отопителя/разъем АКП
R176	Приборная панель/вещевой ящик
R177	Левая задняя часть кузова/ разъем воздуховода системы отопления
R178	Разъем кожуха отопителя/крышка багажного отделения
R179	АБС/левое переднее крыло
R180	Салон/электропроводка рулевого управления с усилителем и регулируемой подвески
R181	Салон/педальный узел
R182	Салон/аудиоустановка
R183	Салон/АБС
R184	Система регулирования обогащения смеси на холостом ходу/двигатель
R185	Фонари освещения номерного знака/промежуточная электропроводка к фонарям освещения номерного знака
R186	Приборная панель/разъем противотуманных фар
R187	Салон/центральный плафон
R188	Карбюратор/двигатель
R189	Бампер/левое переднее крыло
R190	Правое переднее крыло/система круиз-контроля
R191	Передняя панель/омыватели фар
R192	ЭБУ системы предотвращения перегрева двигателя
R193	Разъем крышка багажного отделения/правое заднее крыло
R194	Подкачивающий топливный насос/правое заднее крыло

ОБОЗН.	РАЗЪЕМ
R195	Разъем очистителя заднего стекла
R196	Разъем датчика уровня тормозной жидкости
R197	Выключатель обогрева сидений/приборная панель
R198	Разъем потолочной консоли
R199	Передняя поперечина/правое крыло
R200	Дверь задка/электродвигатель привода двери задка
R201	Салон/фонарь освещения вещевого ящика
R202	Правая задняя часть кузова/разъем третьего стоп-сигнала
R203	Салон/прикуриватель
R204	Двигатель/шунт кислородного датчика
R205	Шунт насоса омывателя фар/передняя поперечина
R206	Салон/фонарь освещения моторного отсека
R207	Левая фара/дополнительная фара
R208	Левое переднее крыло/ветровое стекло с электрообогревом
R209	Разъем электромагнитного клапана регулируемой подвески
R210	Приборная панель/бампер
R211	Педальный узел/воздуховод системы отопления
R212	Двигатель/салон (автомобиль с однообъемным кузовом)
R213	Датчик скорости рулевого управления с адаптивным усилителем/салон
R214	Скоба/разъем скобы
R215	Разъем скобы/сиденья с обогревом
R216	Левая задняя часть кузова/ разъем датчика уровня топлива
R217	Разъем датчика уровня топлива/салон
R218	Топливный насос/разъем топливного насоса
R219	Приборная панель/ левая задняя дверь
R220	Приборная панель/правая задняя дверь
R221	Приборная панель/салон объемного кузова
R222	Правая задняя часть кузова/ амортизаторы с изменяемой жесткостью
R223	Разъем датчика положения дроссельной заслонки
R224	Соединение с «массой» цепи регулирования УОЗ по признаку детонации
R225	Приборная панель/педальный узел инструктора учебного автомобиля
R226	Разъем электромагнитного клапана рециркуляции отработавших газов и пускового устройства дизельного двигателя
R227	Передняя панель/разъем омывателей фар
R228	Салон/выключатель режима кик-даун
R229	Приборная панель/разъем жиклера с обогревом

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
R230	Разъем радиотелефона
R231	Плафоны освещения/зеркало в противосолнечном козырьке
R232	Левая задняя часть кузова/ правая задняя часть кузова
R233	Разъем для подключения электрооборудования жилого прицепа
R234	Приборная панель/датчики ускорения
R235	Приборная панель/АКП
R236	Левая задняя часть кузова/освещение номерного знака
R237	АБС в моторном отсеке/АБС под днищем автомобиля
R238	Левая задняя часть кузова/дверь водителя
R239	Левая задняя часть кузова/дверь пассажира
R240	Ветровое стекло с электрообогревом/приборная панель
R241	Левая задняя часть кузова/третий стоп-сигнал
R242	Разъем приборной панели/ амортизатор с изменяемой жесткостью
R243	Правая задняя дверь/электро-проводка в задней левой части кузова
R244	Левая задняя часть кузова/крышка багажника
R245	Дверь задка/заднее стекло с электрообогревом
R246	Дверь задка/третий стоп-сигнал
R247	Амортизатор с изменяемой жесткостью/промежуточный разъем
R248	Левая задняя часть кузова/компрессор системы поддержания высоты кузова
R249	АКП А4/датчик давления в магистрали
R250	Дверь задка/фонарь освещения номерного знака
R251	Приборная панель/радиотелефон
R252	Приборная панель/кабель-удлинитель ключа охранной сигнализации
R253	Разъем системы поддержания высоты кузова/система поддер-жания высоты кузова (К 56)
R254	Приборная панель/шина воздухозабора
R255	АБС/ шина воздухозабора
R256	Ветровое стекло с электрообогревом/ниша воздухозабора
R257	Приборная панель/АКП
R258	АКП/левое переднее крыло
R259	Салон/задний бампер
R260	Салон/левая часть крыши
R261	Салон/воздуховод системы отопления
R262	Салон/двигатель
R263	Салон/АКП
R264	Салон/правая дверь задка
R265	Салон/передняя панель
R266	Салон/бампер
R267	Салон/система поддержания высоты кузова
R268	Салон/разъем датчиков износа тормозных колодок
R269	Разъем датчика уровня топлива/ устройства АБС под днищем автомобиля
R270	Салон/правое переднее сиденье
R271	Салон/левое переднее сиденье
R272	Двигатель/система электронной противоугонной блокировки запуска двигателя
R273	Разъем системы поддержания высоты кузова/жилой прицеп
R274	Разъем системы поддержания высоты кузова/среднее положения кузова
R275	Салон/электровентилятор
R276	Салон/прицеп
R277	Салон/преднатяжитель ремня безопасности водителя
R278	Салон/преднатяжитель ремня безопасности пассажира
R279	Салон/разъем дисплея аудиоустановки
R280	Задняя часть автомобиля/складная крыша
R281	Разъем правая дверь задка/электродвигатель привода двери задка
R282	Двигатель/автономный отопитель
R283	Двигатель/контейнер для аккумуляторных батарей
R284	Двигатель/зарядная вилка
R285	Приборная панель/переключатель направления движения
R286	Разъем каталитический нейтрализатор/приборная панель
R287	Разъем ЭБУ
R288	Распределение высоковольтного напряжения/электрический модуль управления
R289	Распределение высоковольтного напряжения/преобразователь
R290	Разъем электропроводки двигателя/педальный узел
R291	Салон/цепь воспламенения
R292	Салон/подушка безопасности пассажира
R293	Приемная часть разъема вилки розеточного соединения
R294	Разъем вилки светящейся линии
R295	Правая задняя часть кузова/днище автомобиля
R296	Салон/правая задняя часть кузова
R297	Салон/ левая задняя часть кузова
R296	Салон/дополнительное радиооборудование
R299	Разъем электропроводки: оборудование передней/задней части автомобиля
R300	Свечи предварительного подогрева/двигатель
R301	Приборная панель/плафон освещения
R302	Разъем воздуховод системы отопления/крыша
R303	Система навигации/салон
R304	Дополнительный резервуар со сжиженным газом/салон
R305	Двигатель/втягивающее реле стартера
R309	АБС/разъем АБС
R326	Двигатель/система питания сжиженным газом
R442	Сирена/правое переднее крыло
R495	Салон/преднатяжитель ремня безопасности пассажира
R496	Салон/сигнальная лампа незас-тегнутого ремня безопасности
R618	Крыша/консоль крыши
R620	Левая задняя часть автомобиля/ разъем левой двери задка
R621	Разъем левой двери задка/левая дверь задка
R622	Двигатель/высоковольтная электропроводка
R715	Приборная панель/радиотелефон
R757	Салон/преднатяжитель ремня безопасности водителя
R758	Салон/преднатяжитель ремня безопасности пассажира
R900	Приборная панель/воздуховод дополнительной системы отопления
R980	Правый лонжерон/омыватель фар
R981	Салон/регулятор скорости движения
R982	Регулятор скорости движения/задние датчики
RA	Передняя часть двигателя/приборная панель
RB	Передняя часть двигателя/датчик положения распределительного вала
RC	Передняя панель/омыватели фар
RD	Передняя часть двигателя/ЭБУ двухтонального звукового сигнала
RE	Приборная панель/электровентилятор
RF	Пульт управления/электровентилятор
RG	Приемник инфракрасного излучения/электропроводка дополнительной охранной сигнализации
RH	Двигатель/электромагнитный клапан регулирования опережения впрыска
RI	Левый лонжерон/электро-проводка электромагнитного клапана продувки адсорбера
RJ	Правый лонжерон/дополни-тельная охранная сигнализация
RK	Приборная панель/охранная сигнализация
RI	ЭБУ системой поддержания высоты кузова/узел компрессора
RM	Приборная панель/дополнитель-ная электропроводка по правому борту салона для системы поддержания высоты кузова
RN	Задняя левая часть кузова/ разъем третьего стоп-сигнала
RP	Салон/система впрыска
RQ	Салон/двигатель
RS	Передняя панель/правая фара
RT	Передняя панель/левая фара
RU	Двигатель/генератор
RV	Топливный насос/датчик уровня топлива

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
RW	Правая сторона салона/крышка лючка наливной горловины
RX	Моторный отсек/разъем правого датчика износа тормозных колодок
RY	Моторный отсек/разъем левого датчика износа тормозных колодок
RZ	Моторный отсек/дополнительный разъем прицепа
RBA	Потолочная консоль/люк крыши
RBC	Автономный отопитель/двигатель
RBD	Передняя часть кузова/крышка зарядного разъема
RBE	Блок дроссельной заслонки/двигатель
RBF	Кислородный датчик/двигатель
RBG	Силовой модуль зажигания/ двигатель
RBH	Приборная панель/дополнительная электропроводка 16-местного автобуса № 1
RBI	Приборная панель/ дополнительная электропроводка 16-местного и 9-местного автобуса № 2
RBJ	Дополнительная электропроводка 16-местного автобуса № 2/ плафон пассажира
RBK	Правая боковая подушка безопасности/салон
RBL	Левая боковая подушка безопасности/салон
RBM	Дополнительная подушка безопасности водителя/салон
RBN	Дополнительная подушка безопасности пассажира/салон

Перечень соединений на «массу»

ОБОЗН.	СОЕДИНЕНИЕ НА «МАССУ»
M1	«Масса» правой передней стороны автомобиля
M2	«Масса» левой передней стороны автомобиля
M3	«Масса» коробки передач
M4	«Масса» кузова автомобиля
M5	«Масса» двери задка
M6	«Масса» правого заднего фонаря
M7	«Масса» левого заднего фонаря
M8	«Масса» системы впрыска
M9	«Масса» правой передней стойки
M10	«Масса» левой передней стойки
M11	«Масса» приборной панели
M12	«Масса» кронштейна крепления рулевого механизма
M13	«Масса» скобы
M14	«Масса» кронштейна звукового сигнала
M15	«Масса» воздуховода системы отопления
M16	Двигатель/«масса» кузова
M17	Кузов/«масса» двигателя
M18	«Масса» АБС
M19	Электронная «масса» АБС
M20	«Масса» элемента обогрева заднего стекла
M21	Электронная «масса» электронной системы зажигания со статическим распределением высокого напряжения при увеличении УОЗ в сторону опережения
MA	Электрическая «масса» правой передней стороны автомобиля
MAA	Электрическая «масса» корпуса ЭБУ
MAB	Электрическая «масса» на заднем мосту
MAC	«Масса» верхнего кронштейна крепления КП
MAD	«Масса» датчика уровня топлива и топливного насоса
MAE	Электрическая «масса» пассажирского прицепа
MAG	Электрическая «масса» кронштейна узла АБС
MAH	«Масса» АБС
MAJ	«Масса» электровентилятора
MAK	Электрическая «масса» сигнальной лампы предподогрева
MAL	«Масса» подушки безопасности пассажира
MB	Электрическая «масса» левой передней стороны автомобиля
MC	«Масса» АКП
MD	Электрическая «масса» задней полки
ME	«кронш-

йна крепления рулевой колонки

ОБОЗН.	СОЕДИНЕНИЕ НА «МАССУ»
MP	Электрическая «масса» держателя звукового сигнала
MQ	Электрическая «масса» воздуховода системы отопления
MR	Электронная «масса» КП
MS	«Масса» кронштейна крепления узла электронасоса
MT	Электрическая «масса» аудиосистемы
MU	«Масса» решетки
MV	«Масса» аудиосистемы
MW	Электрическая «масса» передней части автомобиля
MX	«Масса» радиотелефона
MY	Электрическая «масса» заднего багажного отделения
MYH	«Масса» левой двери задка
MZ	Электрическая «масса» левой задней панели задка
MZA	«Масса» ветрового стекла с электрообогревом
MZB	Электронная «масса» TUP щитка приборов
NA	Электронная «масса» правой передней стойки
MAC	Электронная «масса» верхнего кронштейна крепления КП
NB	Электронная «масса» воздуховода системы отопления
NC	Электронная «масса» левой передней стойки
ND	Электронная «масса» АБС
NE	Электронная «масса» левой задней стороны автомобиля
NF	Электронная «масса» двигателя
NH	Электронная «масса»
NG	Электронная «масса» TPP
NJ	Электронная «масса» правой передней стойки
NK	Электронная «масса» двигателя
NL	Электронная «масса» аудиосистемы
NO	Электронная «масса» воздуховода системы отопления
NR	Электронная «масса» двигателя
NS	Электронная «масса» правой задней стороны двигателя
NT	Электронная «масса» левого переднего лонжерона 1
NU	Электронная «масса» левого переднего лонжерона 2

MN	Электрическая «масса» скобы